 
 
 
 
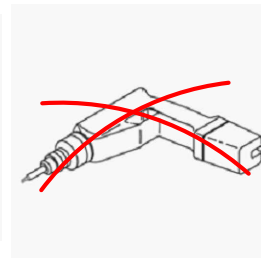 


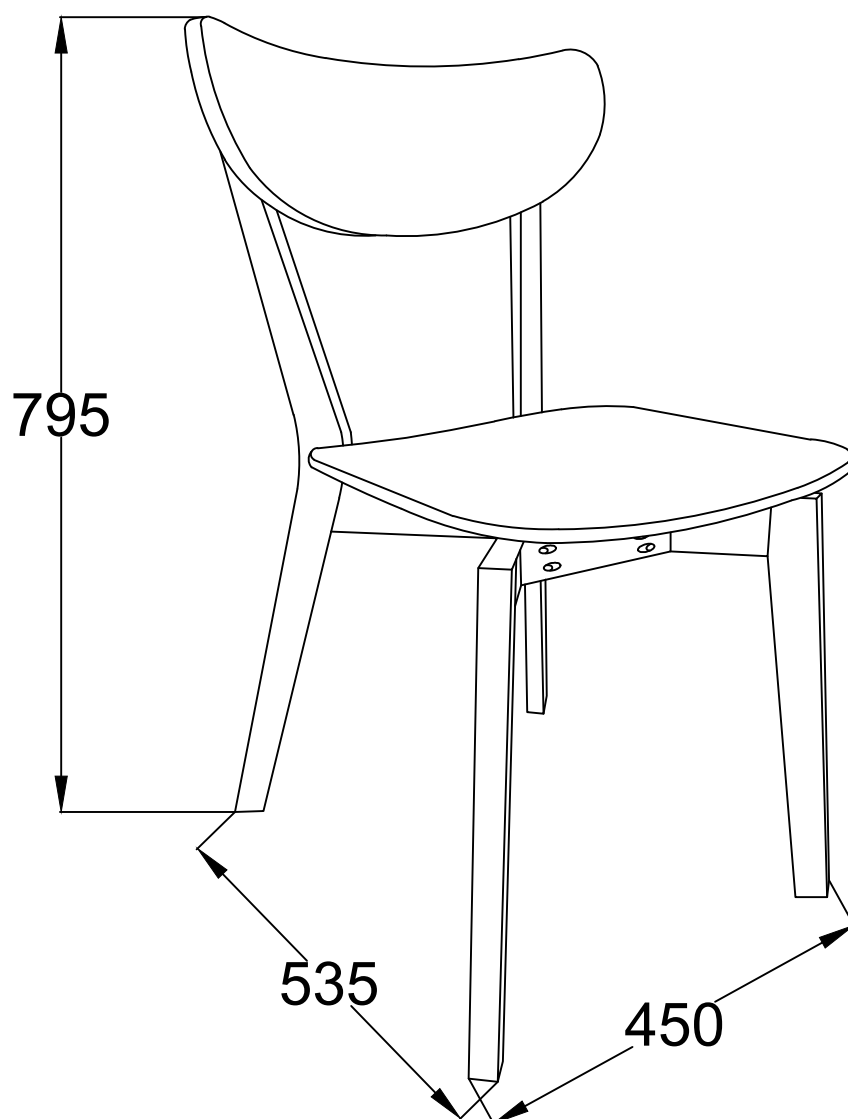

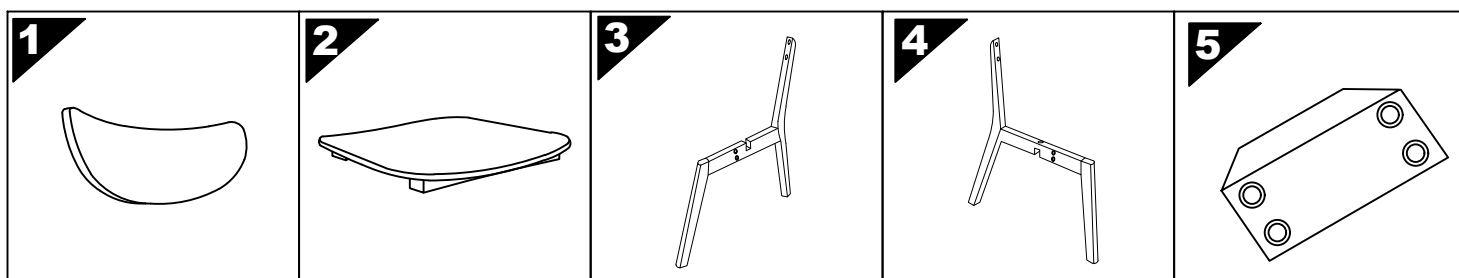 



 

 
ROXBBY DINING CHAIR

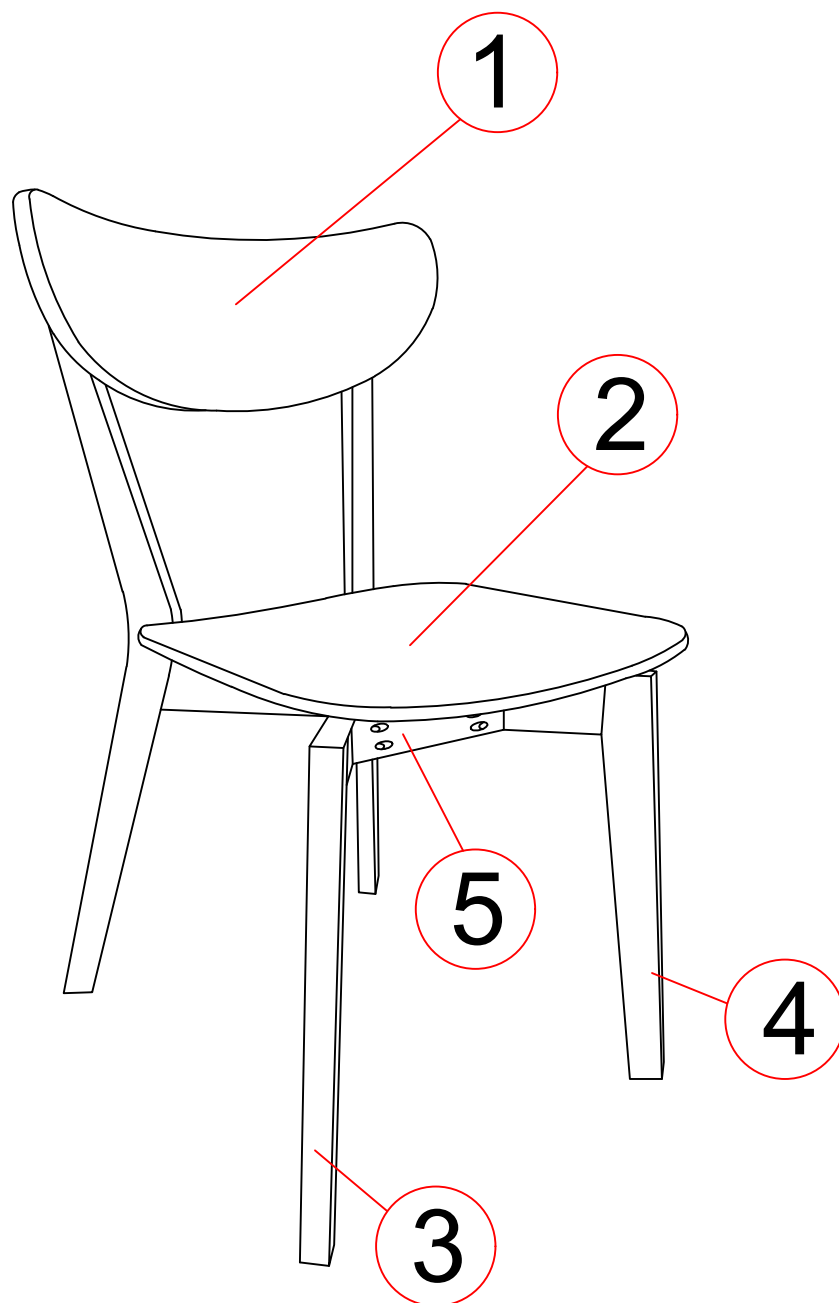


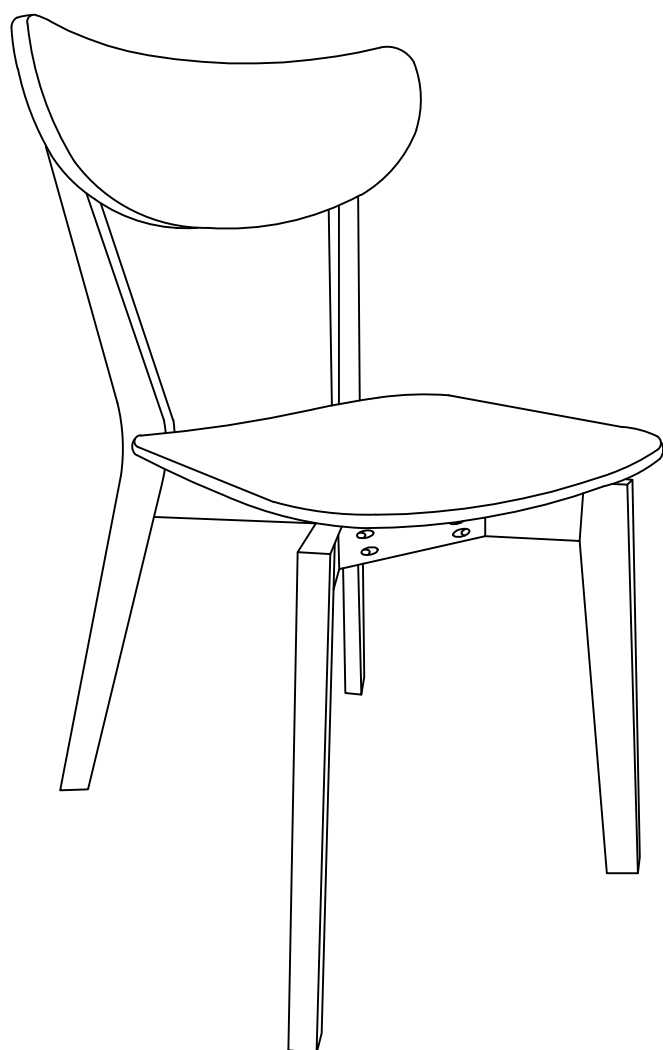


1	15	x	165	x	445mm
2	10+22	x	375	x	415mm
3	25	x	740	x	635mm
4	25	x	740	x	635mm
5	20	x	58	x	177mm





A x 4  JCBC M6 x 60mm	B x 1  JCBC M7 x 50mm	C x 8  SPRING WASHER M6	D x 1  ALLEN KEY M4
E x 4  JCBC M6 x 30mm	F x 4  JCBC M6 x 25mm	G x 4  Wood Button M9 x 15mm	H x 4  FLAT WASHER M6 x 13mm
J x 4  FELT PAD 3 x 22mm			


 
 
1

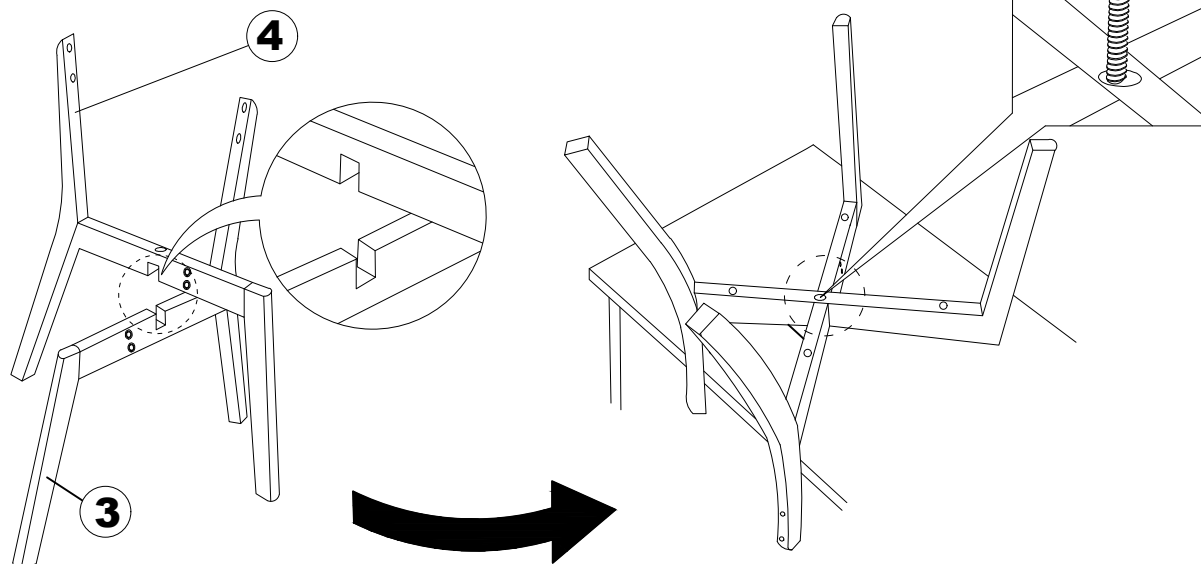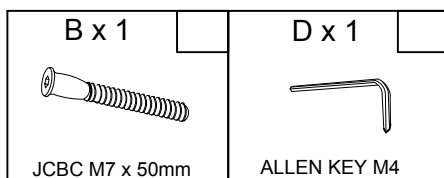




2

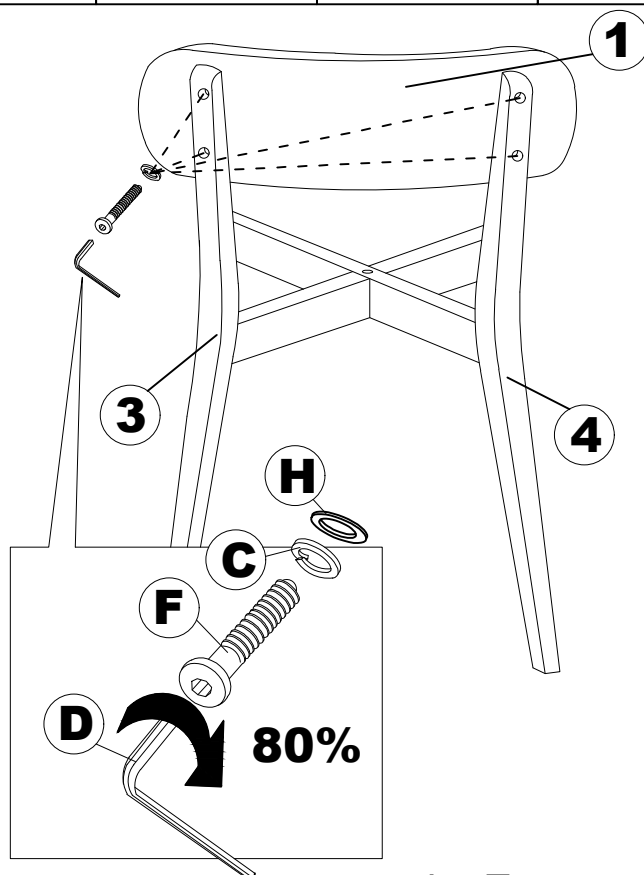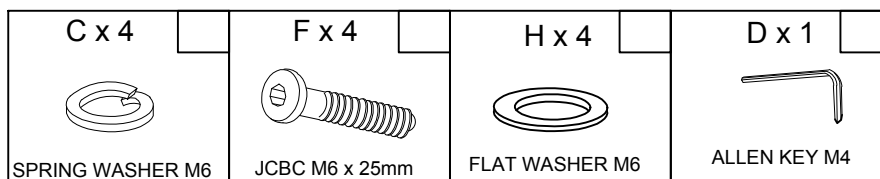  

3

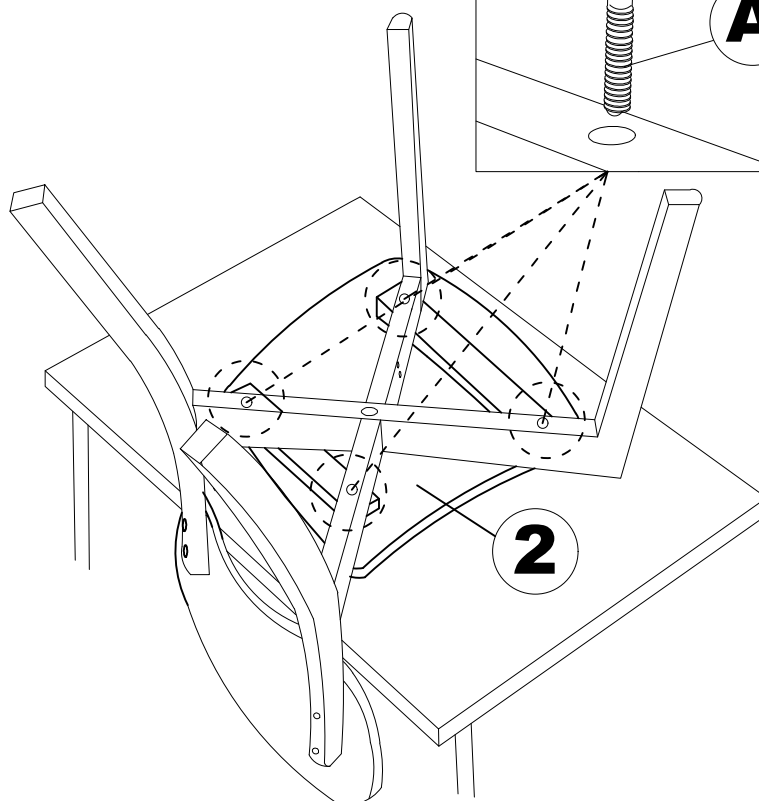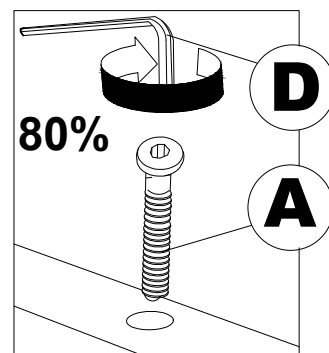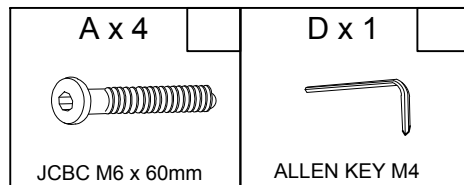   


4



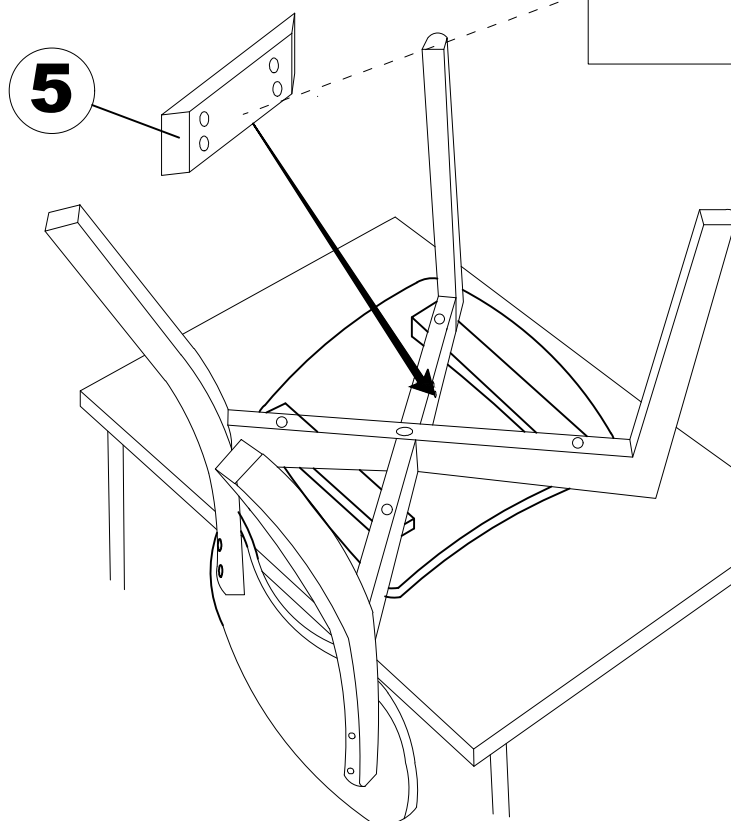 
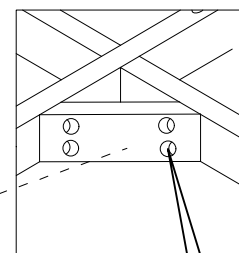 
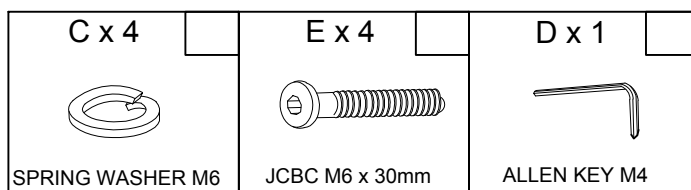 


5 - 7



 
5

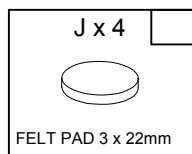

J

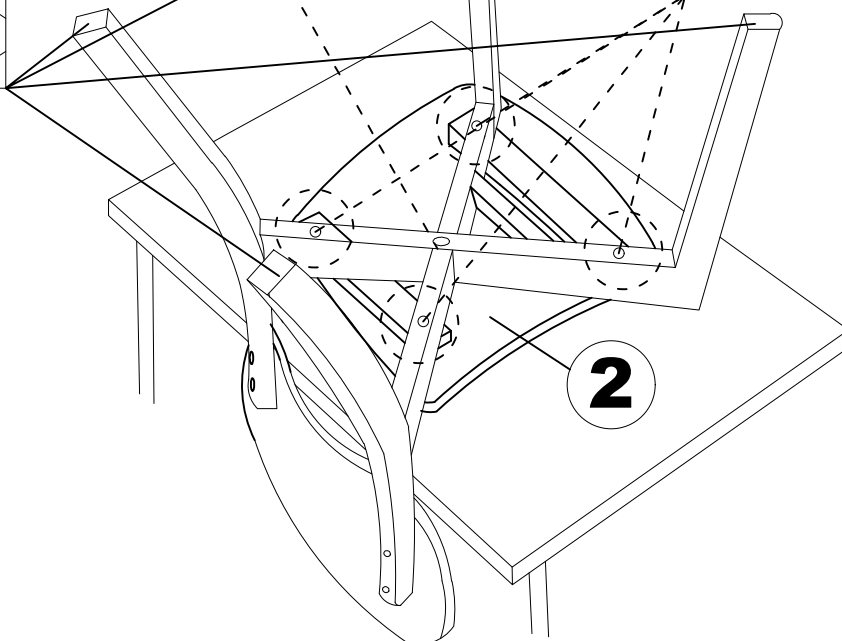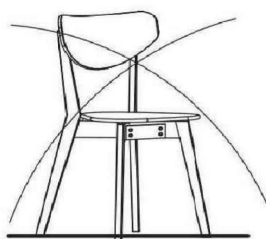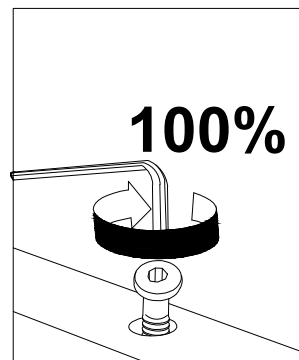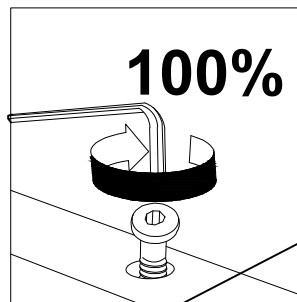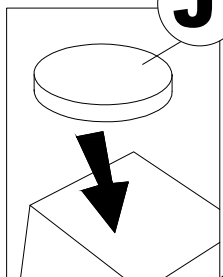     

6

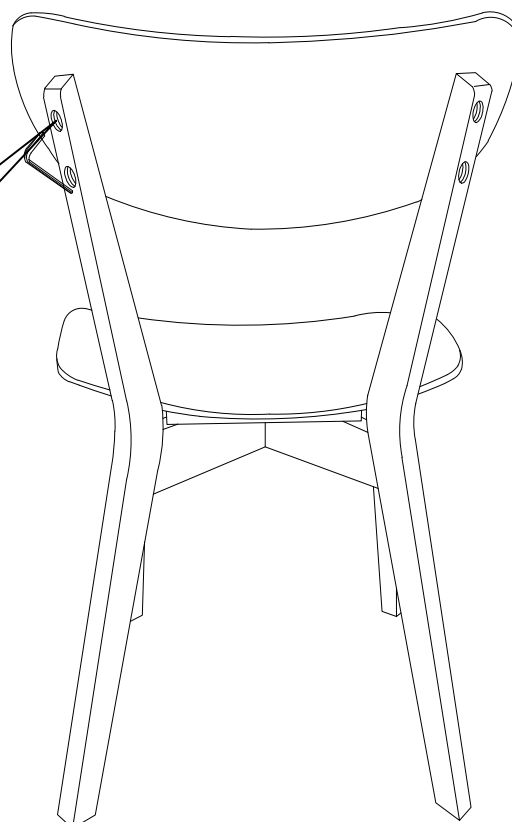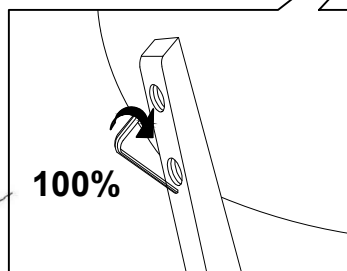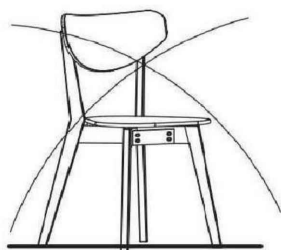   

7

