


Montageanleitung & erhältliche Ersatzteile


Assembly instruction & Spare parts available to order

Instruction de montage & Pièces de rechange disponibles



kela

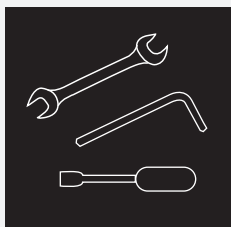




D	Montageanleitung
GB	Assembly instruction
F	Instructions de montage
E	Instrucciones de montaje
P	Manual de montagem
I	Istruzioni di montaggio
NL	Montagehandleiding
F	Asennusohje
GR	Οδηγίες συναρμολόγησης
TK	Montaj talimatı
AR	دليل التركيب
RU	Инструкция по монтажу
UA	Інструкція з монтажу
PL	Instrukcja montażu
CZ	Návod k montáži
SK	Návod na montáž
SLO	Navodila za montažo
HR	Upute za ugradnju
RO	Instrucțiuni de montaj
BG	Монтажна инструкция
CN	安装说明


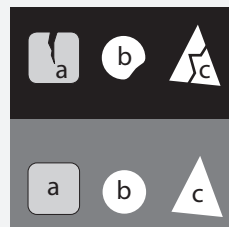


D	Erhältliche Ersatzteile
GB	Spare parts available to order
F	Pièces de rechange disponibles
E	Piezas de repuesto adquiribles
P	Peças sobressalentes encomendáveis
I	Pezzi di ricambio ordinabili
NL	Beschikbare vervangende onderdelen
F	Saatavana olevat varaosat
GR	Παρεχόμενα ανταλλακτικά
TK	Temin edilebilen yedek parçalar
AR	درفوت ملل را ي غلا عطق
RU	Имеющиеся в продаже запасные части
UA	Запасні частини
PL	Części zamienne do nabycia
CZ	Dostupné náhradní díly
SK	Dostupné náhradné diely
SLO	Nadomestni deli, ki so na voljo
HR	Dobavljivi zamjenski dijelovi
RO	Piese de schimb accesibile
BG	Резервни части, които можете да закупите
CN	备件

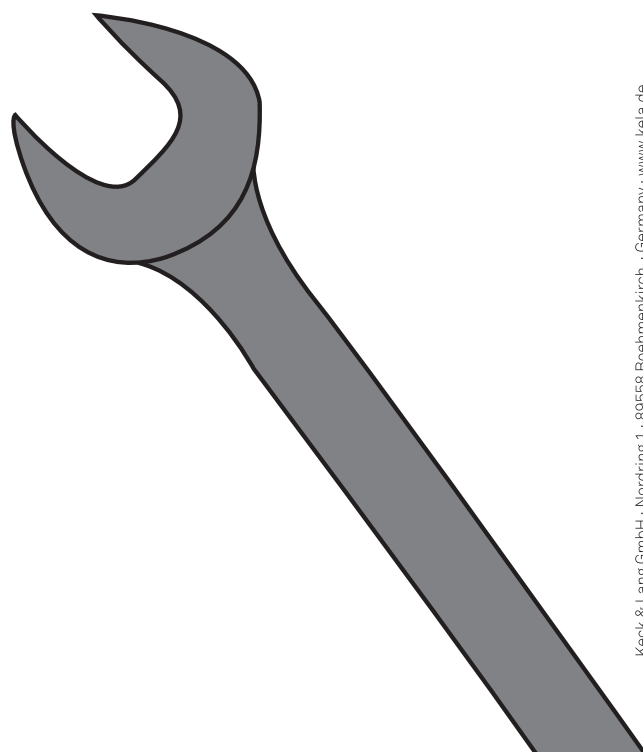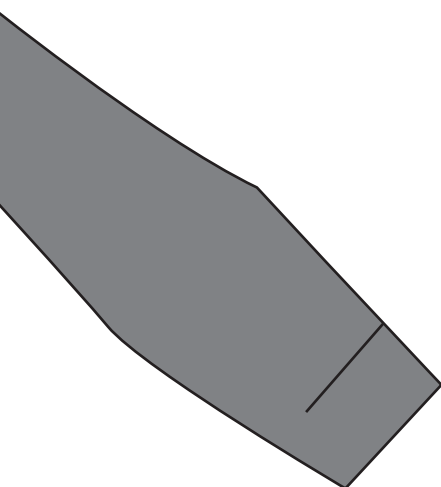

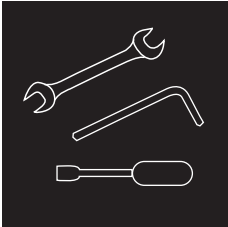

  A		x4
B		x4
C		x12
D		x28
E		x16
F		x4
G		x4

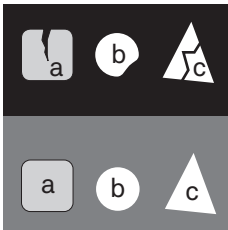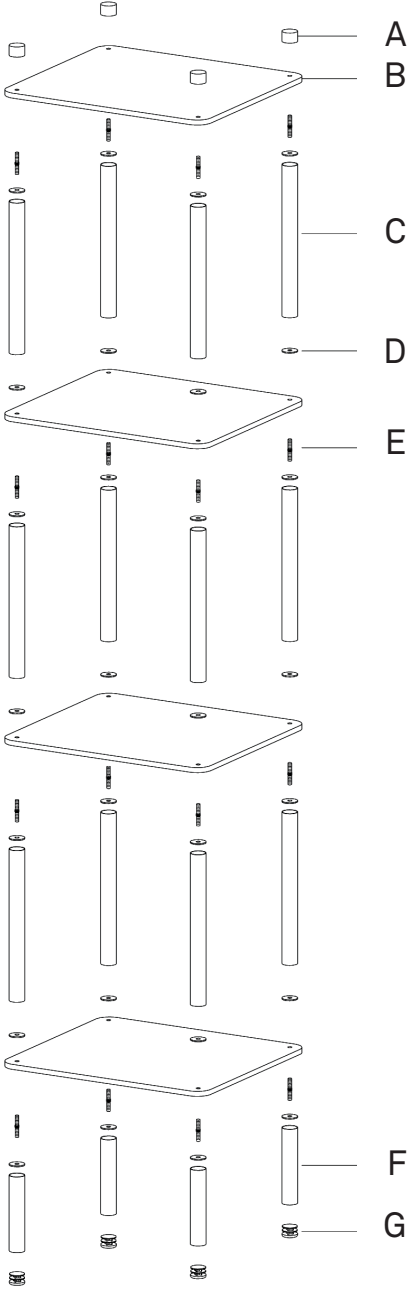

8180035
4x A
28x D
16x E
4x G

8180029
1x B

8180032
1x C

8180033
1x F