

FLAIR

5288802012




User manual
Bedienungsanleitung
Mode d'emploi
Handleiding
Manuale
Manual del usuario
Használati utasítás
Instrukcja obsługi



LUTEC


Incl.

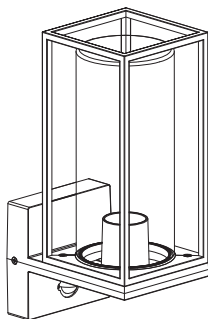

× 4



 × 4



Ø 6mm








IP44




+8mm




INFO:
Art.:
5288802012
220-240V
-50/60Hz

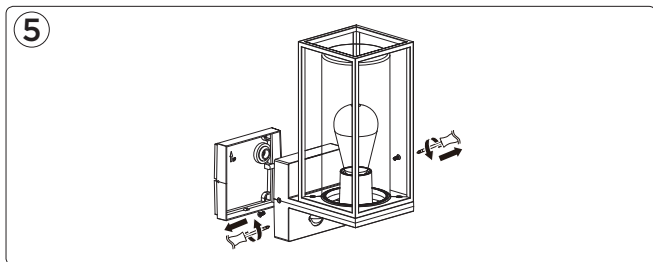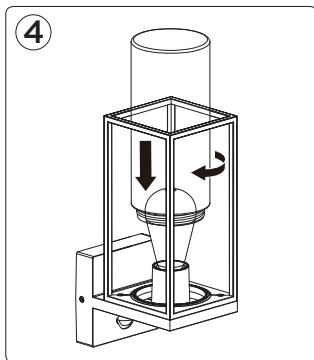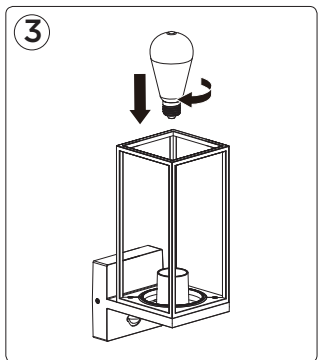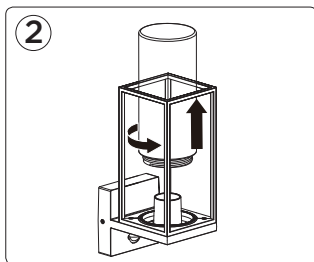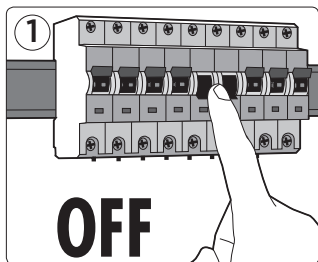


6

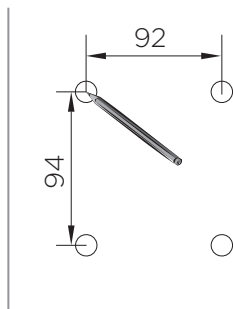


7



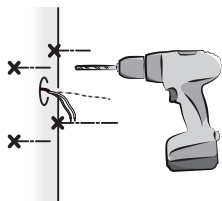


8





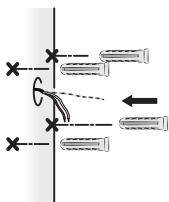


9

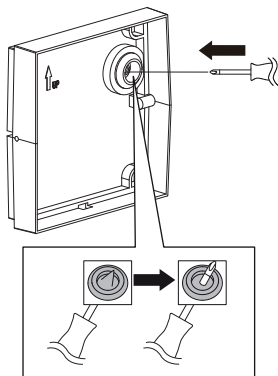

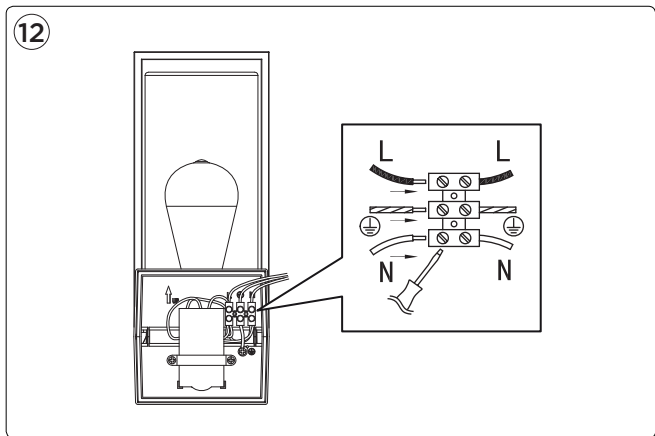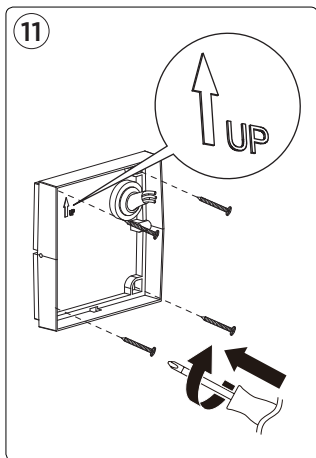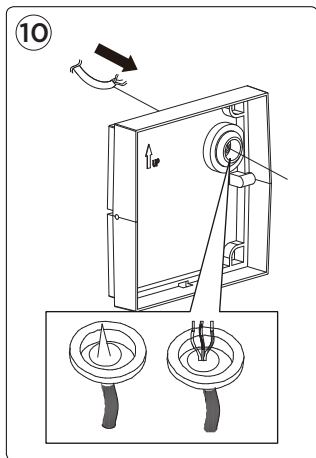

13

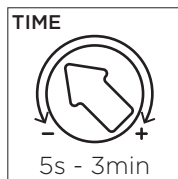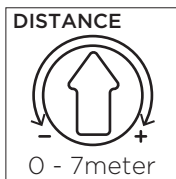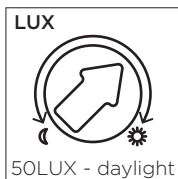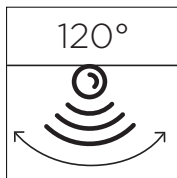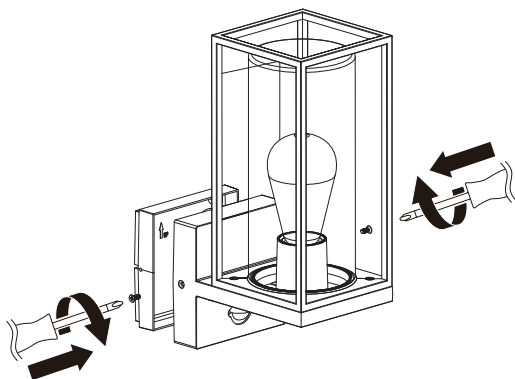



LUTEC Europe NV

Herentalsebaan 425
B-2160 Wommelgem - Belgium
+32 3 284 51 62
info@luteceurope.com
www.luteceurope.com



www.luteceurope.com/services/global-network