




JUST LIGHT GmbH
Olakenweg 36 · D-59457 Werl
☎ +49(0)2922 9721 9290
✉ Kundenservice@neuhaus-group.de
www.just-light.info

JUST LIGHT.

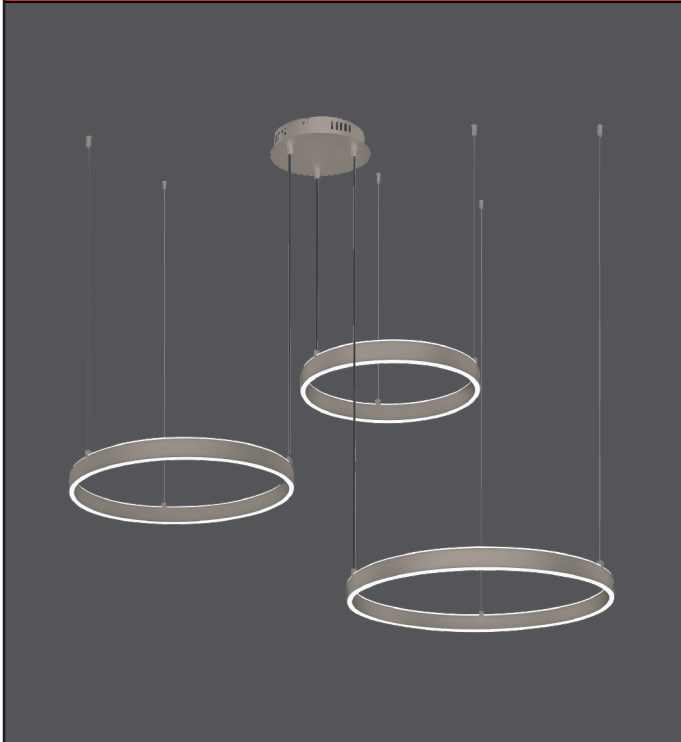


902070 - ANELLI



DE
GB
FR
ES
HR
HU
IT
NL


- DE** Dieses Produkt enthält Lichtquellen der Energieeffizienzklasse <E>.
- GB** This product contains light sources of energy efficiency class <E>.
- FR** Ce produit comprend sources lumineuses de classe d'efficacité énergétique <E>.
- ES** Este producto contiene fuentes de luz de la clase de eficiencia energética <E>.
- HR** Ovaj proizvod sadrži izvori svjetlosti energetskeg razreda <E>.
- HU** Ez a termék <E> energiahatékonysági osztályba tartozó fényforrások tartalmaz.
- IT** Questo prodotto contiene una sorgente luminosa della classe di efficienza energetica <E>.
- NL** Dit product bevat lichtbronnen van energie-efficiëntieklasse <E>.

LED 26 W
3.400 lm
58 W
1.770 lm
t 30.000 h
T_K 3.000 K
☞ 15.000 x
💡 → < 0,5 s



902070	
	230V / 50Hz~
LED	2x LED-Board 36 DC/ 26 W

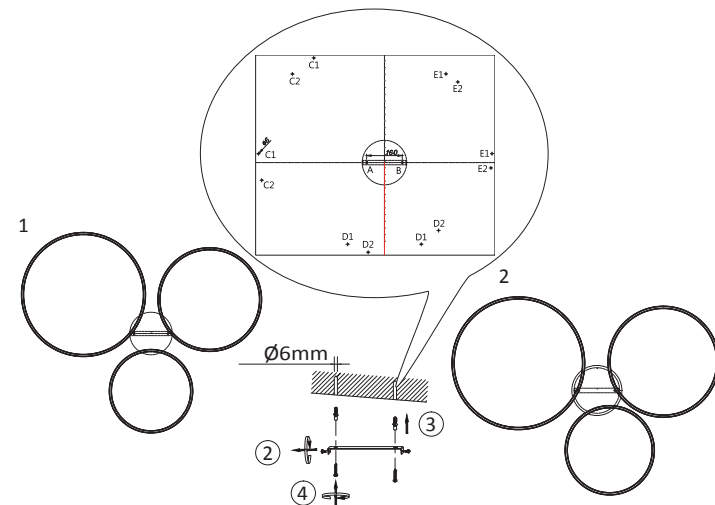

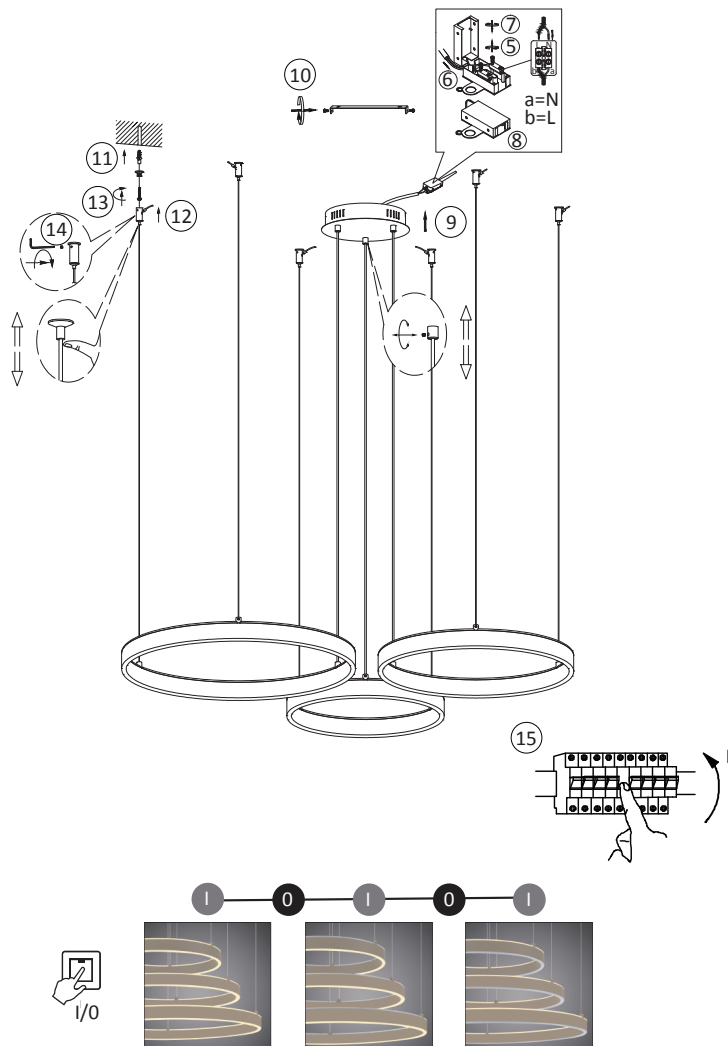

DE Anleitung für die Fernbedienung

1. Alles An
2. Alles Aus
3. Downlight An/Aus
4. Uplight An/Aus
5. Downlight Helligkeit erhöhen
6. Uplight Helligkeit erhöhen
7. Downlight Helligkeit reduzieren
8. Uplight Helligkeit reduzieren


Anlernen der Fernbedienung an die Leuchte:

Halten Sie Taste 1 gedrückt und schalten Sie die Leuchte über den Wandschalter an. Wenn die Leuchte aufblinkt war das Anlernen erfolgreich.

Zurücksetzen der Leuchte:

Halten Sie Taste 2 gedrückt und schalten Sie die Leuchte über den Wandschalter an. Die Leuchte blinkt auf und ist auf Werkseinstellungen zurückgesetzt. Die Leuchte kann nicht mehr über die Fernbedienung gesteuert werden.

!!!Eine Fernbedienung kann nur eine Leuchte steuern.
Eine Leuchte kann nur von einer Fernbedienung gesteuert werden!!!

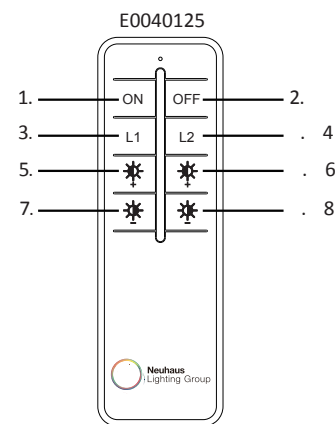

GB Remote Control Instruction

1. All On
2. All Off
3. Down light on/off
4. Up light on/off
5. Down light increase brightness
6. Up light increase brightness
7. Down light reduce brightness
8. Up light reduce brightness

Assigning the remote control to the luminaire:

Press and hold button 1 and switch on the luminaire via the wall switch. If the luminaire flashes, the matching was successful.

Resetting the luminaire:

Press and hold button 2 and switch on the luminaire via the wall switch. The luminaire flashes and is reset to factory settings. The luminaire can no longer be controlled via the remote control.

!!!One remote control can control only one luminaire.
One luminaire can only be controlled by one remote control !!!!

Beschreibung / Description	Betriebsgröße / Operation data
Batterie / Battery	2x 1,5V AAA
Sendefrequenz / Transmission frequency	2,4 GHz
Sendeleistung / Transmission power	6 dBm
Leerlaufstrom / No-load current	2 uA
Betriebsstrom / Operating current	1-20 mA
Reichweite der Fernbedienung / Range of the remote control	6 m

