ASSEMBLY INSTRUCTION

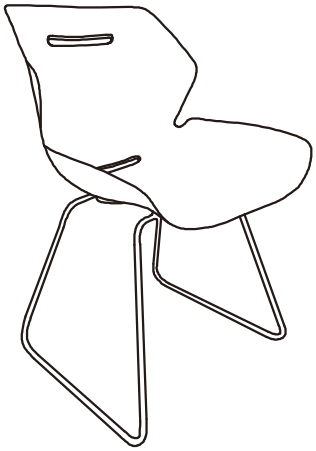

Ax1	(1)x4 M6*16MM
Bx1	(2)x1

❶

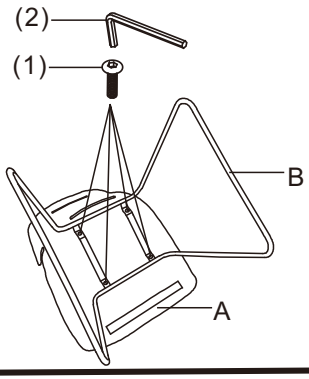

❷

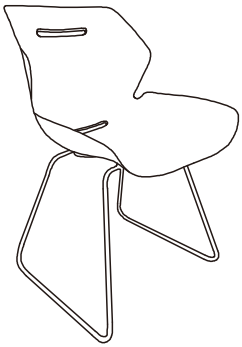

ASSEMBLY INSTRUCTION

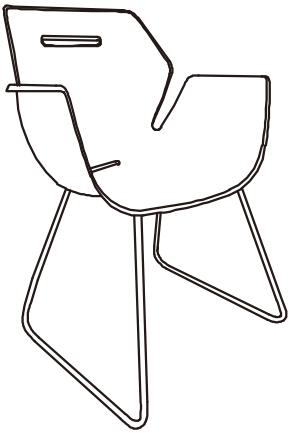

Ax1	(1)x4 M6*16MM
Bx1	(2)x1

❶

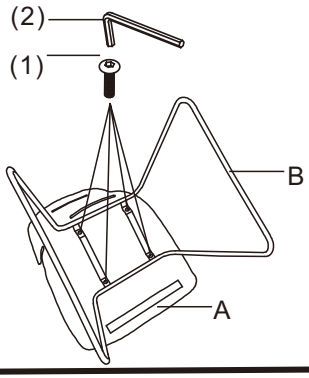
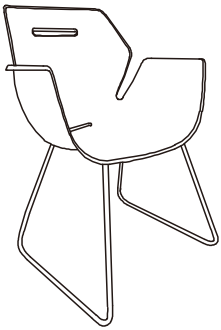
❷