

20 MIN


2 X




(D) AUFBAUANLEITUNG
(NL) HANDLEIDING VOOR DE MONTAGE
(TR) MONTAJ TALIMATI
(RO) INSTRUCTIUNI DE ASAMBLARE
(F) INSTRUCTION D'ASSEMBLAGE
(CZ) POKYNY K MONTÁŽI
(BG) ИНСТРУКЦИИ ЗА МОНТАЖ
(HR) UPUTSTVA ZA MONTAŽU

(GB) ASSEMBLY INSTRUCTIONS
(PL) INSTRUKCJA MONTAŻU
(RU) Инструкция по монтажу
(I) PROCEDURA DI ASSEMBLAGGIO
(SK) POKYNY K MONTÁŽI
(HU) ÖSSZESZERELÉSI ÚTMUTATÓ
(SLO) NAVODILA ZA MONTAŽO
(S) MONTERINGSANVISNING
(LT) DIEGIMO INSTRUKCIJOS
(E) INSTRUCCIONES DE MONTAJE

MODEL "JAMBA"


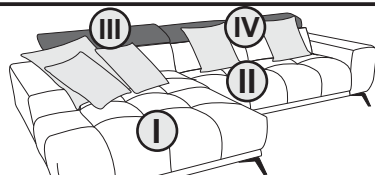


REC BREIT-3






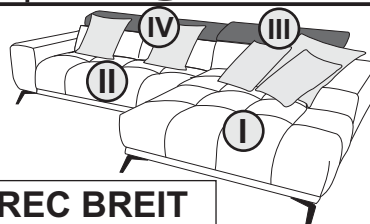


3-REC BREIT

1/2

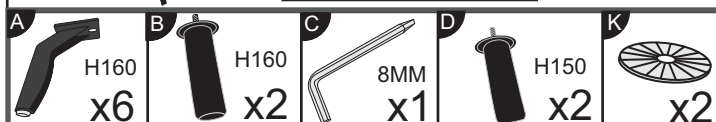

hardware bag/sachet matériel/zubehörbeutel/sachetti materiale/ bolsa de materiales/worek materiałowy

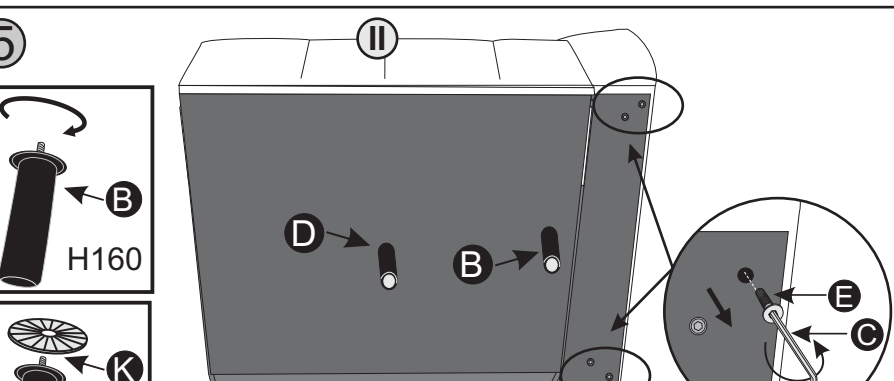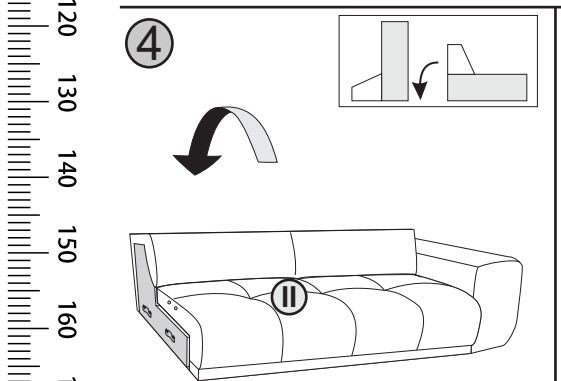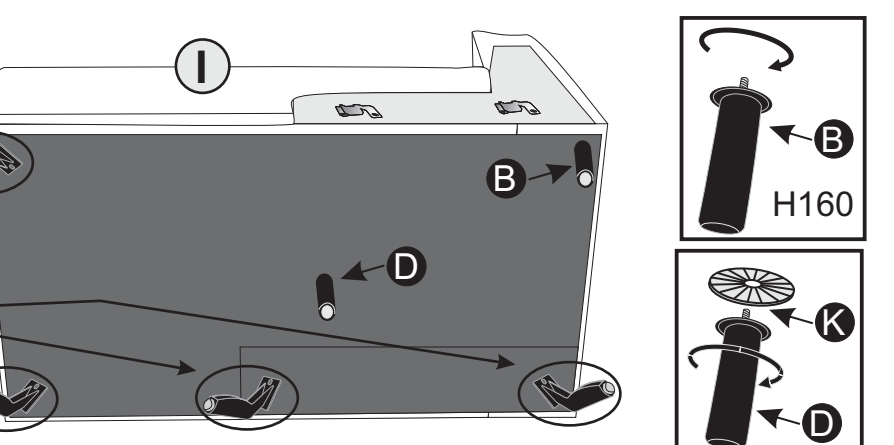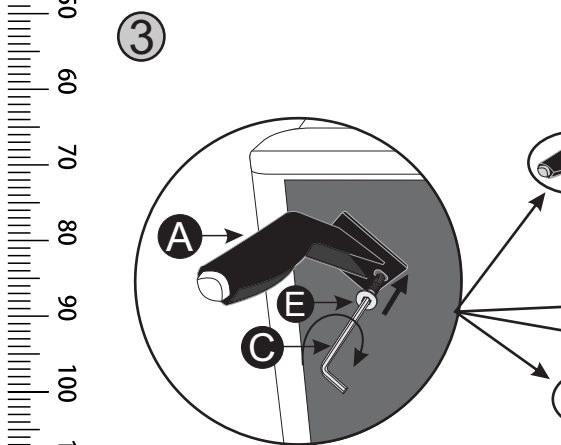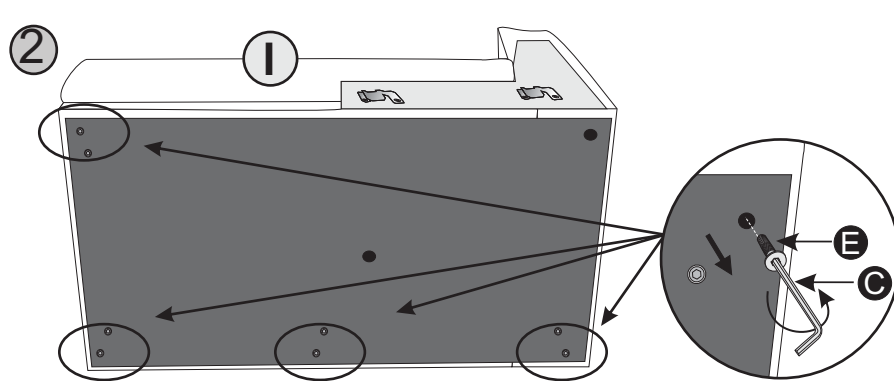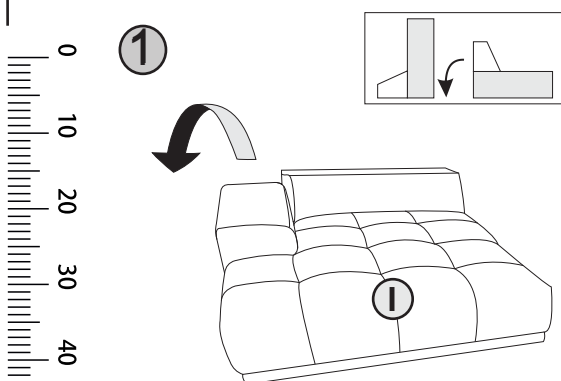pre-assembled/ pre assemble/
vormontiert/ premontato/ wstępnie/ zamontowaneLE TRI
+ FACILE

20 MIN

2 X




(D) AUFBAUANLEITUNG
(NL) HANDLEIDING VOOR DE MONTAGE
(TR) MONTAJ TALIMATI
(RO) INSTRUCTIUNI DE ASAMBLARE
(F) INSTRUCTION D'ASSEMBLAGE
(CZ) POKYNY K MONTÁŽI
(BG) ИНСТРУКЦИИ ЗА МОНТАЖ
(HR) UPUTSTVA ZA MONTAŽU


(GB) ASSEMBLY INSTRUCTIONS
(PL) INSTRUKCJA MONTAŻU
(RU) Инструкция по монтажу
(I) PROCEDURA DI ASSEMBLAGGIO
(SK) POKYNY K MONTÁŽI
(HU) ÖSSZESZERELÉSI ÚTMUTATÓ
(SLO) NAVODILA ZA MONTAŽO
(S) MONTERINGSANVISNING
(LT) DIEGIMO INSTRUKCIJOS
(E) INSTRUCCIONES DE MONTAJE

MODEL

“JAMBA”

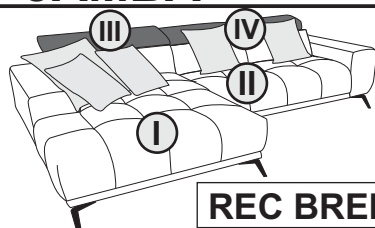


REC BREIT-3

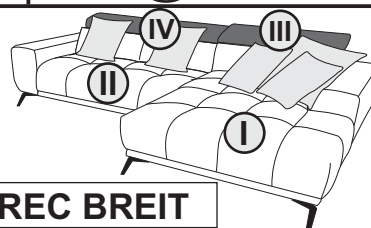


3-REC BREIT

2/2

⑥

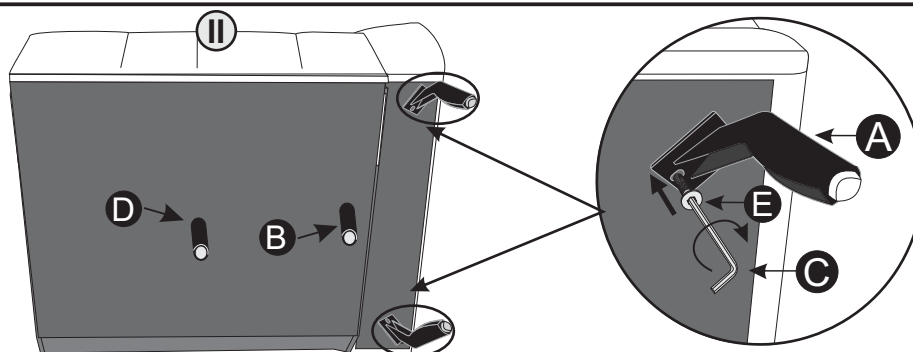


⑦

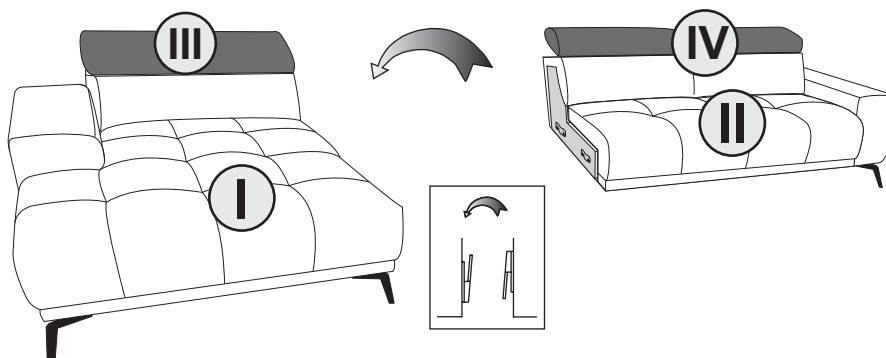


⑧


1/3

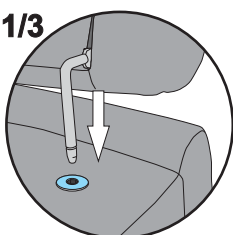



2/3

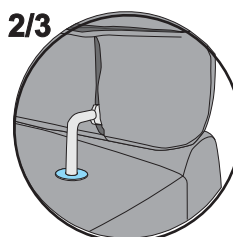

3/3

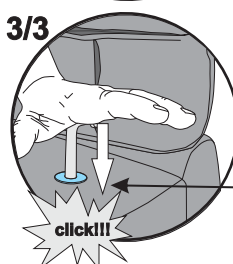

click!!!

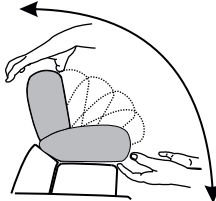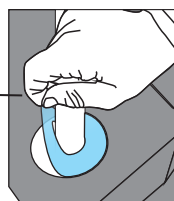LE TRI
+ FACILE