


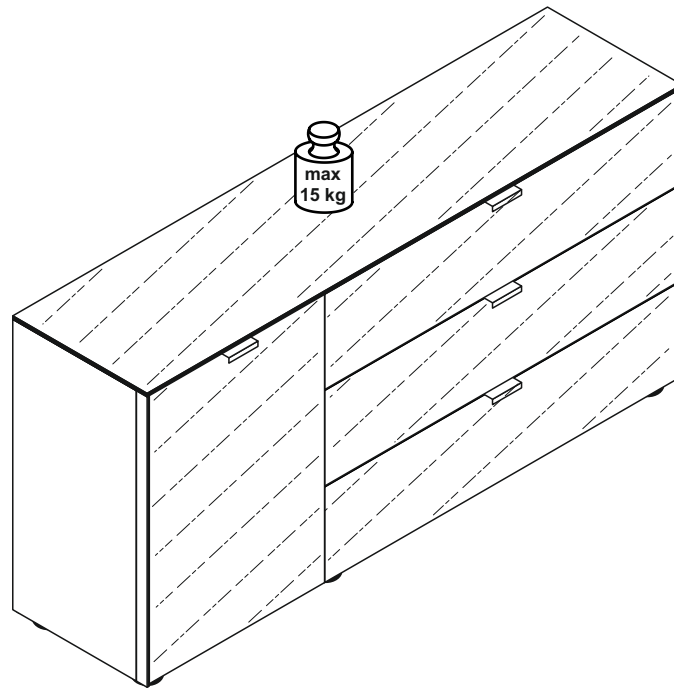

Artikel.-Nr.:

0772-KO_121 GL

Montageanleitung.-Nr.:

MA1-00374

REPC-Nr.:	Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба



SCAN ME

Beutel 0772-KO_121 GL 0-15 Colli 3/4

B01-10 2x	 6,3x50	B01-30 64x	 3x16	B01-70 4x	 3x30	B01-80 14x	 3,5x13	B01-90 4x	 3,5x20
B01-122 4x	 4x13	B01-200 18x	 6,3x13	B02-08 8x	 h=10mm	B02-10 20x	 h=12mm	B02-20 28x	B02-160 8x

Beutel 0772-KO_121 0-35 Colli 3/4

B03-07 2x	 2x	B03-11 6x	 6x	B03-42 6x	 8er
--------------	--------	--------------	--------	--------------	---------

Beutel 0772-KO_121 0-55 Colli 1/4

B01-36 4x	 4x40
--------------	----------

Beutel BT1-00001 Colli 2/4


B05-265 1x	 set one by Musterring Pflegeanweisung
---------------	---

Beutel BT1-00005 Colli 3/4

B01-123 12x	 4x15	B02-173 6x	 6x
----------------	----------	---------------	--------

Beutel 0772-KO_121 0-45 Colli 3/4

B02-103 12x	 8x30	B05-01 6x	 LEIM
B05-185 4x	 1x	B05-260 1x	 set one by Musterring
B06-425 4x	 1x	B05-280 1x	 1x



Colli 1/4

1x
0772-KO_121-Front Tür
956 x 580

2x HTS-00057
1123 x 358

2x
1111 x 146 Z01-99-1111

1x
1100 x 25 Z17-96

2x
Z01-200L

2x
Z01-200R

2x
350 x 160 Z01-105-350

2x
350 x 160 Z01-106-350

2x
Z01-72

1x
Z07-27

2x
1163 x 316
0772-KO_121-Front Schubk.-blende

1x
1163 x 316
0772-KO_121-Front Klappe

Colli 2/4

1x
1734 x 424 Oberboden

1x
1163 x 309 HTR-00324

1x
1151 x 407 Mittelboden

1x
1734 x 409 Boden

2x
1163 x 320 HTR-00325

5x
500 x 50 Z02-500

Colli 3/4

2x
568 x 397 Einlegeboden

1x
930 x 409 Mittelseite

2x
960 x 34 Z99-00464





1x
960 x 409 Seite links

1x
960 x 409 Seite rechts




2x
950 x 291 HTR-00327

Colli 4/4

1x
1768 x 445 Z16-4-1632

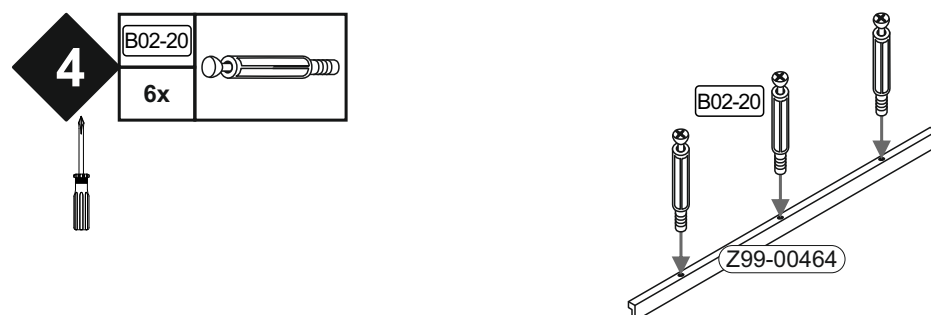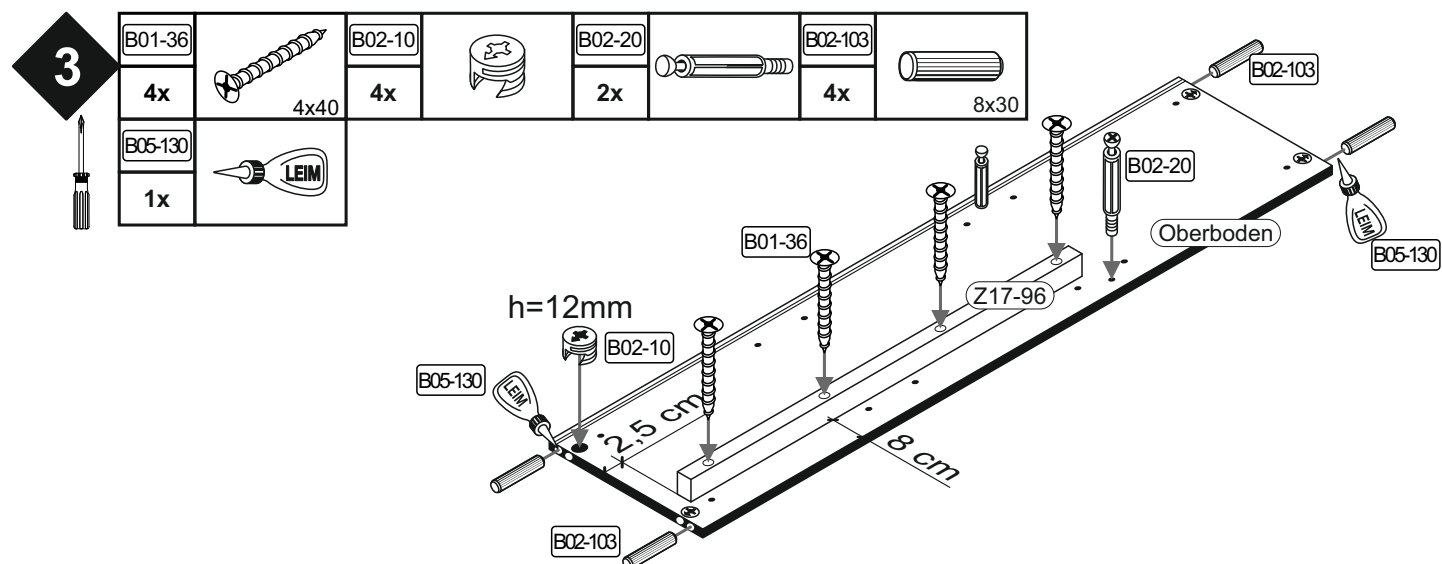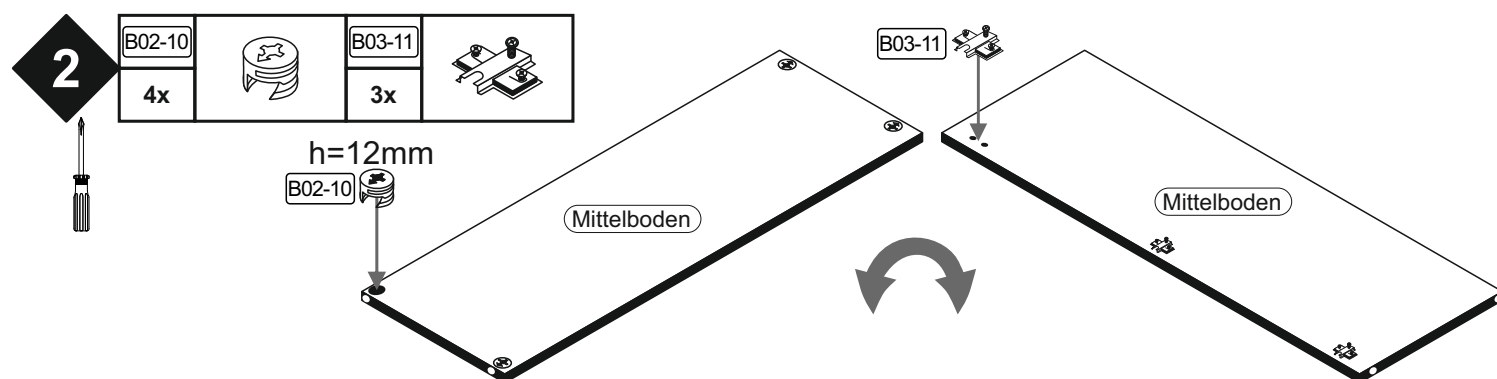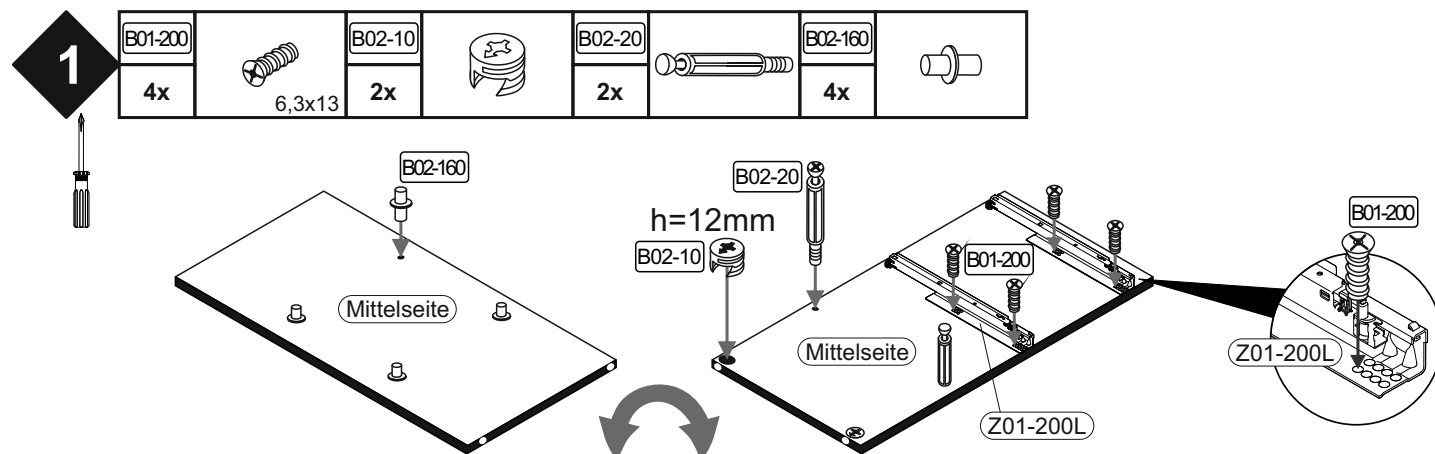


CHICAGO

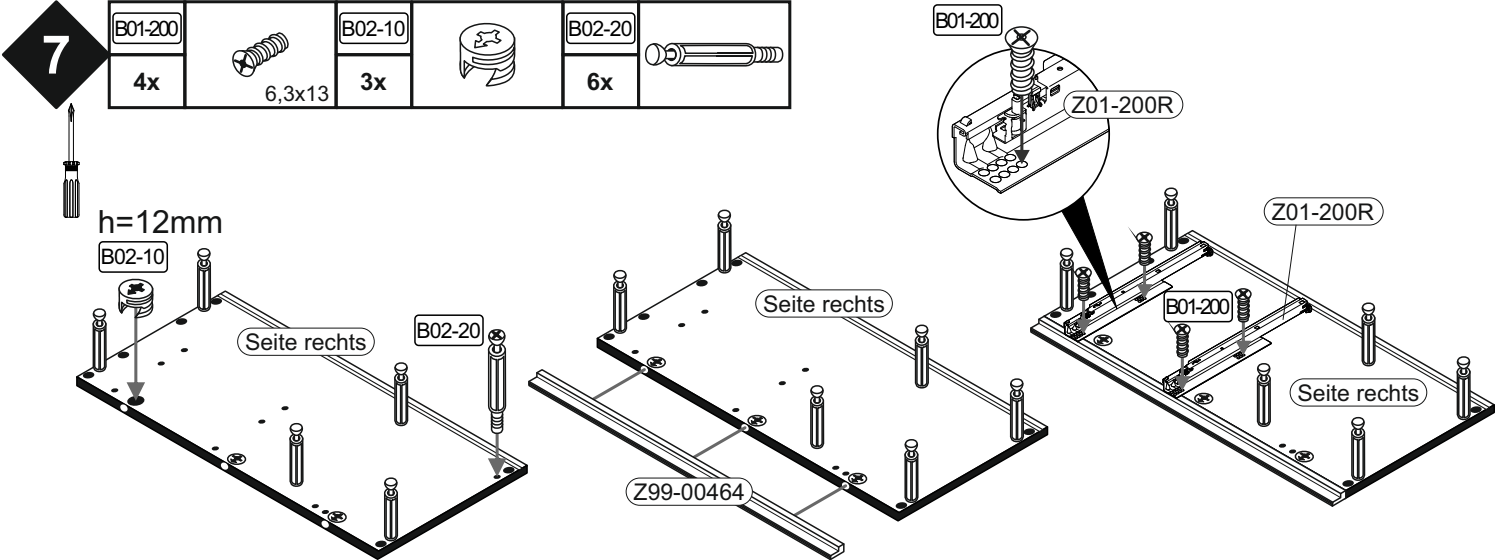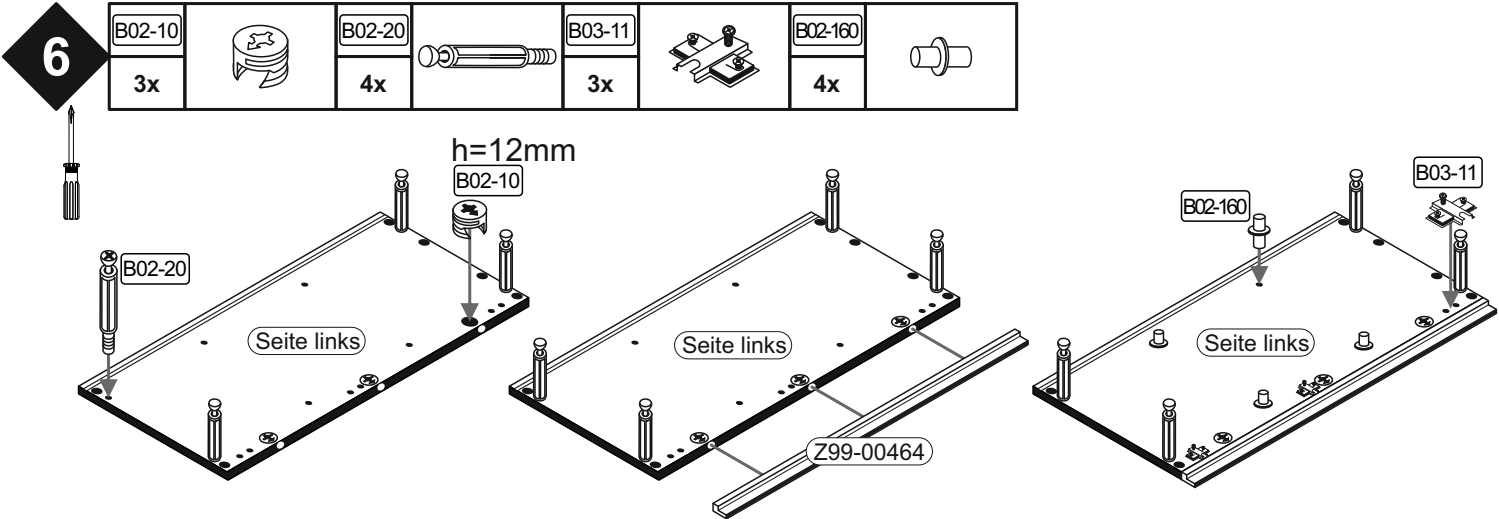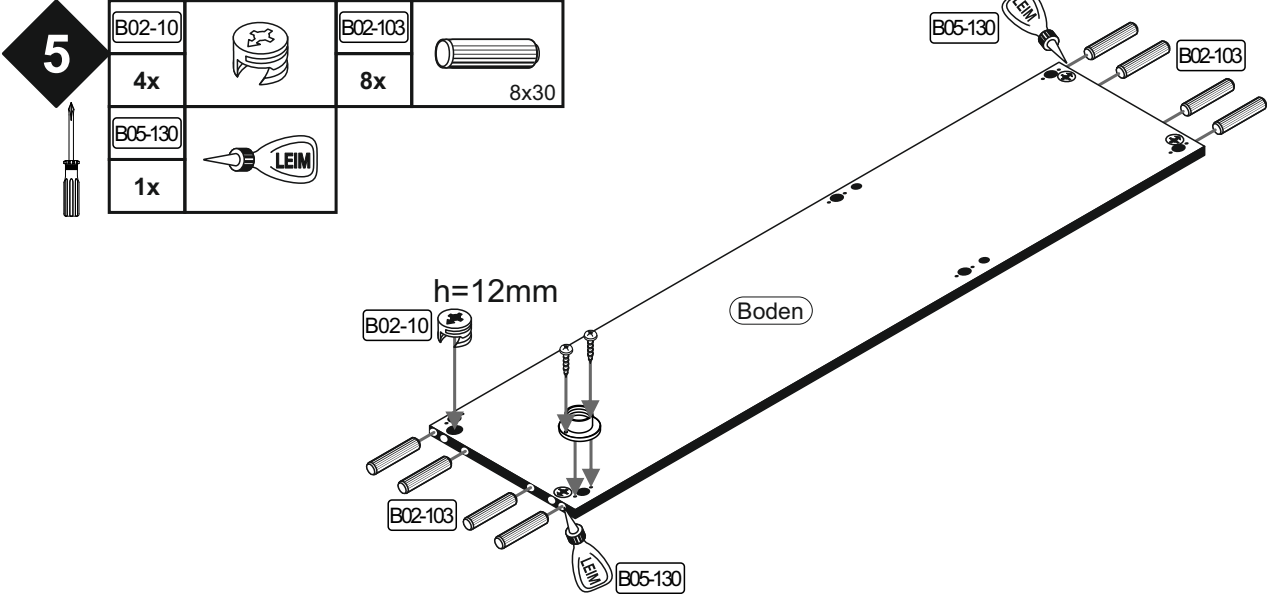



8

B01-80		B03-42	
6x	3,5x13	3x	8er

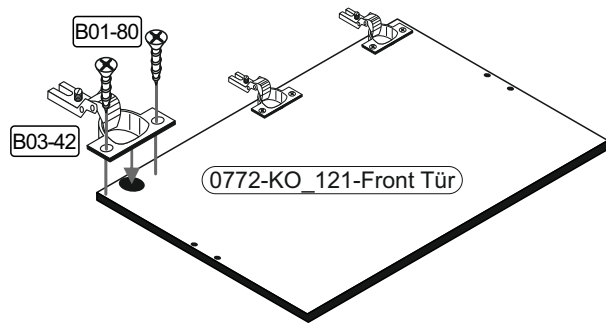


9

B01-200		B02-08		B02-20		B06-425	
4x	6,3x13	8x		8x		2x	





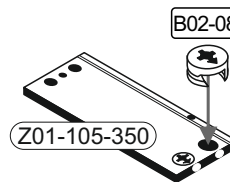
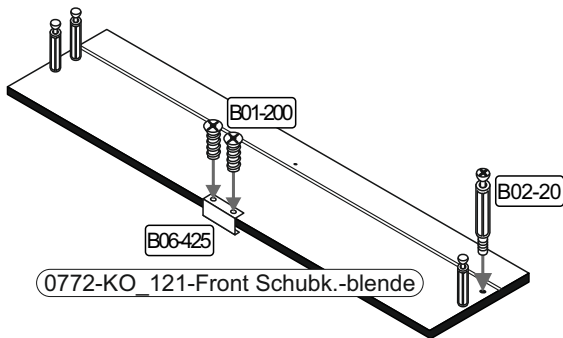


h=10mm

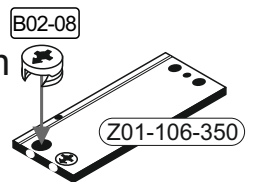

10

B01-30		B01-70	
26x	3x16	4x	3x30
B01-122			
4x	4x13		

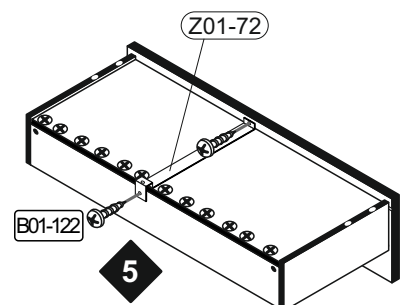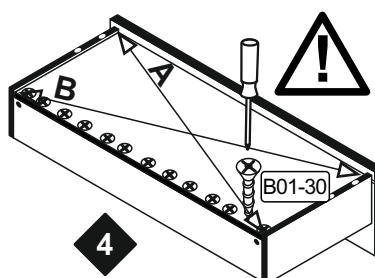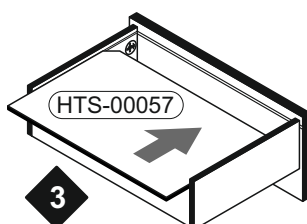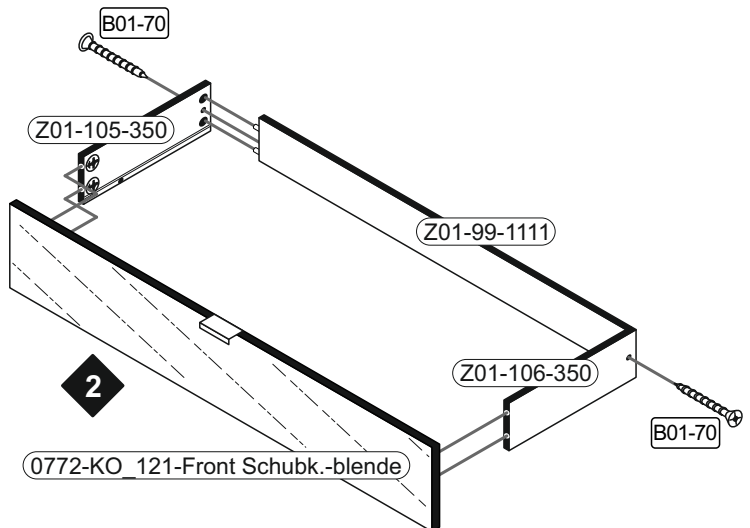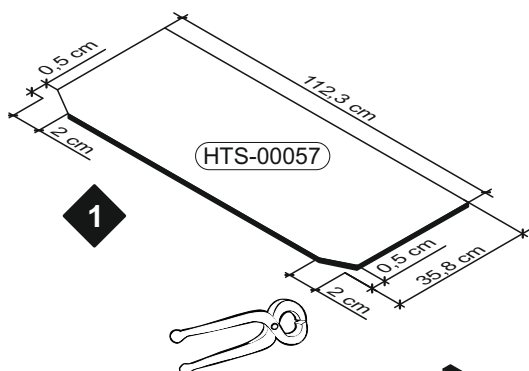


CHICAGO

11





B01-80		B01-200	
6x	3,5x13	2x	6,3x13
B03-42		B06-425	
3x	8er	1x	

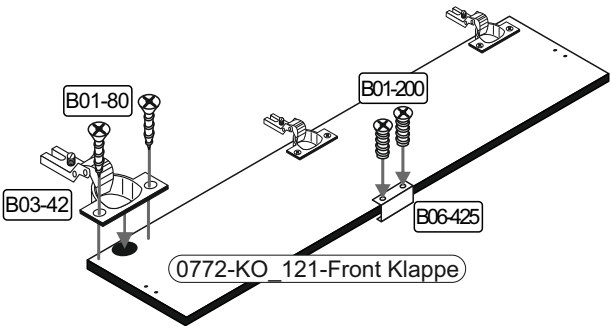


12





B01-10		B05-130	
2x	6,3x50	1x	

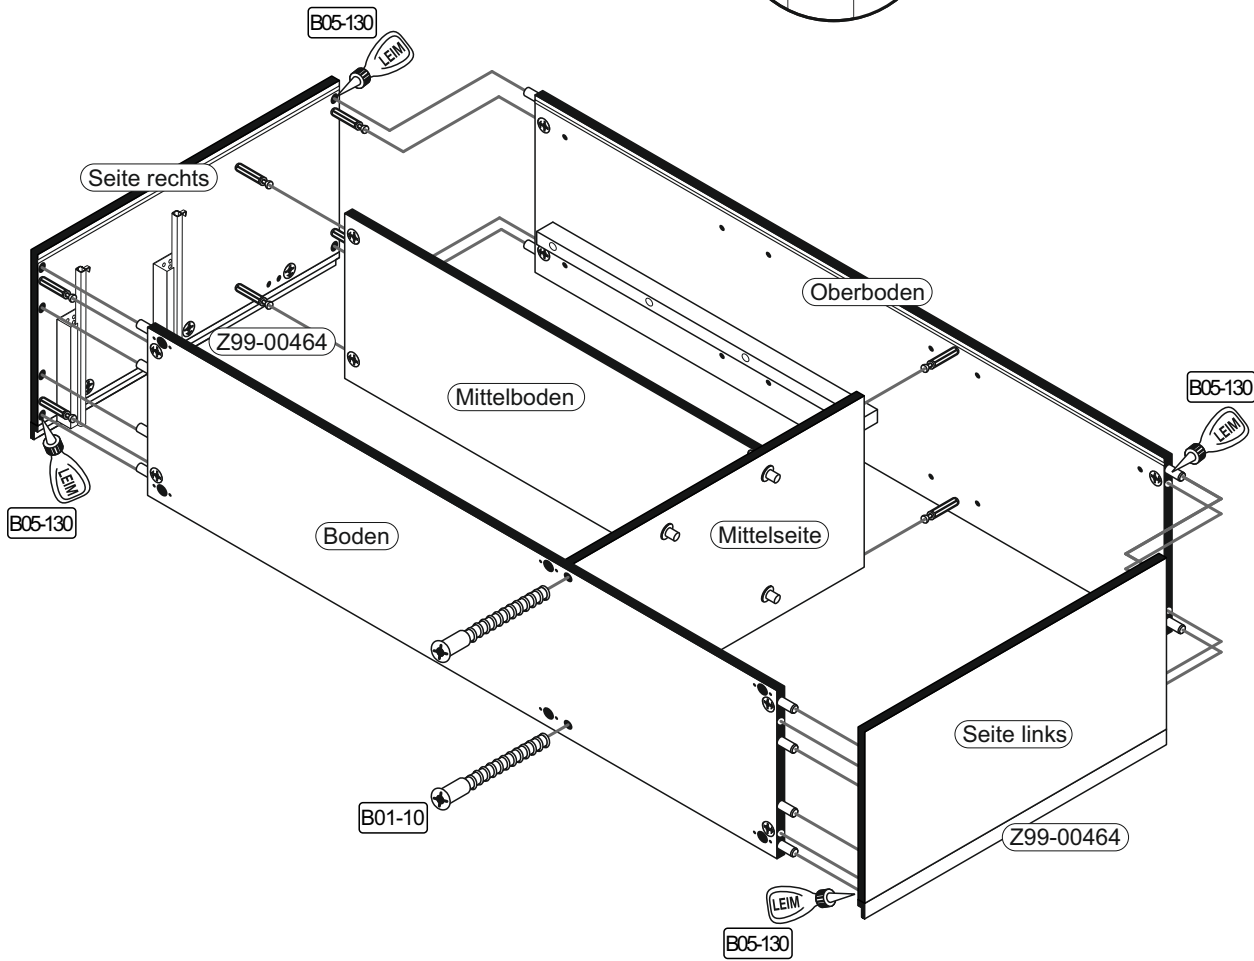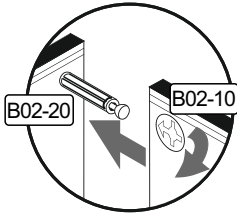

13




B01-30		B01-90	
38x	3x16	4x	3,5x20
B01-123			
12x	4x15		
B05-185			
4x			
B02-173			
6x			

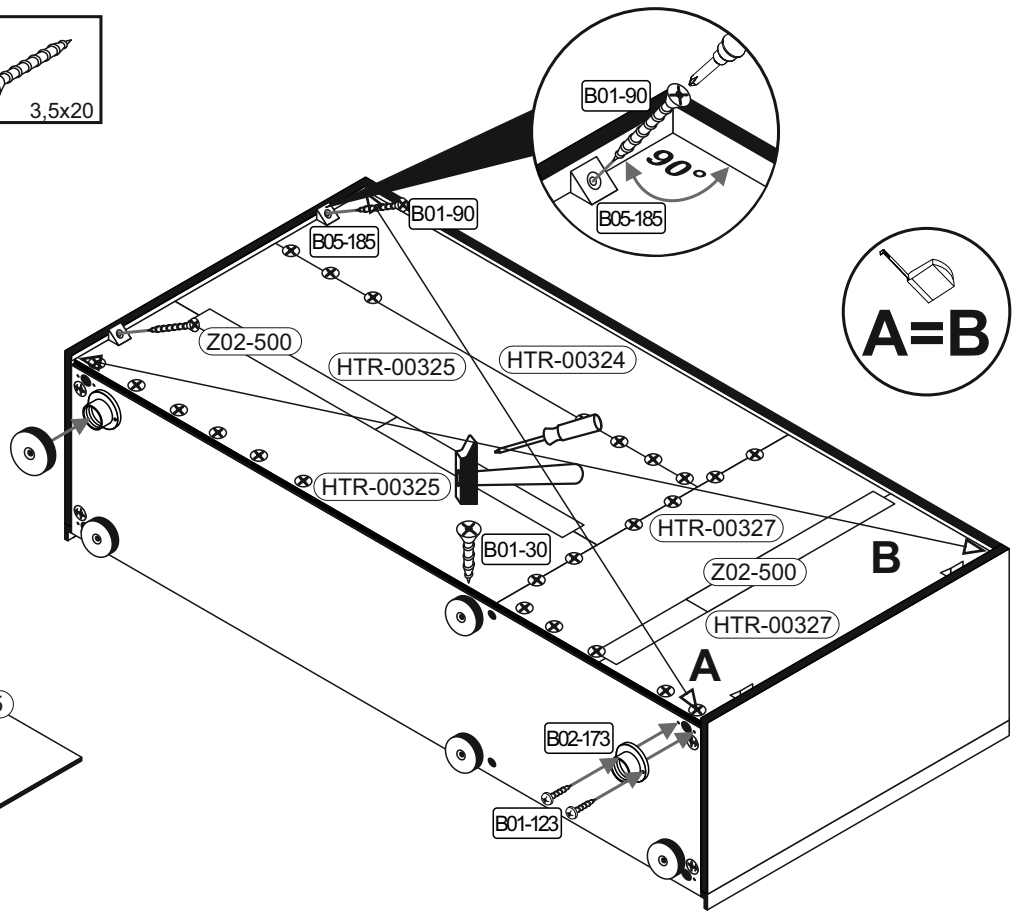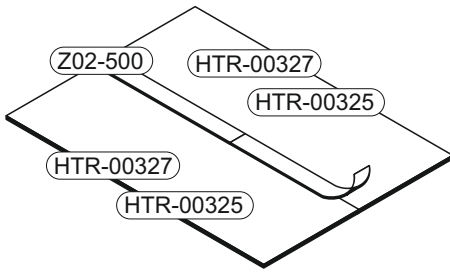


14



B05-01		B05-280	
6x		1x	

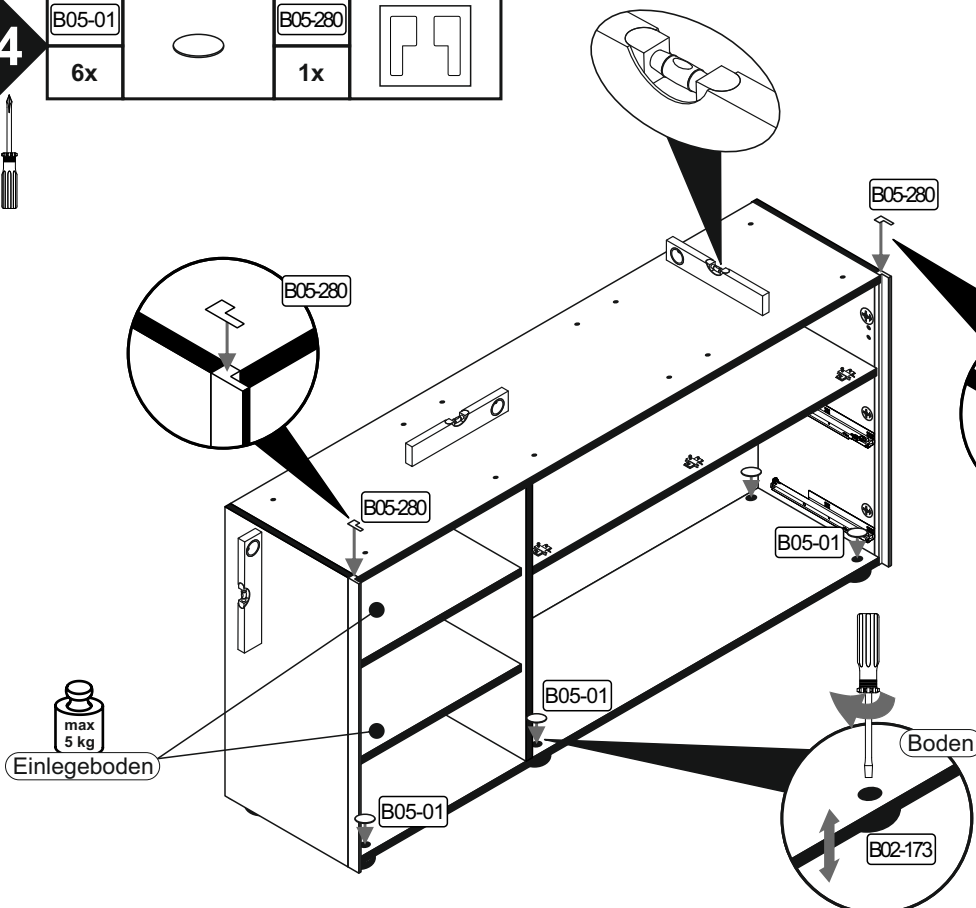


SCAN ME

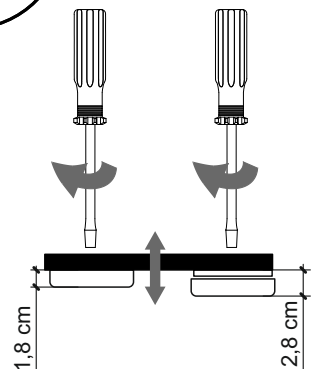


Höhenverstellung der Möbelfüße

15



Einbau des Schubkastens

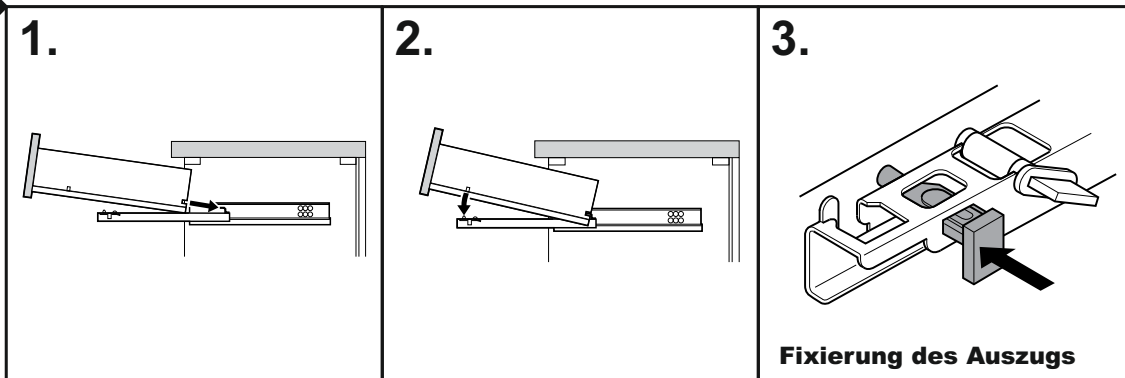


Ausbau des Schubkastens

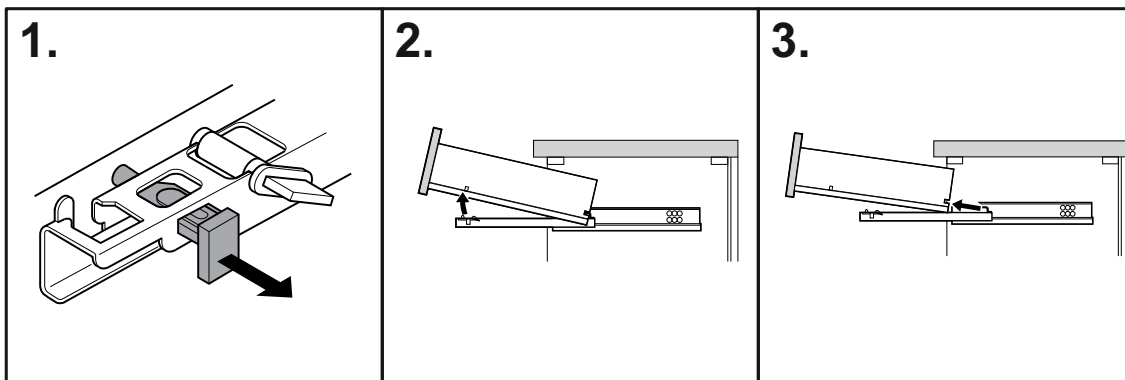

Höhenverstellung des Schubkastens

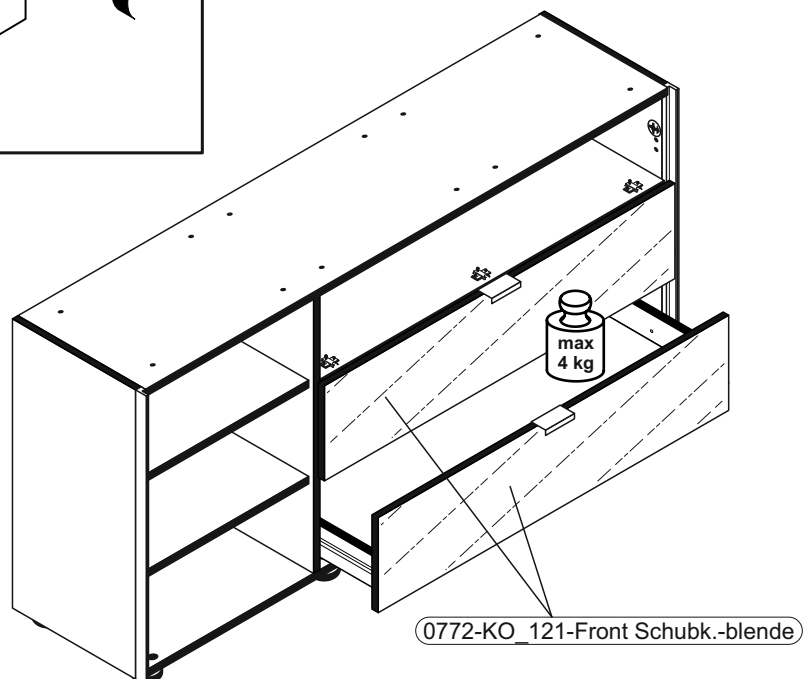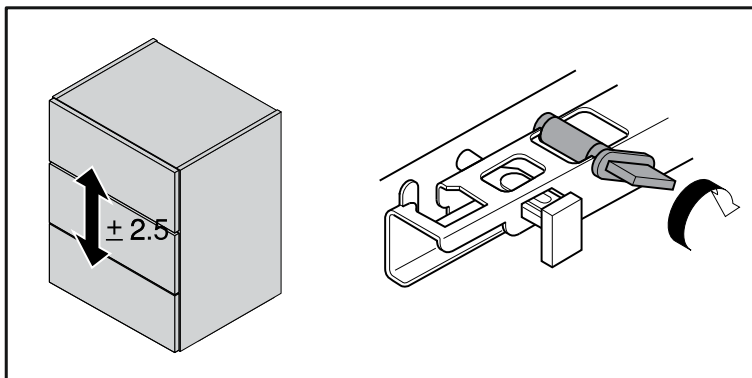

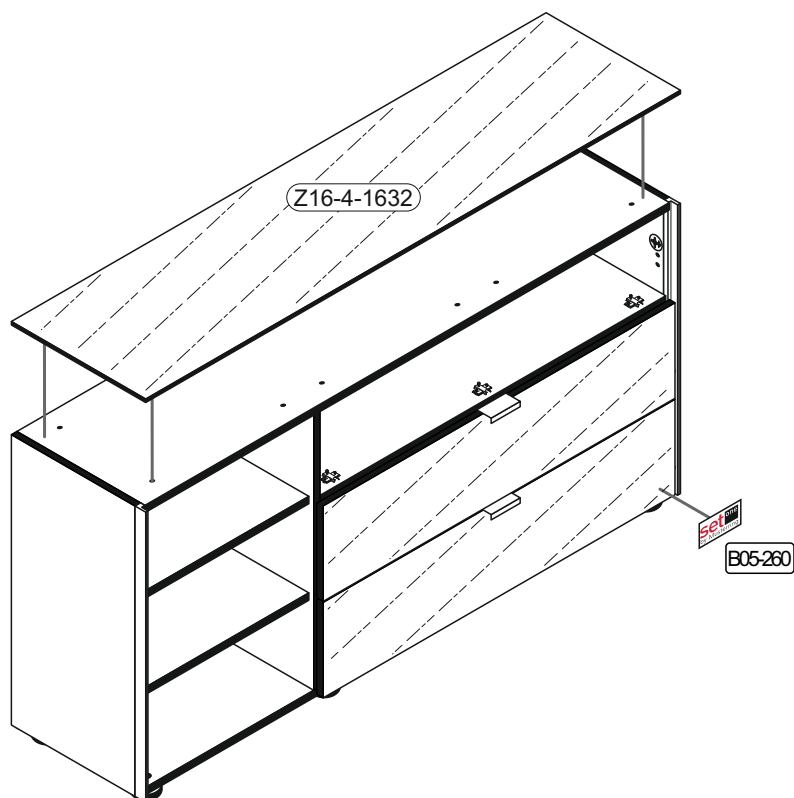


17	B01-80		B01-200		B03-07		B06-425	
	2x	3,5x13	4x	6,3x13	2x		1x	





SCAN ME

Montage der Türdämpfung

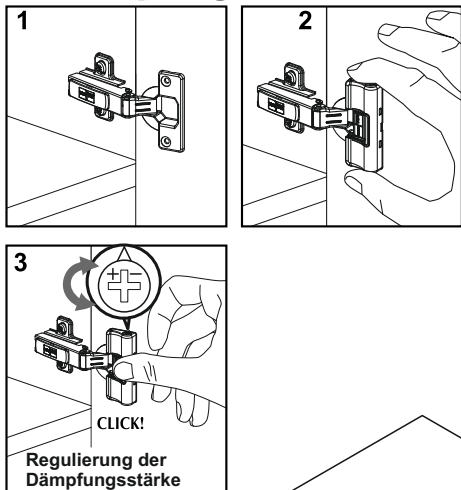

Stütze unten (Z07-27) überdrehen

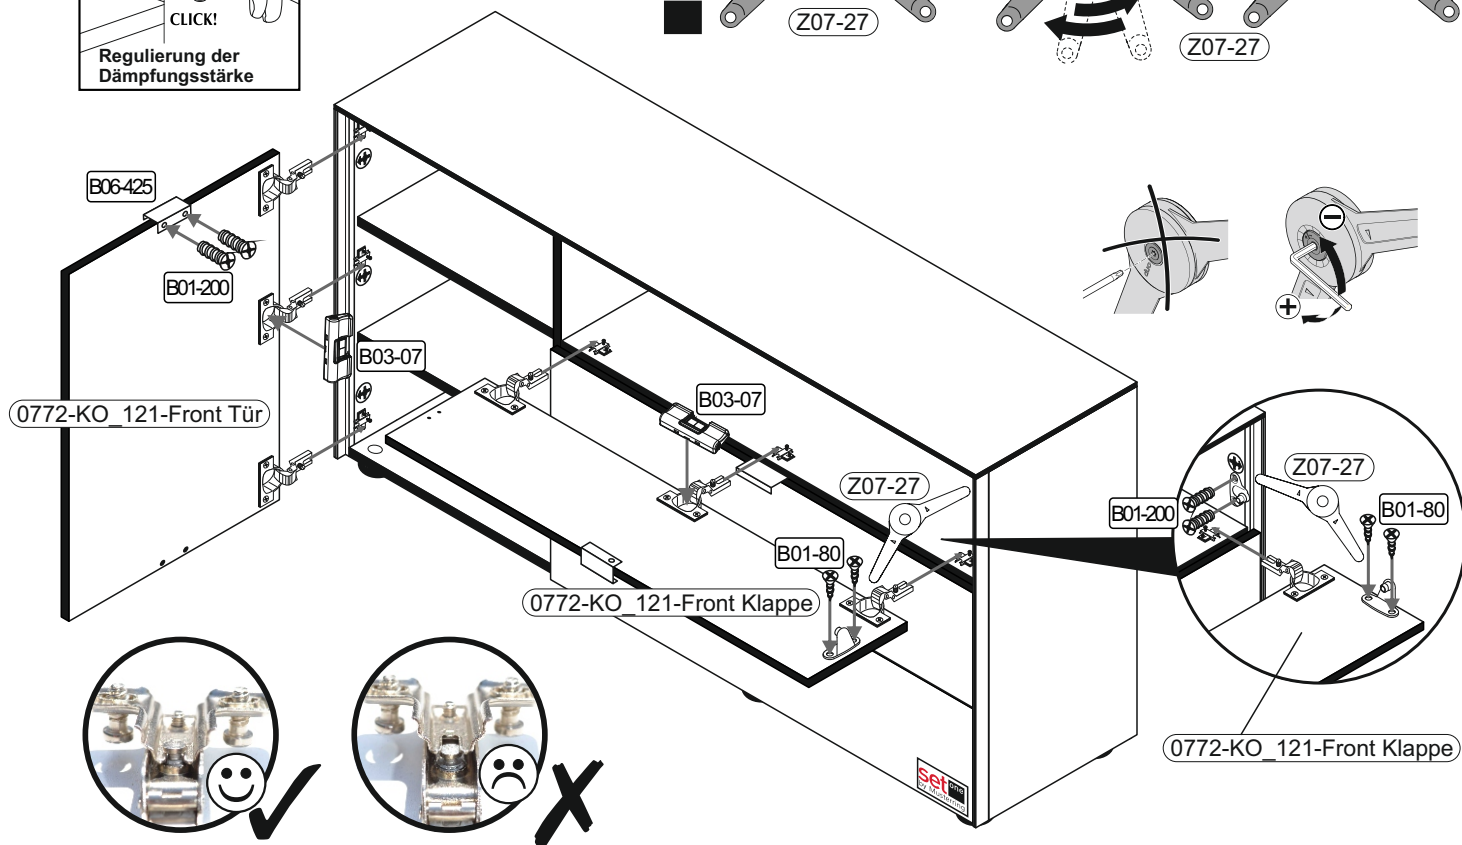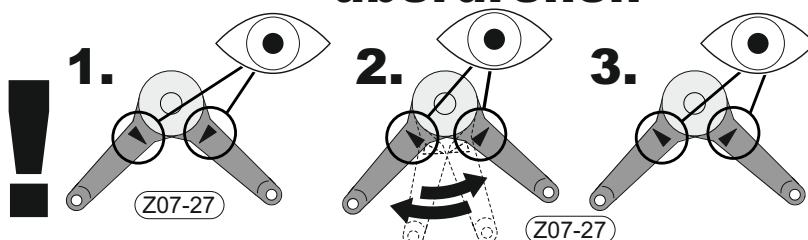

Türen einstellen (Scharniere justieren)

Adjusting the doors (adjusting the hinges)

Régler les portes (ajuster les charnières)

Sistemare le porte (regolare le cerniere)

Deuren instellen (scharnieren afstellen)

Nastawić drzwi (wyregulować zawiasy)

Vyrovnejte dvířka (seříd'te závěsy)

Nastavenie dverí (nastavenie závesov)

Állítsa be az ajtókat (állítsa be a zsanérokot)

Reglare usi (ajustare balamale)

Kapıların ayarlanması (menteselerin seviye ayarı)

Регулировка дверей (регулировка шарнира)

