



Type 670-108

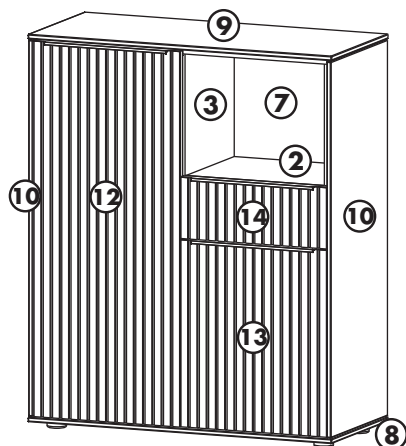

Sie brauchen:
You need:

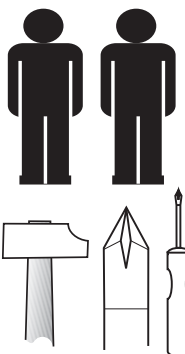

Wichtige Information!

Sehr geehrter Kunde, lesen Sie bitte vor dem Aufbauen die Montageanleitung sorgfältig durch und überprüfen Sie die Vollständigkeit und Richtigkeit der Möbelteile und Beschläge.

Sollte ein Teil fehlen oder beschädigt sein, wenden Sie sich bitte an Ihren Möbelhändler.

Nehmen Sie die Montage, konsequent nach der in der Montageanleitung angegebenen Reihenfolge vor.

Bewahren Sie die Montageanleitung im eigenen Interesse gut auf!

Nur mit einem Staubtuch oder feuchtem Lappen reinigen.

Keine scheuernde Putzmittel verwenden.

Important Information!

Dear customer, before you start please read through these instructions and make sure that all the pieces and fittings mentioned are there.

If a piece should be missing or damaged, report this to the store where you purchased this piece of furniture .

Assemble your piece of new furniture using the assembly instructions one step at a time as shown.

After assembly keep these instructions in a safe place, you may need them sometime later!


Only clean with a duster or damp cloth. Don't use strong detergents or solvents.

Beschlagliste

Fittings


CAD und Design
Aarhus 670-108 / 09.21

 2x ak	 3x 446mm gr32	 1x sl3	 1x sr3	 6x 6,3 x 16 es5
 1x le	 12x t4	 20x 8 x 40 p1	 2x 13mm a3	 8x 17mm x 4mm ak4a
 5x fu	 5x fo	 10x 4 x 25 S47	 6x M4 x 23 gs3s	 16+2x e2
 2x 15mm x 3mm ak4	 4x 6,3 x 11 es	 2x 3 x 20 RW1	 16x rh	 16x 3 x 20 s7
 10x 4 x 16 s4	 5x D 3mm d6	 7x 1,5mm tad	 1x 13mm x 8mm ak1	 16x a1





 12x M4 x 26 gs10s	 1x rv	 1x 3,5 x 15 s5	 1x 5 x 100 s28	 1x wd
-----------------------	-----------	--------------------	--------------------	-----------



A1

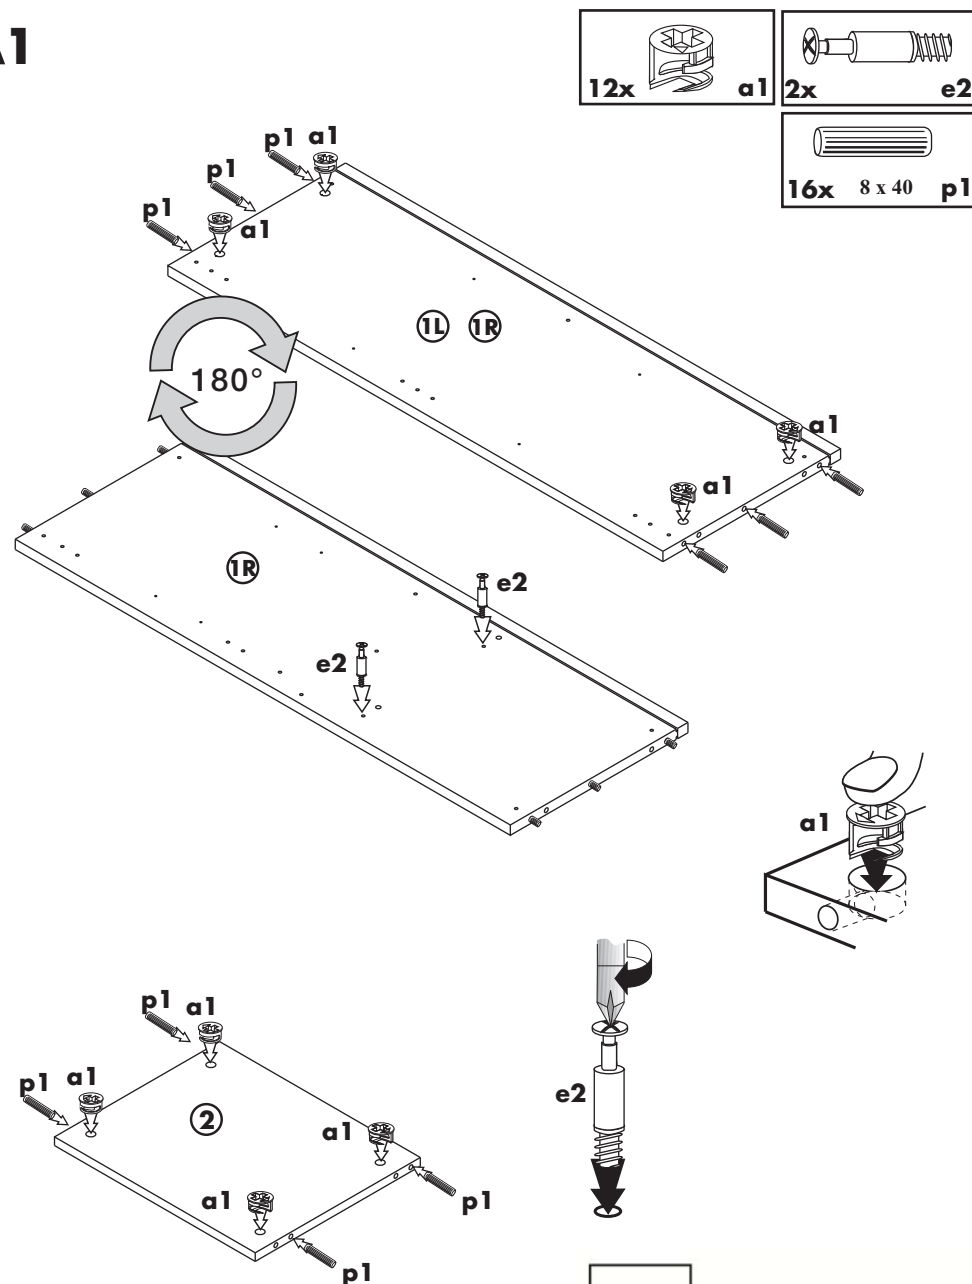



A2

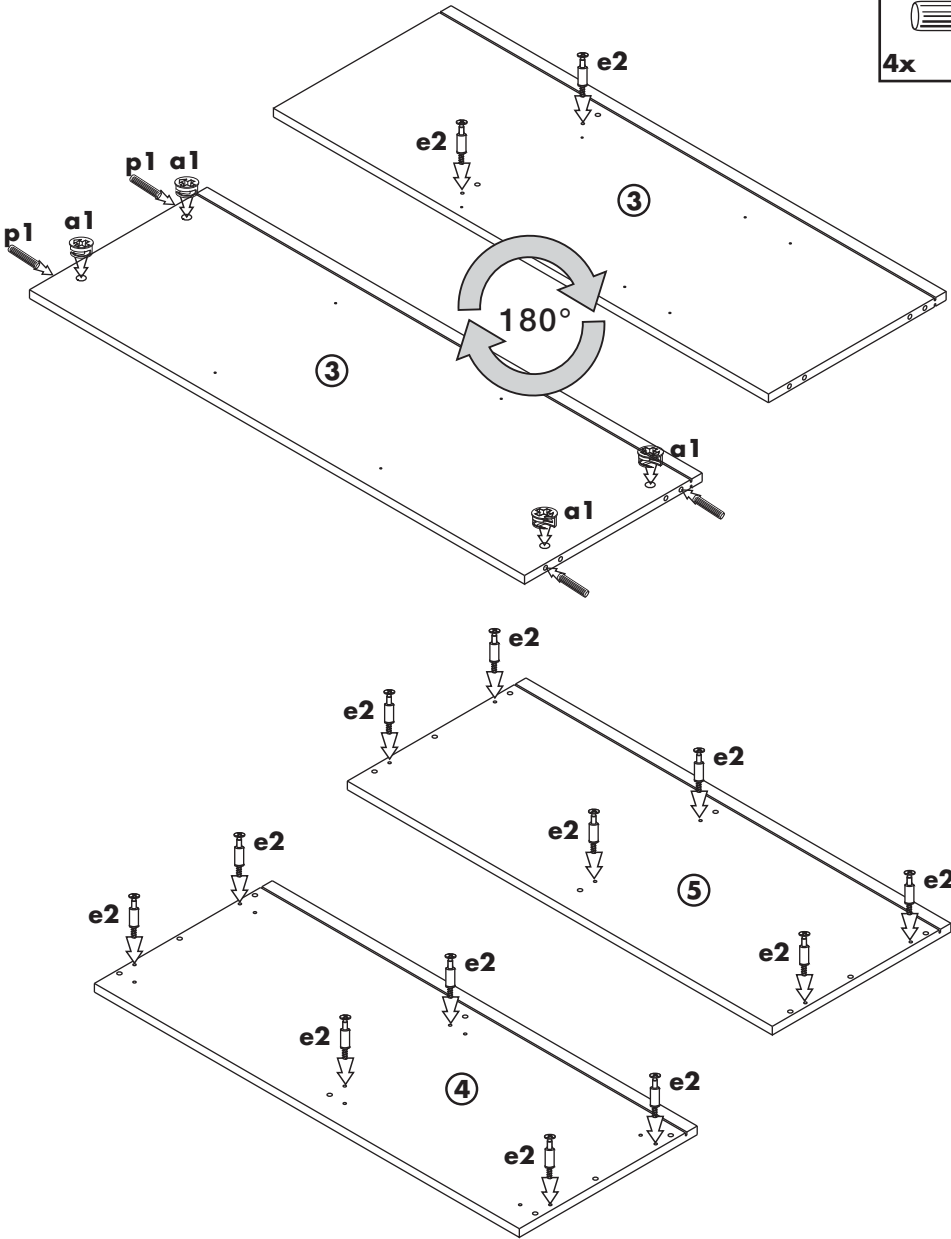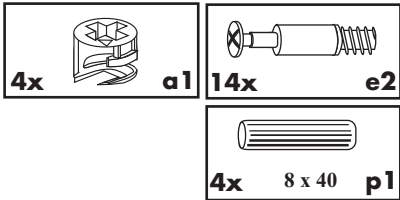


B

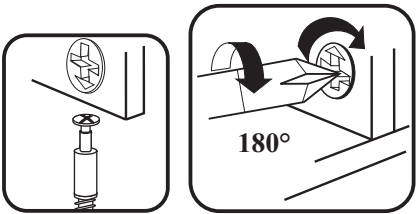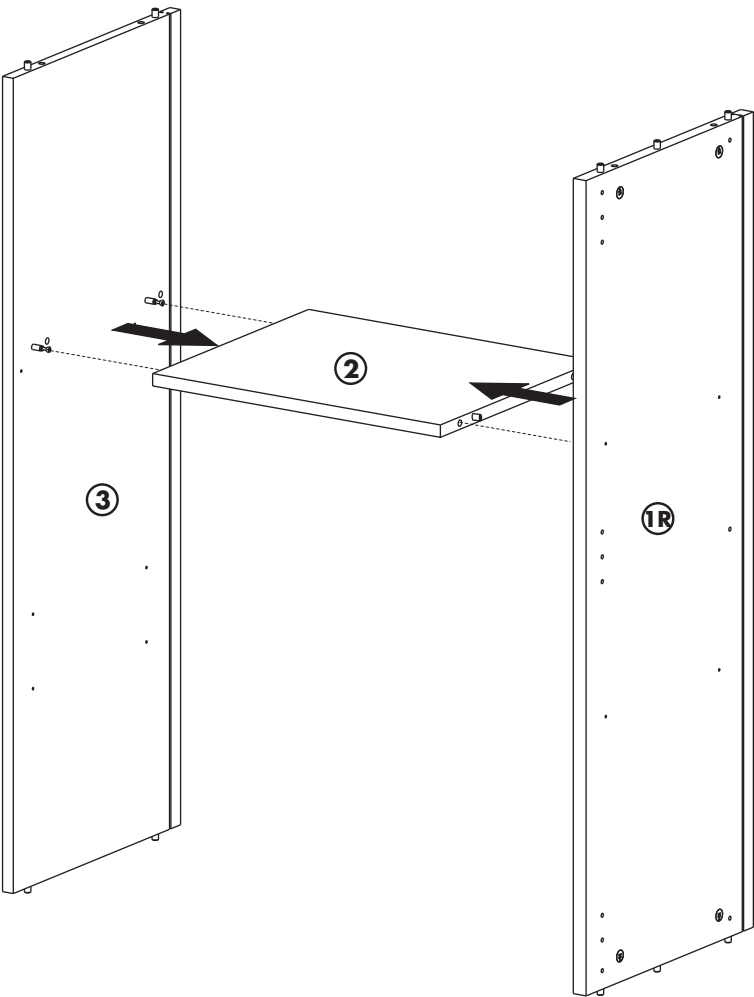

C

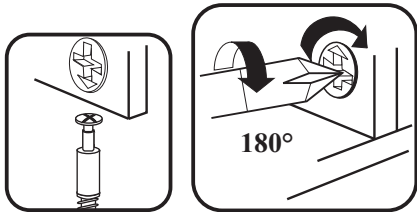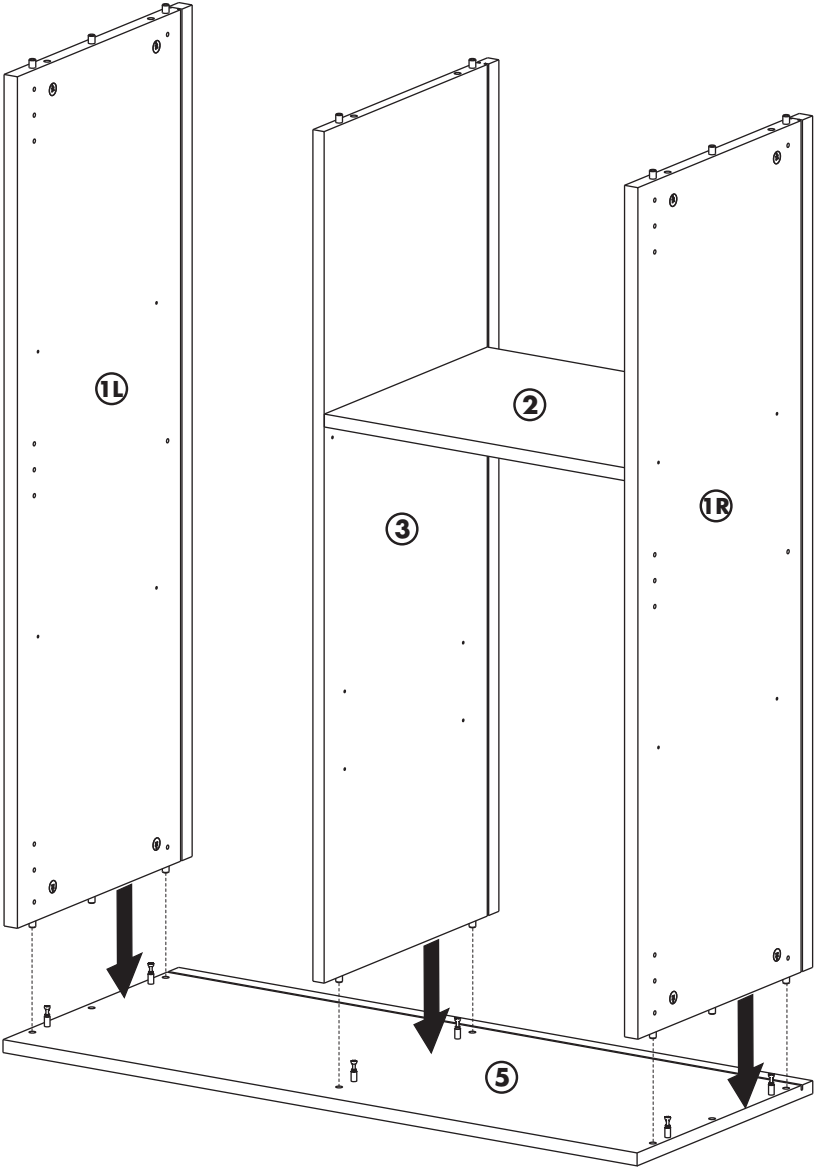

D

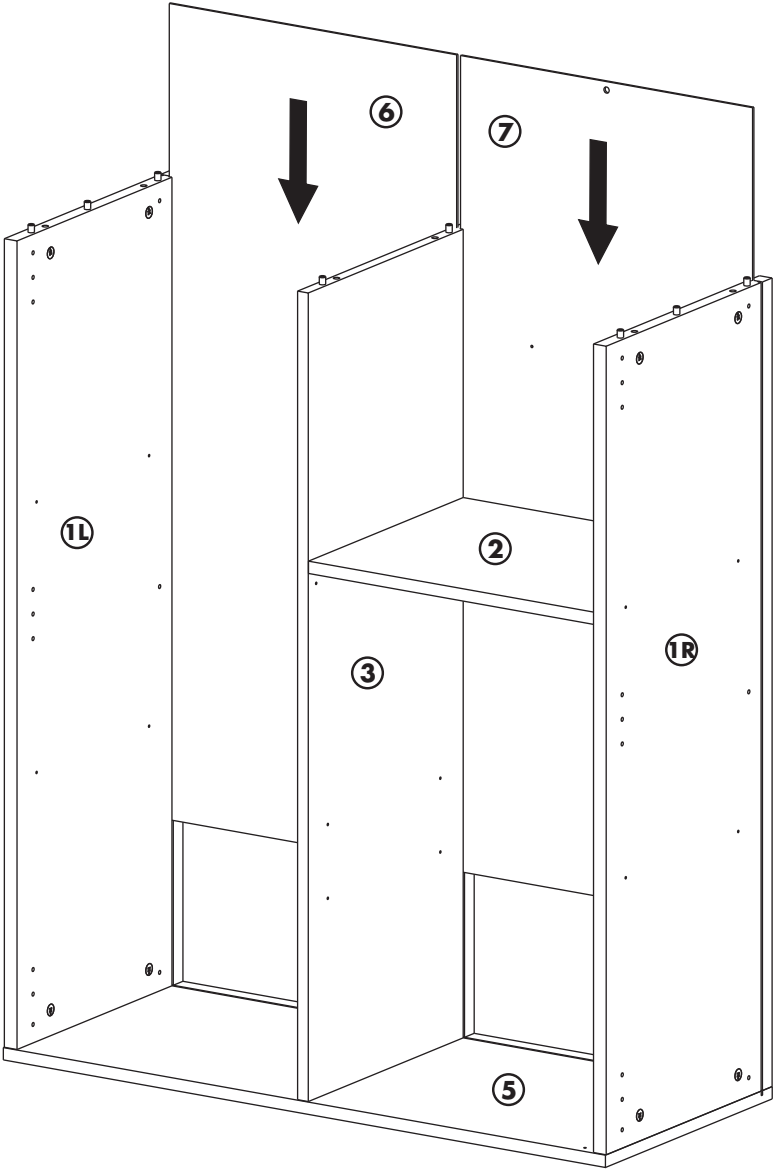

Type 670-108



Type 670-108






G



6x 4 x 25 S47



5x fo



5x fu

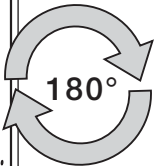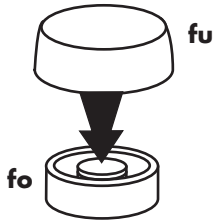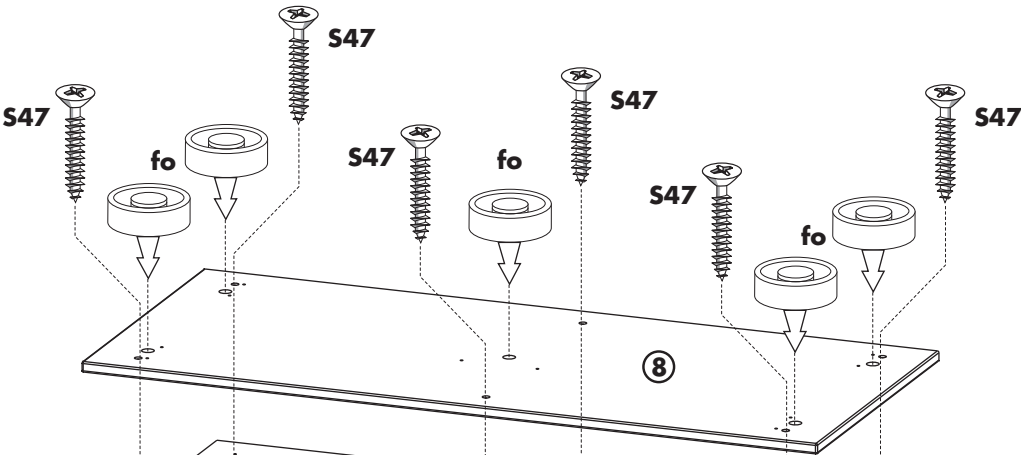


H





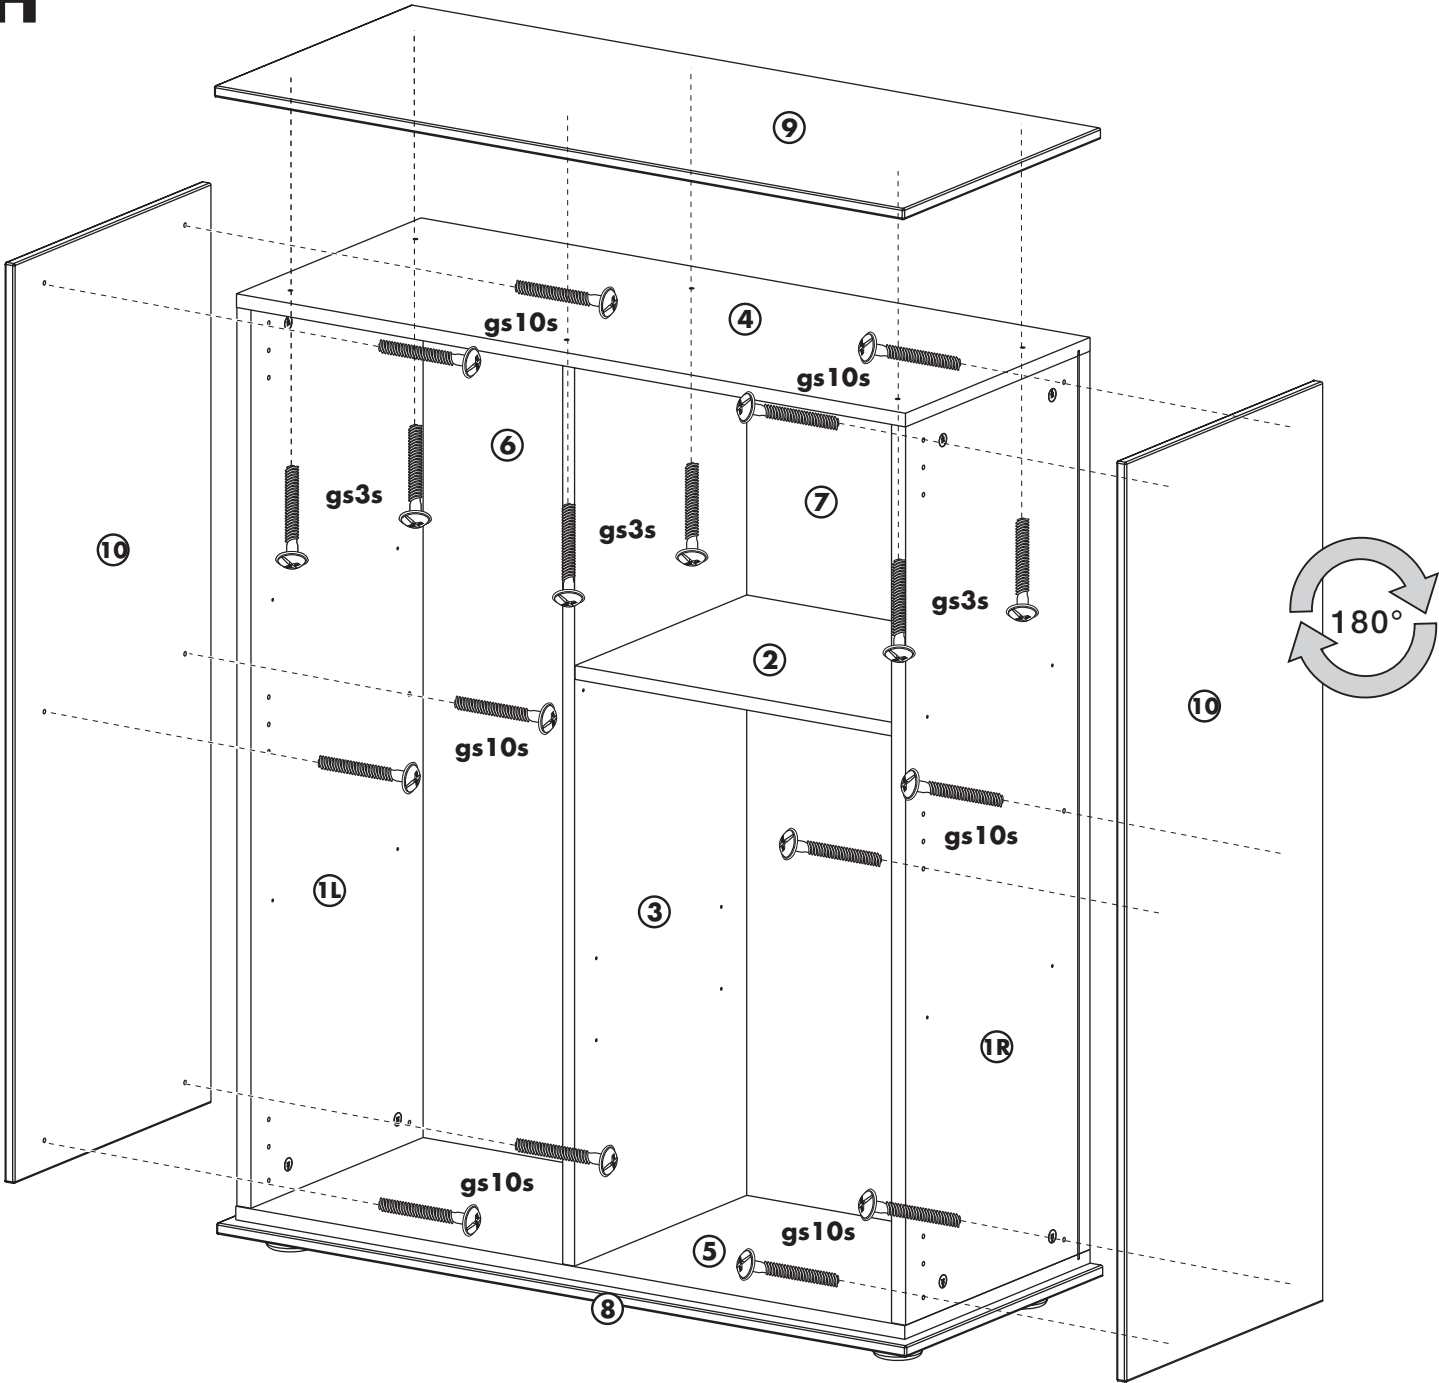



 4x 4 x 25 S47	 12x M4 x 26 gs10s
 6x M4 x 23 gs3s	


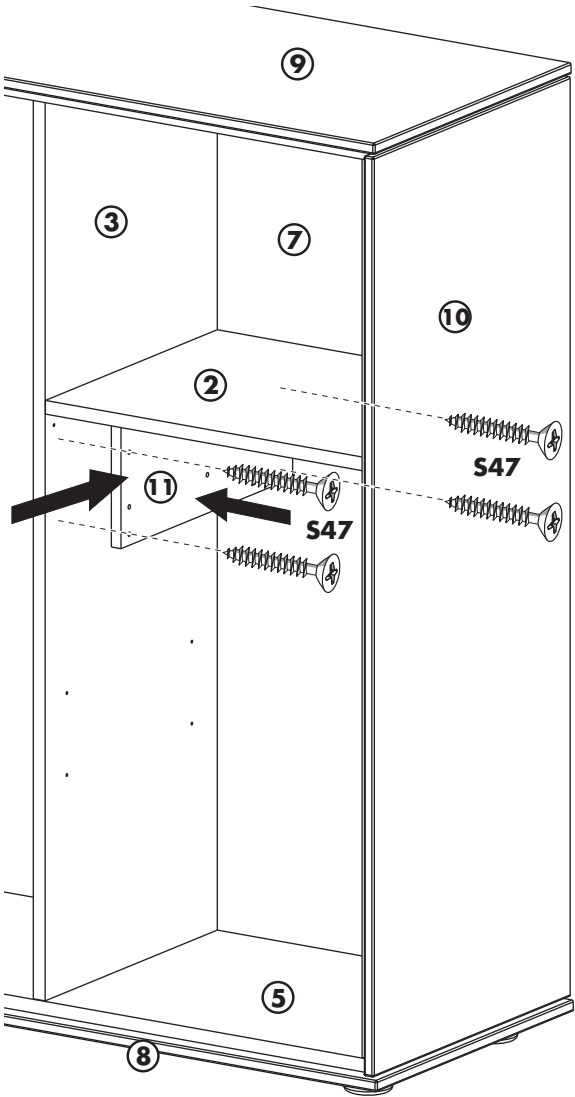


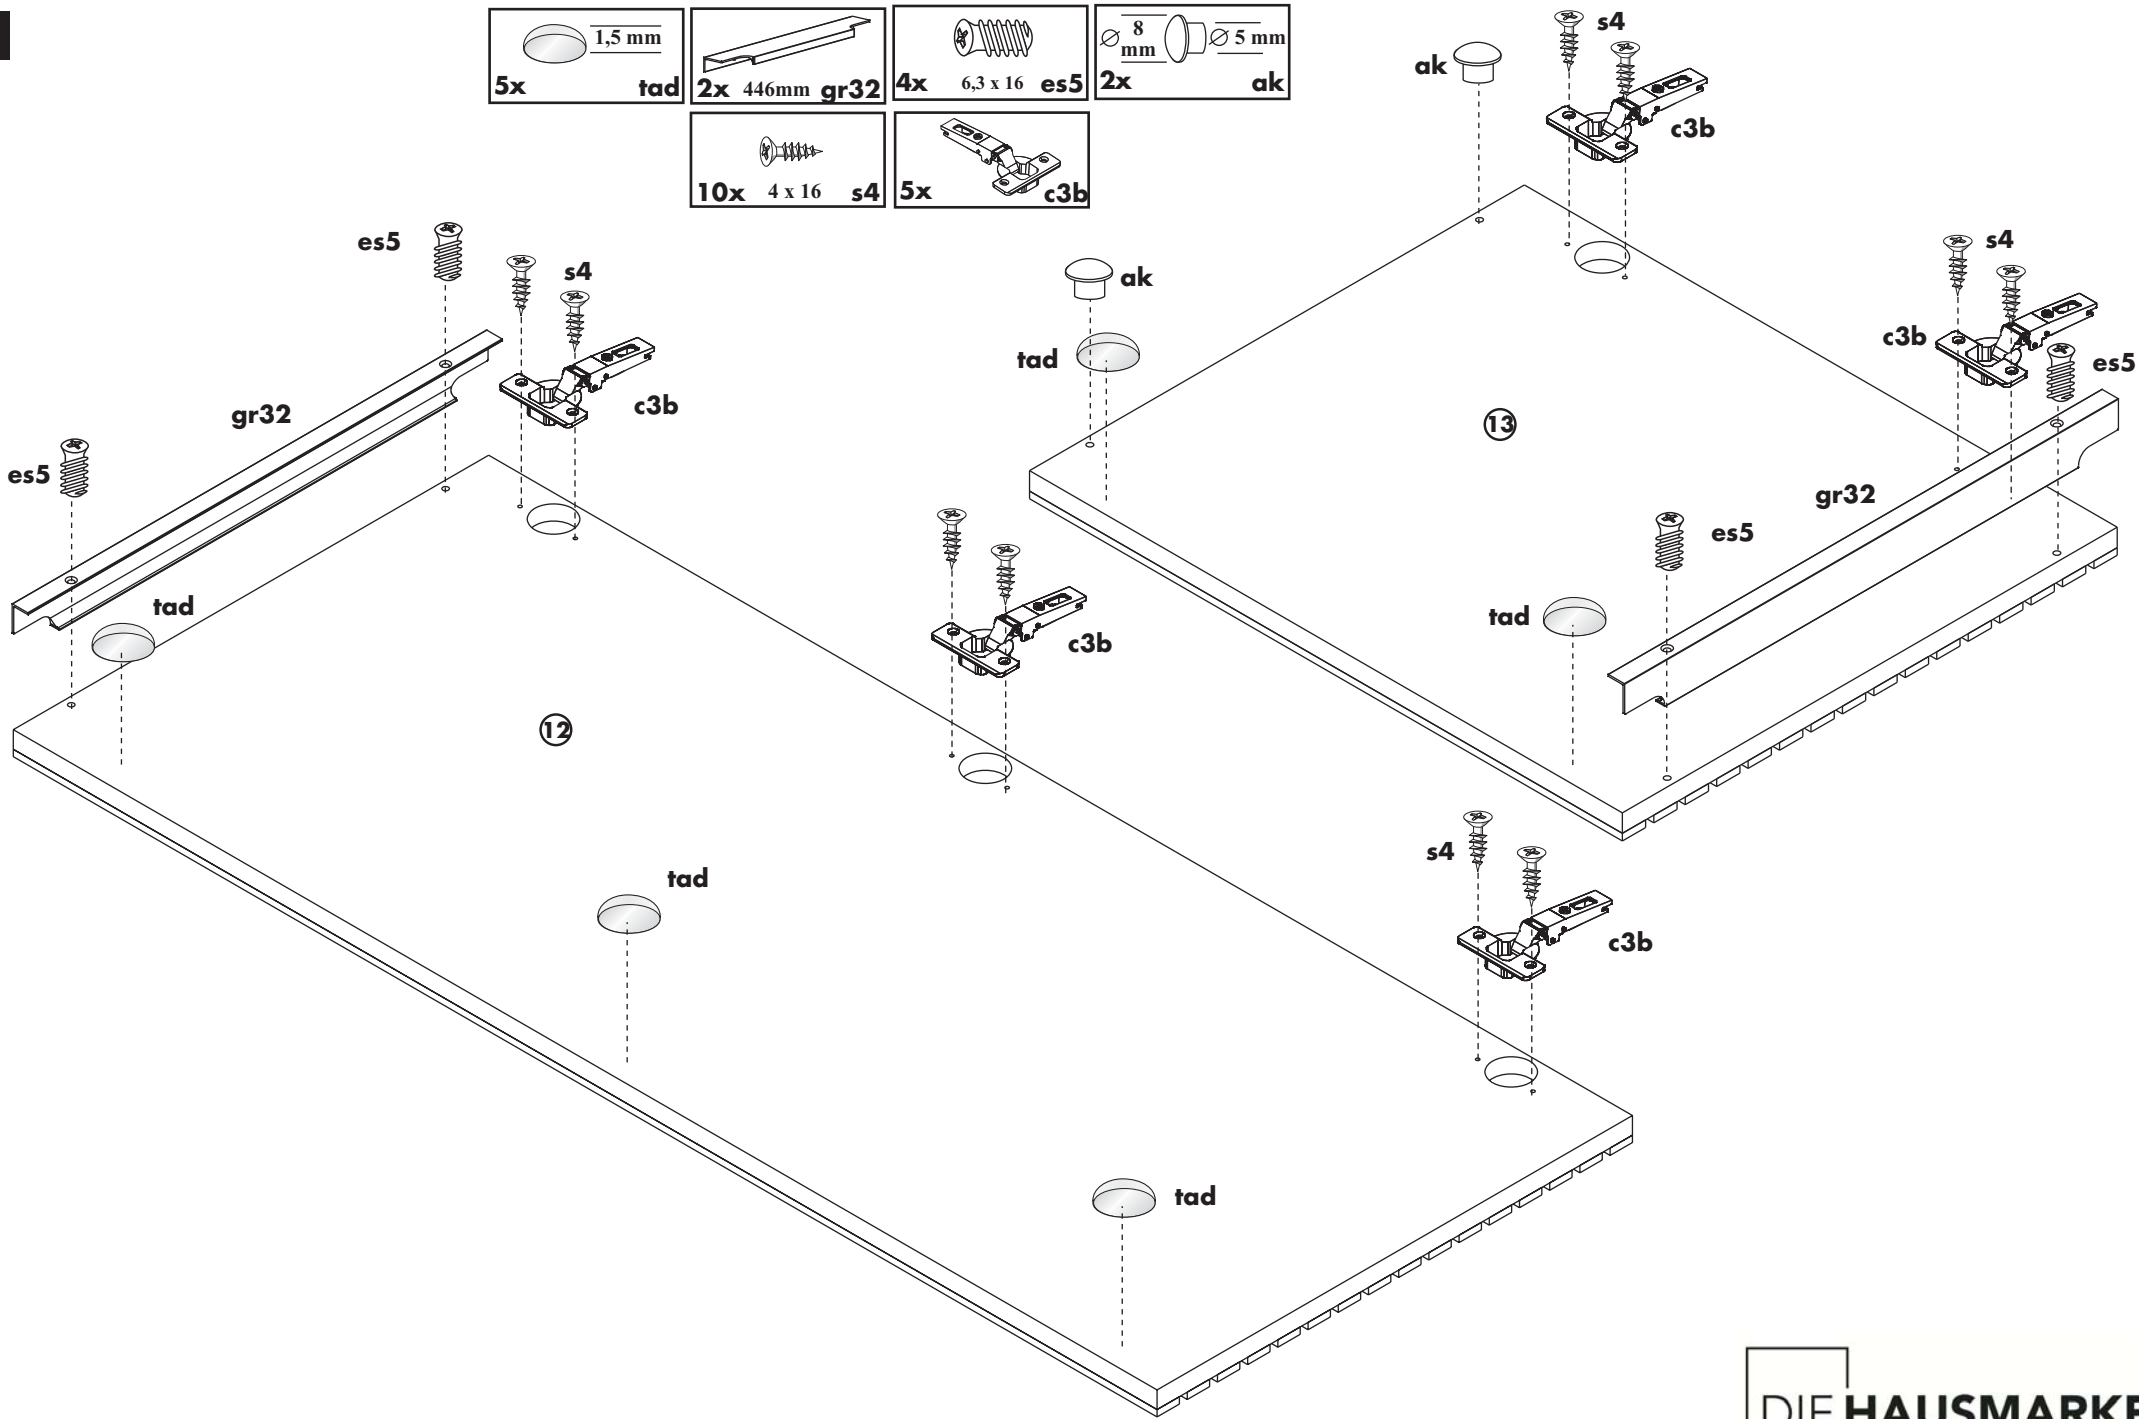



J

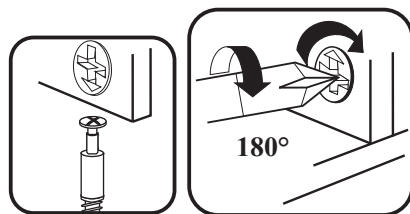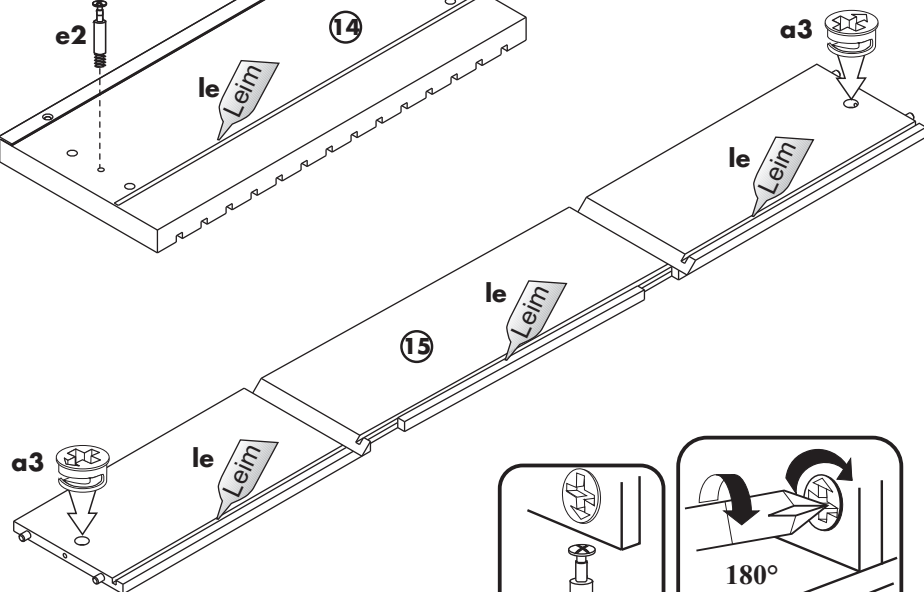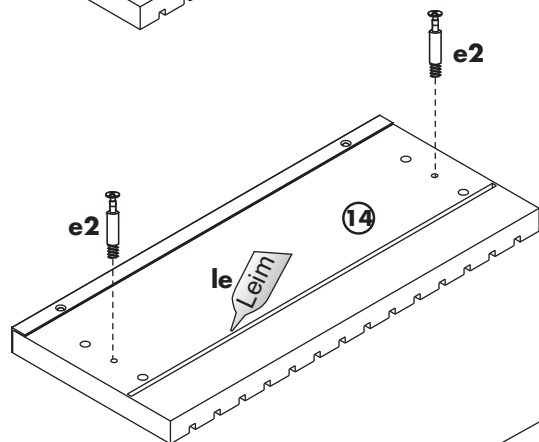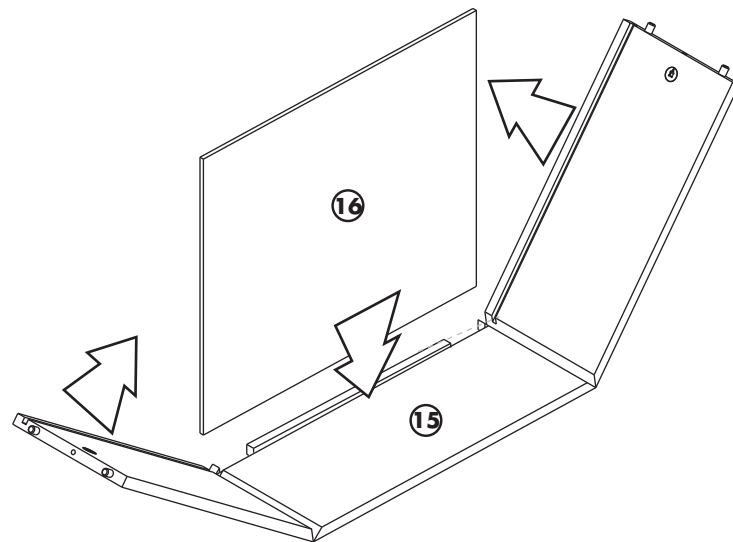
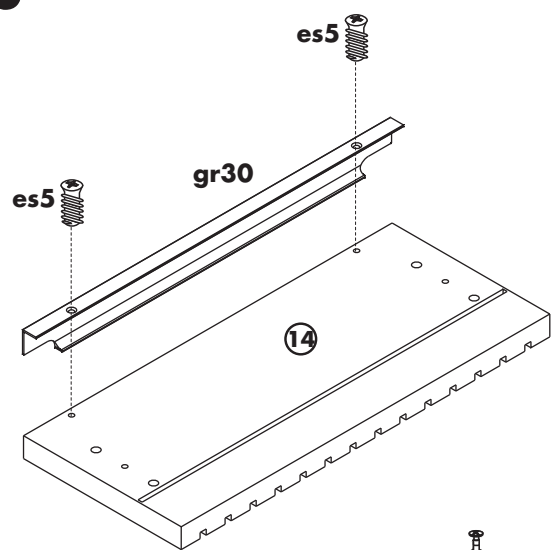



2x  13 mm a3	2x  1,5 mm tad	2x  6,3 x 16 es5
1x  le	2x  e2	1x 446mm  gr32
2x  Ø15 mm / Ø3 mm ak4		

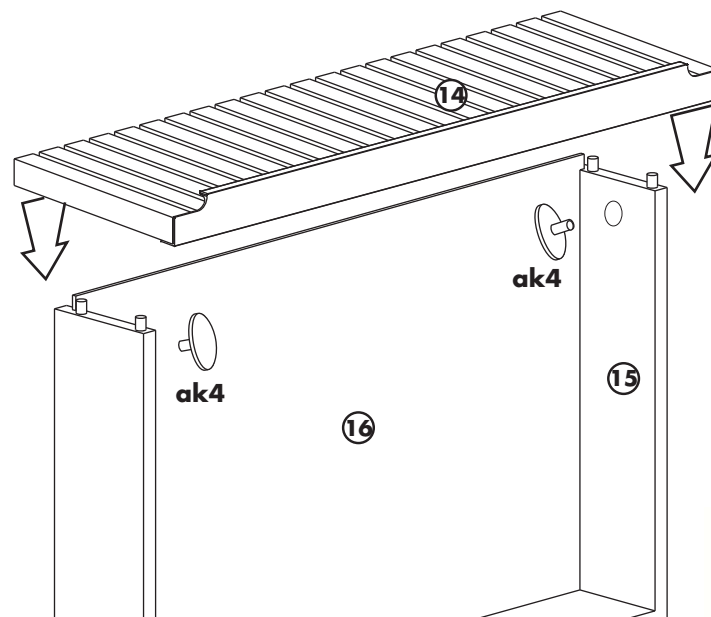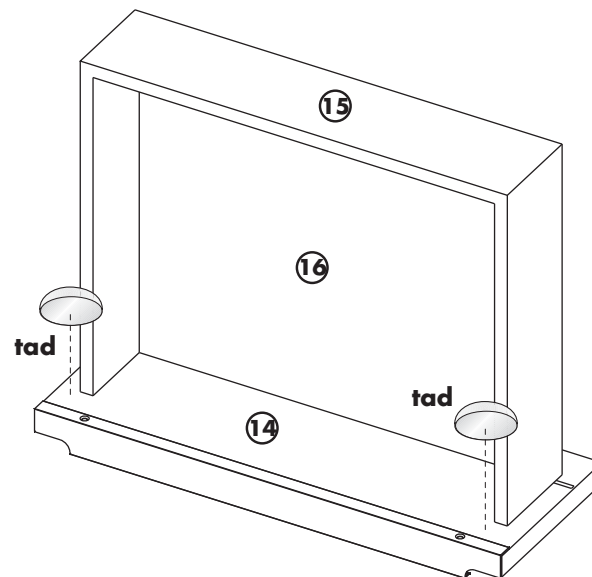


K

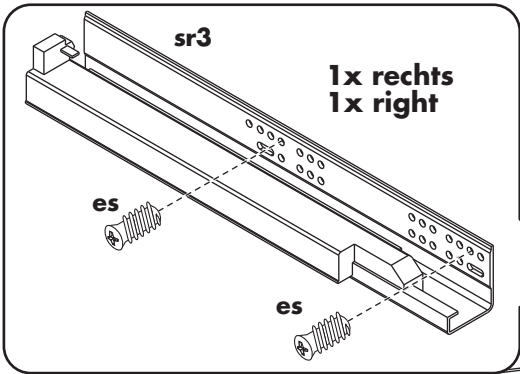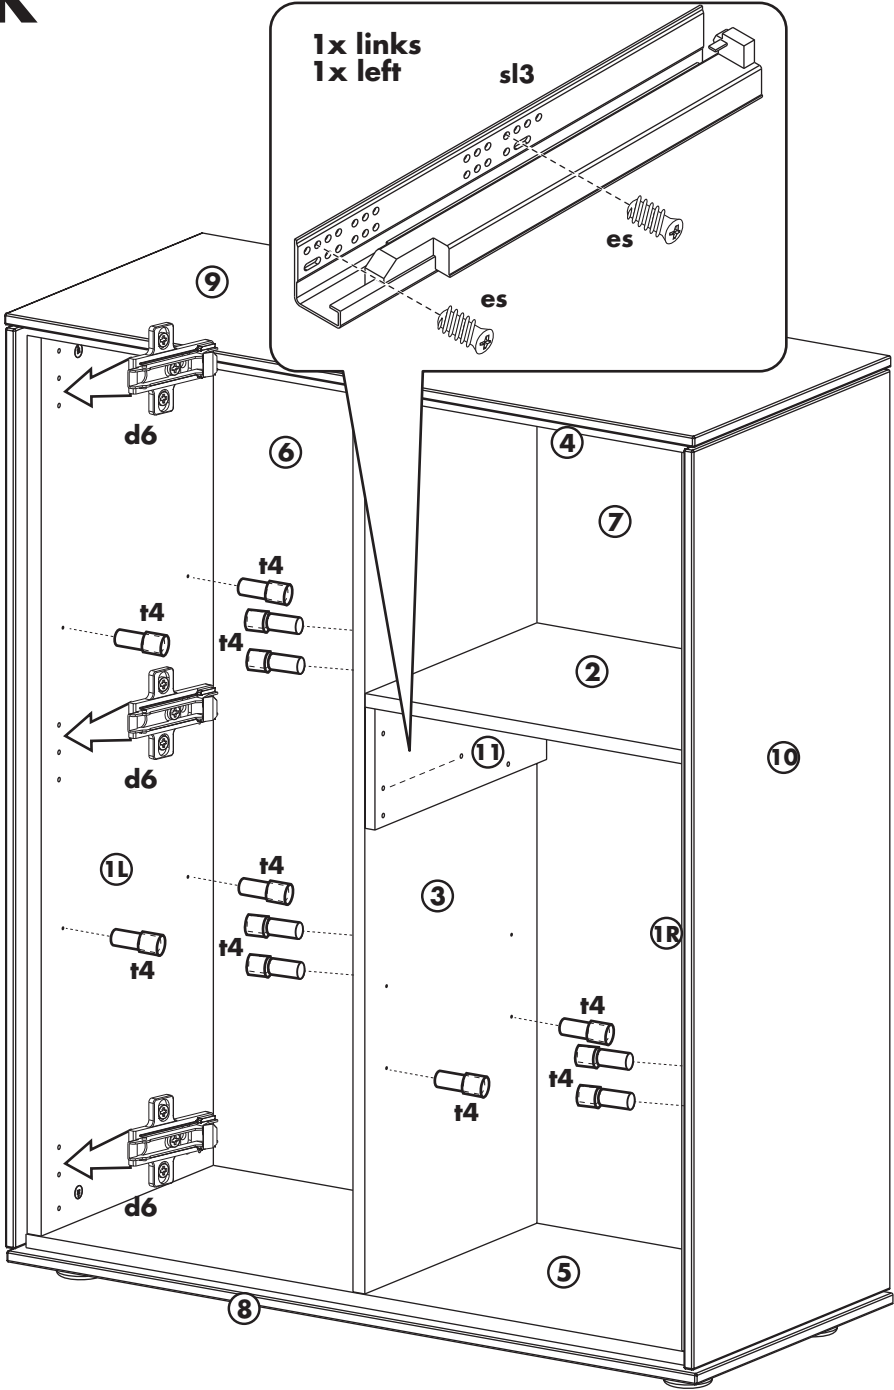


 12x t4	 1x sl3	 1x sr3
 5x D 3mm d6	 4x 6,3 x 11 es	




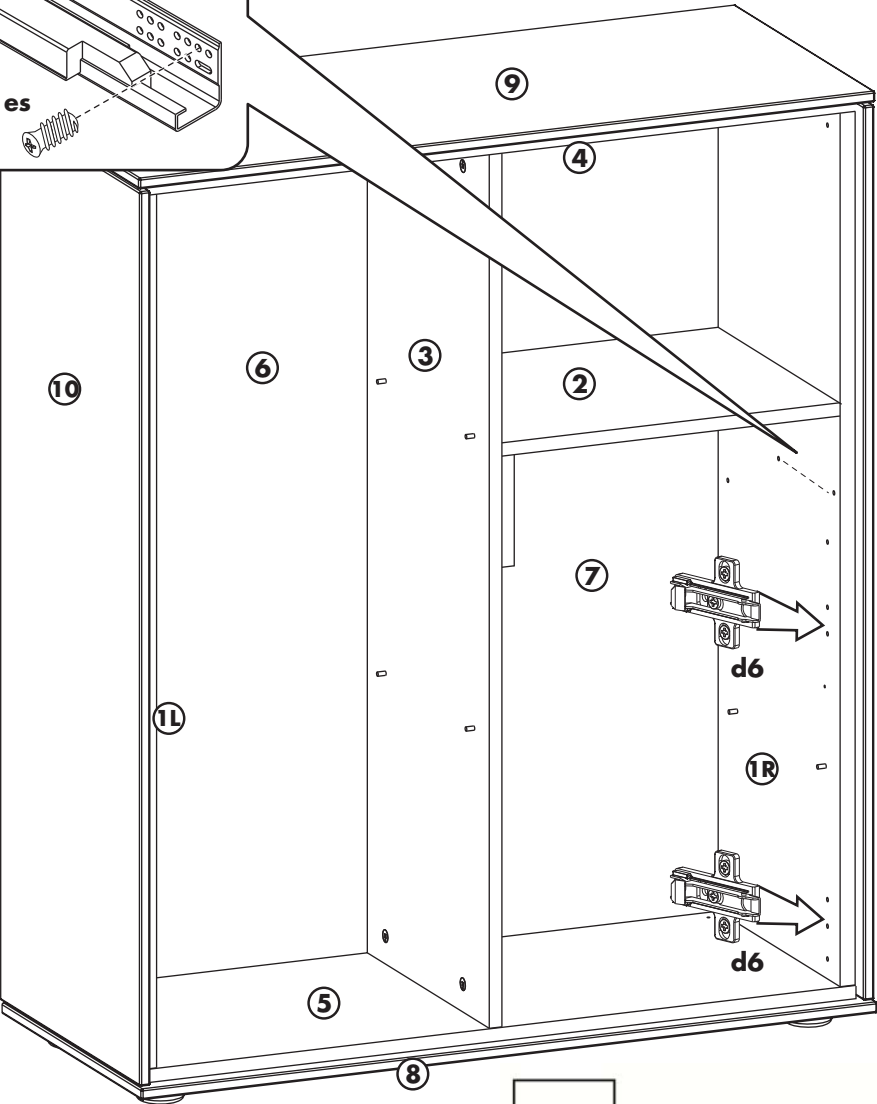


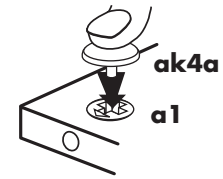






1.

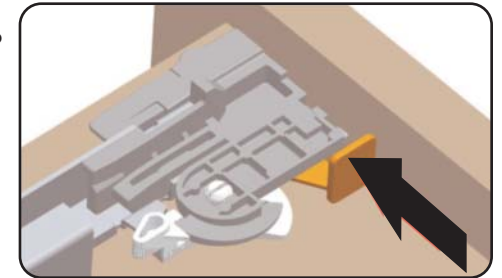

2.

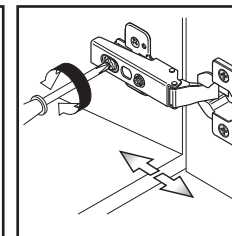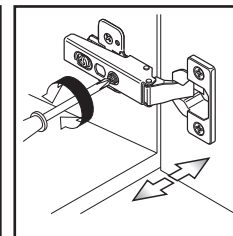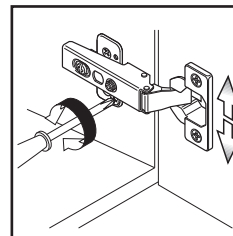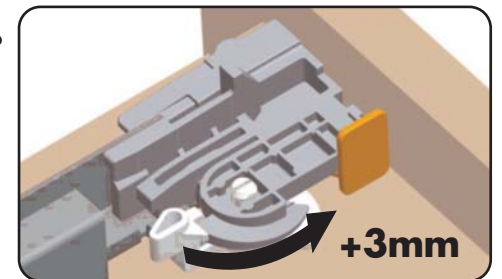

M

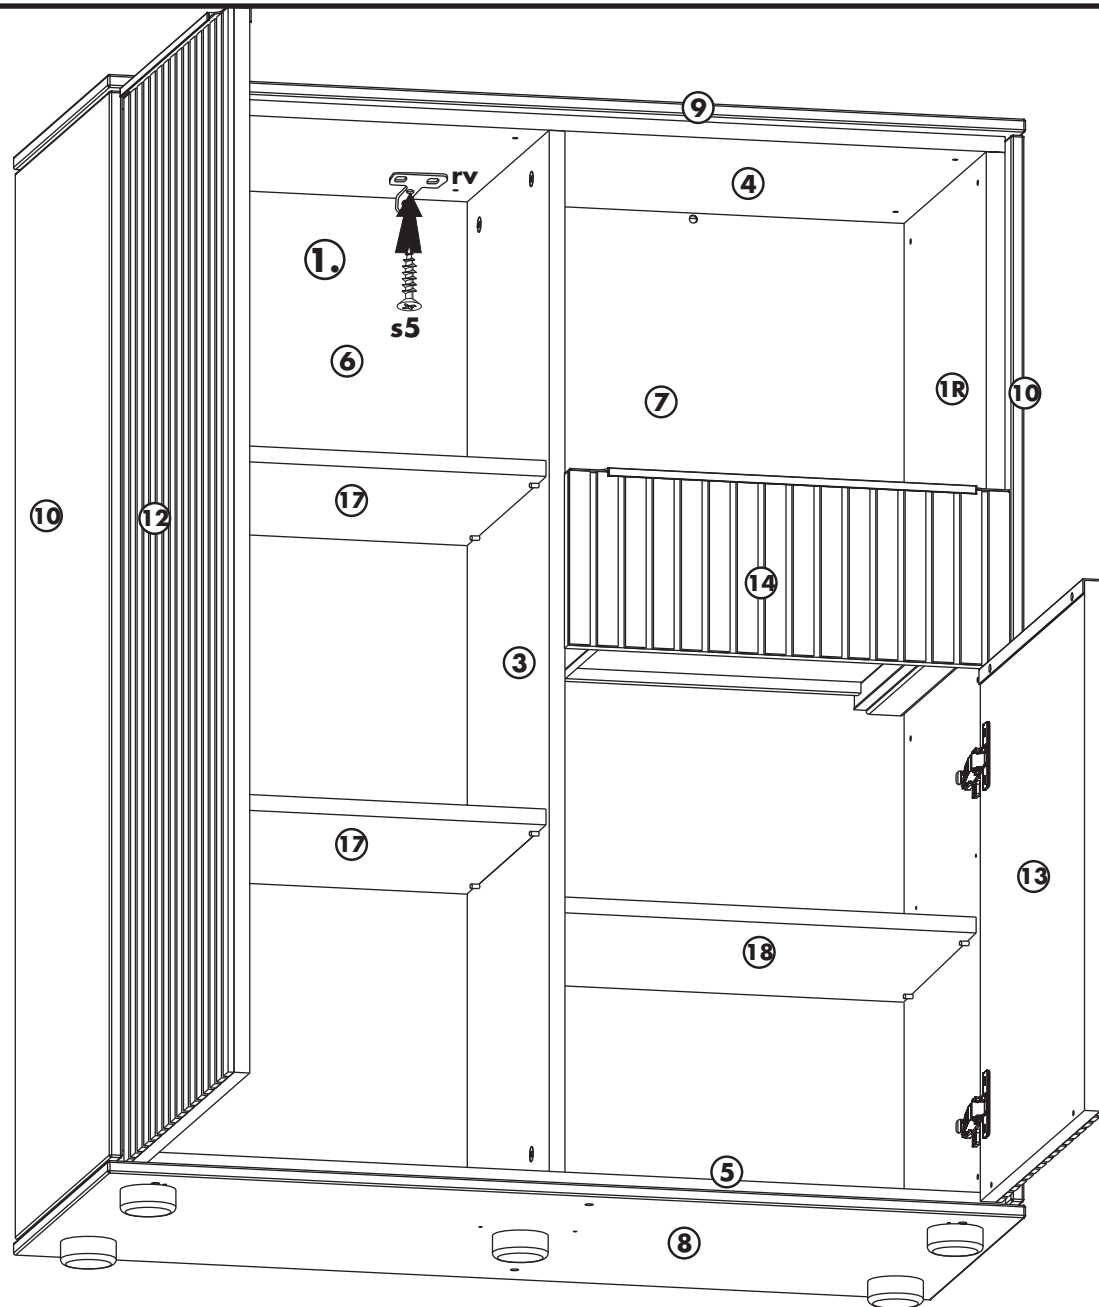

Kippsicherung links und rechts anbringen

Install anti-tip device left and right


1. Winkel anschrauben
Screw on angle

2. Rückwand durchbohren
Drill back wall



3. Wand markieren
mark wall

4. 8mm Loch bohren und Döbel einstecken
Drill 8mm hole and insert dowel

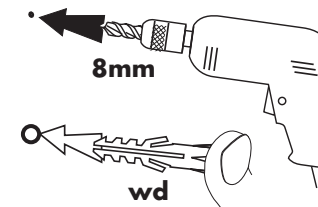

5. Schraube eindrehen
Mount screw

