


MONTAGE SCHRANK CEMBRA 102 - 106

1/4

- 1... Seite Links (AS)
- 2... Seite Rechts (AS)
- 3... Mittelseite (MS)
- 4... Sockel + Kranz Boden 2 (Z2)
- 5... Sockel + Kranz Boden 1 (Z1)
- 6... Rueckwand 2 (R2/1x, R2/2x, R2/3x)
- 7... Rueckwand 1 (T11 / T21)

- 8... Sockel - Blende 2 - Z2
- 9... Sockel - Blende 1 - Z1
- 10... Kranz - K2.....6
- 11... Einlegeboden 2 (Z2)
- 12... Einlegeboden 1 (Z1)
- 13... Türen mitte - T11,T12 / T21,T22
- 14... Türen Ausen R+L - T10

SCHRANK TYP	COLLI
102	1*AS 1*R2 1*Z2 1*K2 1*T10
103	1*AS 1*MS3 1*Z1 1*Z2 1*R2 1*K3 1*T10 1*T11-holz oder 1*T21-glass
104	1*AS 1*MS4 2*Z2 1*R2X2 1*K4 1*T10 1*T12-holz oder 1*T22-glass
105	1*AS 1*MS5 1*Z1 2*Z2 1*R2X2 1*K5 1*T10 1*T11+1*T12-holz oder 1*T21+1*T22-glass
106	1*AS 1*MS6 3*Z2 1*R2X3 1*K6 1*T10 2*T12-holz oder 1*T12+1*T22-glass oder 2*T22-glass

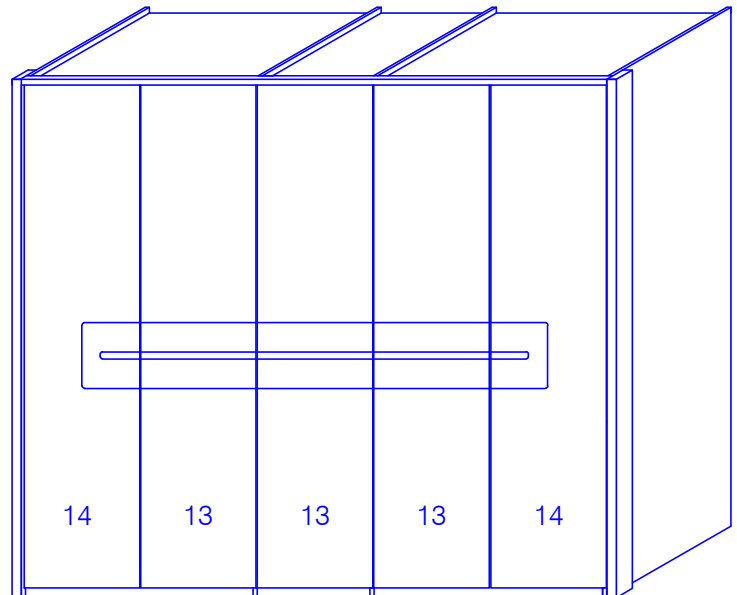

2/4

