


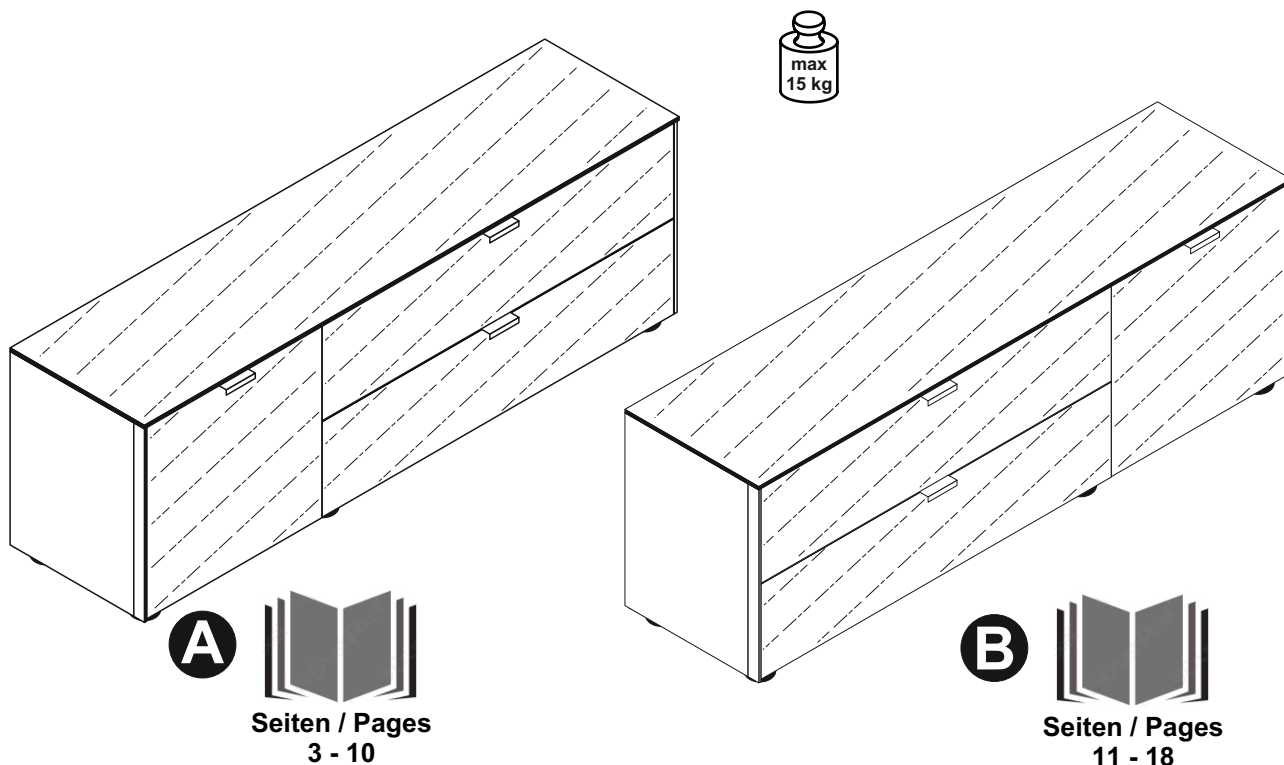

Das Lowboard kann spiegelbildlich montiert werden!

Artikel.-Nr.:

0772-LB_111 GL

Montageanleitung.-Nr.:

MA1-00369

REPC-Nr.:	Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба			



SCAN ME

Beutel 0772-LB_111 GL 0-15 Colli 2/3

B01-10 2x	6,3x50	B01-30 45x	3x16	B01-70 2x	3x30	B01-80 12x	3,5x13	B01-90 4x	3,5x20
B01-122 2x	4x13	B01-200 12x	6,3x13	B02-08 4x	h=10mm	B02-10 18x	h=12mm	B02-20 22x	B02-160 4x

Beutel 0772-LB_111 0-35 Colli 2/3


B03-07 2x		B03-11 5x		B03-42 5x	
--------------	--	--------------	--	--------------	--

Beutel BT1-00001 Colli 2/3

B05-265 1x	
---------------	--

Beutel 0772-LB_111 0-45 Colli 2/3

B02-103	 8x30	B05-01		B05-130	
12x		10x		2x	
B05-260		B05-280		B06-425	
1x		1x		3x	



Beutel 0772-LB_111 0-55 Colli 1/3

B01-36 4x	4x40
--------------	------

Beutel BT1-00005 Colli 2/3

B01-123 12x	4x15	B02-173 6x	
----------------	------	---------------	--

Colli 1/3

1x 636 x 580 Front Tür	1x 1163 x 316 Front Schubk.-blende	1x 1111 x 146 Z01-99-1111	1x Z01-200R	1x Z07-27	1x 1100 x 25 Z17-96
		1x 350 x 160 Z01-105-350	1x 350 x 160 Z01-106-350	1x Z01-200L	1x Z01-72
					1x 1163 x 316 Front Klappe






Colli 2/3

1x 610 x 409 Mittelseite	1x 1151 x 407 Mittelboden	1x 1734 x 409 Boden	2x 640 x 34 Z99-00465	1x 640 x 409 Seite links	1x 640 x 409 Seite rechts
--------------------------------	---------------------------------	---------------------------	-----------------------------	--------------------------------	---------------------------------




2x 630 x 291 HTR-00328	1x 1163 x 309 HTR-00324	2x 500 x 50 Z02-500	1x 568 x 397 Einlegeboden
	1x 1163 x 320 HTR-00325		

Colli 3/3

1x 1768 x 445 Z16-4-1632

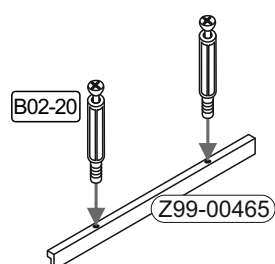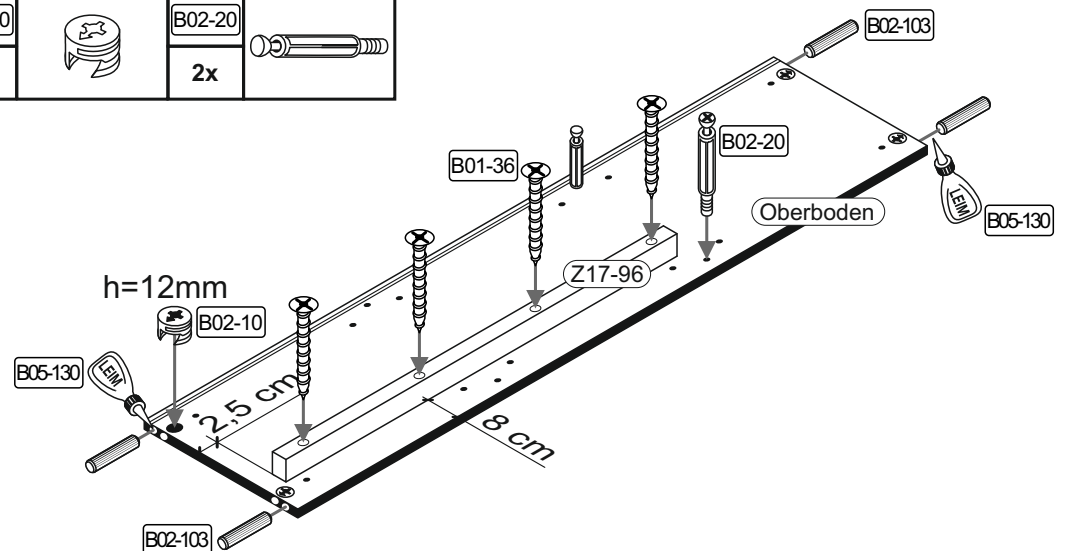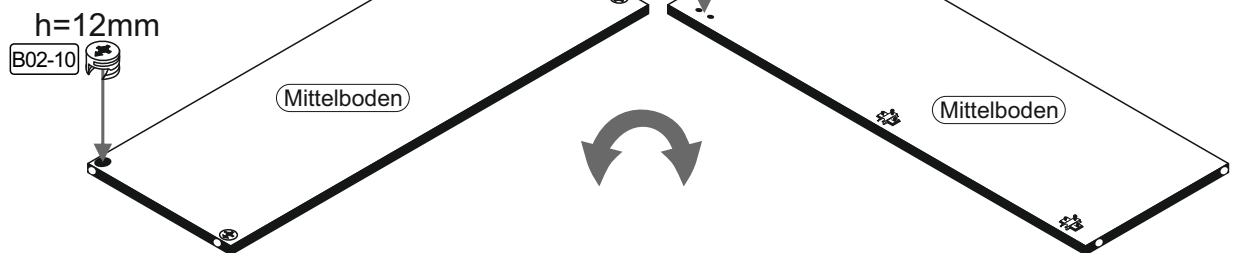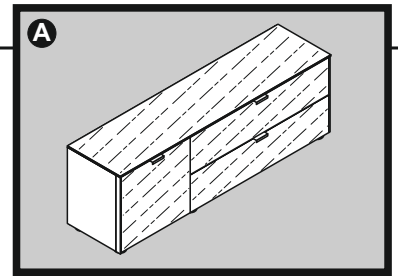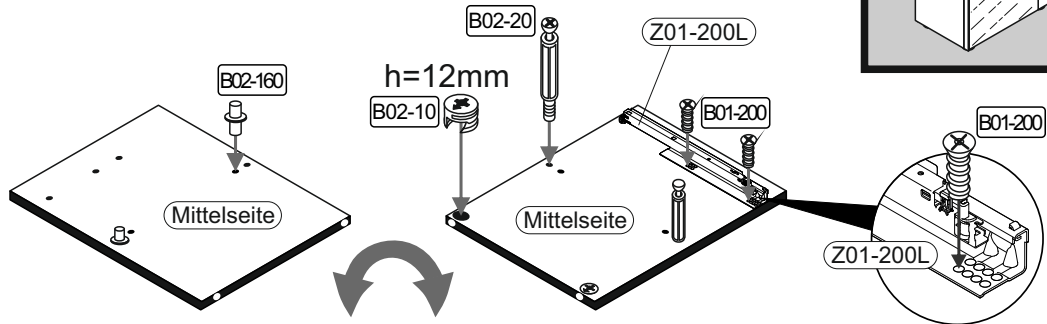


CHICAGO

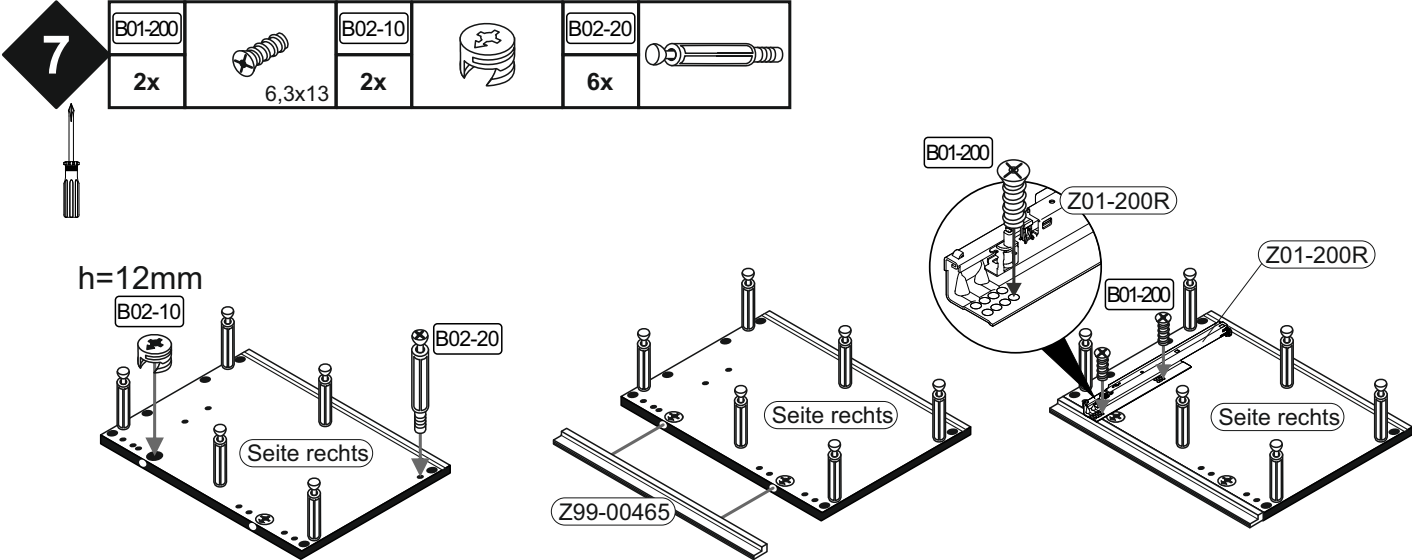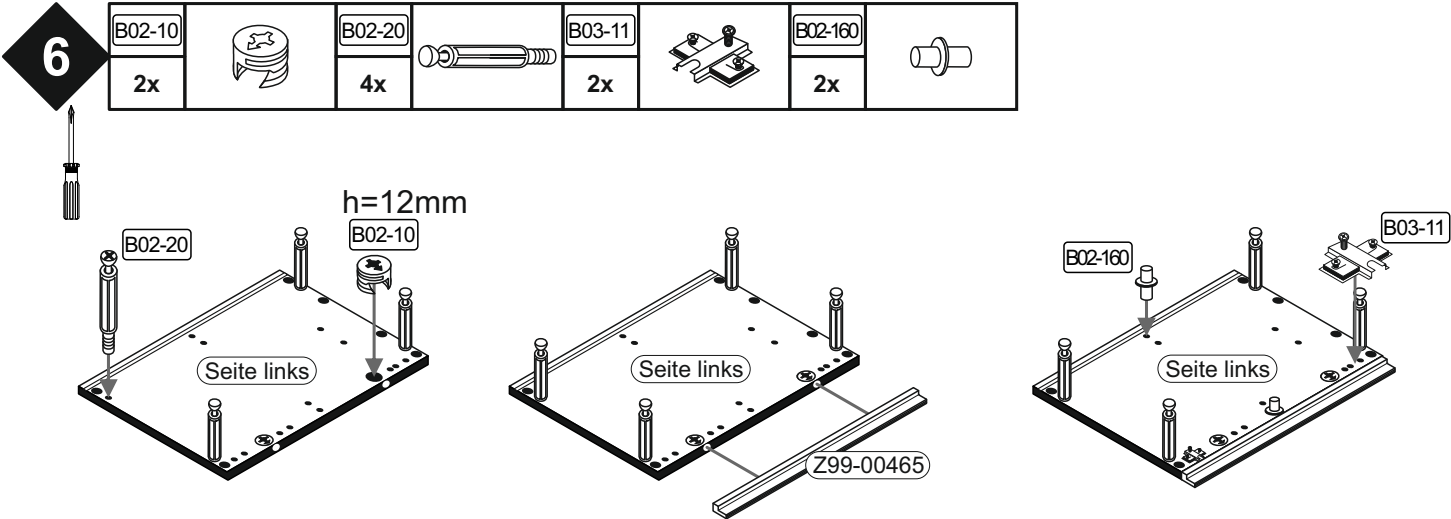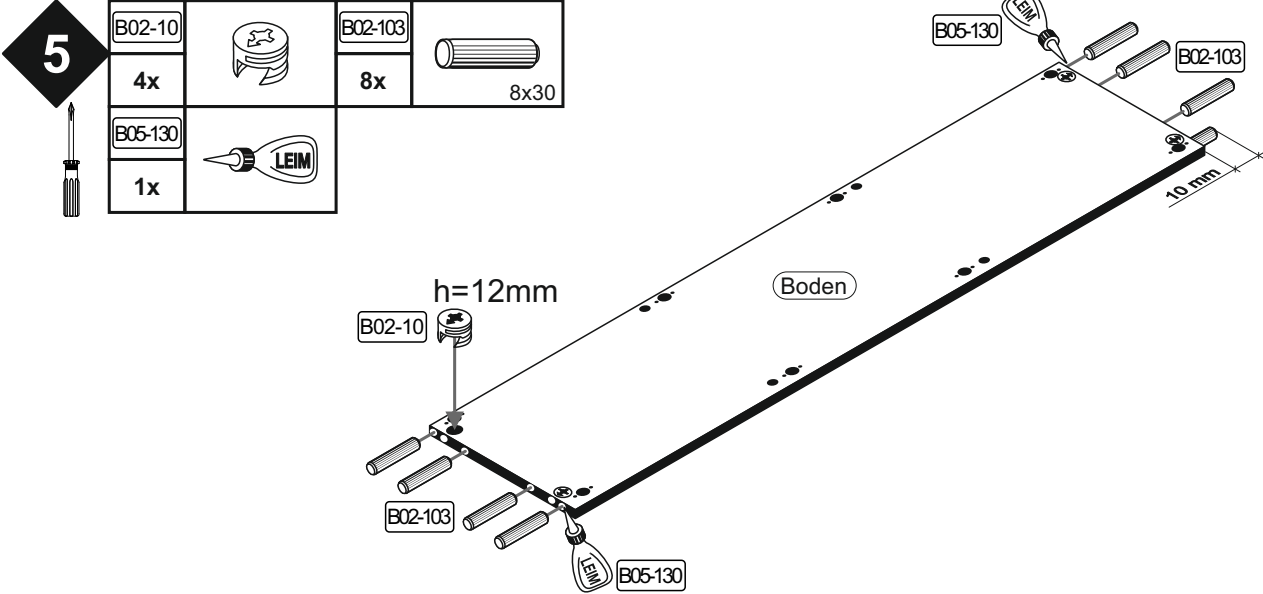




8

B01-80		B03-42	
4x	3,5x13	2x	8er

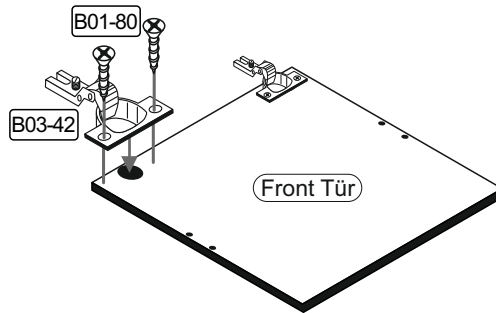







9

B01-200		B02-08		B02-20		B06-425	
2x	6,3x13	4x		4x		1x	

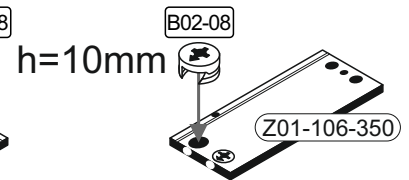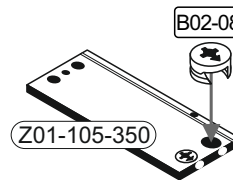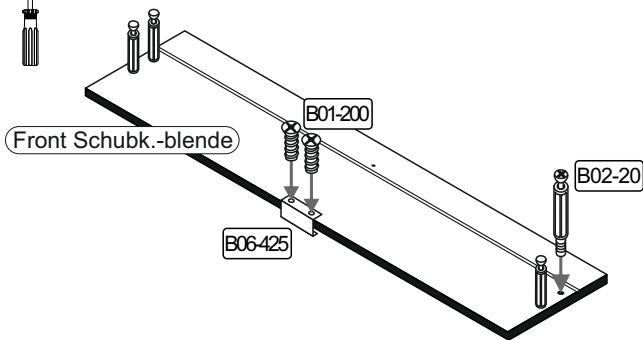

10


B01-30		B01-70	
13x	3x16	2x	3x30
B01-122			
2x	4x13		

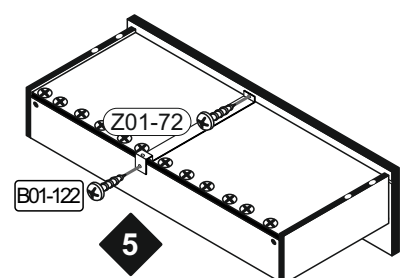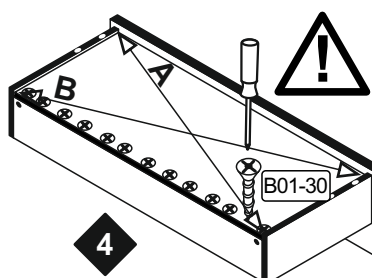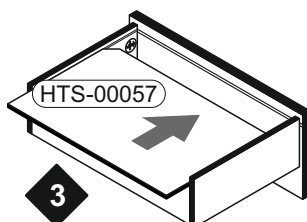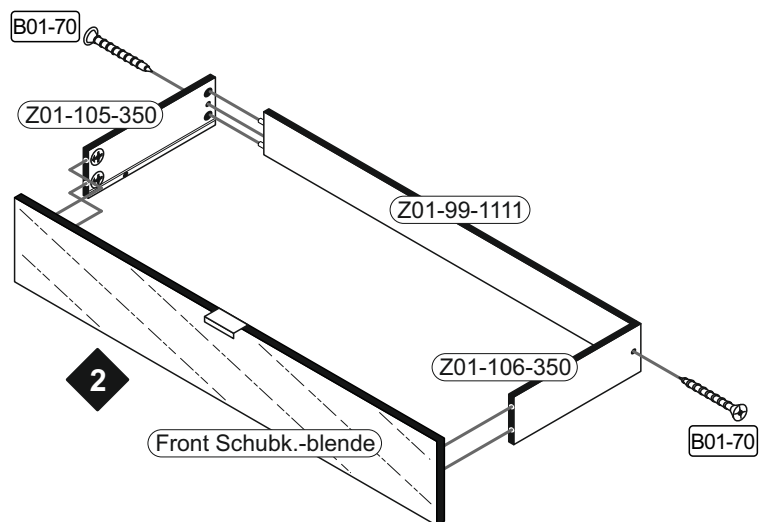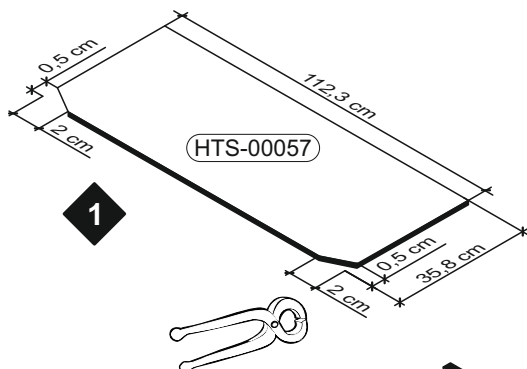

CHICAGO


11

B01-80		B01-200	
6x	3,5x13	2x	6,3x13
B03-42		B06-425	
3x	8er	1x	

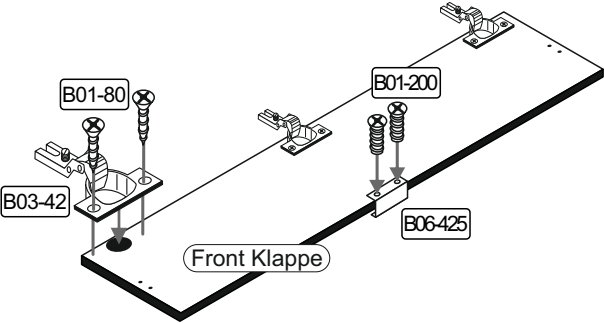




12

B01-10		B05-130	
2x	6,3x50	1x	

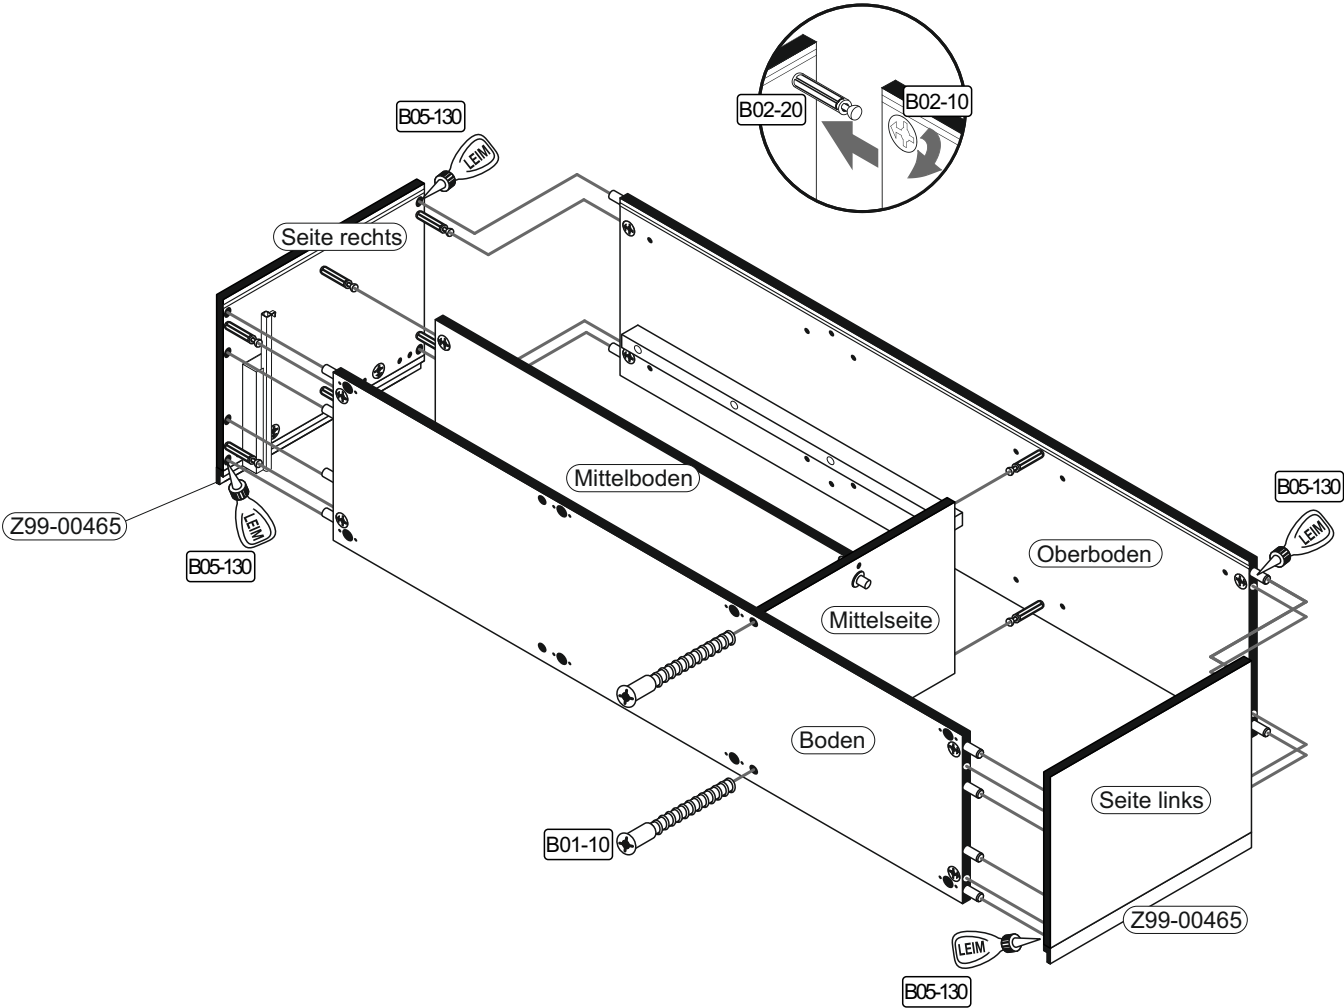


13

B01-30		B01-90	
32x	3x16	4x	3,5x20
B01-123			
12x	4x15		
B05-185			
4x			
B02-173			
6x			

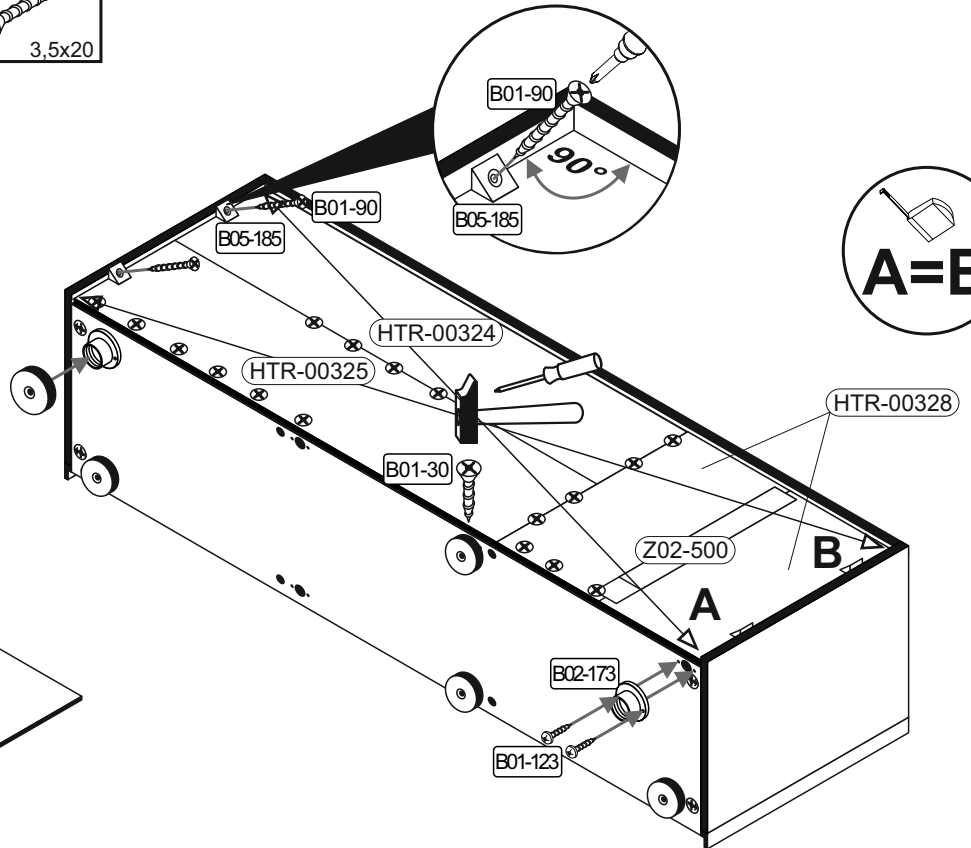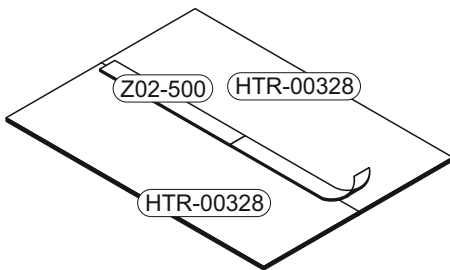


14

B05-01		B05-280	
10x		1x	

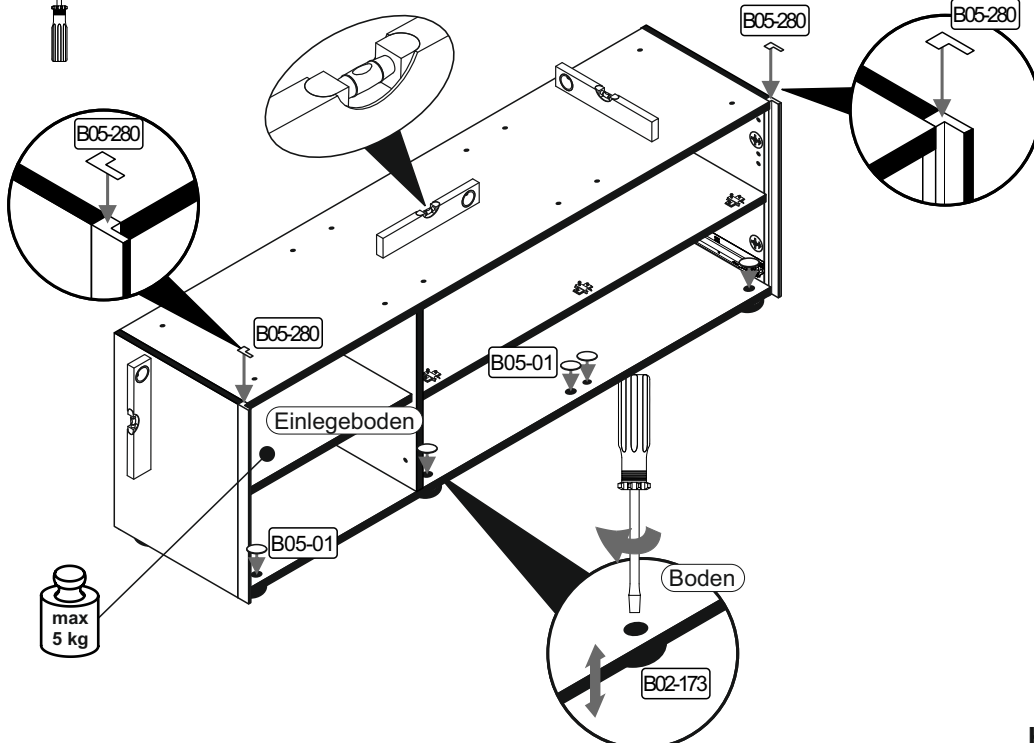


SCAN ME

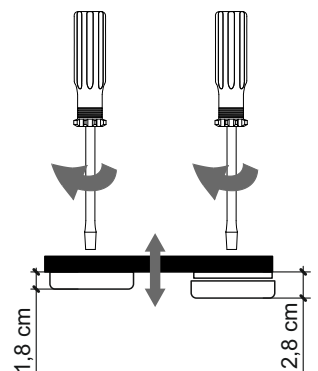


Höhenverstellung der Möbelfüße

15



Einbau des Schubkastens

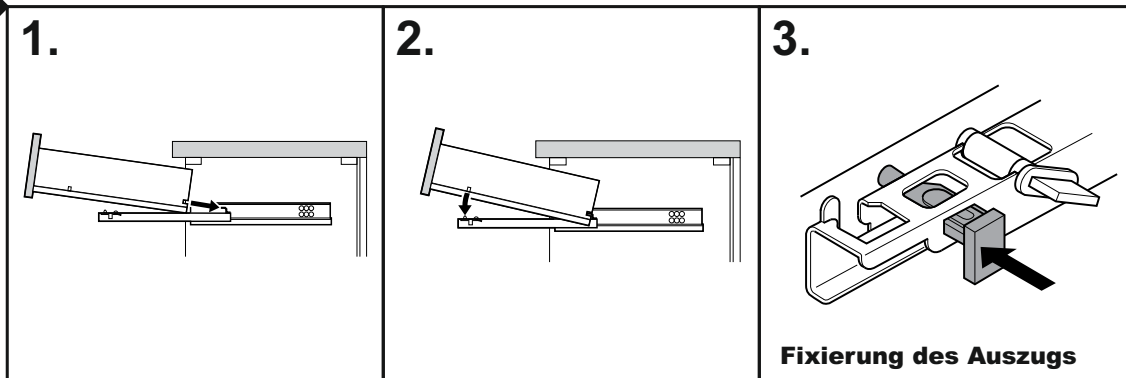



Ausbau des Schubkastens

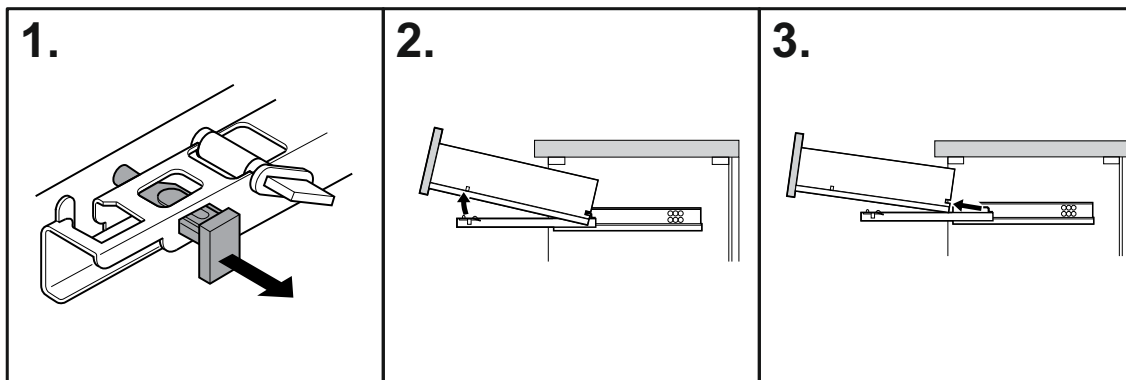


Höhenverstellung des Schubkastens

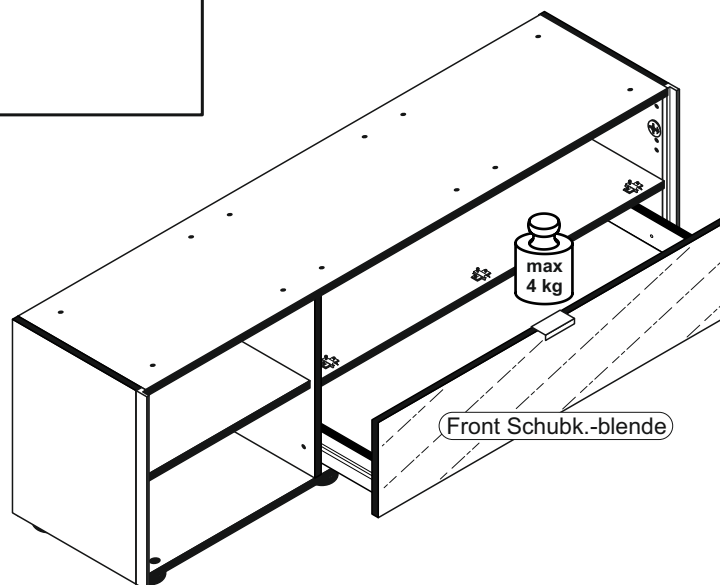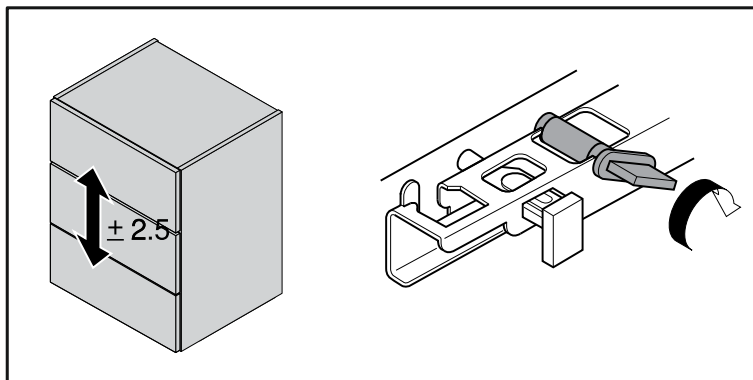


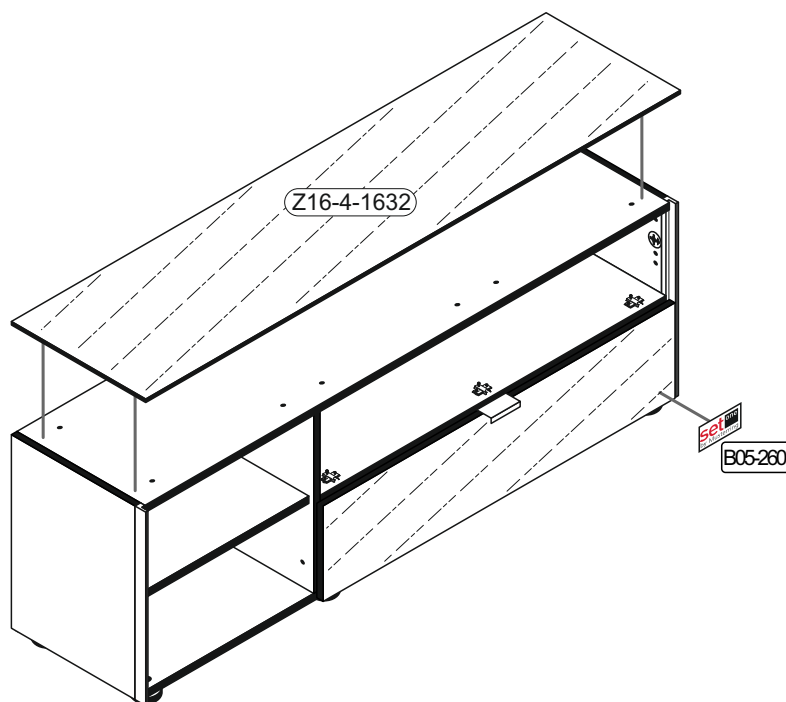


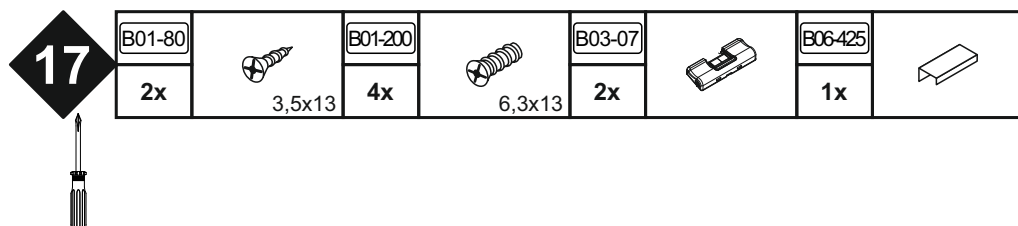


Montage der Türdämpfung

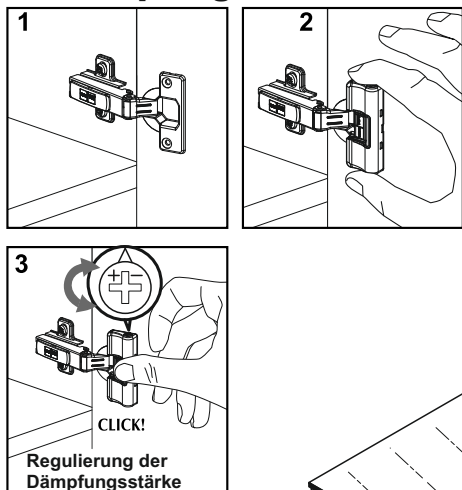


Stütze unten (Z07-27) überdrehen

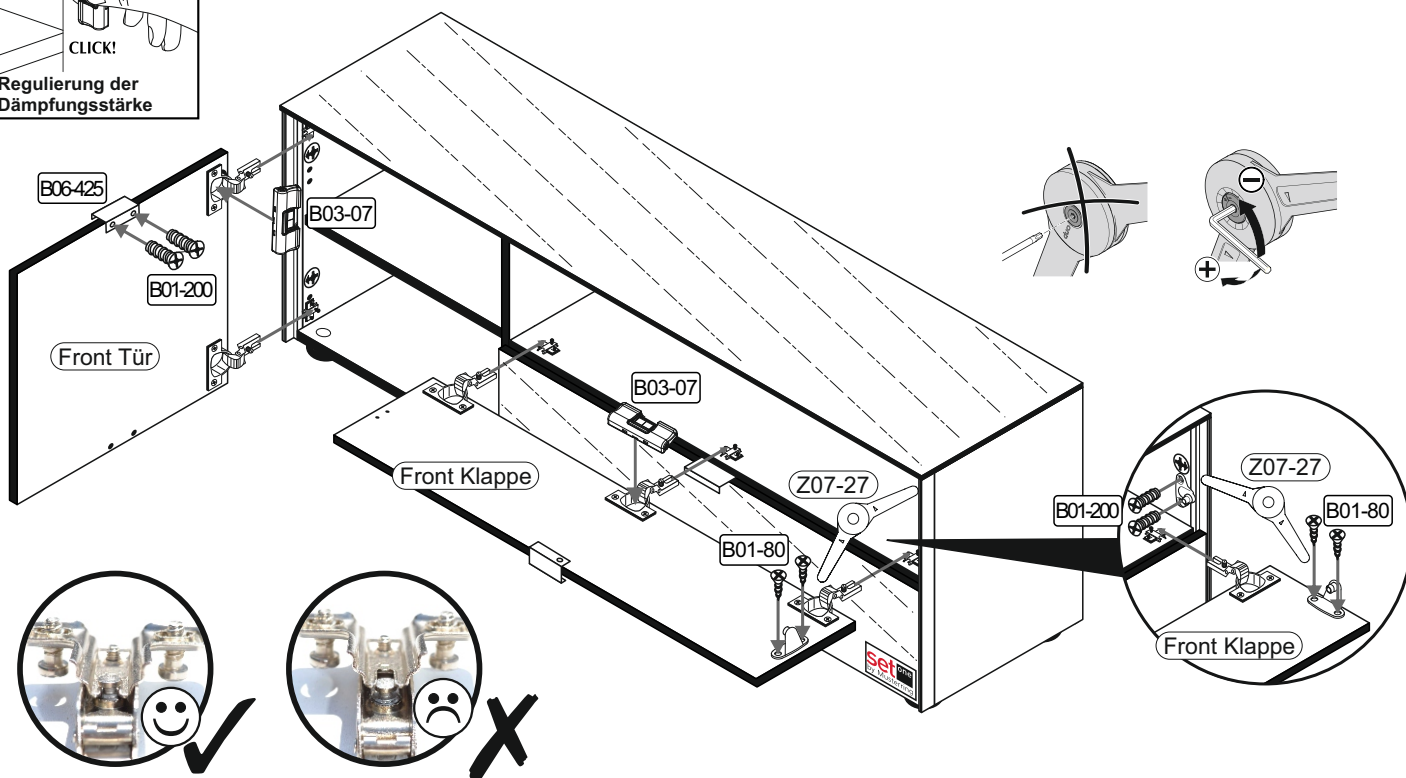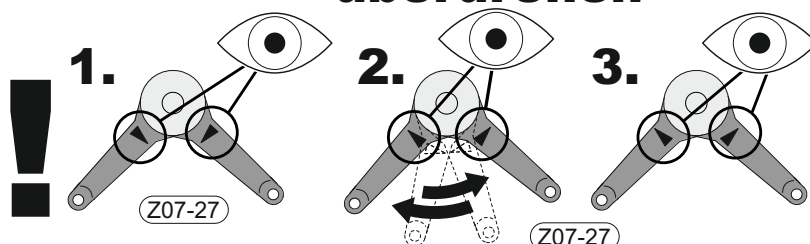


Türen einstellen (Scharniere justieren)
Adjusting the doors (adjusting the hinges)
Régler les portes (ajuster les charnières)
Sistemare le porte (regolare le cerniere)
Deuren instellen (scharnieren afstellen)
Nastawić drzwi (wyregulować zawiasy)
Výrovnejte dvířka (seříd'te závěsy)
Nastavenie dverí (nastavenie závesov)
Állítsa be az ajtókat (állítsa be a zsanérokot)
Reglare usi (ajustare balamale)
Kapıların ayarlanması (menteshelerin seviye ayarı)
Регулировка дверей (регулировка шарнира)

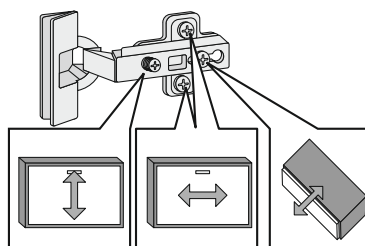


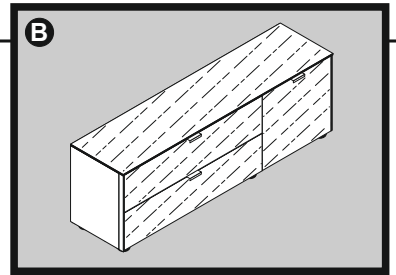


1	B01-200		B02-10		B02-20		B02-160	
	2x	6,3x13	2x		2x		2x	

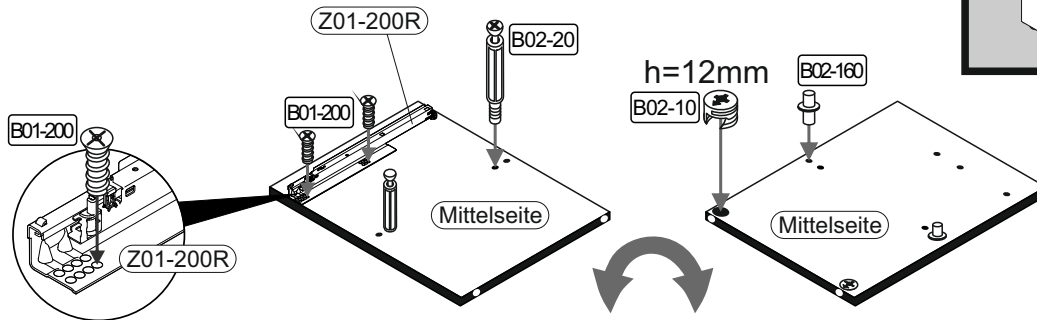


2	B02-10		B03-11	
	4x		3x	

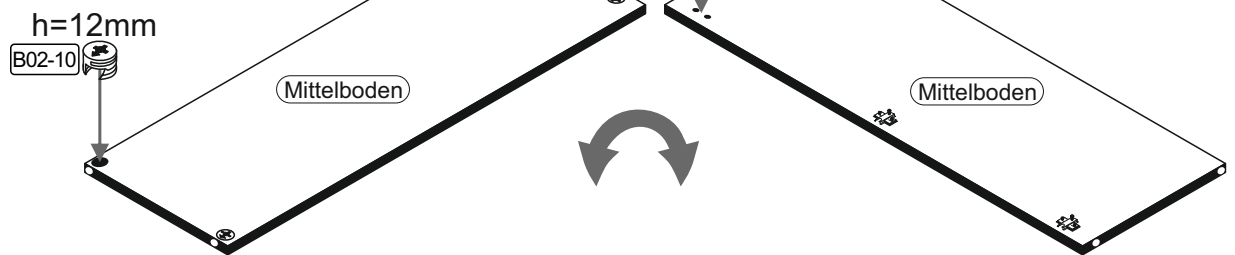




3	B01-36		B02-10		B02-20	
	4x	4x40	4x		2x	
	B02-103					
	4x	8x30				
	B05-130					
	1x	LEIM				

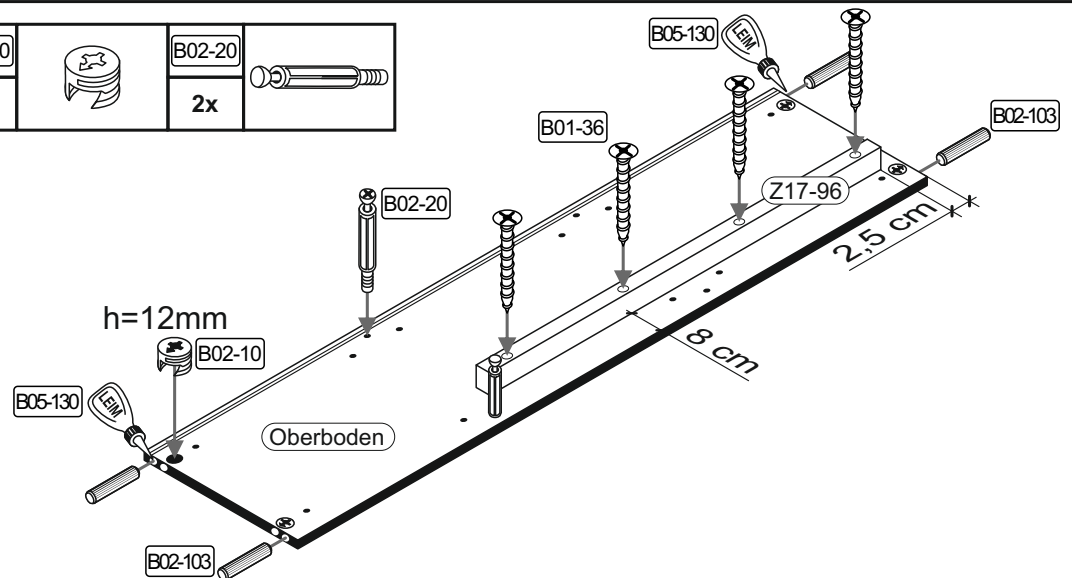

4	B02-20	
	4x	

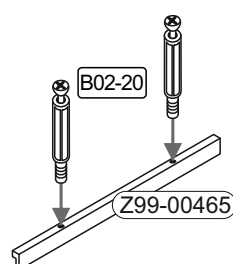


CHICAGO

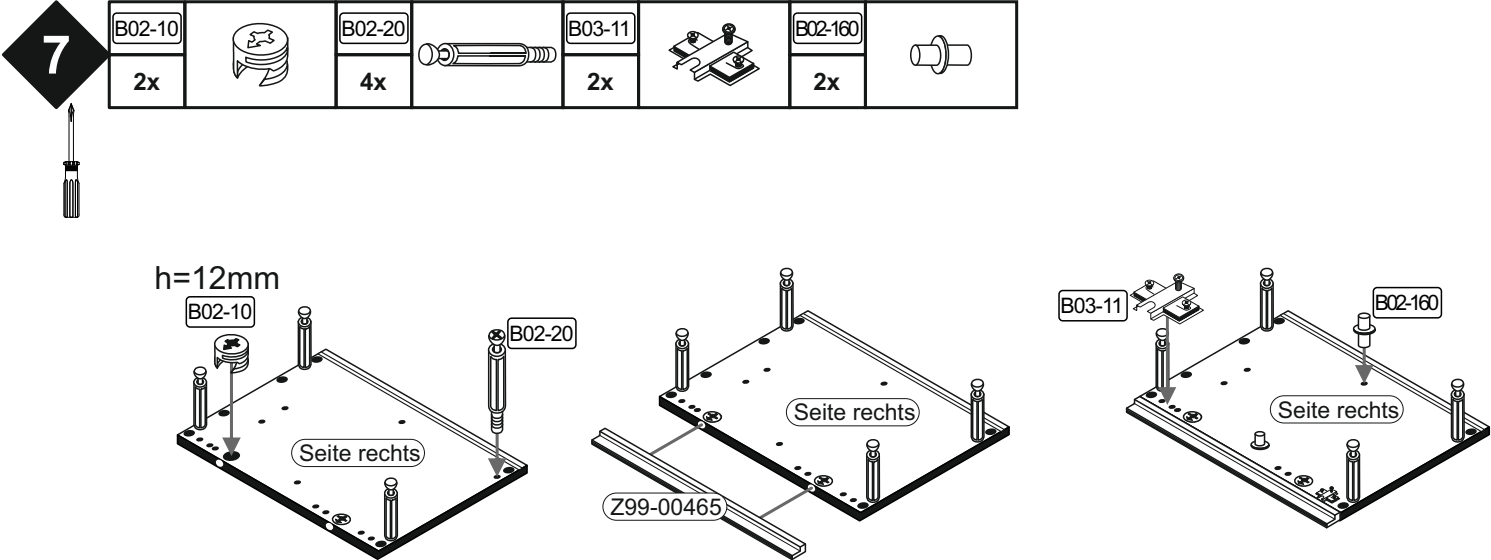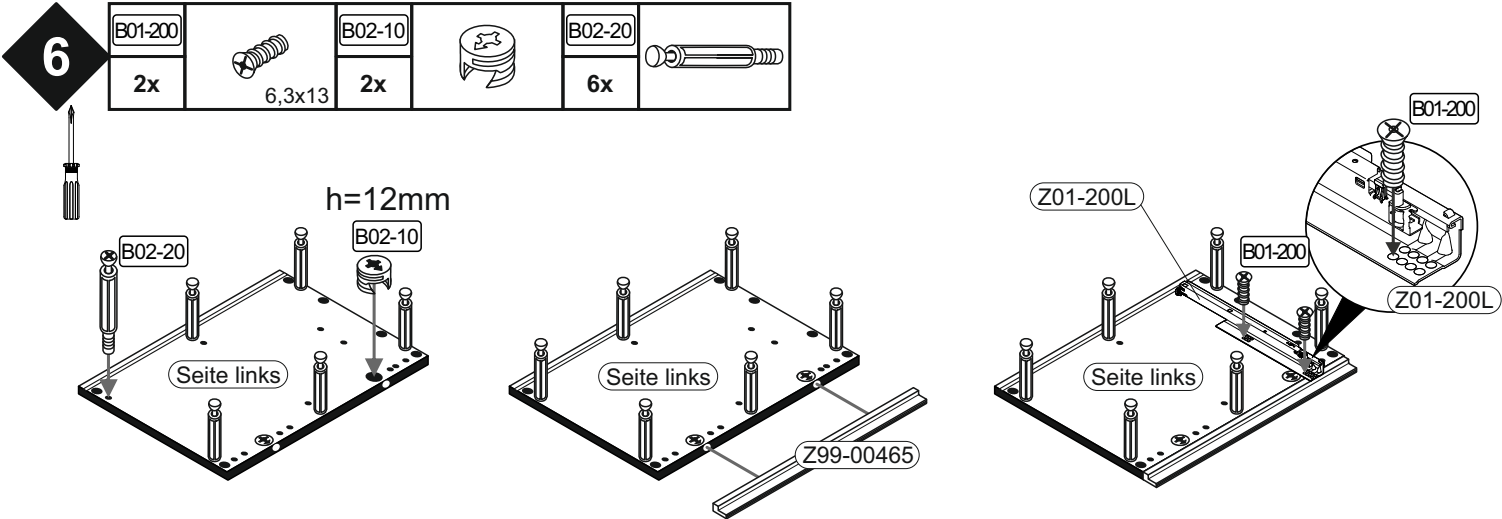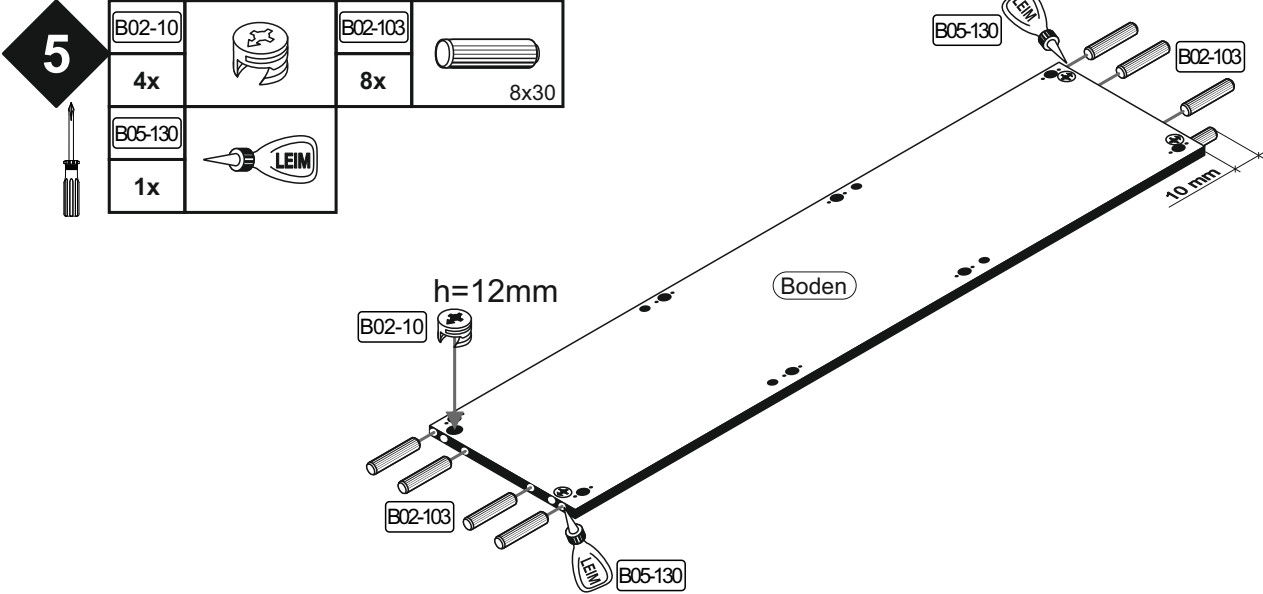



8

B01-80		B03-42	
4x	3,5x13	2x	8er

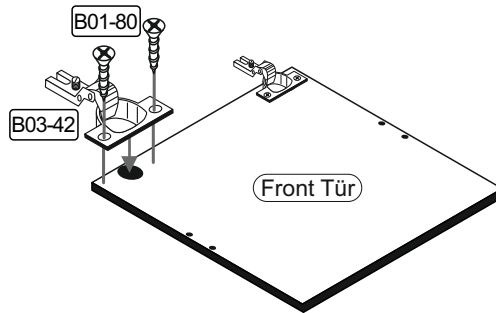







9

B01-200		B02-08		B02-20		B06-425	
2x	6,3x13	4x		4x		1x	

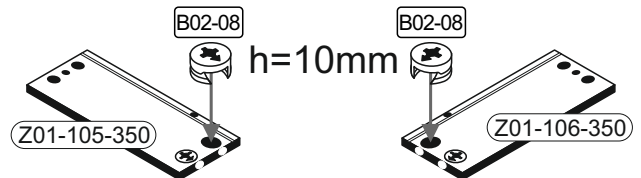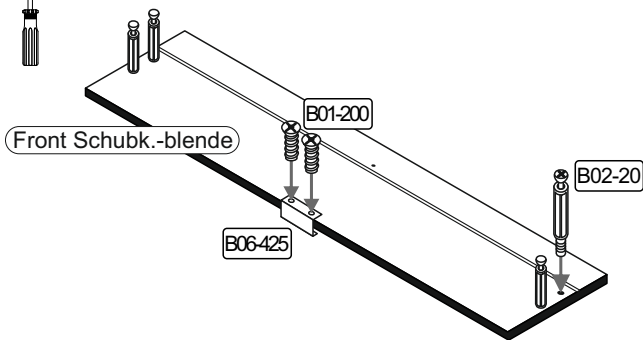

10


B01-30		B01-70	
13x	3x16	2x	3x30
B01-122			
2x	4x13		

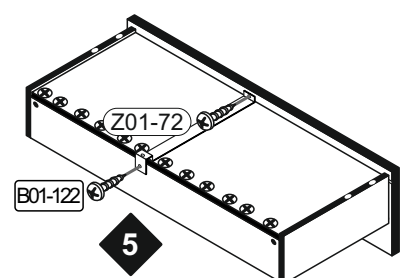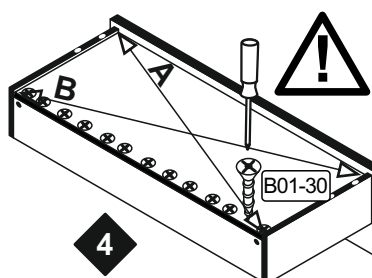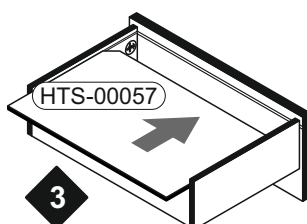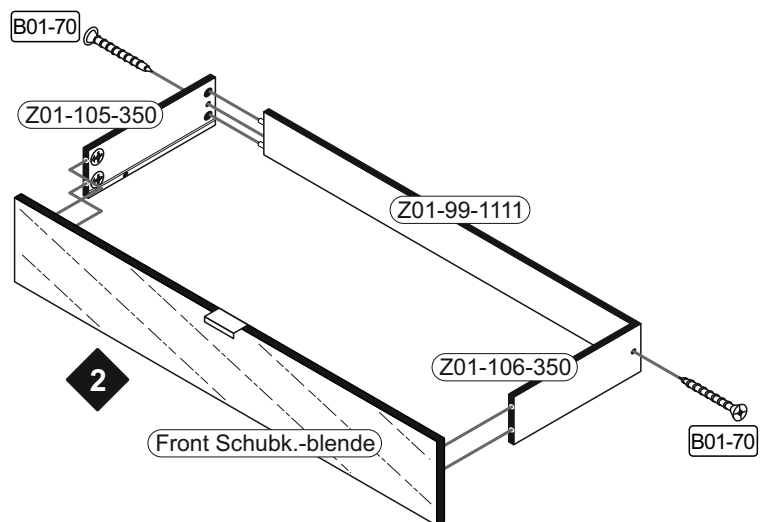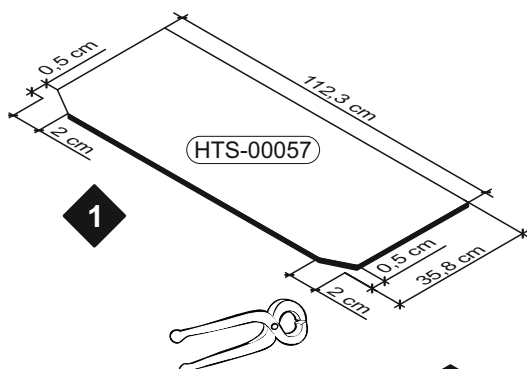

CHICAGO


11

B01-80		B01-200	
6x	3,5x13	2x	6,3x13
B03-42		B06-425	
3x	8er	1x	

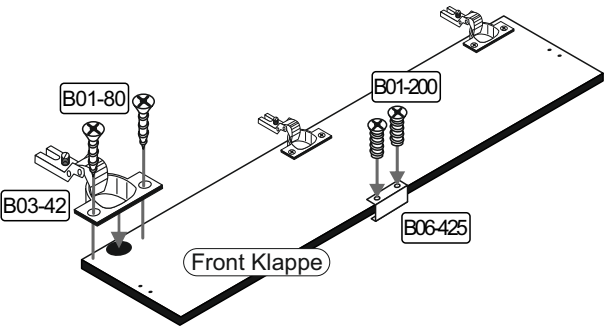


12


B01-10		B05-130	
2x	6,3x50	1x	

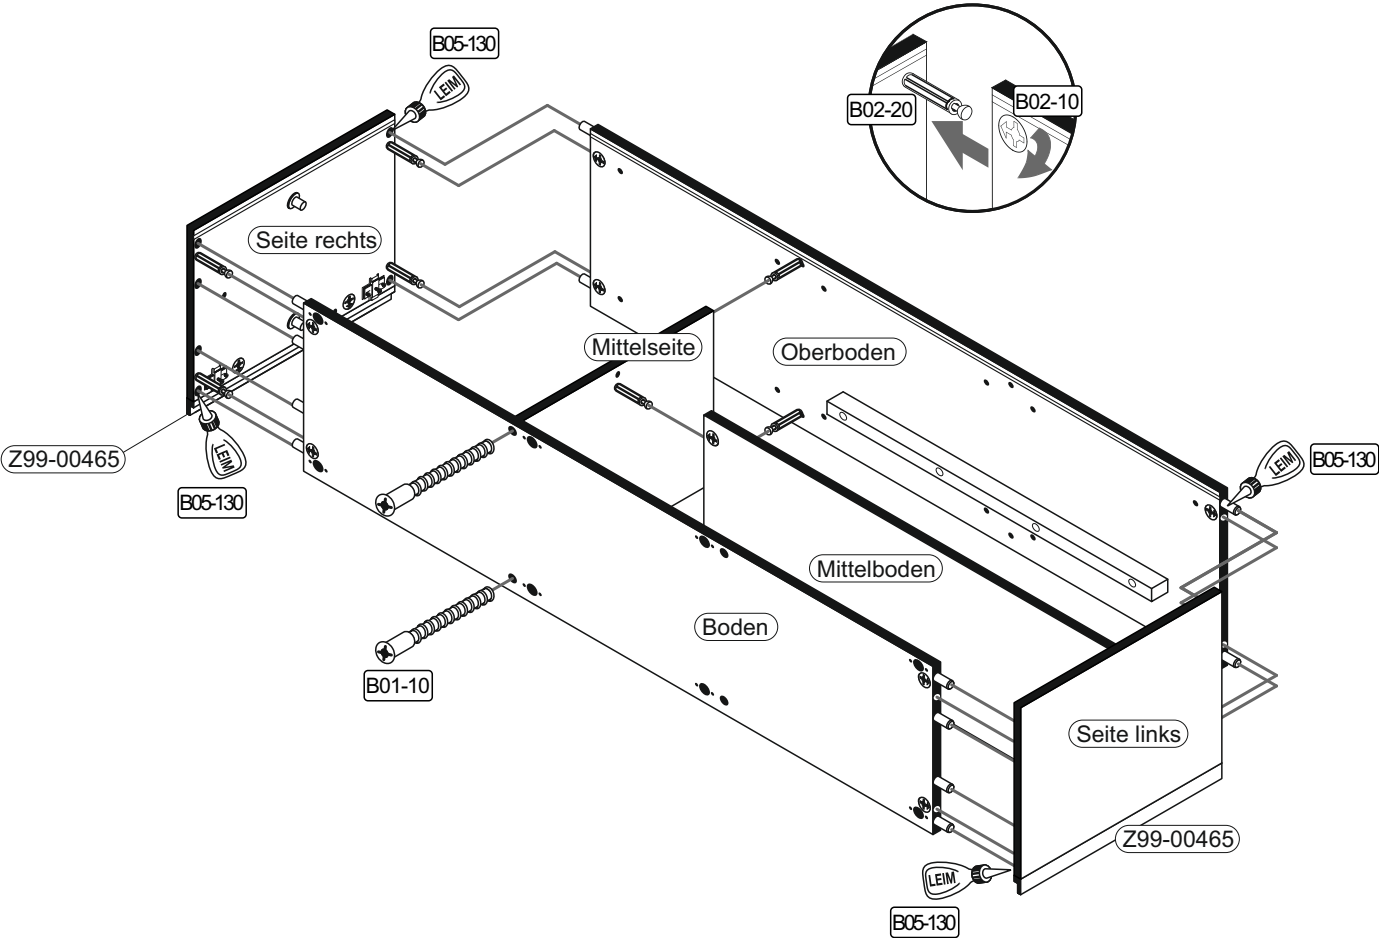


13	B01-30		B01-90	
	32x	3x16	4x	3,5x20
	B01-123			
	12x	4x15		
	B05-185			
	4x			
	B02-173			
	6x			

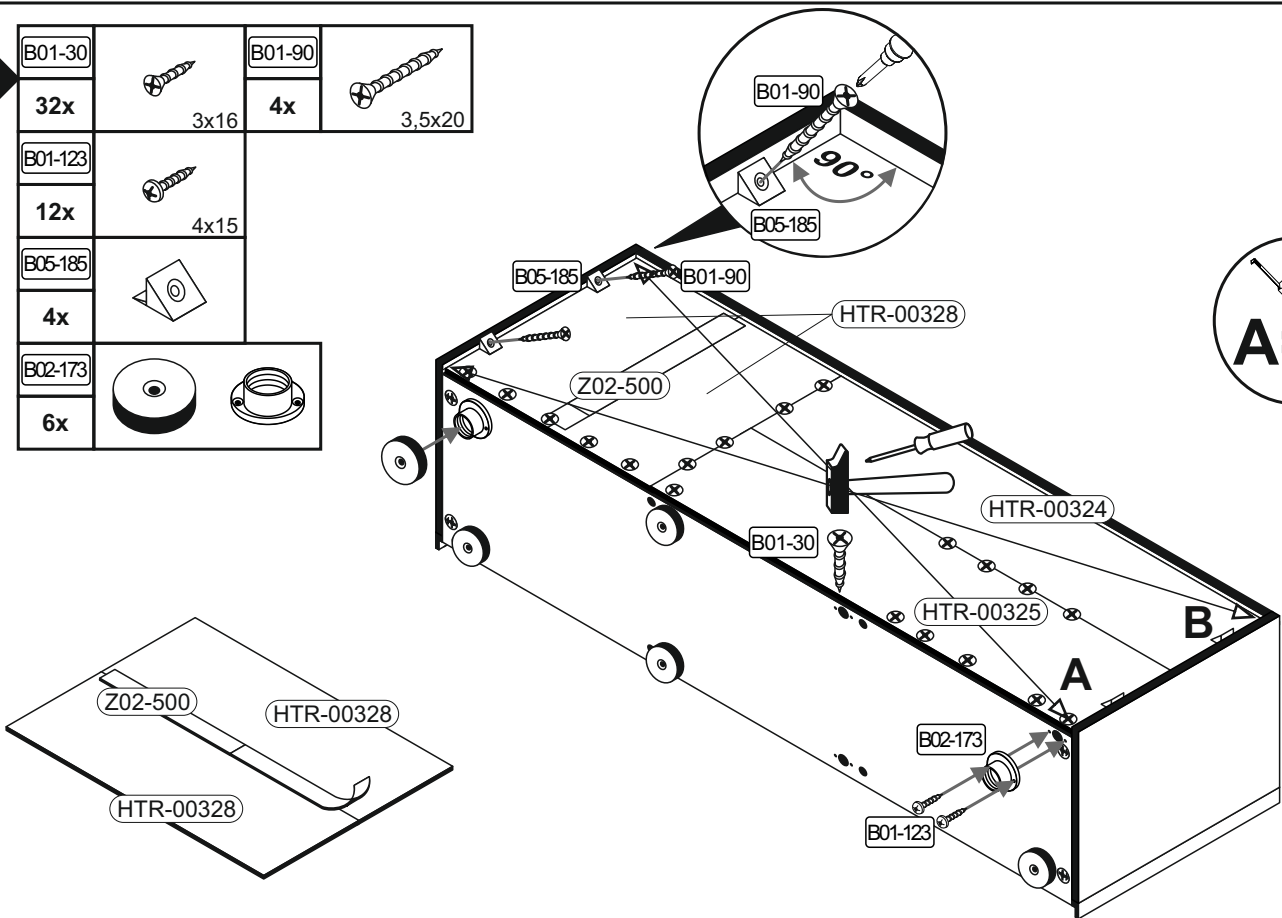

14	B05-01		B05-280	
	10x		1x	

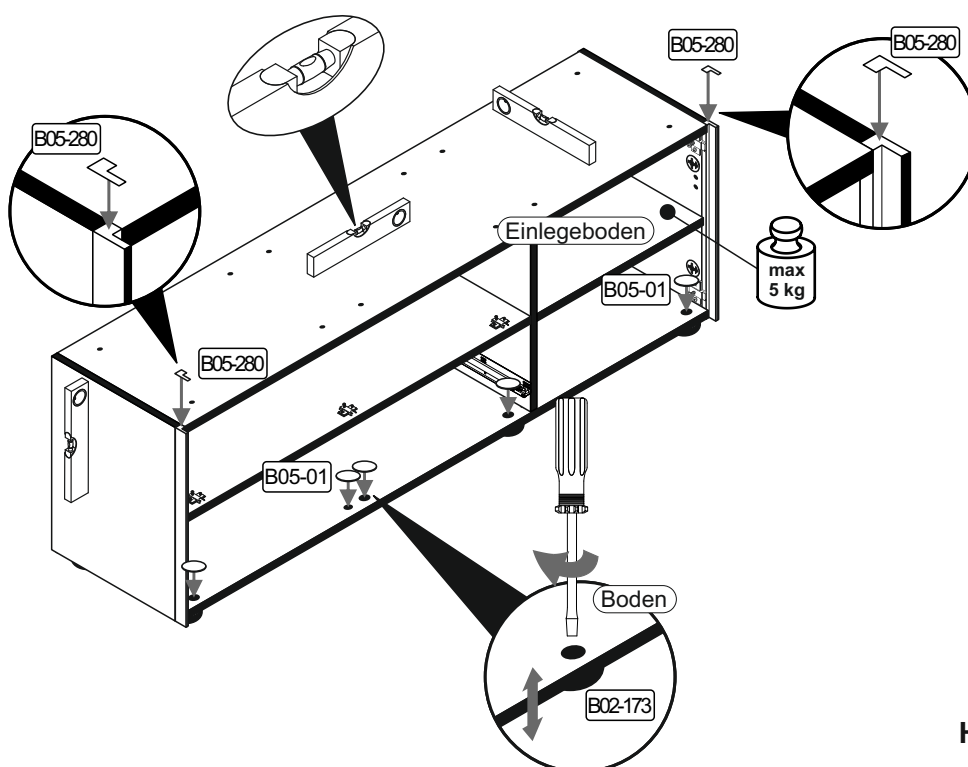


SCAN ME

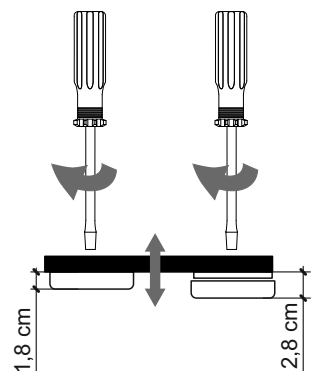


Höhenverstellung der Möbelfüße

15



Einbau des Schubkastens

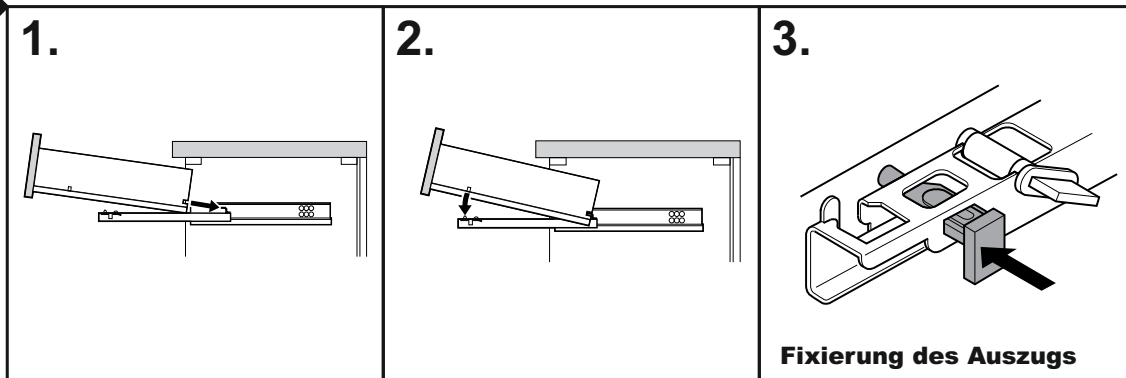



Ausbau des Schubkastens

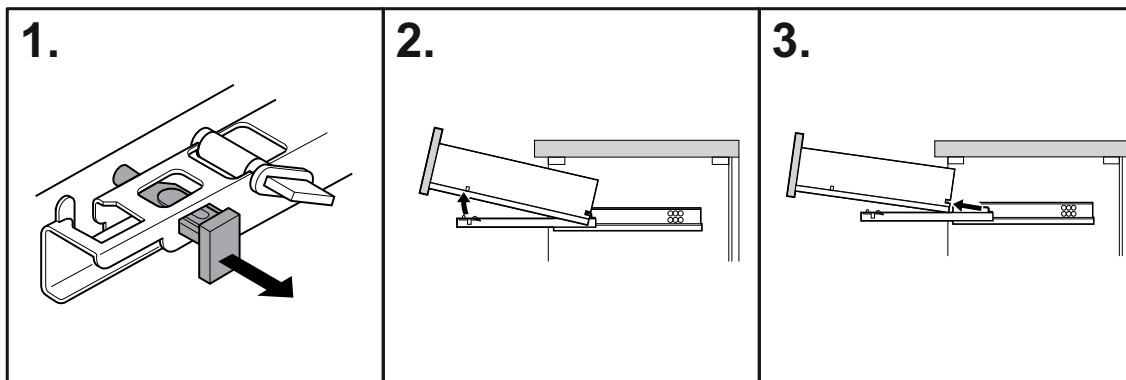




Höhenverstellung des Schubkastens

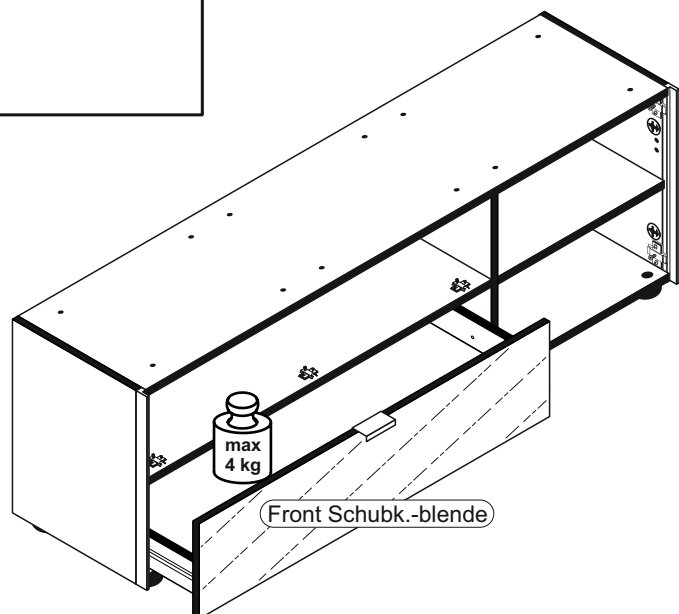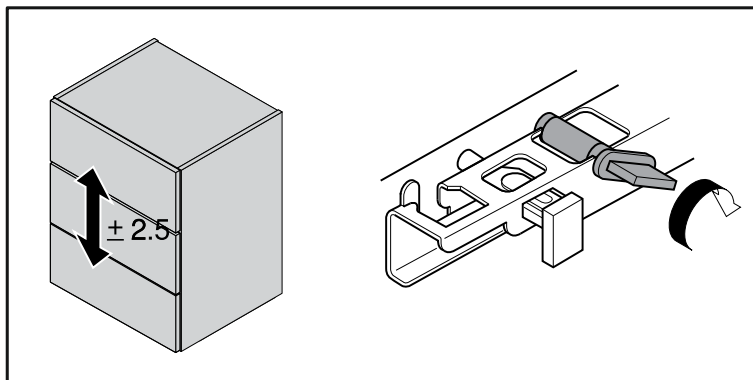



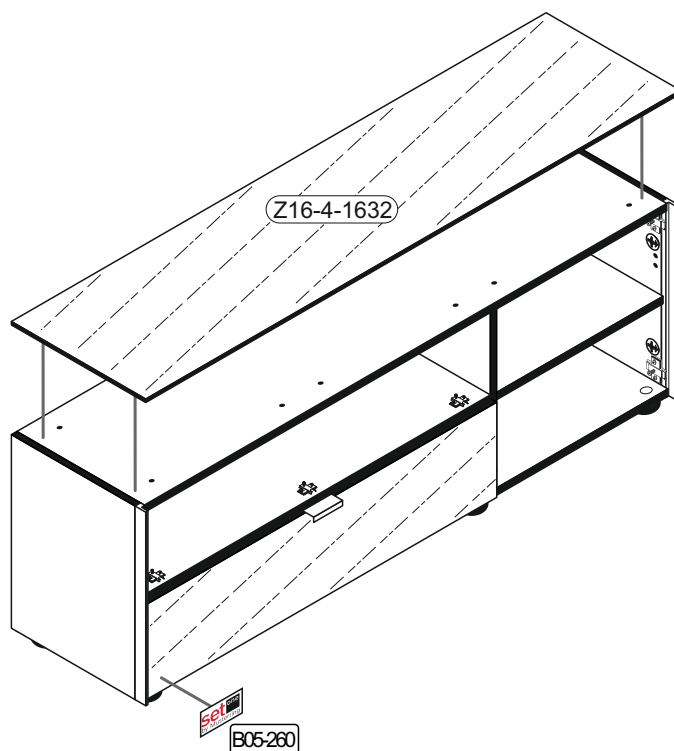


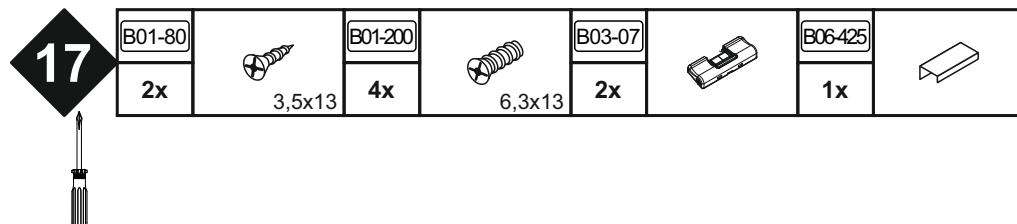

Stütze unten (Z07-27) überdrehen

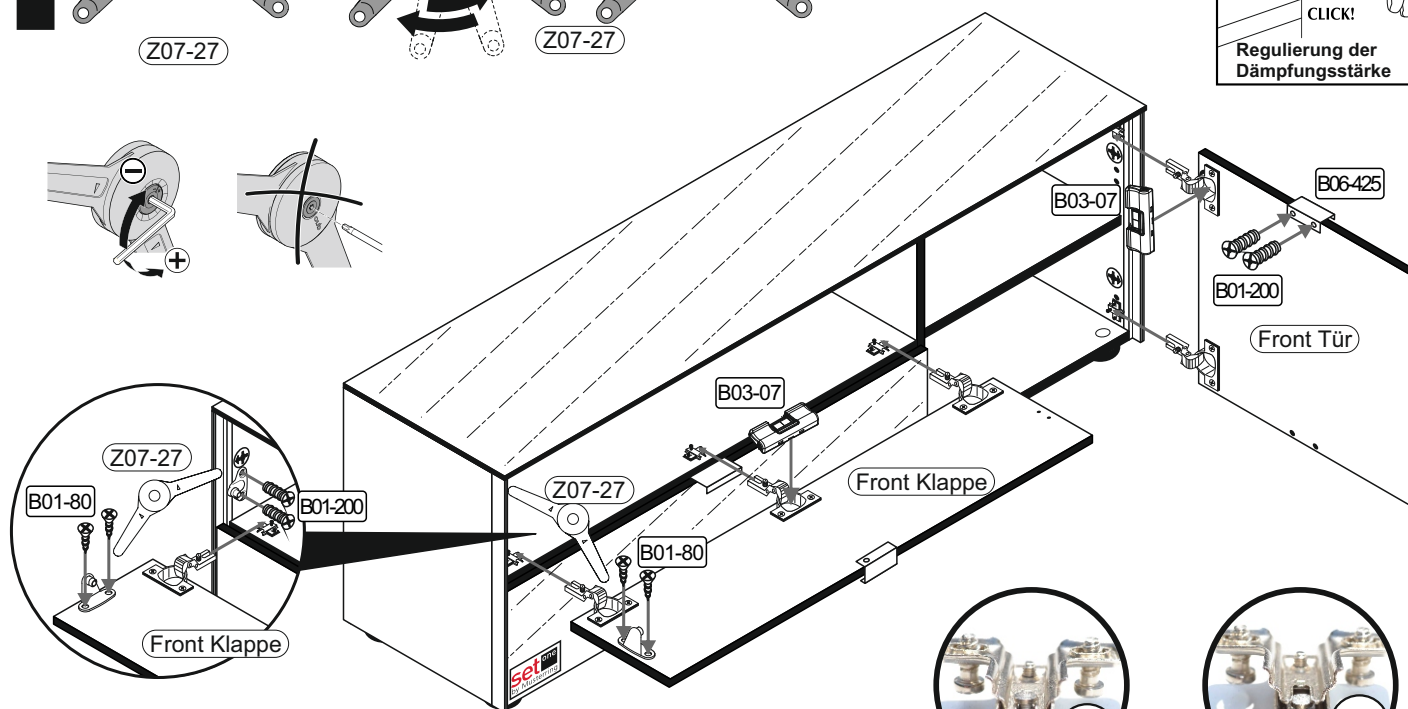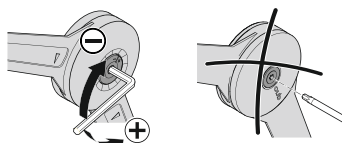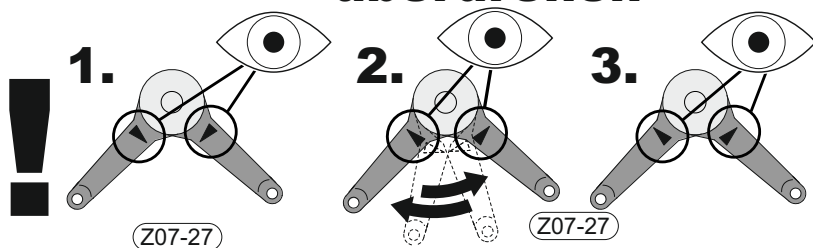

Montage der Türdämpfung

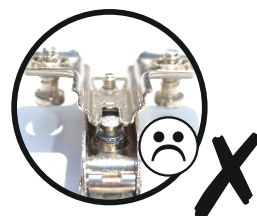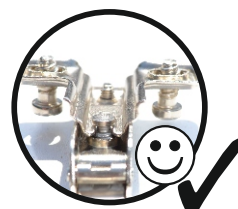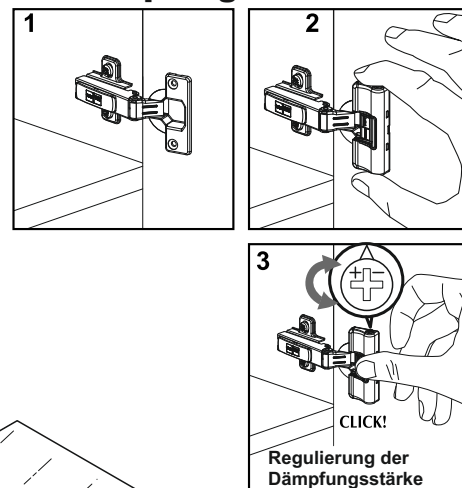

Türen einstellen (Scharniere justieren)
Adjusting the doors (adjusting the hinges)
Régler les portes (ajuster les charnières)
Sistemare le porte (regolare le cerniere)
Deuren instellen (scharnieren afstellen)
Nastawić drzwi (wyregulować zawiasy)
Výrovnejte dvířka (seříd'te závěsy)
Nastavenie dverí (nastavenie závesov)
Állítsa be az ajtókat (állítsa be a zsanérokot)
Reglare uși (ajustare balamale)
Kapıların ayarlanması (menteselerin seviye ayarı)
Регулировка дверей (регулировка шарнира)

