



ASSEMBLY INSTRUCTION

RODHAM CHAIR

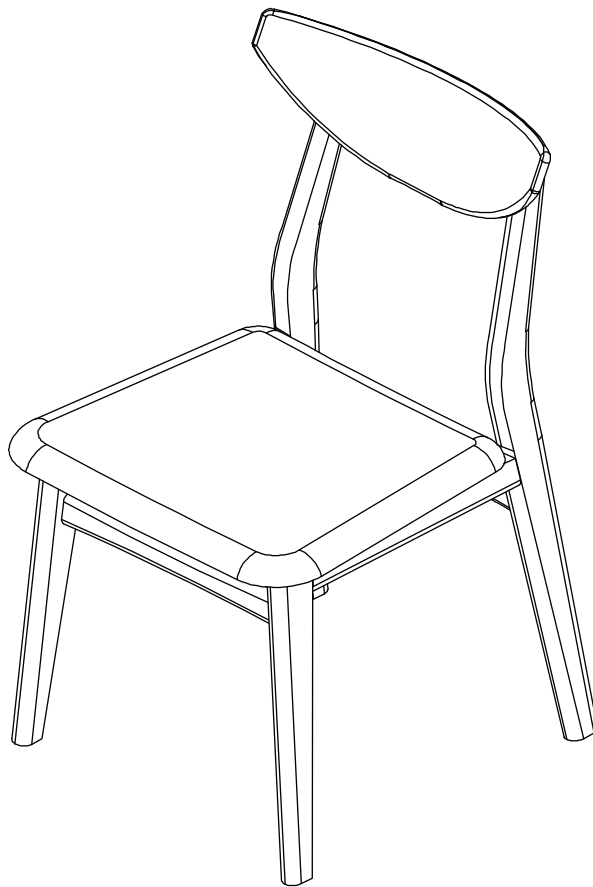


ROWICO
HOME

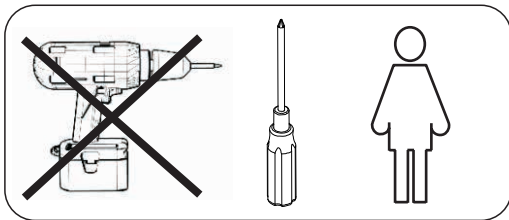


Ax1 	Hx4 M6×30	
Bx1 	Ix4 M6×40	
	Jx4 M6×20	
Cx2 	Kx1 N5	
	Lx1 N4	
Dx1 	Mx6 M5×40	
Ex1 	Nx4 	Ox4
	Px4 M5×50	
Gx1 	Qx2 M6×50	


1

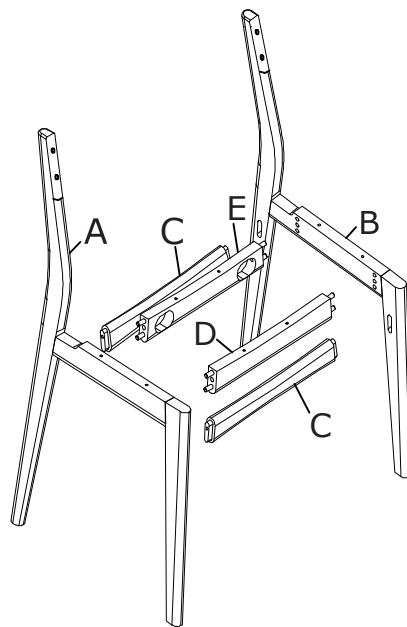


2

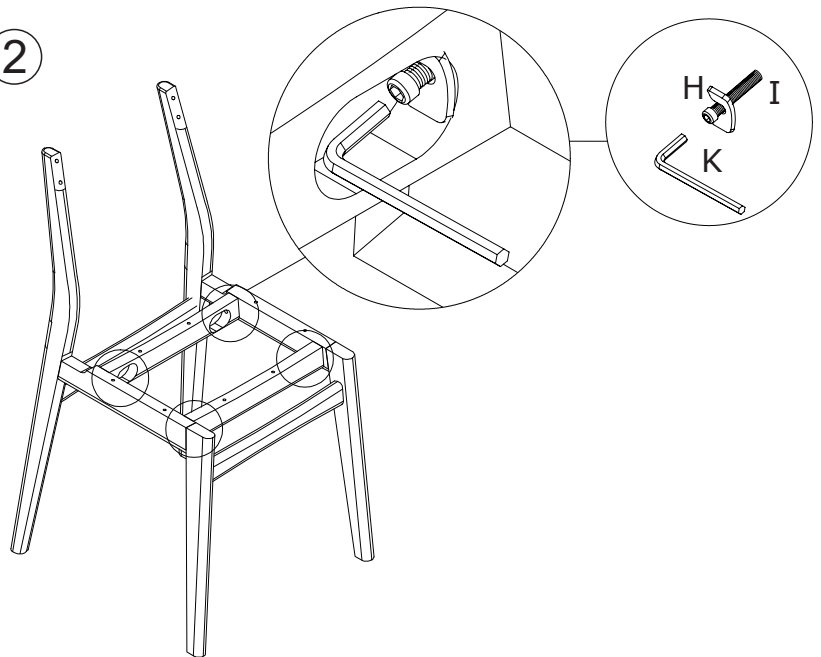


3

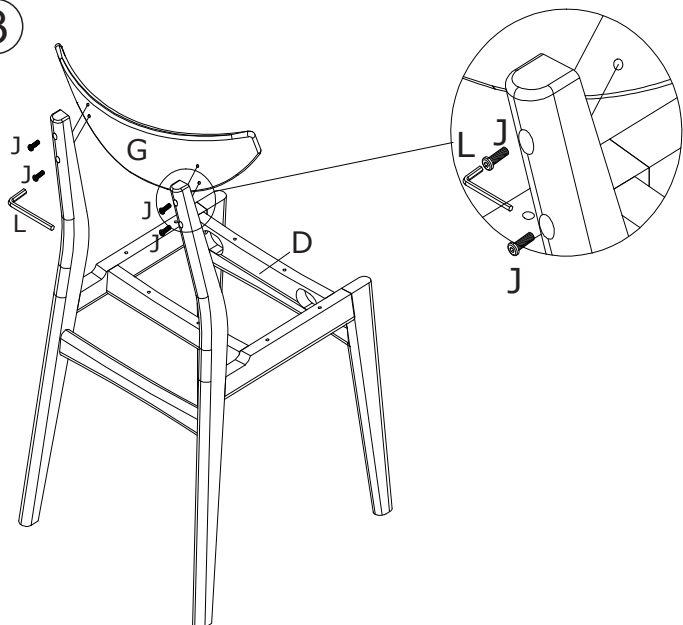


4

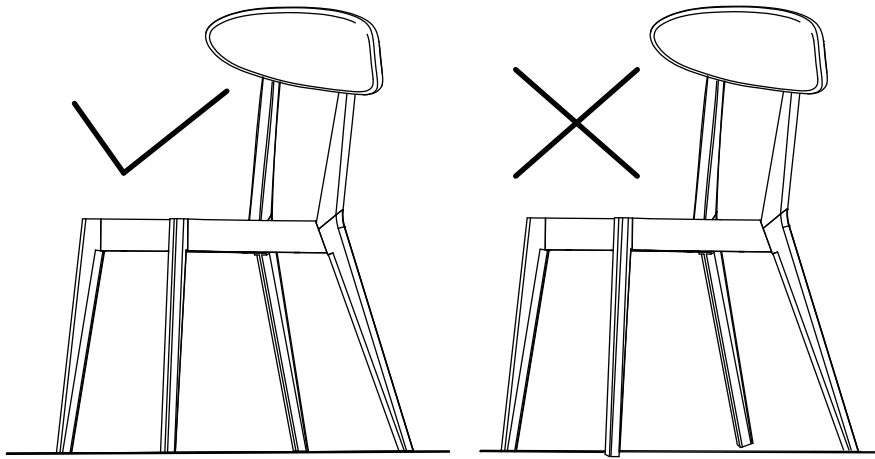

5


Px4

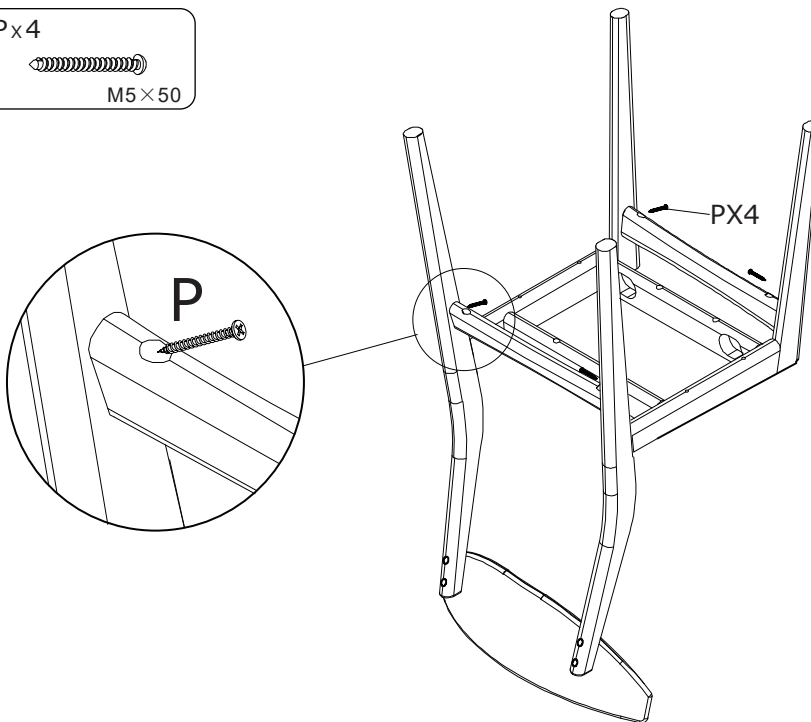M5x50





6

Qx2

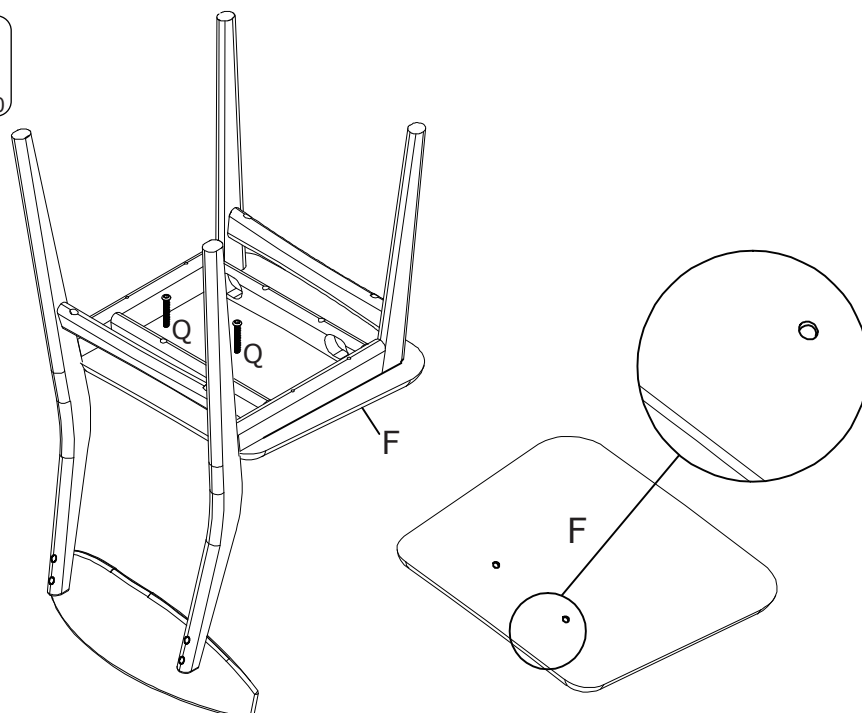
M6x50



7

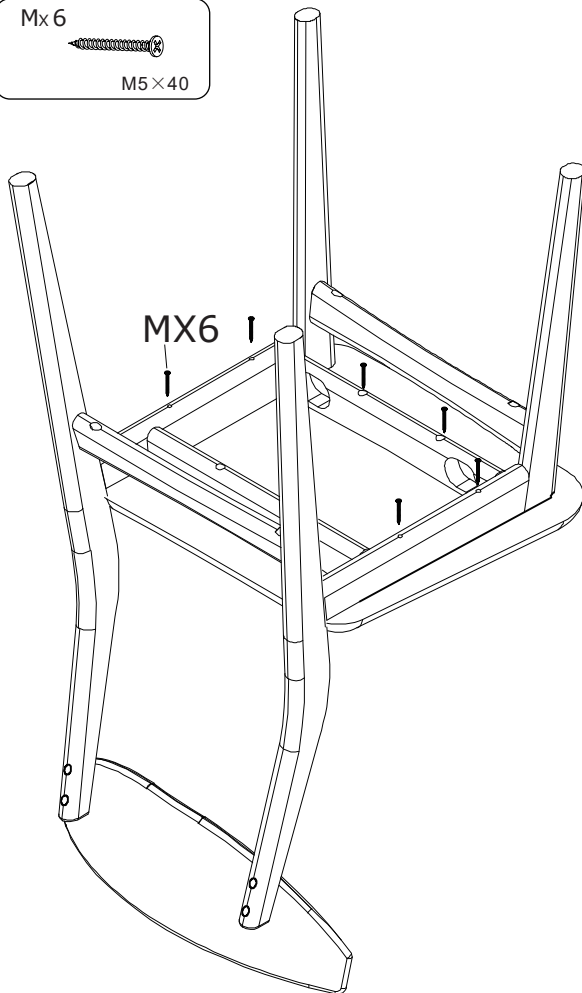

8

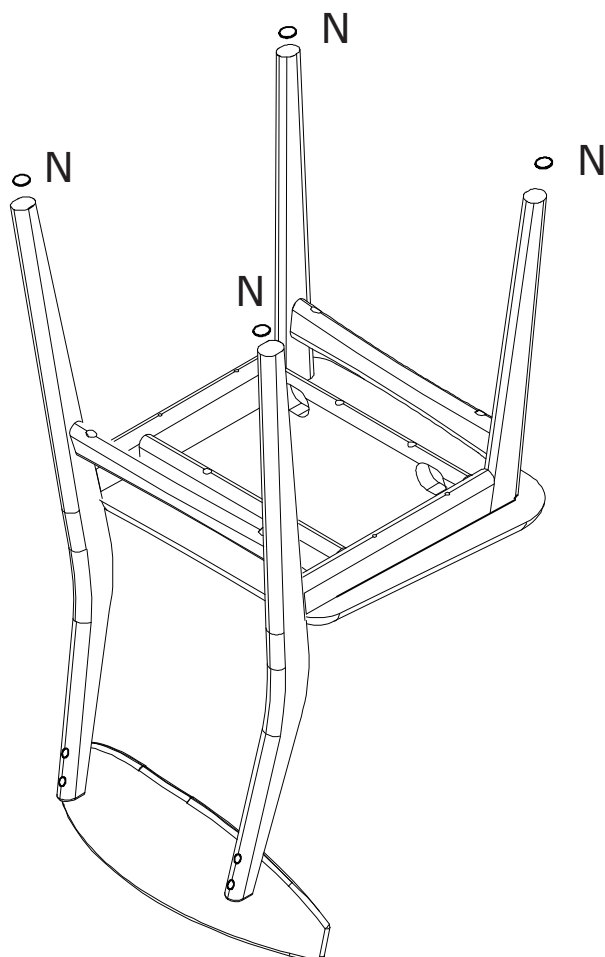

OBS!


Fäst ej täckpluggarna direkt, avvakta en tid tills att efterspänningen av skruvarna är gjord.

Notice!

Do not fasten the wooden plugs at backside of chair, until after some time, when screws are re-tightened!

Mo	Tu	We	Th	Fr	Sa	Su
1	2	3	4	5	6	7
⊗ 8	9	10	11	12	13	14
15	16	17	18	19	20	21
⊗ 22	23	24	25	26	27	28
29	30	31				

2-4 weeks/veckor

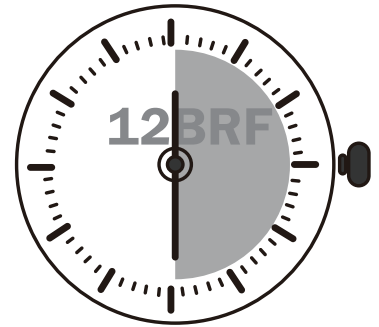

⑨

Efterspänn skruvarna regelbundet eller vid behov!
Tighten the screws regularly or when needed!

