






3001040


Brisbane Steel Cabinet

w. Glass Door Black


HOUSE

NORDIC


1 x41	
2 x2	ø6-30mm 
3 x2	ø12*0.8mm spare:2 
4 x12	ø4x4mm 
5 x2	
6 x4	
7 x2	
8 x2	

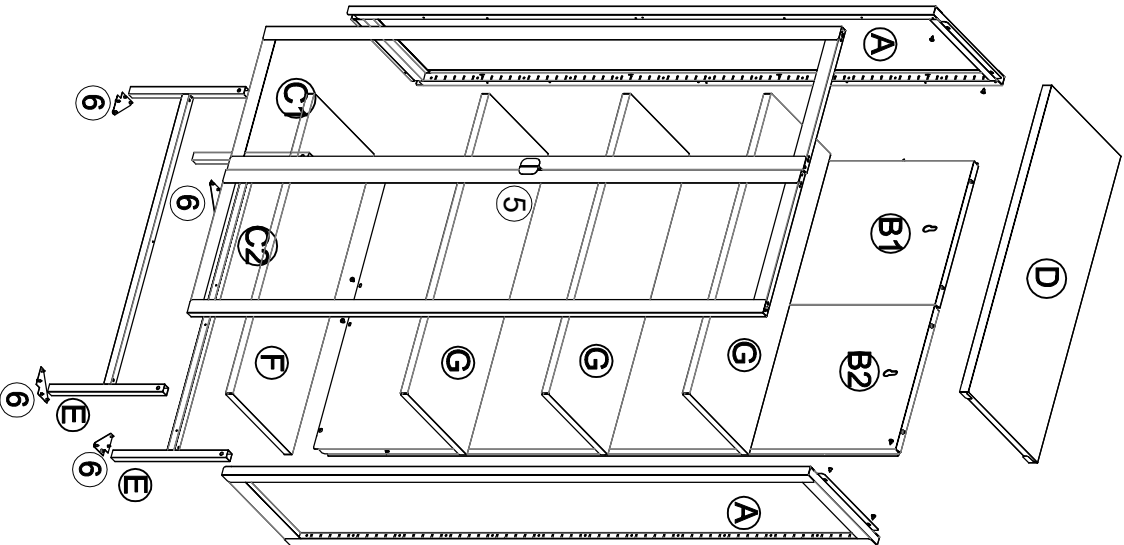



(1) - Attach (A) to (E) as below shown.

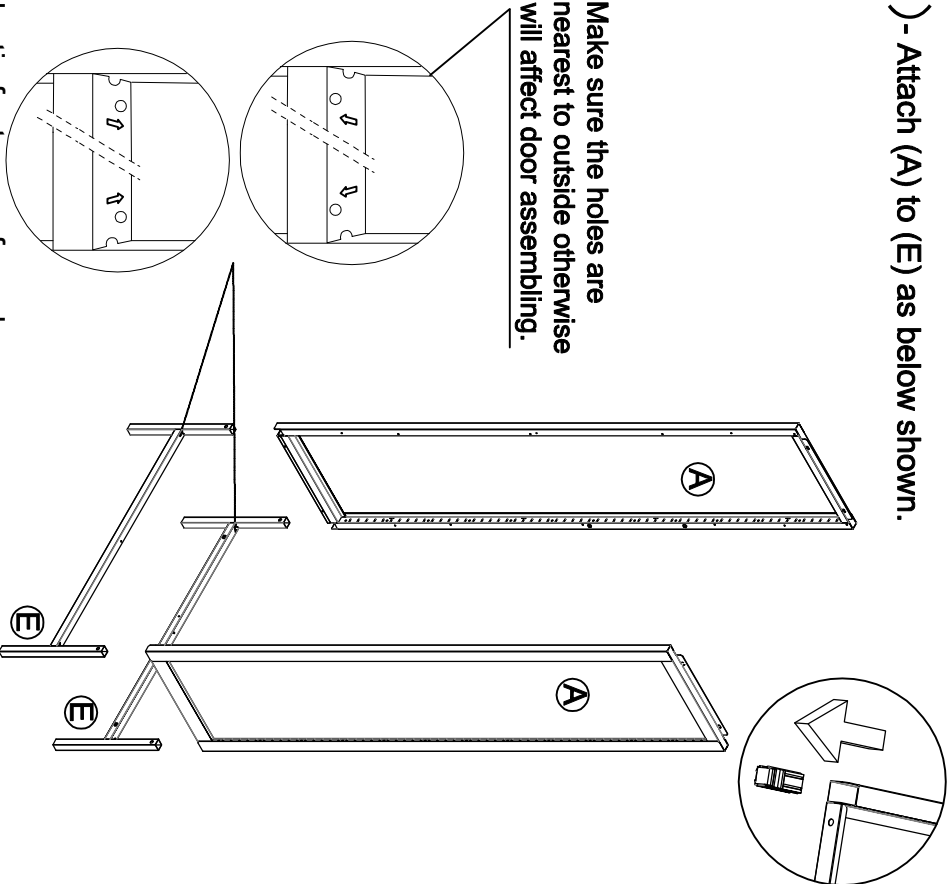


(3) - Attach (B) to (A) & (E) as below shown.

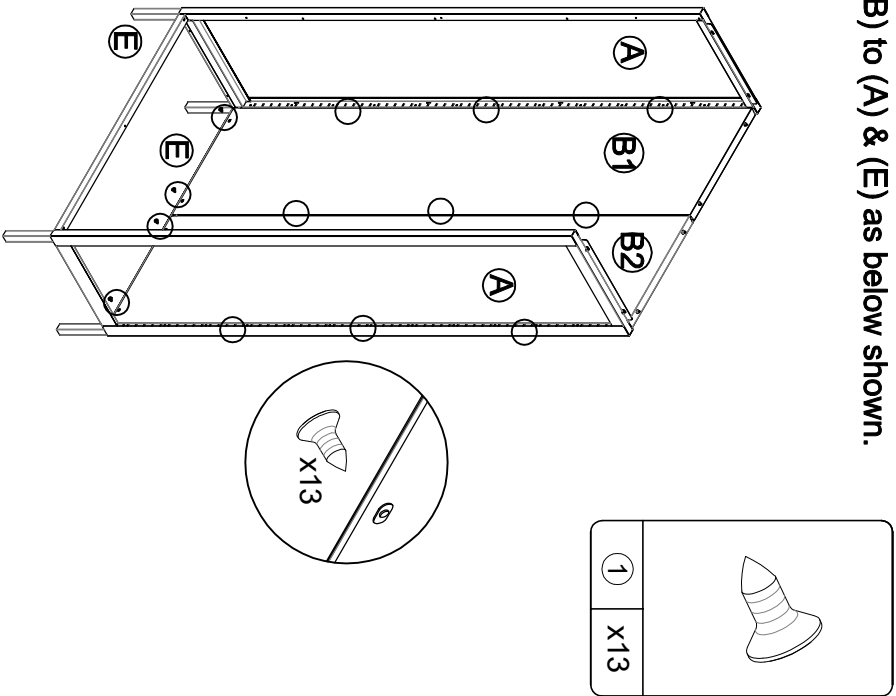



(2) - Attach ⑥ to (E) as below shown.

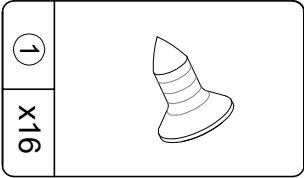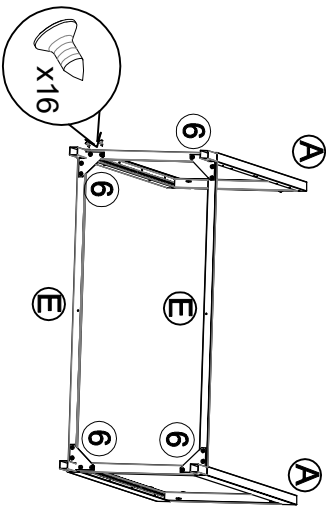



(4) - Attach (F) to (A) & (B) & (E) as below shown.

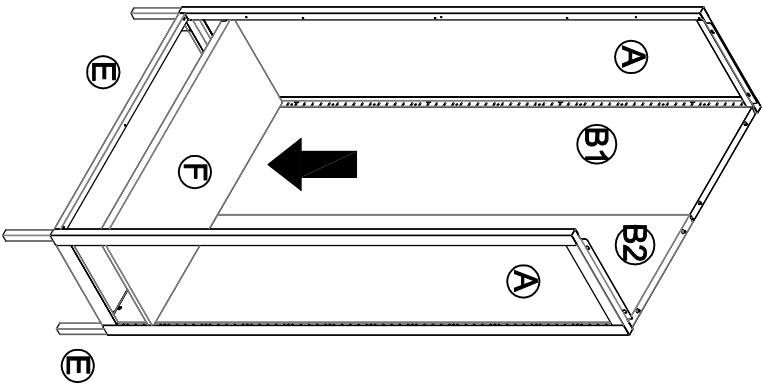



(5) - Attach (D) to (A) as below shown.

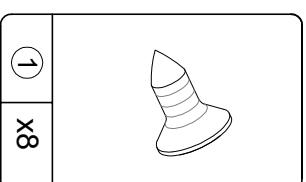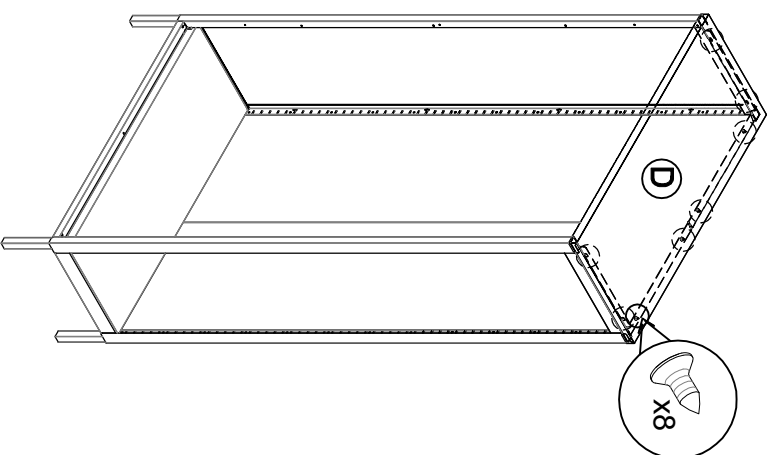


(6) - Attach (G) to pre-assembled unit as below shown.

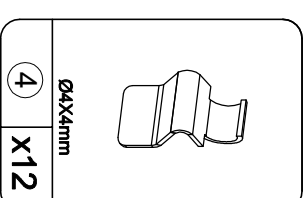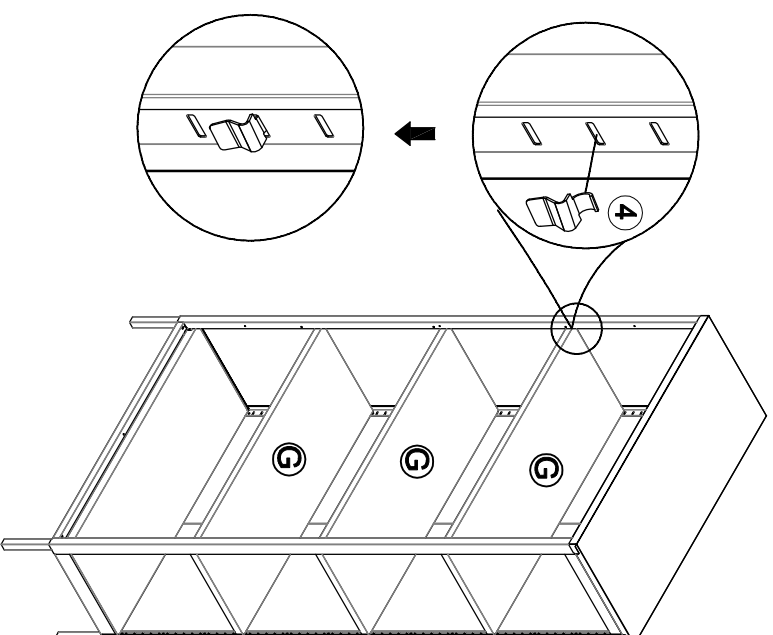



(7) -Attach (2) & (3) to pre-assembled unit as below shown.

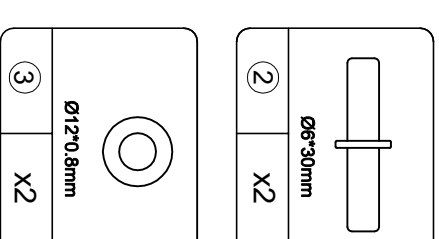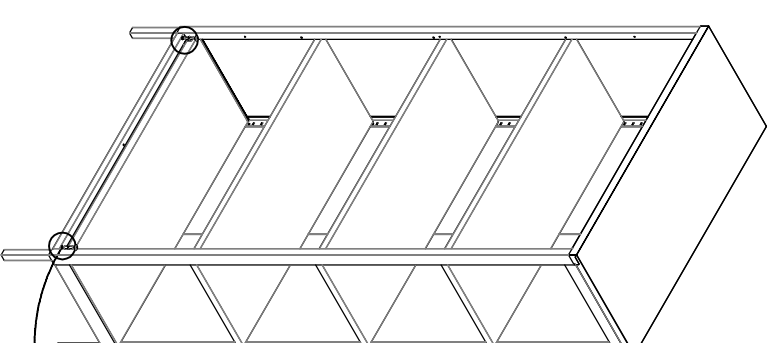



(8) - Attach (C) to pre-assembled unit as below shown.

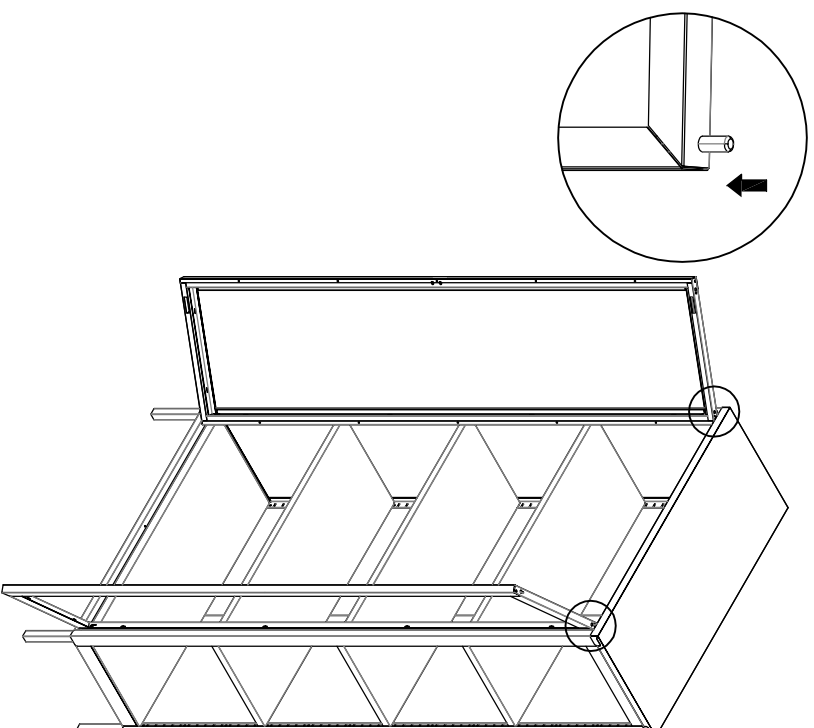

(9) - Attach (5) to (C) as below shown.

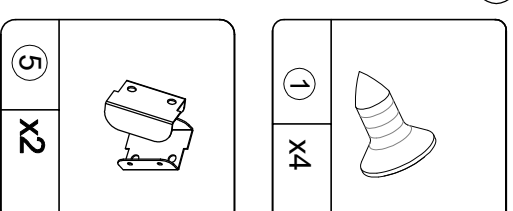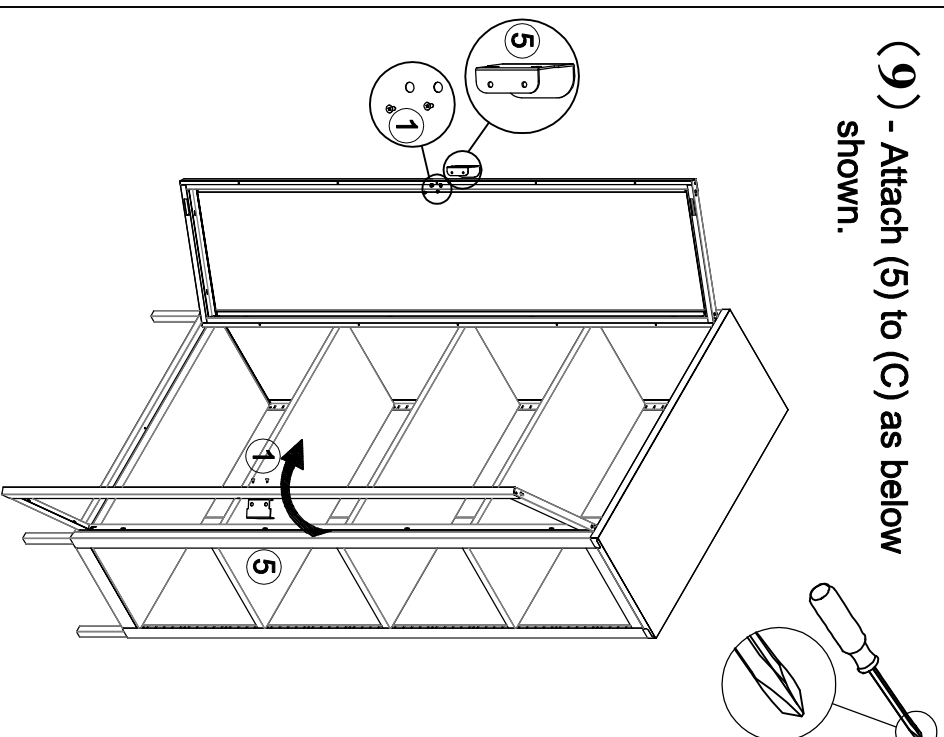

(10) wall anchors

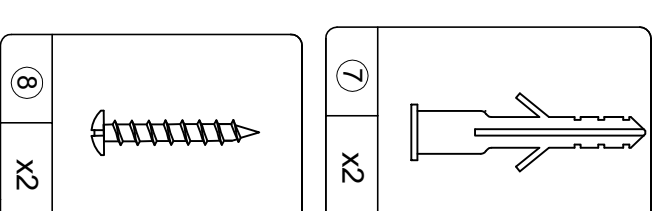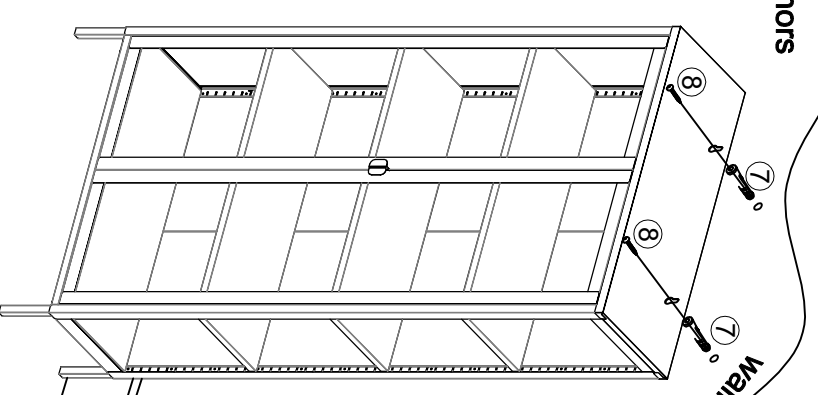

Gaps may appear between the top of the doors and the frame if the item is not on level ground; use the plastic foot cover to level.