
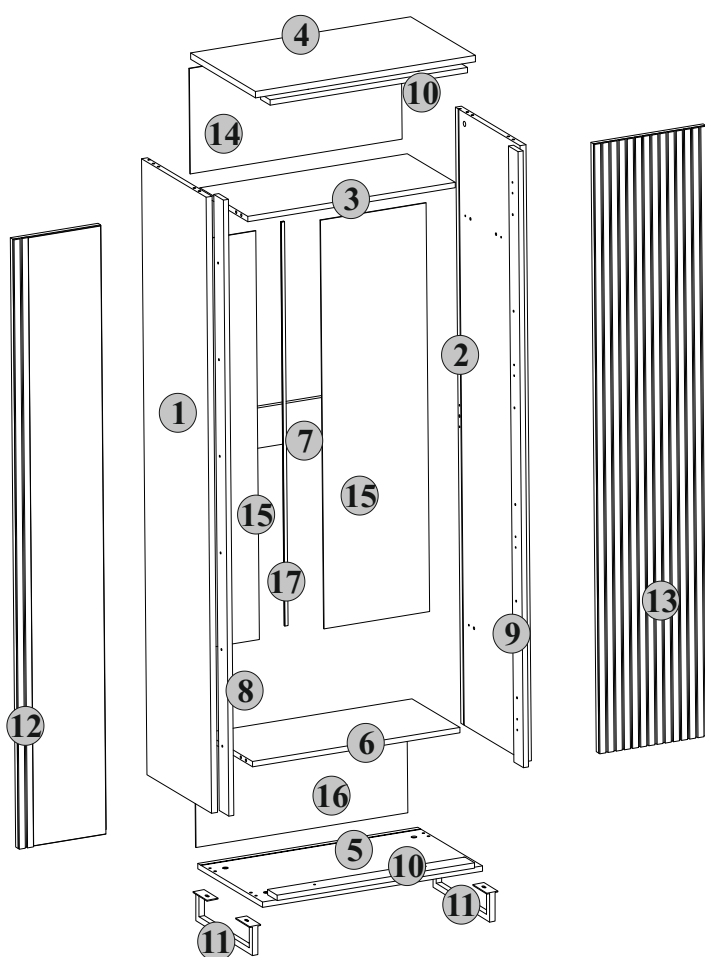

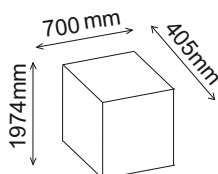



“3412”

versionsnummer: 16.12.2023


Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.

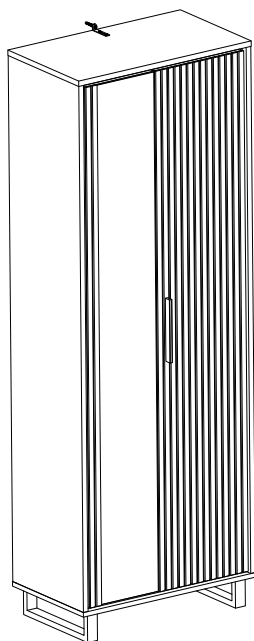


B5

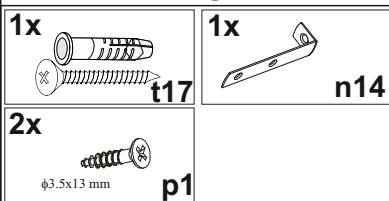


B1

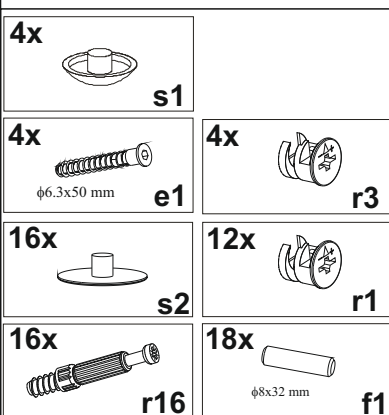


B2











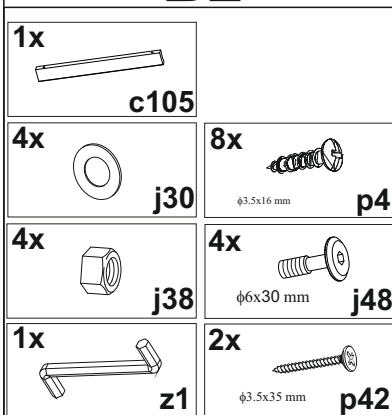


B3





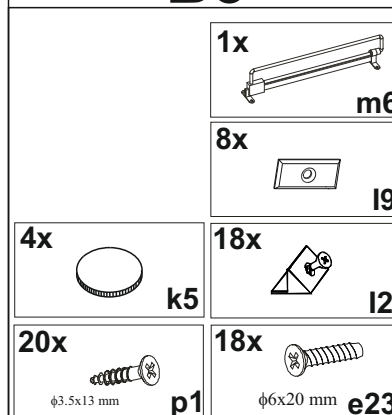


B4





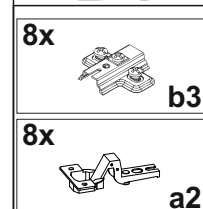


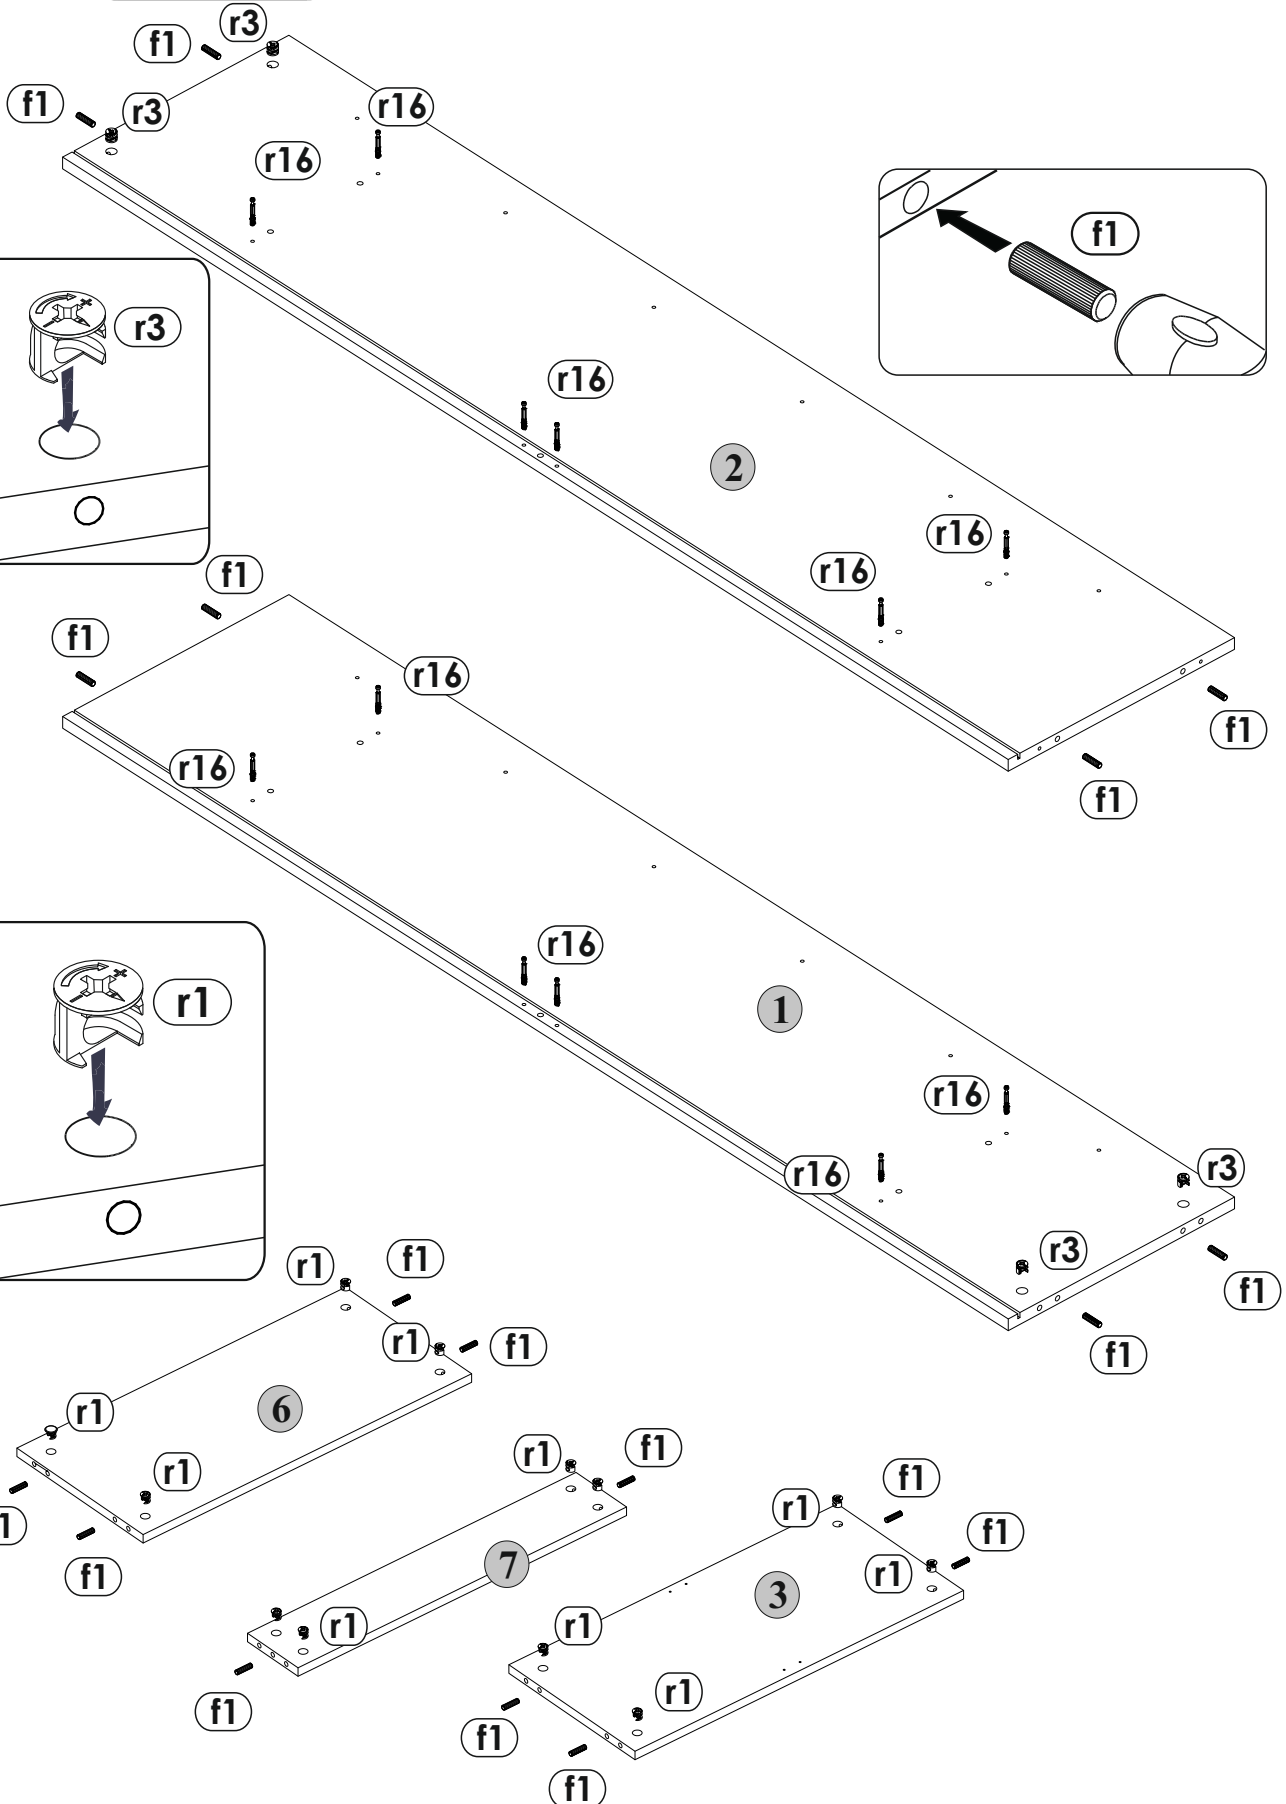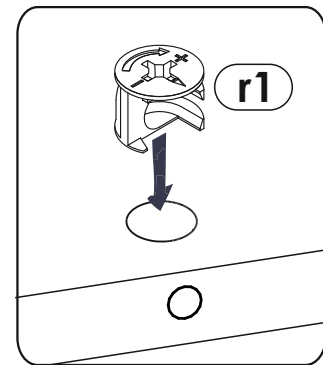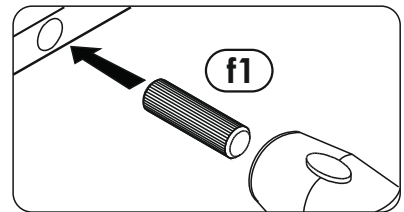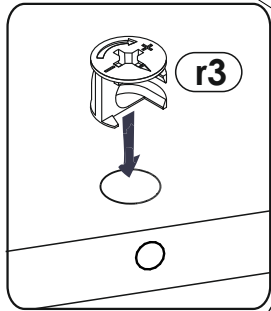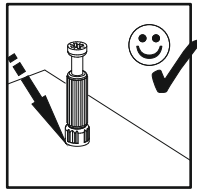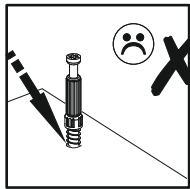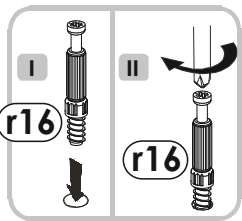

2

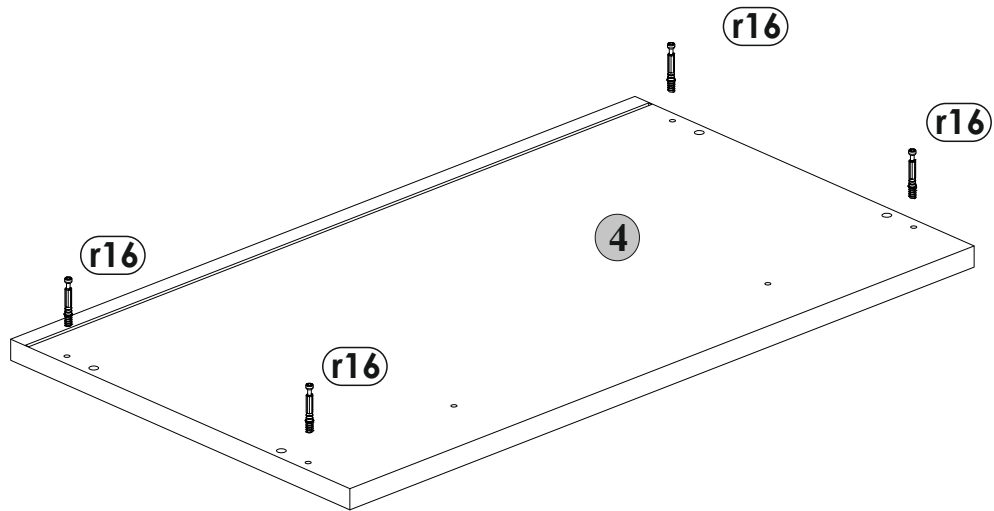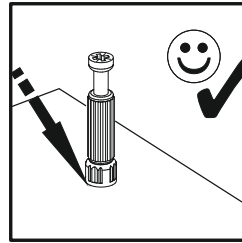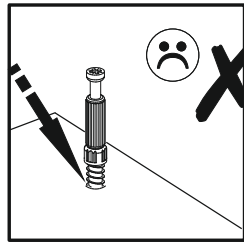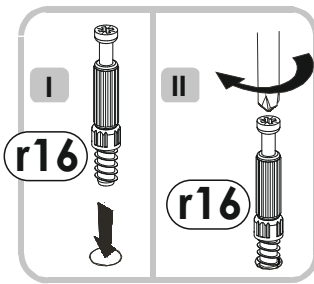

3

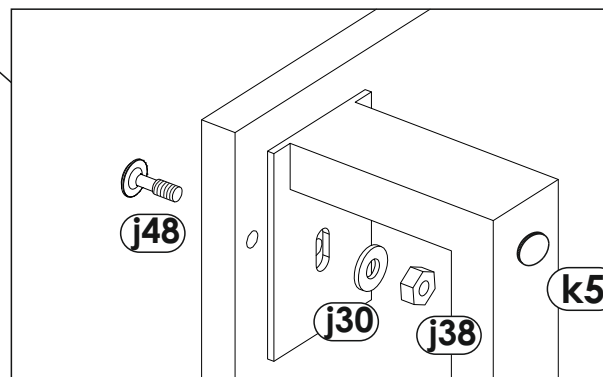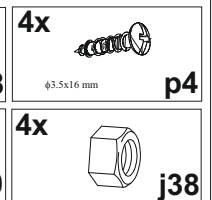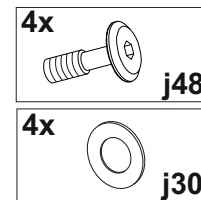
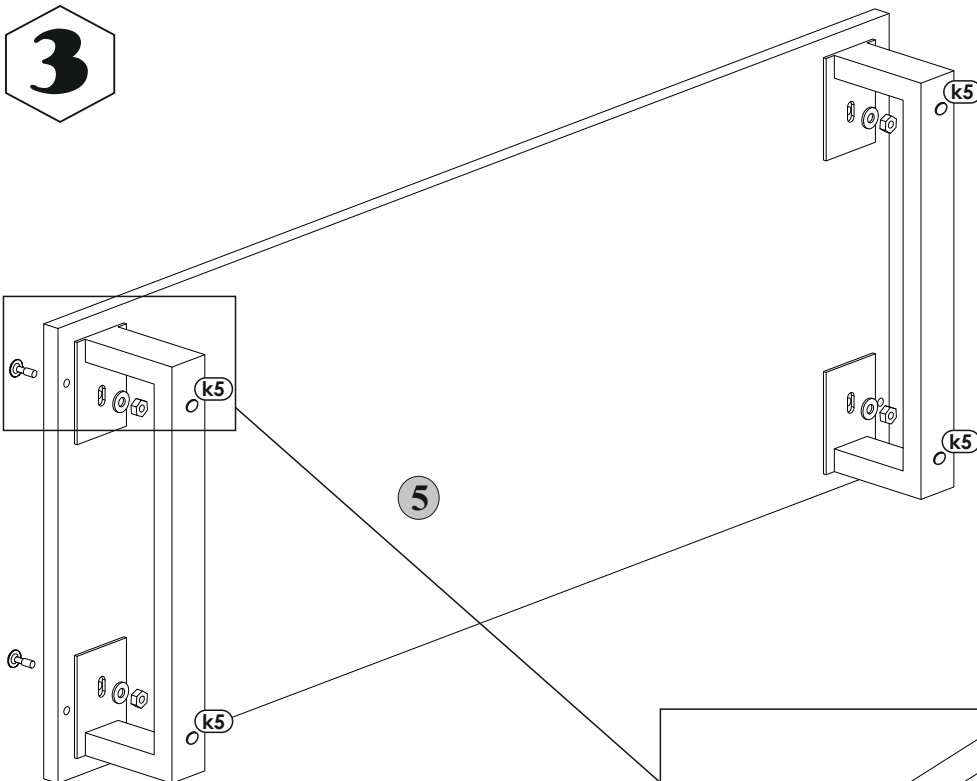


3


4

8x  b3

16x  e2
φ6.3x13 mm

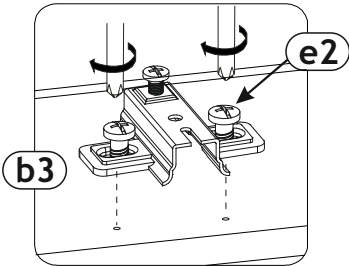
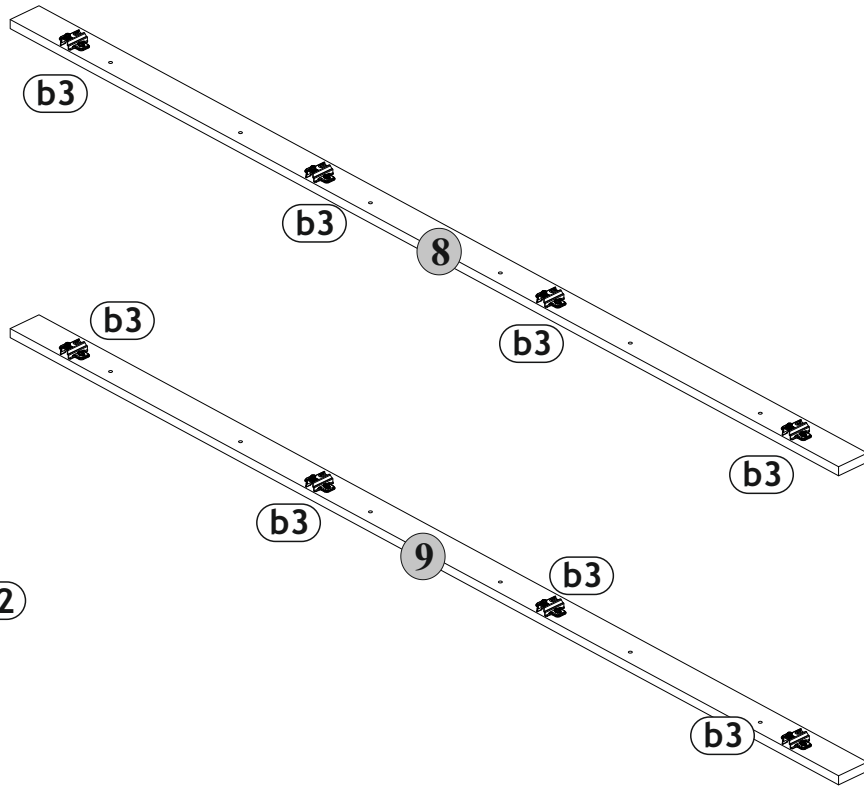


5

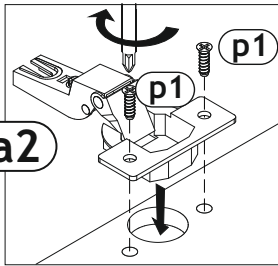


8x  a2



16x  p1
φ3.5x16 mm

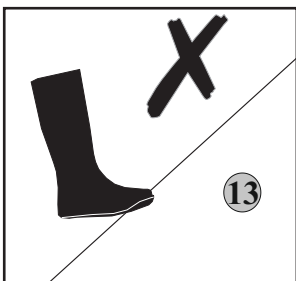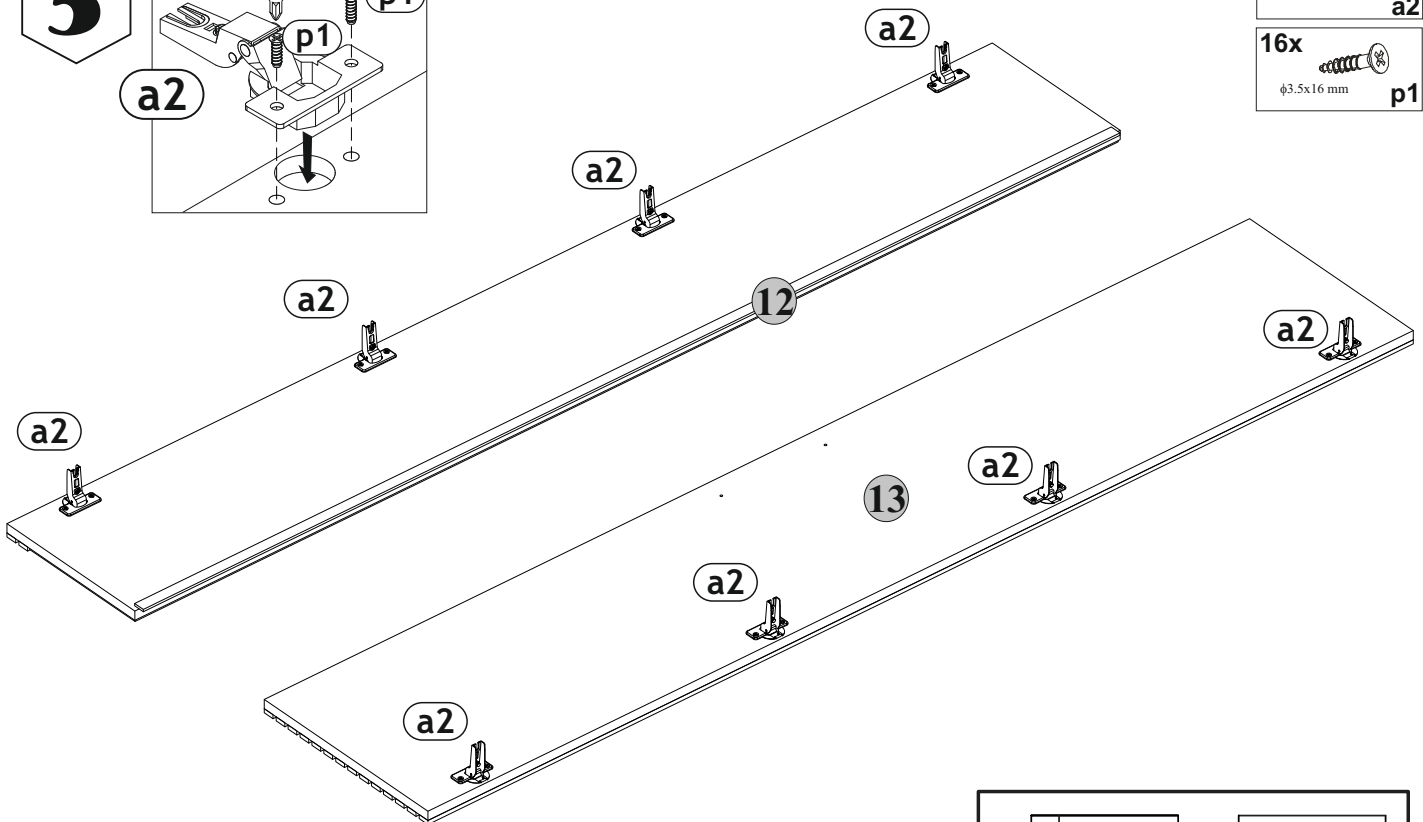



4

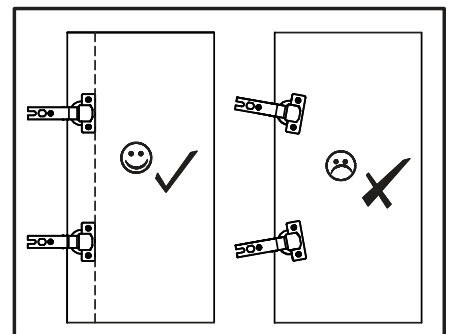

6

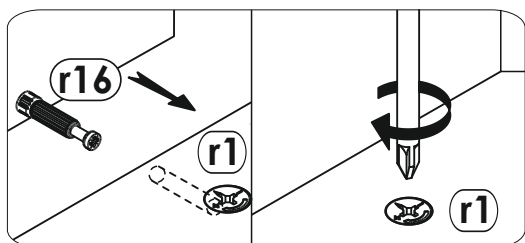
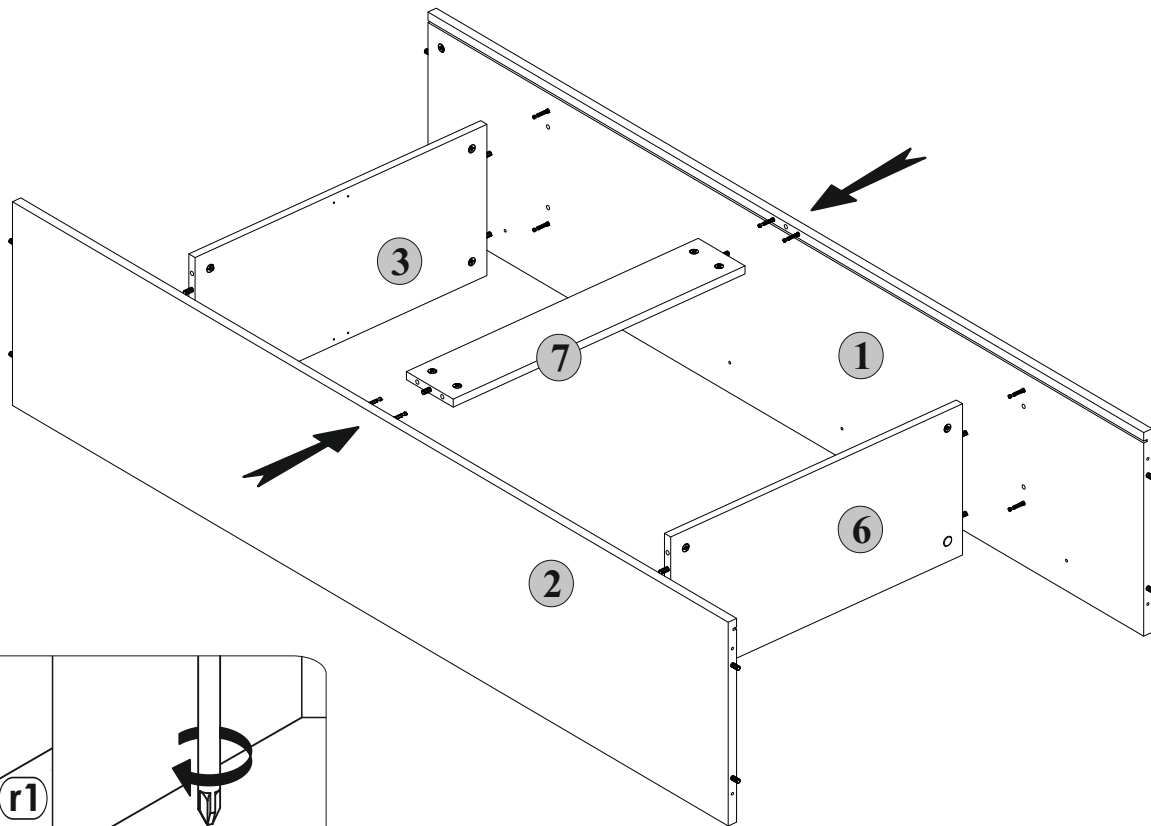


7




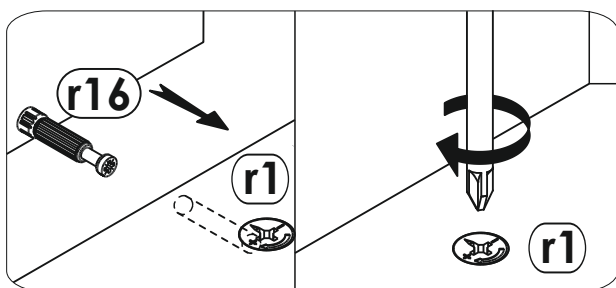
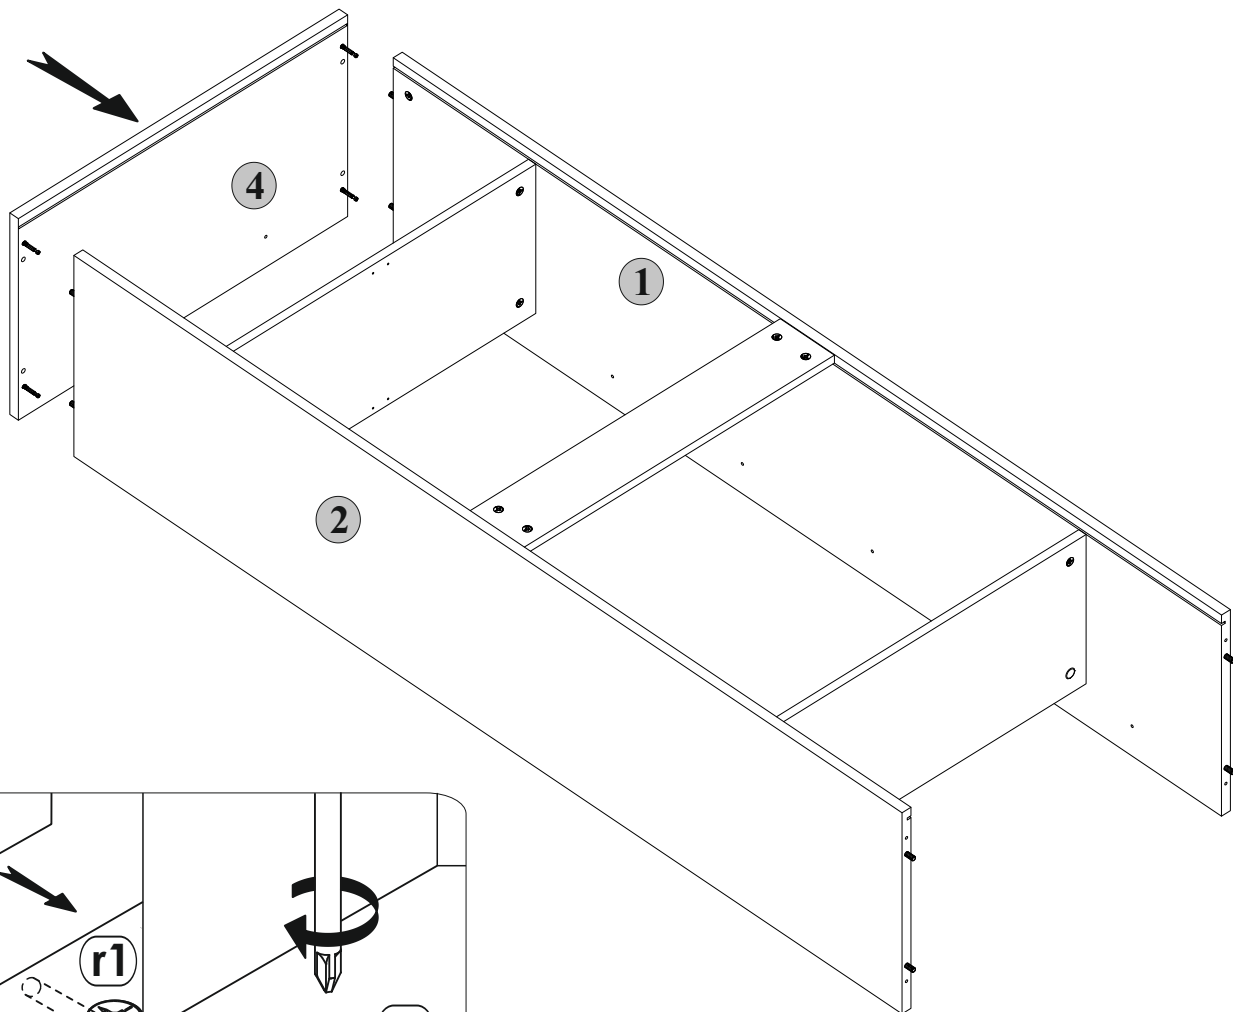


5

8

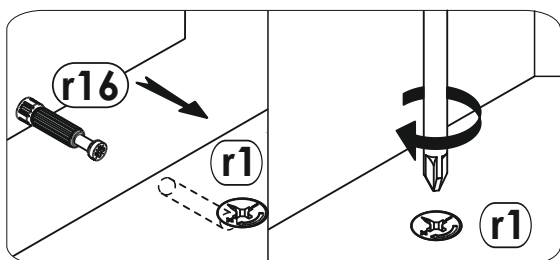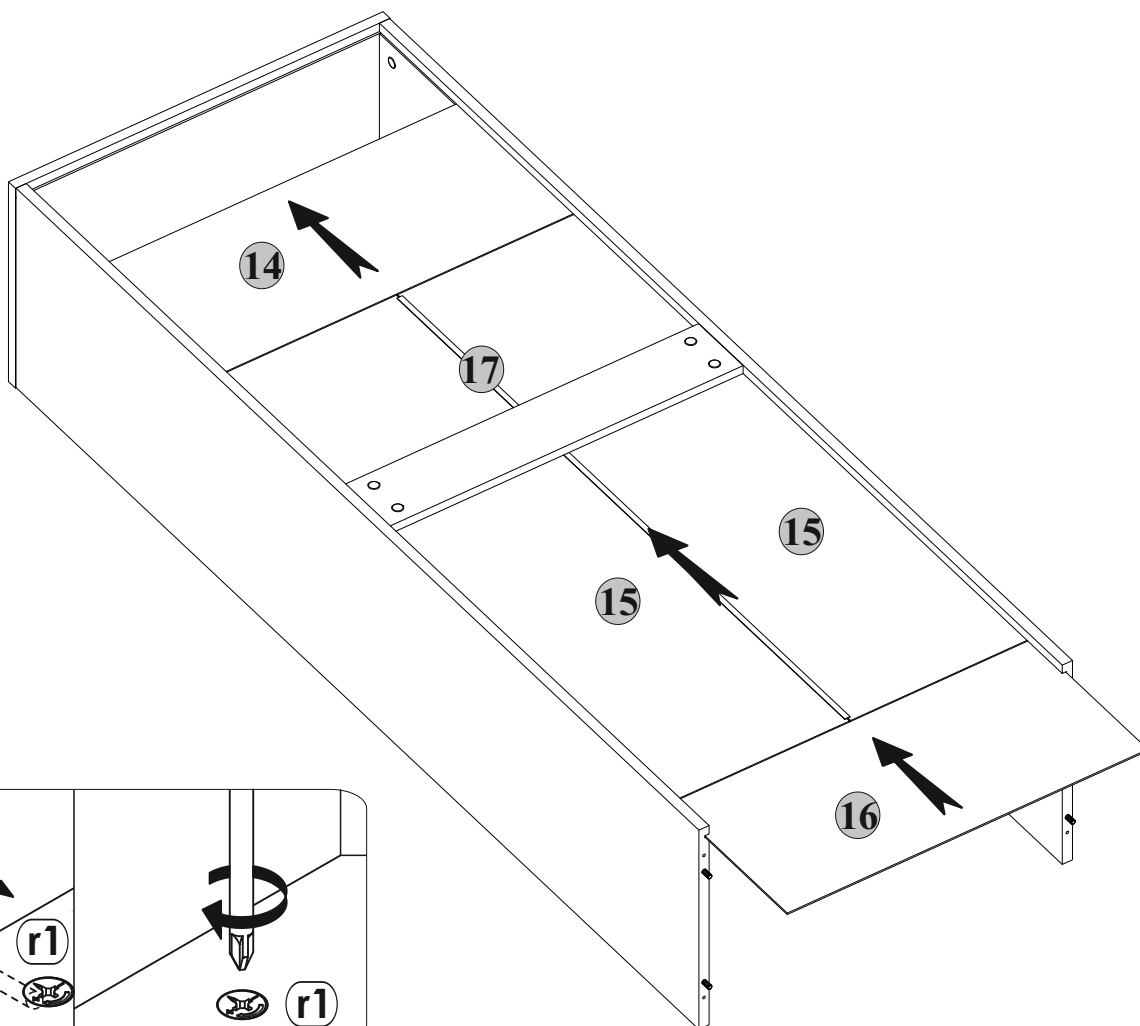

9

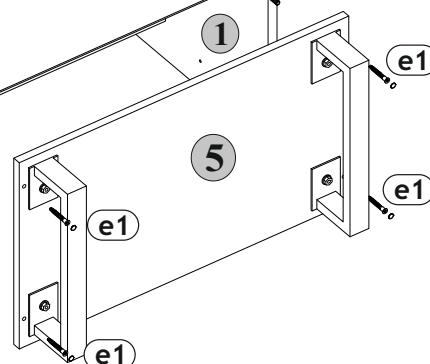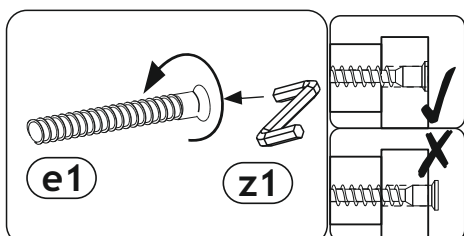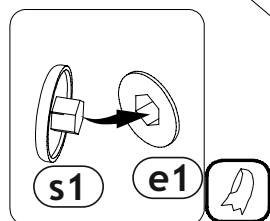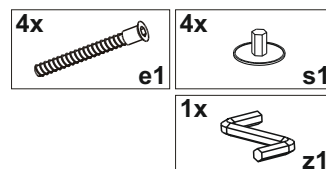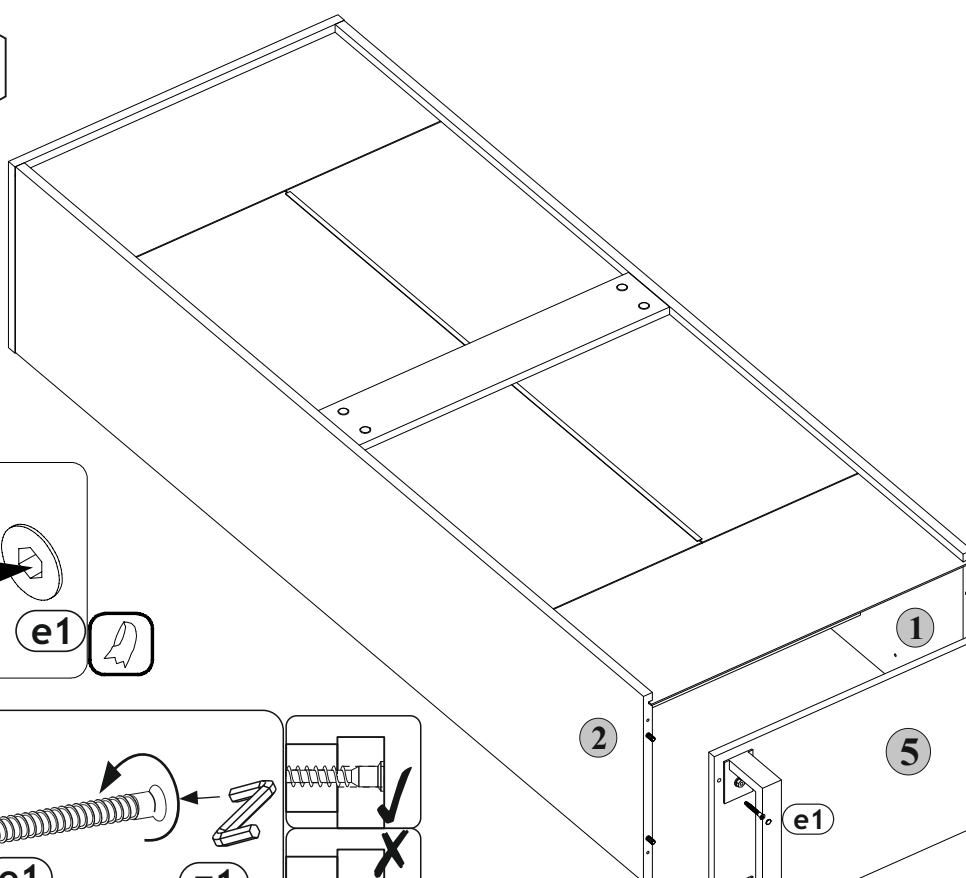







6




10

18x
I2

8x
I9

8x
φ3.5x16 mm
p4

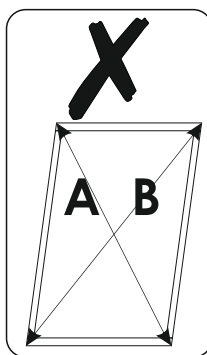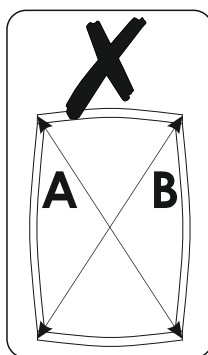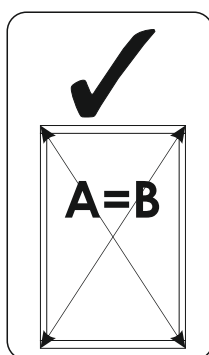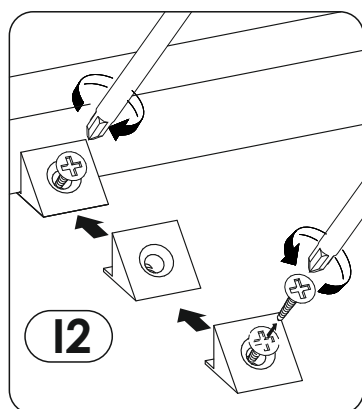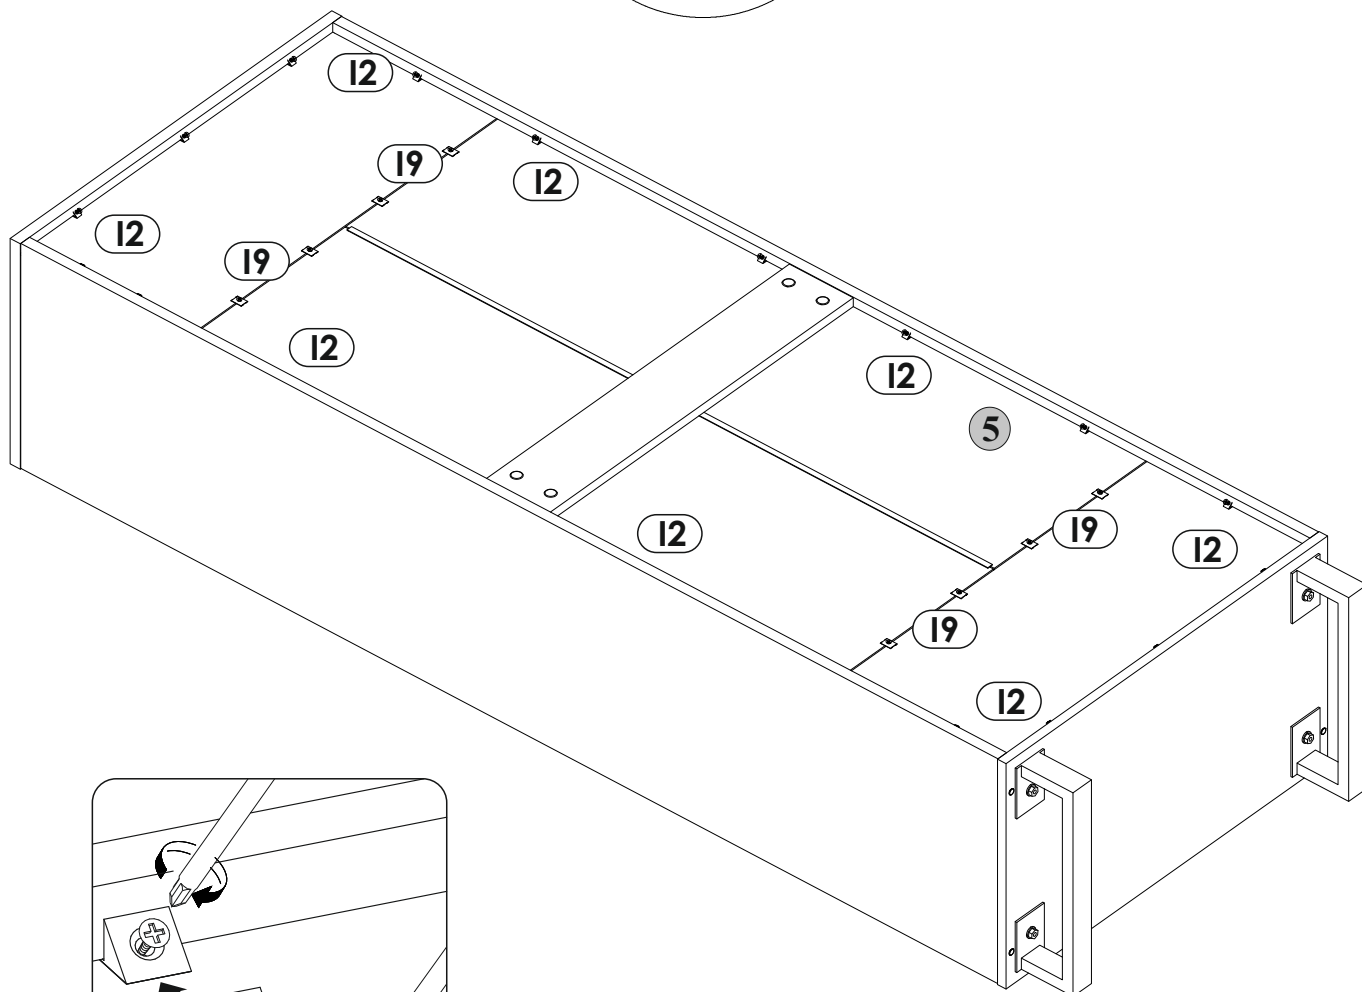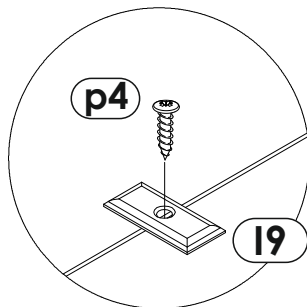

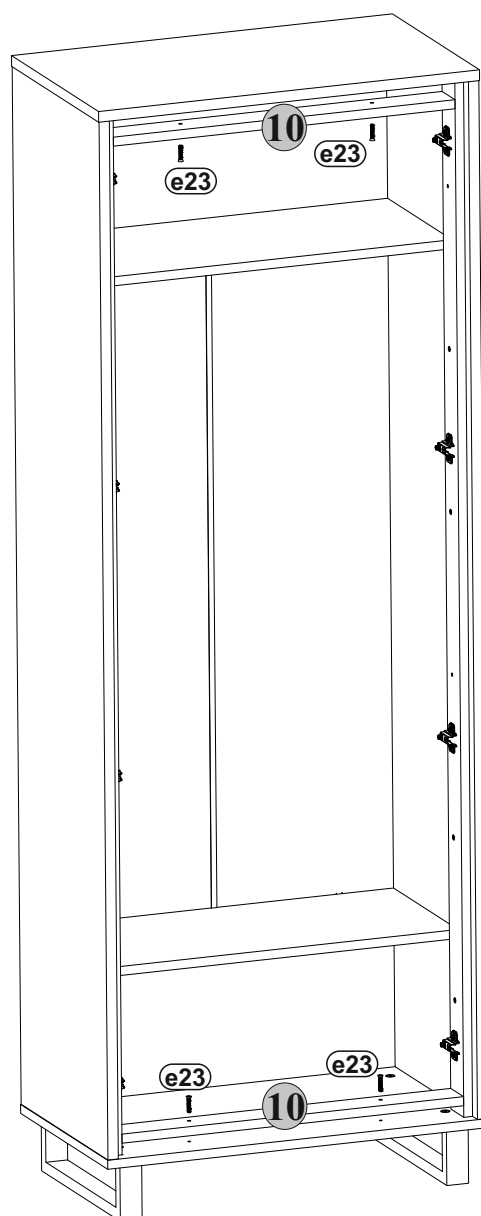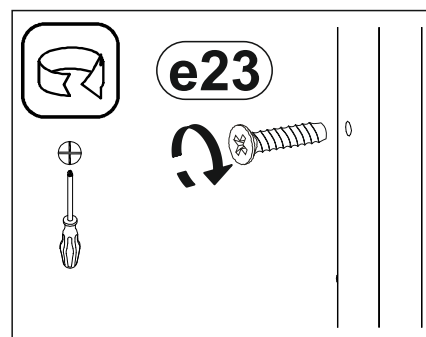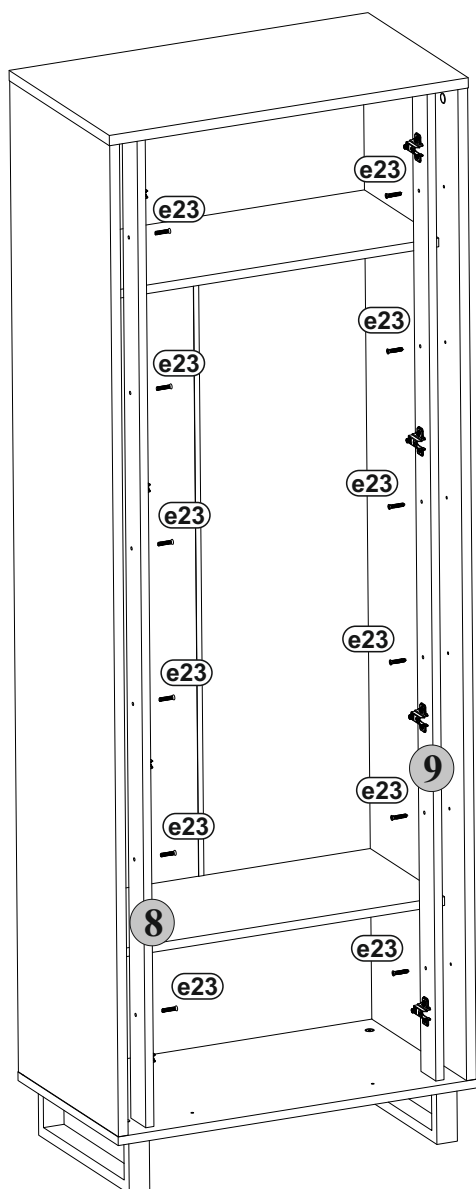

12

2x
p42














1x
c105

1x
t17

1x
n14

2x
φ3.5x16 mm
p1

1x
m6

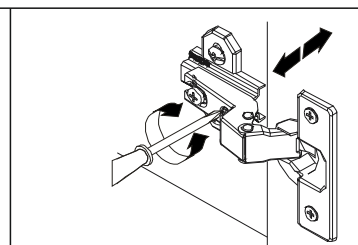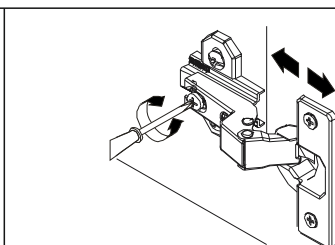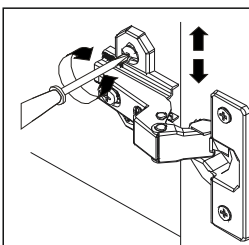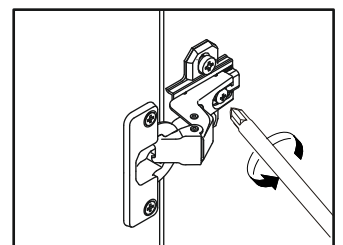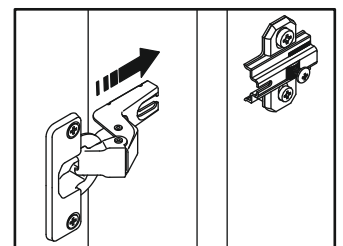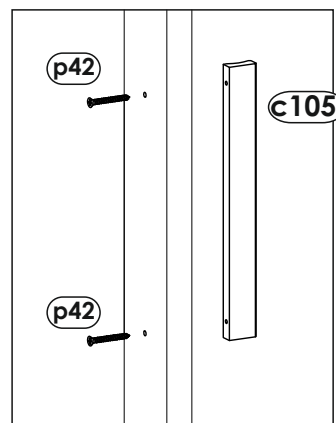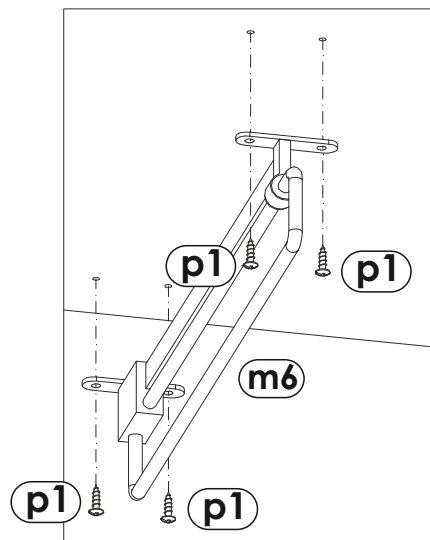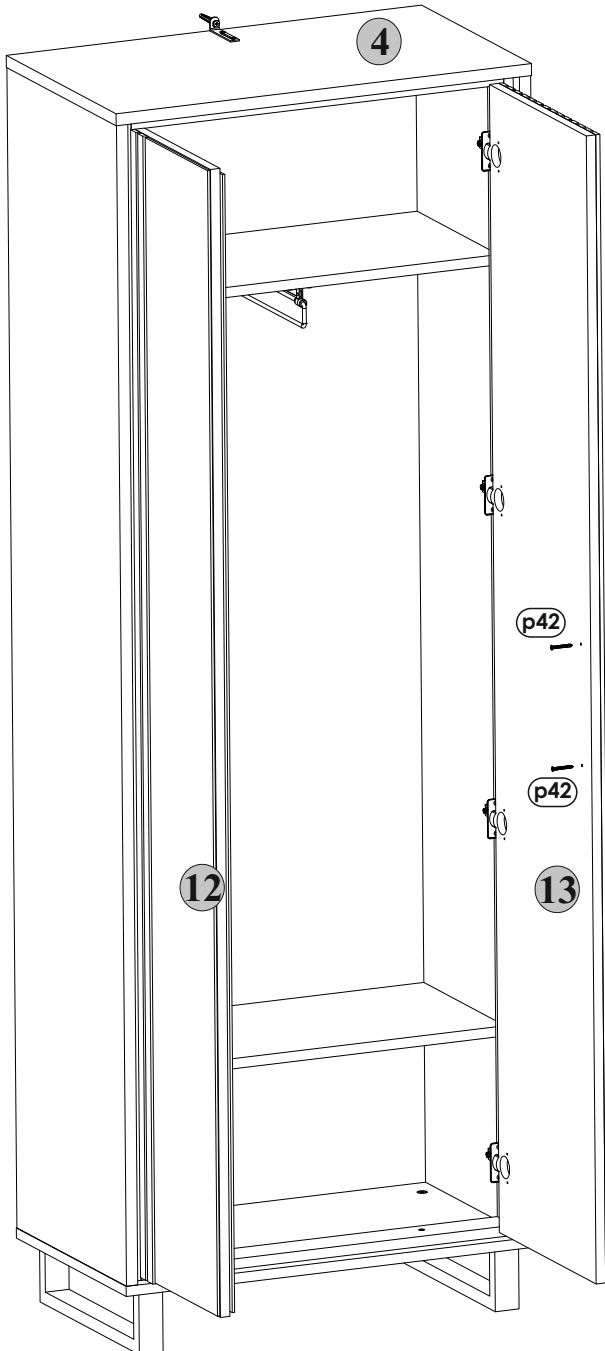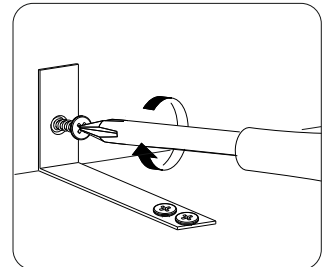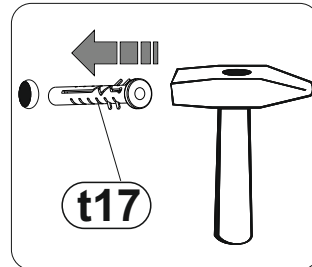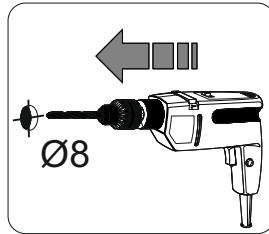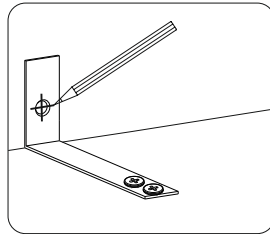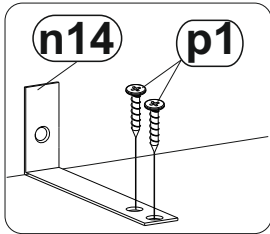

9