
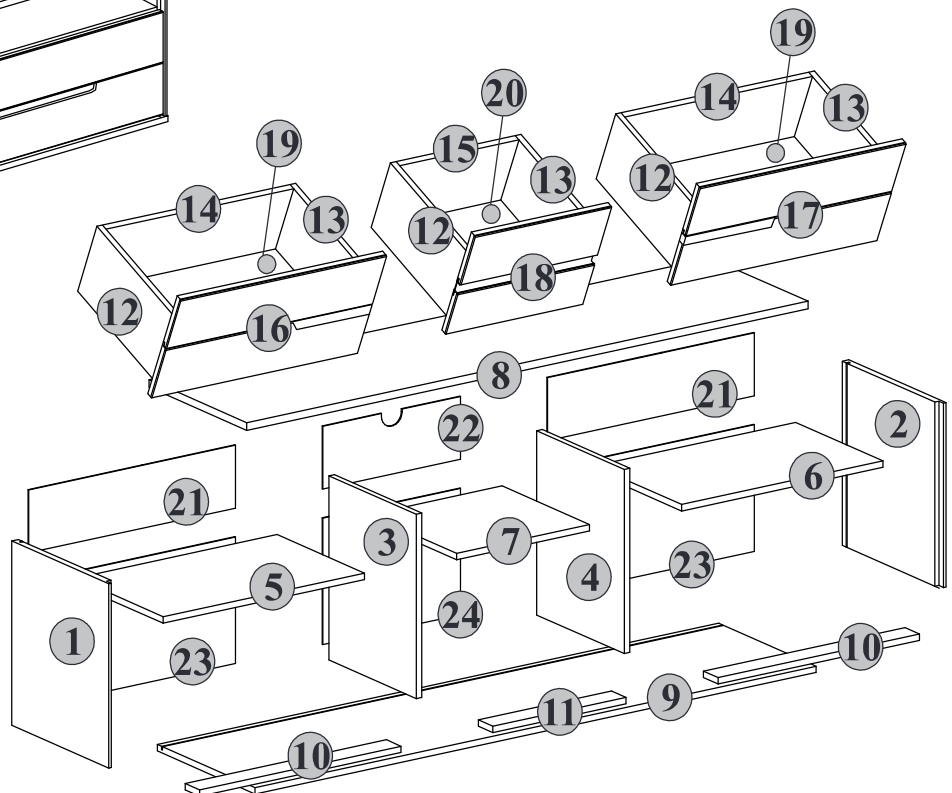
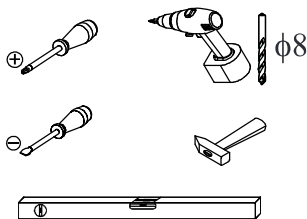
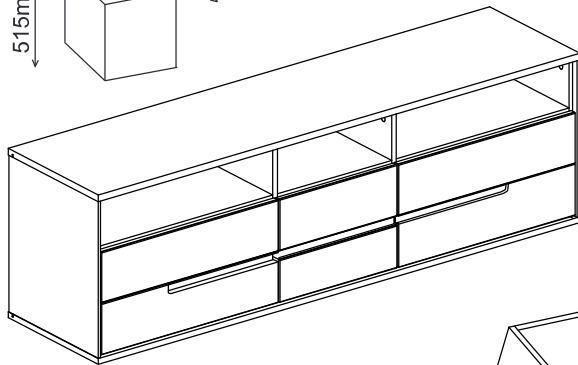




“3997”

versionsnummer: 19.04.2021


Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.

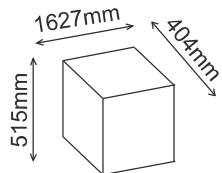


B4

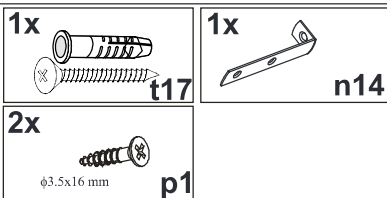


3x

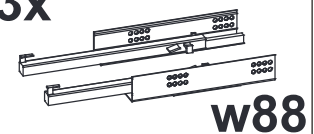


B1





















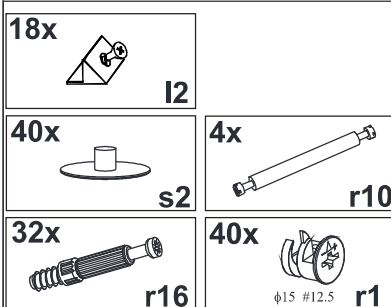


B2

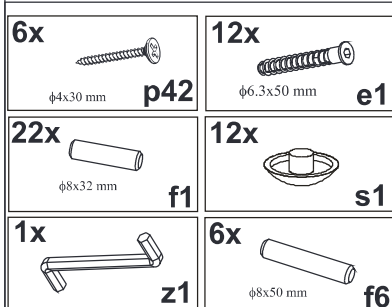

B3

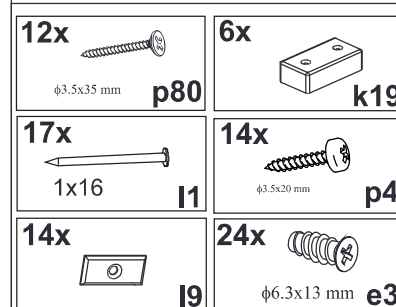

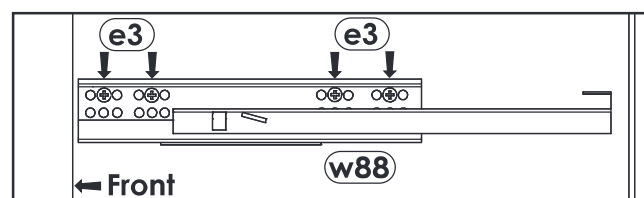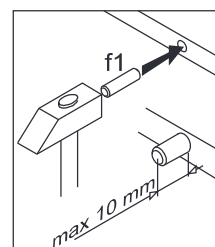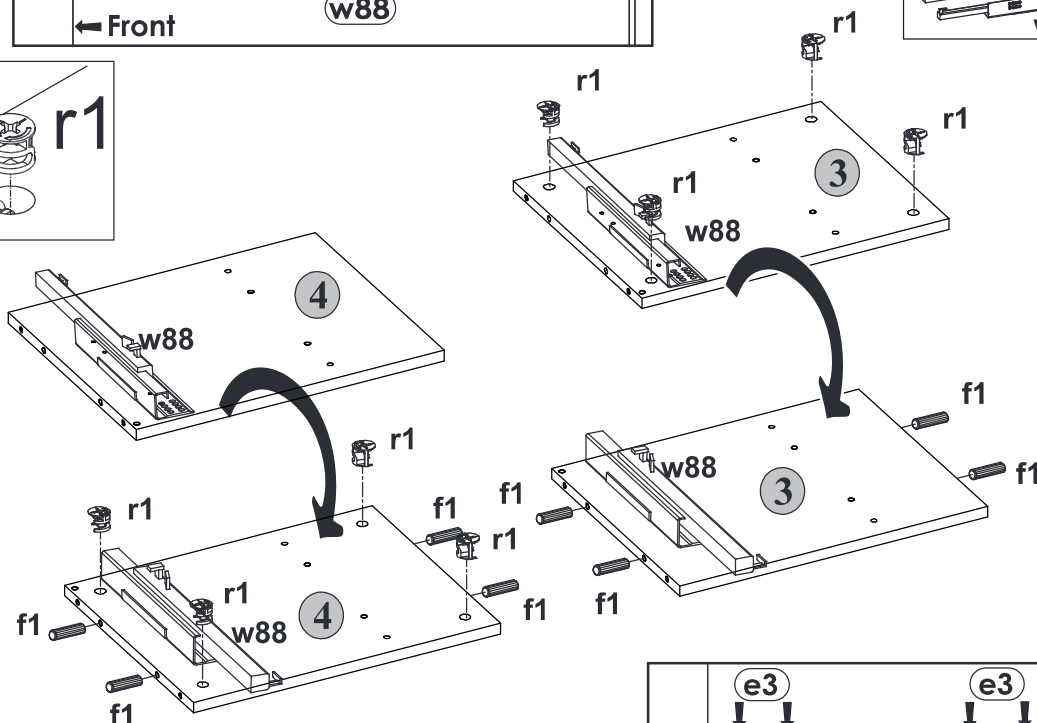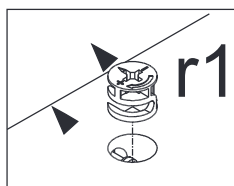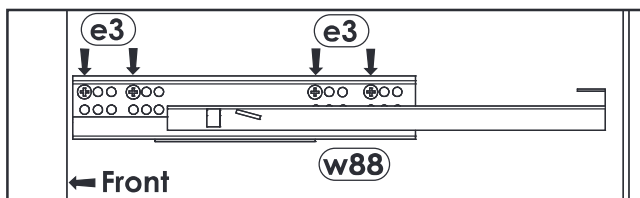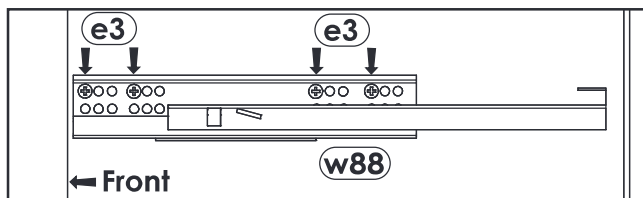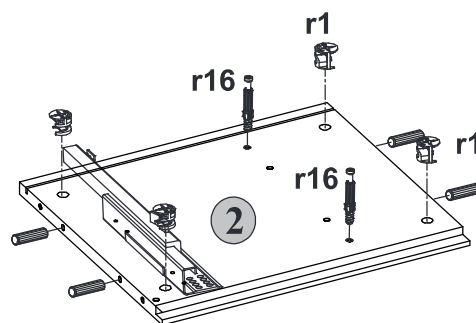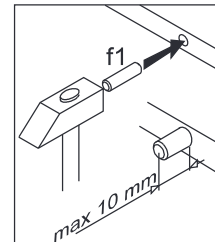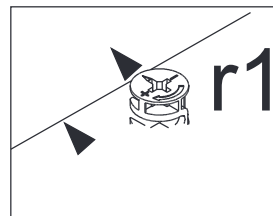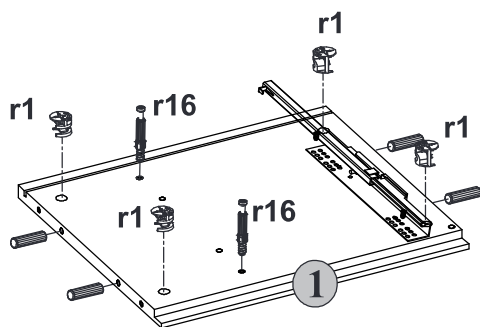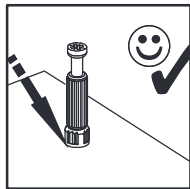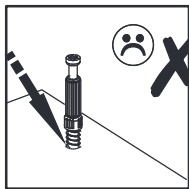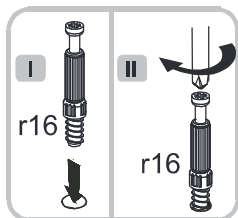

3

6x




f1

12x














r1

8x









r16

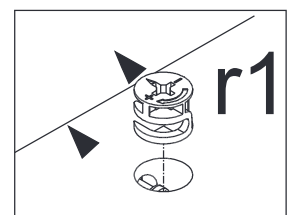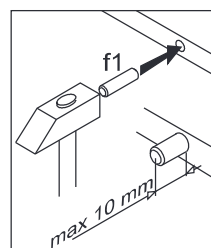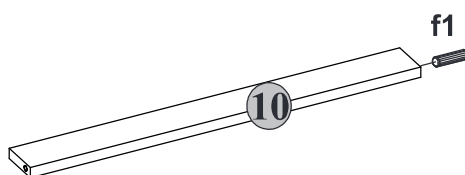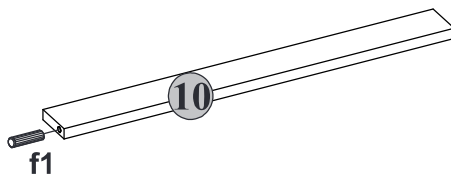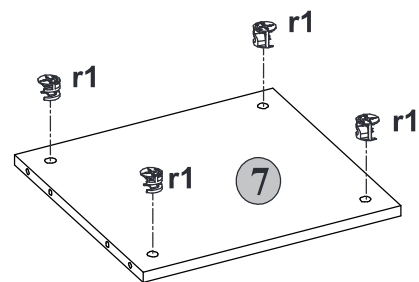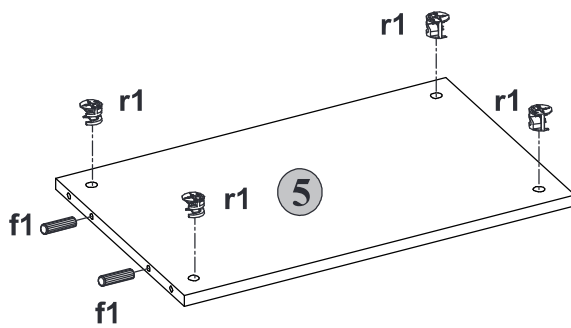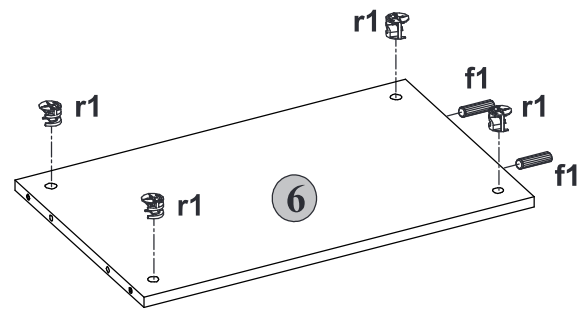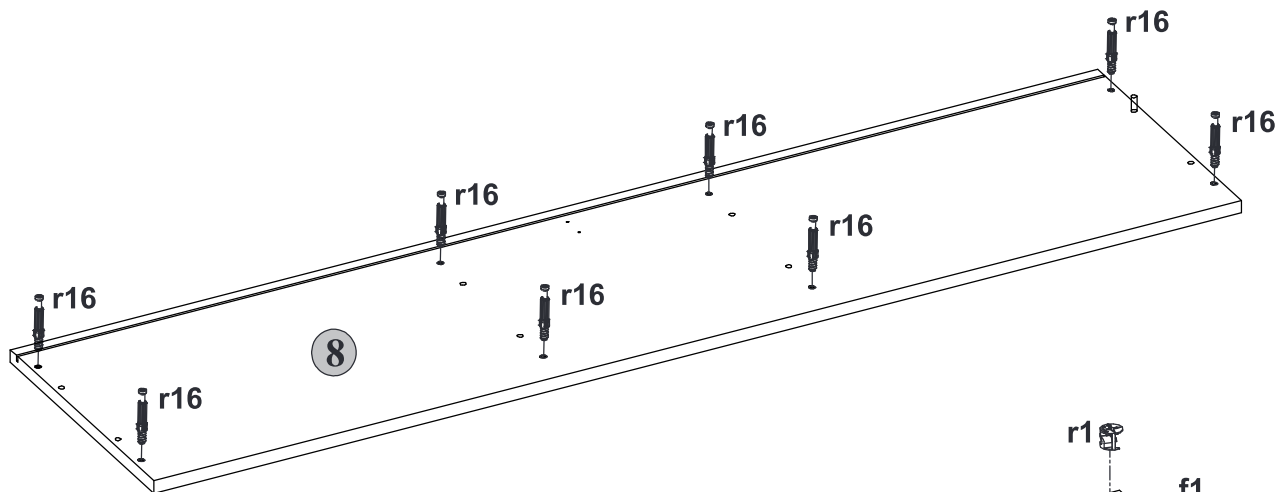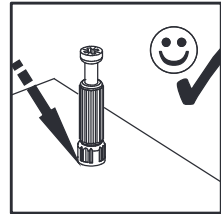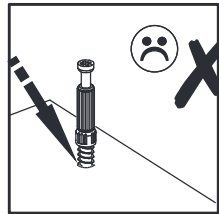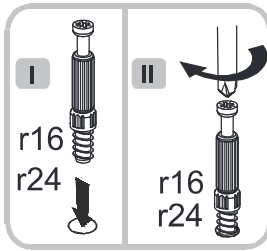


3

4

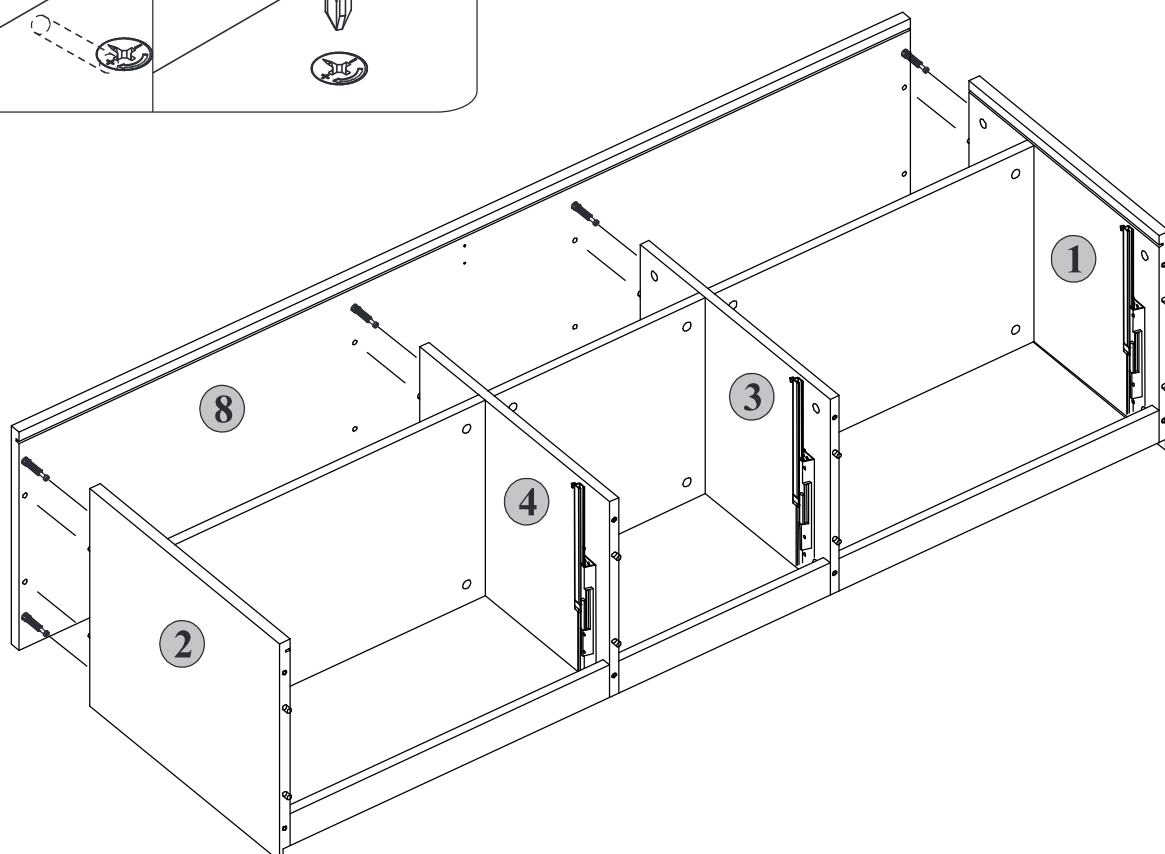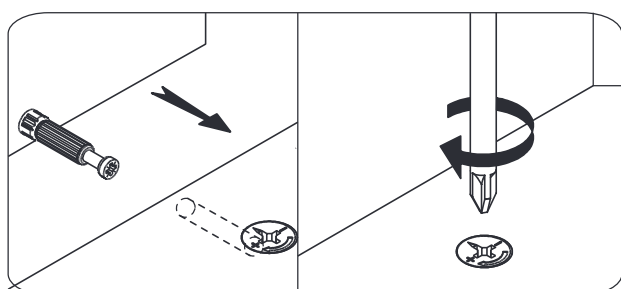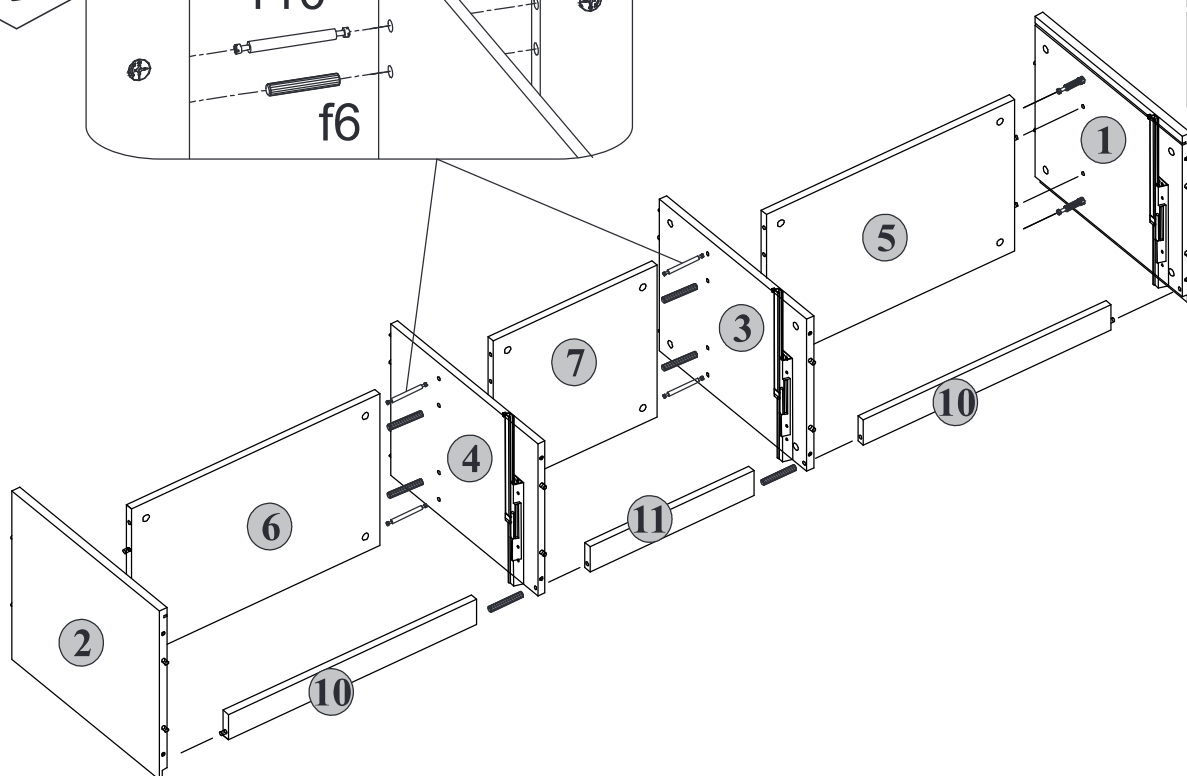
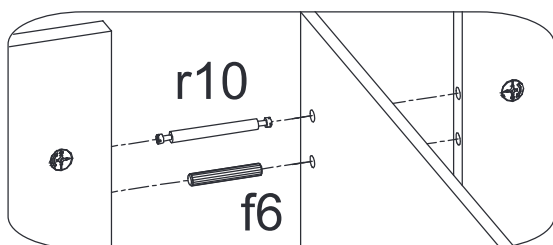


4

5


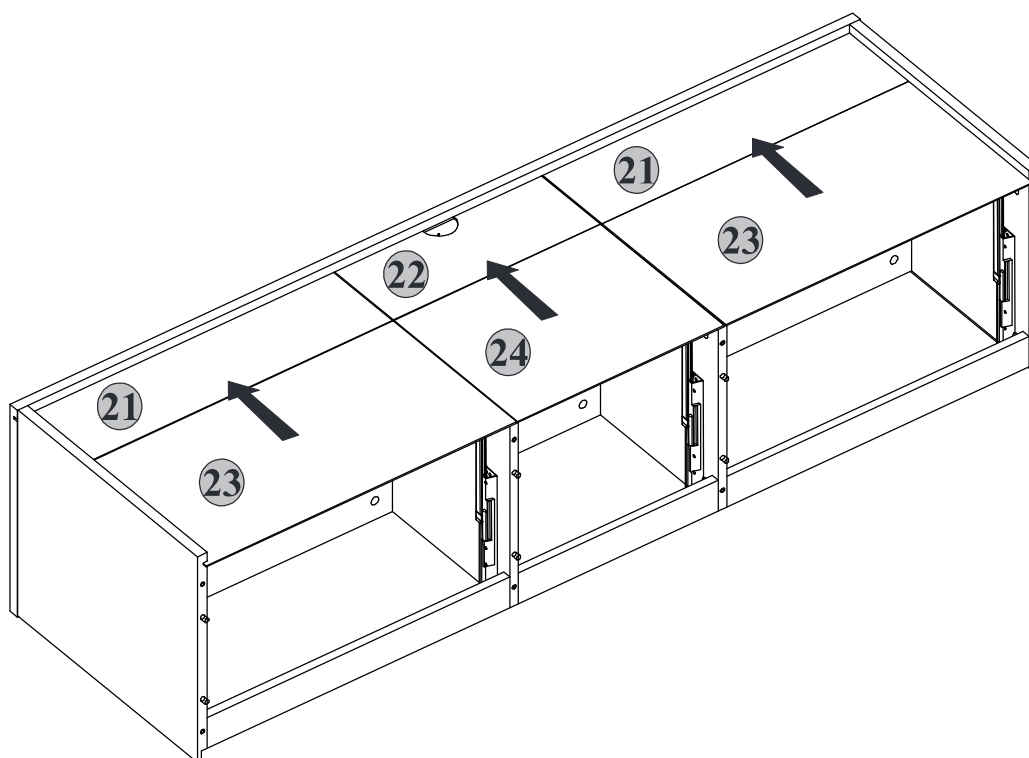


6


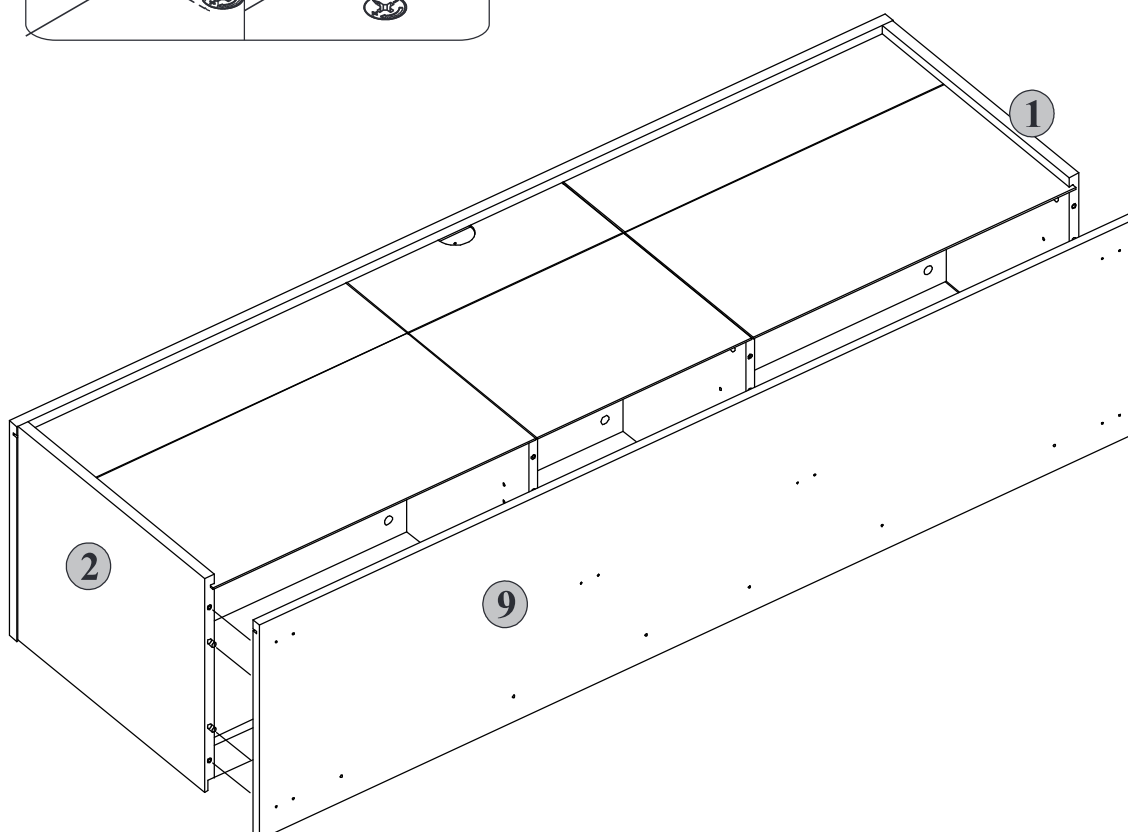
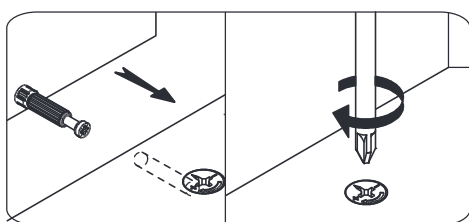


5

7







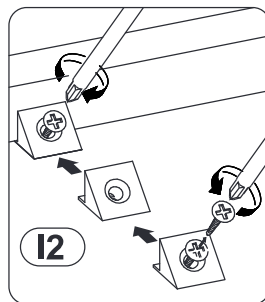
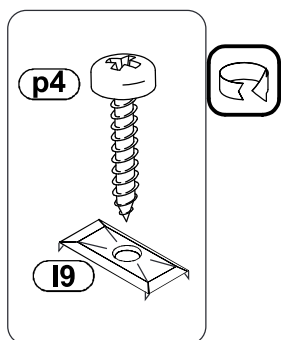


6x  k19	12x  I2
6x  φ4x30 mm p42	14x  3,5x20 p4
12x  φ3,5x35 mm p80	14x  I9

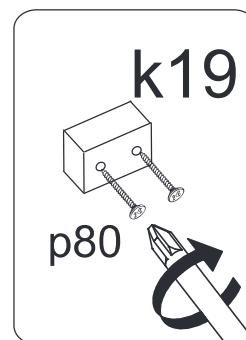
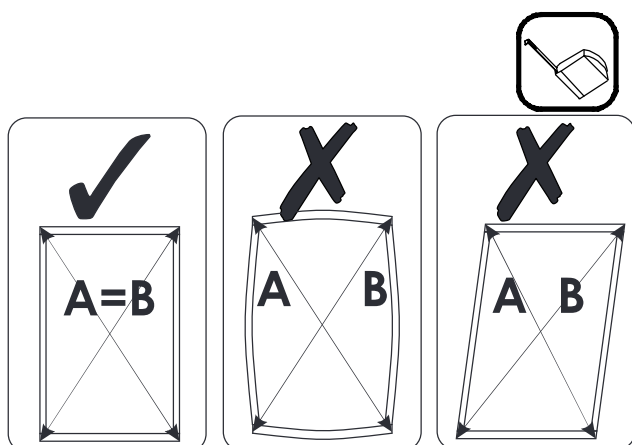
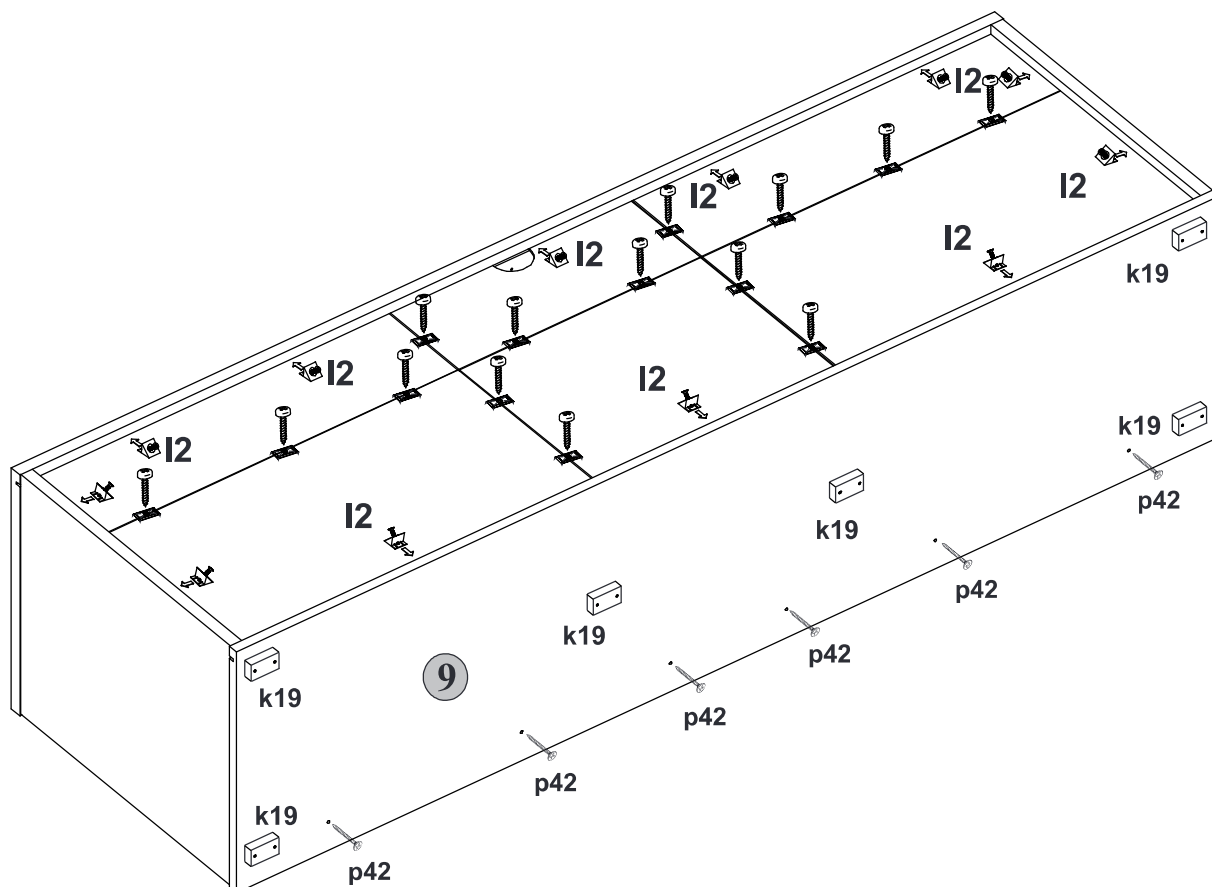


6

8

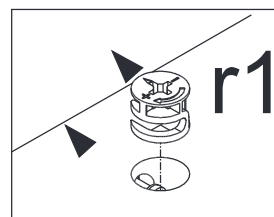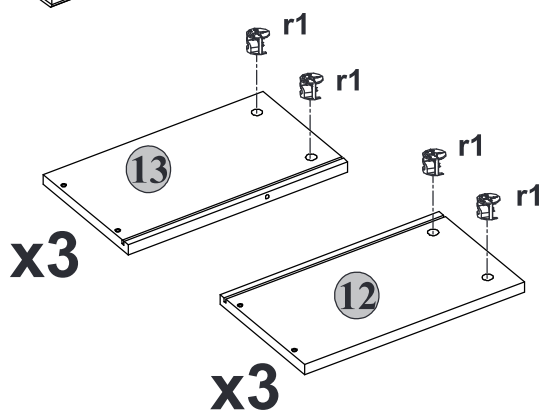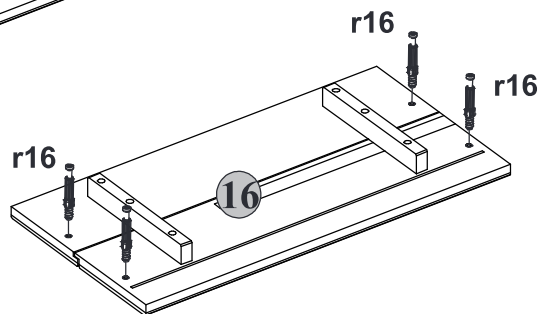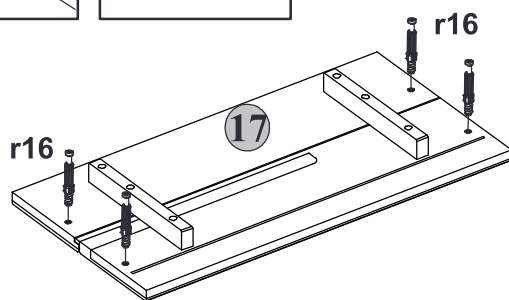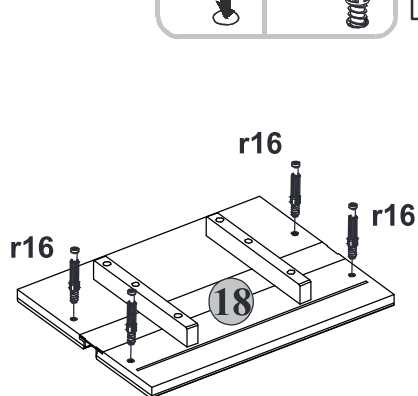
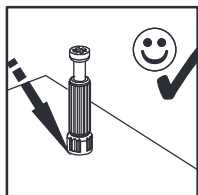
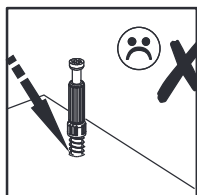
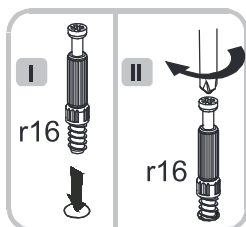


9

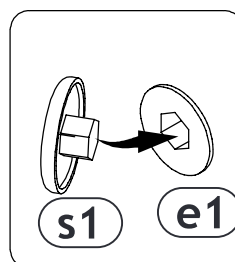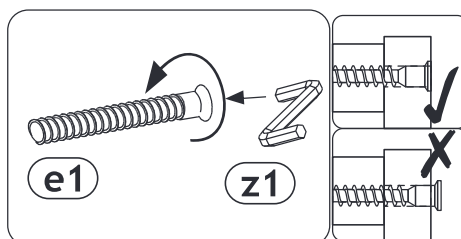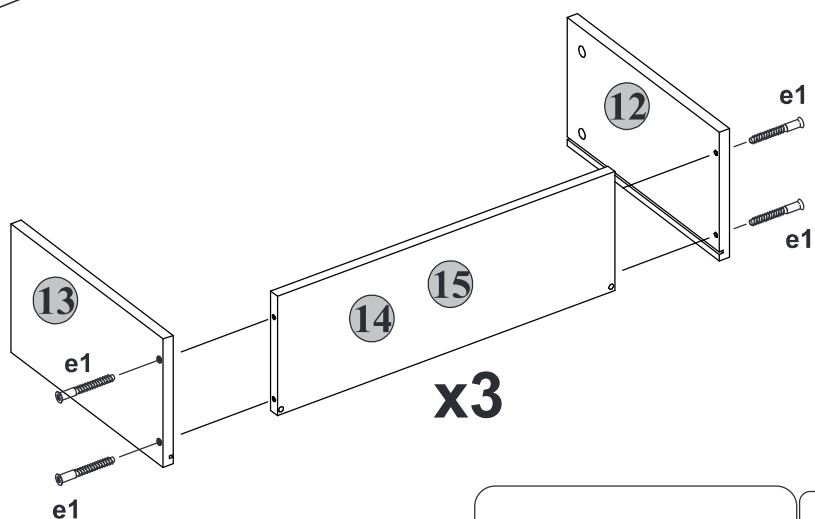

7


10

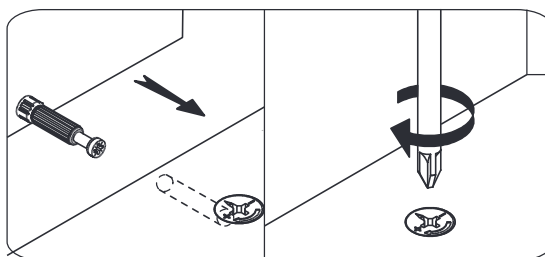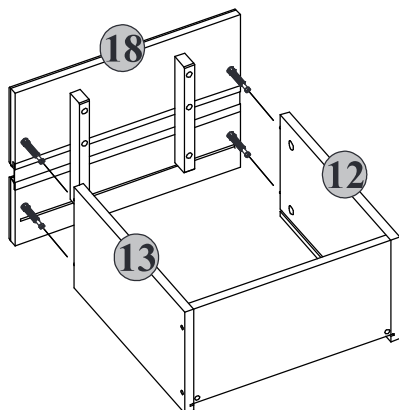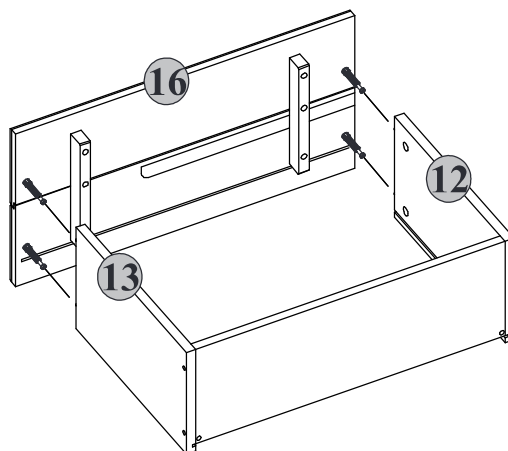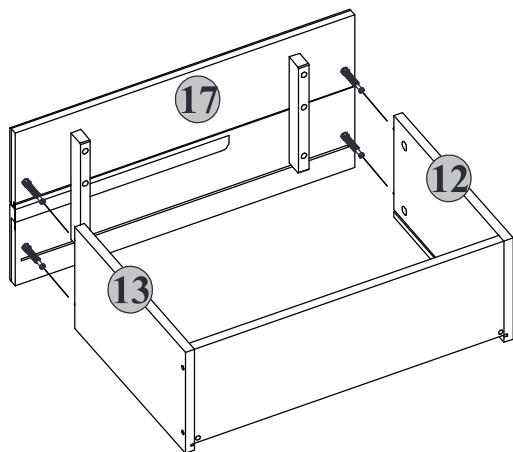


11

18x
I1

6x
I2

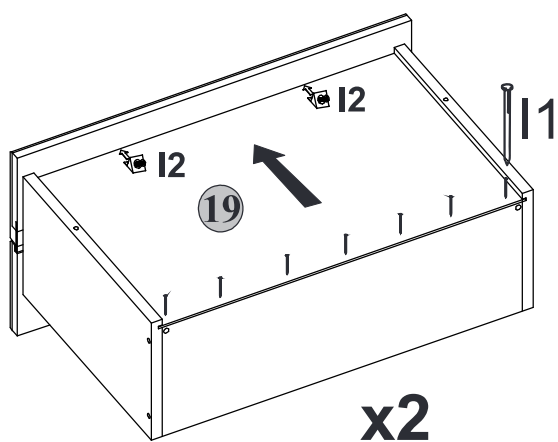

x2

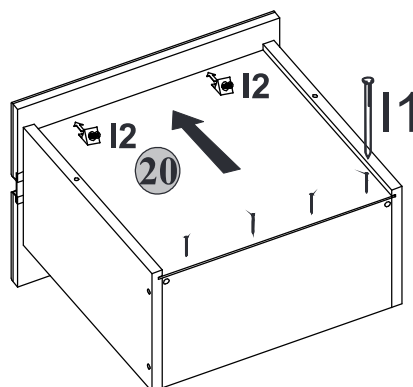

12

