


MONTAGEANLEITUNG



LASSE 2F.REC/BK LASSE REC/BK.2F

11-12/2019


A

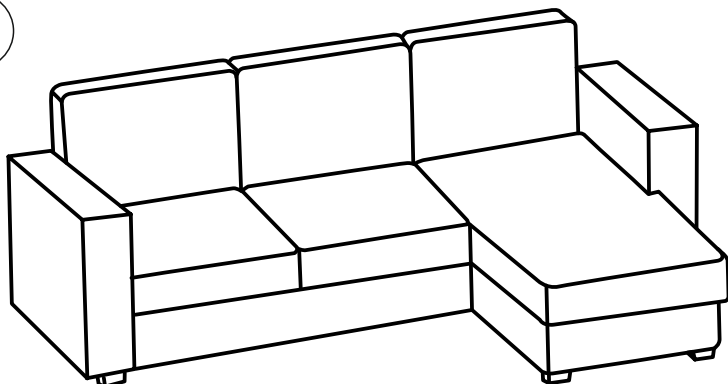

B

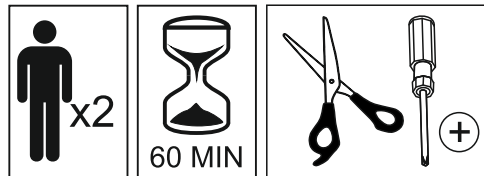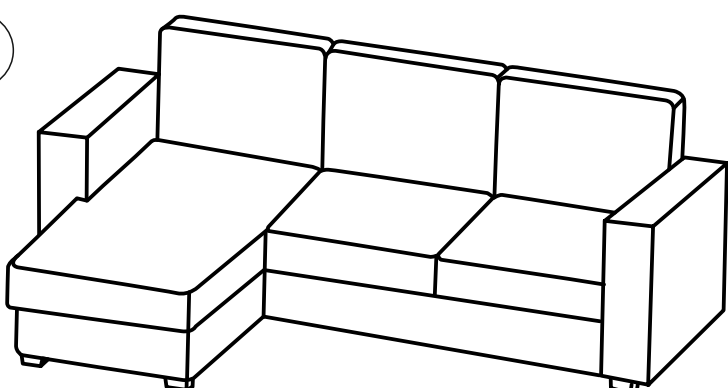


Vor der Montage bitte
beiliegende Informationen
beachten


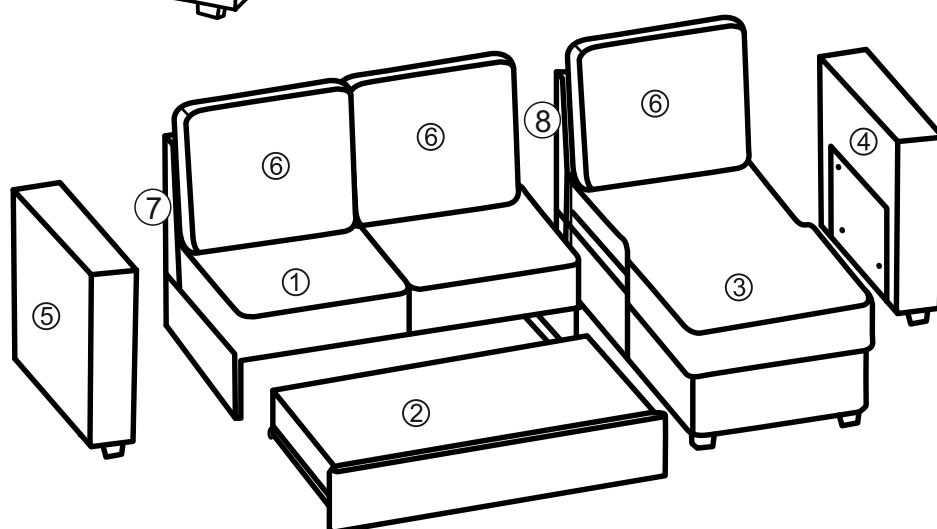


A		Ax10 M6x40	B		Bx10 M8	C		Cx4	D		Dx7 Felt
E		Ex7	F		Fx8 M6x20	G		Gx1 4mm	H		Hx3 5x40
I		Ix2	J		Jx16	K		Kx2	L		Lx4
M		Mx4 5x50									

1a,b




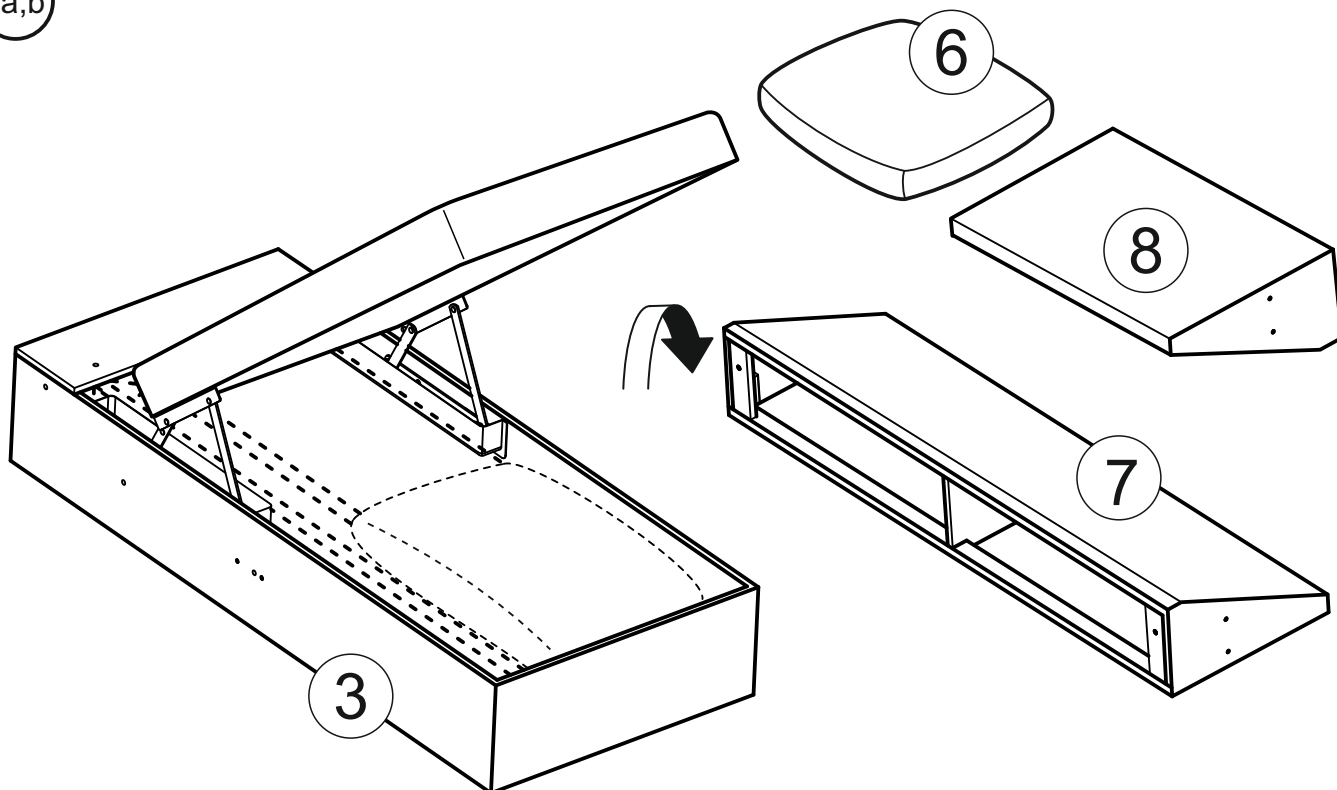


2a,b


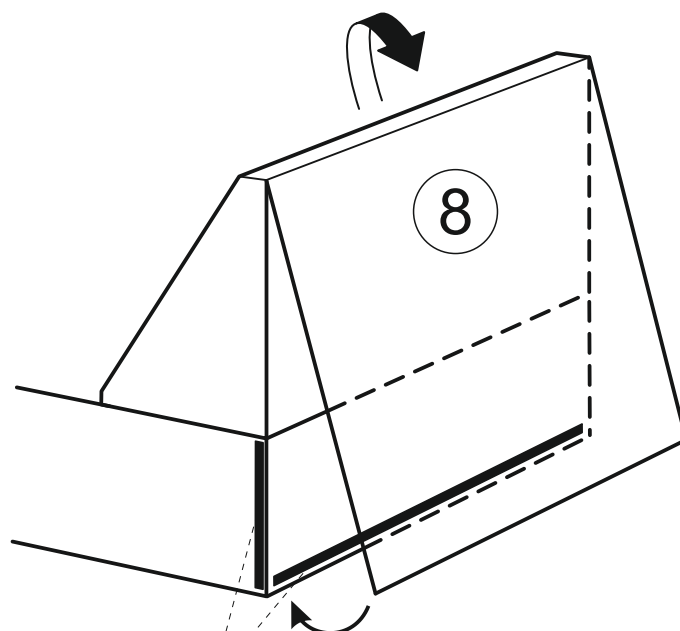
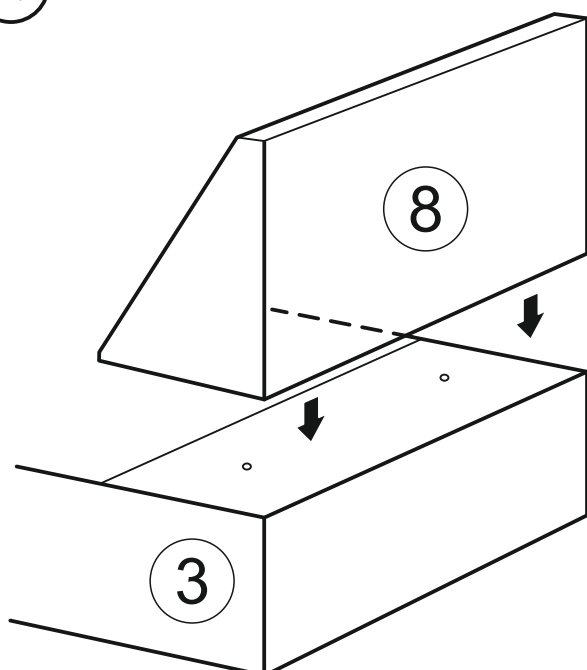


Velcro fastener
Klettband


3a,b

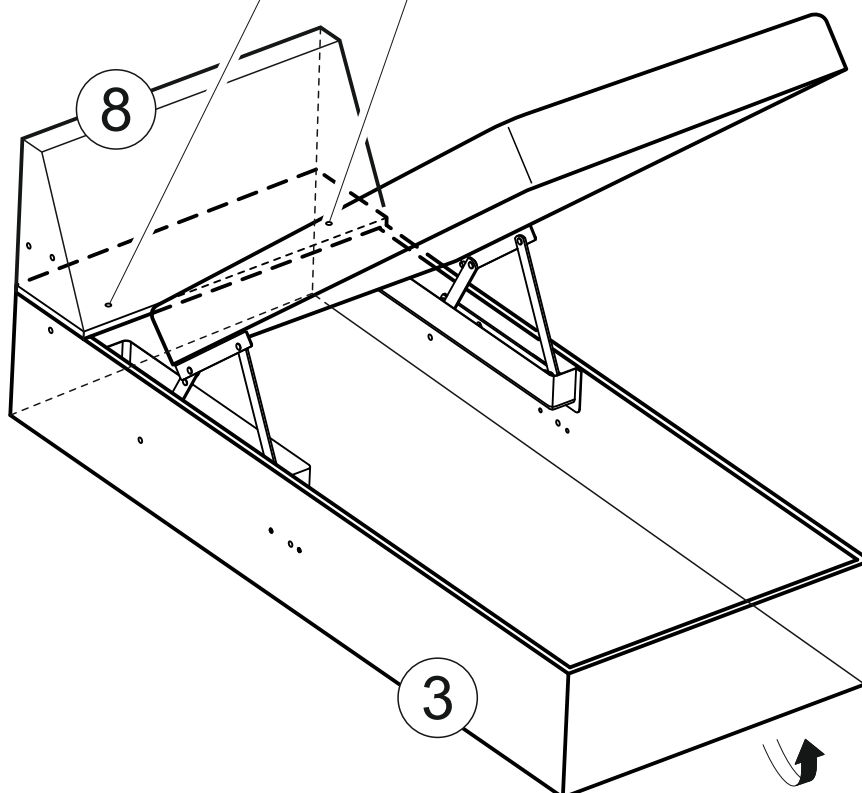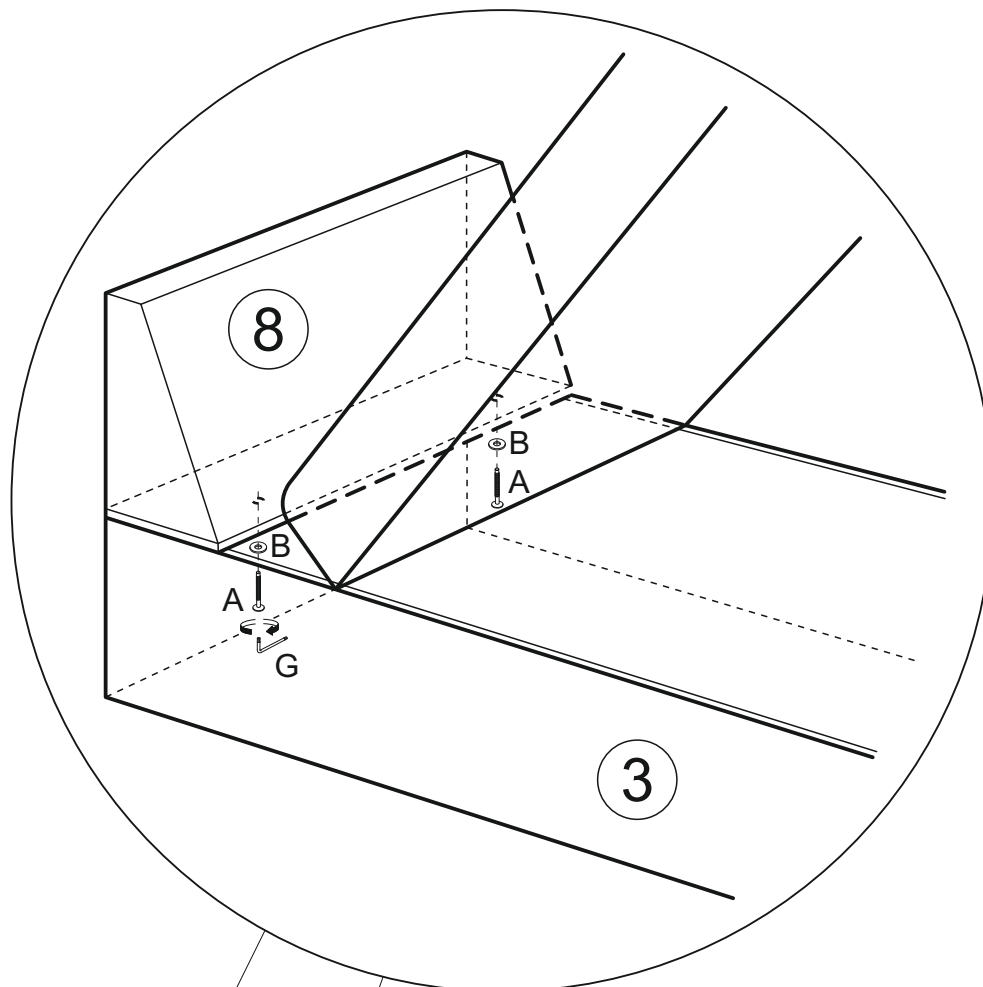




4a

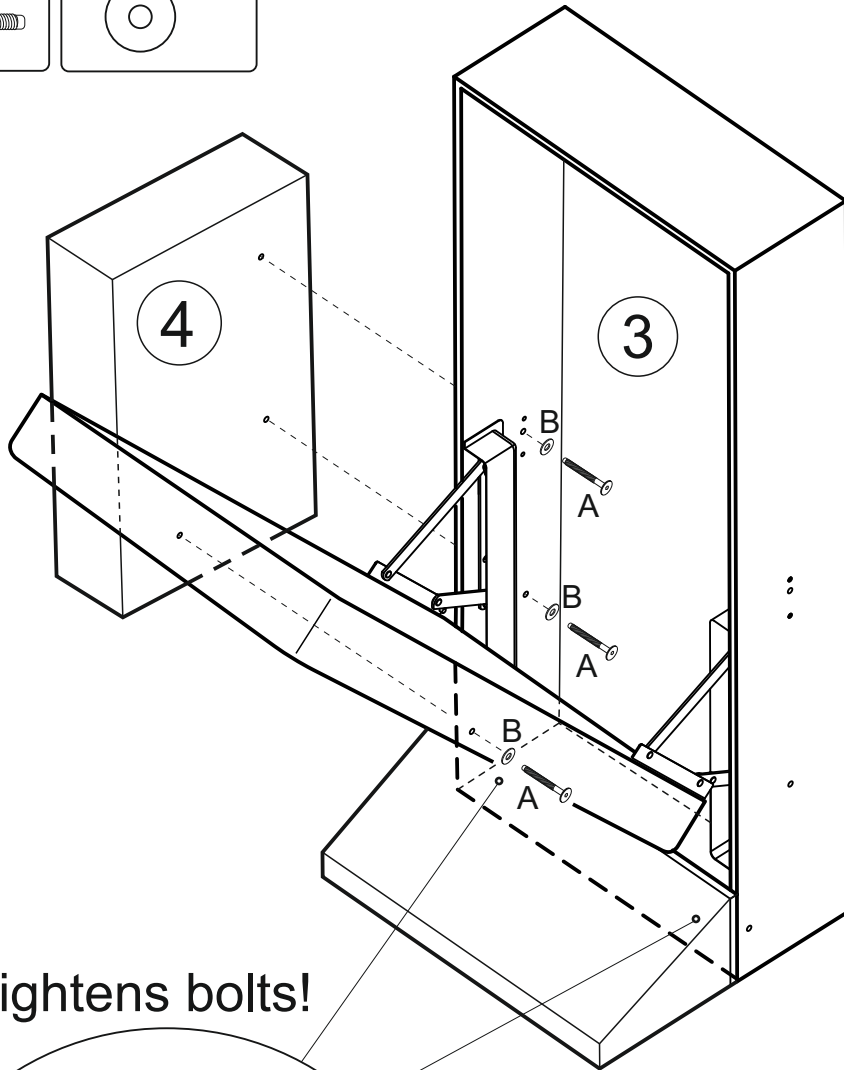


Tightens bolts!

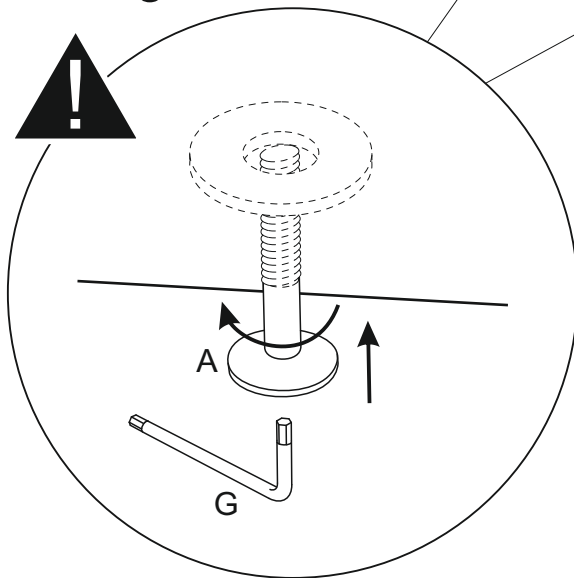




4b

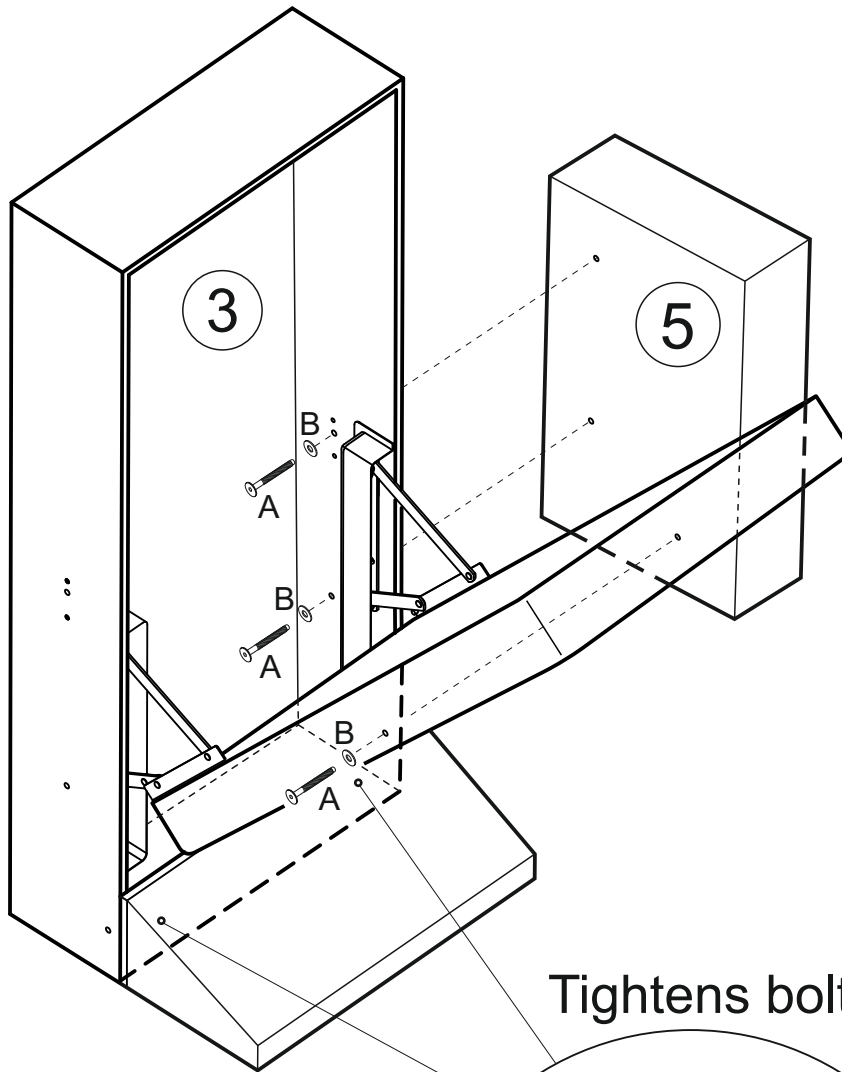





Tightens bolts!

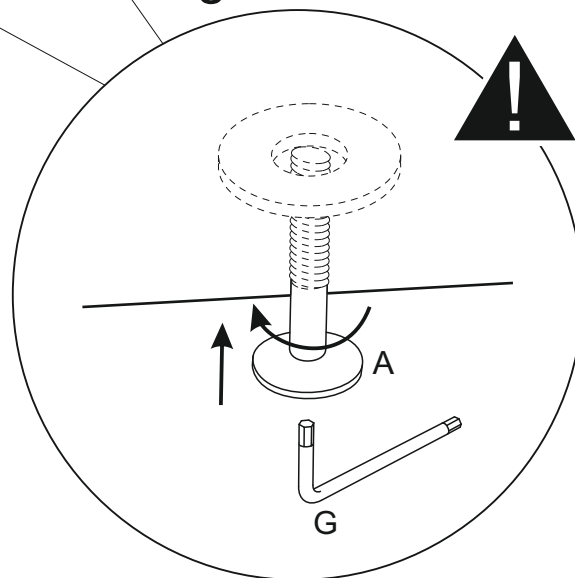






5a

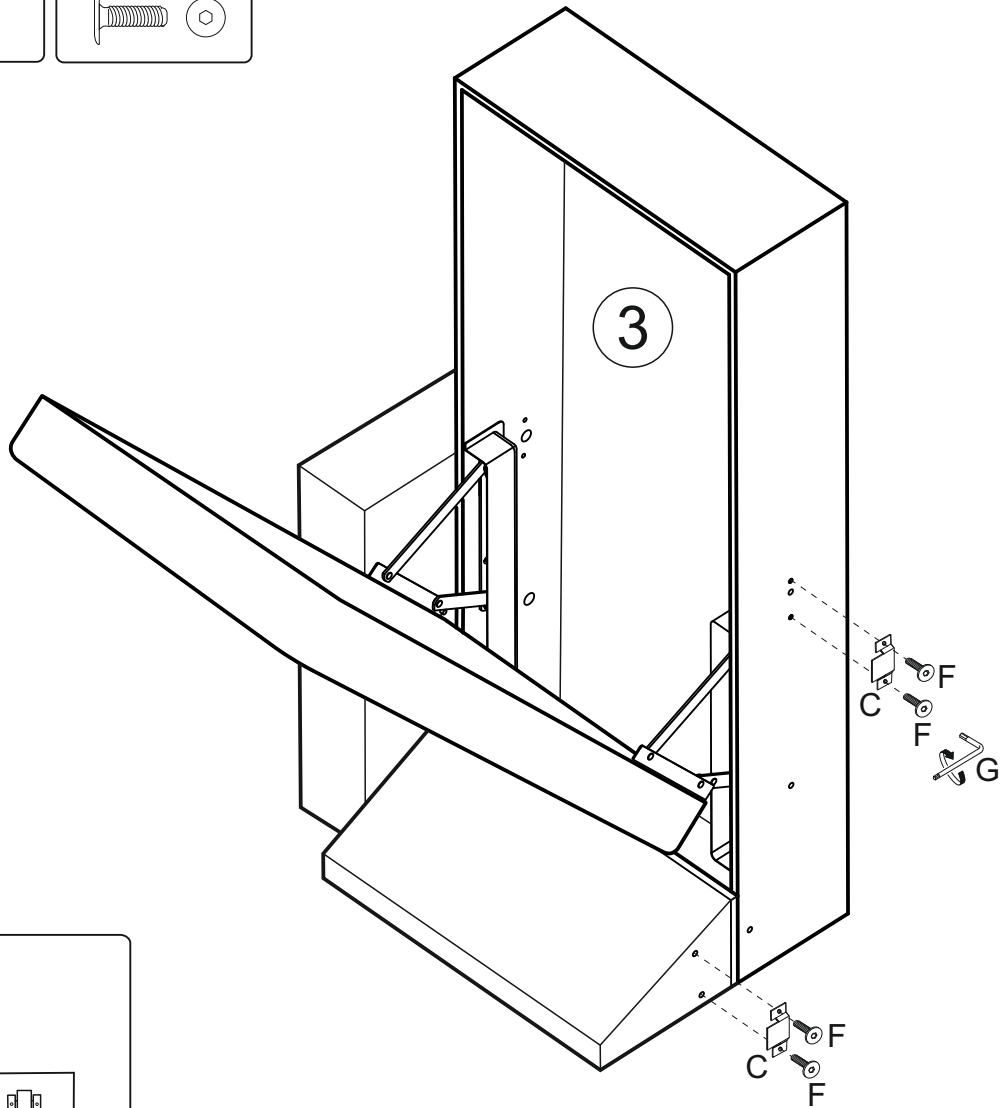






5b

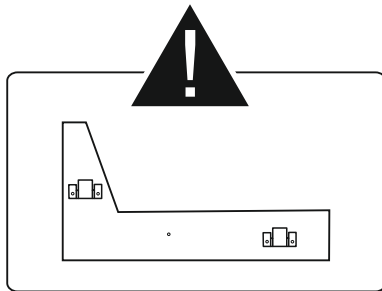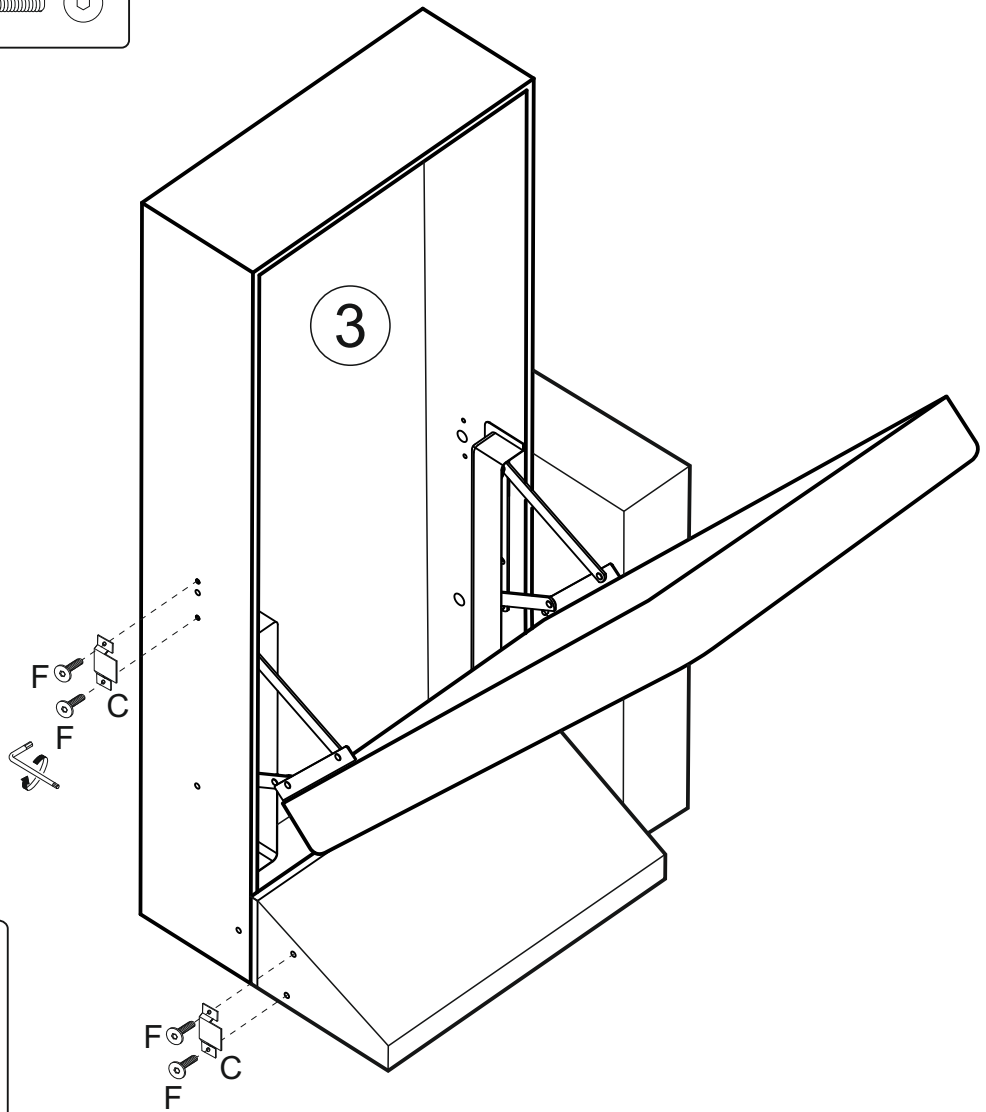



6a

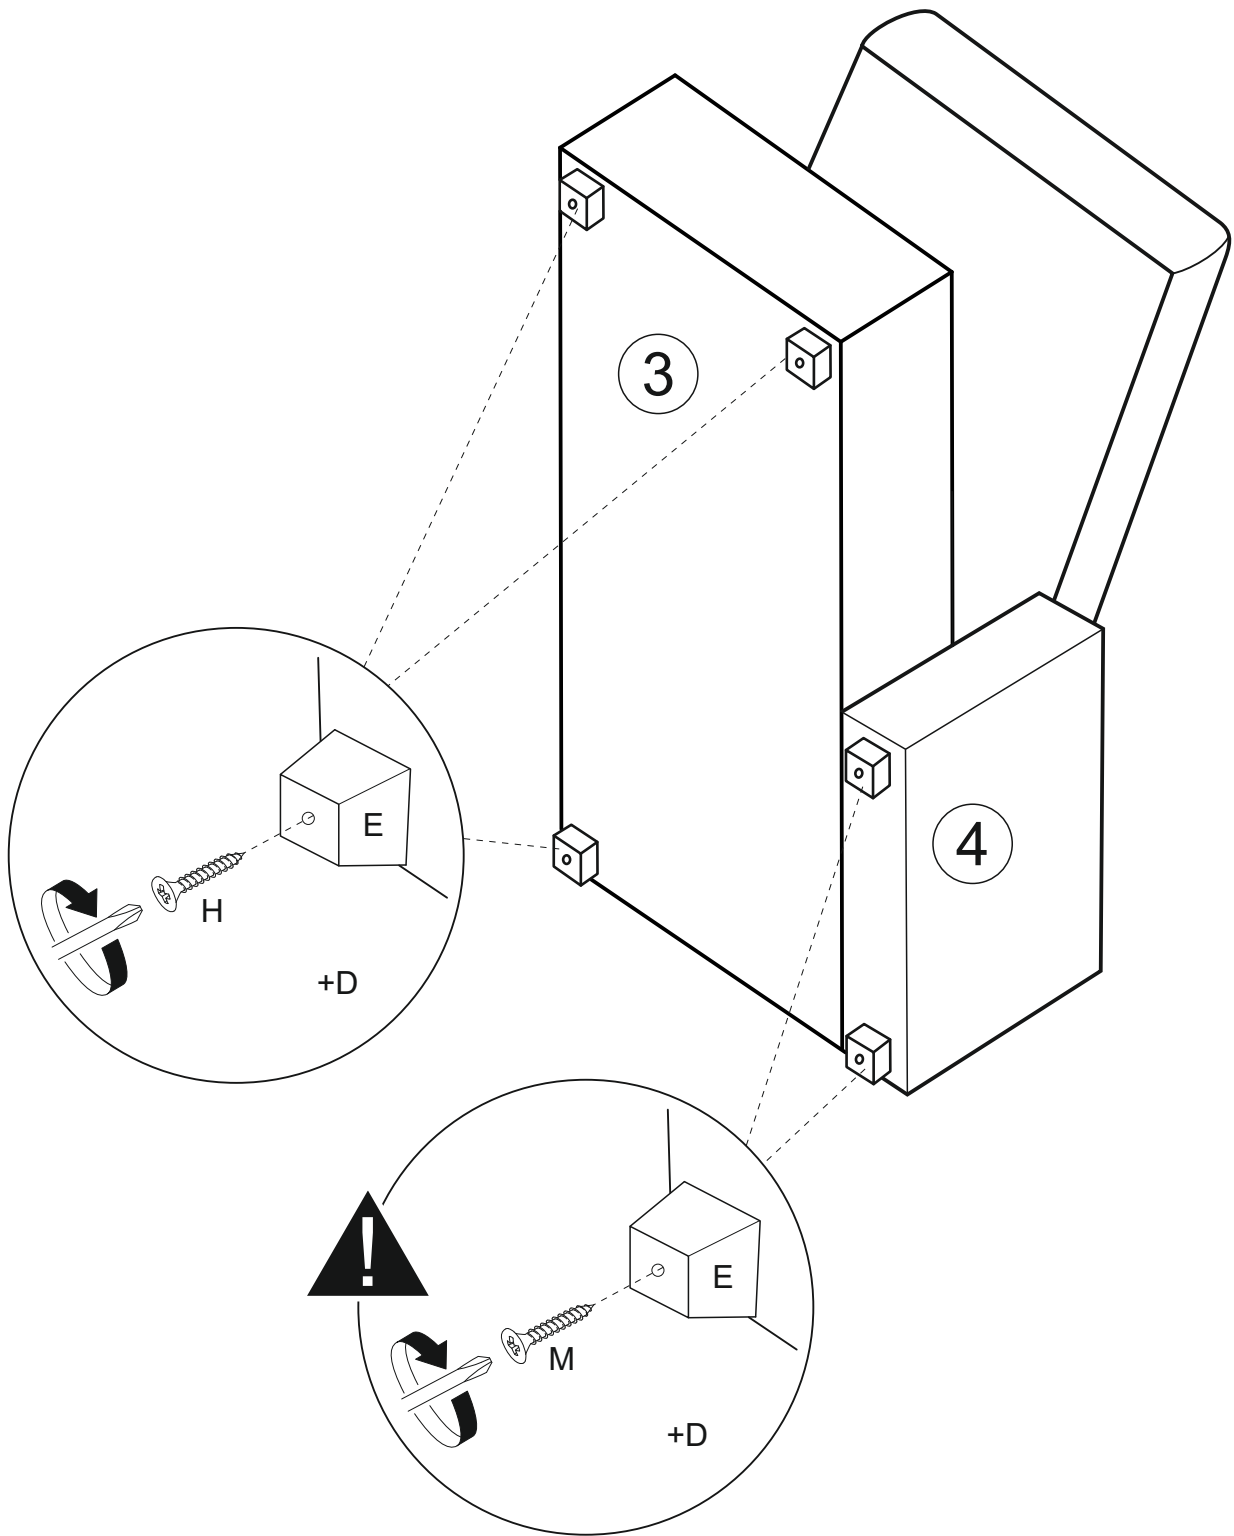





6b

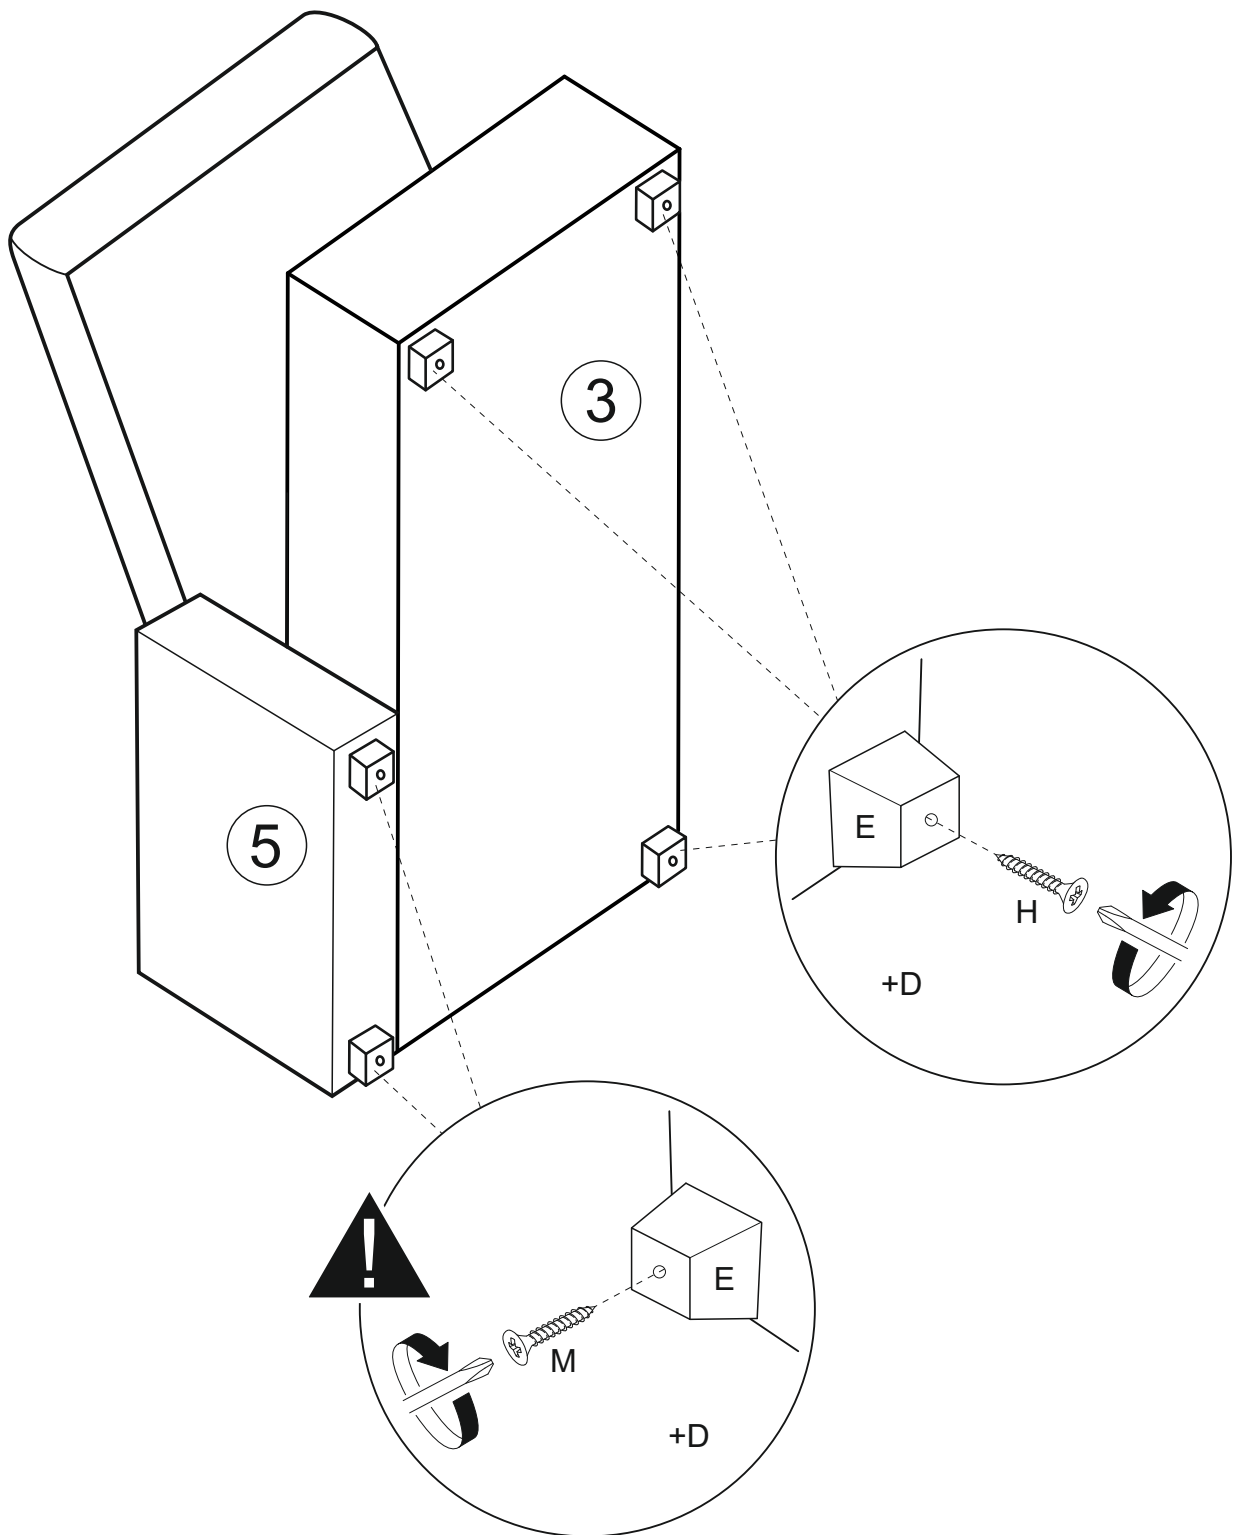





7a,b

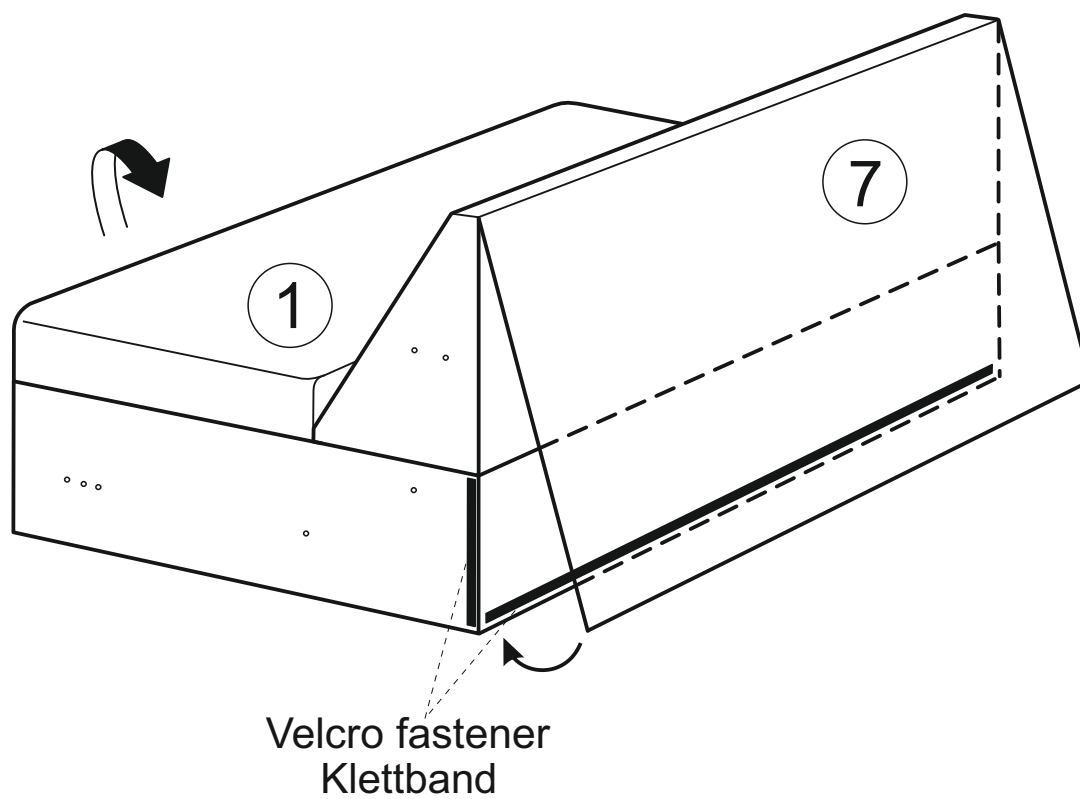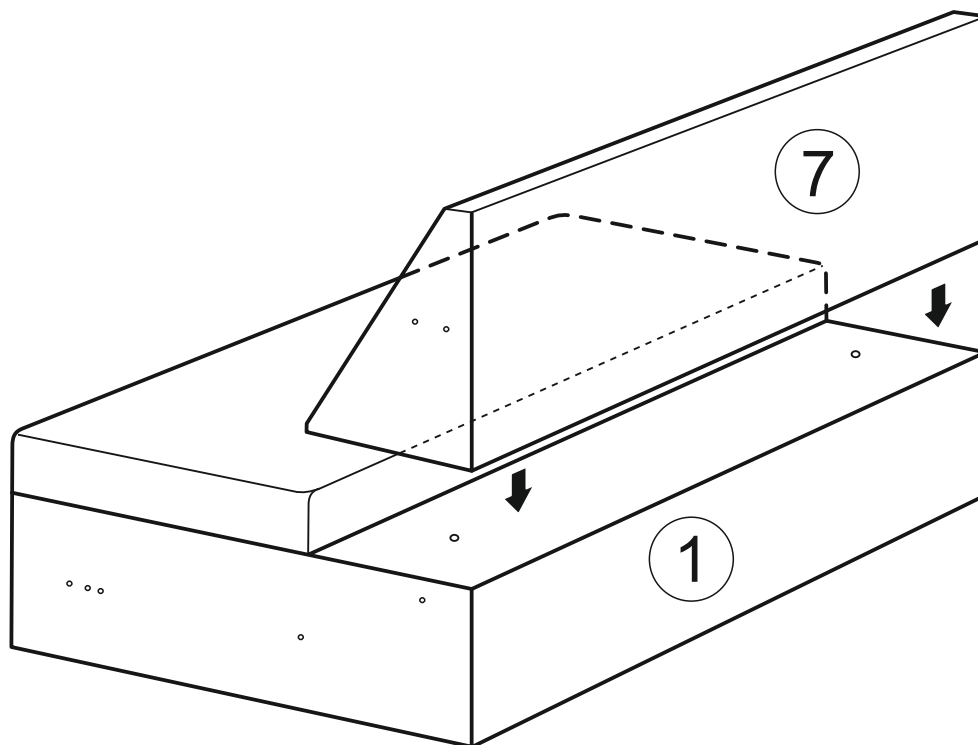



8a,b

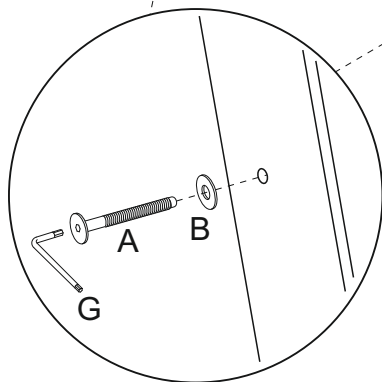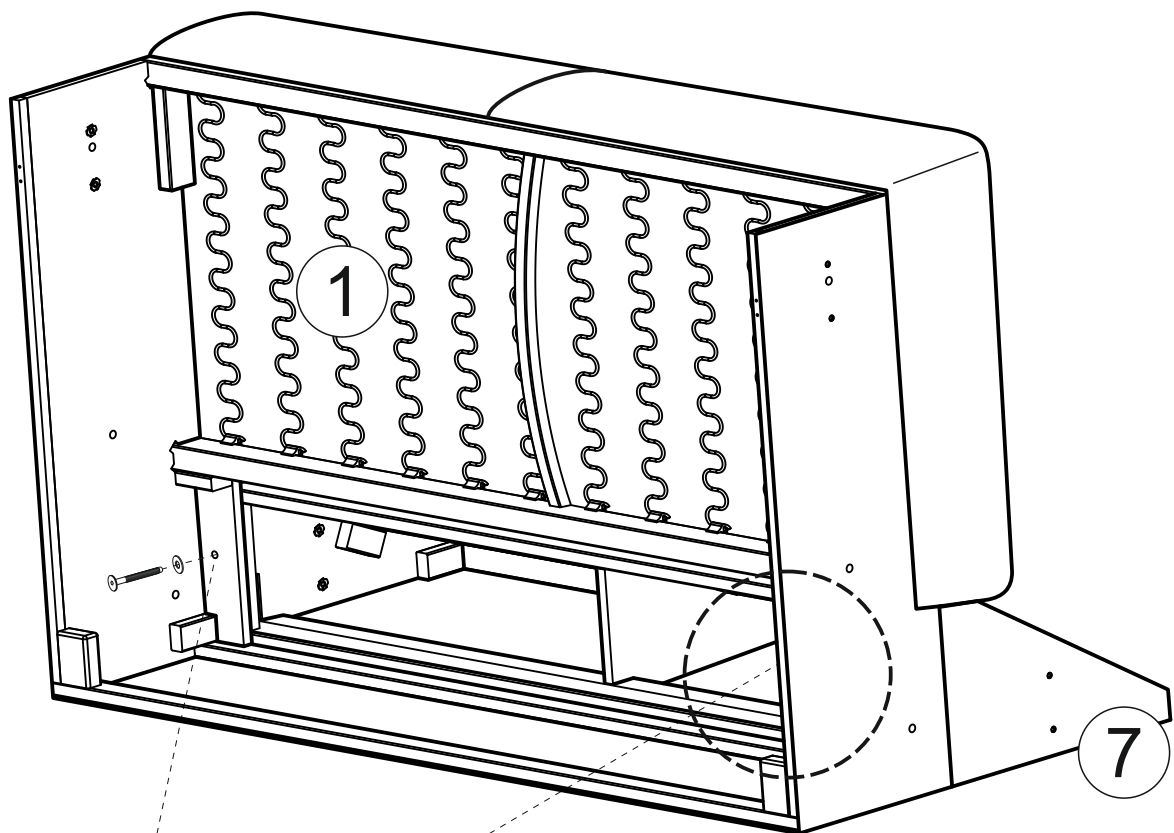

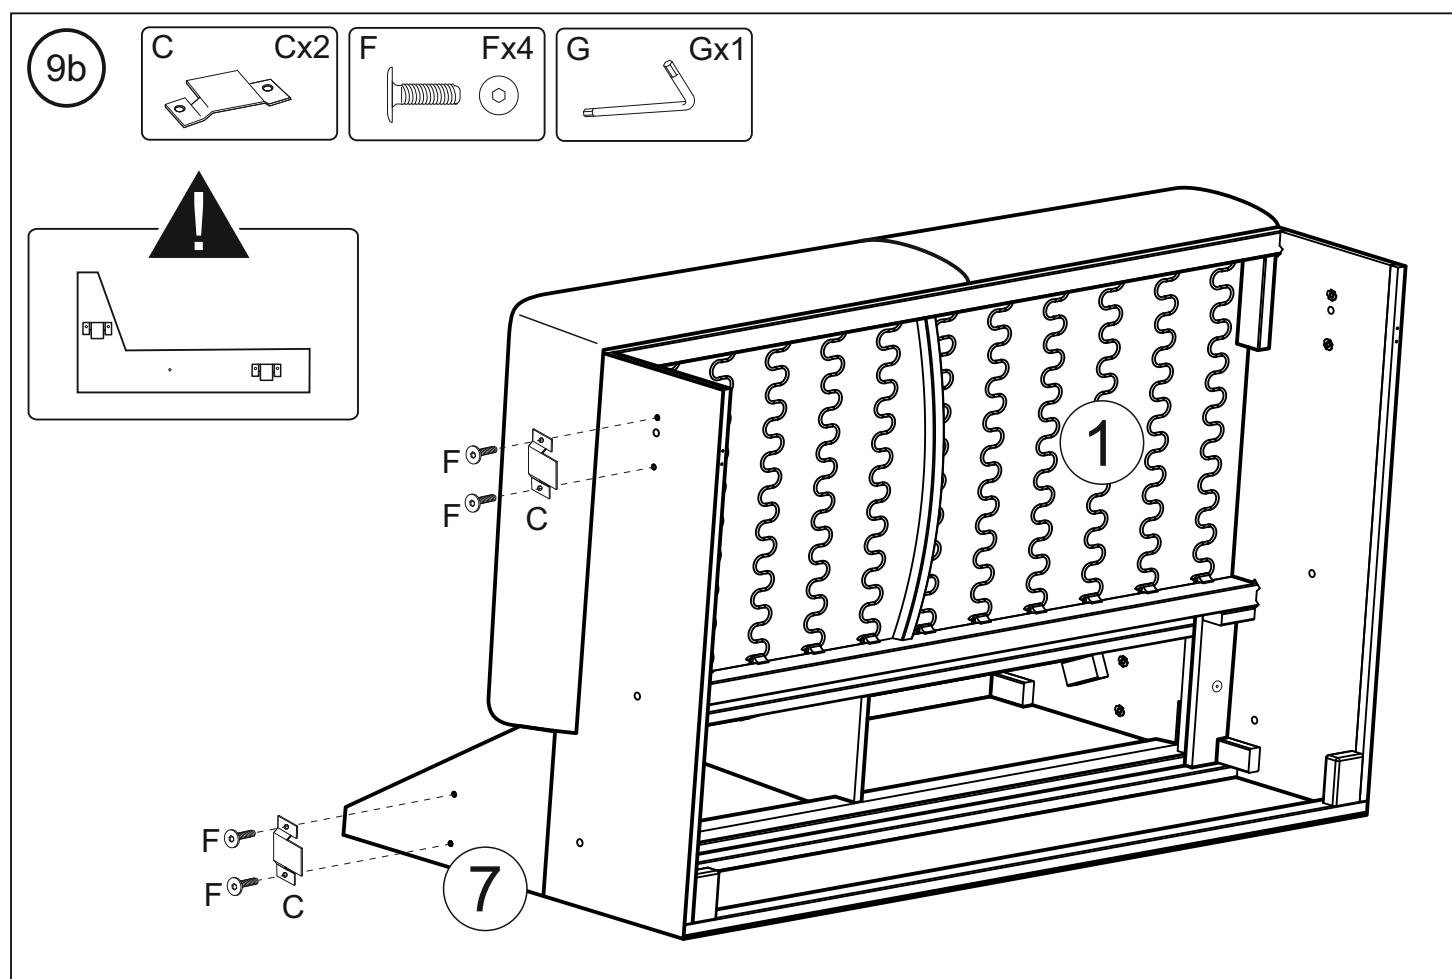
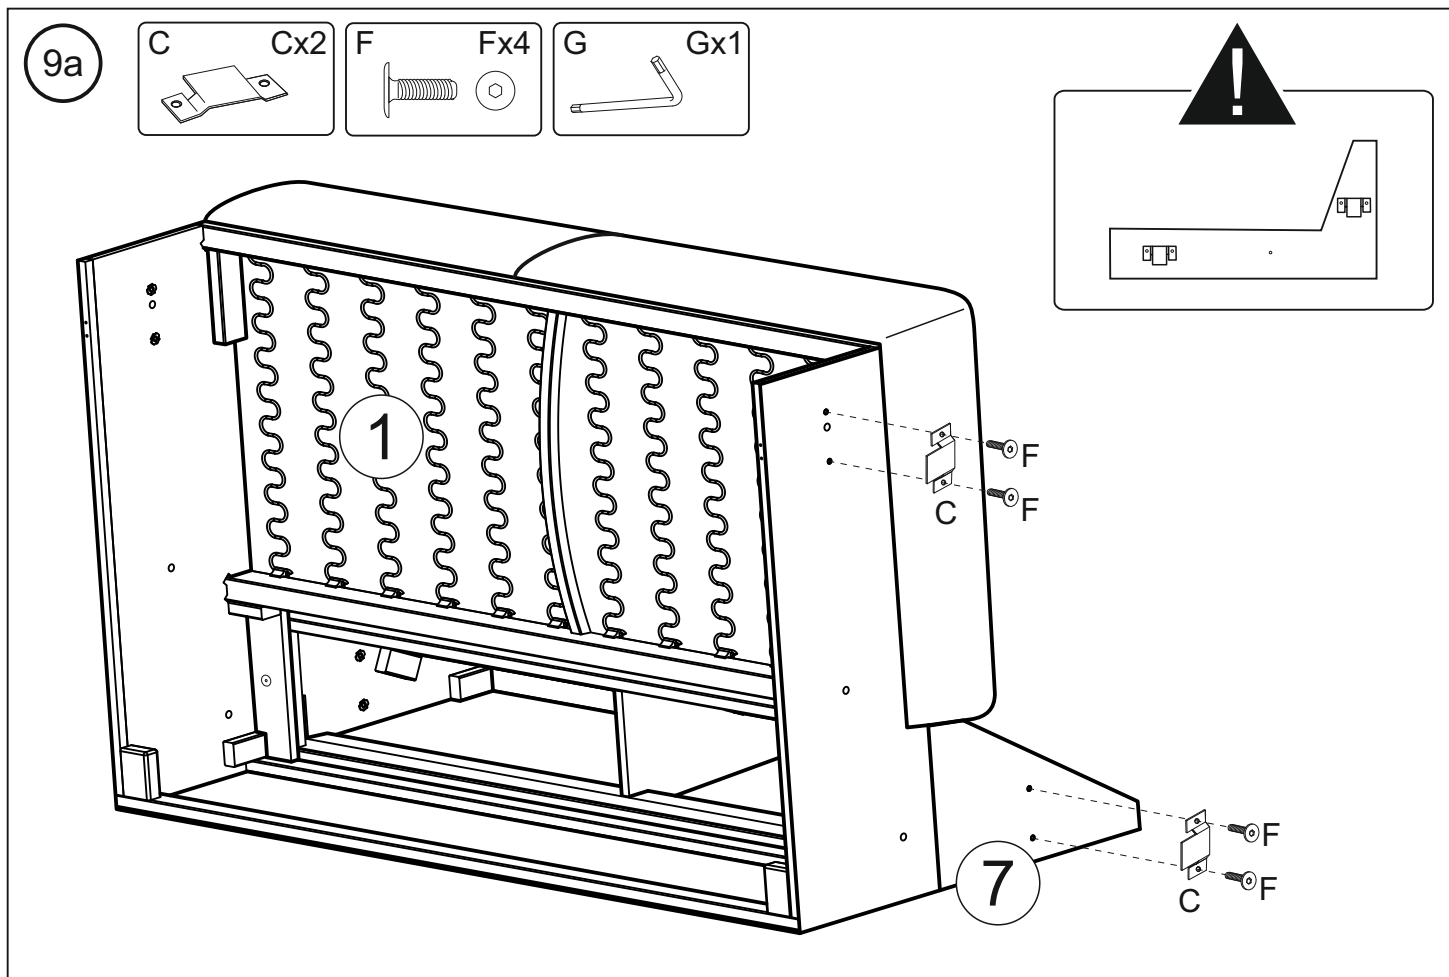


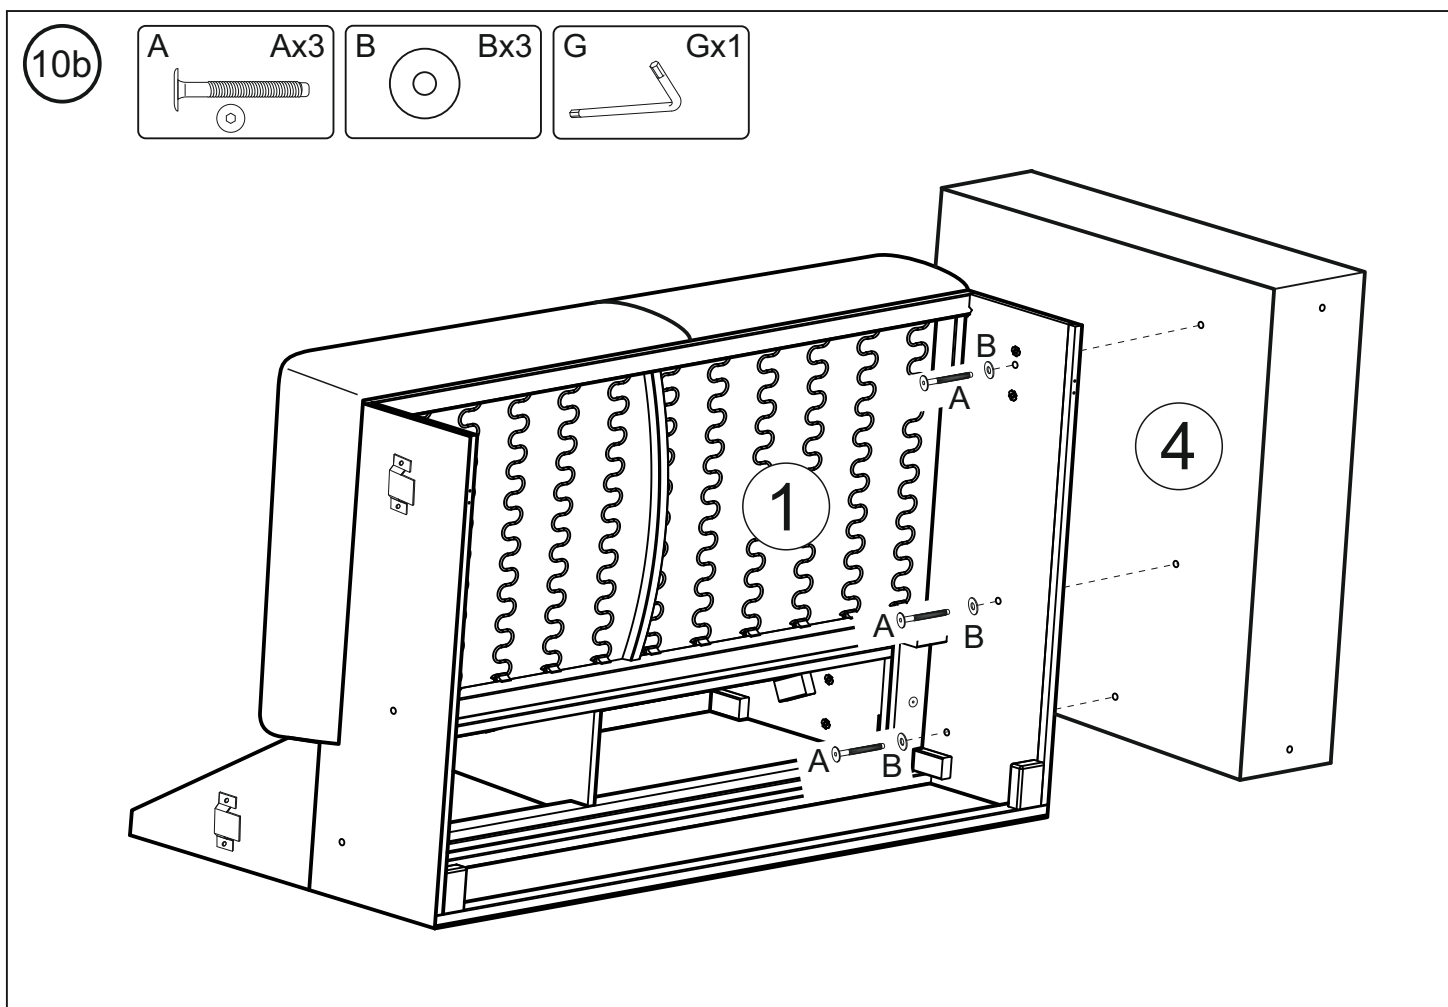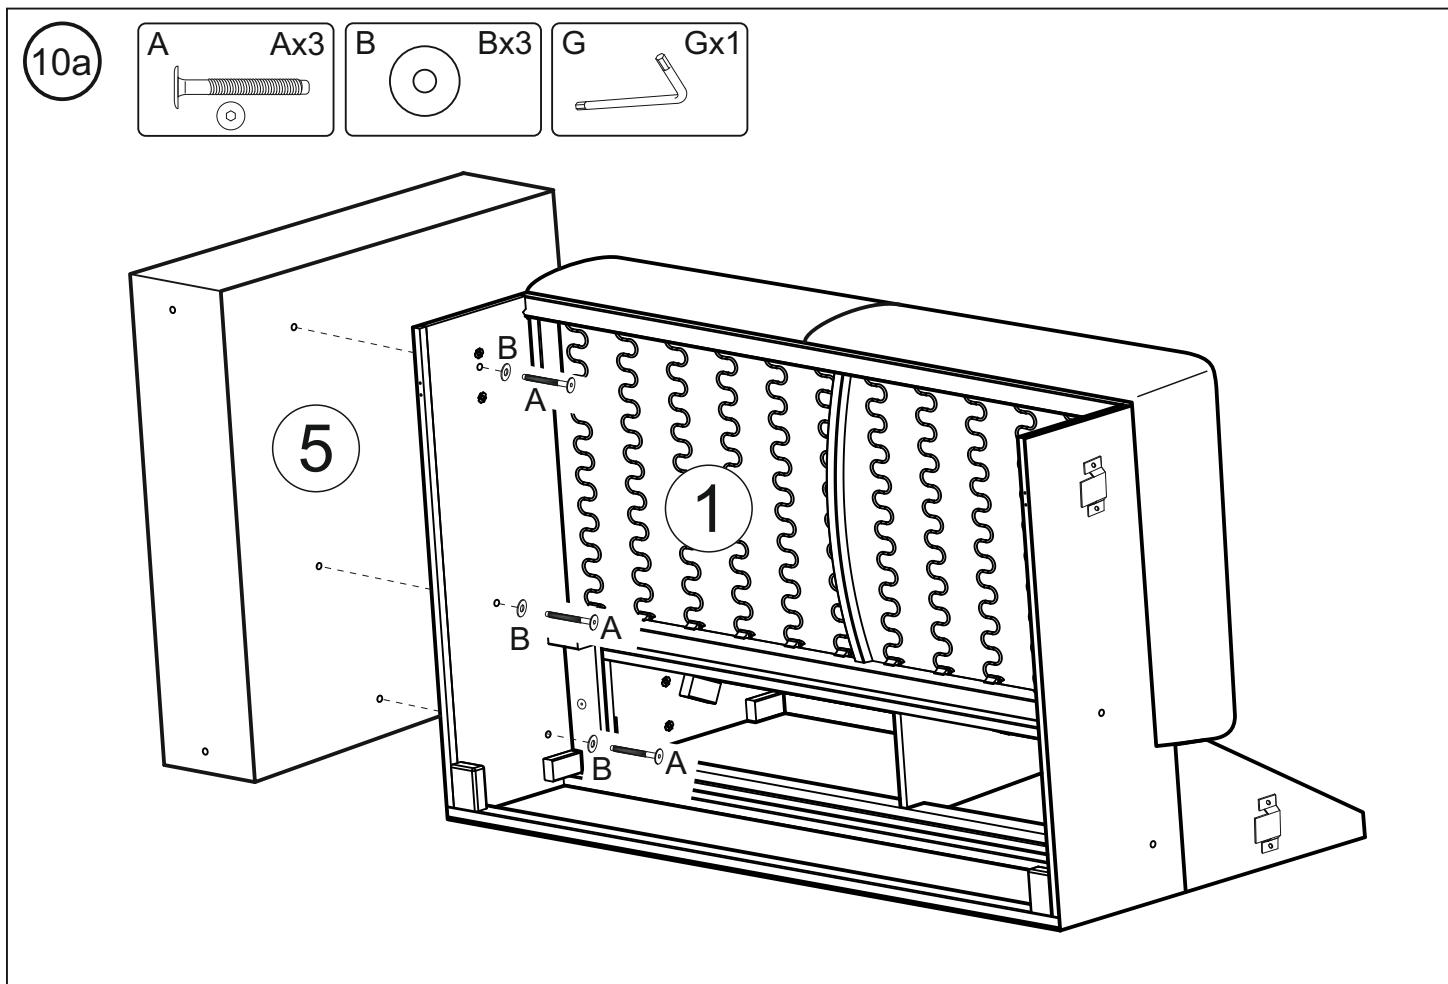






11a

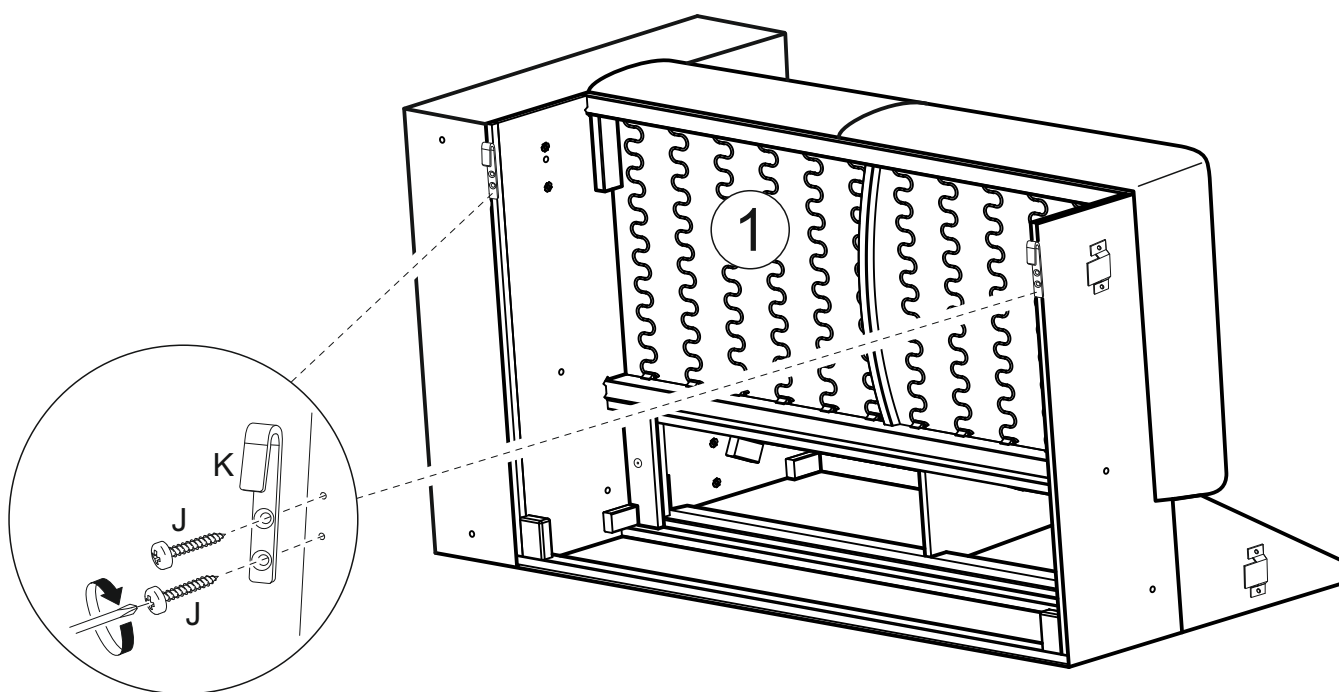






11b

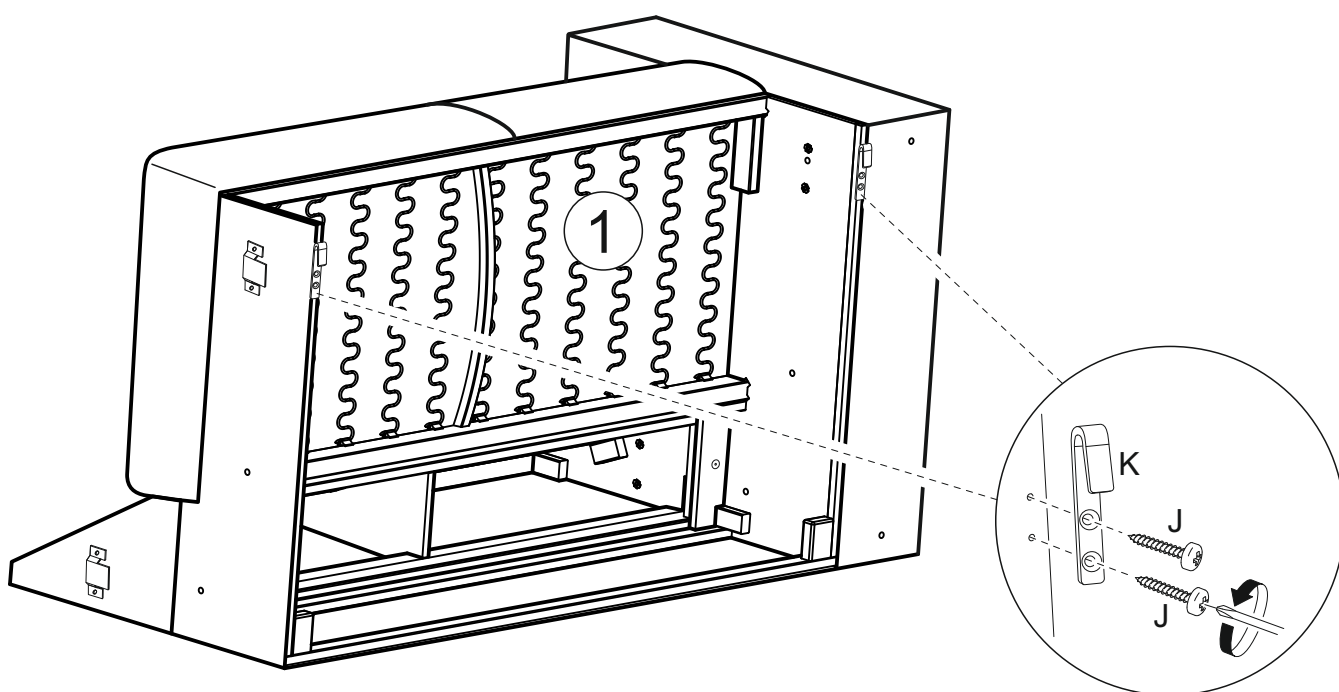




12a

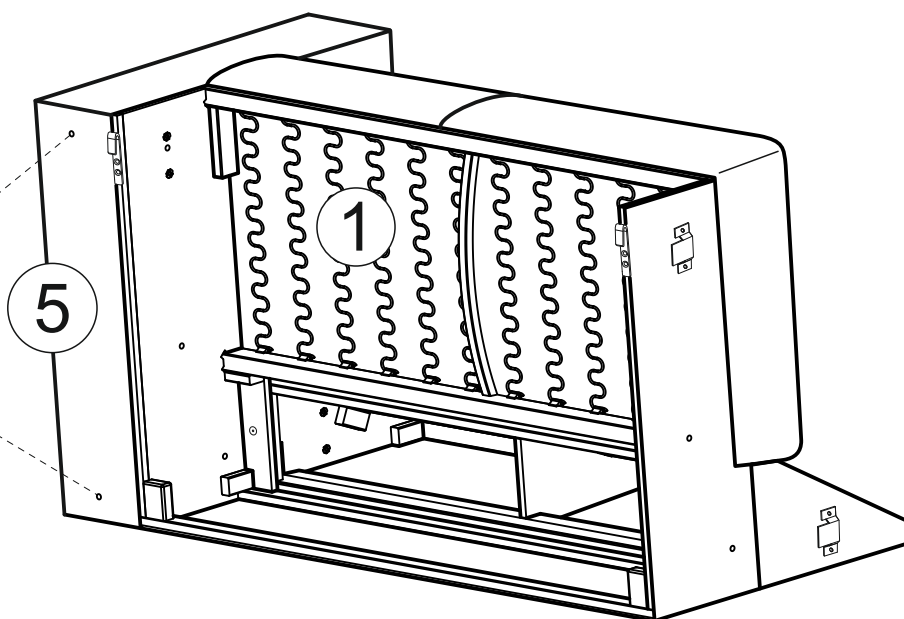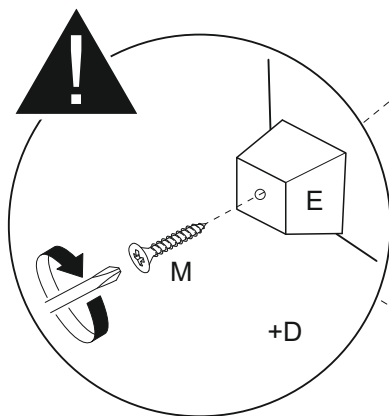




12b

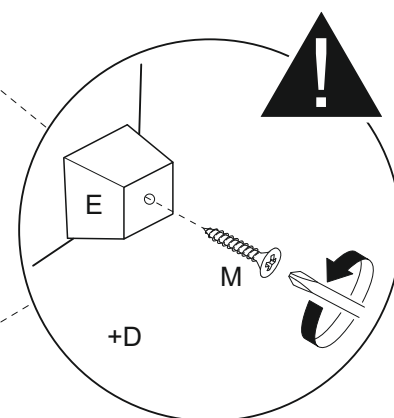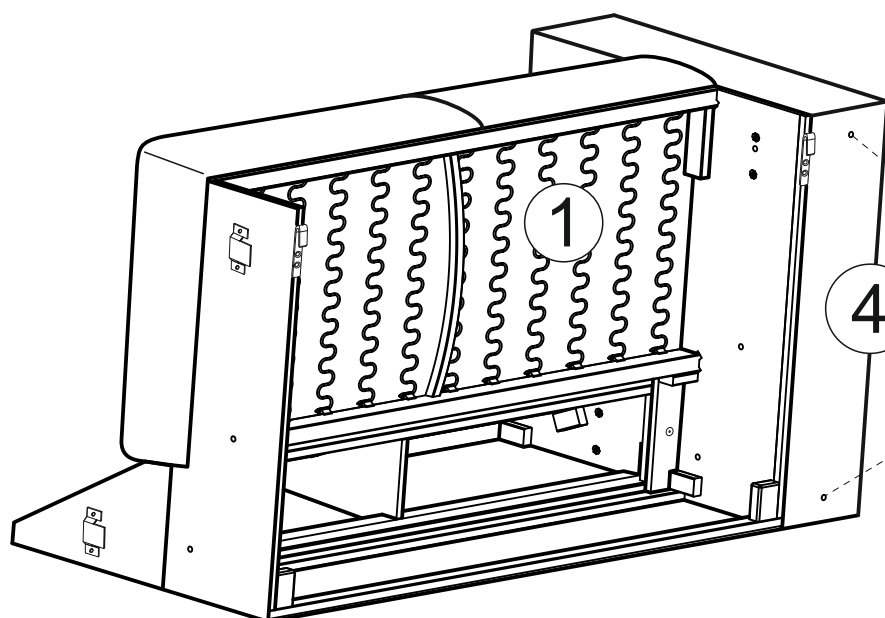


13a,b

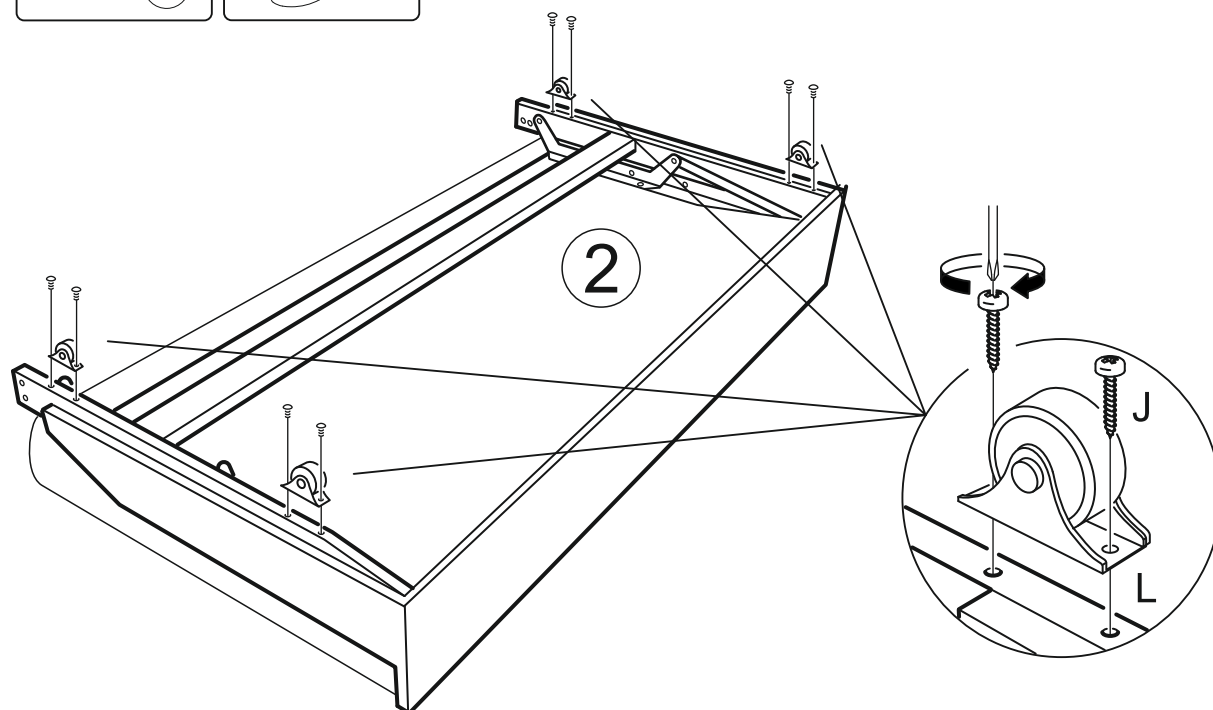


14a,b

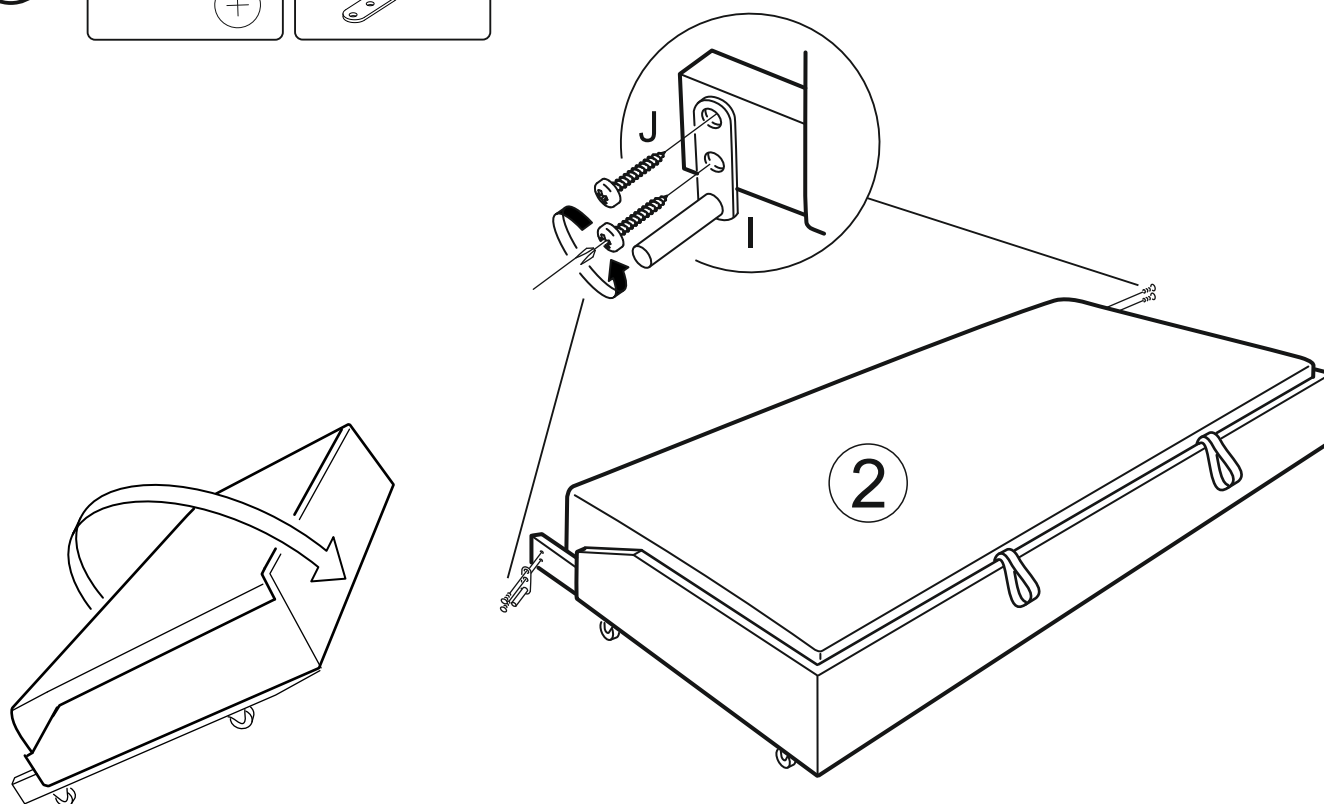






15a




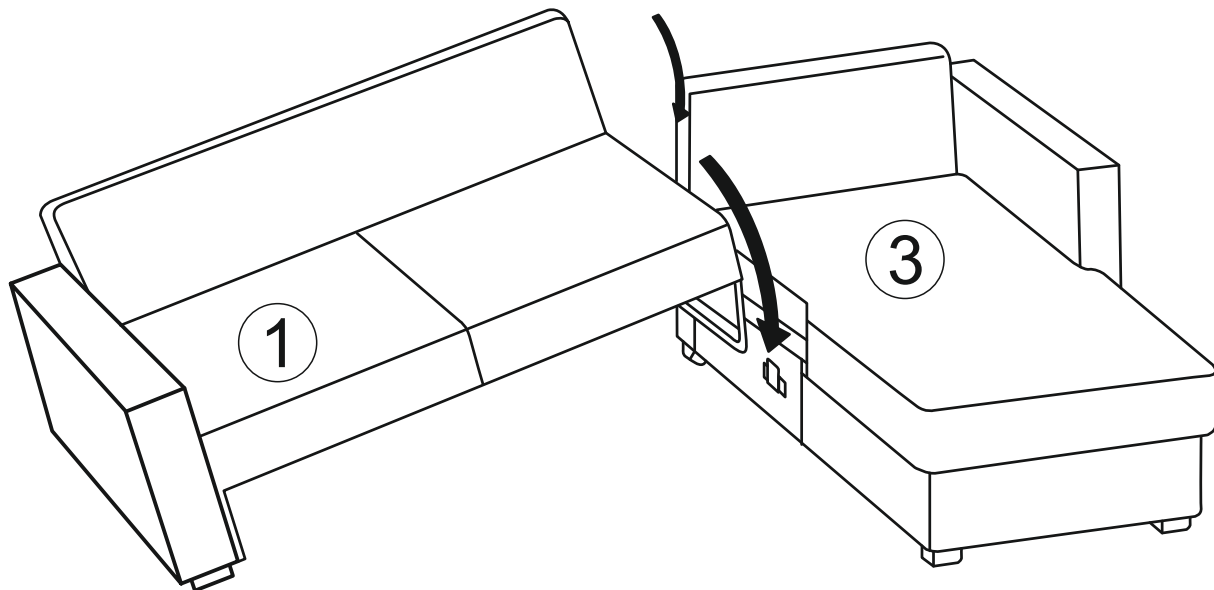


15b

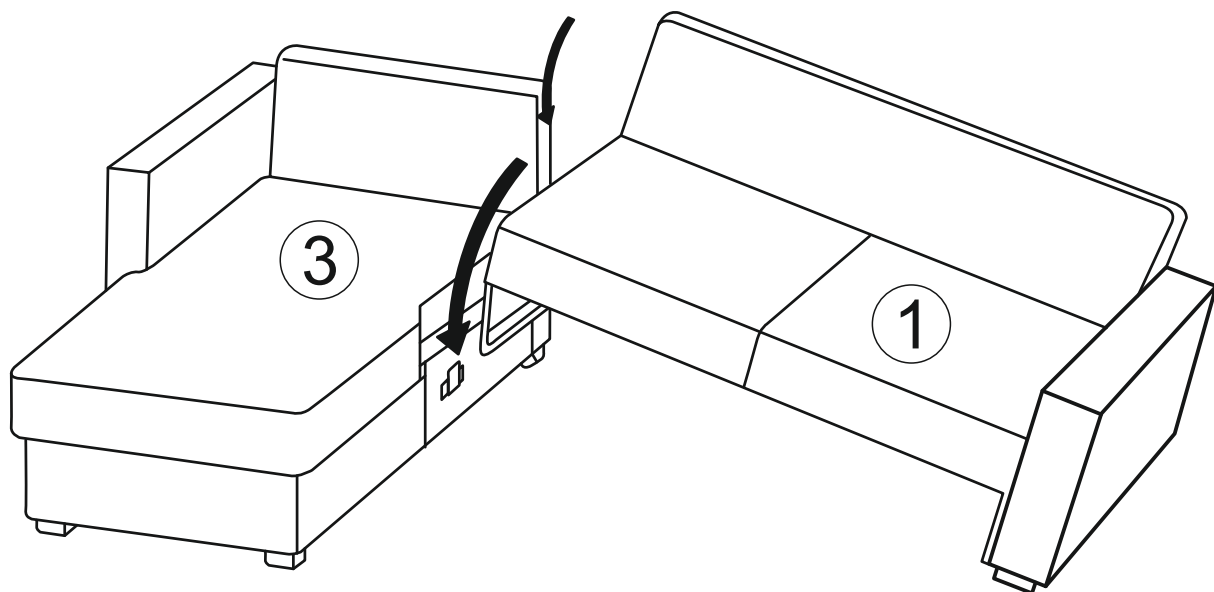

16a,b

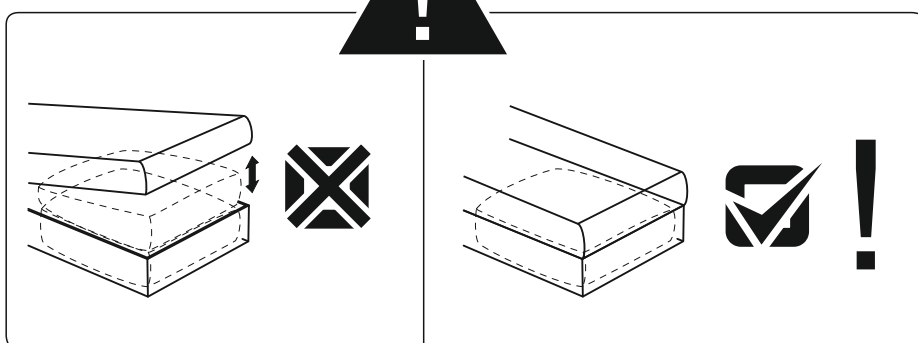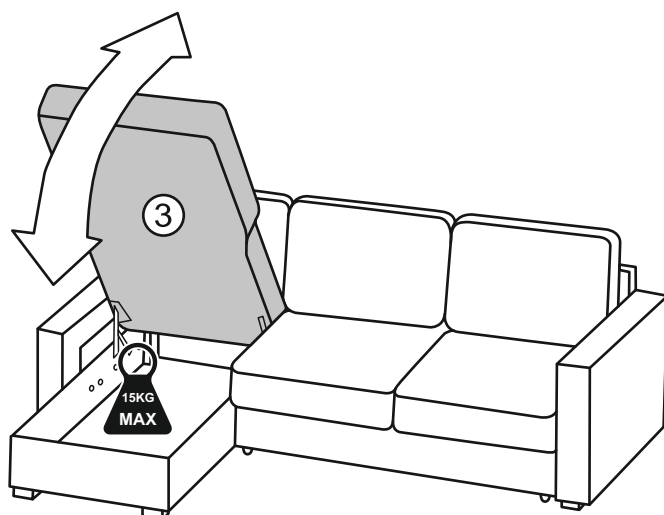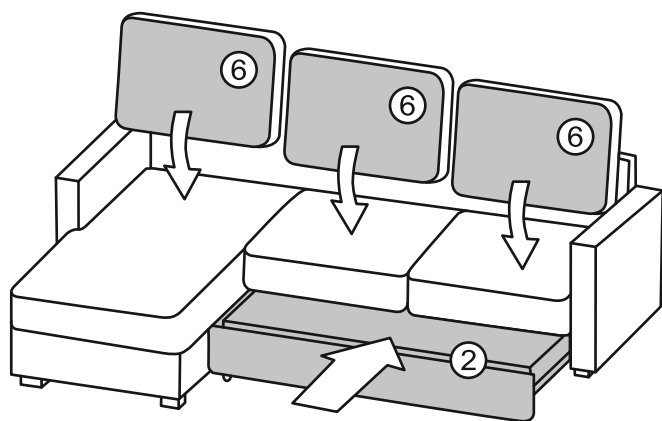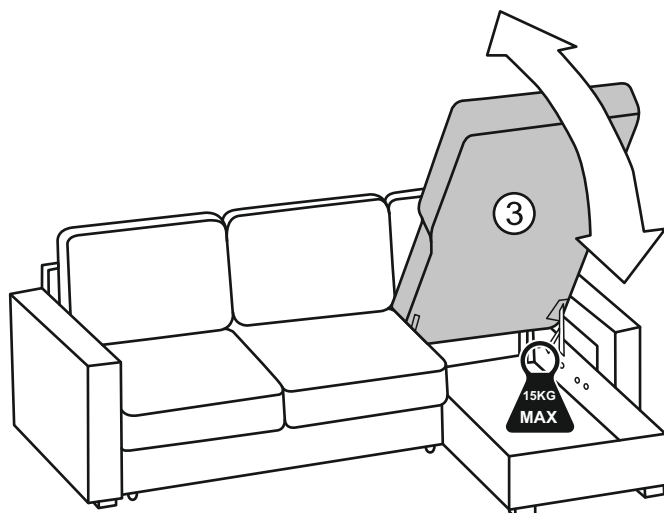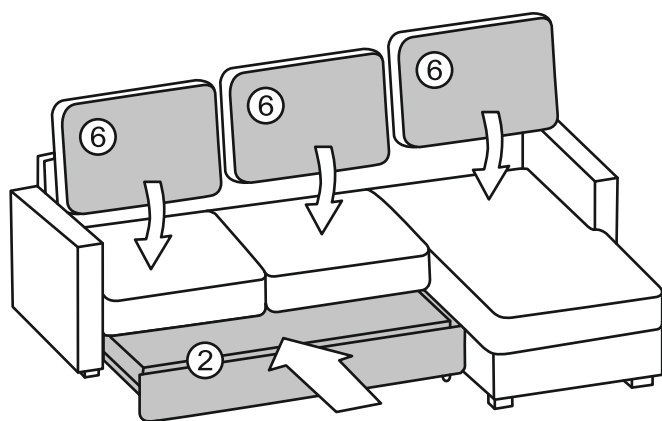

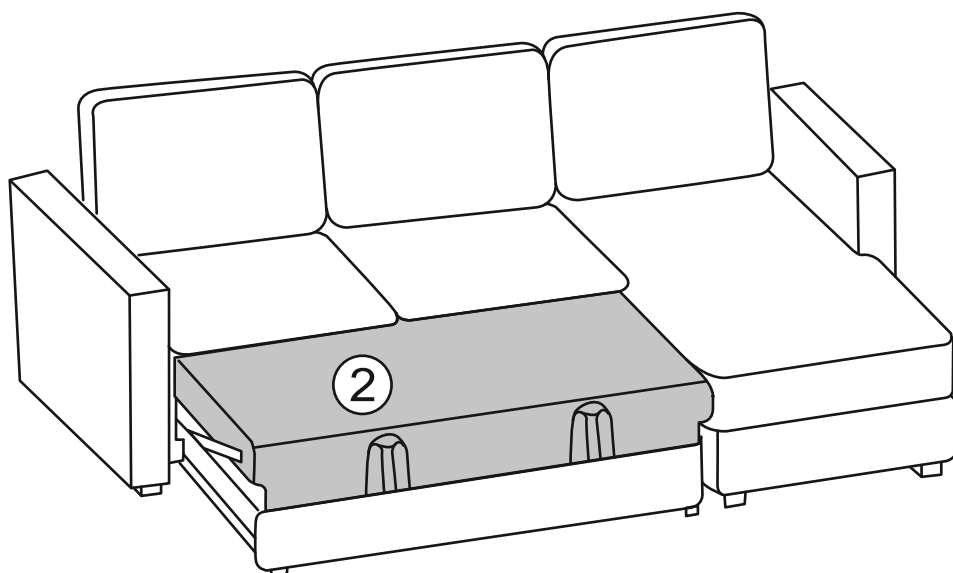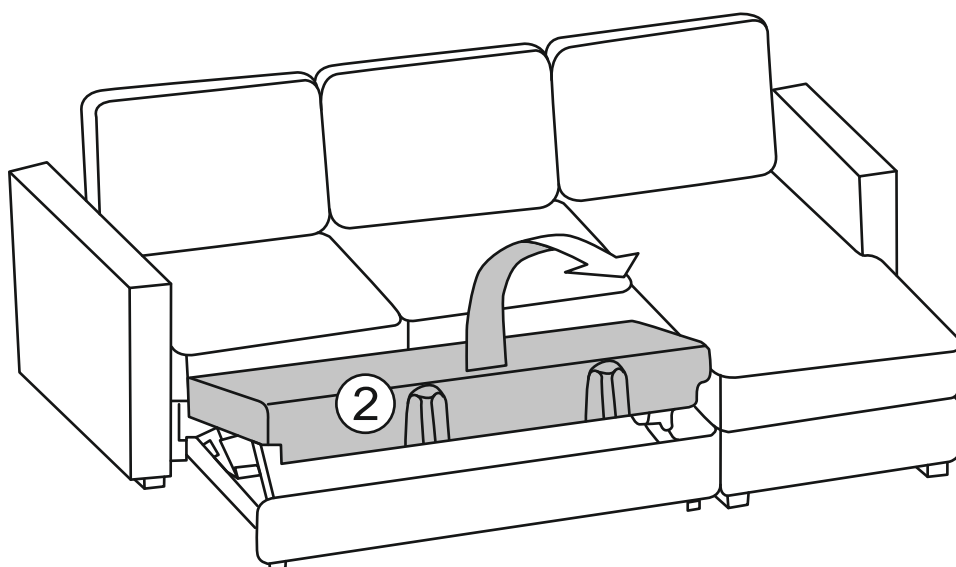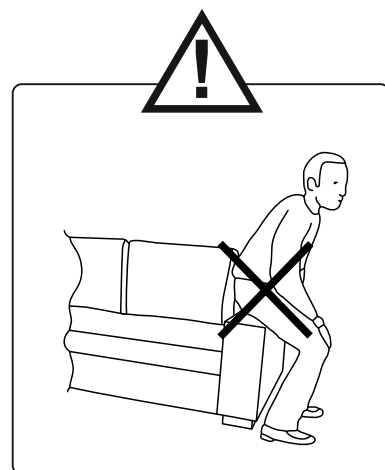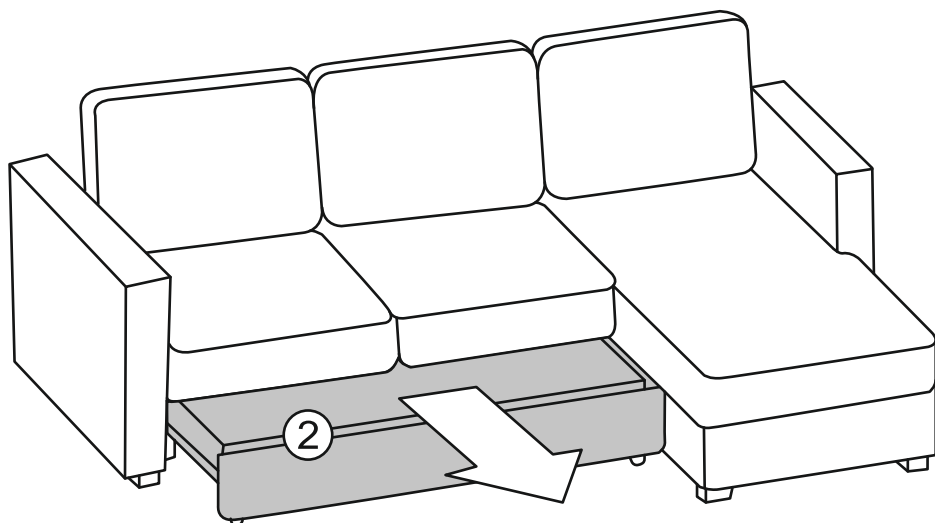

WARNING!

