












3001210

Adelaide Steel Cabinet w.
Rippled Glass Door
Black-Single Door


HOUSE

NORDIC

| | | | | | | | |
|---|-----------------------------|---|---|---|---|---|----------------------------|
|  | <div>1</div> <div>x28</div> |  | <div>2</div> <div>ø6x30mm</div> <div>x1</div> |  | <div>3</div> <div>ø12x0.8mm</div> <div>x1</div> |  | <div>4</div> <div>x1</div> |
| <div>spare:2</div> | | <div>spare:1</div> | | <div>spare:1</div> | | <div>spare:1</div> | |
|  | <div>5</div> <div>x1</div> |  | <div>6</div> <div>x1</div> |  | <div>7</div> <div>x4</div> |  | <div>8</div> <div>x4</div> |
| <div>spare:1</div> | | <div>spare:2</div> | | <div>spare:2</div> | | | |
|  | <div>9</div> <div>x2</div> |  | <div>10</div> <div>x2</div> | | | | |

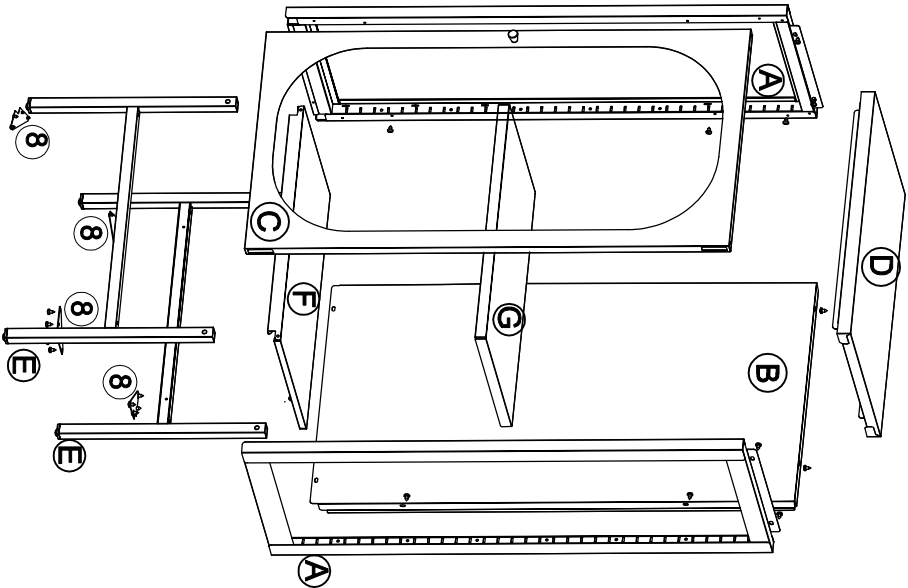


(1) - Attach (A) to (E) as below shown.

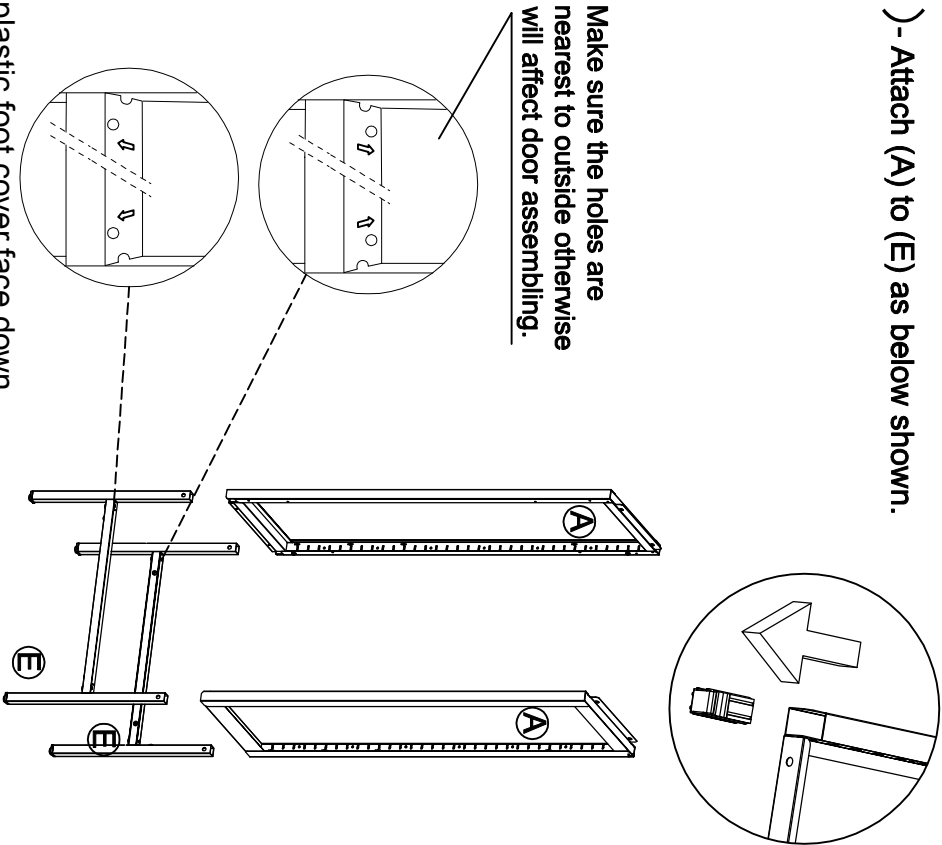


The plastic foot cover face down


(3) - Attach (B) to (A) & (E) as below shown.

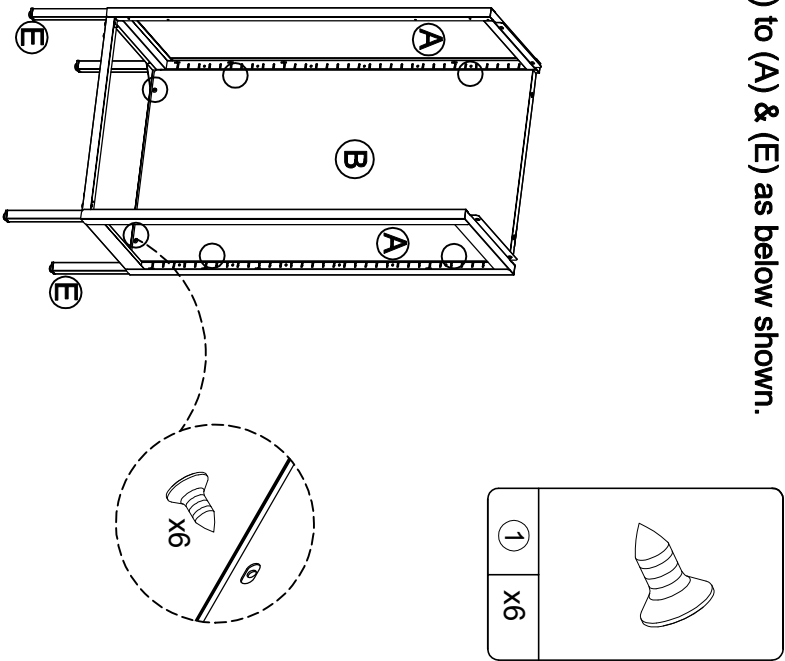



(2) - Attach ⑧ to (E) as below shown.

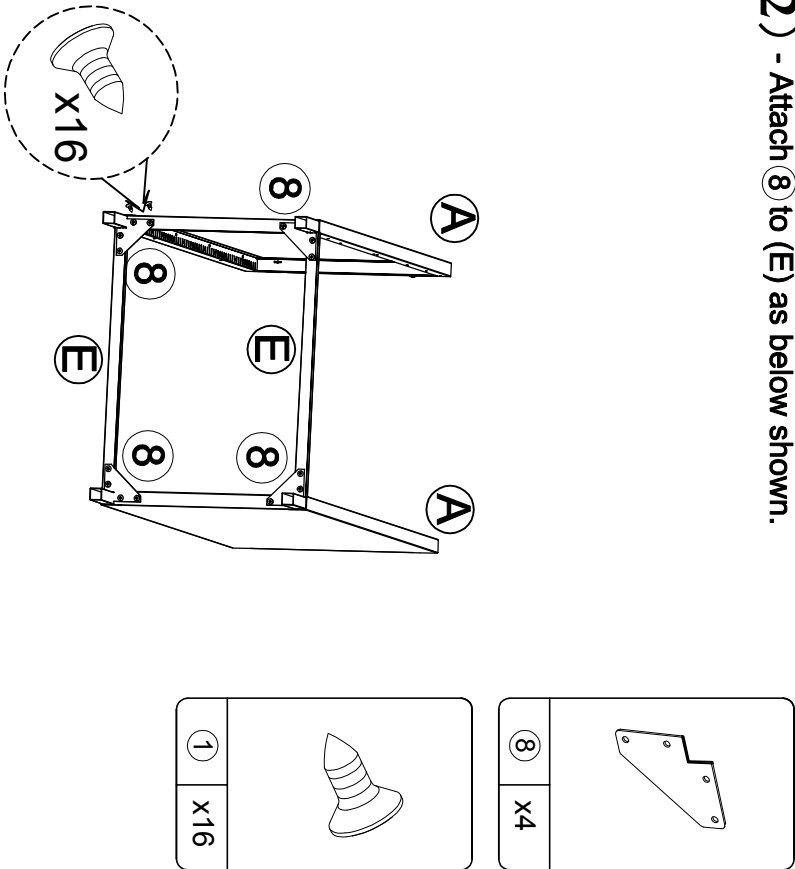



(4) - Attach (F) to (A) & (B) & (E) as below shown.

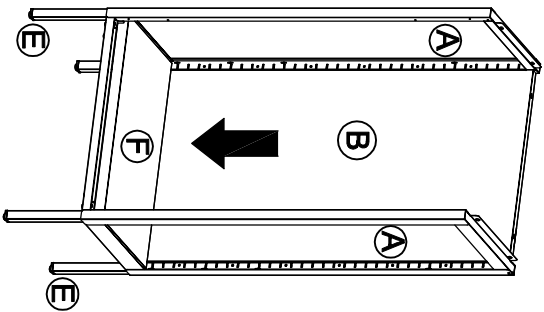






(5) - Attach (D) to (A) as below shown.

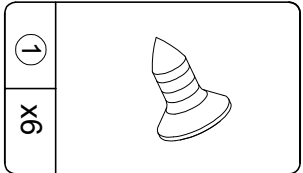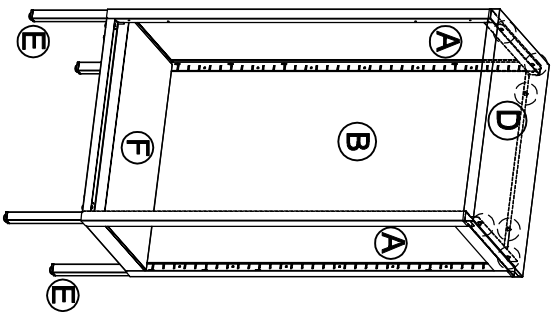




(6) - Attach (G) to pre-assembled unit as below shown.

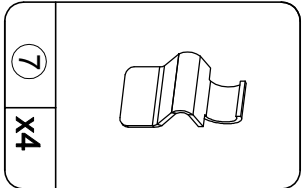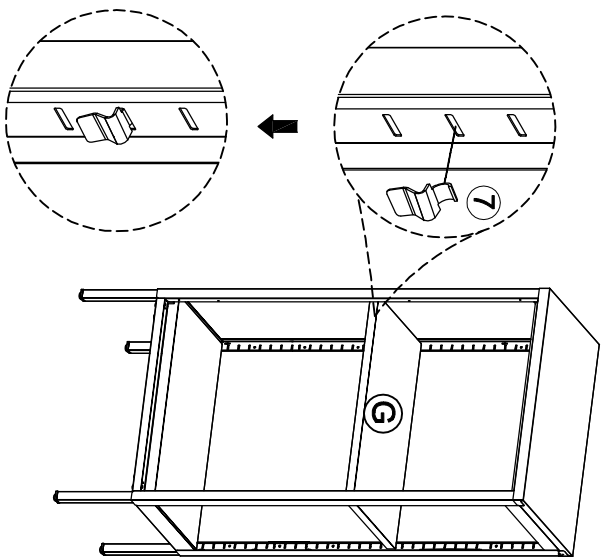


(7) - Attach (6) to (C) as below shown.

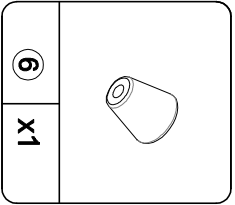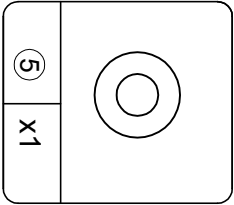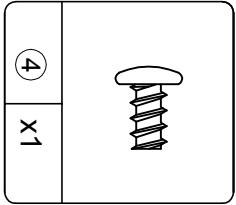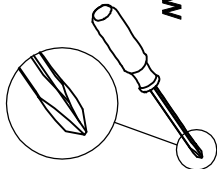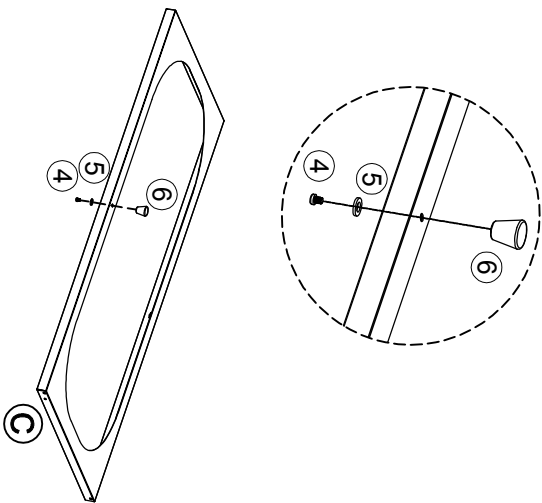

(8) -Attach (2) & (3) to pre-assembled unit as below shown.

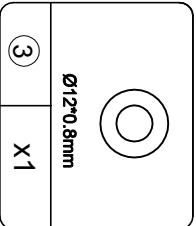
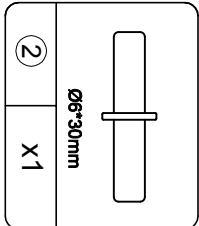
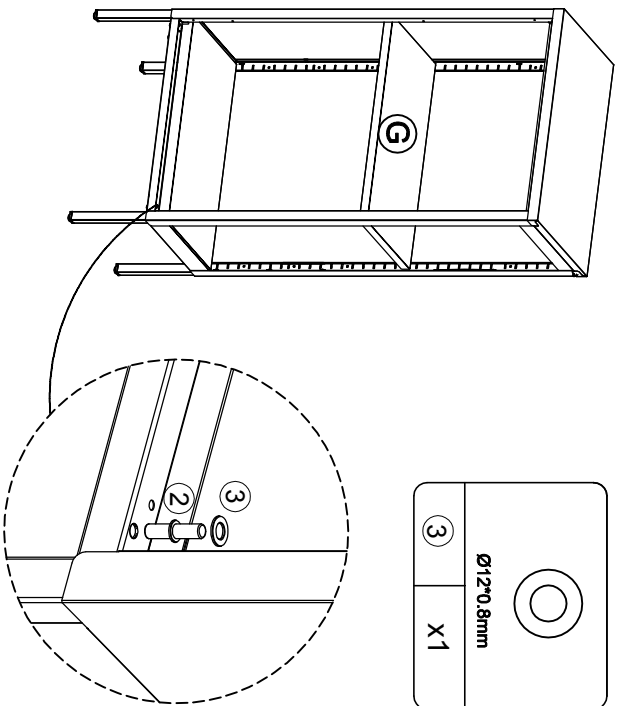


(9) - Attach (C) to pre-assembled unit as below shown.

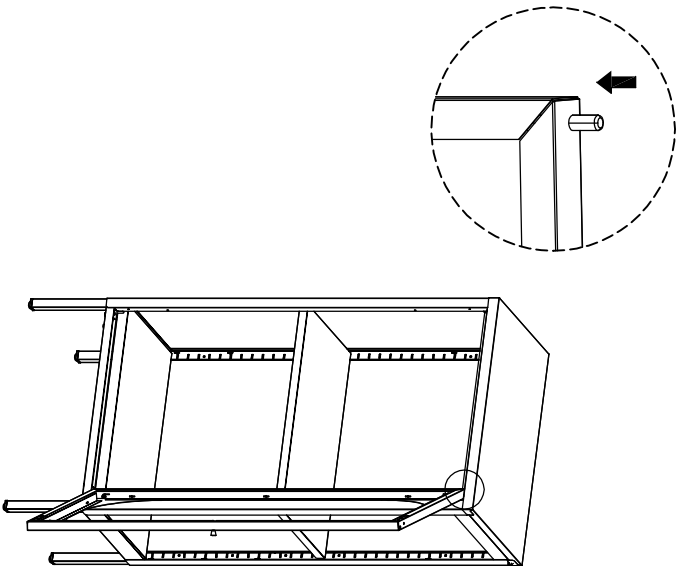

(10)

wall anchors

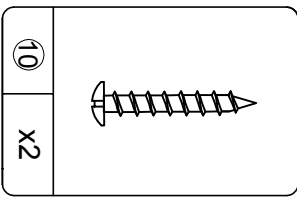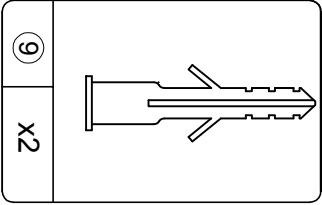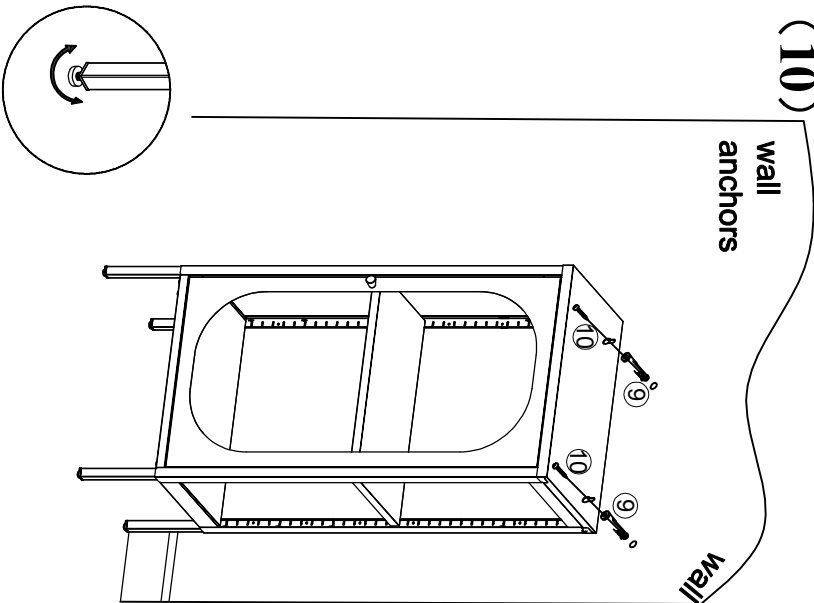

Gaps may appear between the top of the doors and the frame if the item is not on level ground; use the plastic foot cover to level.