




BETT 0281

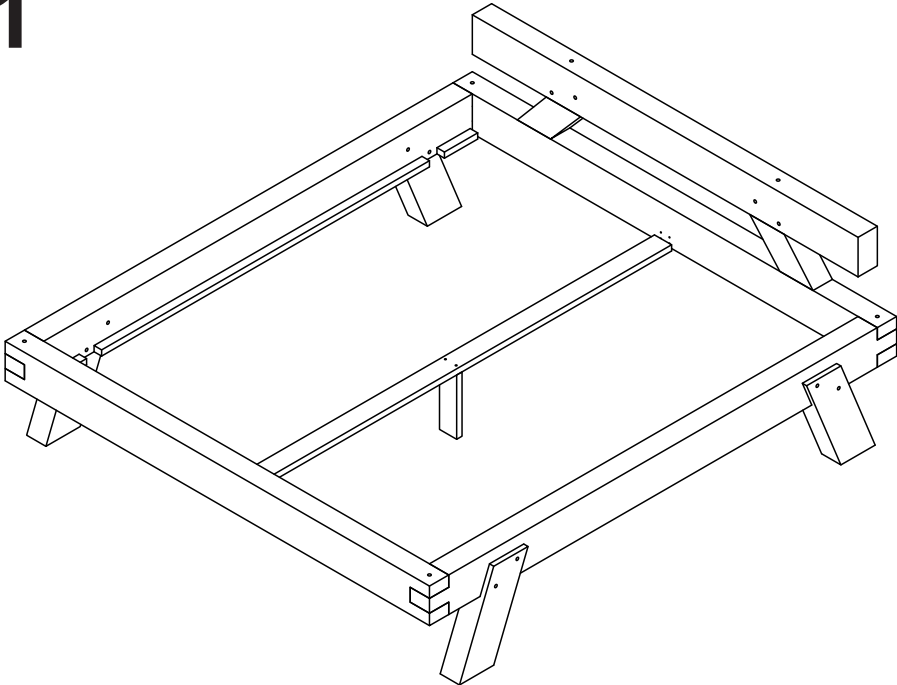


Aufbauzeit - 40 Minuten





1 10x50 x8	7 x2	8 x2	5 35x35x90 x4	13 5x55 x2	14 3,5x20 x38
18 x1	19 x1	15 10x180 x4	11 x1	16 M10 x4	17 M10 x4
20 M12 x16	21 M12 x32	2 M12x150 x4	3 M12x110 x8	4 M12x80 x4	

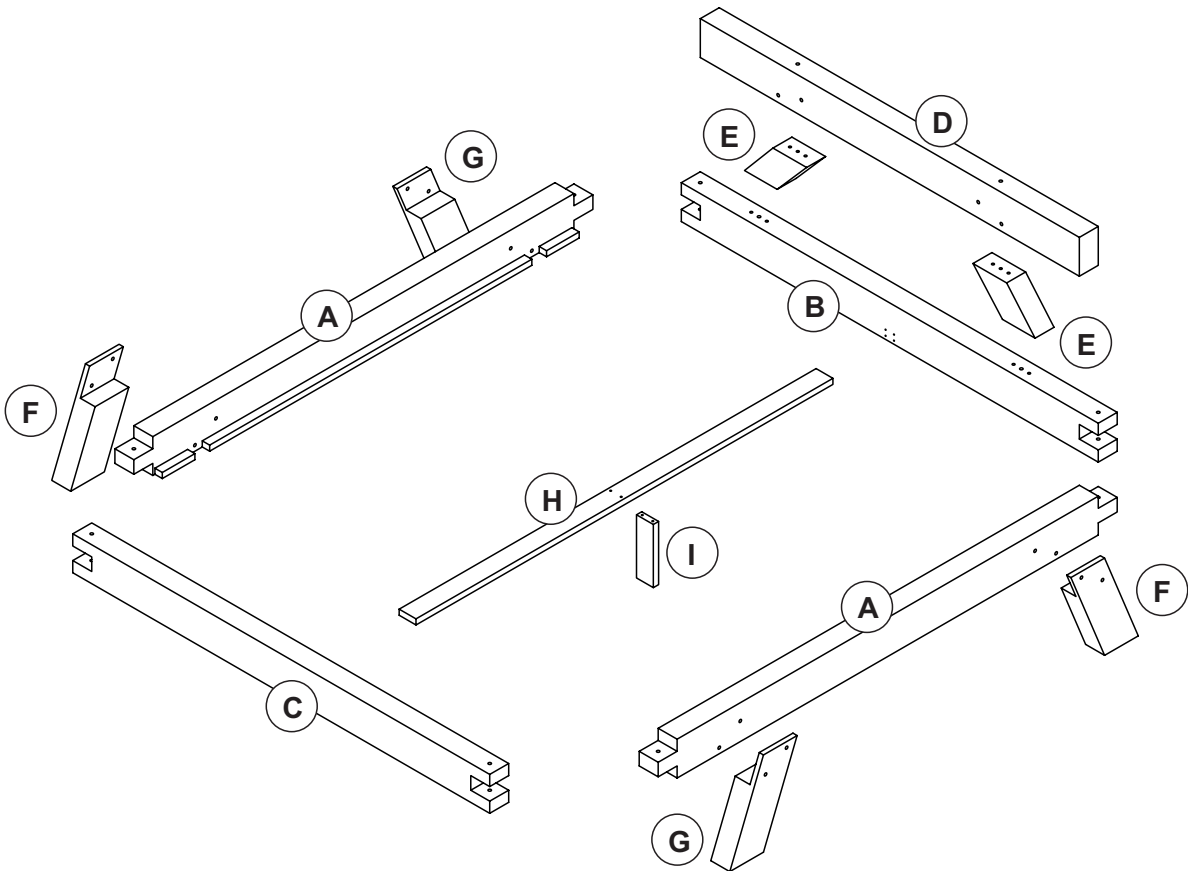


1

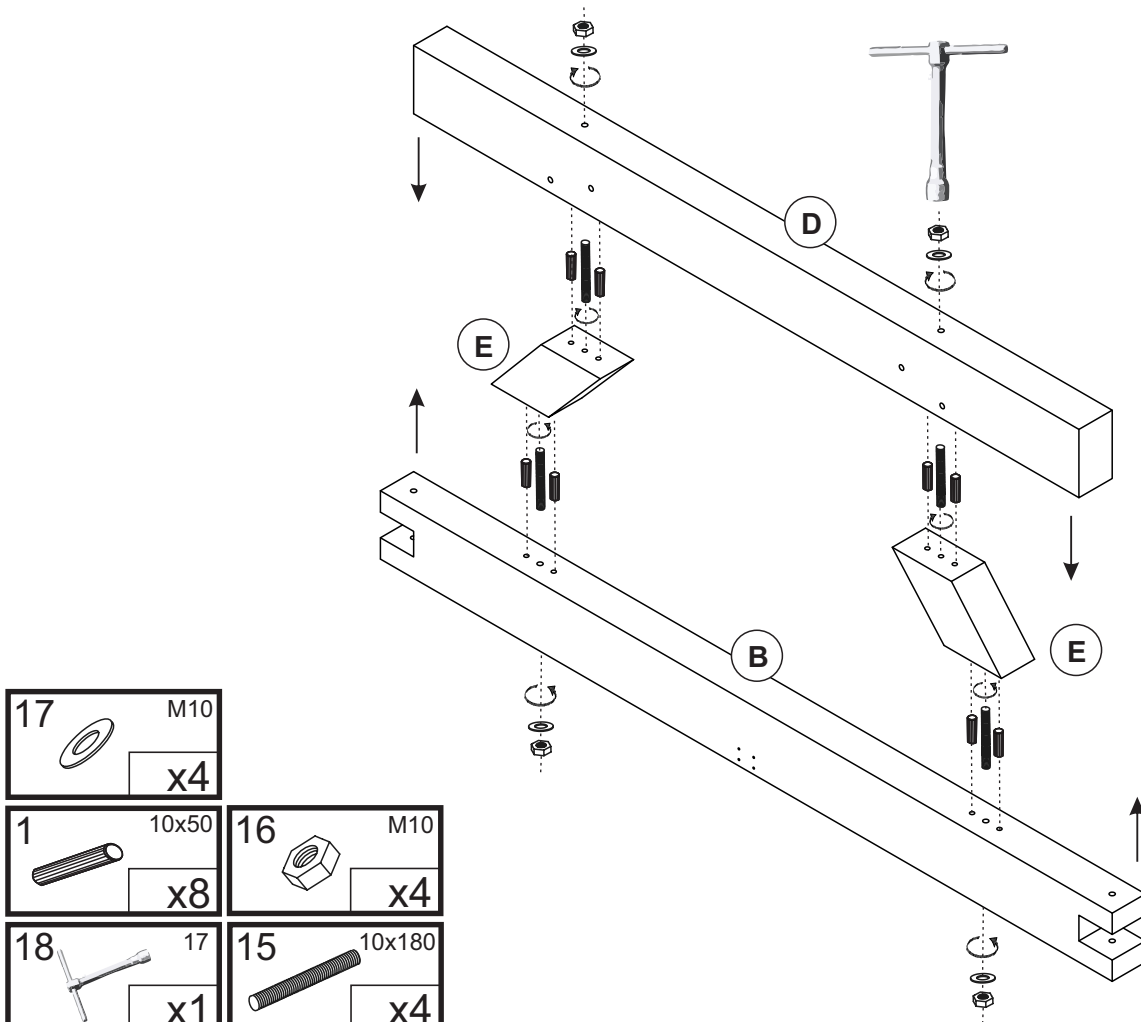


2

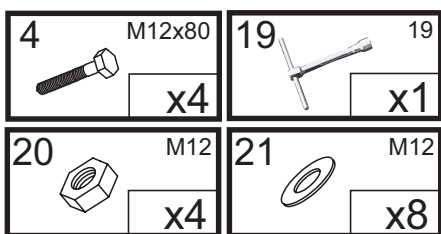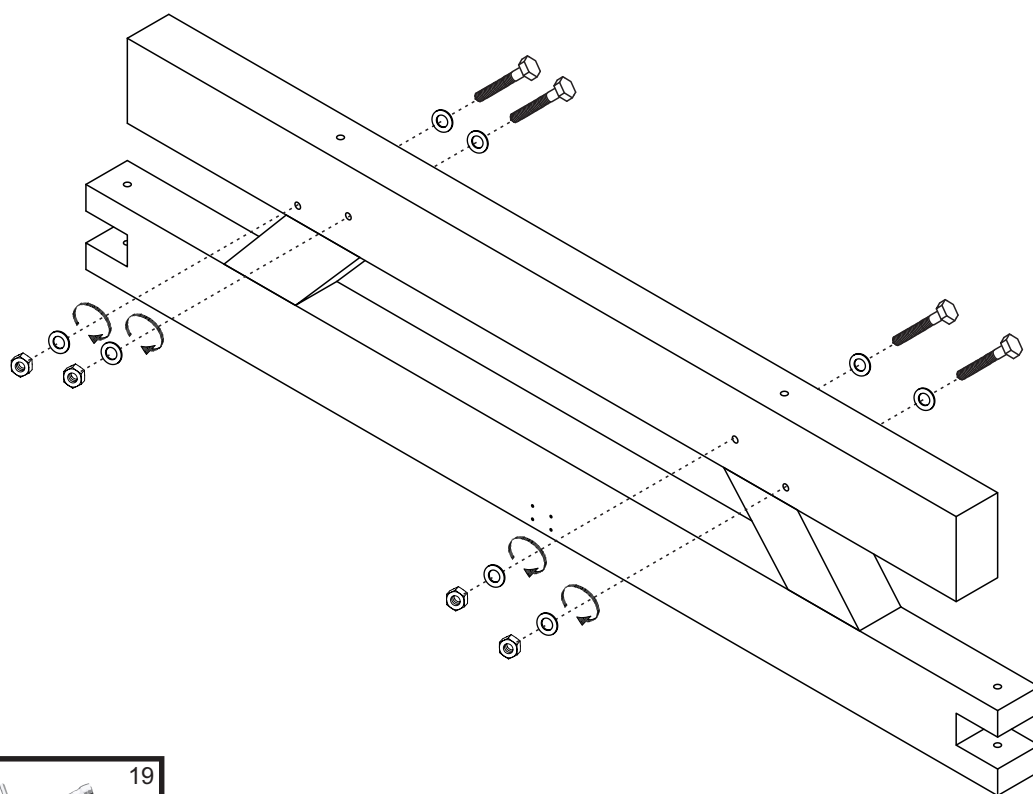


3

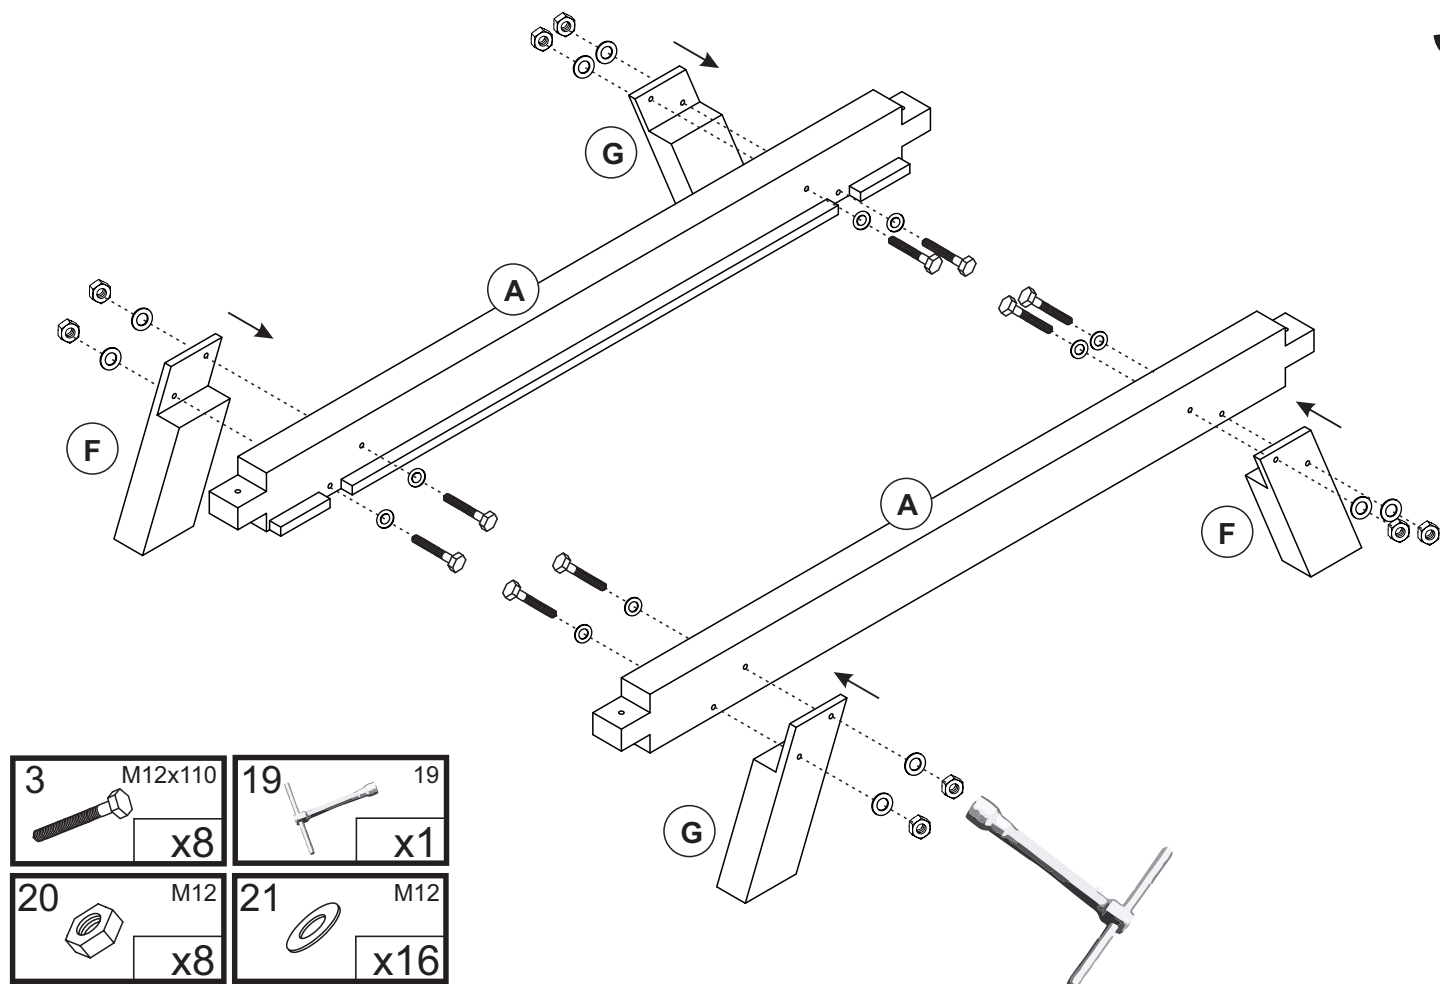

4

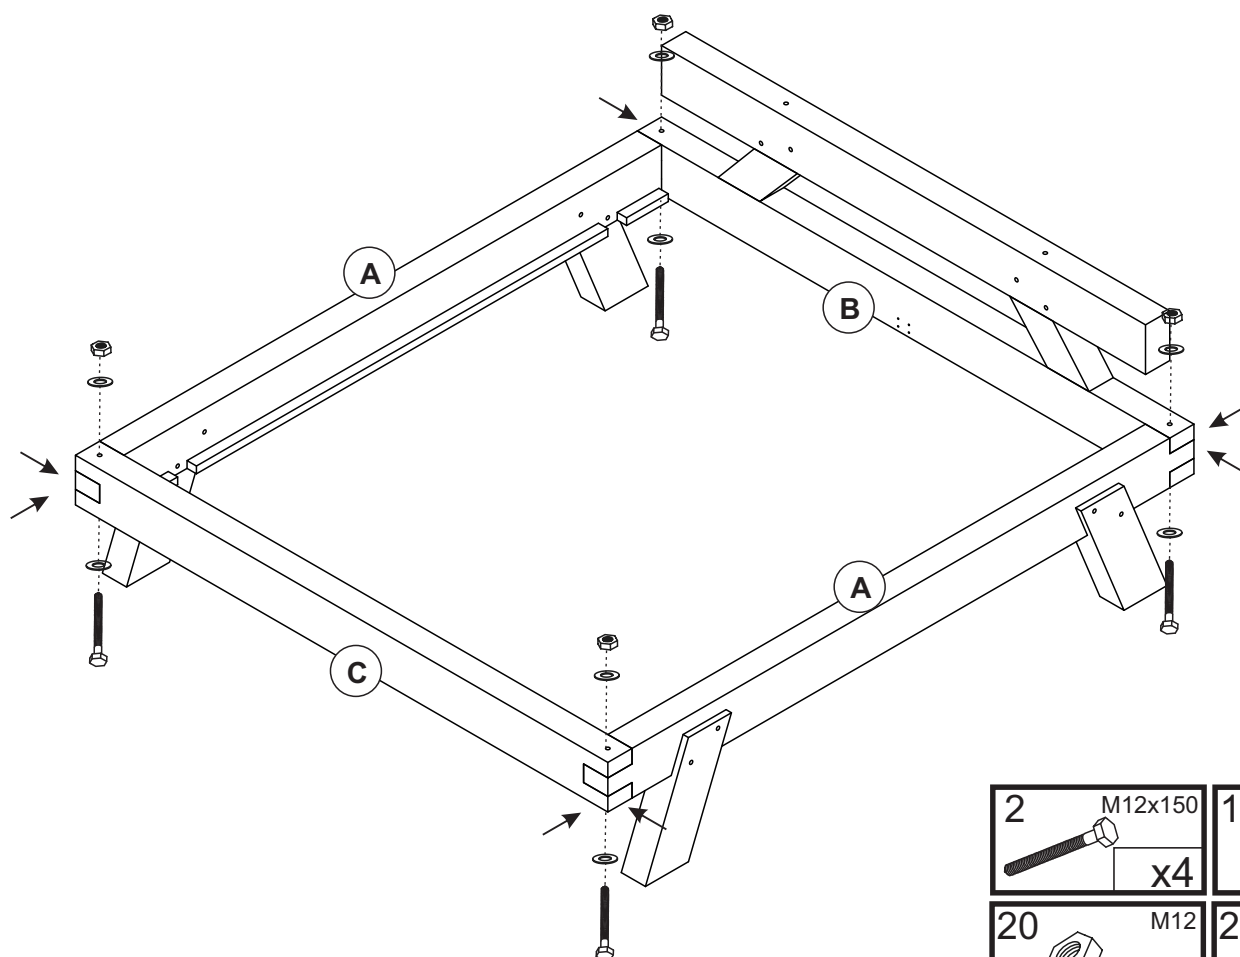

5

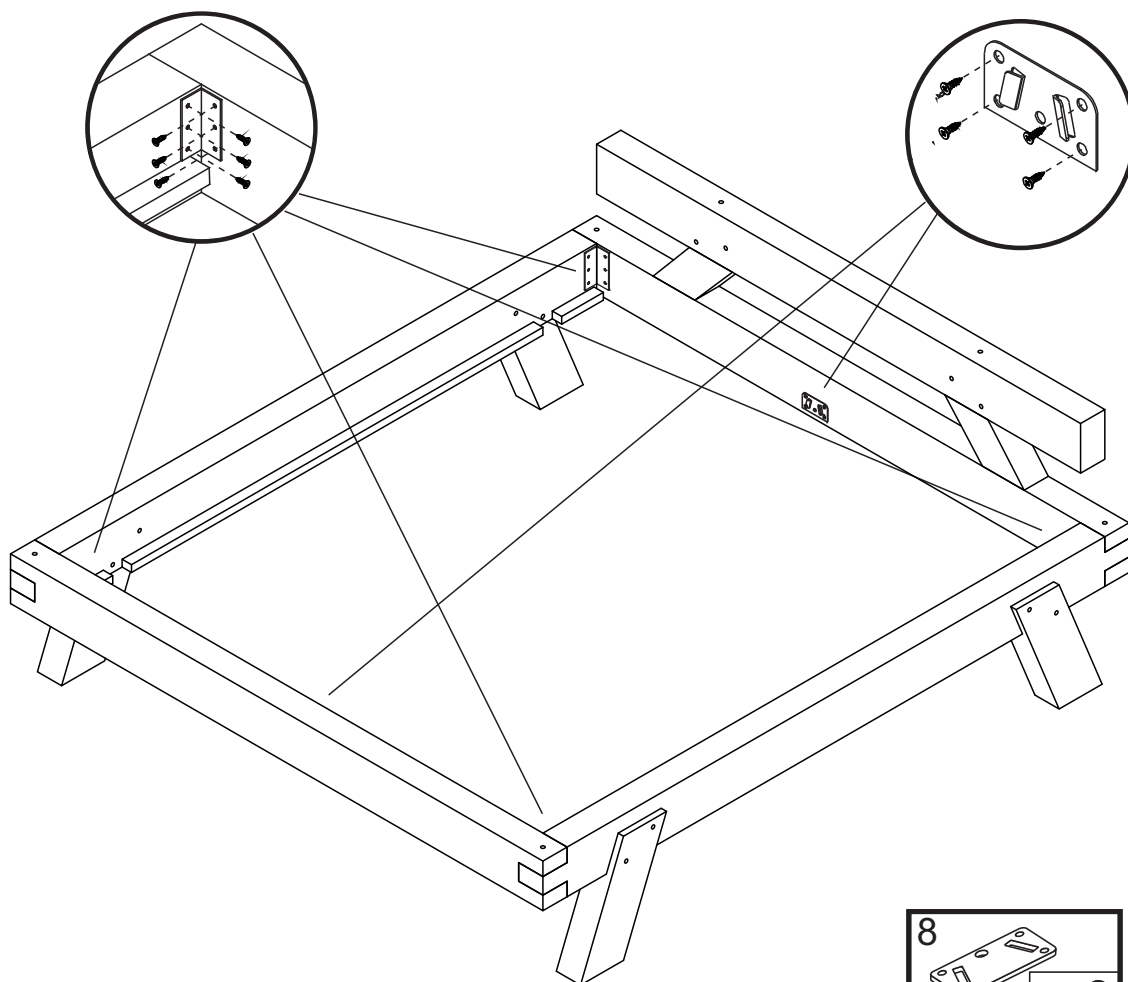

6

