


NATURA CONCEPT

ASSEMBLY INSTRUCTION

	Ax1	Bx1	Cx1	Dx1	Ex1	Fx1
						
	leg1  Gx4  M6x65mm	leg2  Hx4  M6x40mm	leg3 360°  Ix4 M6x18mm Jx4 M6xφ16mm	leg4  Kx4 M6x18mm Lx4 M6xφ16mm	leg5 360°  Mx4 M6x18mm Nx4 M6xφ16mm	Ox1  M6

STEP1

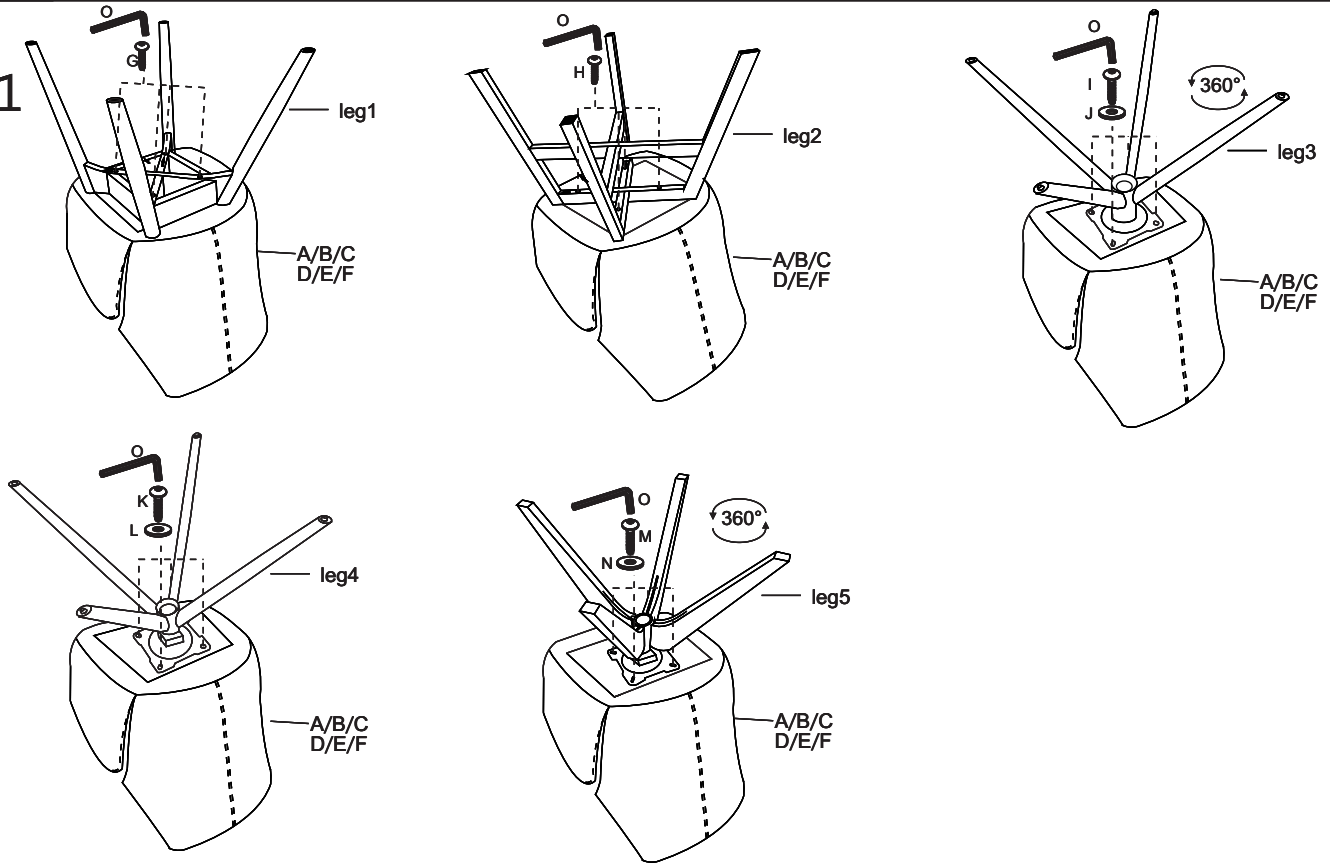

STEP2

