

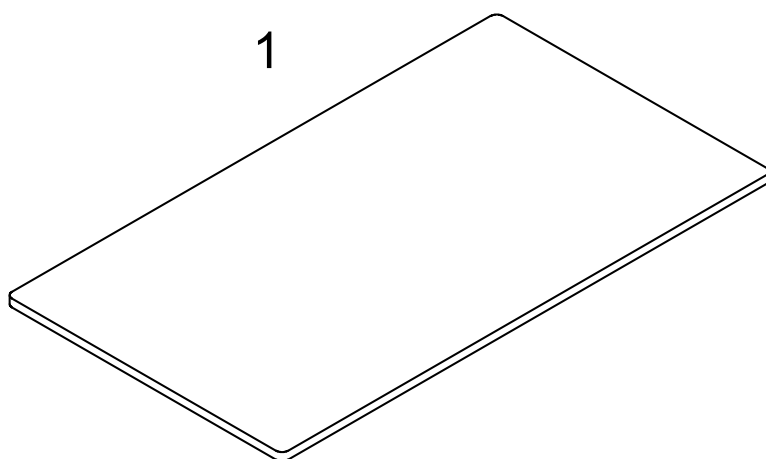
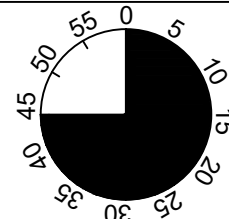
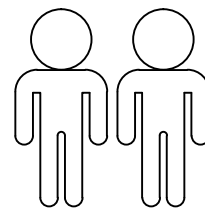



G 093 / G 112

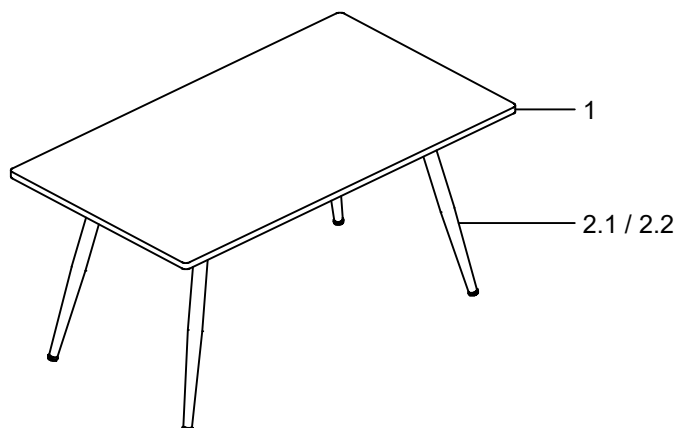



2.1




2.2

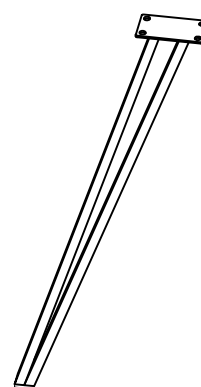

3

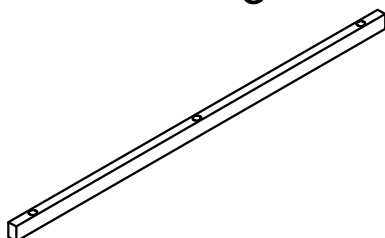

1	1X	1/2
2.1/2.2	4X	2/2
3	2X	2/2



2/2

A



M6x12

6x


B



M8x12

16x

C



M6x35

6x

D



M8x16

16x

E



Ø18xØ8x1.5

16x

F



Ø25

4x

G



Ø18xØ6x2.5

2x

H



5MM

1x

I



6MM



1x

J





8MM

1x

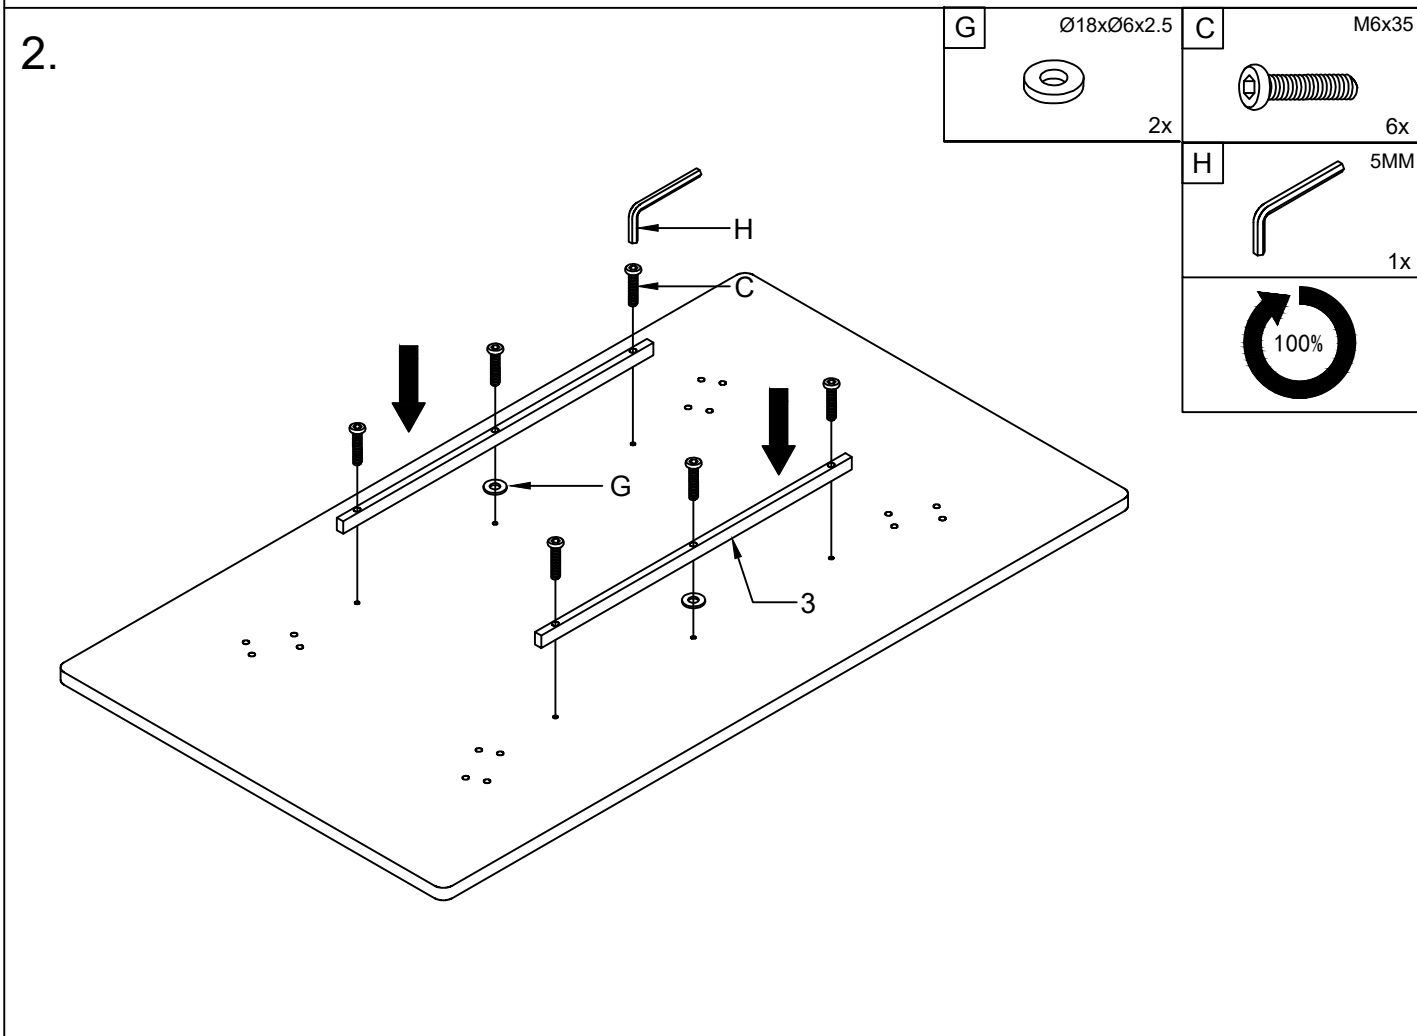
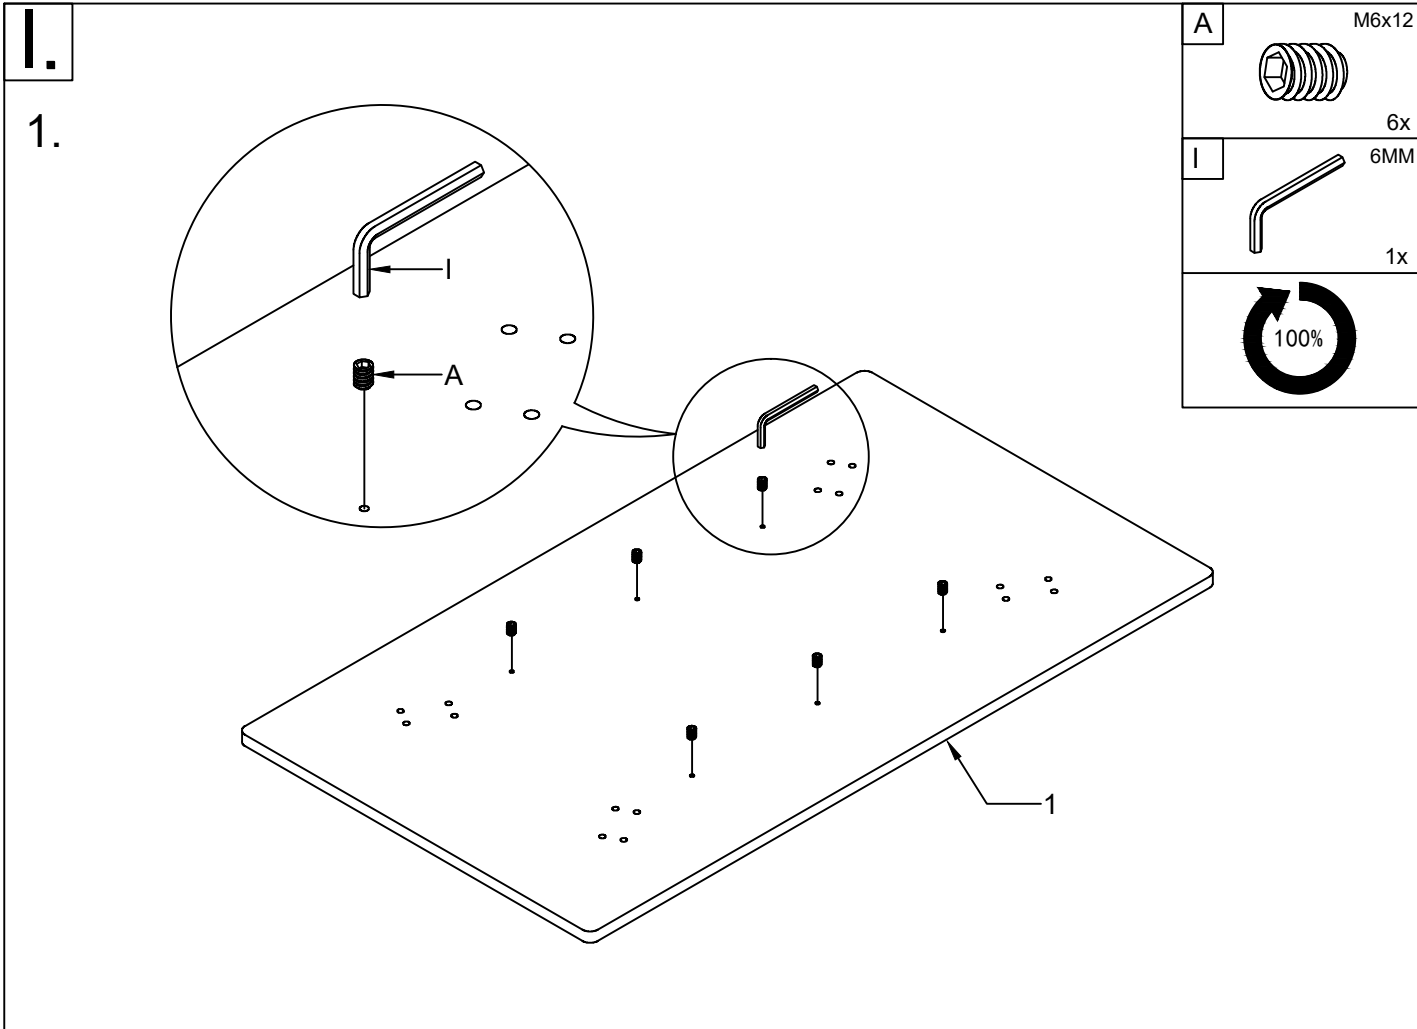



II.

3.



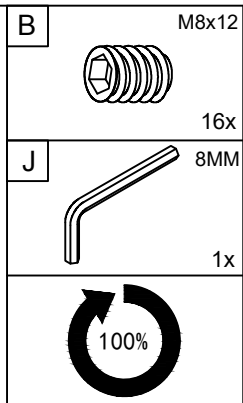
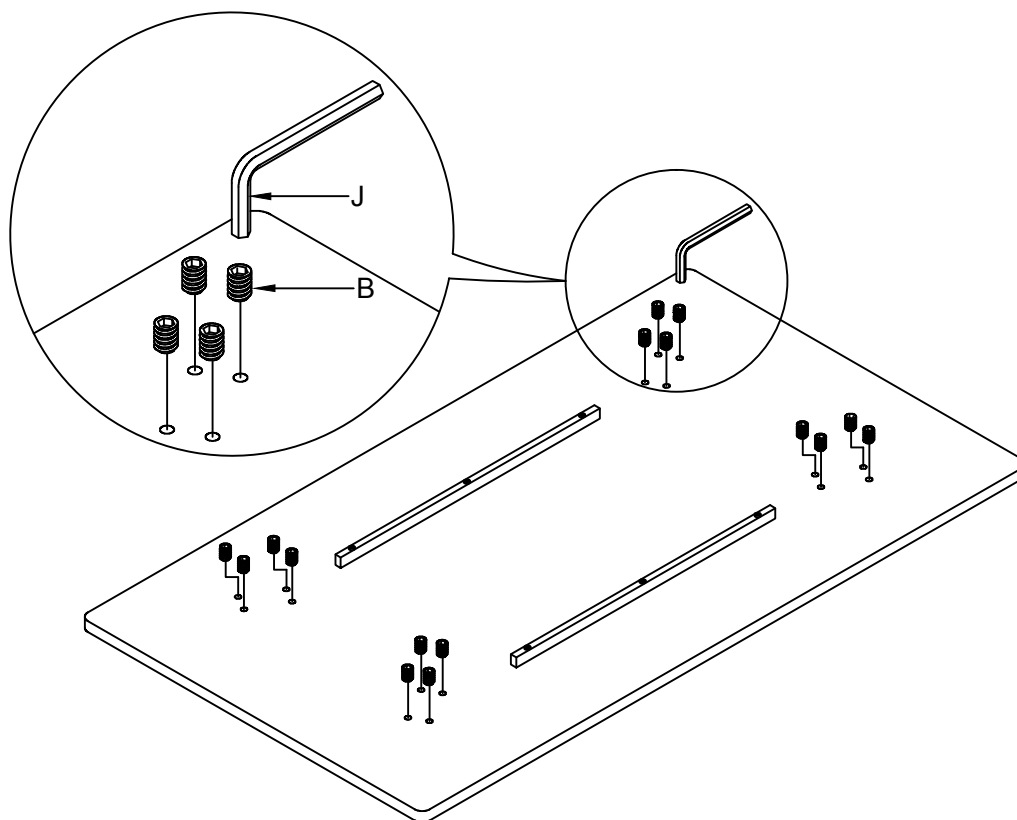


4.1 → 2.1

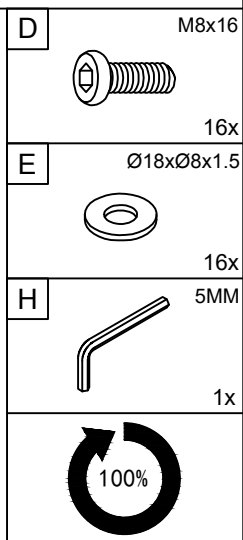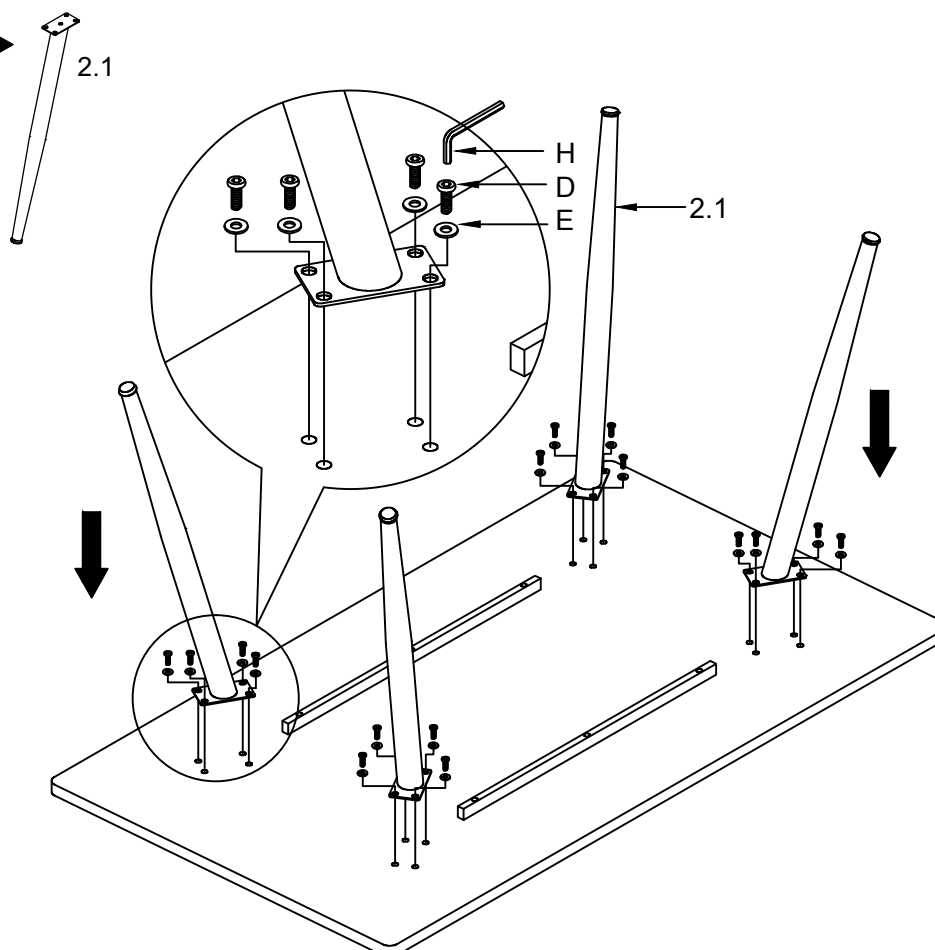

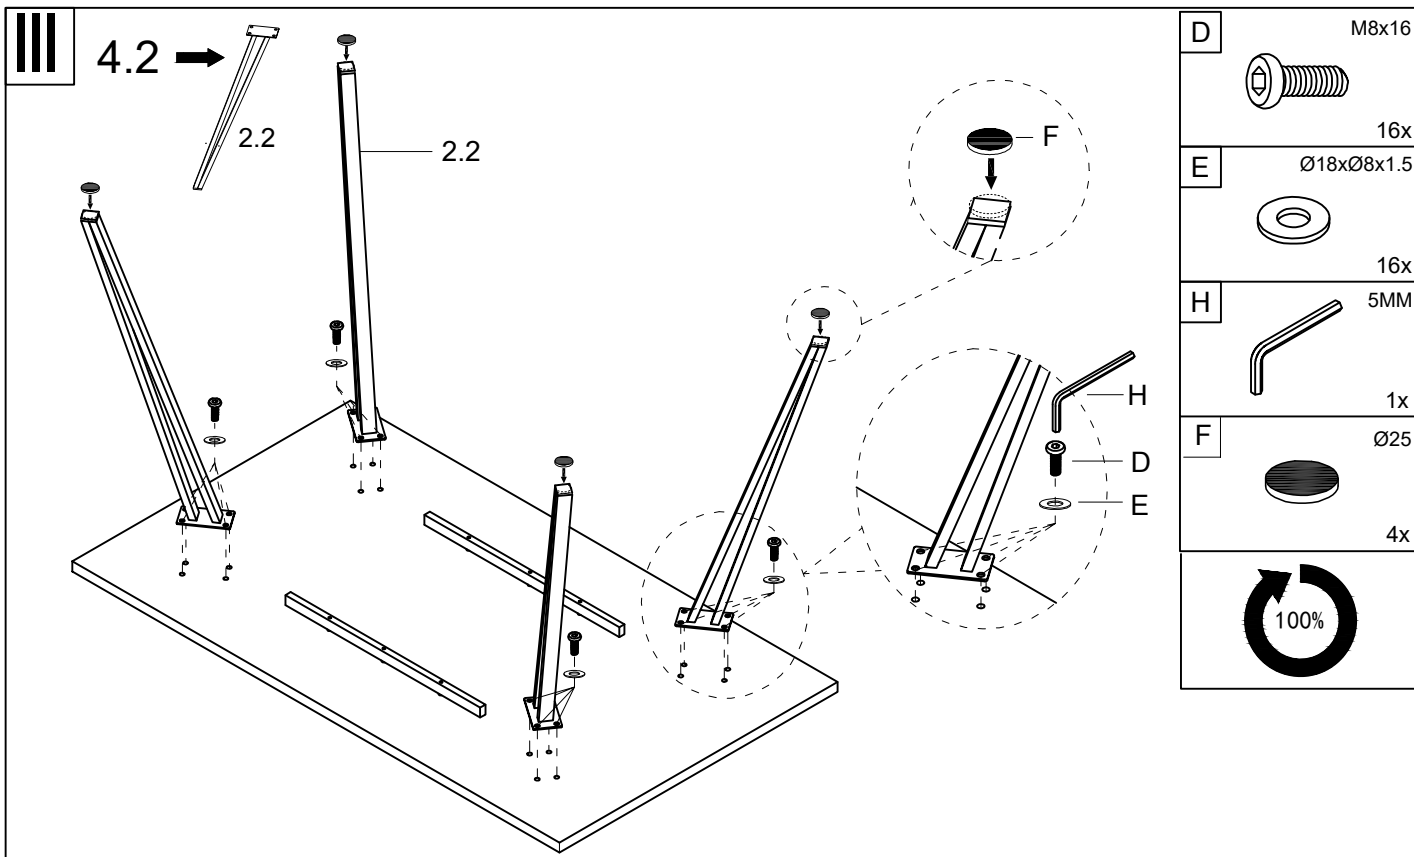

5.

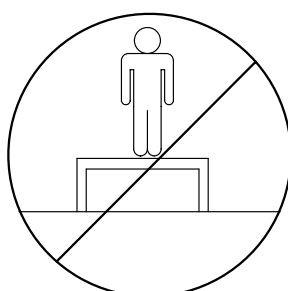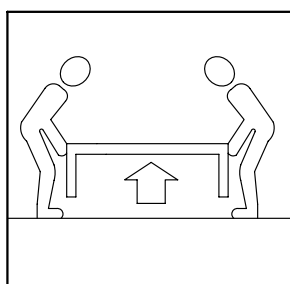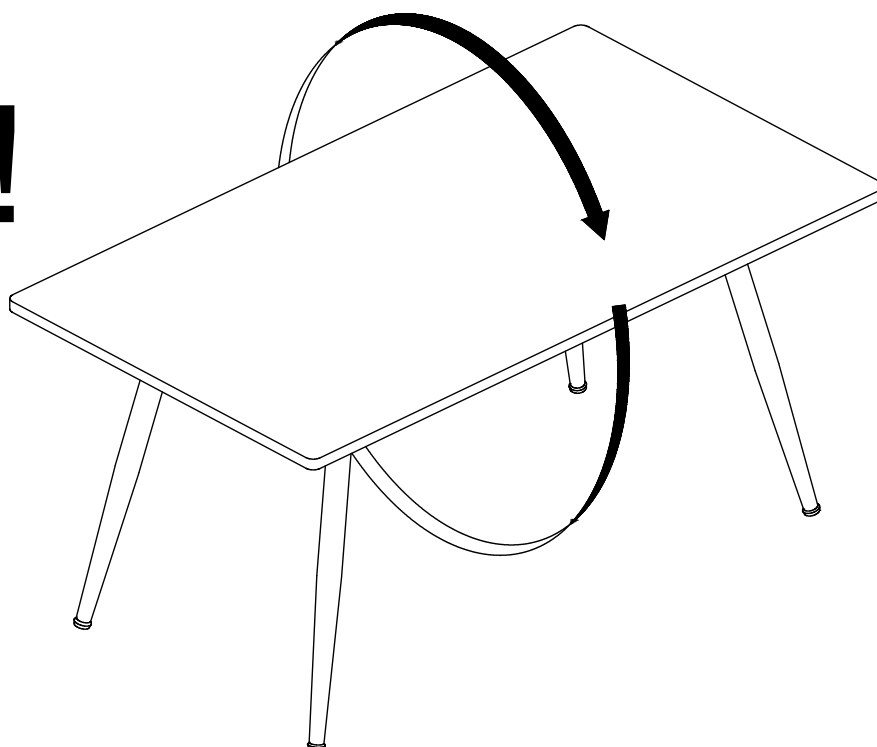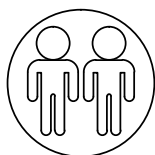

Séparez les éléments avant de trier