
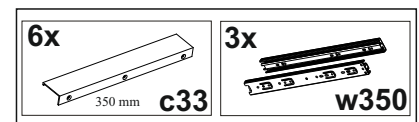
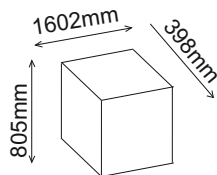
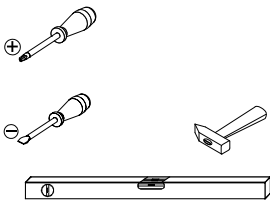
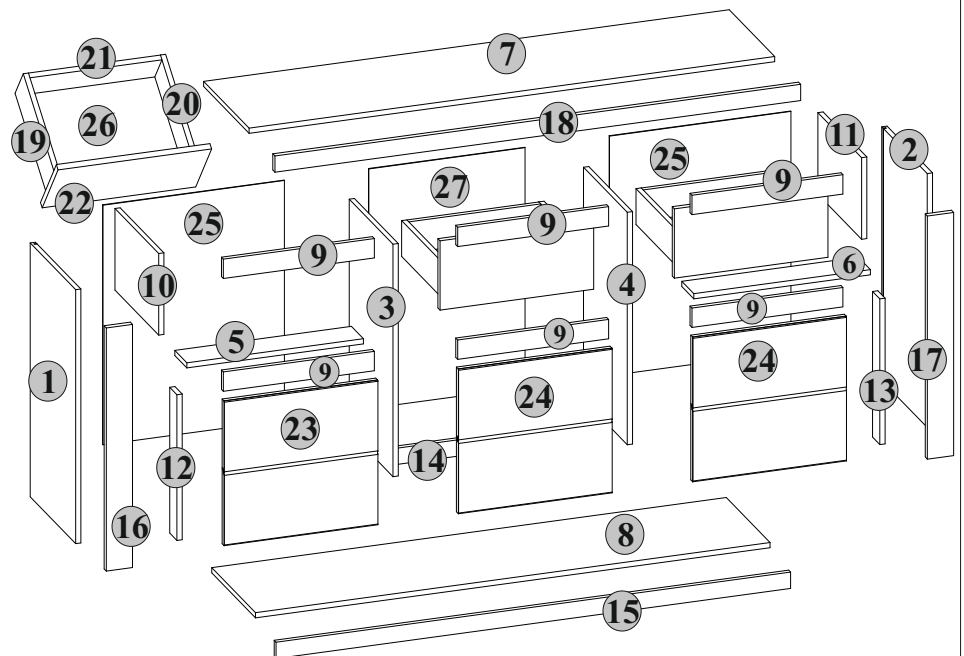
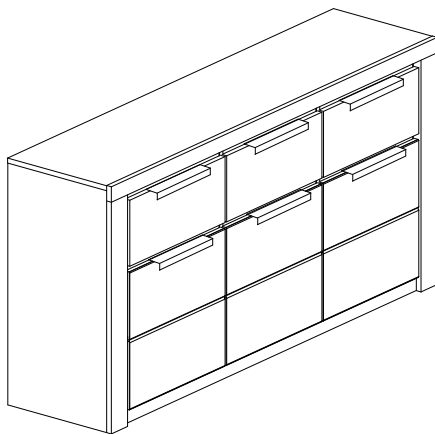



6556

versionsnummer: 25.05.2025

Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.












B1			B2		B3		B4
7x  l2	75x  φ15 #12.5 r1		10x  φ6.5x50 mm e1	8x  s1	4x  φ4.2x13 mm p38		
75x  s2	8x  k1		57x  φ8x30 mm f1	29x  1x16 l1	8x  l9	70x  φ3.5x13 mm p1	6x  b1
67x  r16	8x  r24		1x  z1	4x  φ8x50 mm f6	2x  φ4x30 mm p9	8x  φ2x20 mm p27	6x  a2
					4x  n27	4x  φ6.3x13 mm e3	

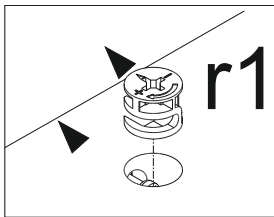

16x
 $\phi 8 \times 30$ mm
f1


28x
r16

23x
 $\phi 15 \# 12.5$
r1

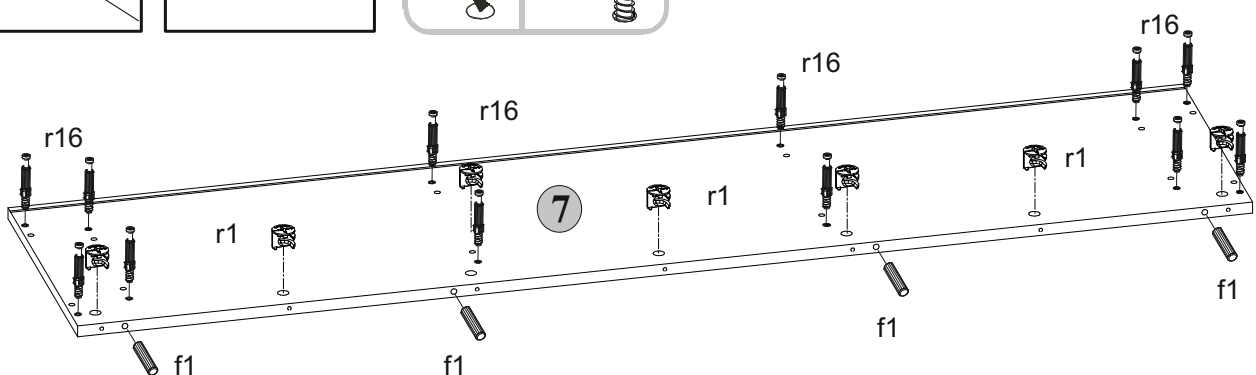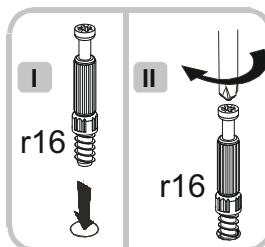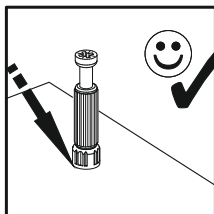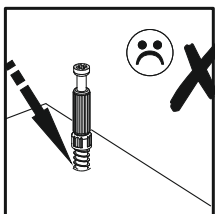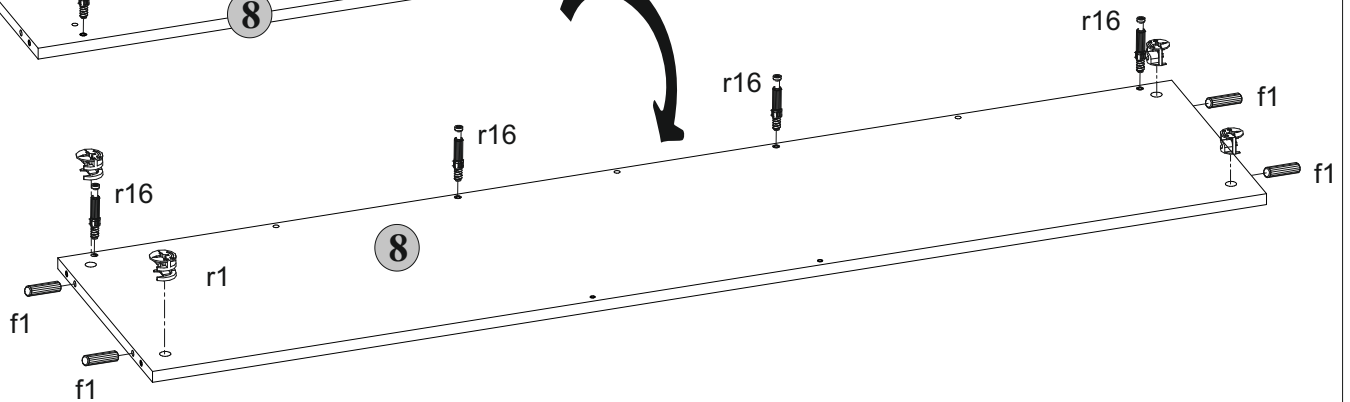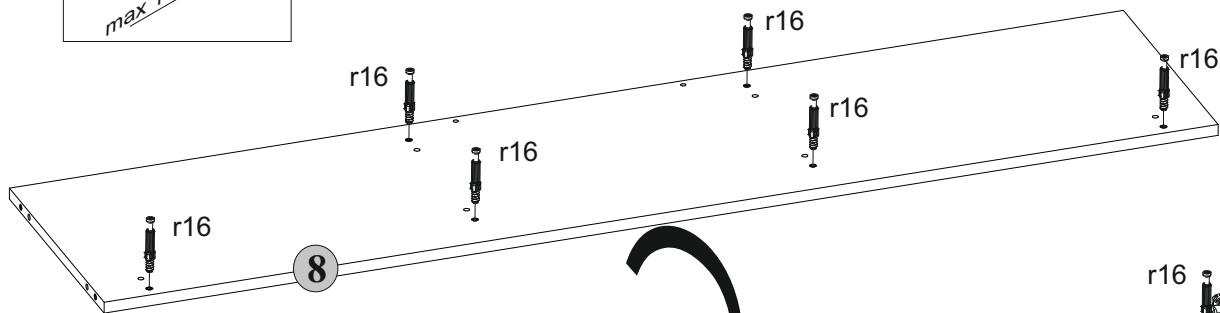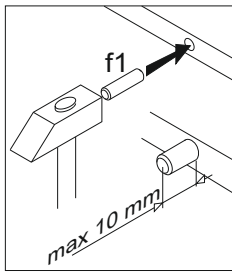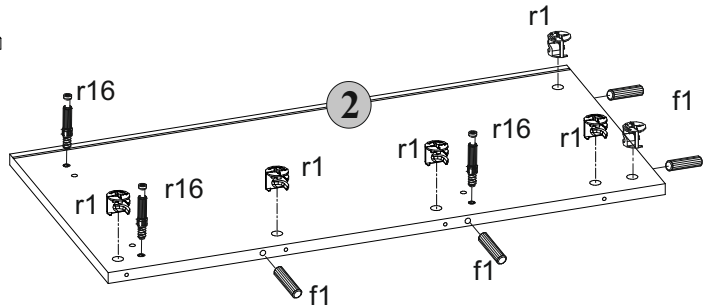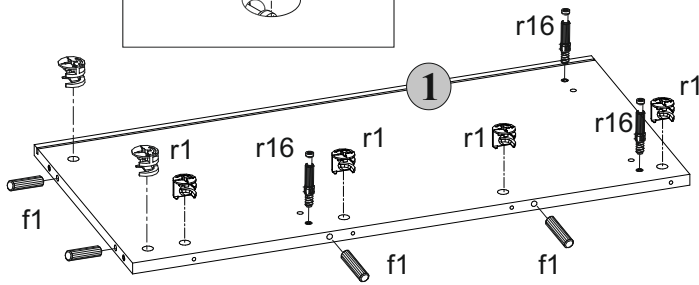

2

2

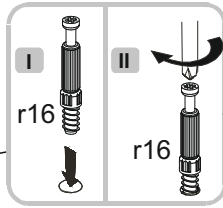

14x
φ8x30 mm
f1

12x
φ15 #12.5
r1











18x
φ3.5x13 mm
p1

8x
r24

4x
r16


3x
w350

2x
b1

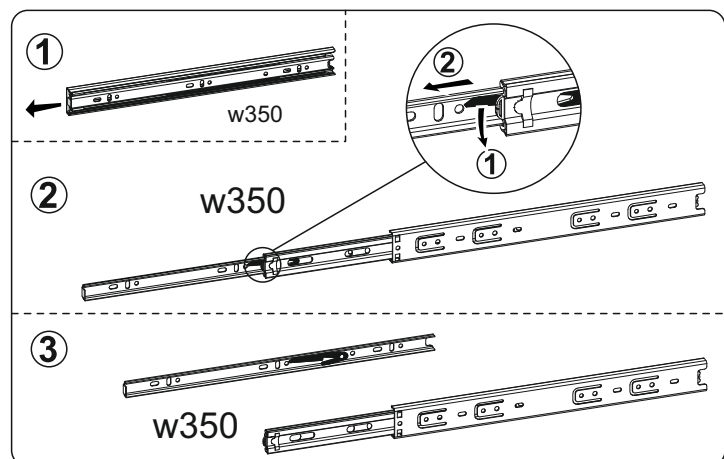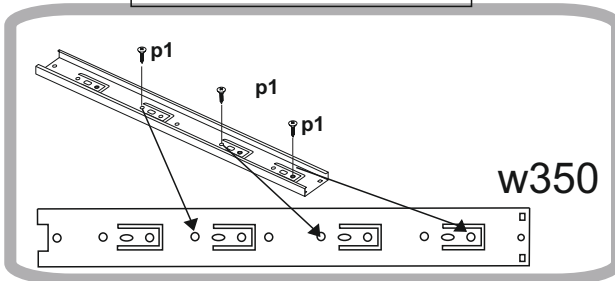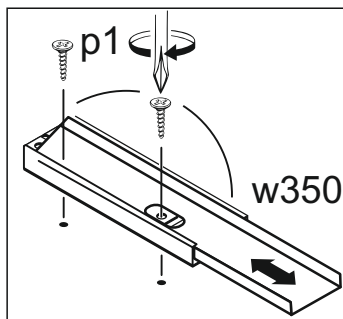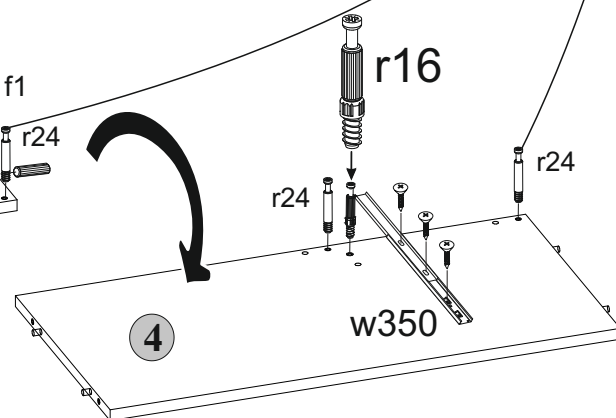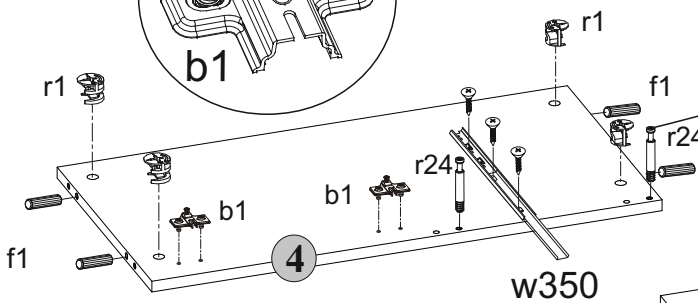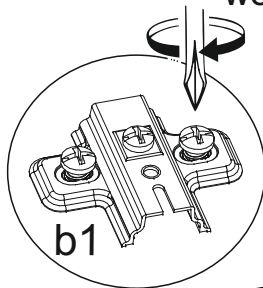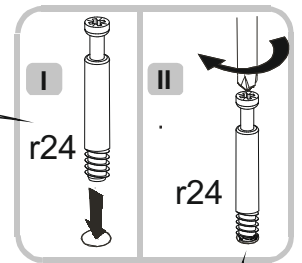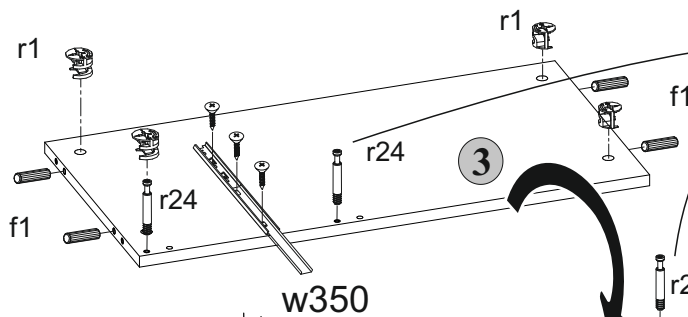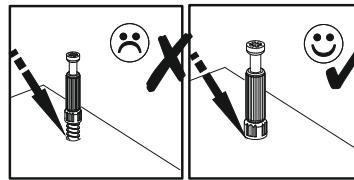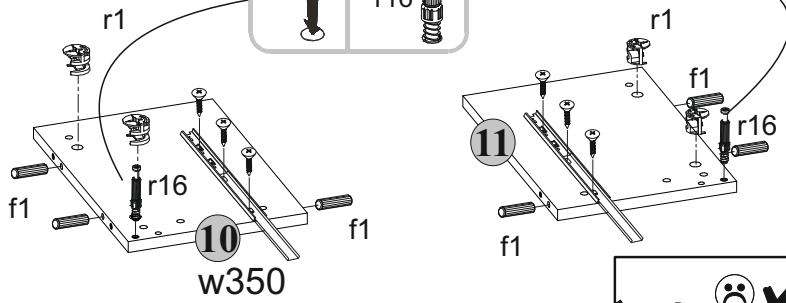

3













3

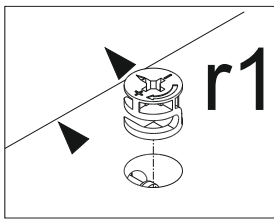

11x
φ8x30 mm
f1
















21x
r16

24x
φ15 #12.5
r1

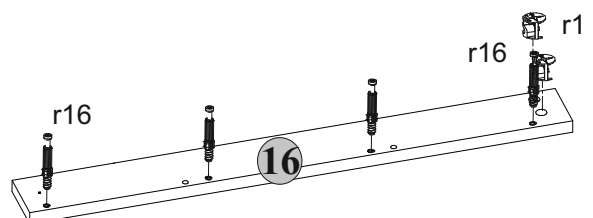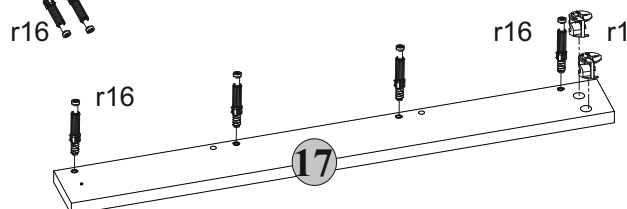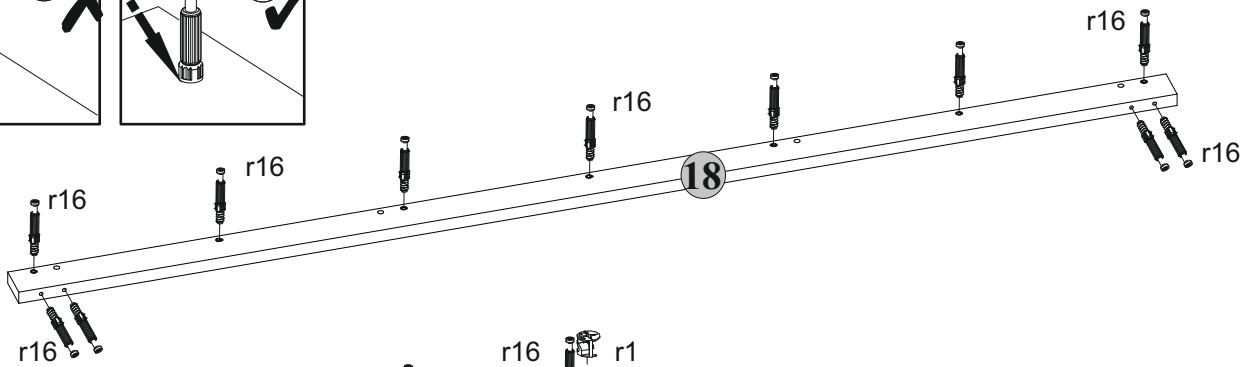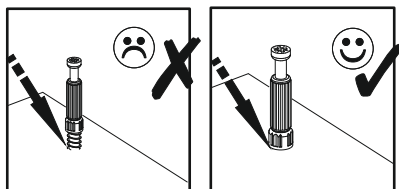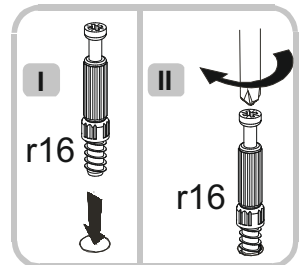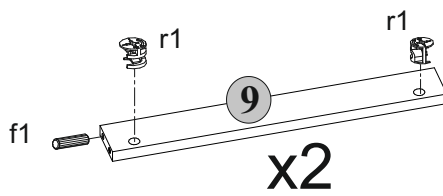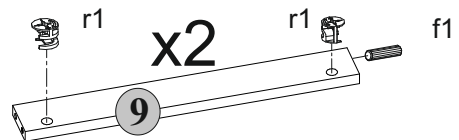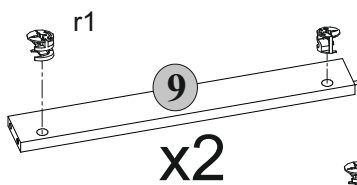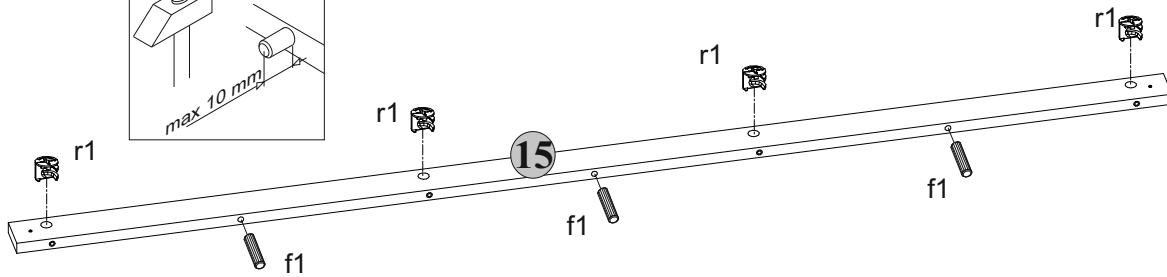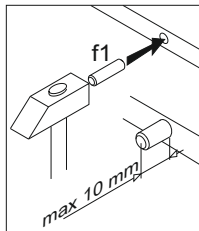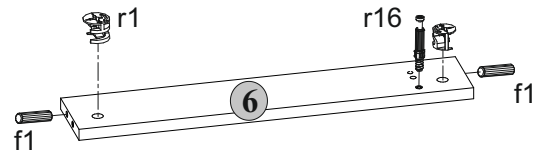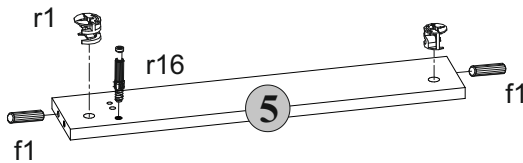

4

4

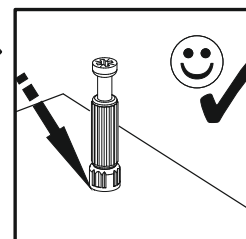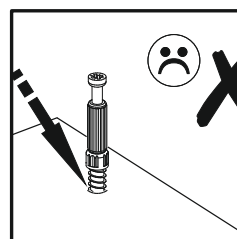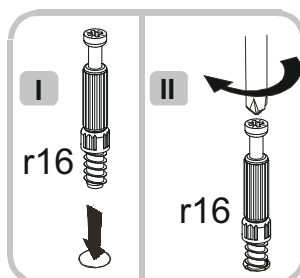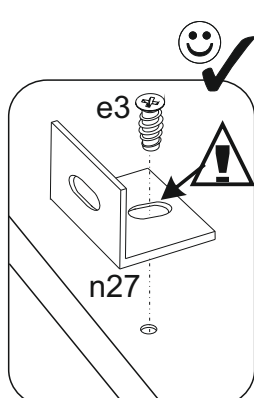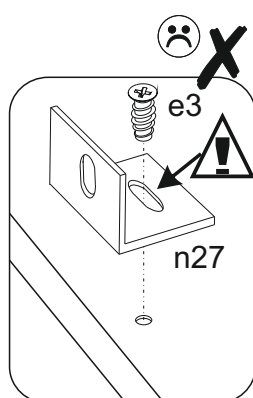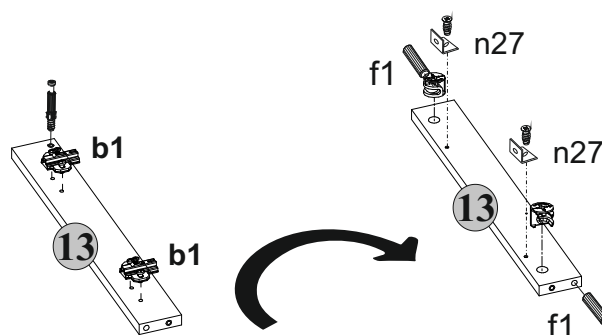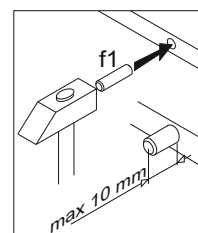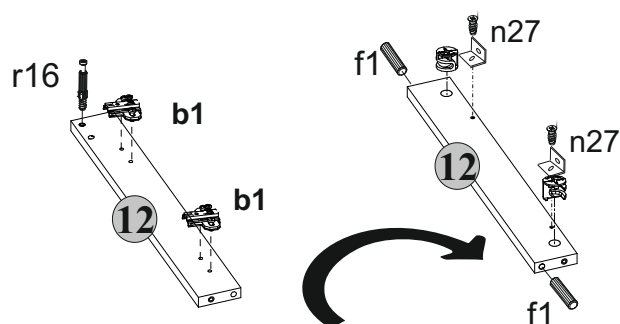

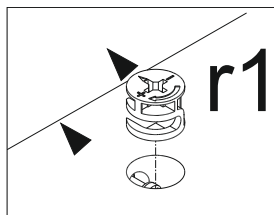
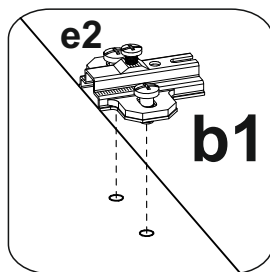


5


5

6x
a2

12x
p1
φ3.5x13 mm

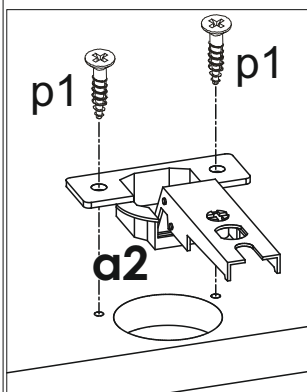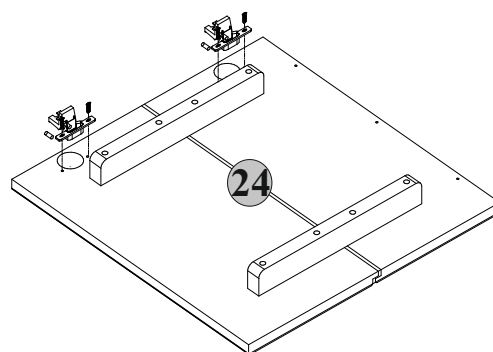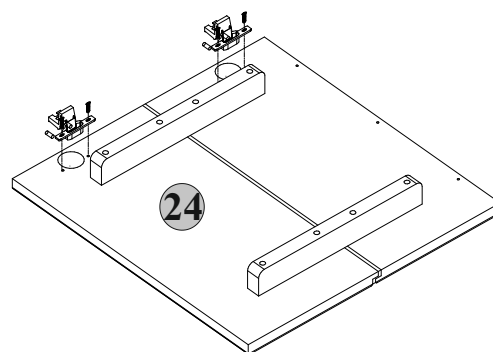
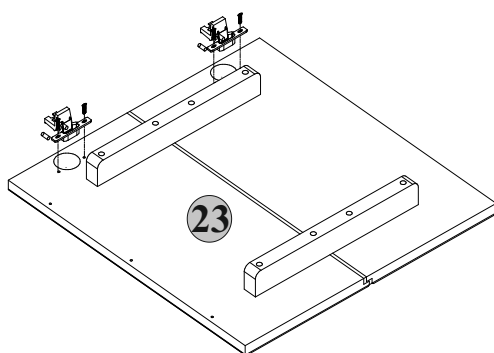


6






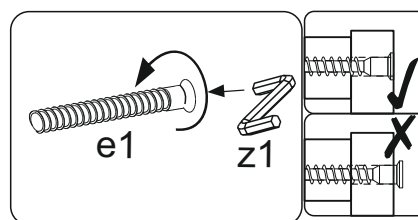


2x
e1
φ6.3x50 mm



2x
s1

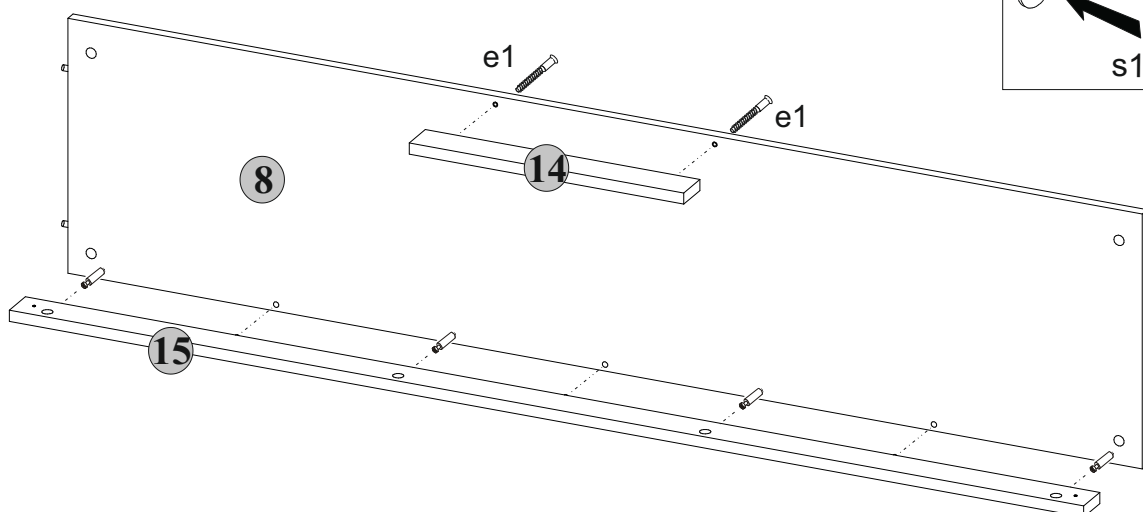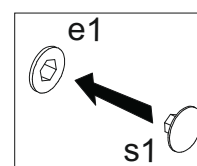


6

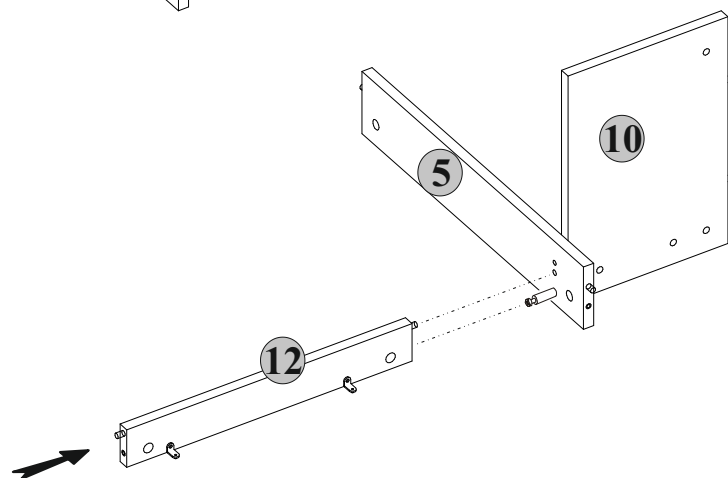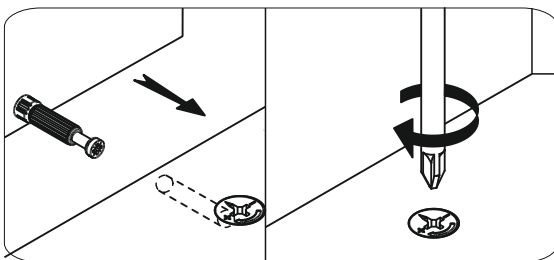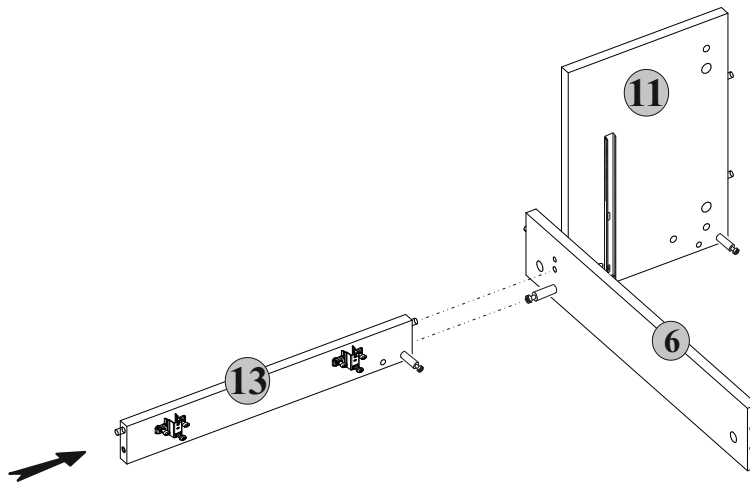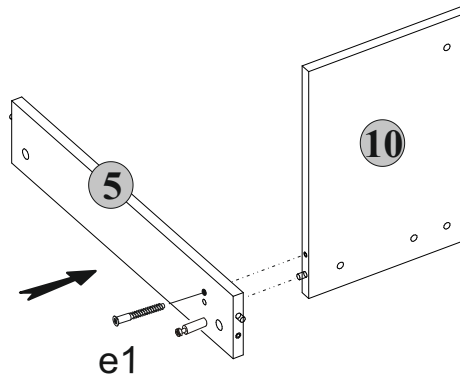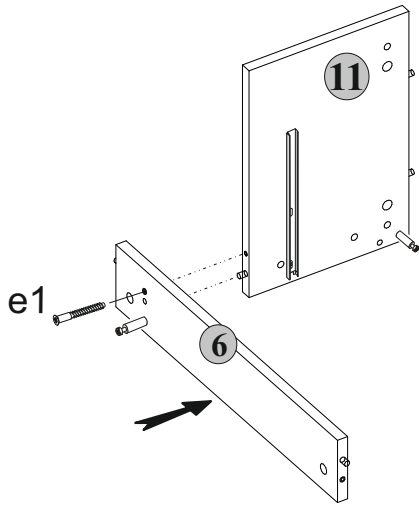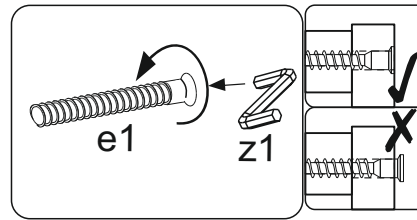

8

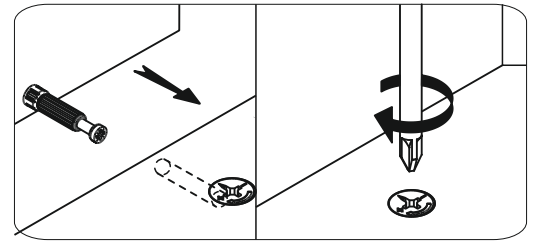
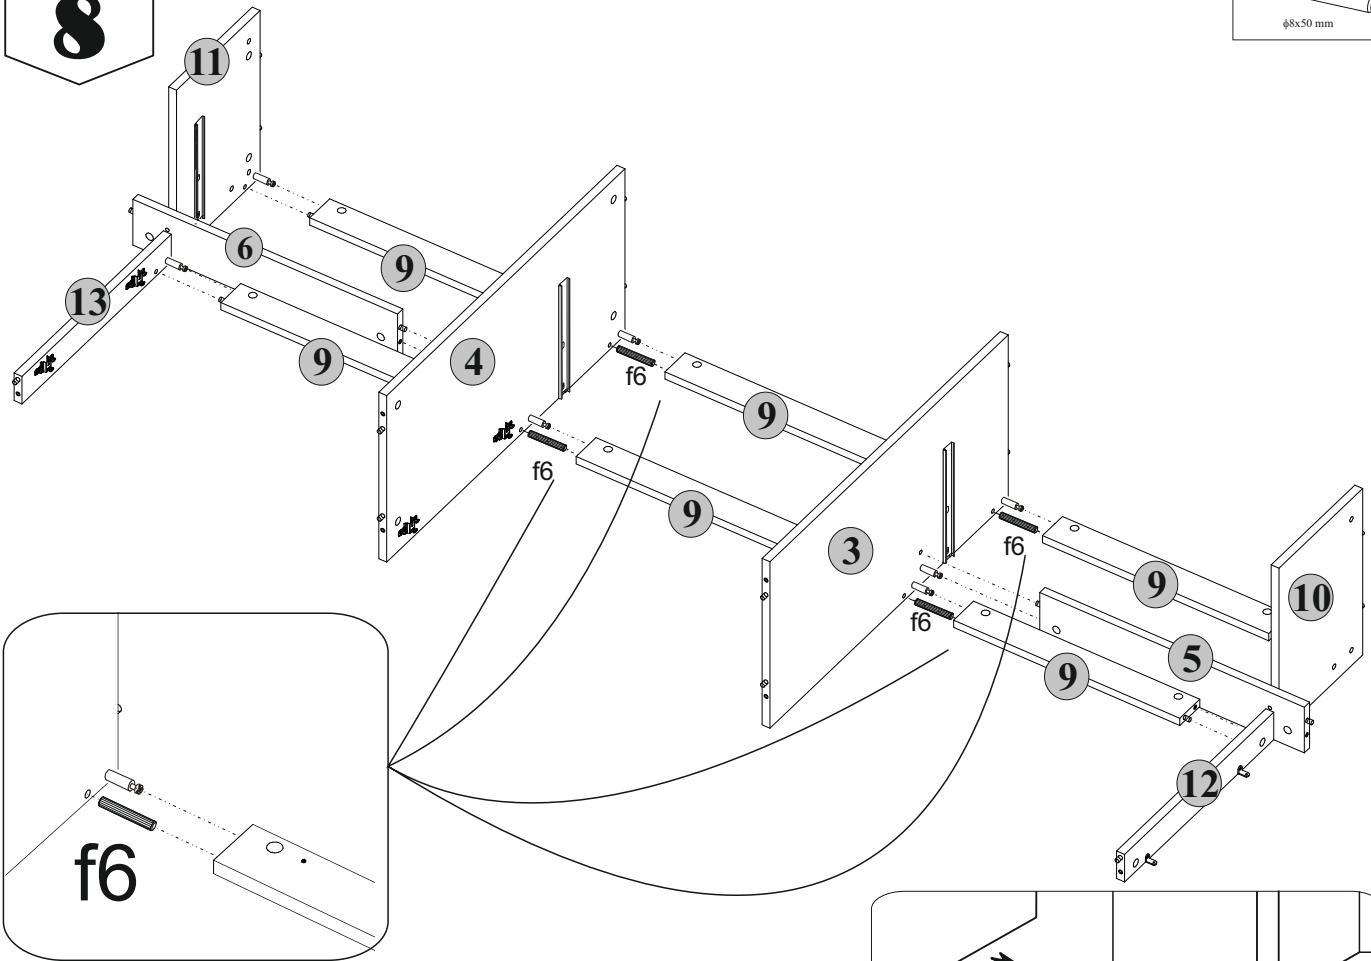


9


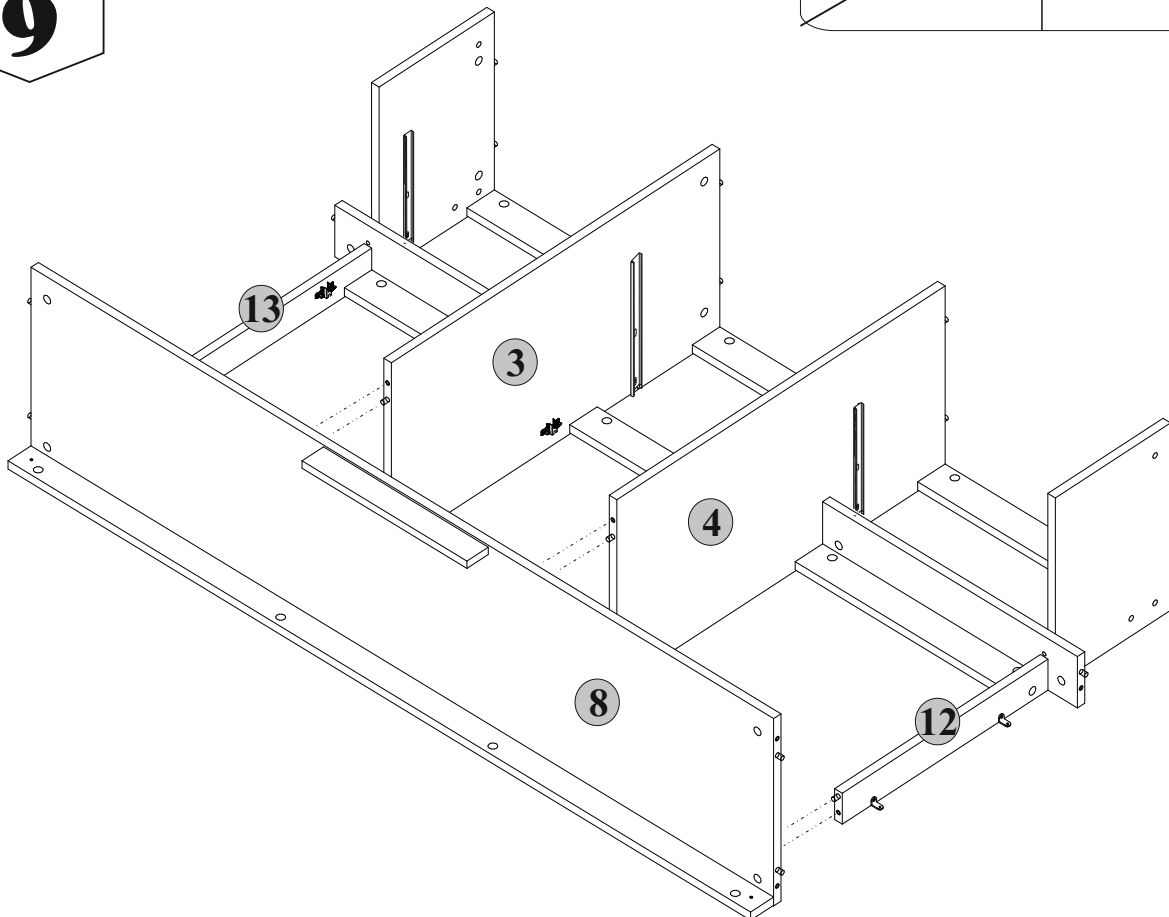


8






10

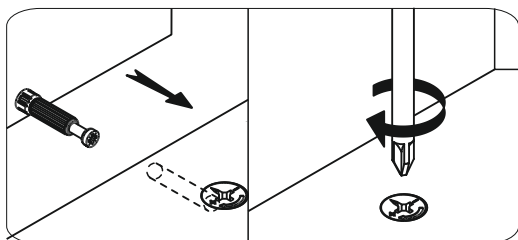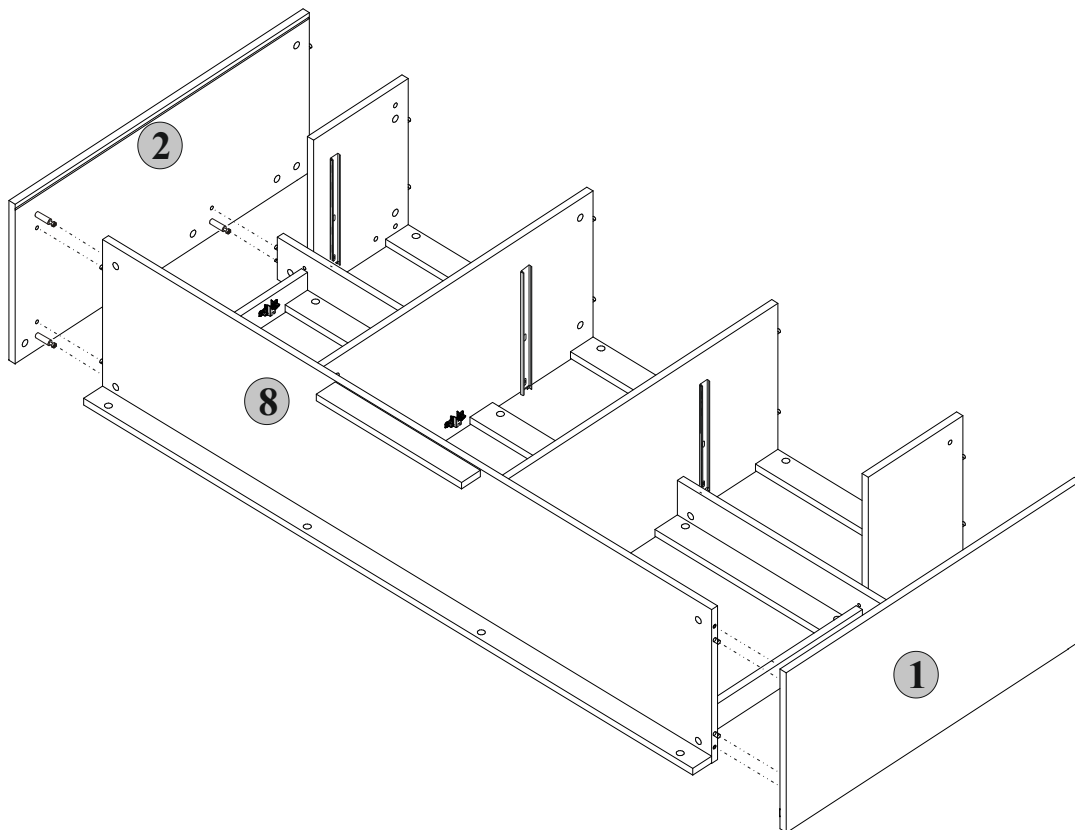

11

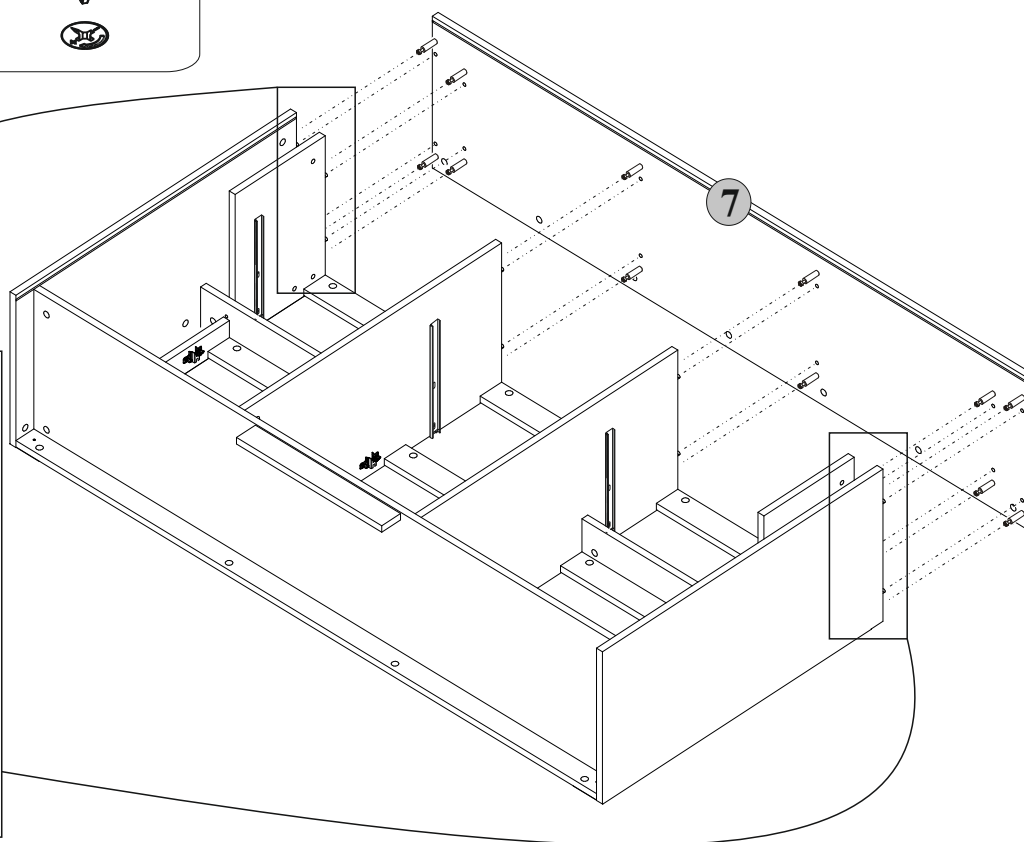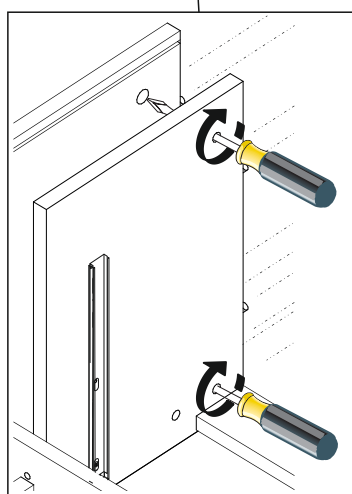

12

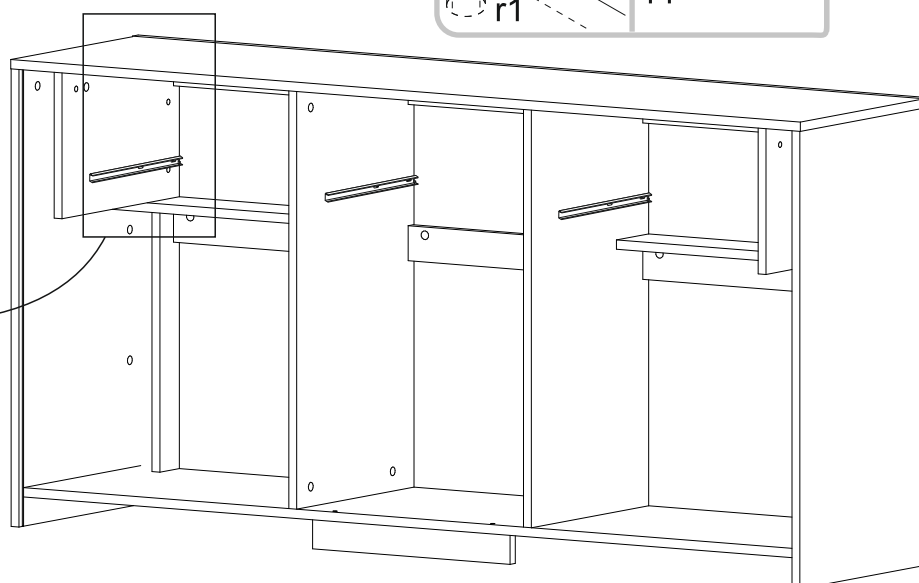
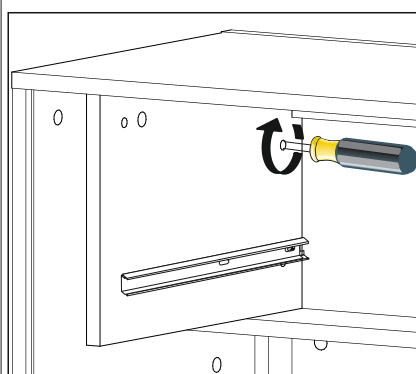
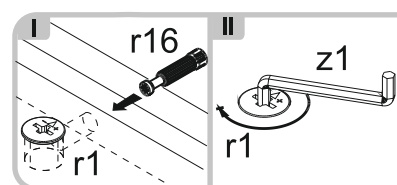
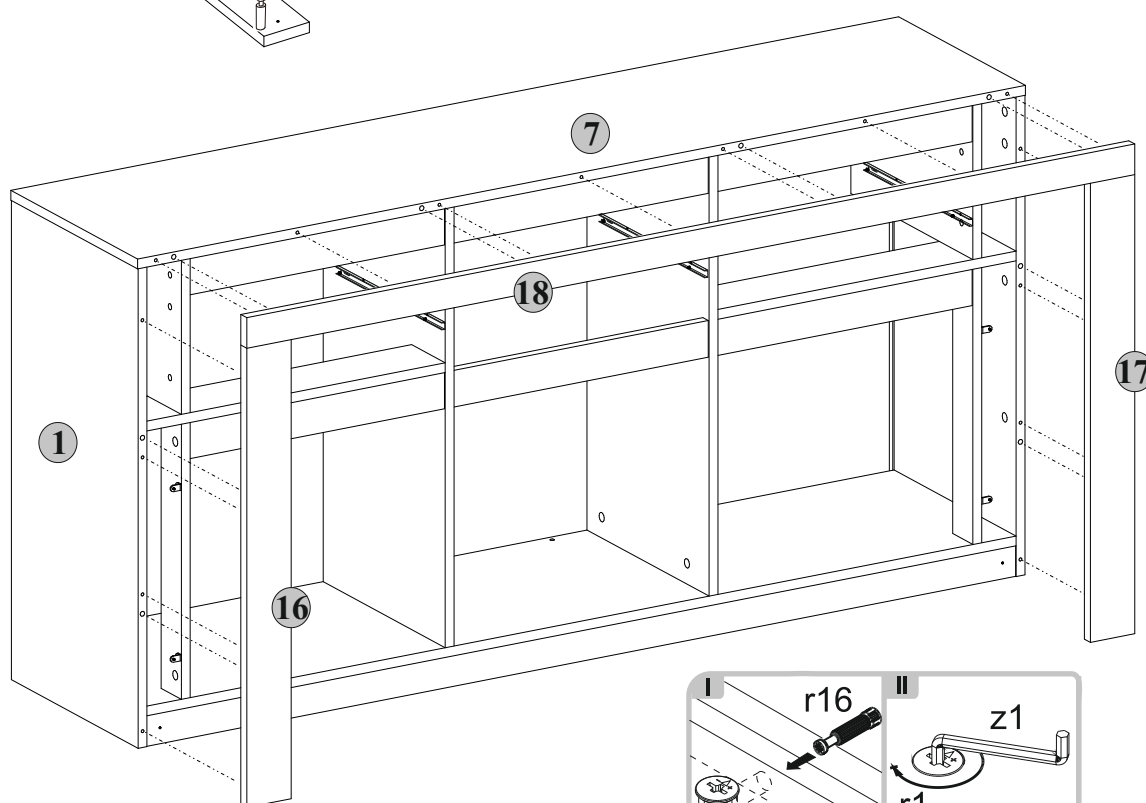
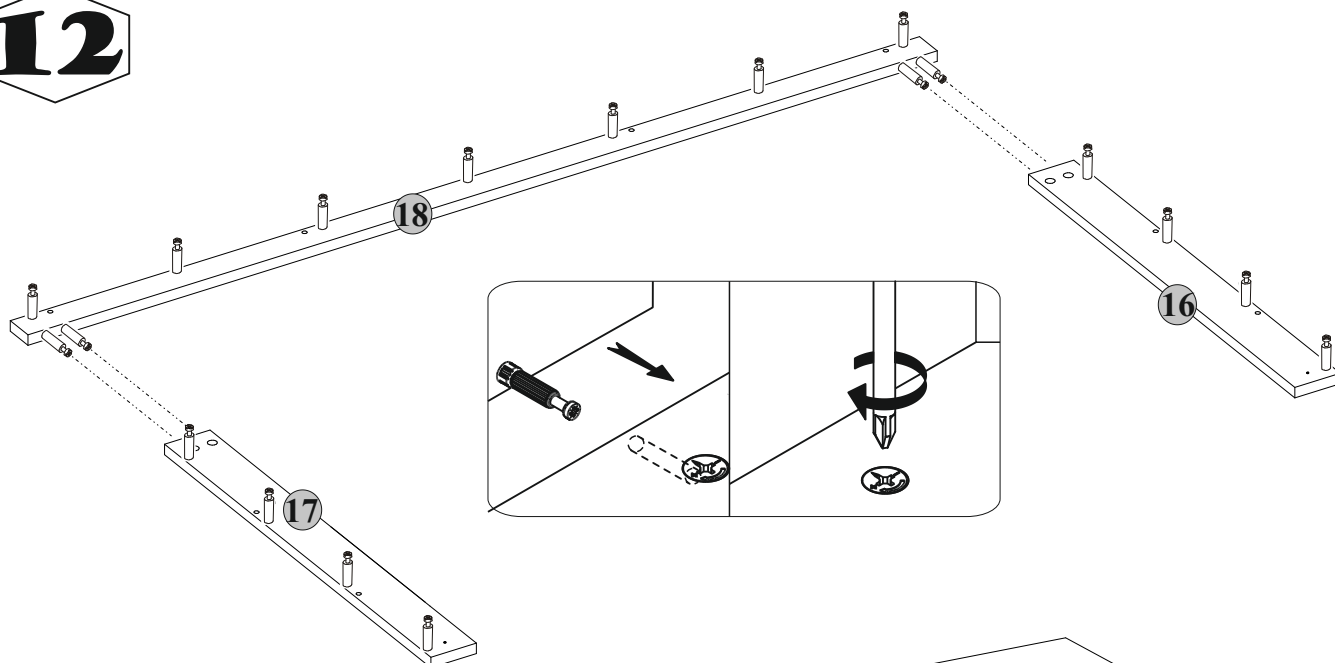


10










13

4x
 $\phi 4.2 \times 13 \text{ mm}$ p38

2x
 $\phi 4 \times 30 \text{ mm}$ p9

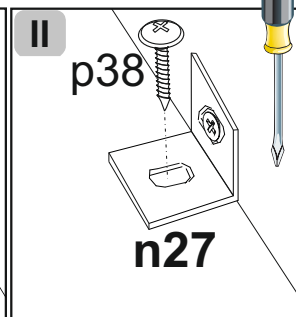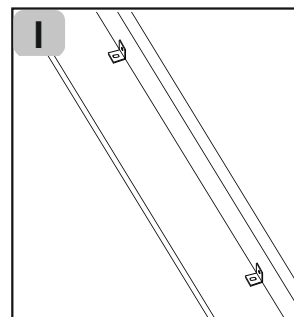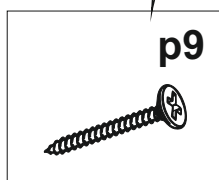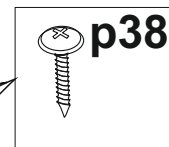
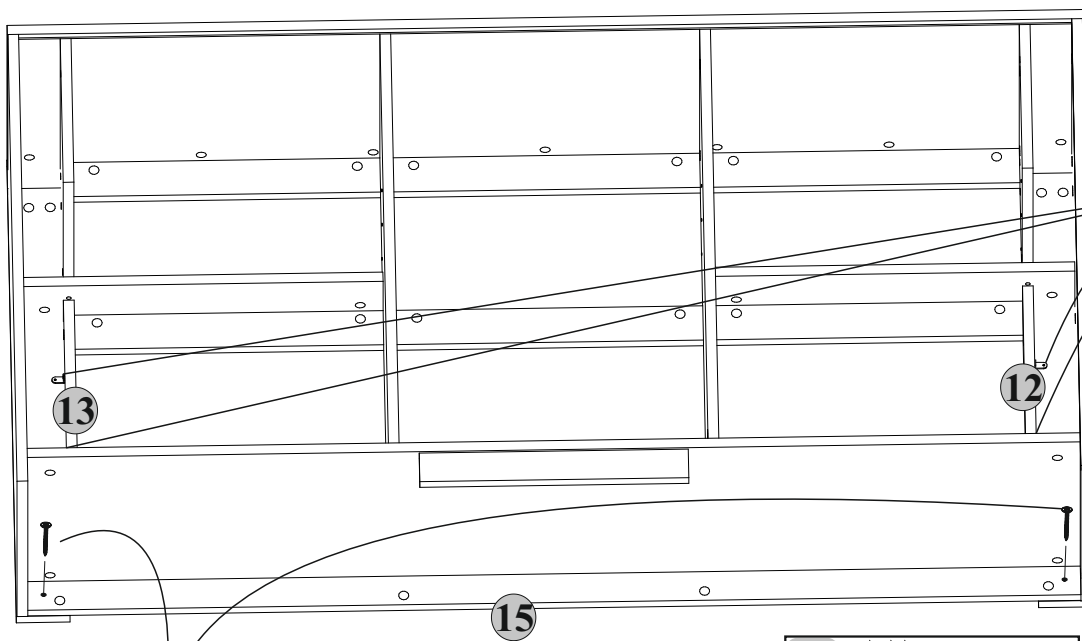


I4

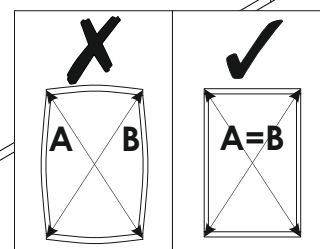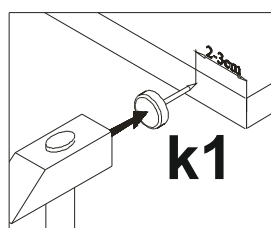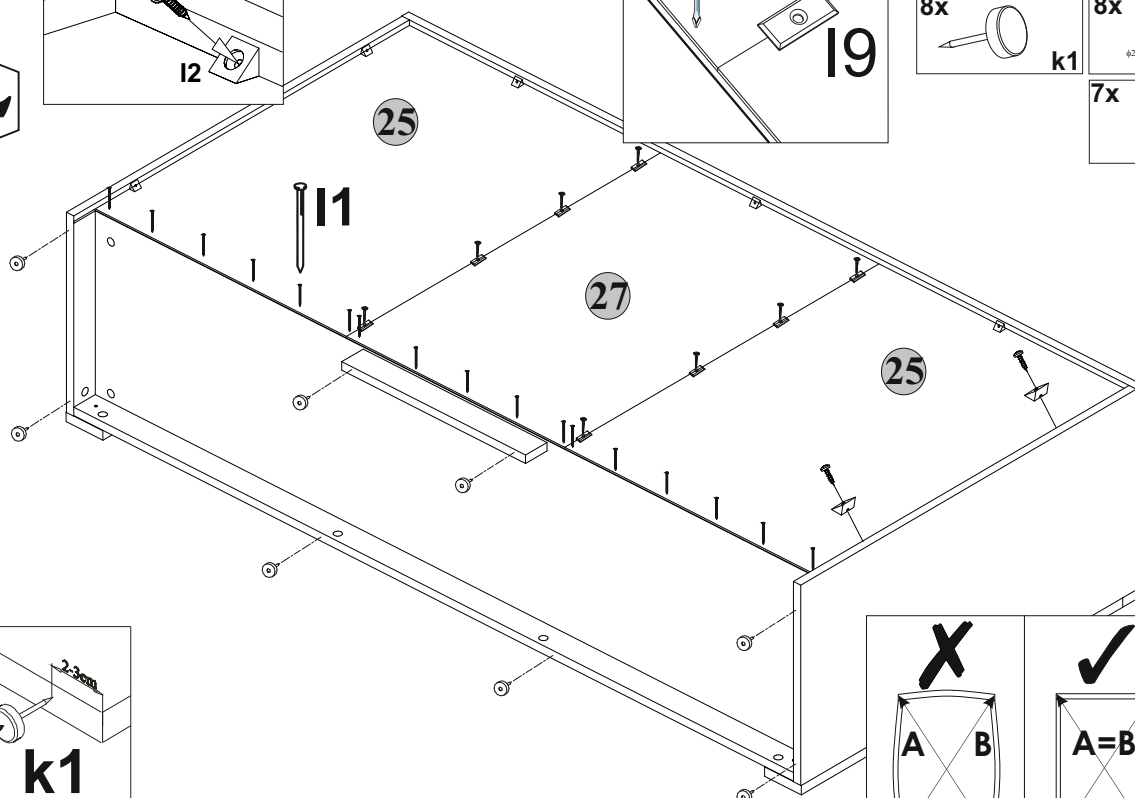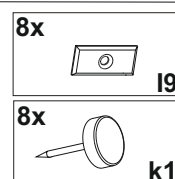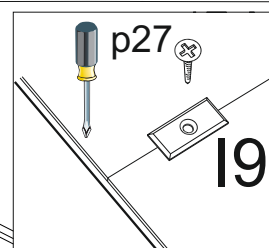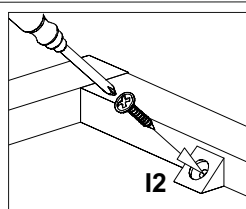

11

15x3

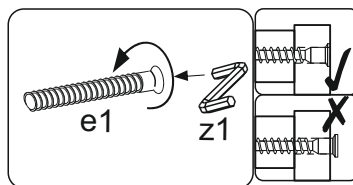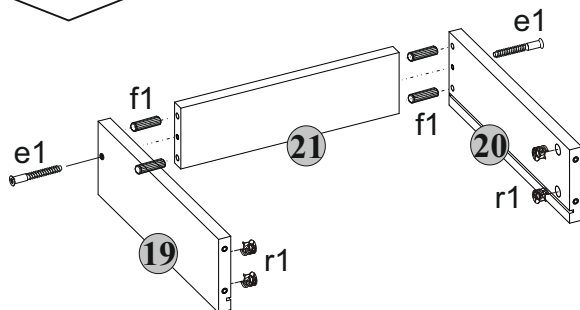

12x
φ8x30 mm
f1

12x
l1

27x
φ3.5x13 mm
p1












12x
r16

12x
φ15 #12.5
r1







3x
350 mm
c33

6x
φ6.3x50 mm
e1



6x
s1

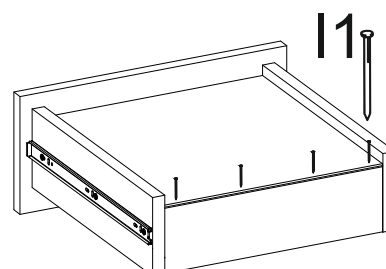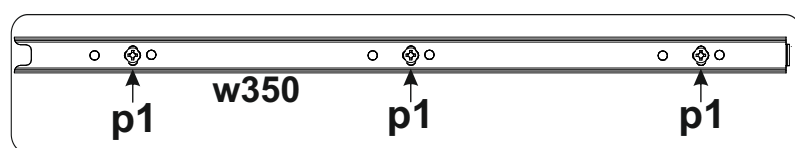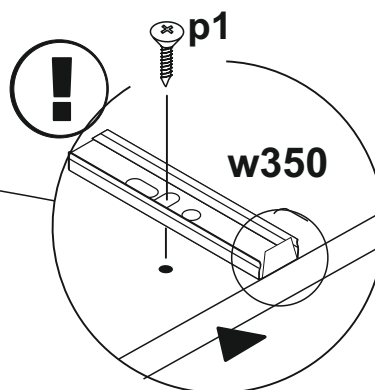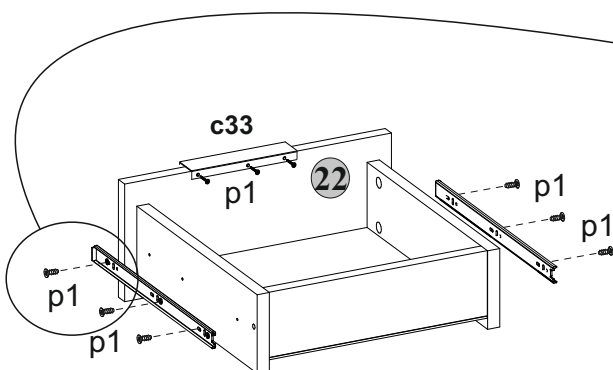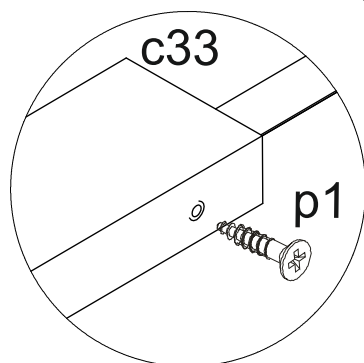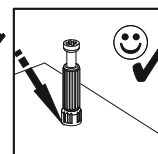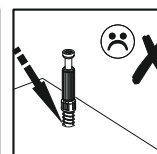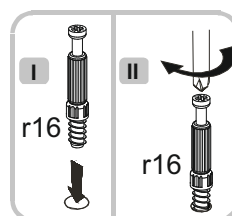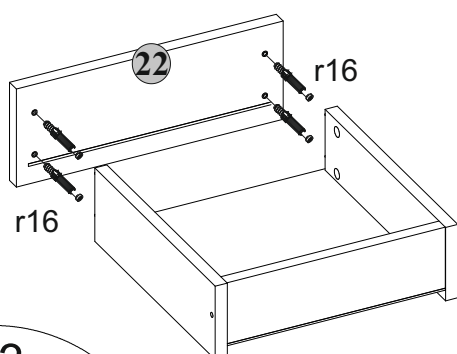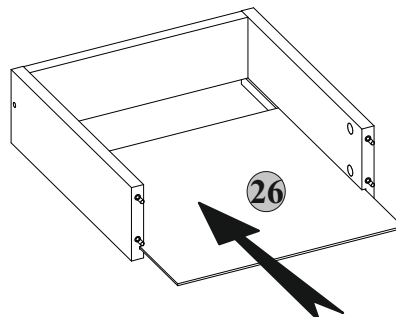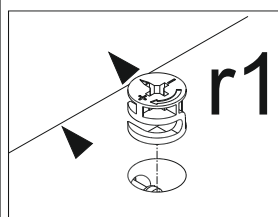

16

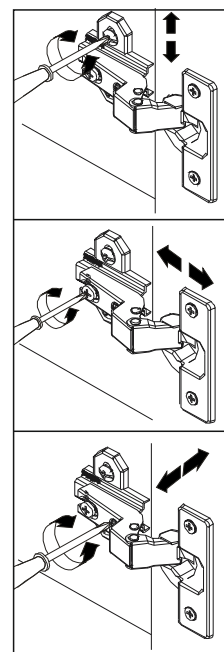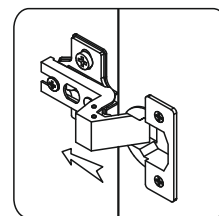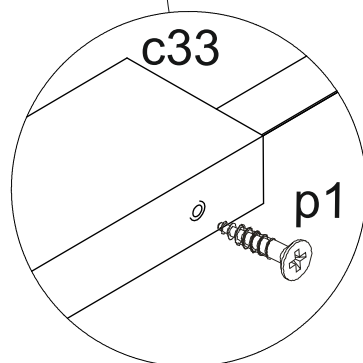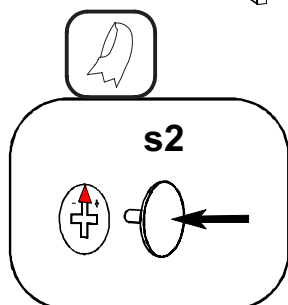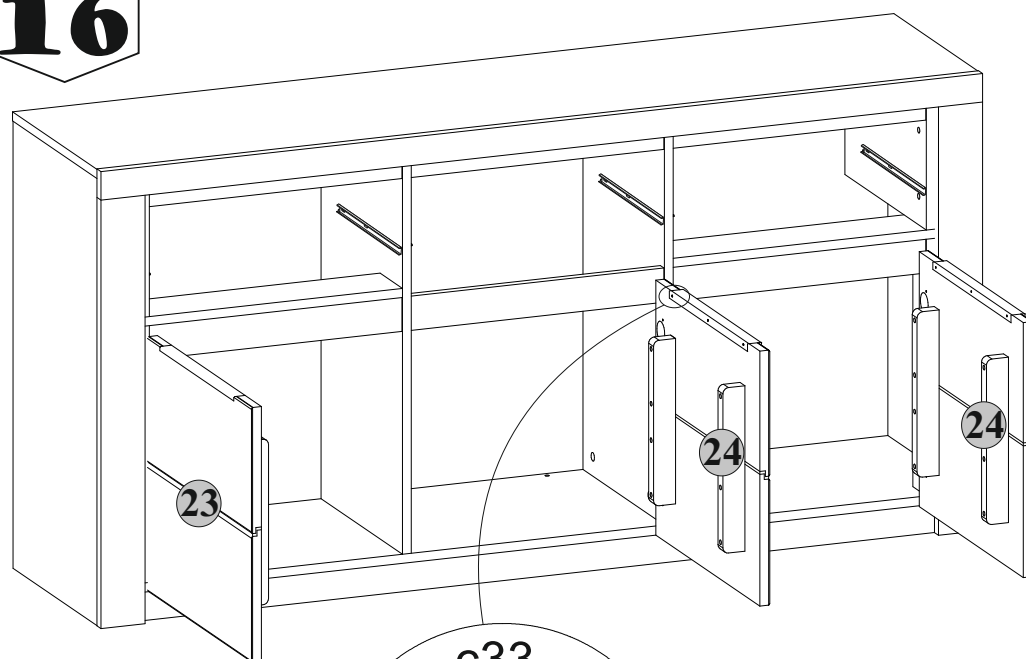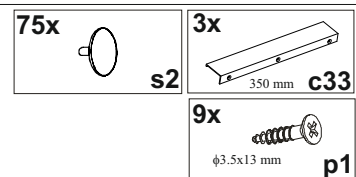

17

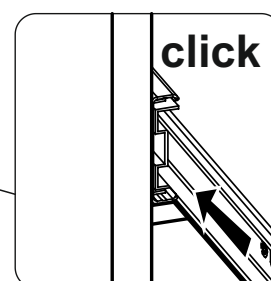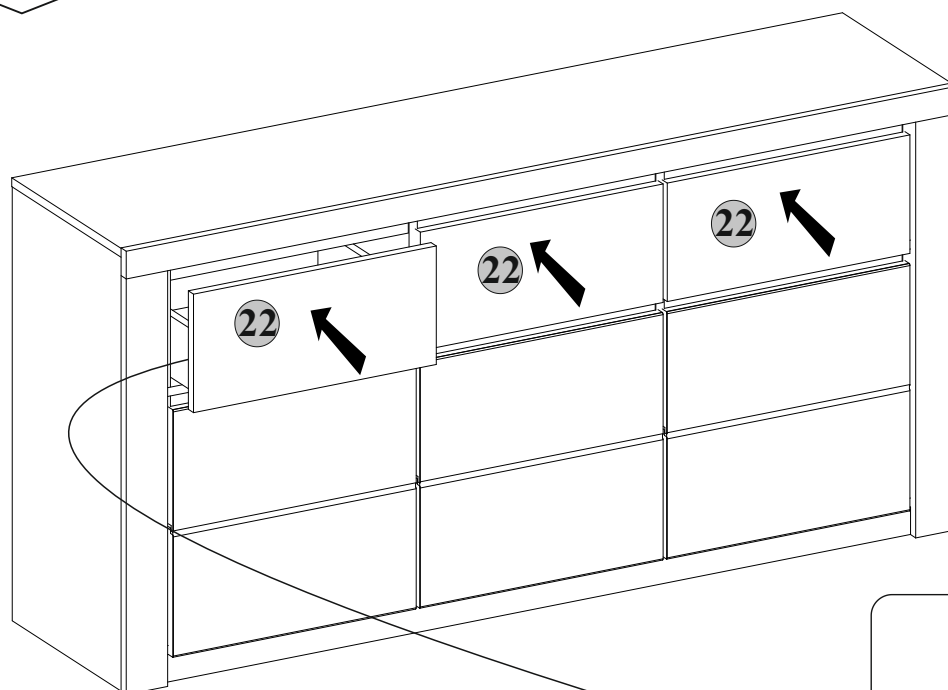

13