
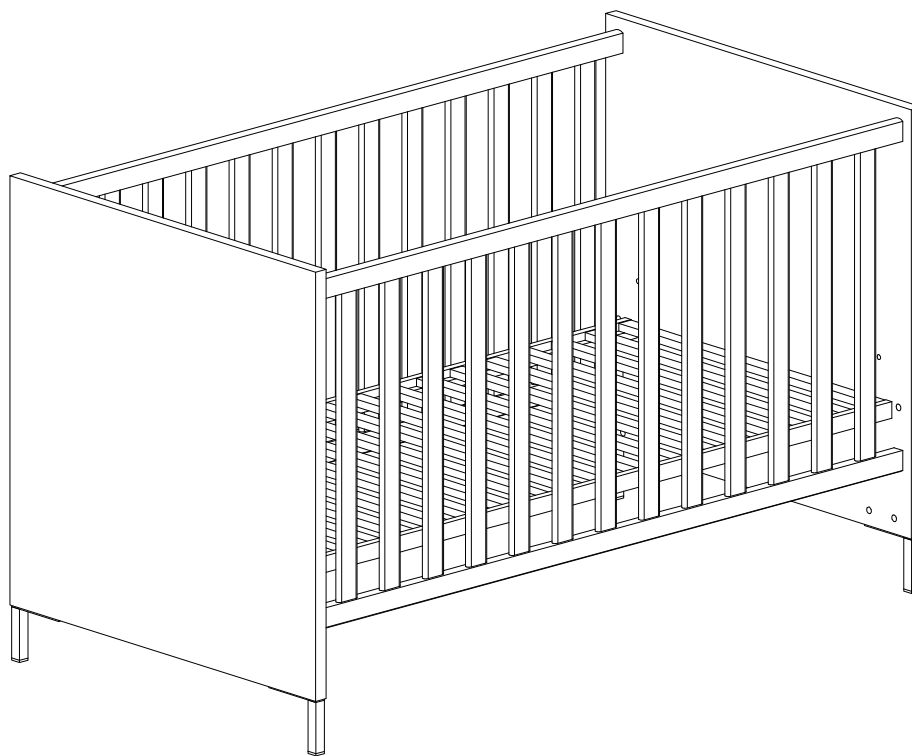
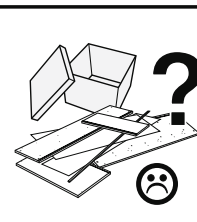
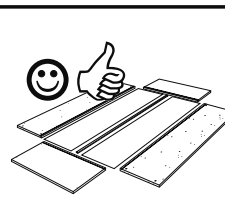
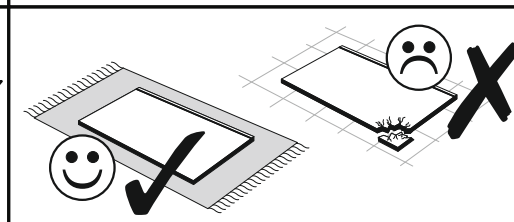
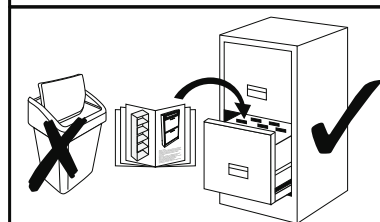
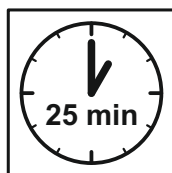
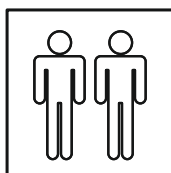


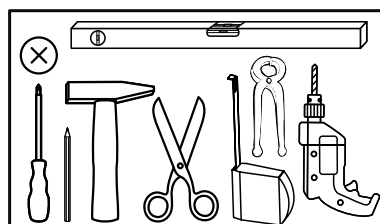

Artikel.-Nr.:




0429-BH


Montageanleitung.-Nr.:

MA1-00403



Das Ersatzteil-Anforderungsformular finden Sie auf
The replacement parts requisition form you find on
<https://www.maeusbacher.de/ersatzteile/>

BT1-00502 Colli 1/2


B10-110		B10-105		B10-101		B01-239		B10-115		B10-95	
8x		8x		8x	M6x6 SW3	1x	SW 3	12x	12x10 M6	4x	6,3x19
B10-06		B01-290		B01-240		B10-80		B10-85		B10-90	
8x		8x	M6x40 SW4	1x	SW 4	2x		2x		12x	




Colli 1/2

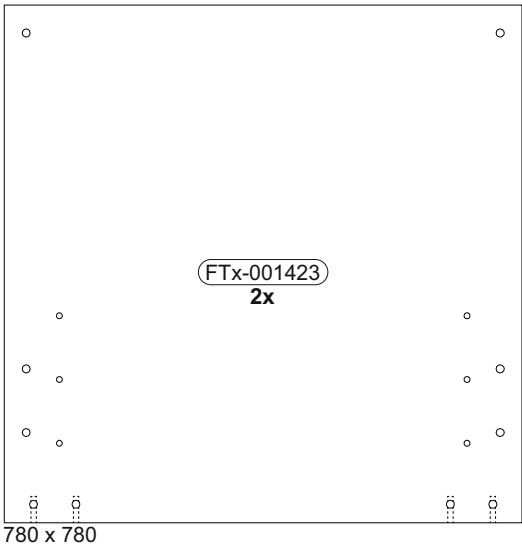


Colli 2/2

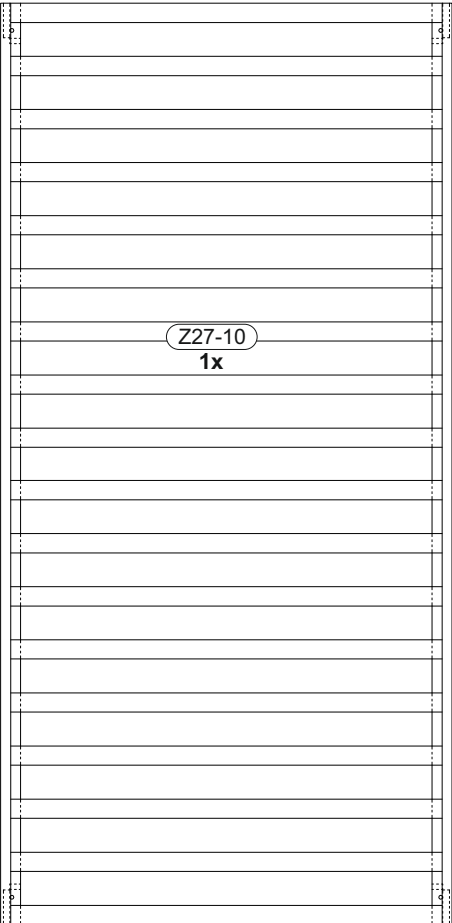

1388 x 680

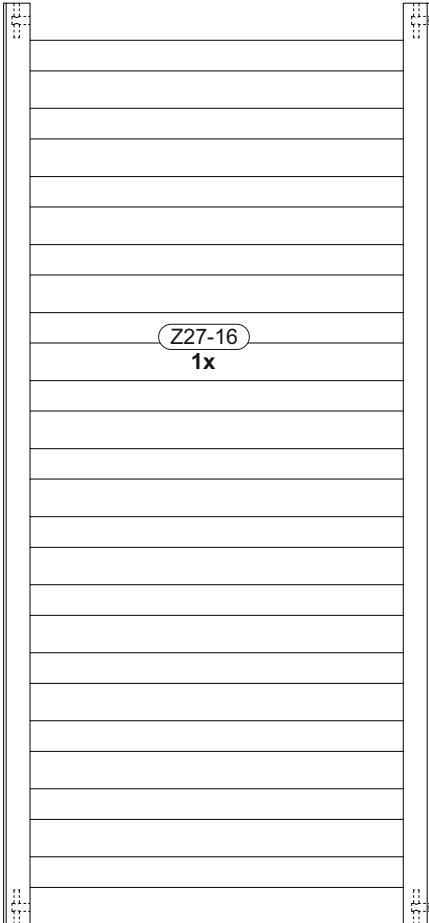



1388 x 642

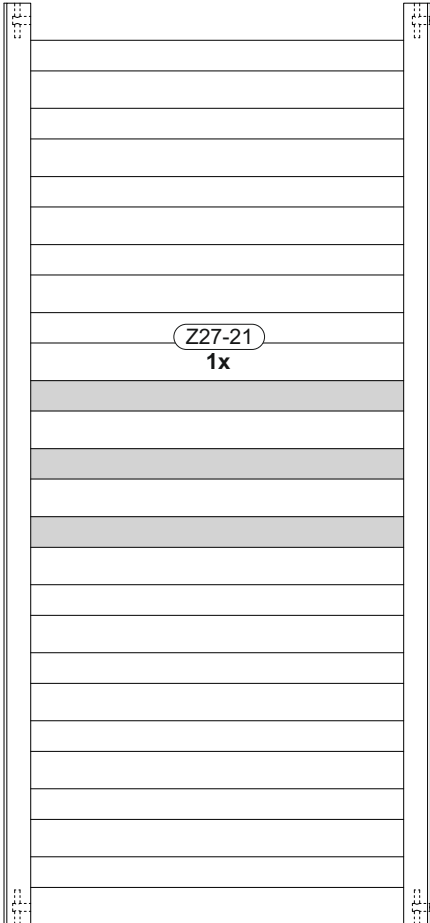

1388 x 642





1

	B10-115		B10-90		B10-110		B10-06		B01-290	
	12x	12x10 M6	12x		8x		8x		8x	M6x40 SW4
									B01-240	
									1x	SW 4

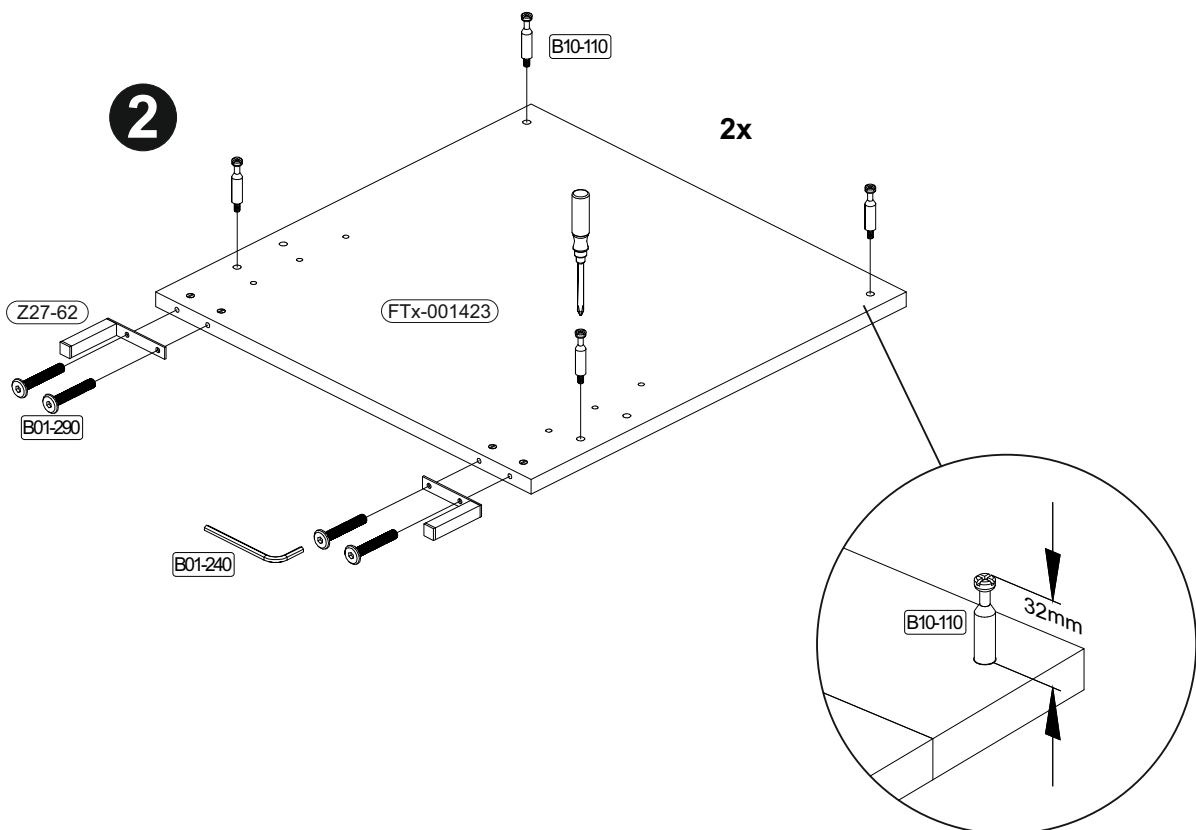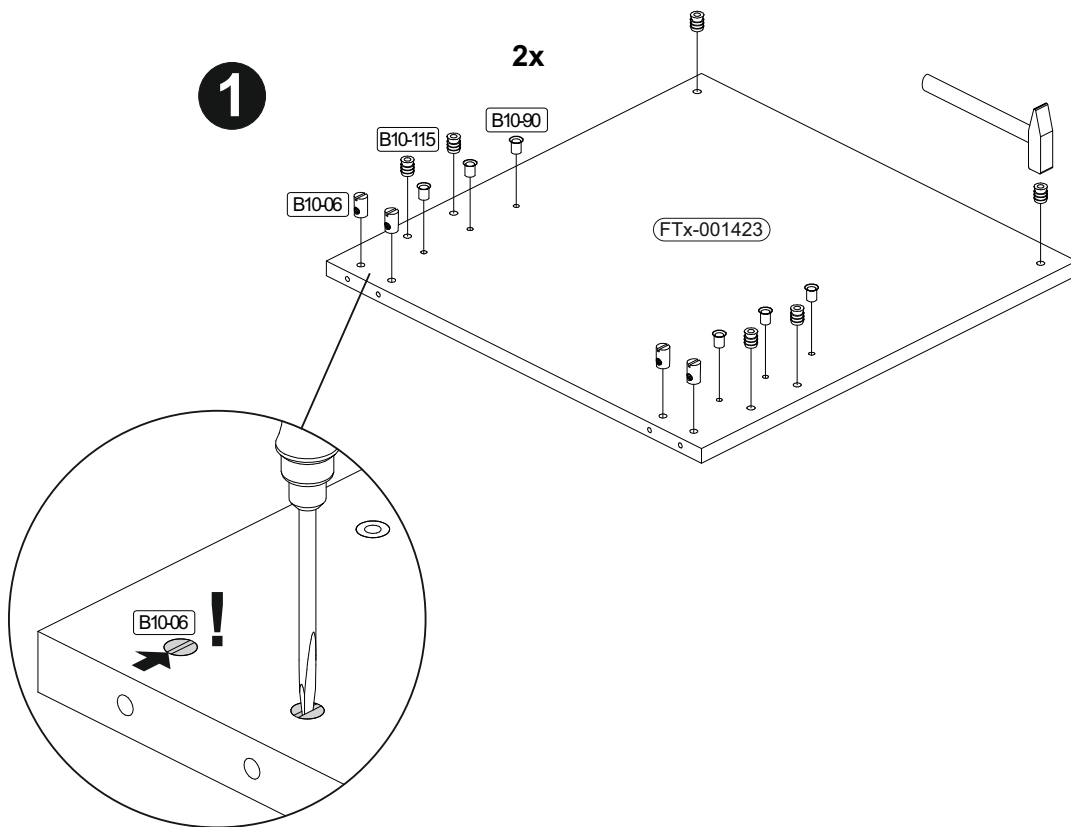






2

						
	B10-95	B10-105	B10-80	B10-85		
	4x	8x	2x	2x		
	6,3x19					

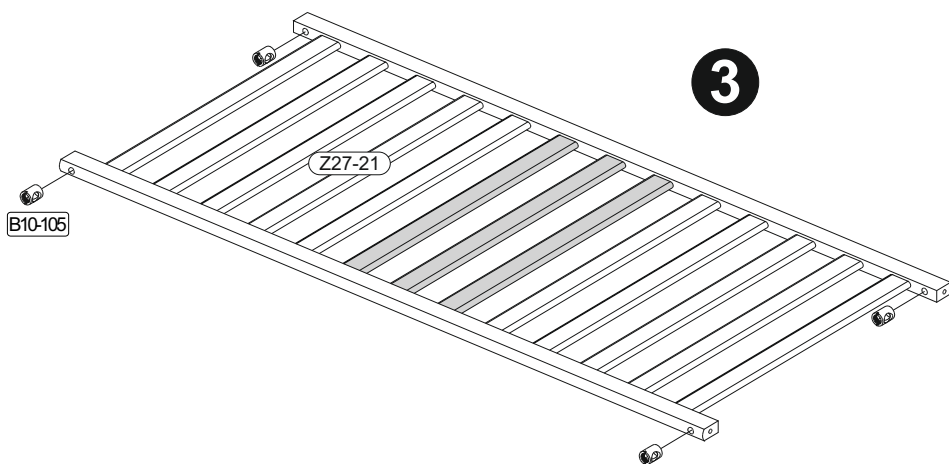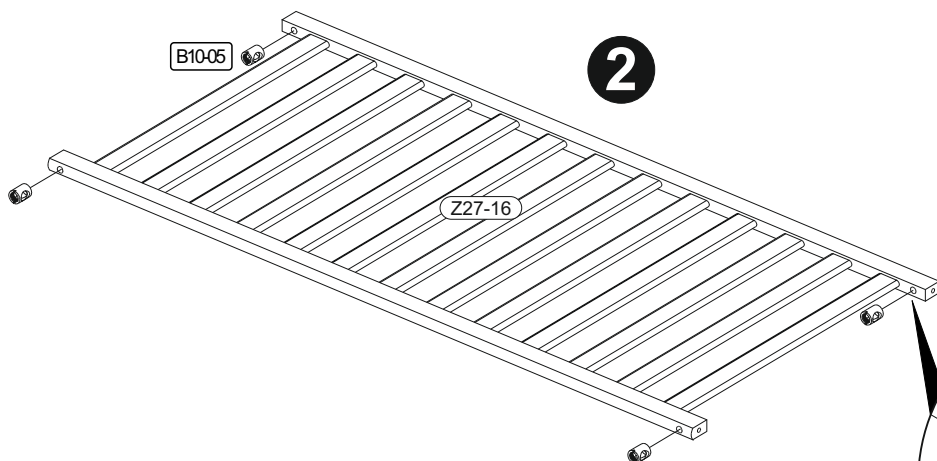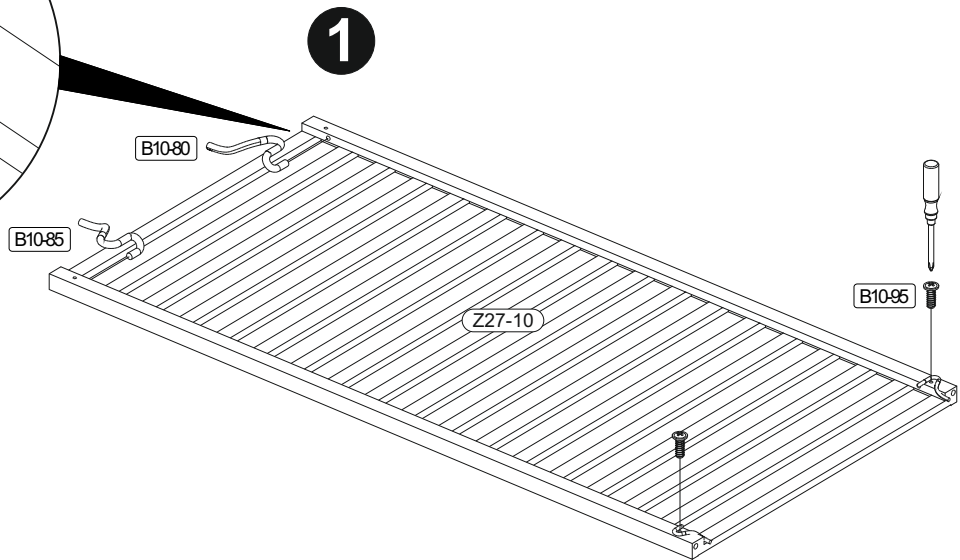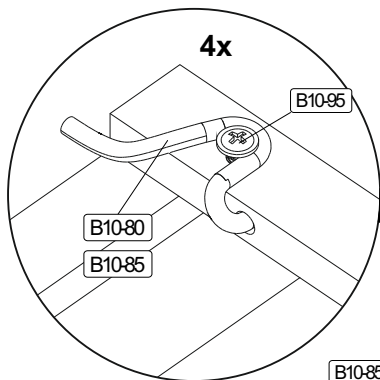

3

B10-101		B01-239	
8x	M6x6 SW3	1x	SW 3

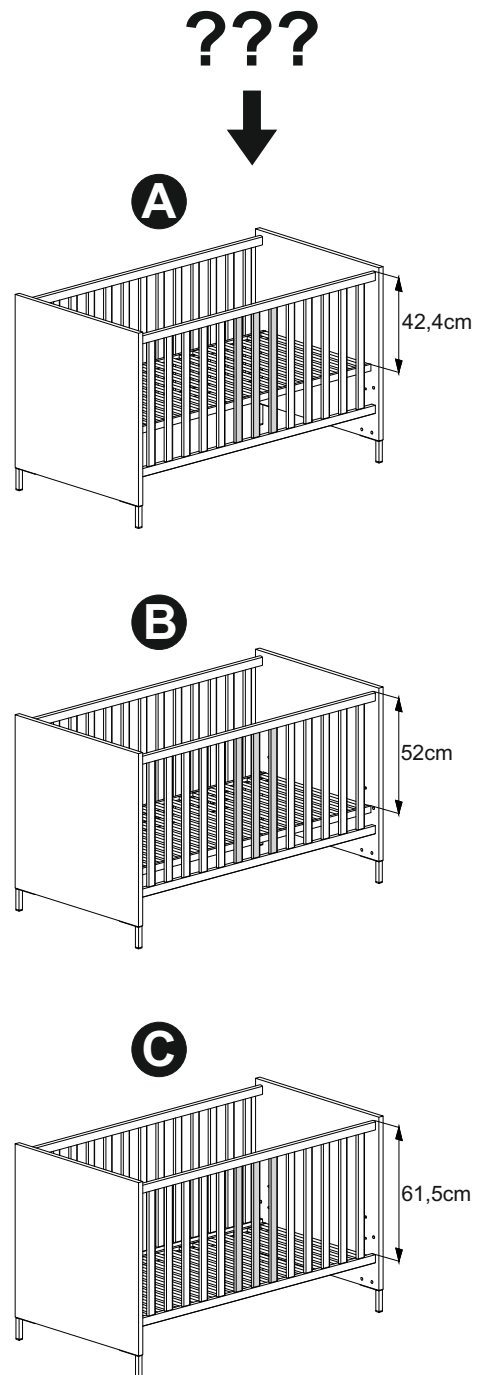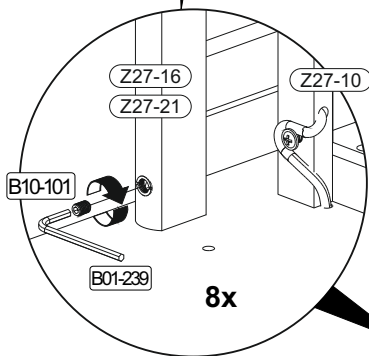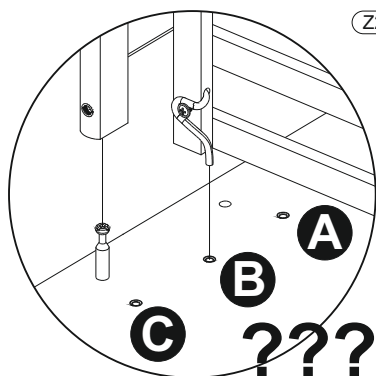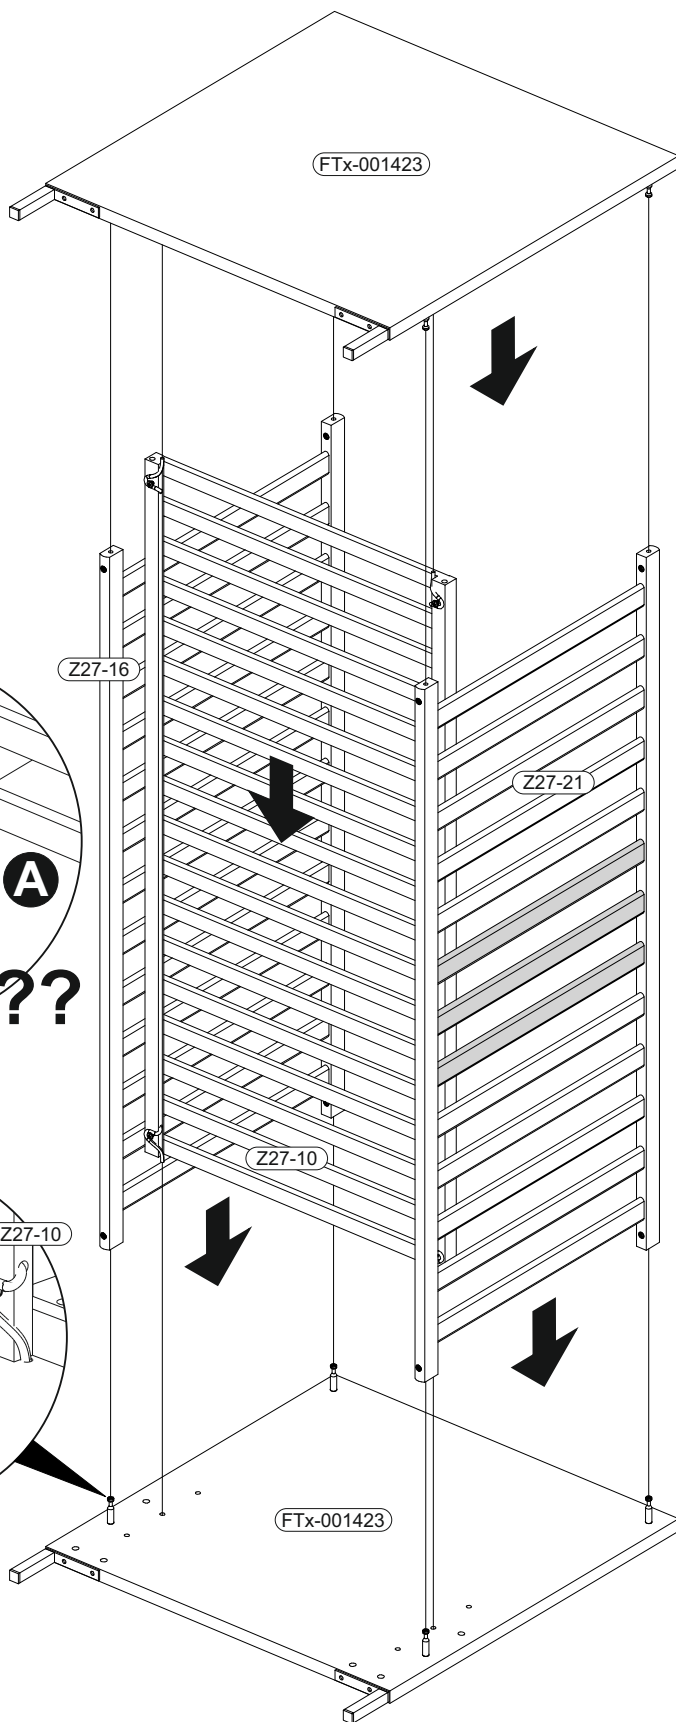

**Das Bett nicht kippen,
sondern beidseitig anheben!
Don't tilt the bed but lift
on both sides!**