
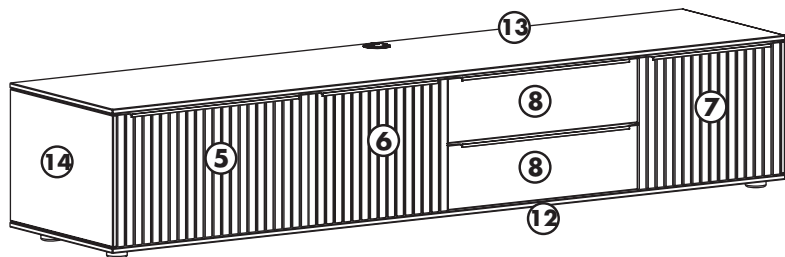
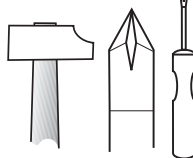


Type 670-102

Sie brauchen:
You need:

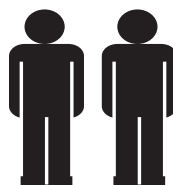

Wichtige Information!

Sehr geehrter Kunde, lesen Sie bitte vor dem Aufbauen die Montageanleitung sorgfältig durch und überprüfen Sie die Vollständigkeit und Richtigkeit der Möbelteile und Beschläge.

Sollte ein Teil fehlen oder beschädigt sein, wenden Sie sich bitte an Ihren Möbelhändler.

Nehmen Sie die Montage, konsequent nach der in der Montageanleitung angegebenen Reihenfolge vor.

Bewahren Sie die Montageanleitung im eigenen Interesse gut auf!

Nur mit einem Staubtuch oder feuchtem Lappen reinigen.

Keine scheuernde Putzmittel verwenden.

Important Information!

Dear customer, before you start please read through these instructions and make sure that all the pieces and fittings mentioned are there.

If a piece should be missing or damaged, report this to the store where you purchased this piece of furniture .

Assemble your piece of new furniture using the assembly instructions one step at a time as shown.

After assembly keep these instructions in a safe place, you may need them sometime later!


Only clean with a duster or damp cloth. Don't use strong detergents or solvents.

Beschlagliste Fittings


CAD und Design
Light Line 7 670-102 / 11.21

1x le	2x sl3	2x sr3	3x 604mm gr34	1x 439mm gr31
12x ak4a	20x M4 x 23 gs3s	18x 4 x 25 S47	4x ak4	6x d4
6x c3b	16x rh	16x 3 x 20 s7	5x fo	24+4x e2
1x 446mm gr32	6x 3 x 20 RW1	4x a3	1x kbs1	10x tad
24x a1	26x ak	8x 6,3 x 13 es4	24x 8 x 40 p1	5x fu


A

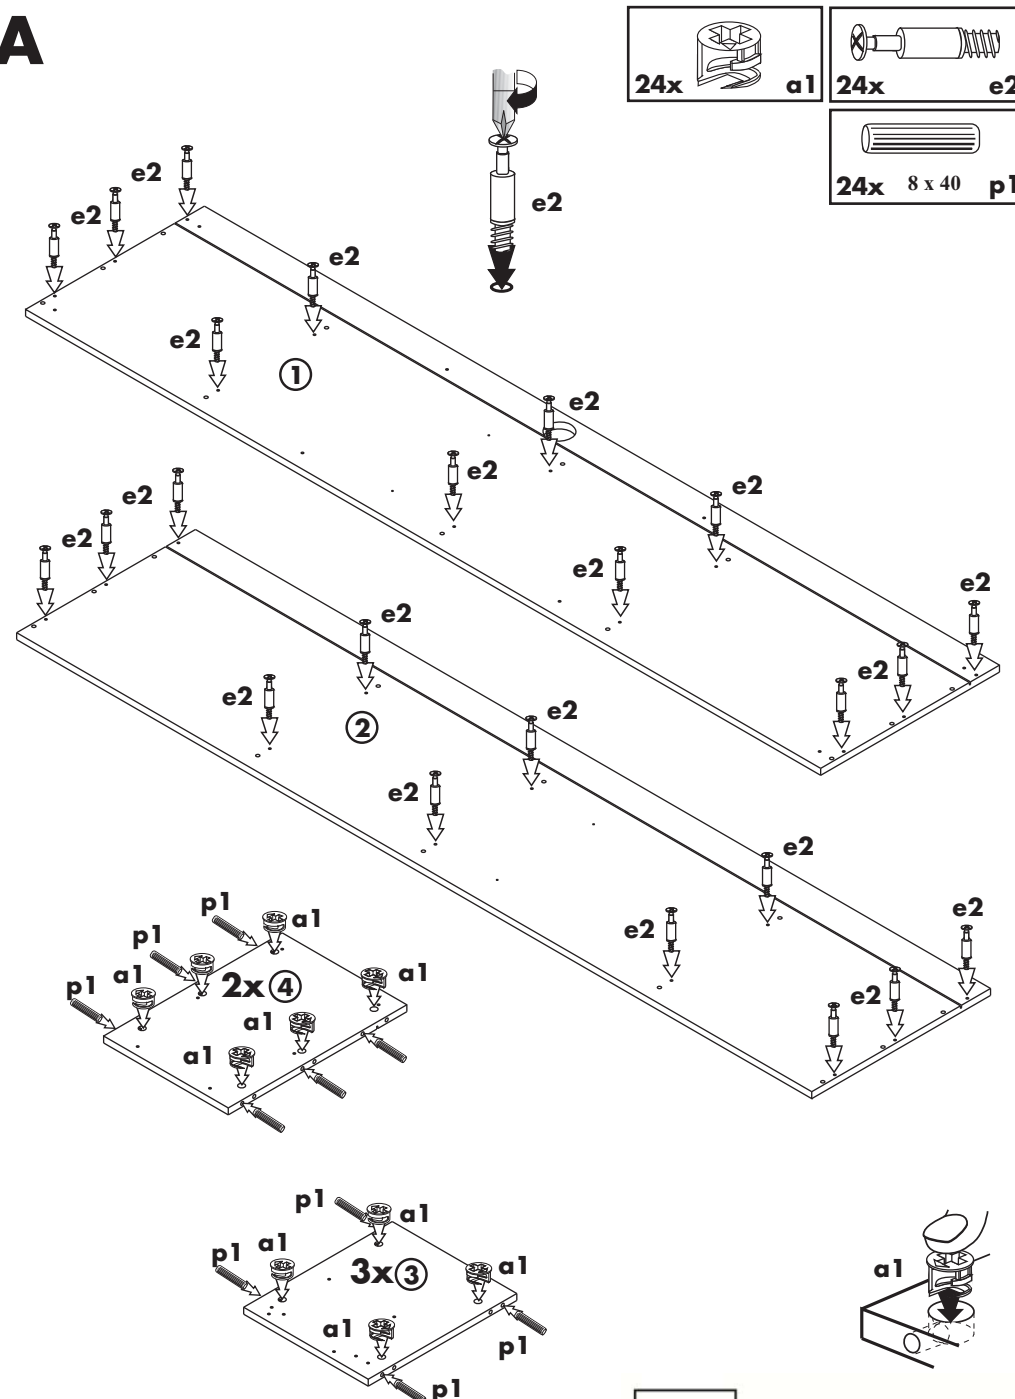



B

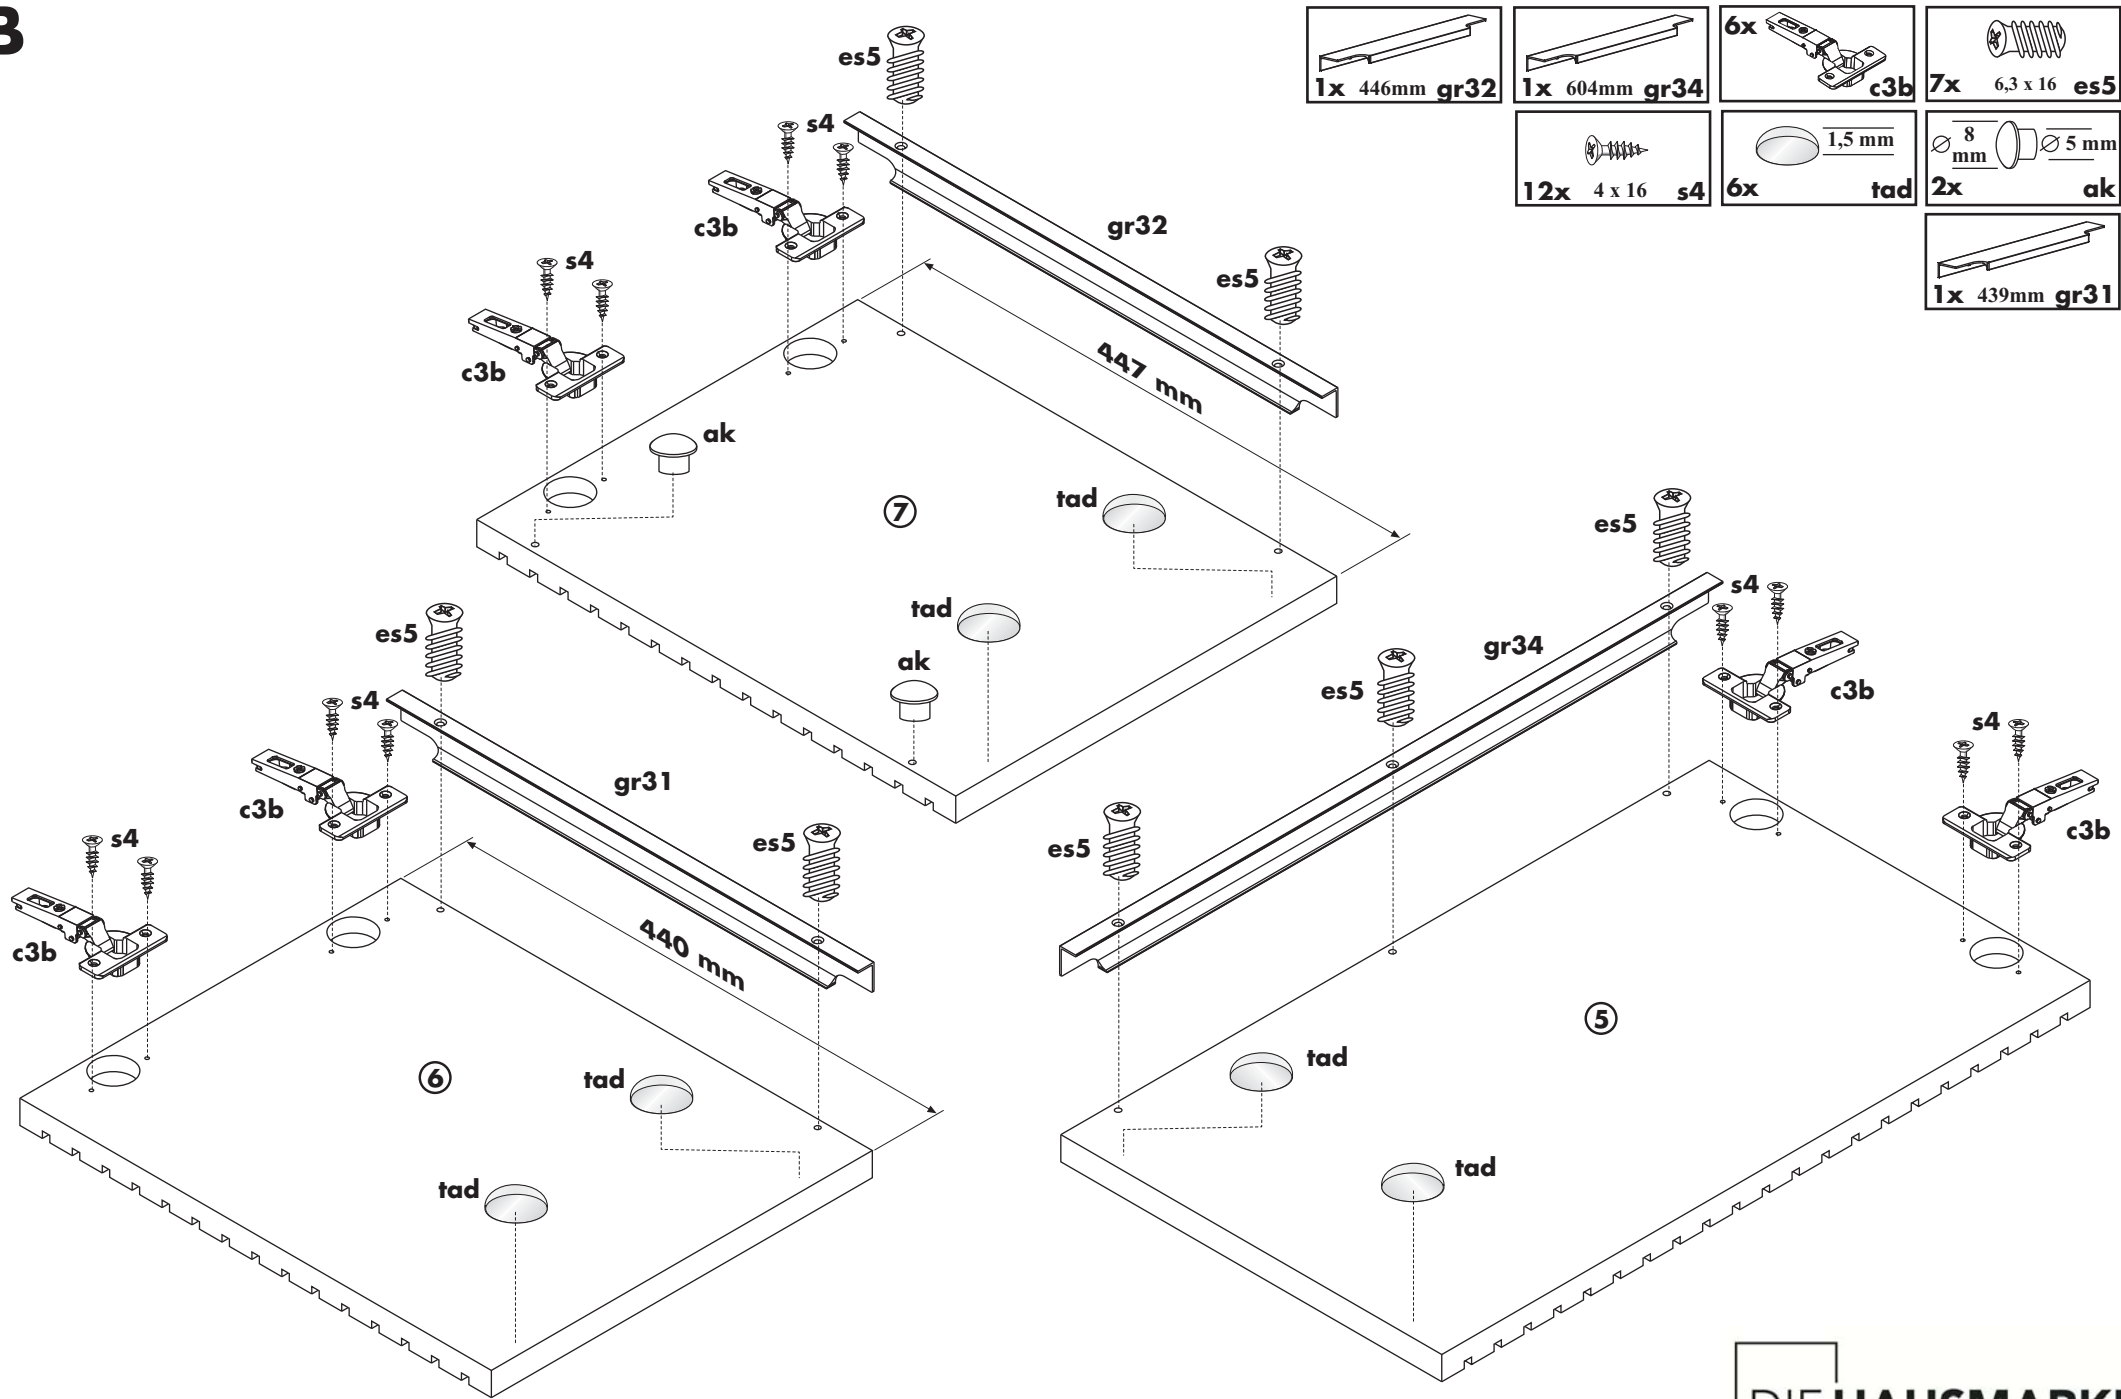


C2x

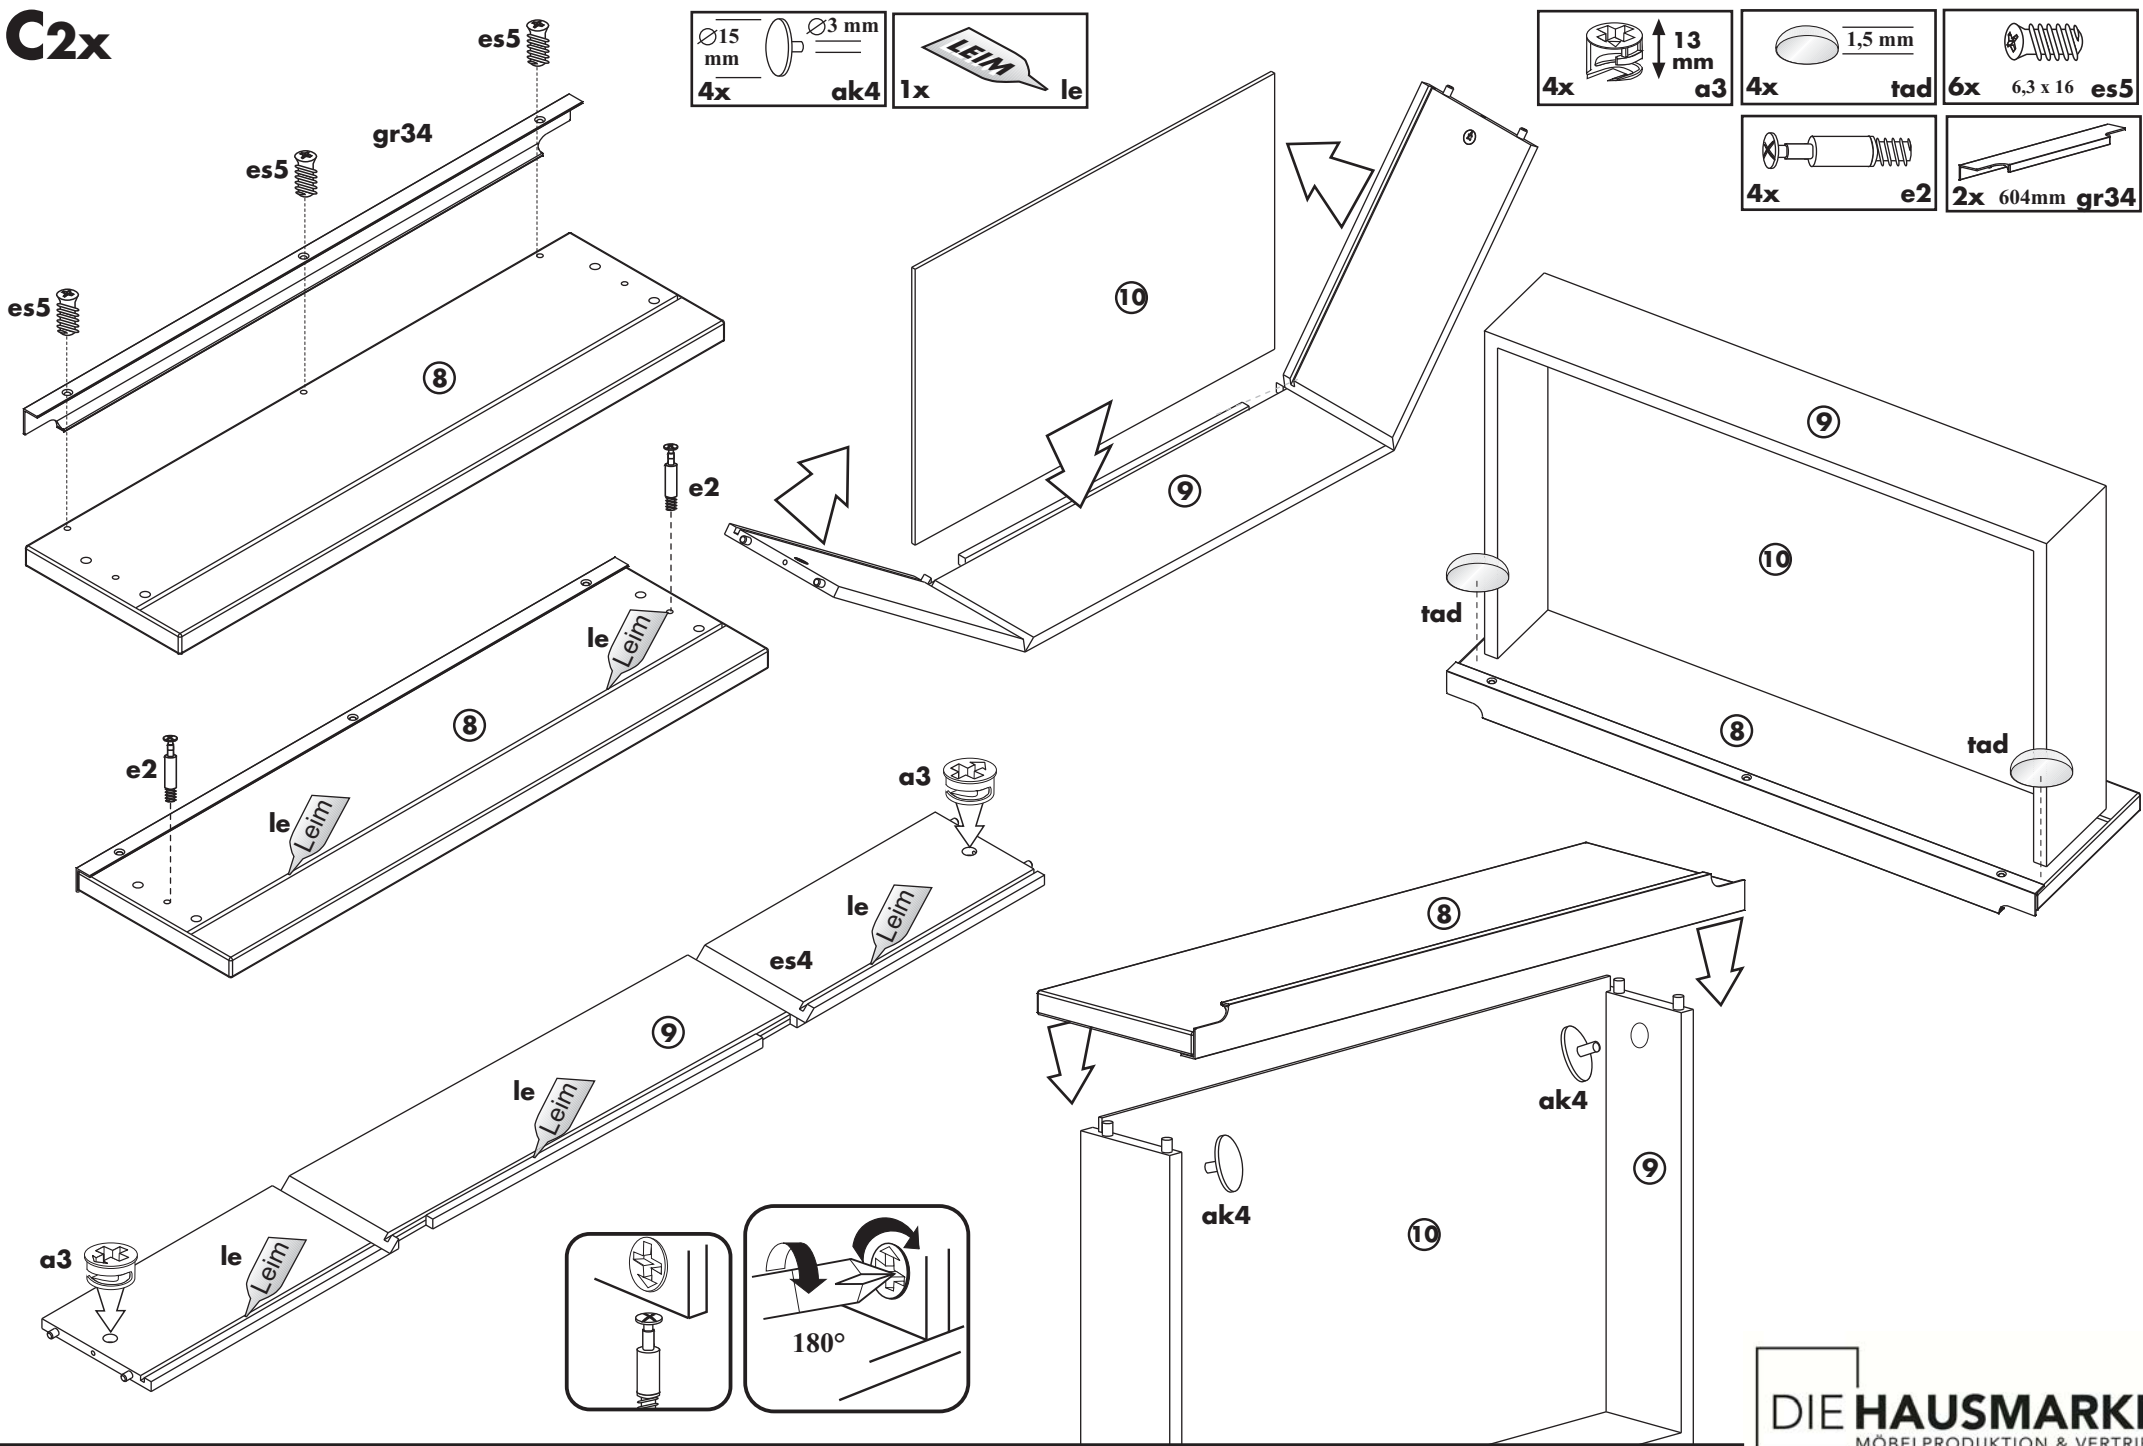




D

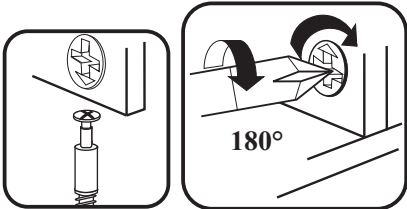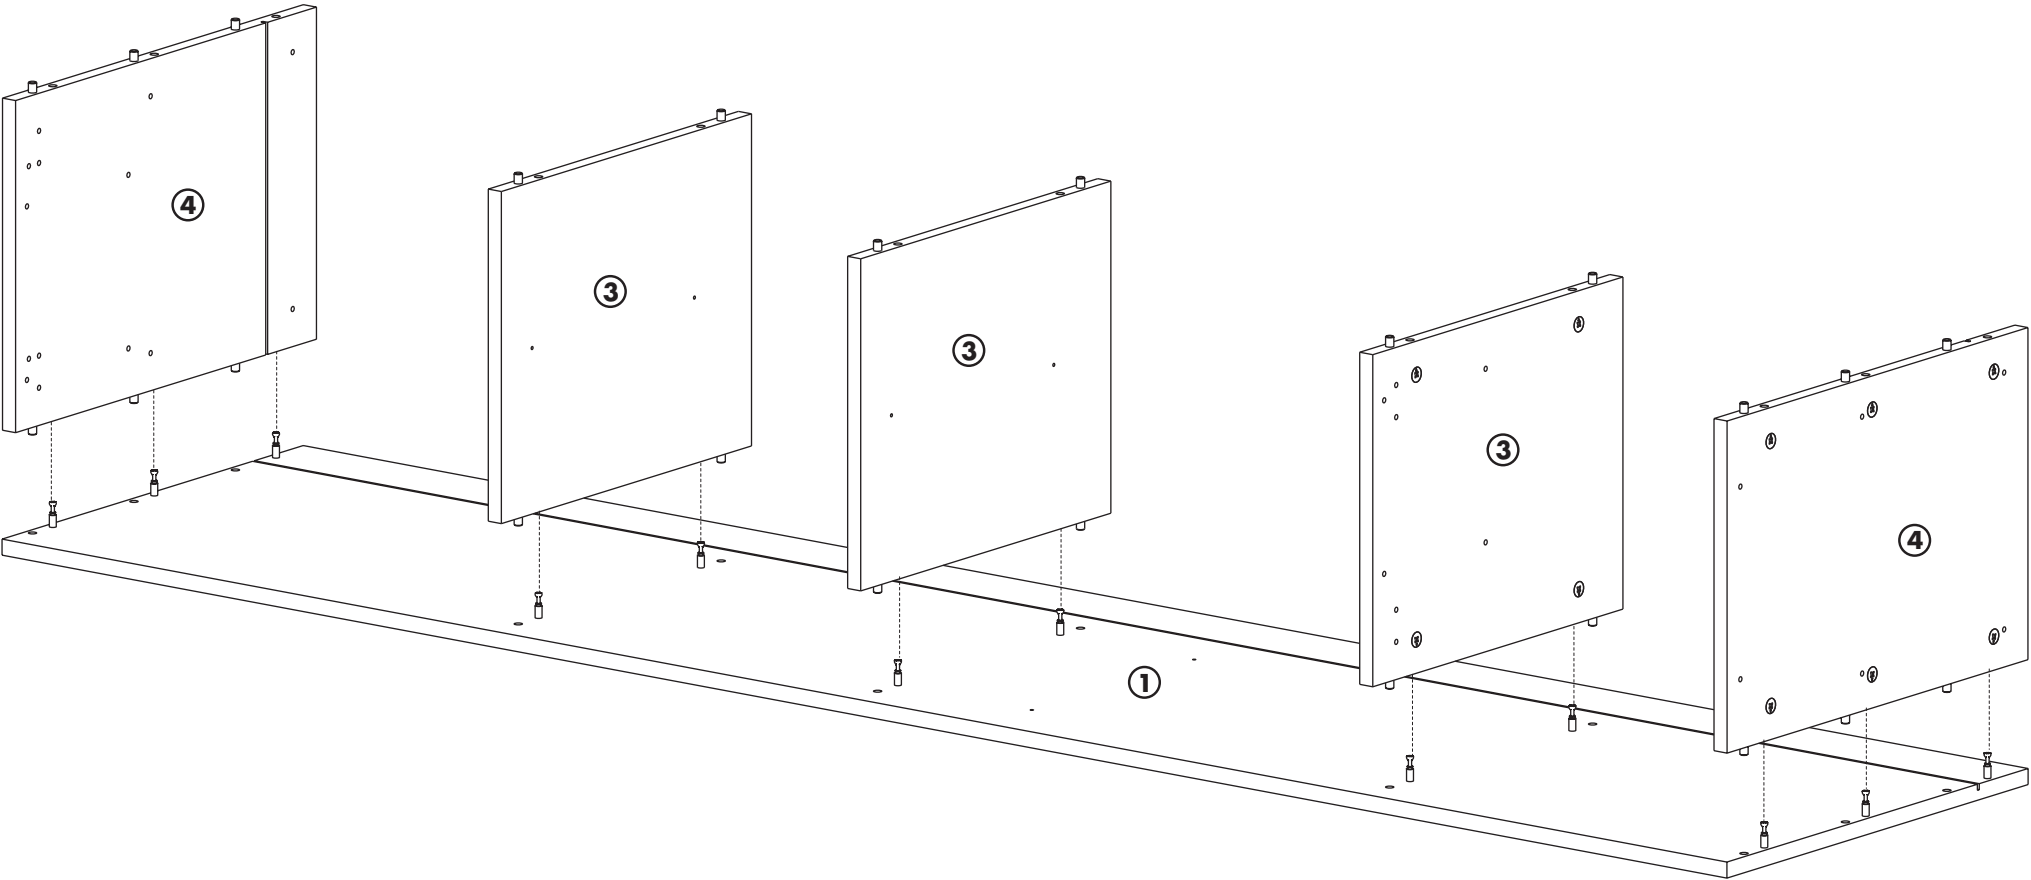

E

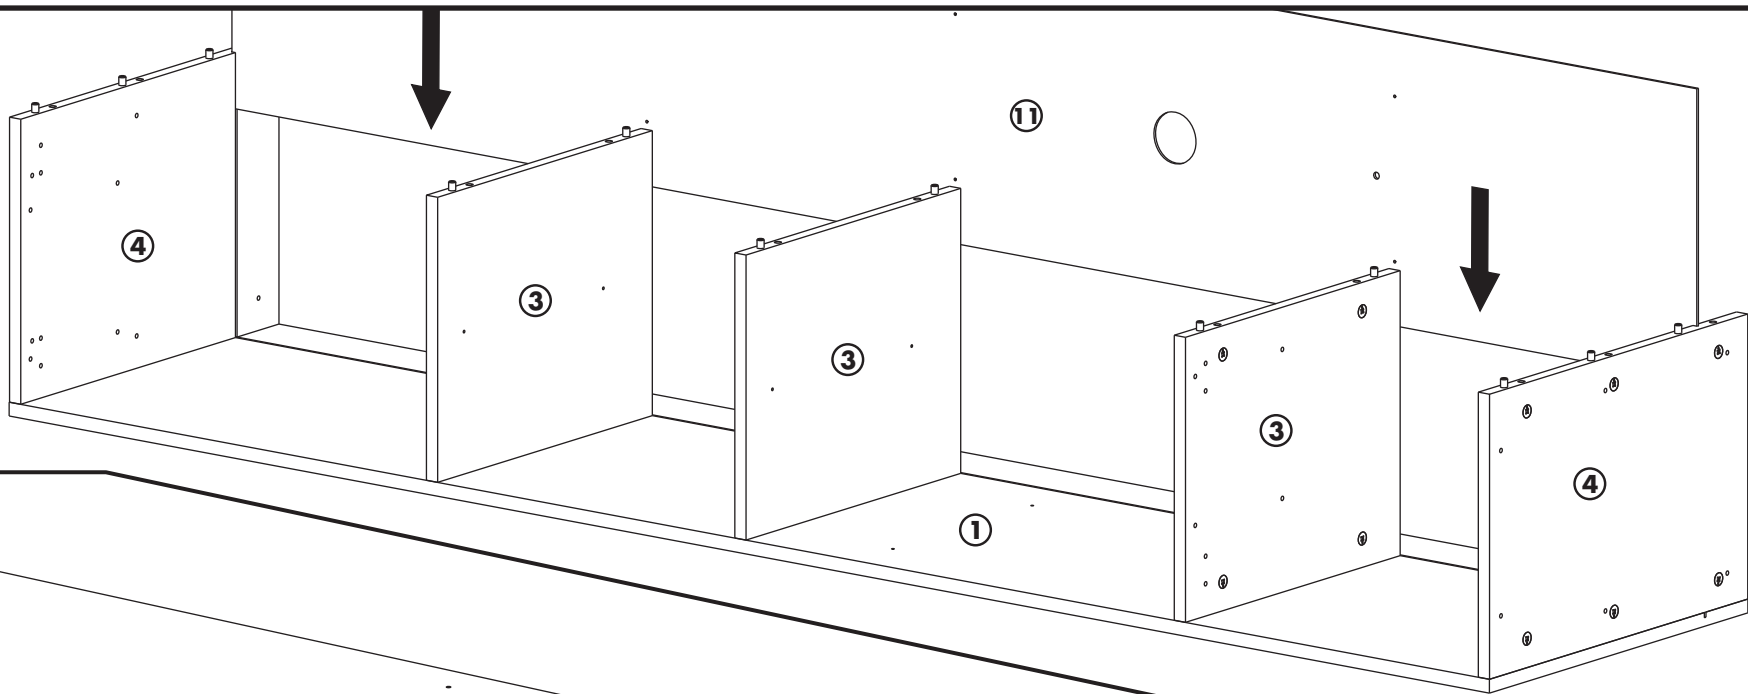

F

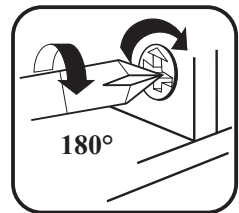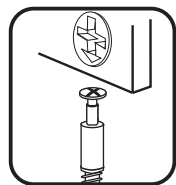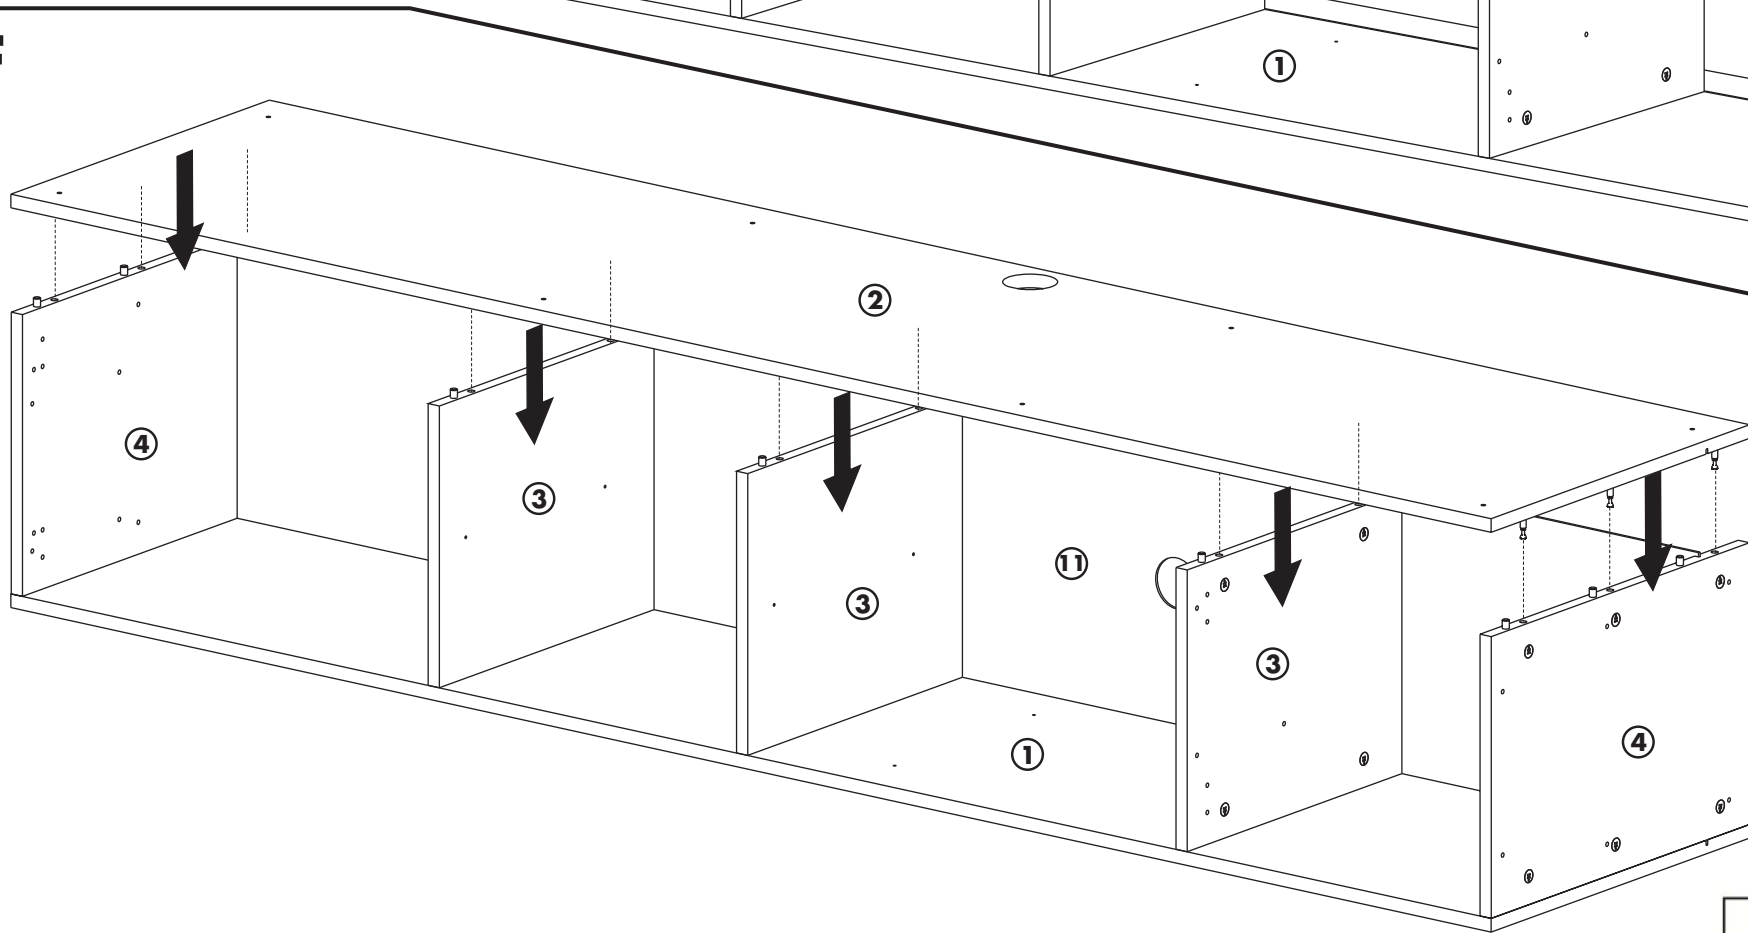


G




16x rh




16x 3 x 20 s7




6x 3 x 20 RW1

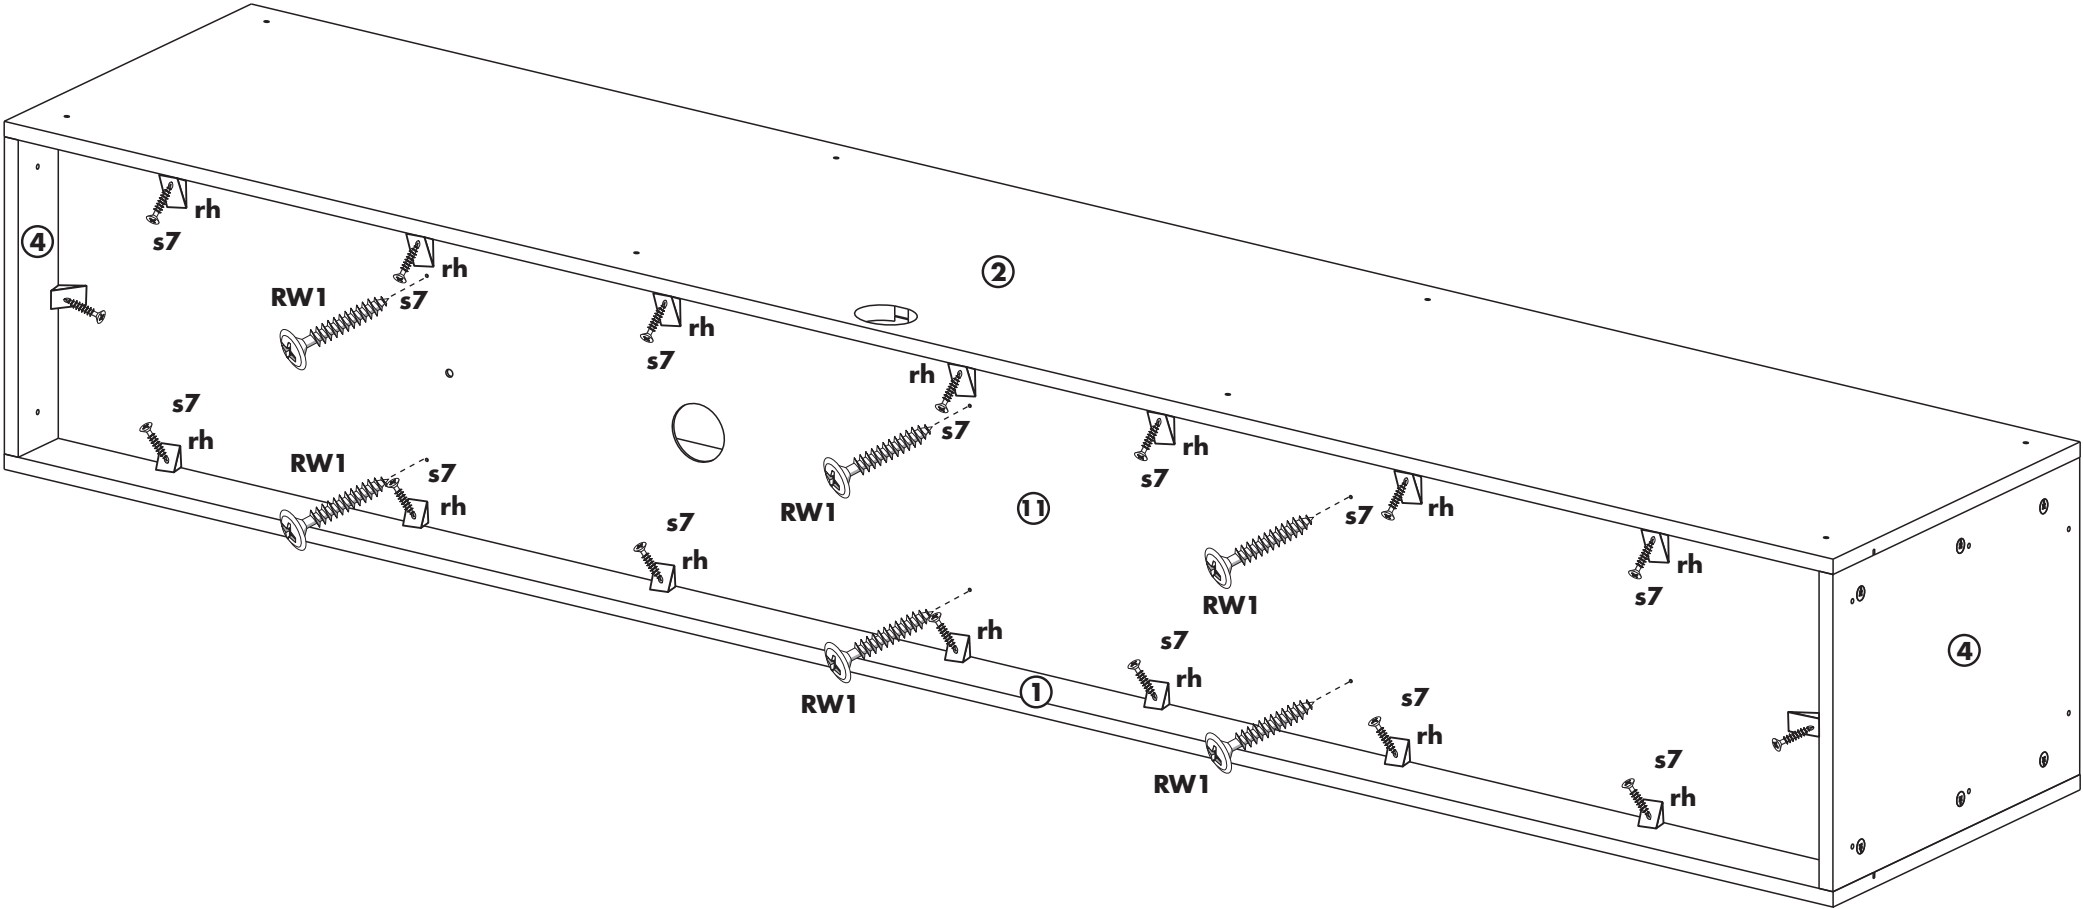

H

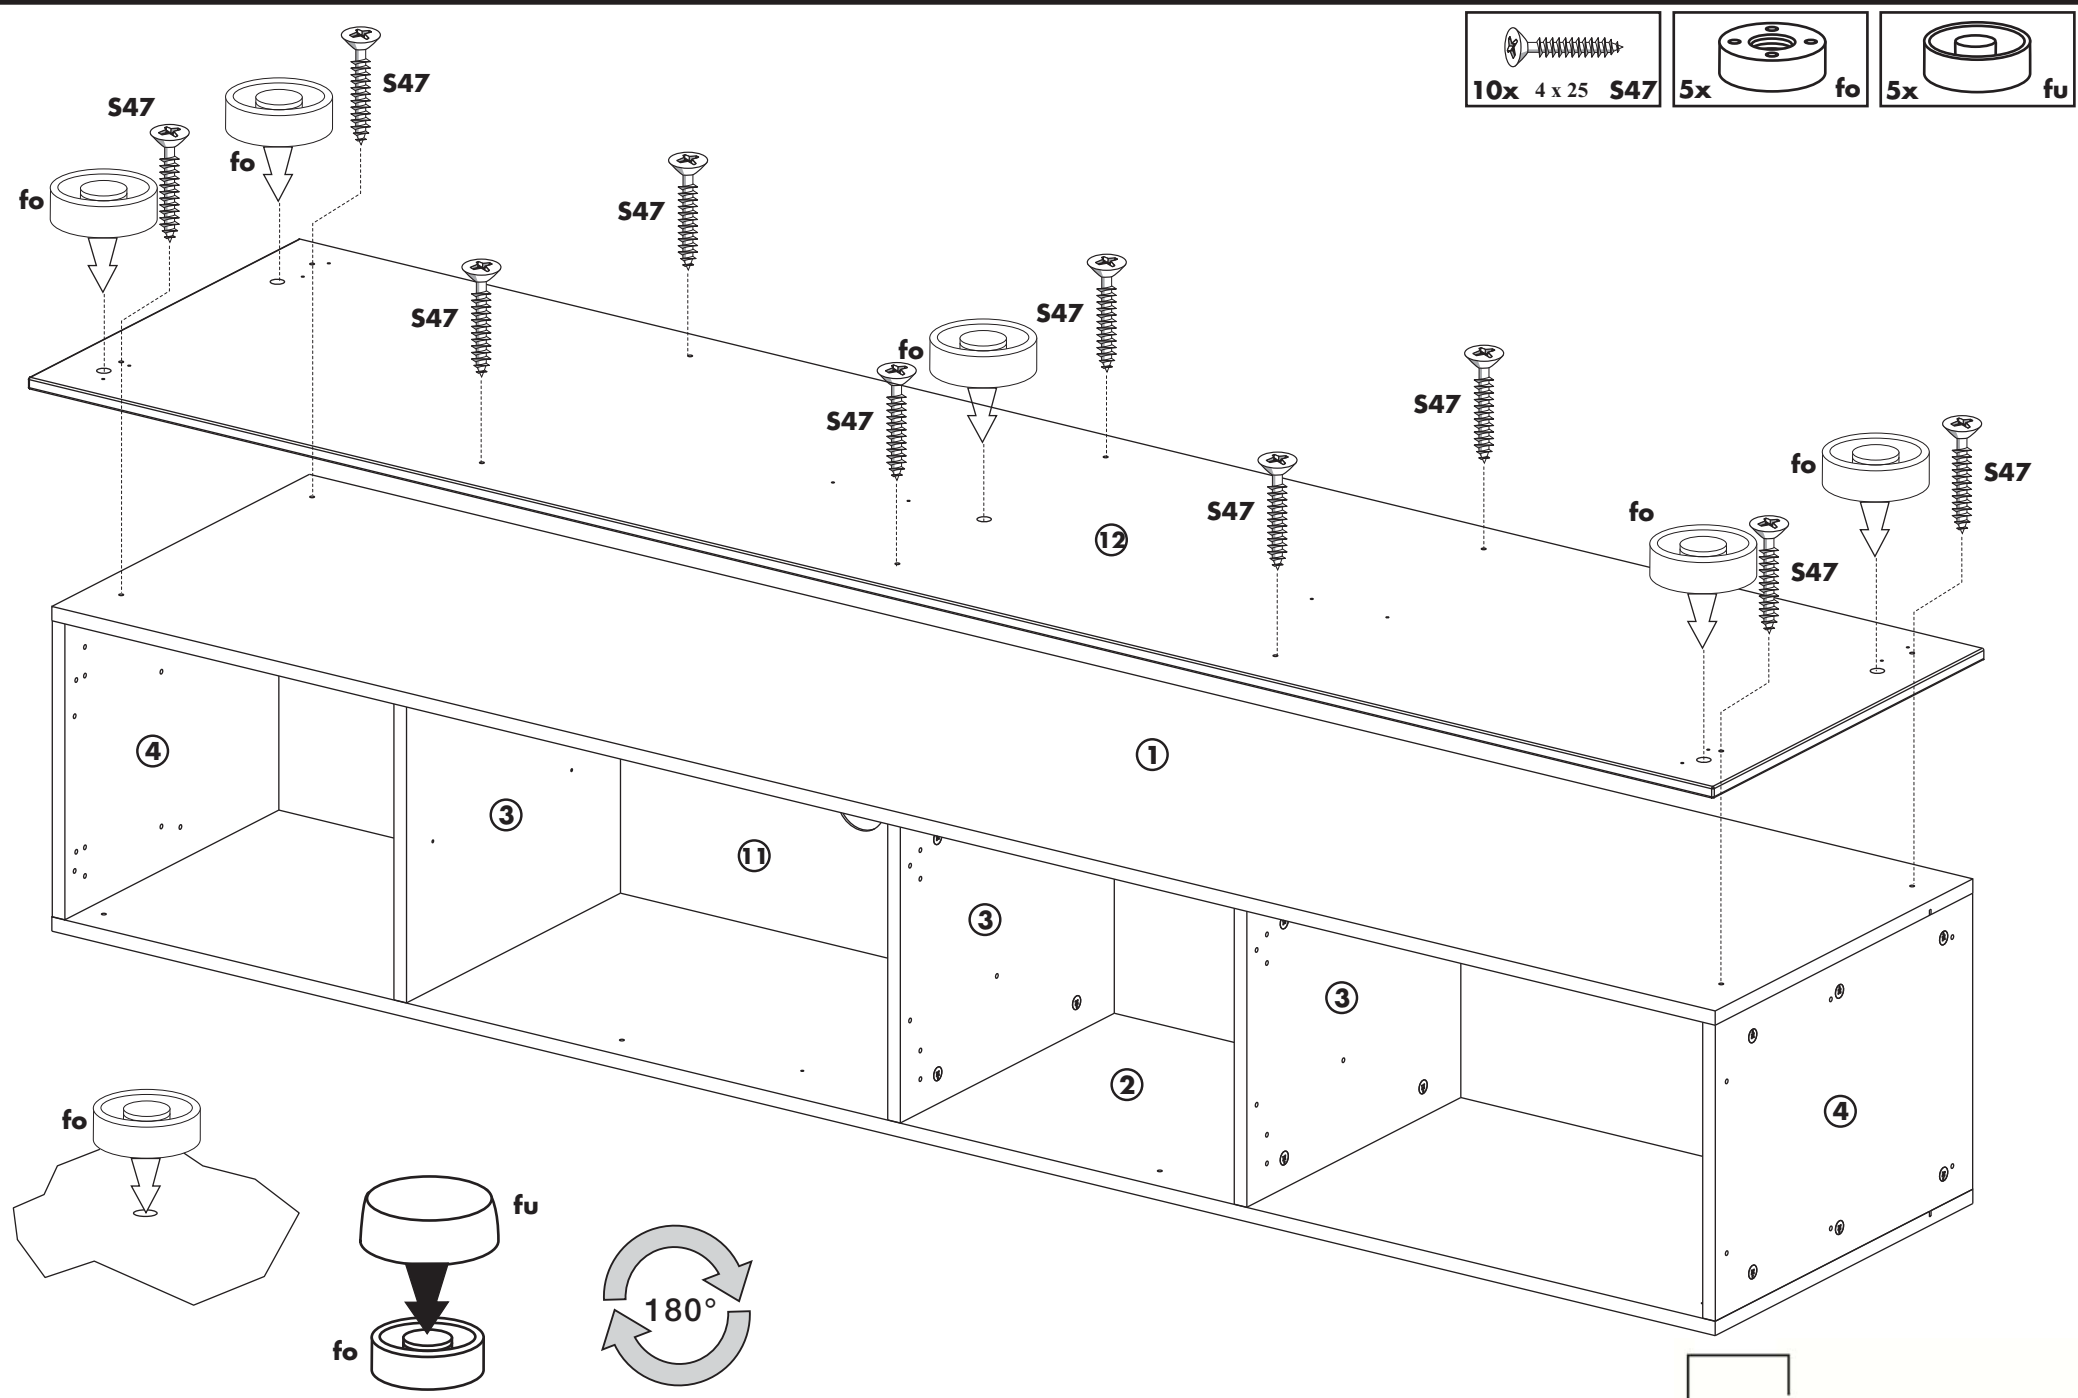


20xM4 x 23 gs3s

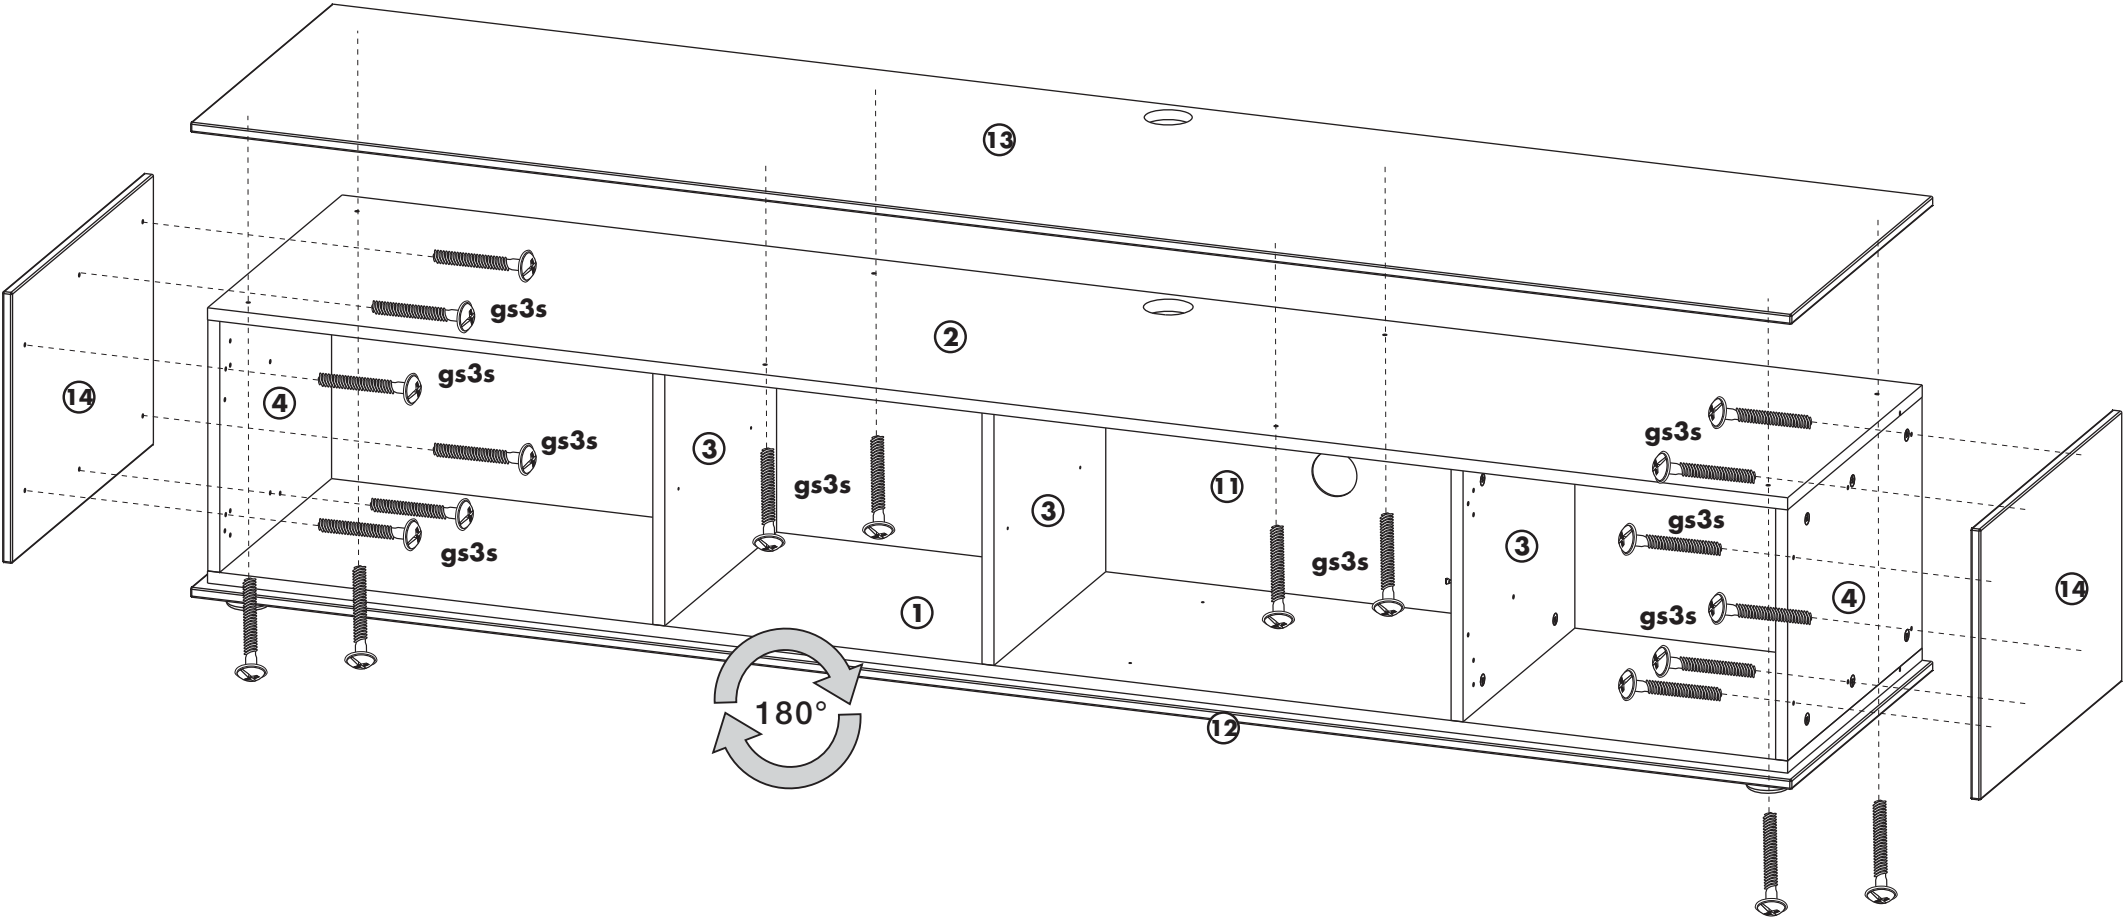


J


8x 4 x 25 S47



1x kbs1


6x d4
D 6mm

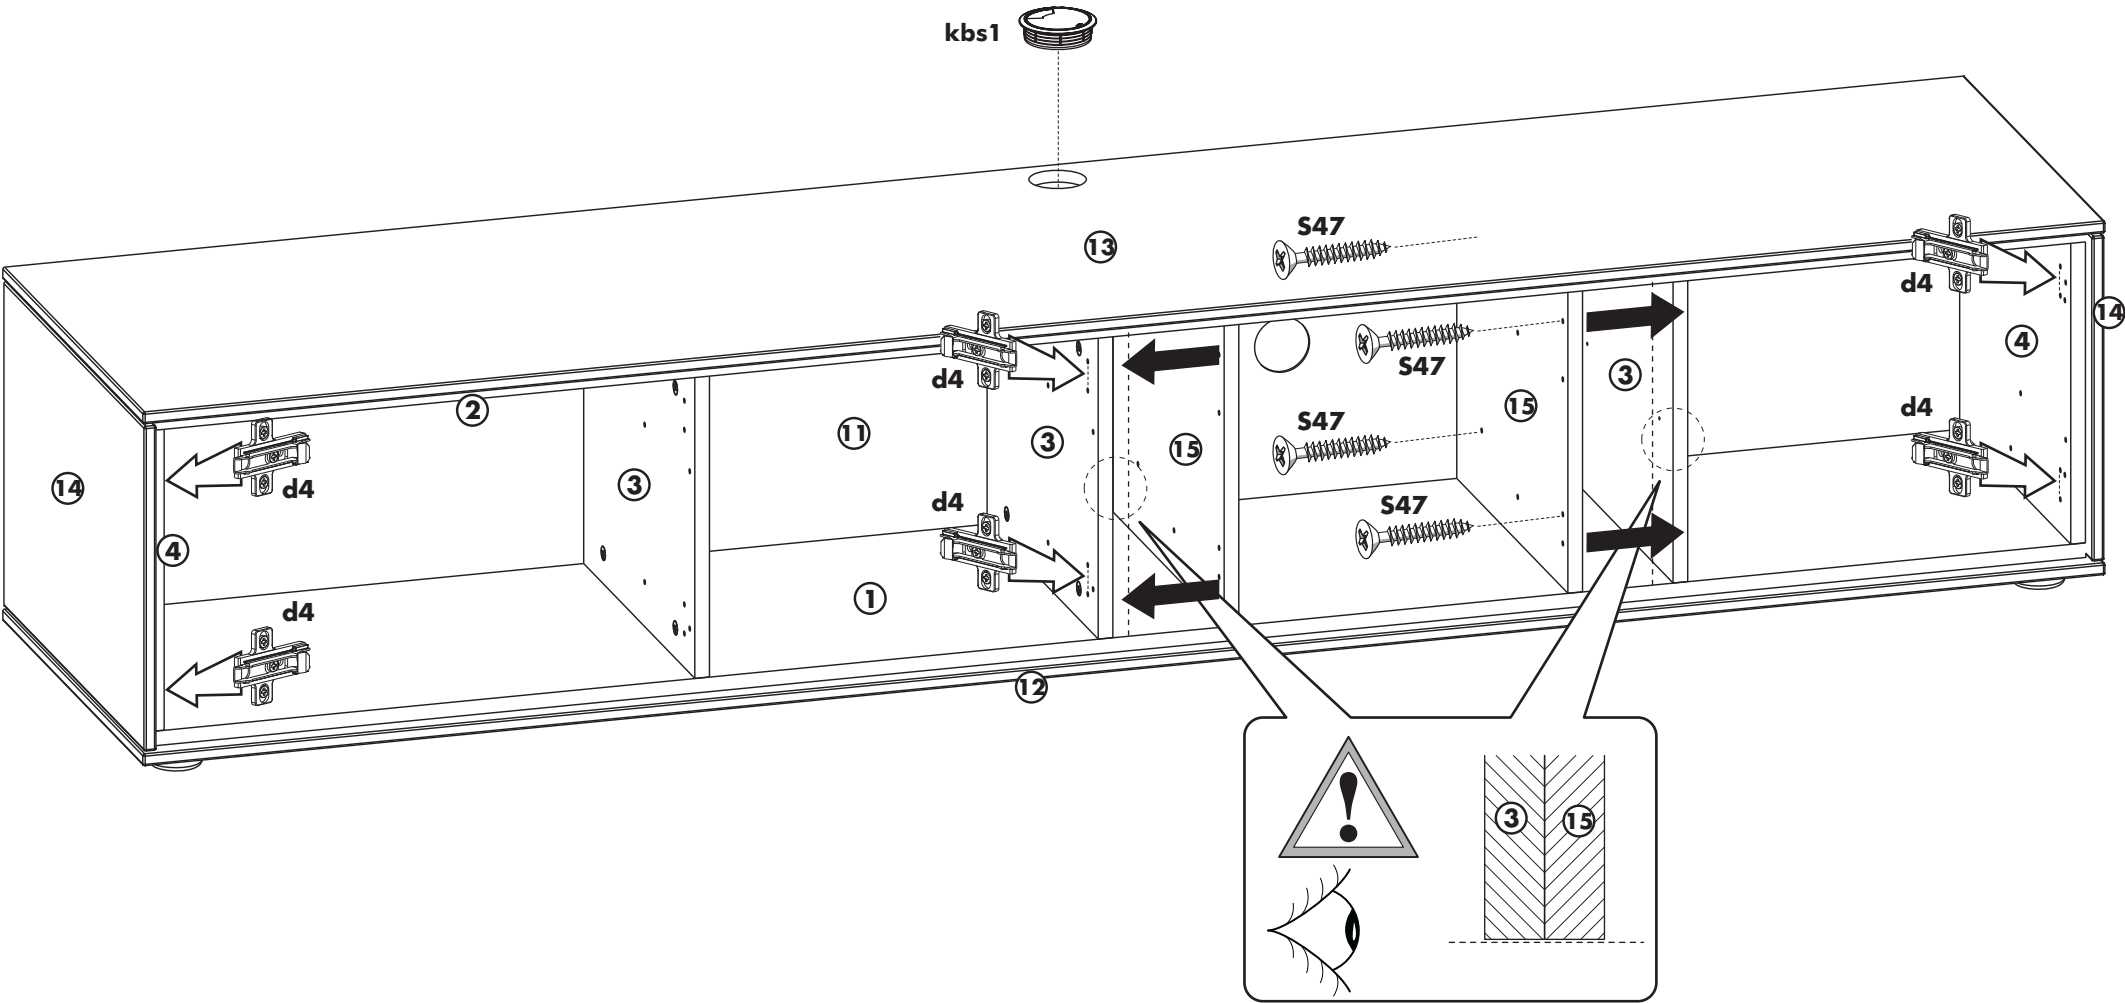




L

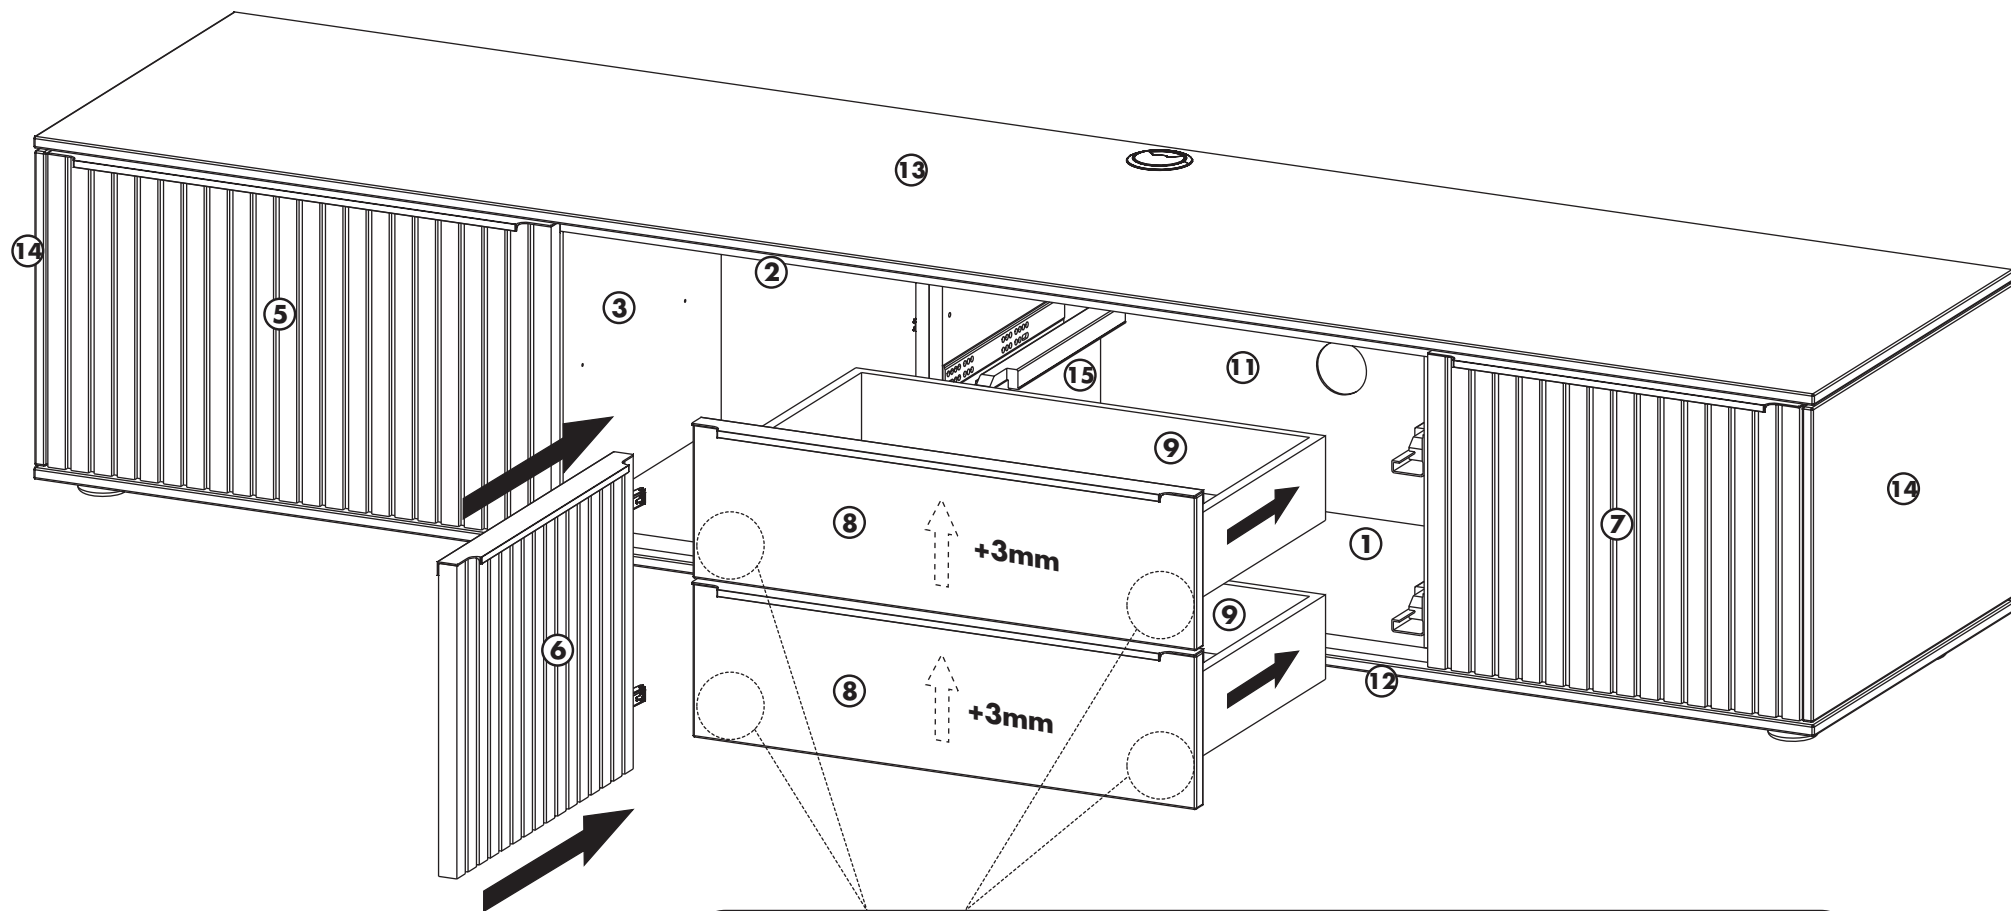

Verriegelung
Lock

1.

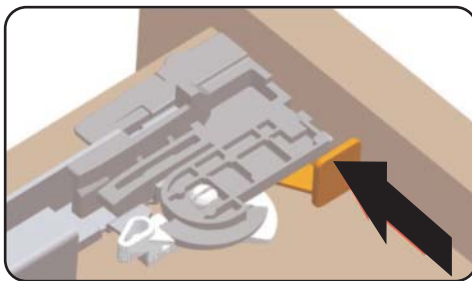

Höhenverstellung
Height adjustment

2.

