


REPC-Nr.:



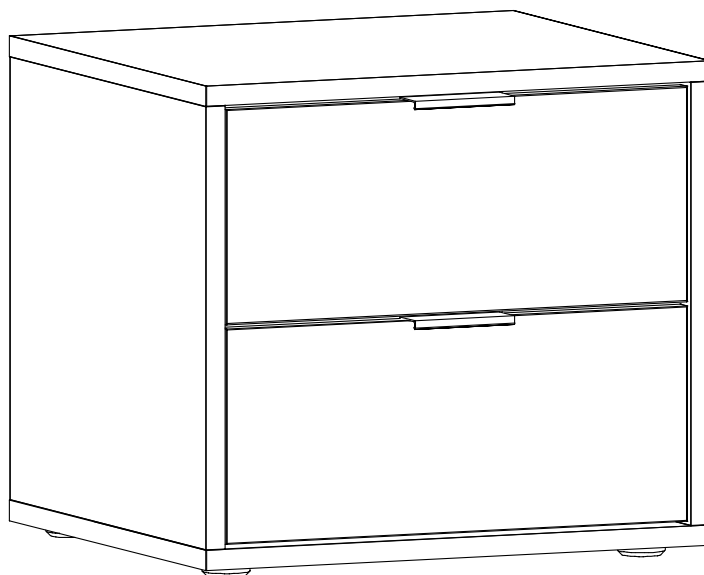


Artikel.-Nr.:

0800-KO_02

Montageanleitung.-Nr.:


MA1-00227

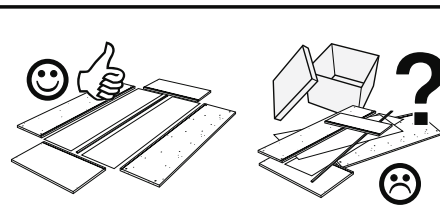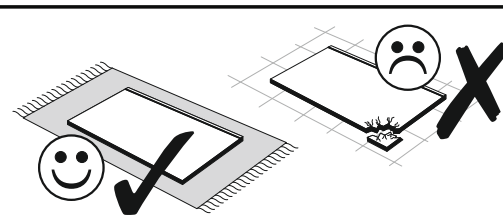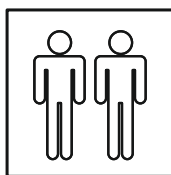


SCAN ME

Das Ersatzteil-Anforderungsformular finden Sie auf
The replacement parts requisition form you find on
<https://www.maeusbacher.de/ersatzteile/>

BT1-00005 Colli 1/1


B01-123		B02-173	
8x	4,0x15	4x	

BT1-00377 Colli 1/1












B01-10		B01-200		B01-30		B01-90	
4x	6,3x50	12x	6,3x13	10x	3x16	20x	3,5x20
B02-10		B02-20		B02-103		B05-20	
12x	ø15x12mm	12x		16x	8x30	8x	









BT1-00378 Colli 1/1











B05-185		B06-425	
4x		2x	100mm






Colli 1/1

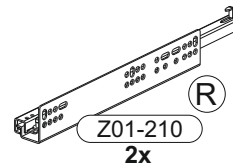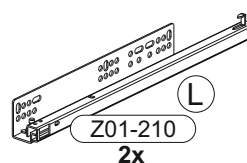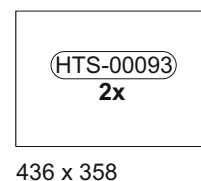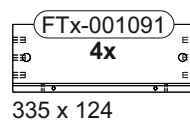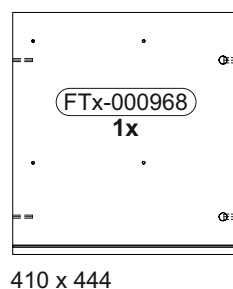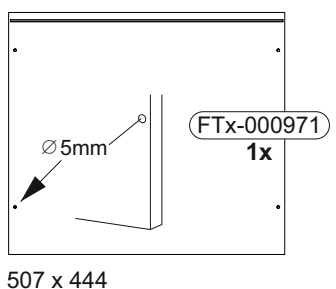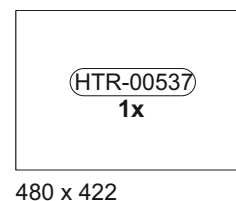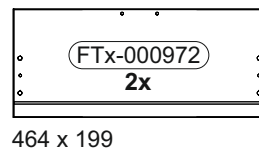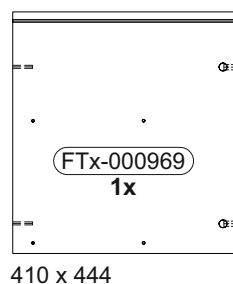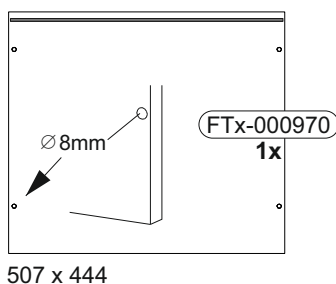

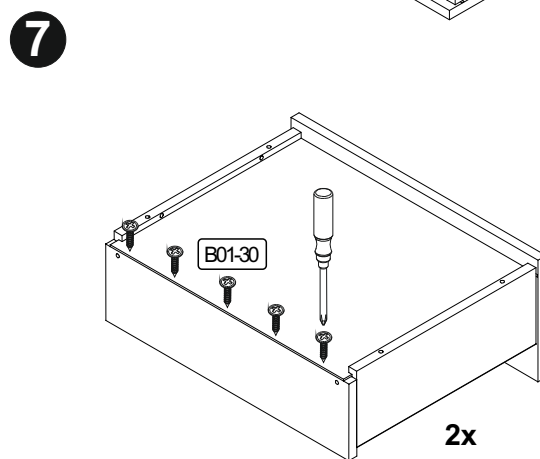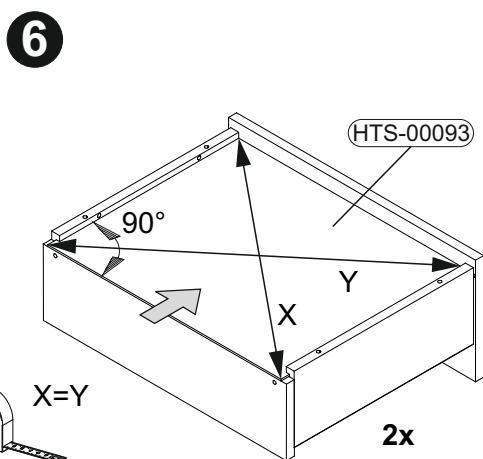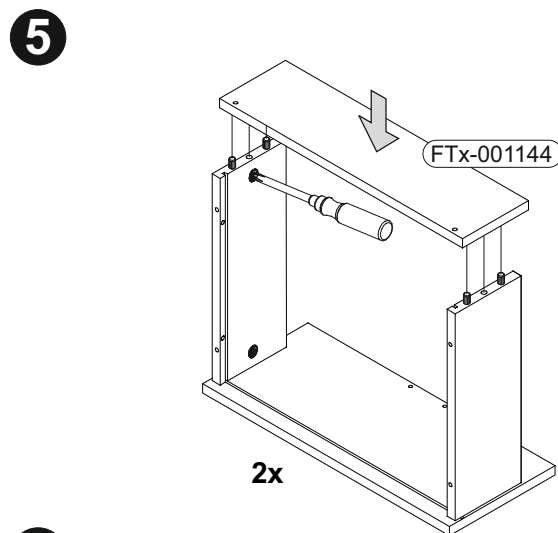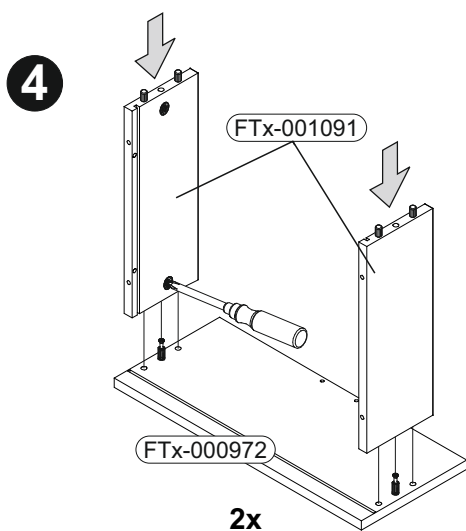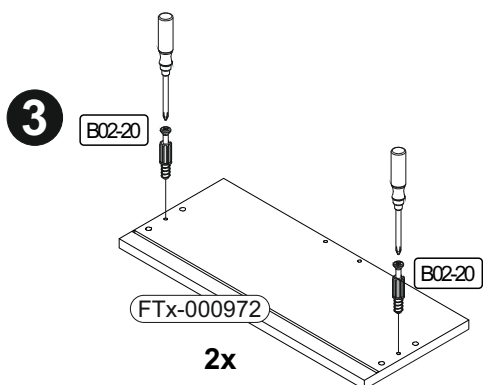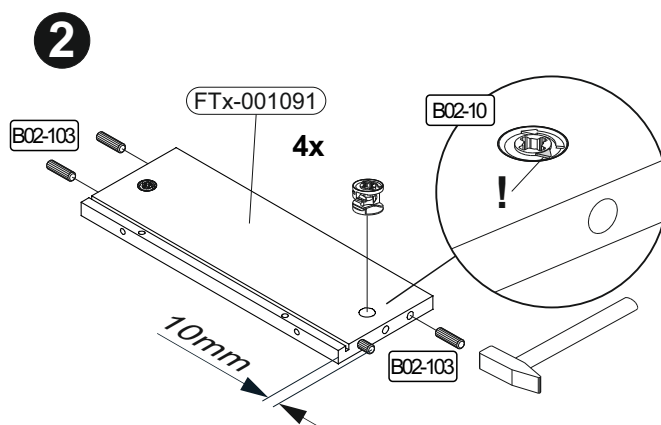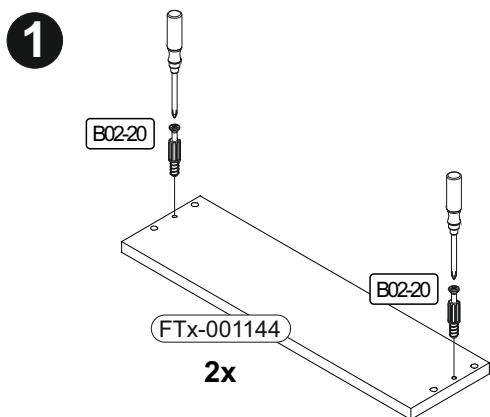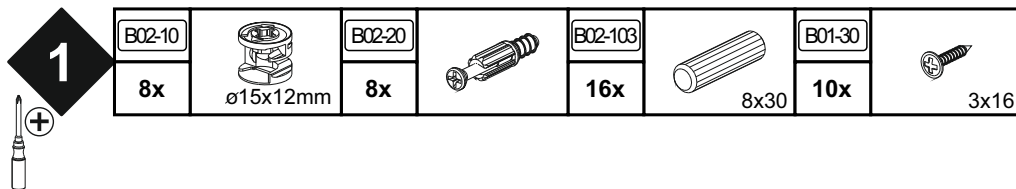

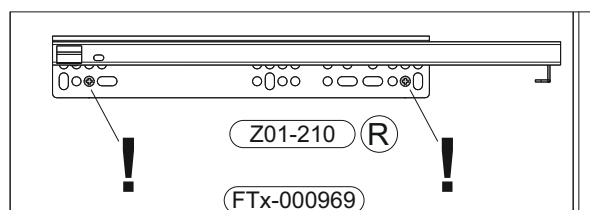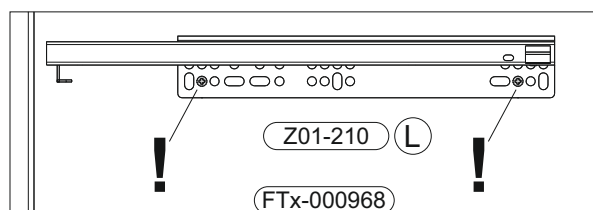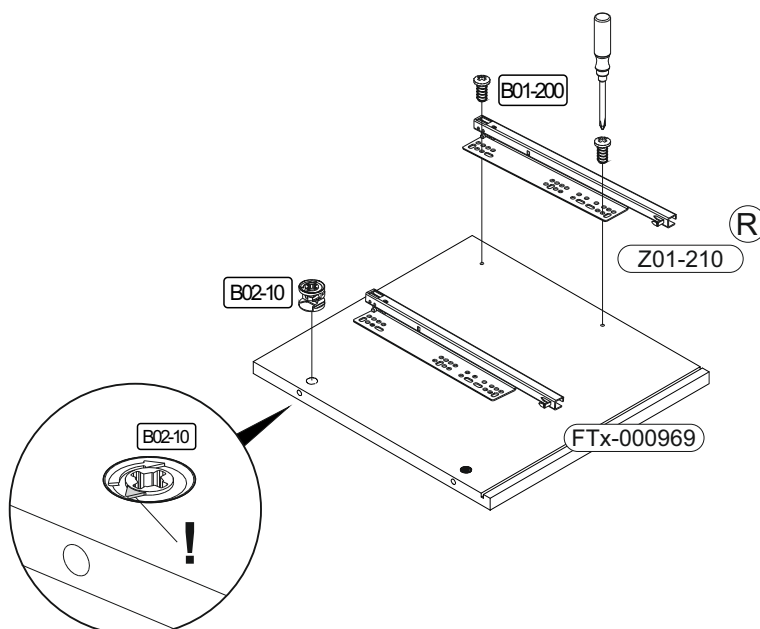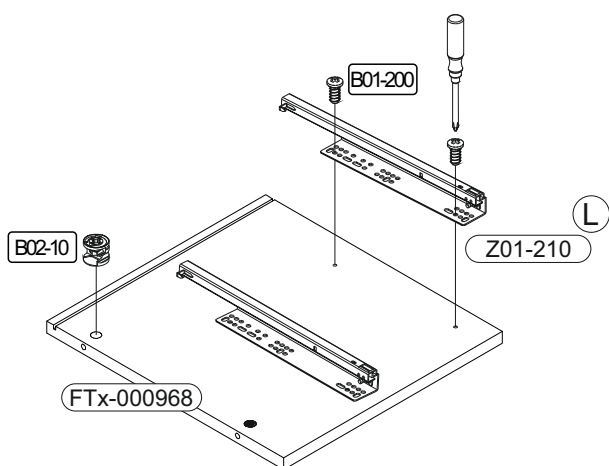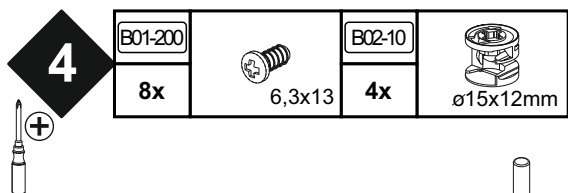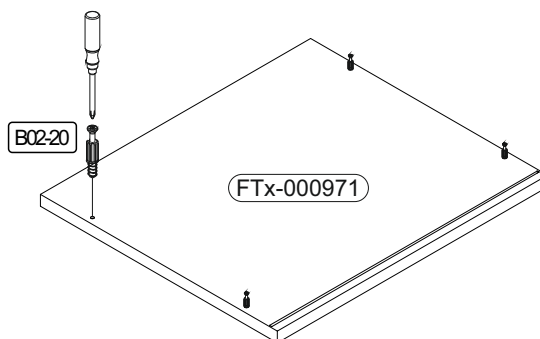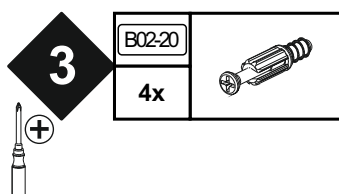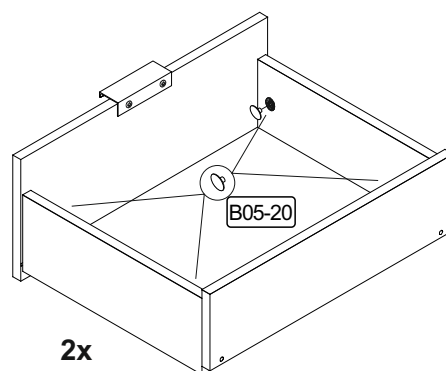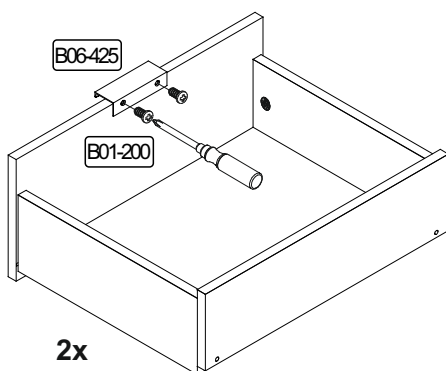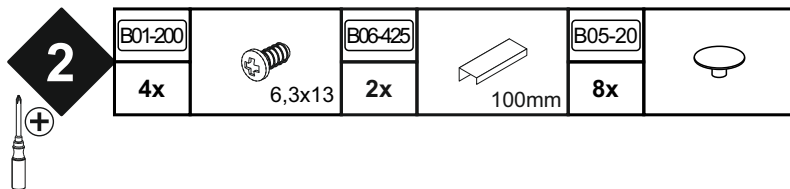



5

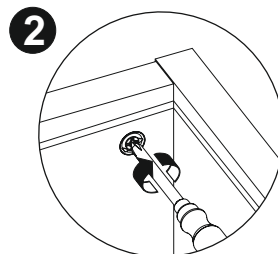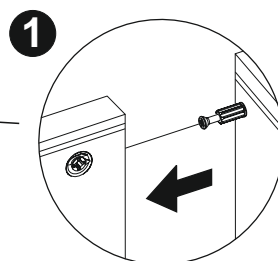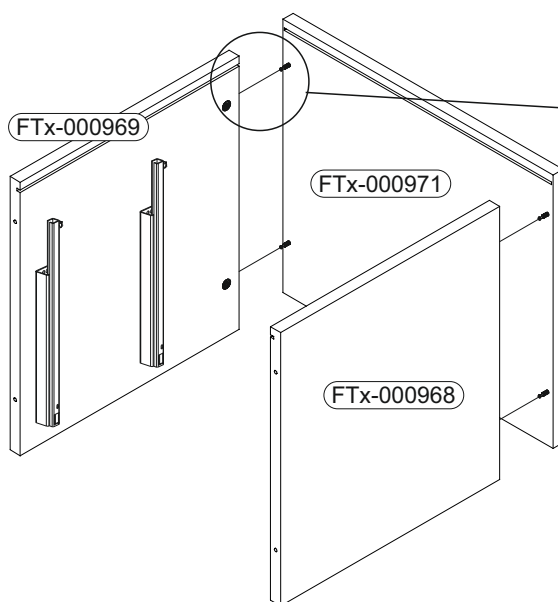


6



B01-10		B05-185		B01-90	
4x	6,3x50	4x		4x	3,5x20

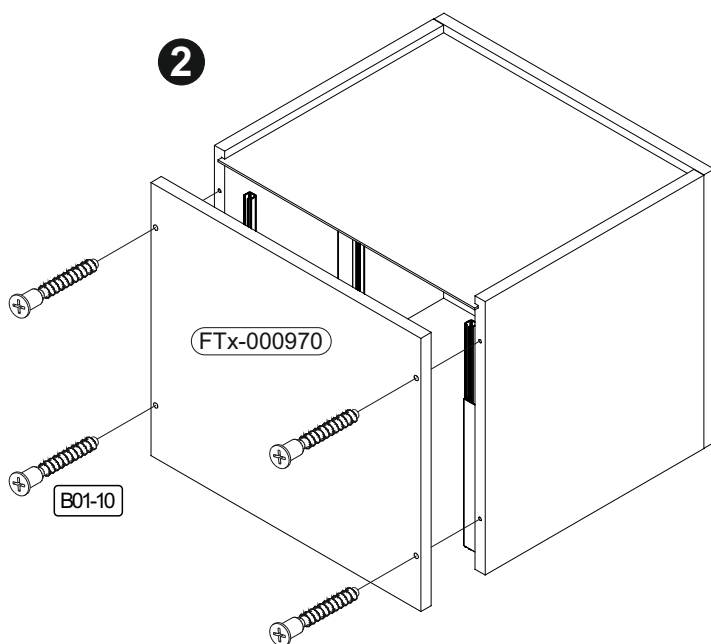
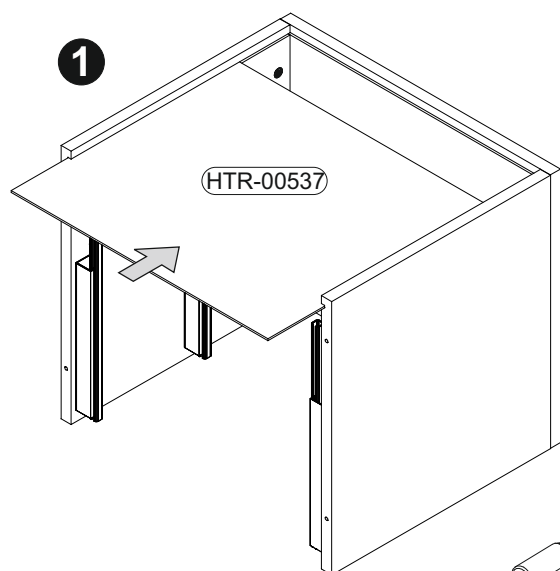


3

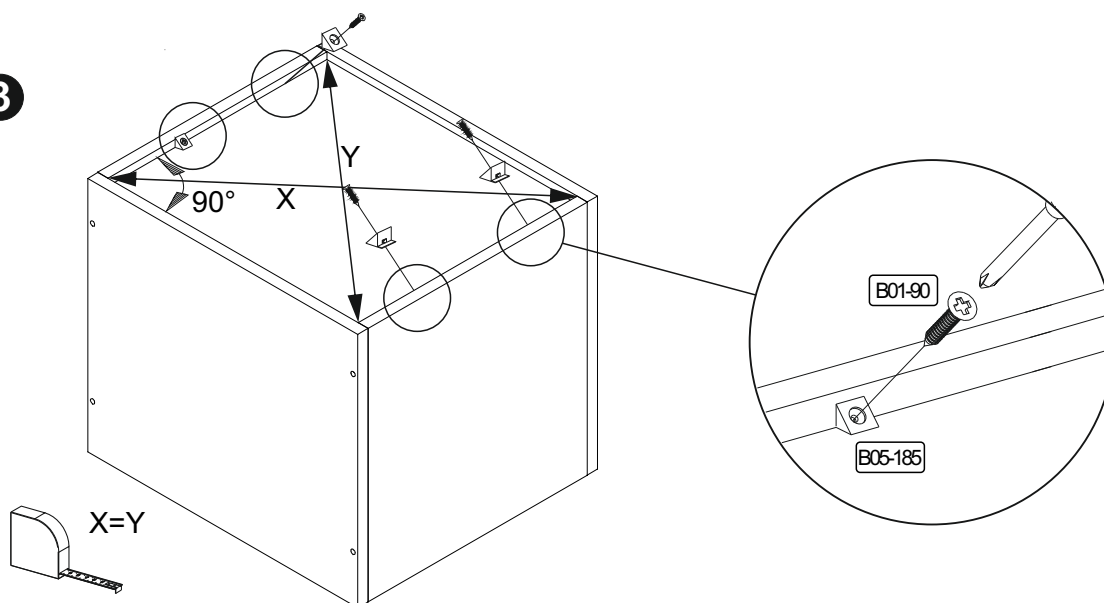

7.1


B01-123		B02-173	
8x	4,0x15	4x	

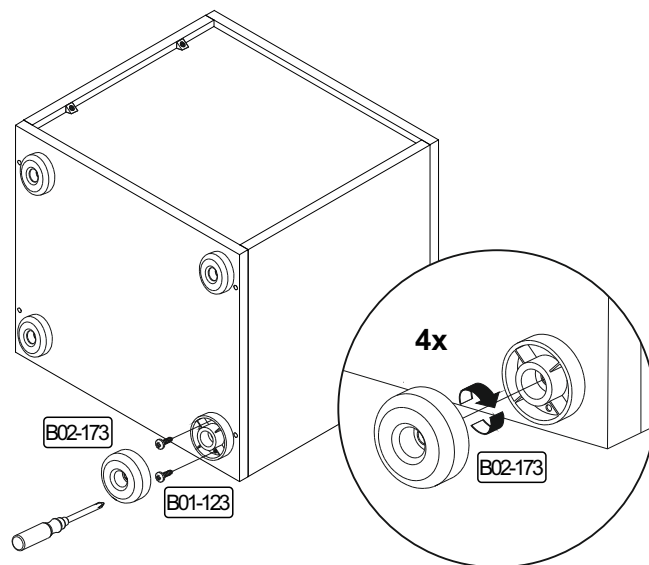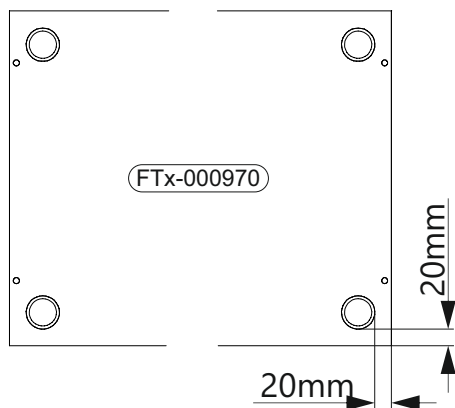




↓ **OPTIONAL ERHÄLTlich** ↓

7.2

B01-90	
16x	3,5x20

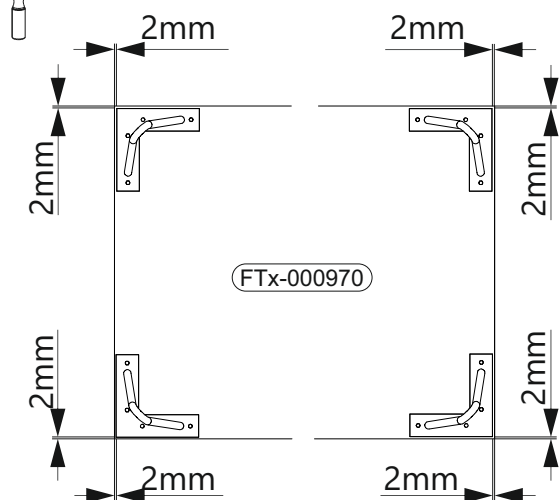


Art.-Nr. :
0800-4er Füße Draht

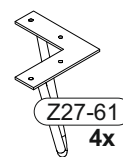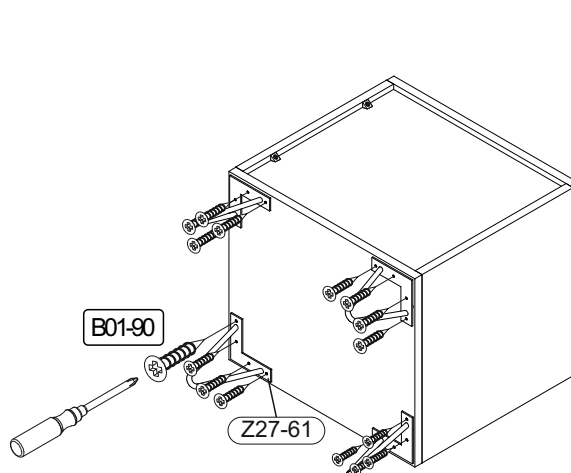




150x110x110mm

7.3

B01-90	
16x	3,5x20

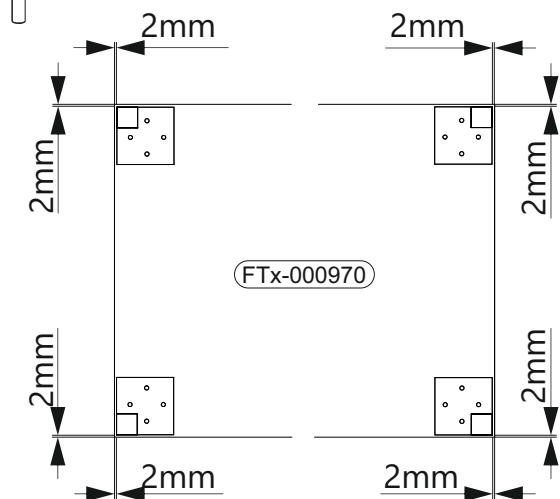


Art.-Nr. :
0800-4er Füße Quadrat

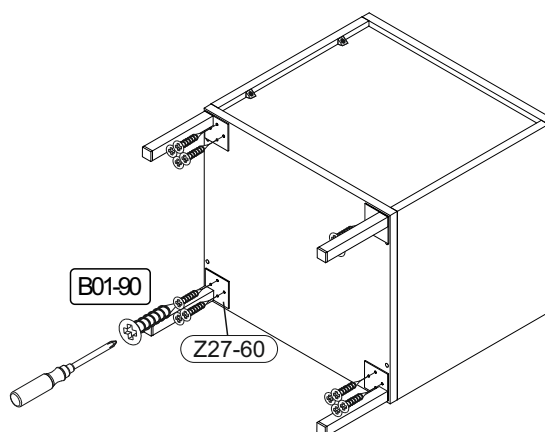



150x20x20mm





SCAN ME

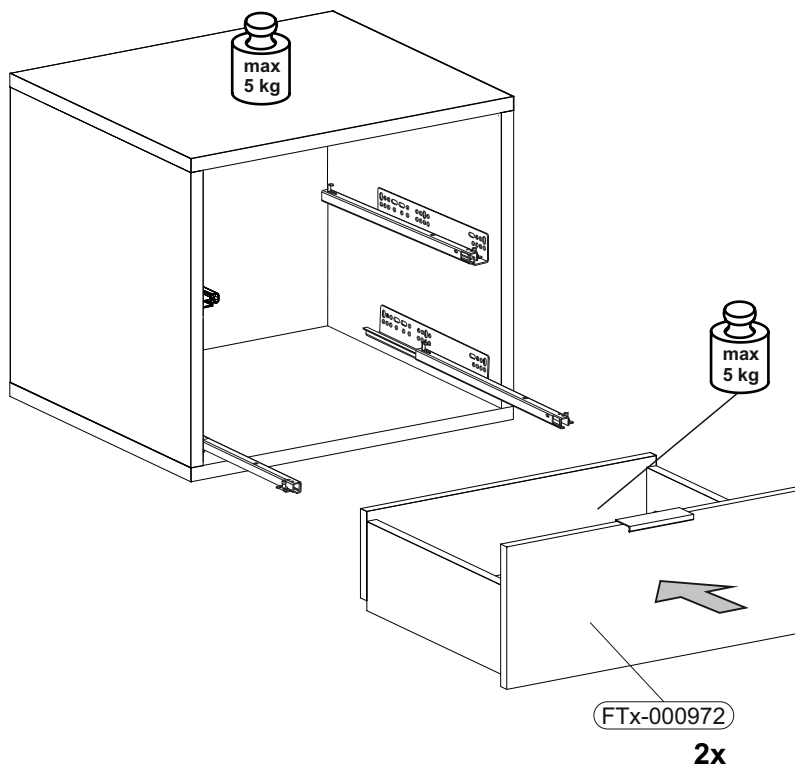

1

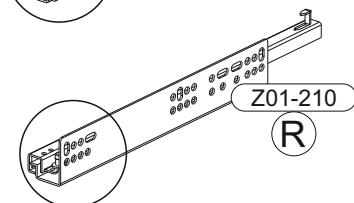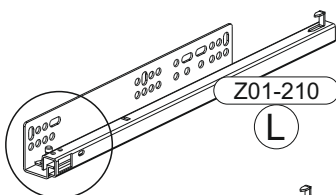


Die Stellräder, die der Höhenverstellung dienen nach ganz unten drehen

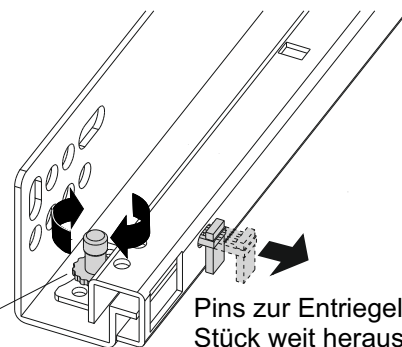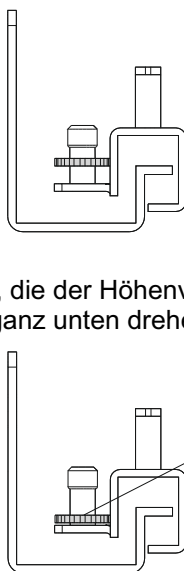


Pins zur Entriegelung ein Stück weit herausziehen

2

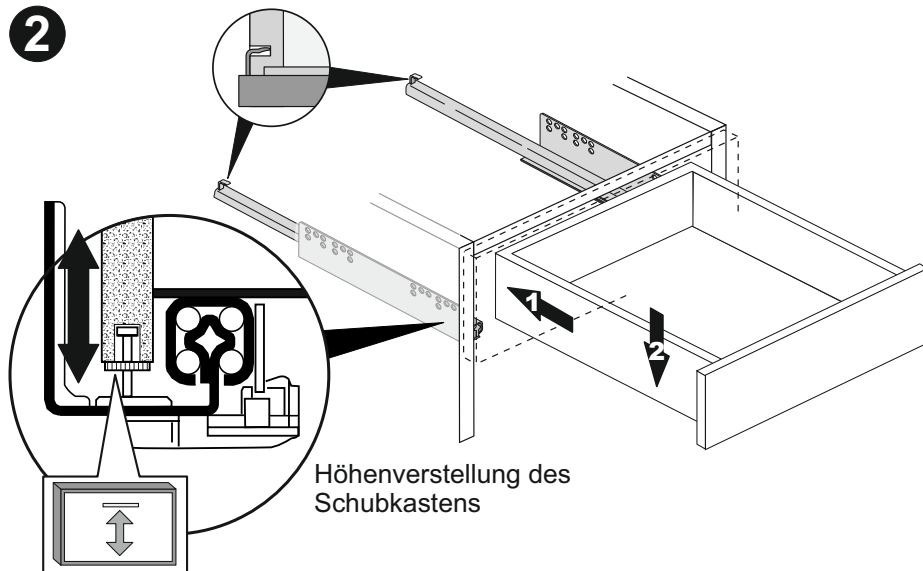

Höhenverstellung des Schubkastens

3

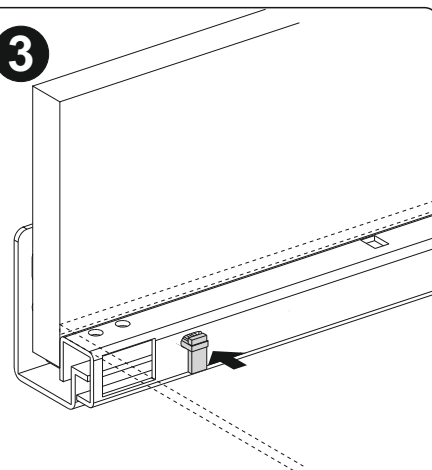

Nach dem Einsetzen und Einstellen der Schubkästen Pins zur Verriegelung eindrücken!