

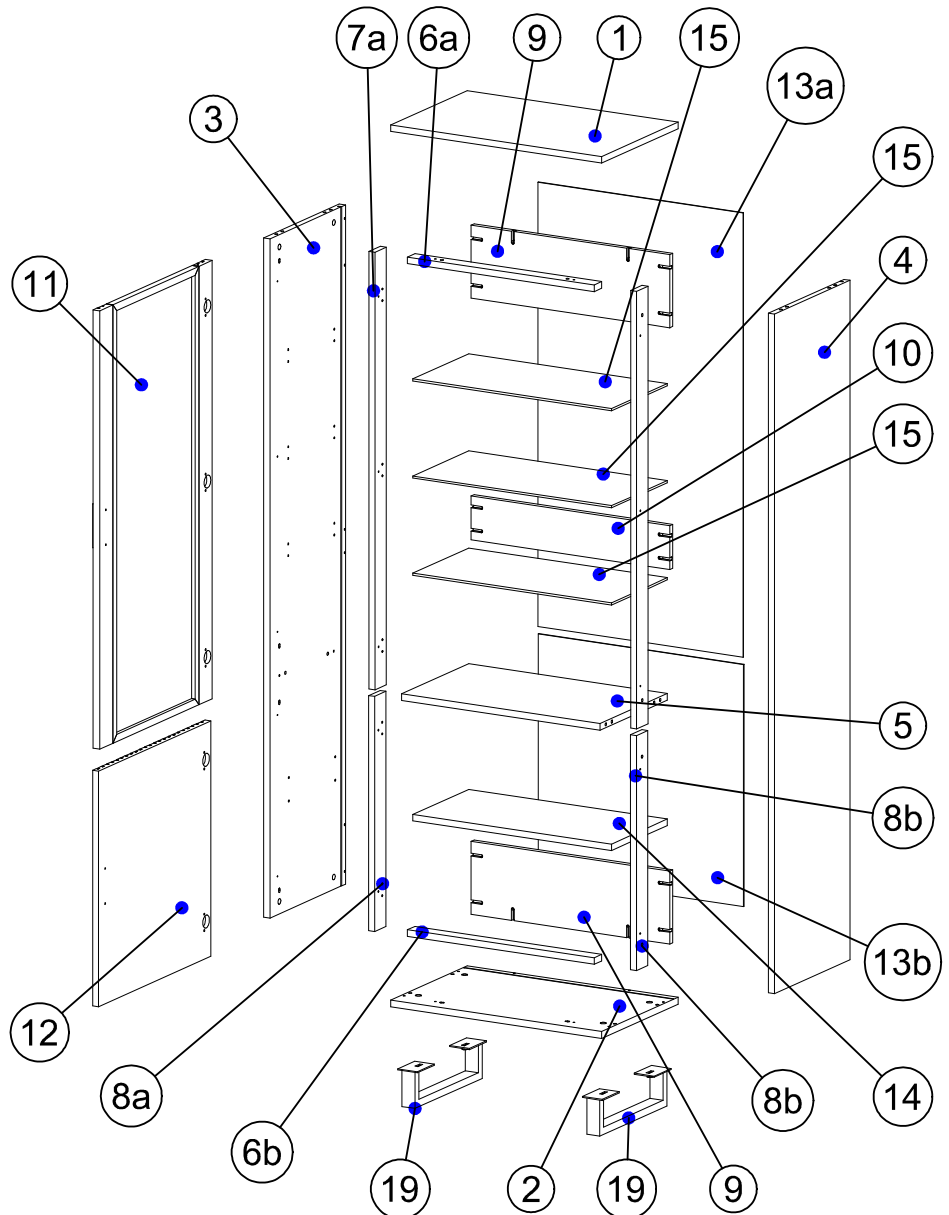
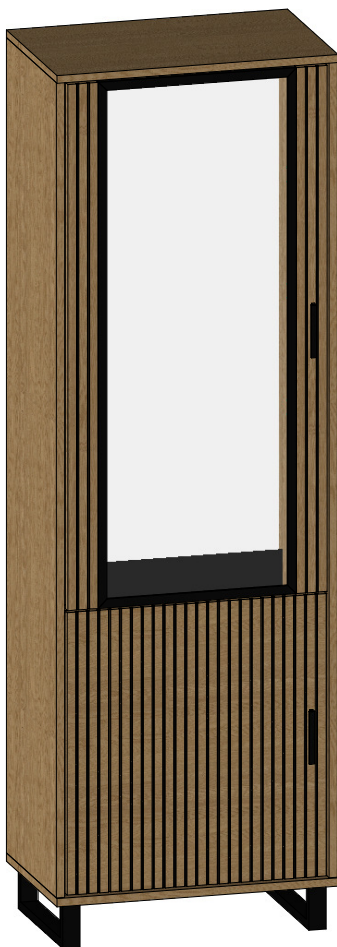


3201


versionsnummer:

09.2023


Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.









x2 80 min

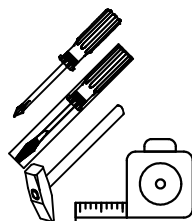


A1  Ø 8x20 12	A  Ø 8x30 12	B  28	D  28	E  Ø 6.3x13 5	F  5	G  Ø 4x30 14	H  Ø 3x16 4	I  12 4
J  Ø 5x13 10	Filz  4	M  2	P  4	S  4	R  M4x26 4	N  8	U  2	Z  24

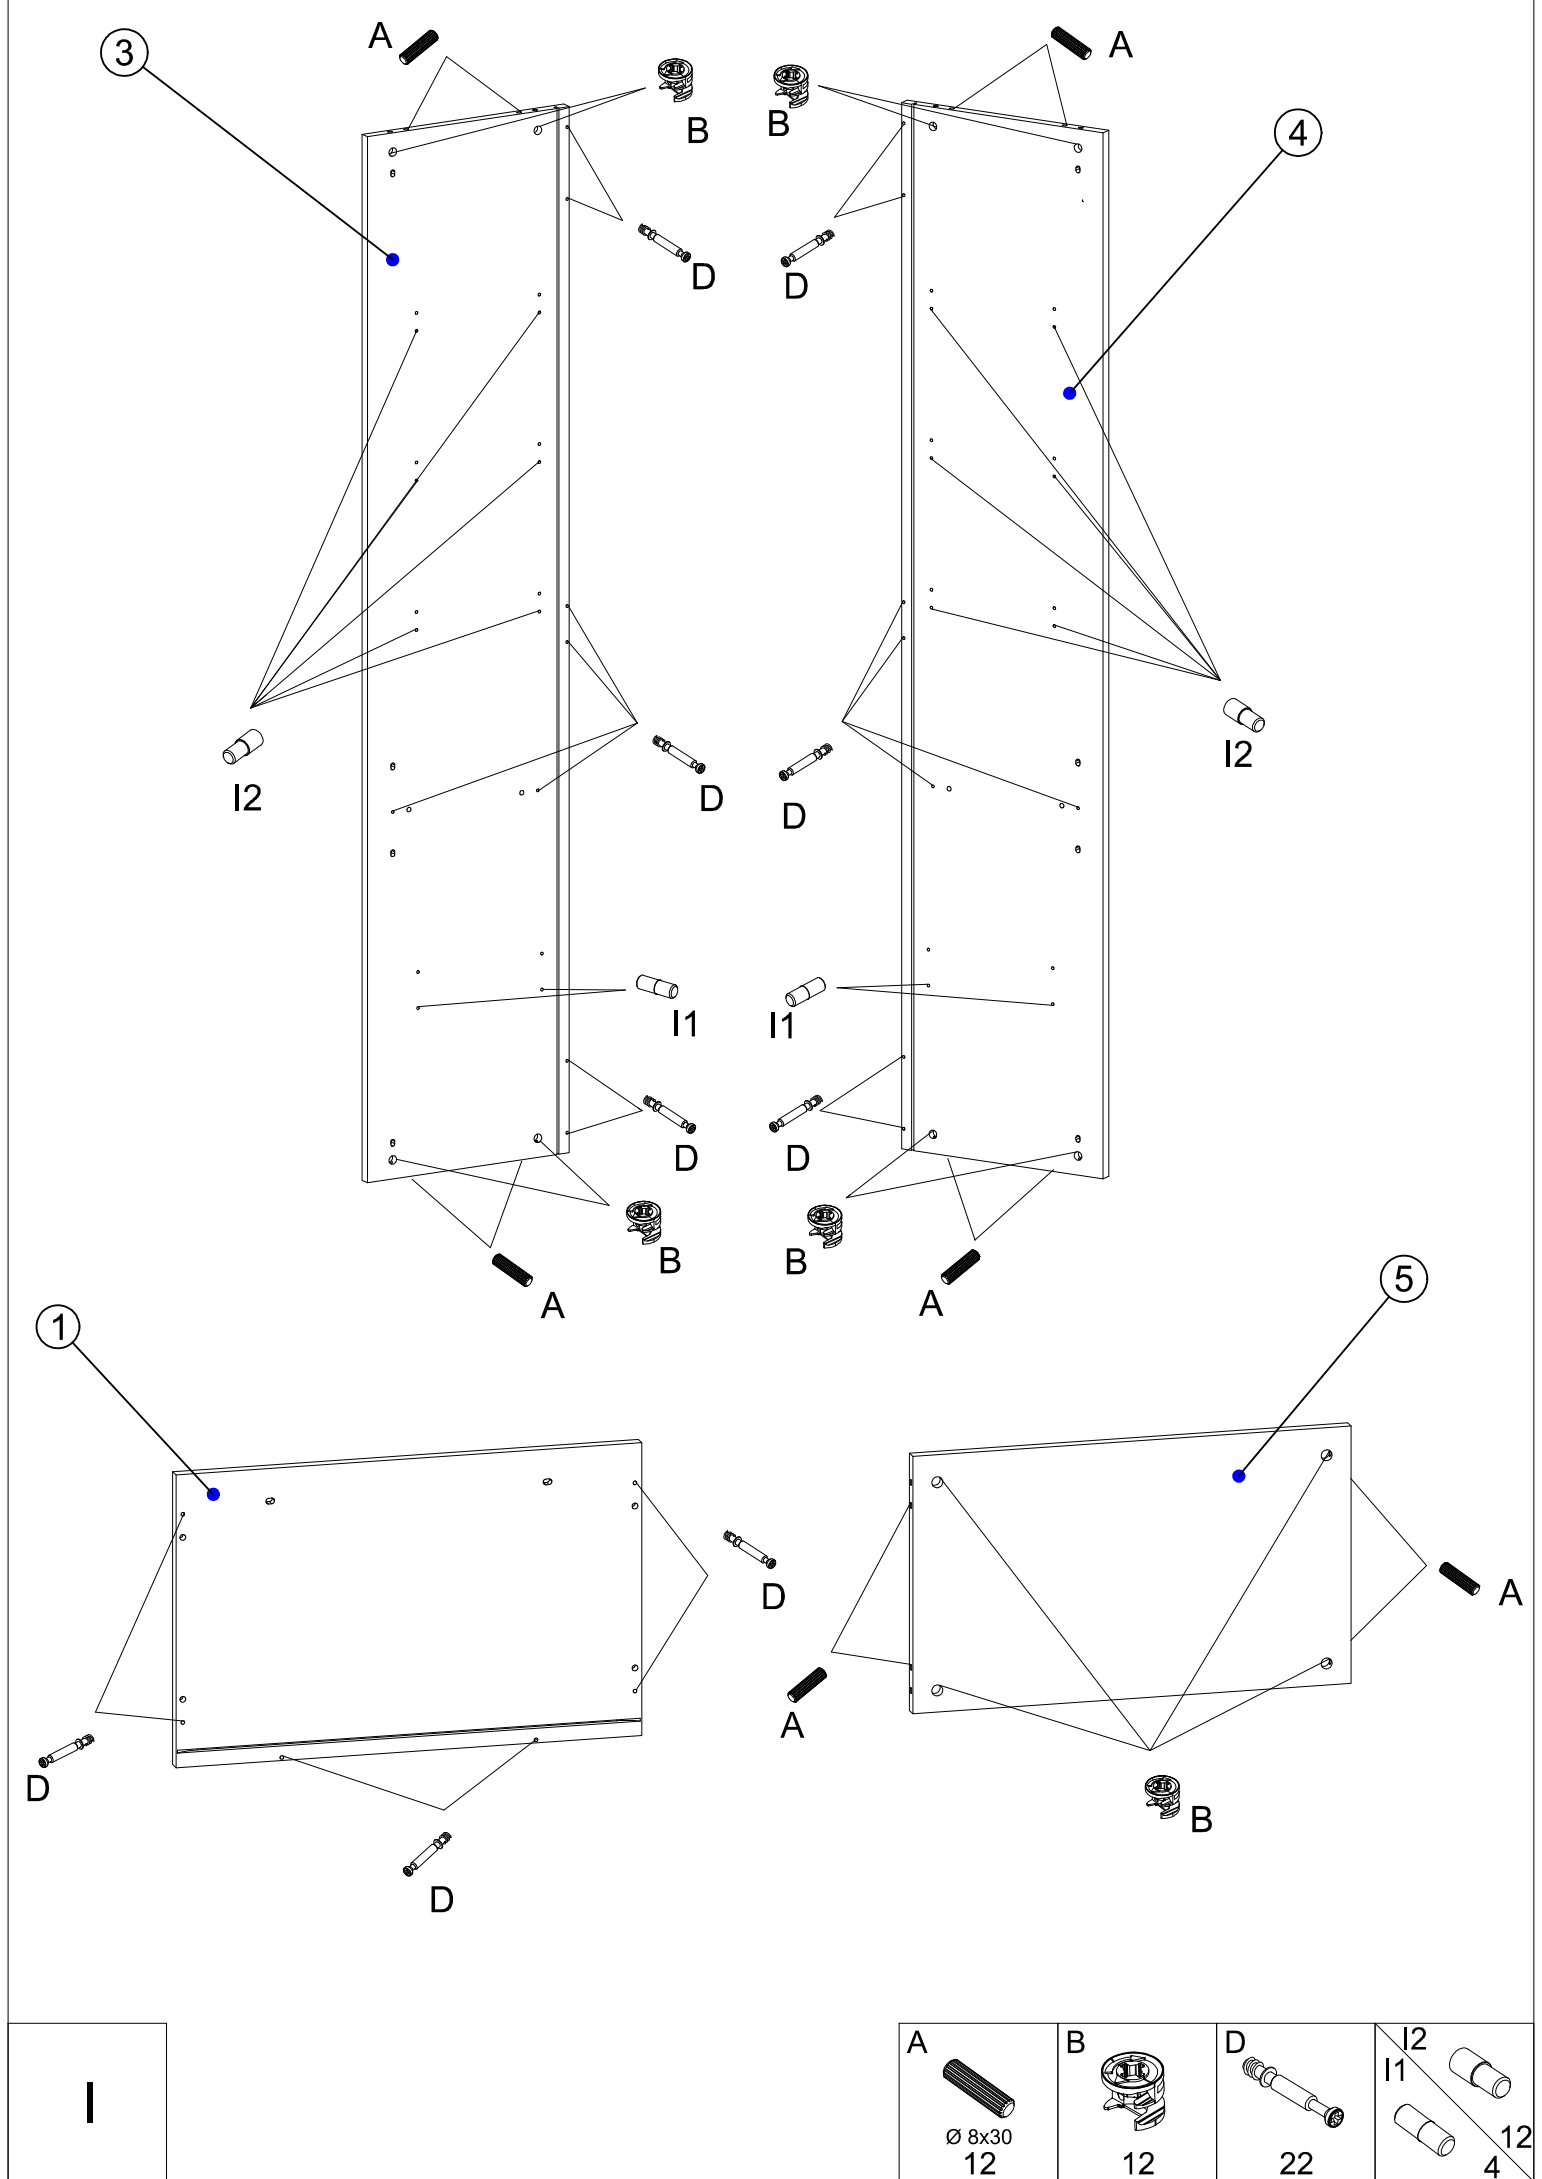


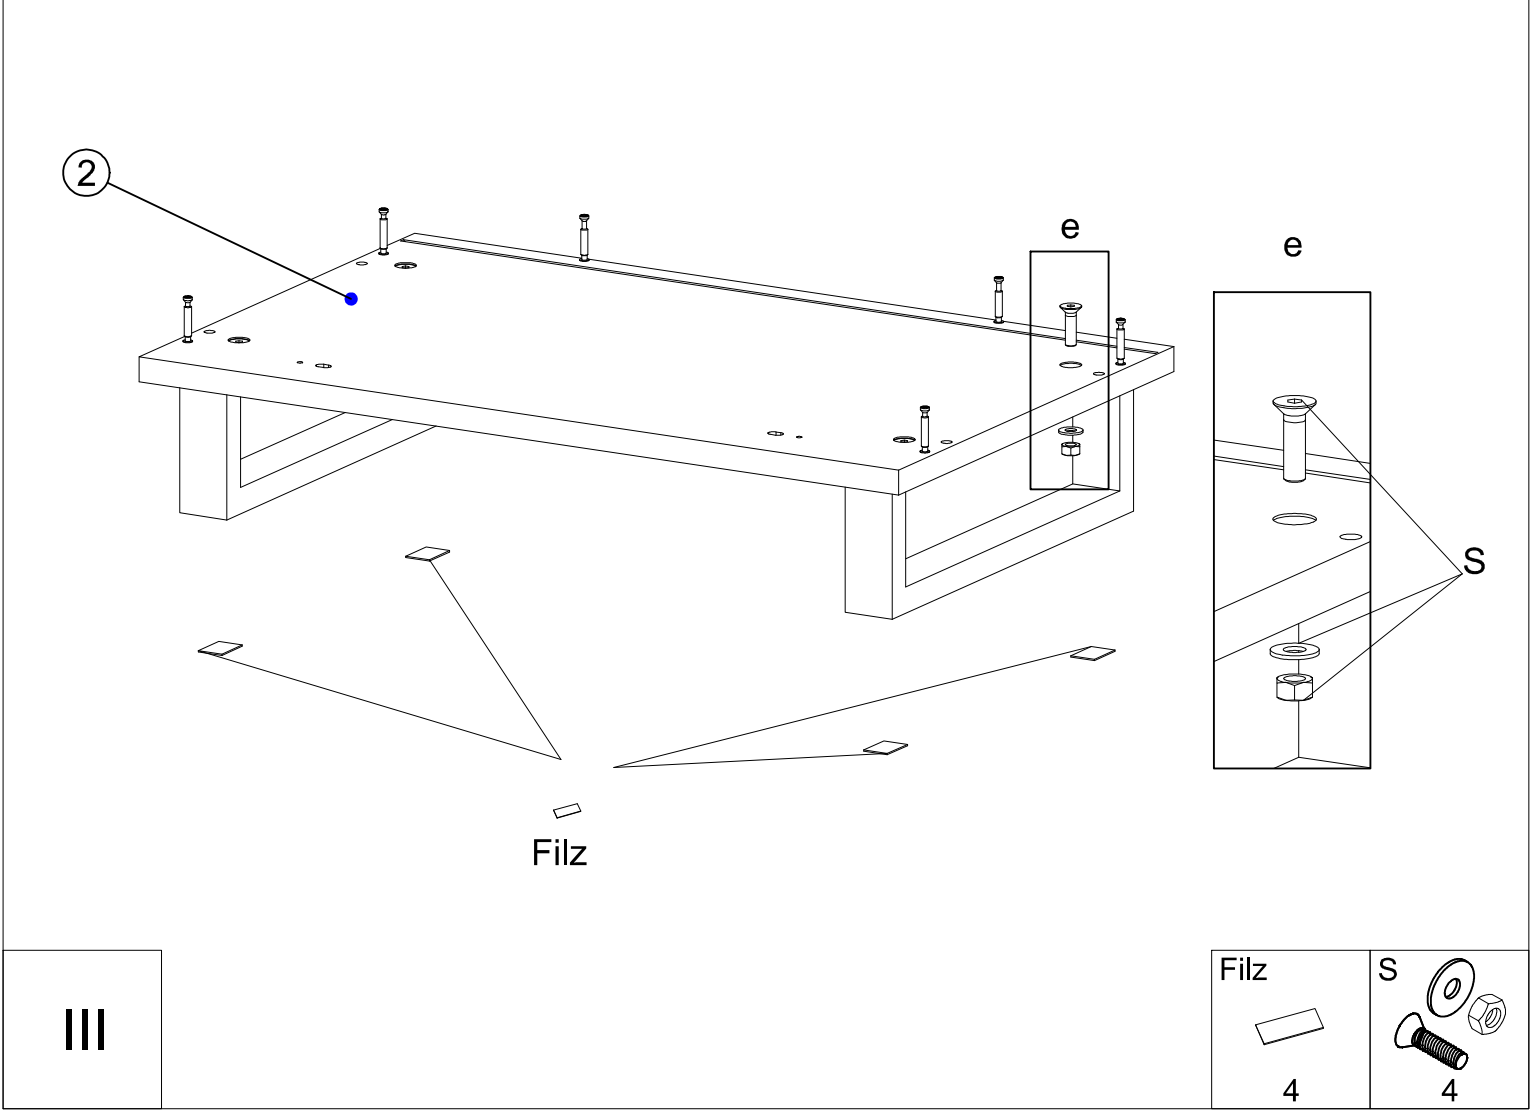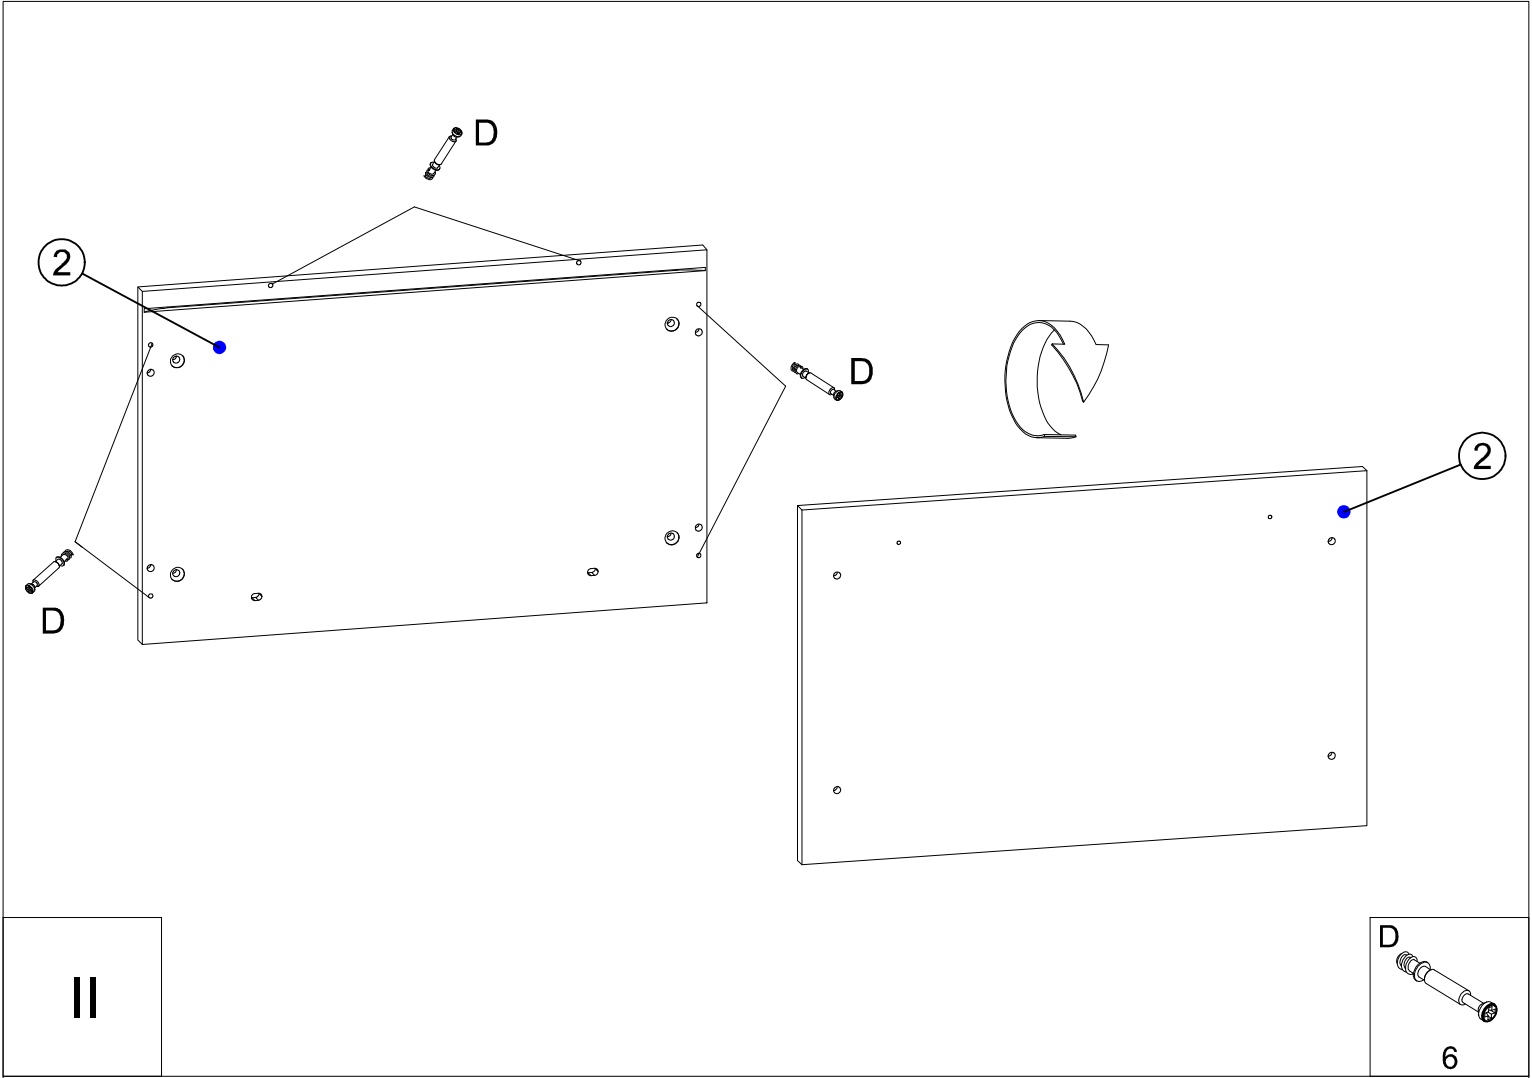

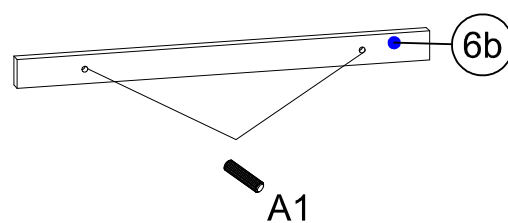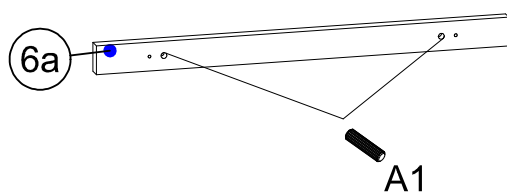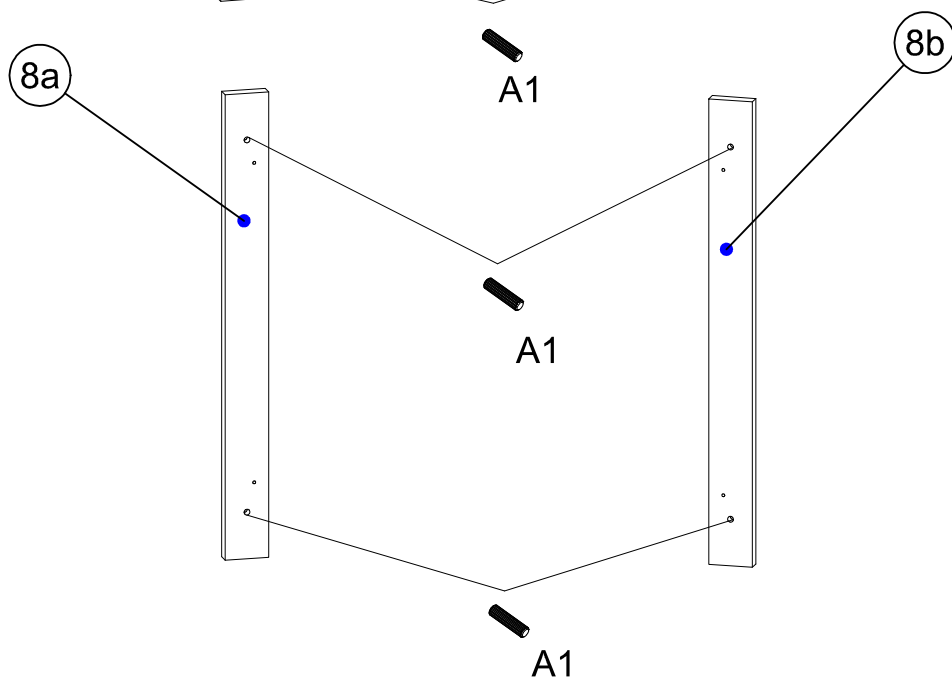
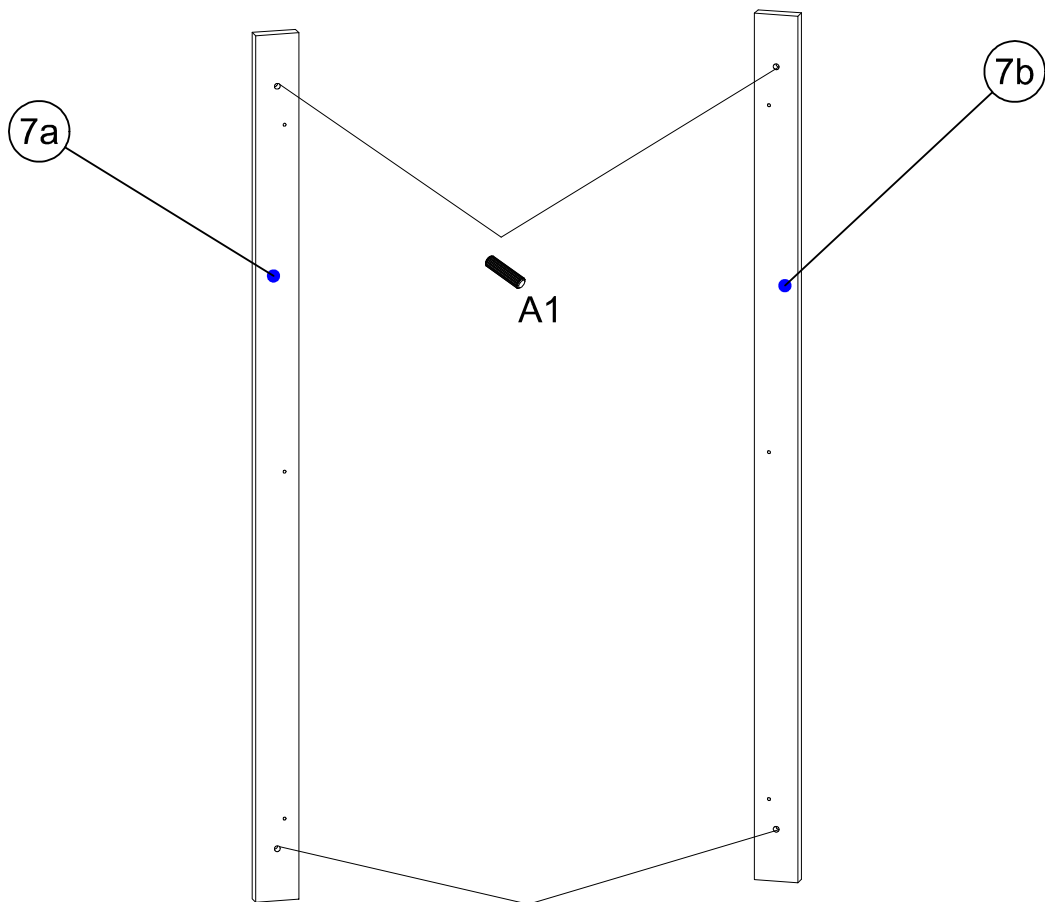


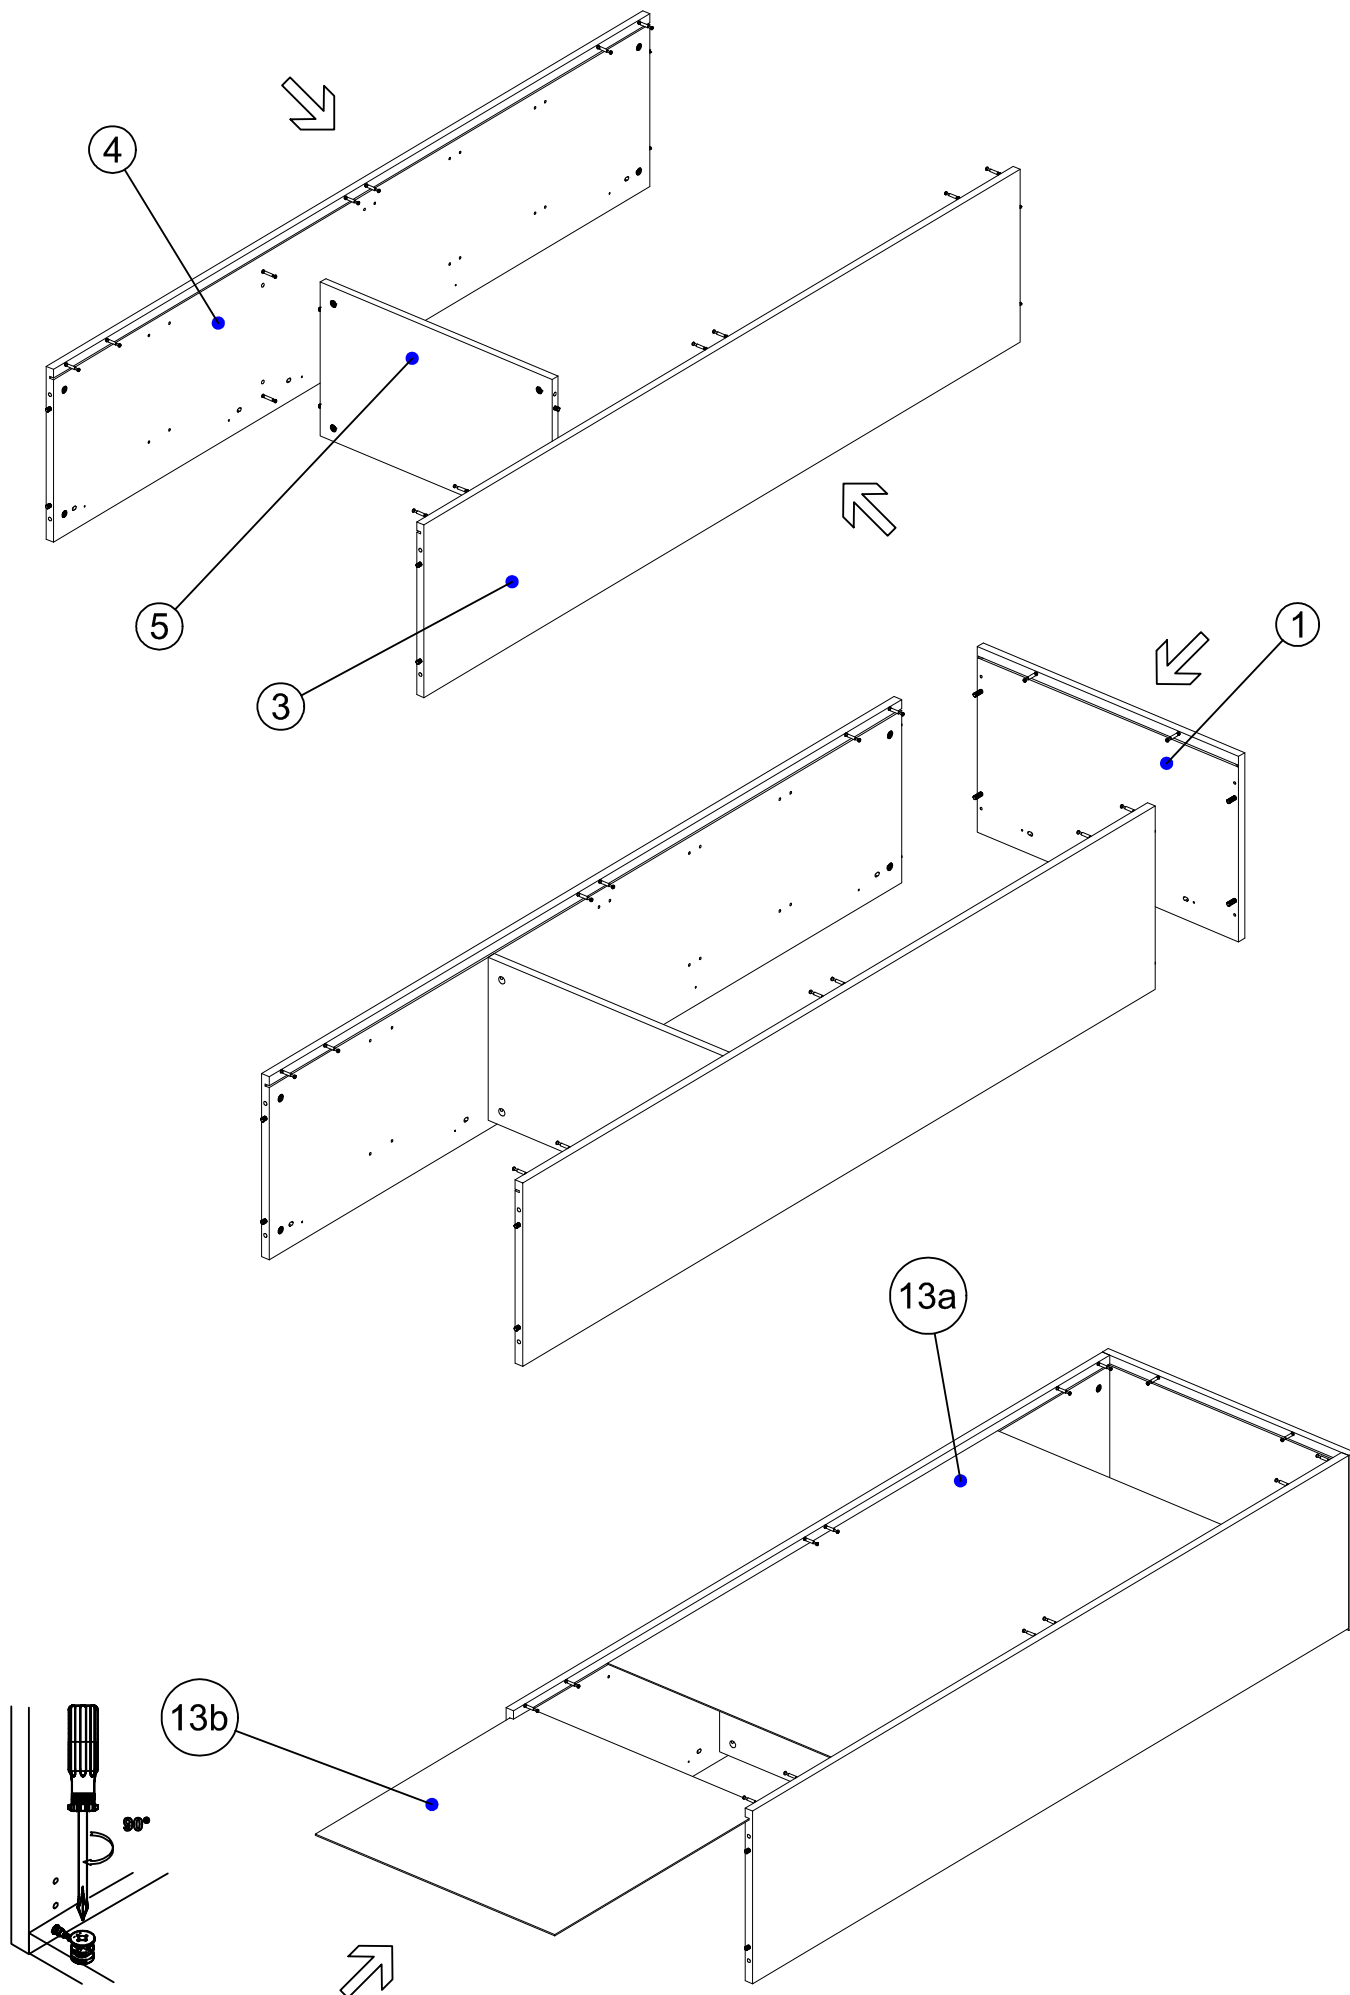


2

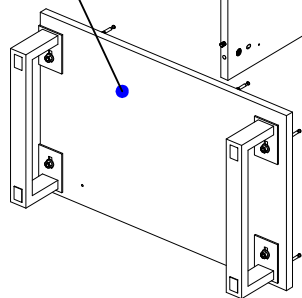


9

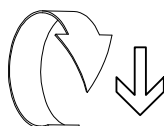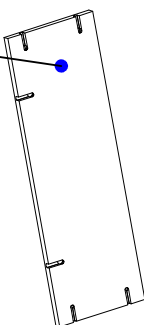


9

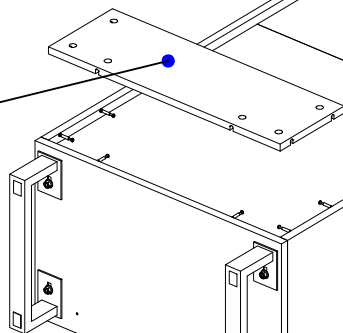


10

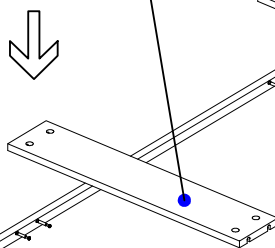

9


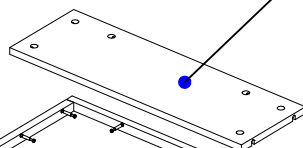


B

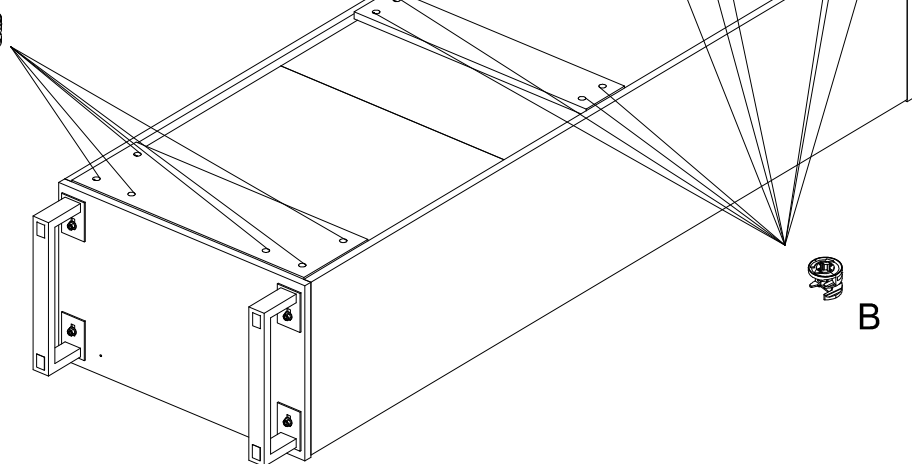

B

B

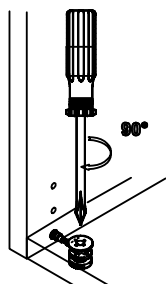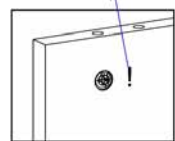

VI

B





16

VII



H	N	P
 Ø 3x13 4	 8	 4

G
 Ø 4x30 14


VIII

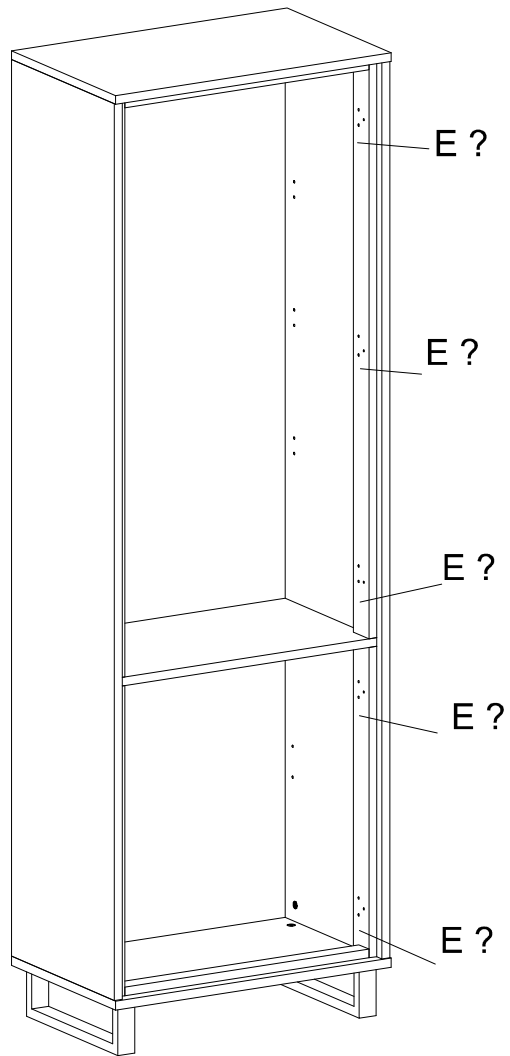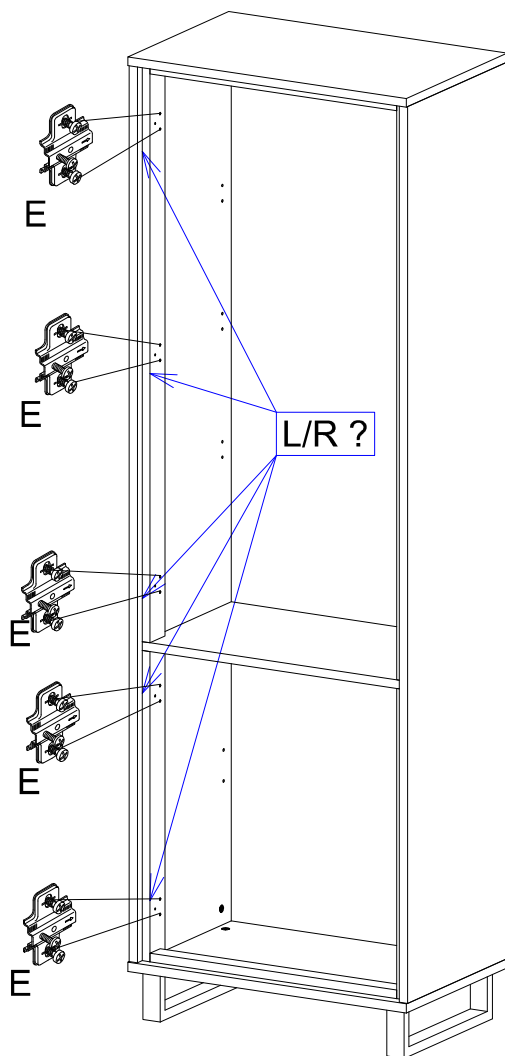






IX

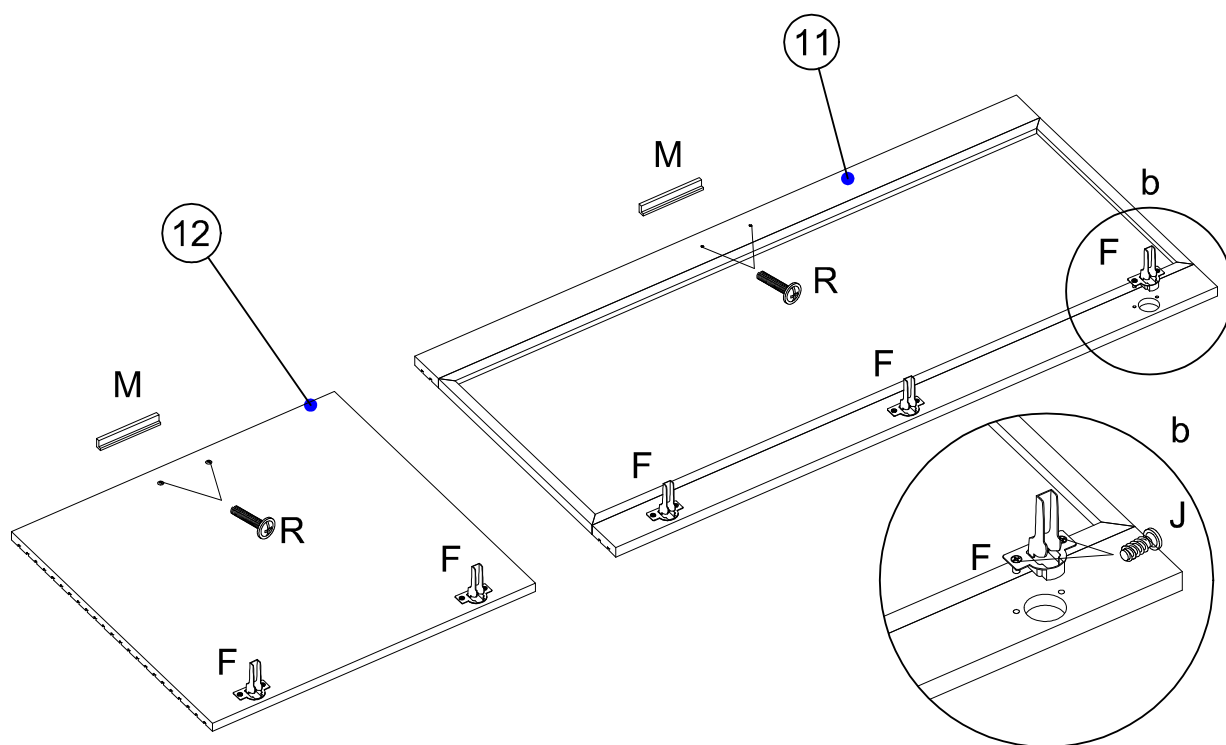

X

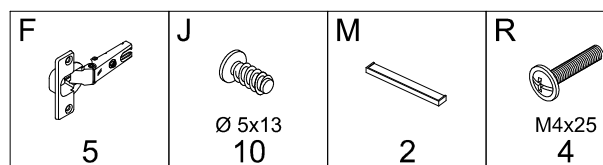

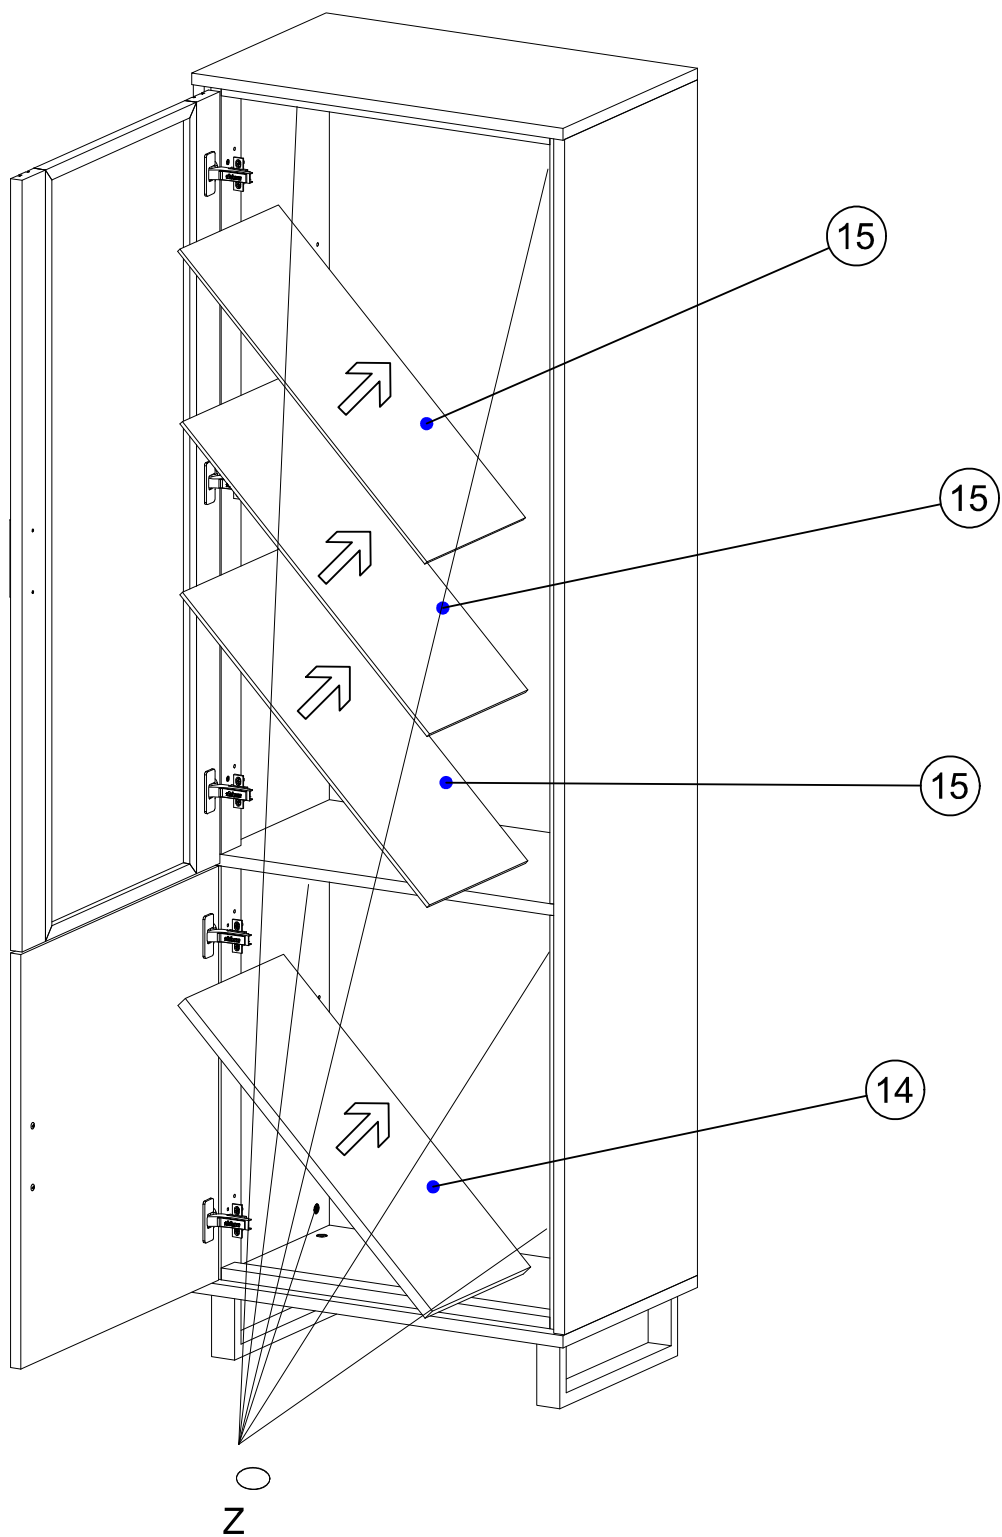

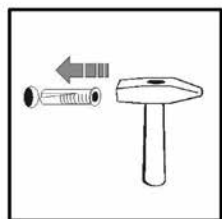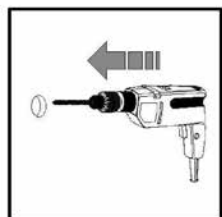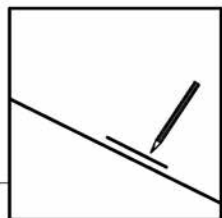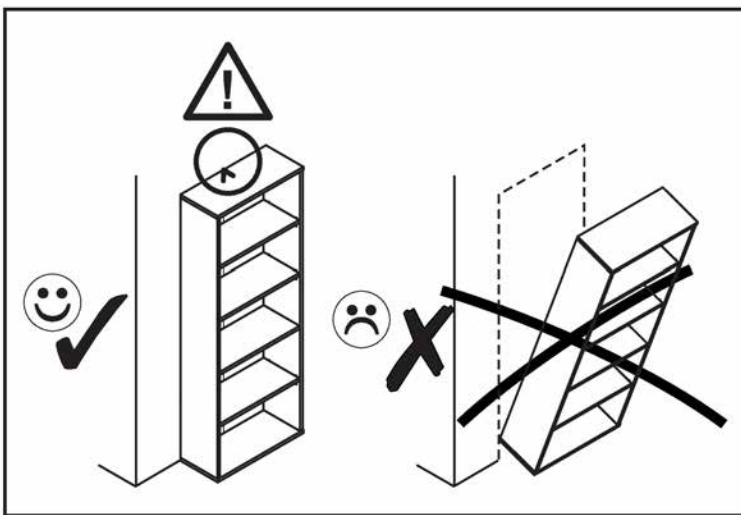

d

