


MONTAGEANLEITUNG



LASSE 2F.REC/BK LASSE REC/BK.2F

11-12/2019


A

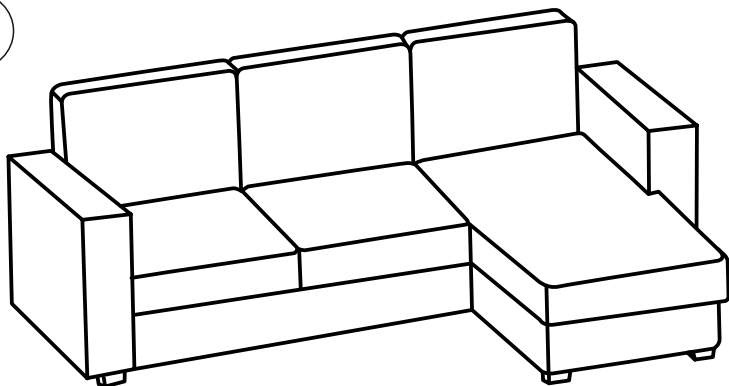

B

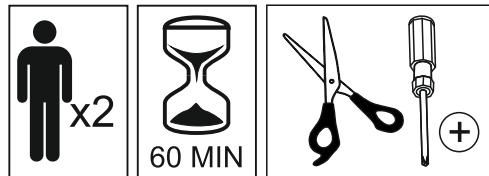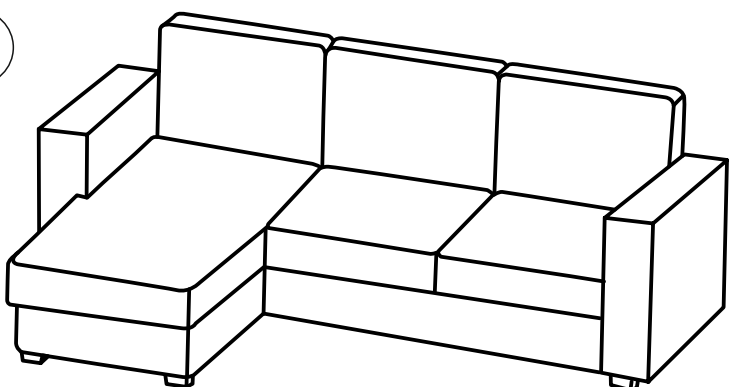


Vor der Montage bitte
beiliegende Informationen
beachten

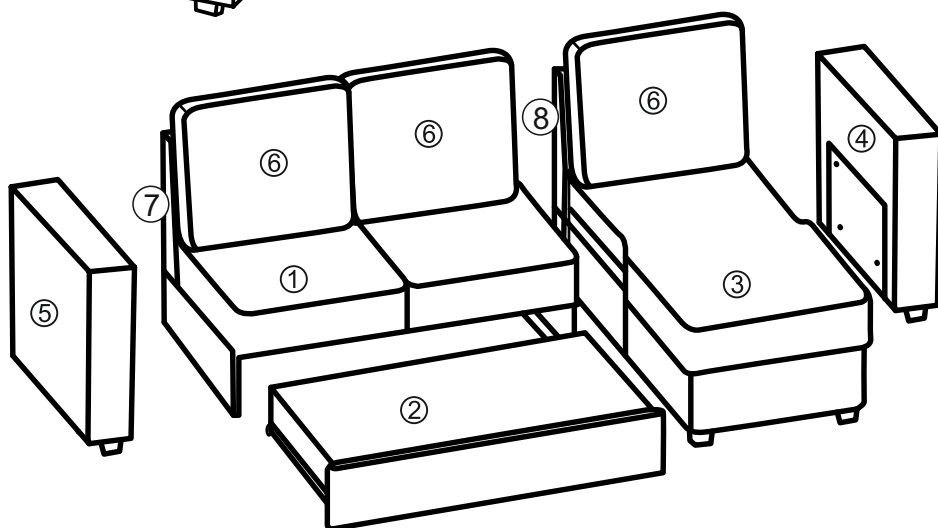


A		Ax10 M6x40	B		Bx10 M8	C		Cx4	D		Dx7 Felt
E		Ex7	F		Fx8 M6x20	G		Gx1 4mm	H		Hx3 5x40
I		Ix2	J		Jx16	K		Kx2	L		Lx4
M		Mx4 5x50									





(1a,b)

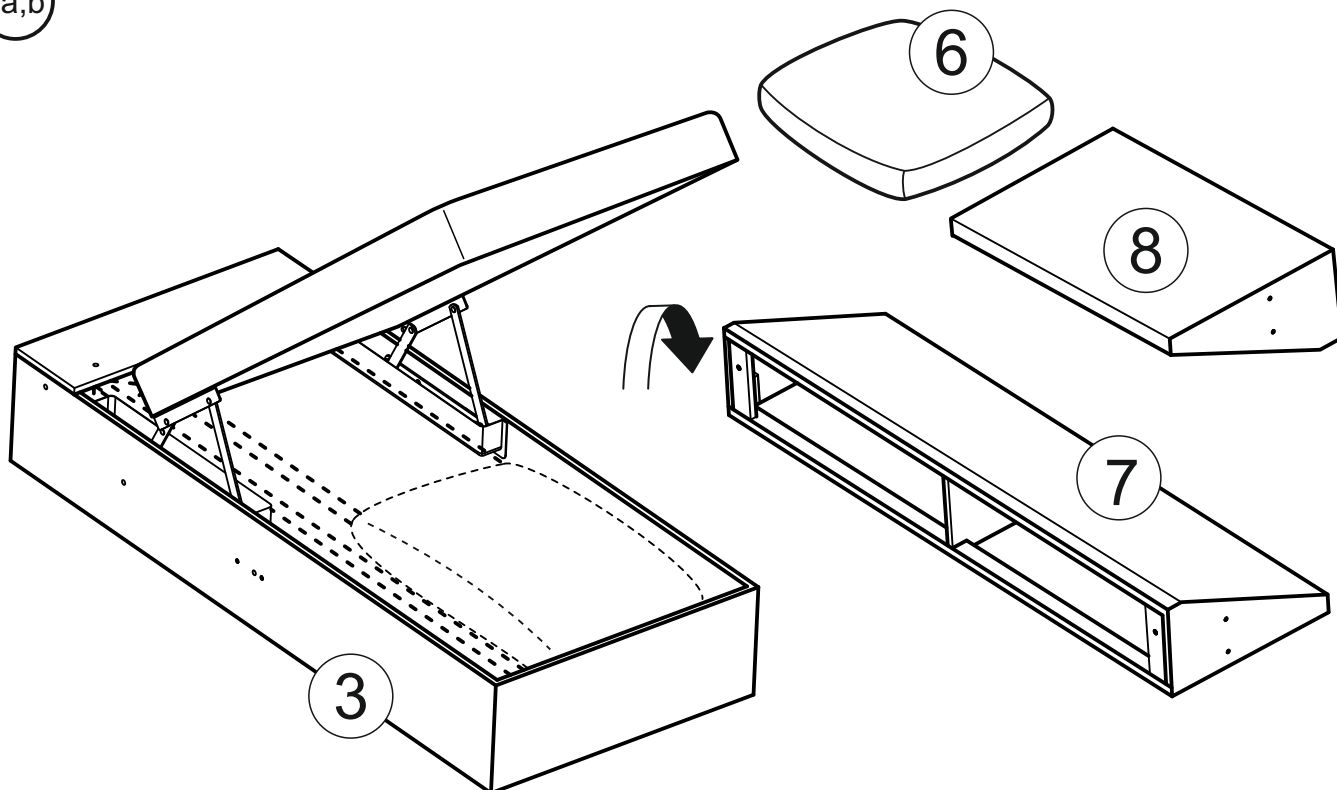




(2a,b)

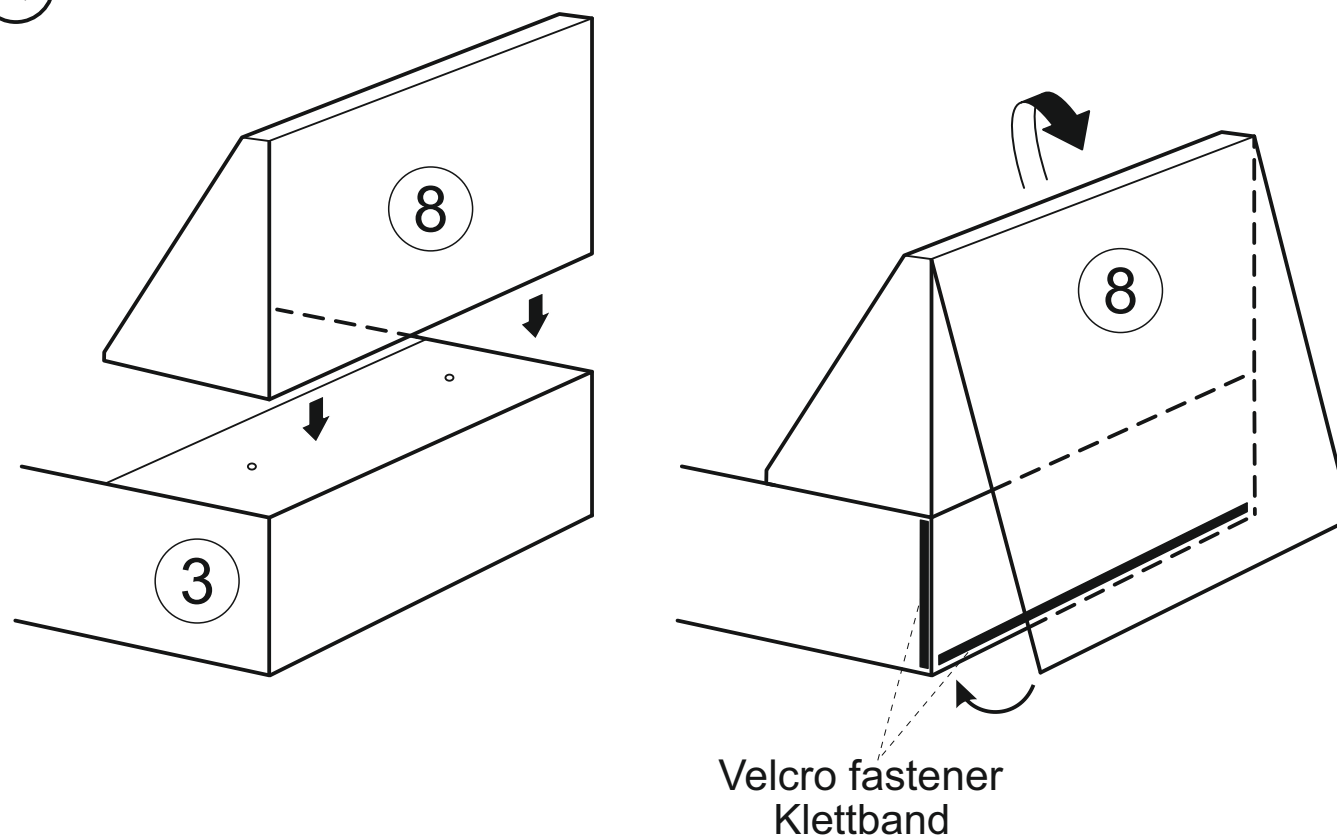


3a,b

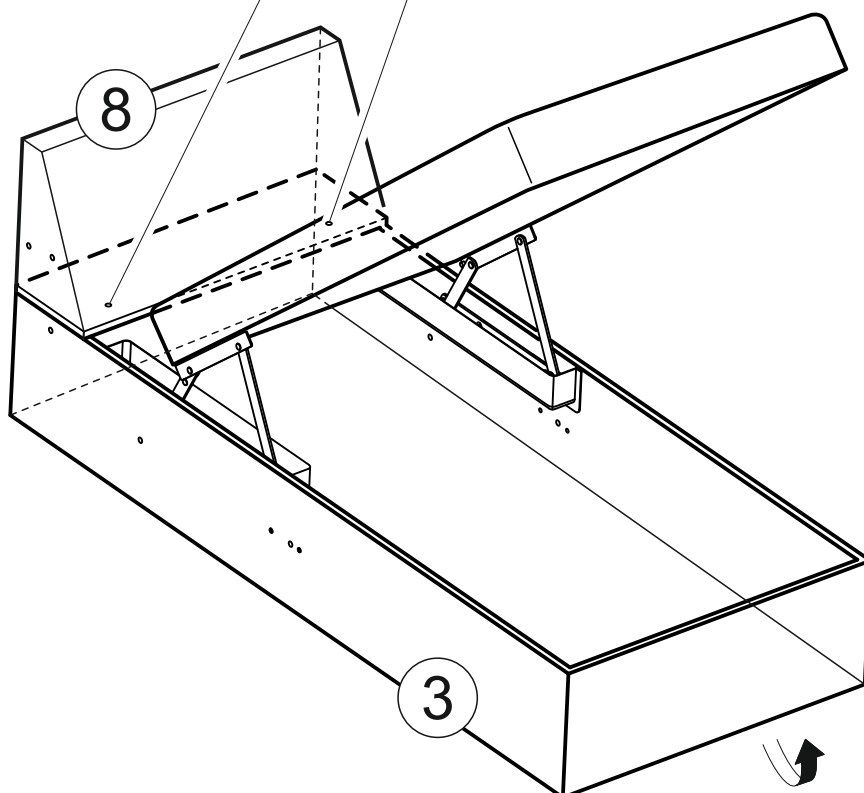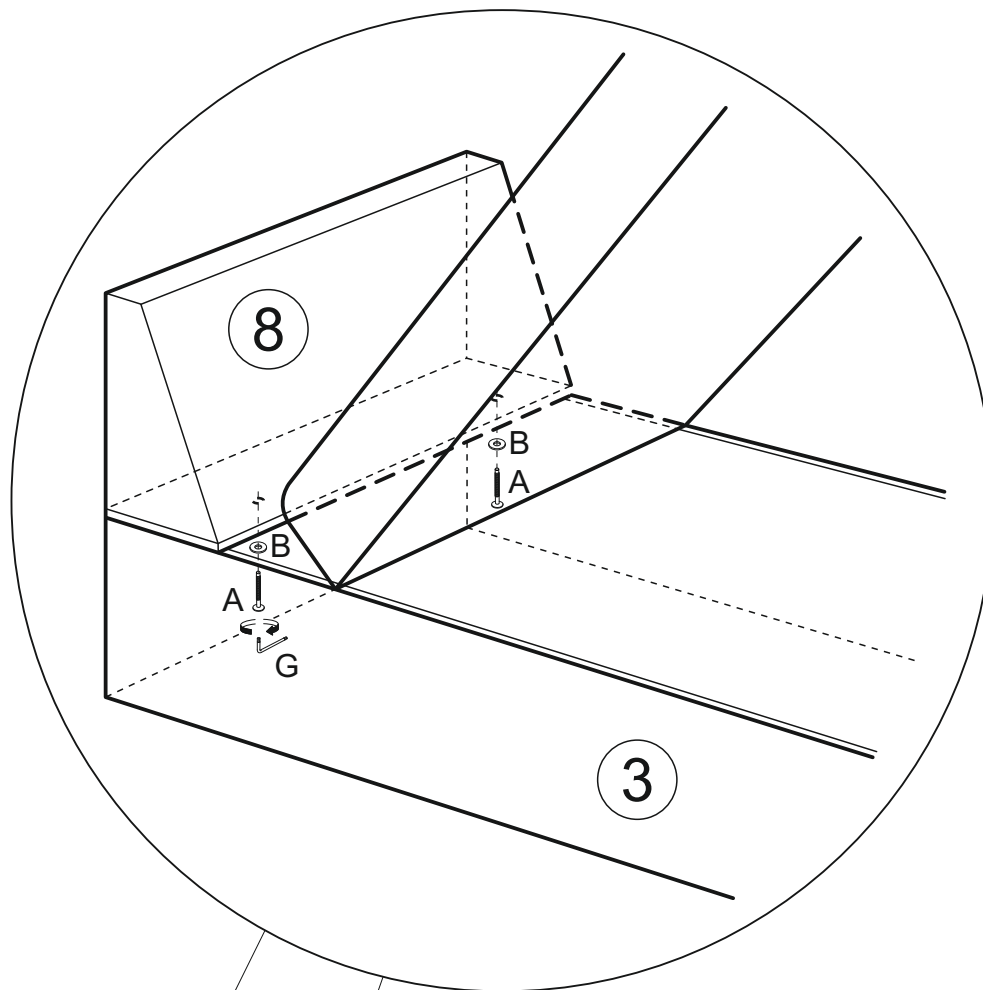




4a

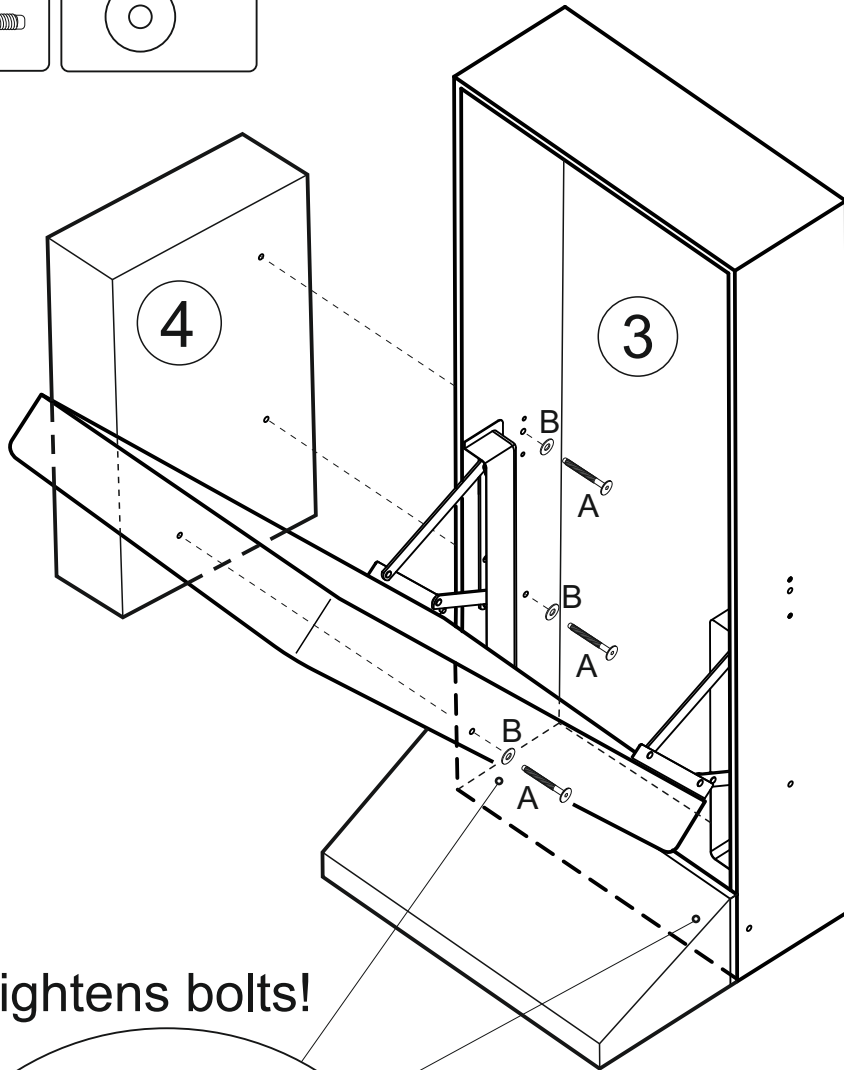


Tightens bolts!

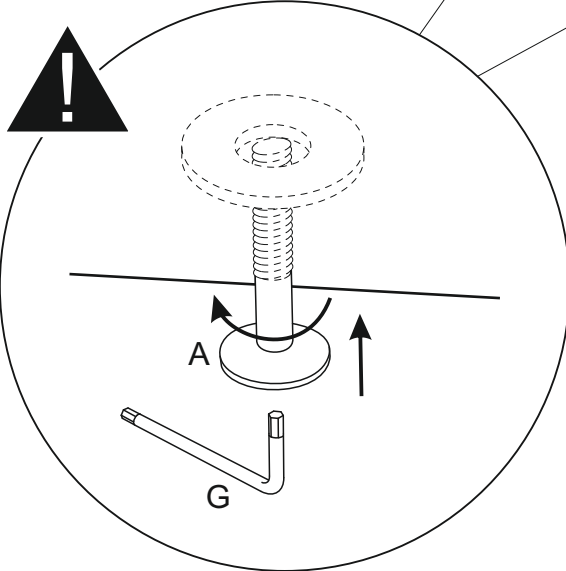





4b

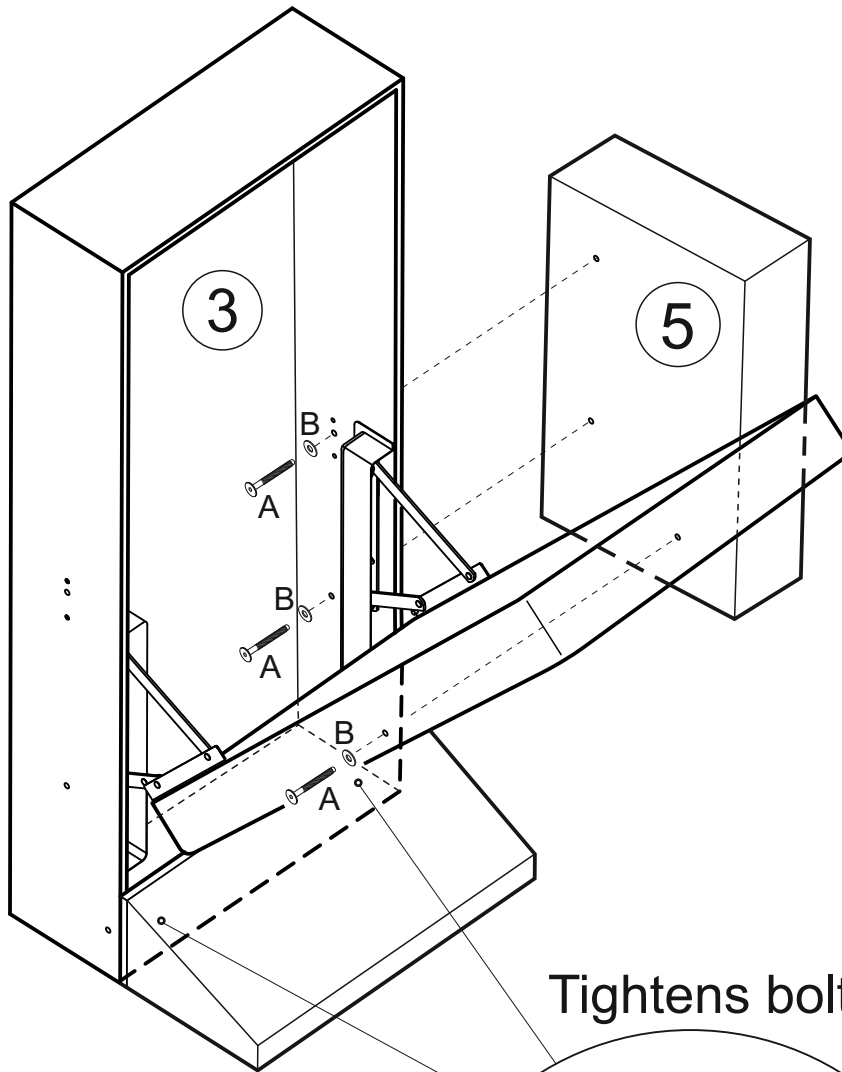





Tightens bolts!

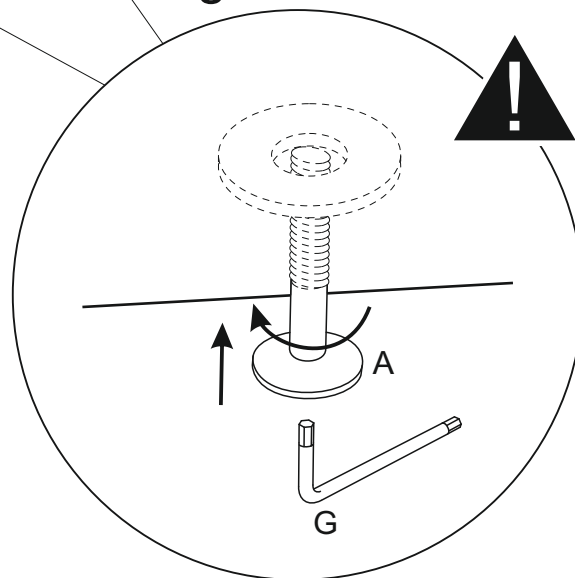






5a

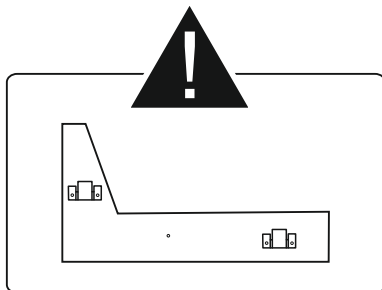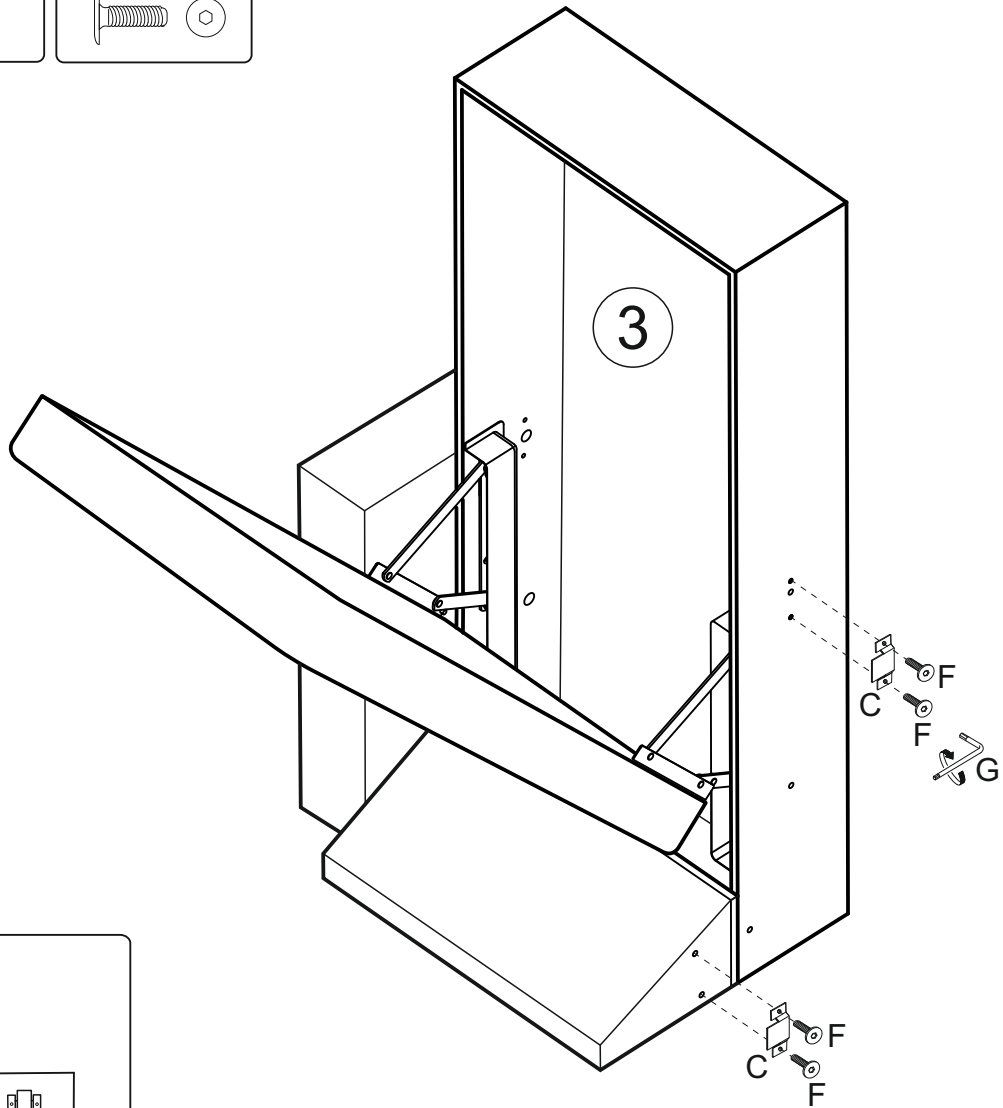






5b

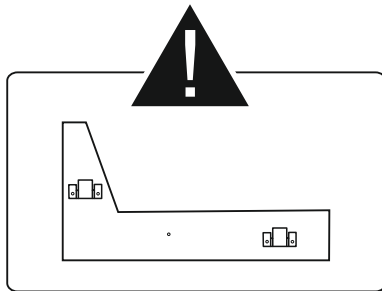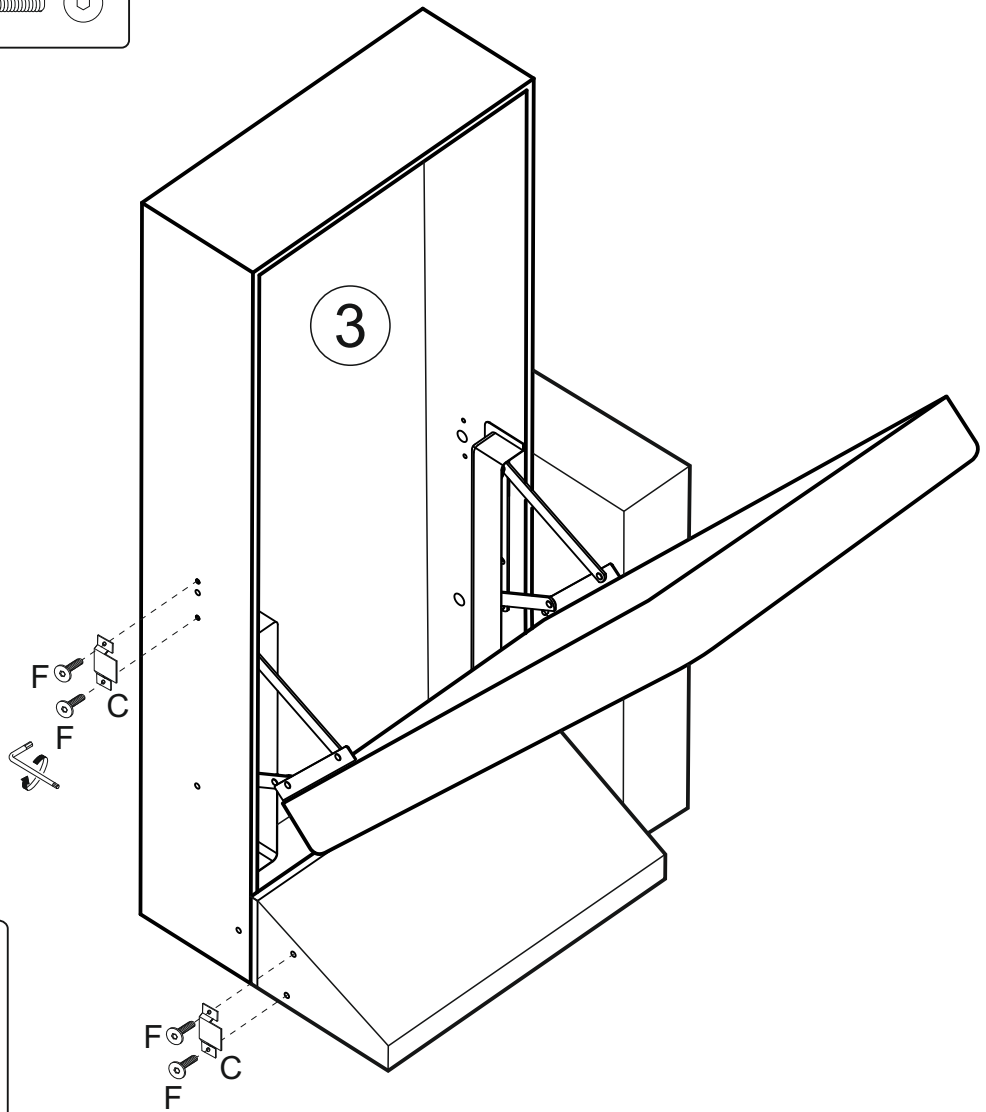



6a

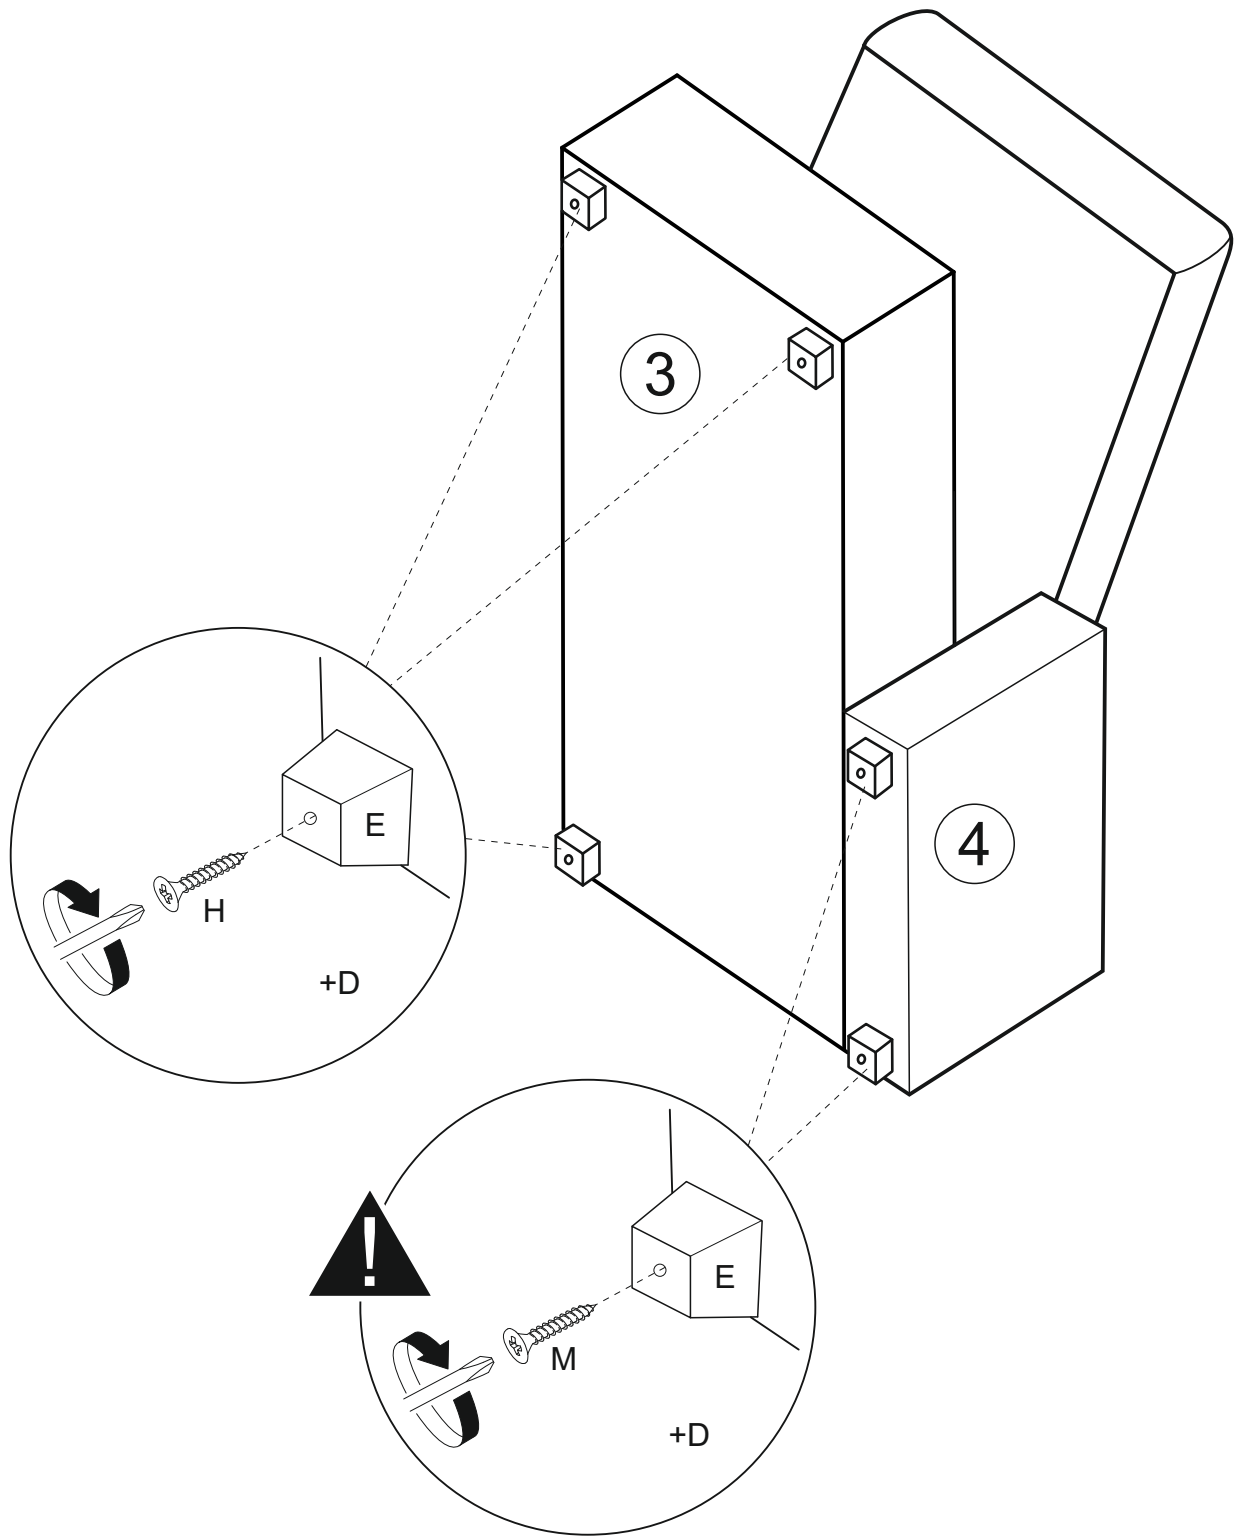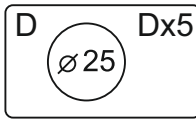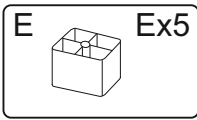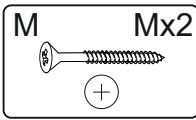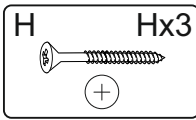





6b

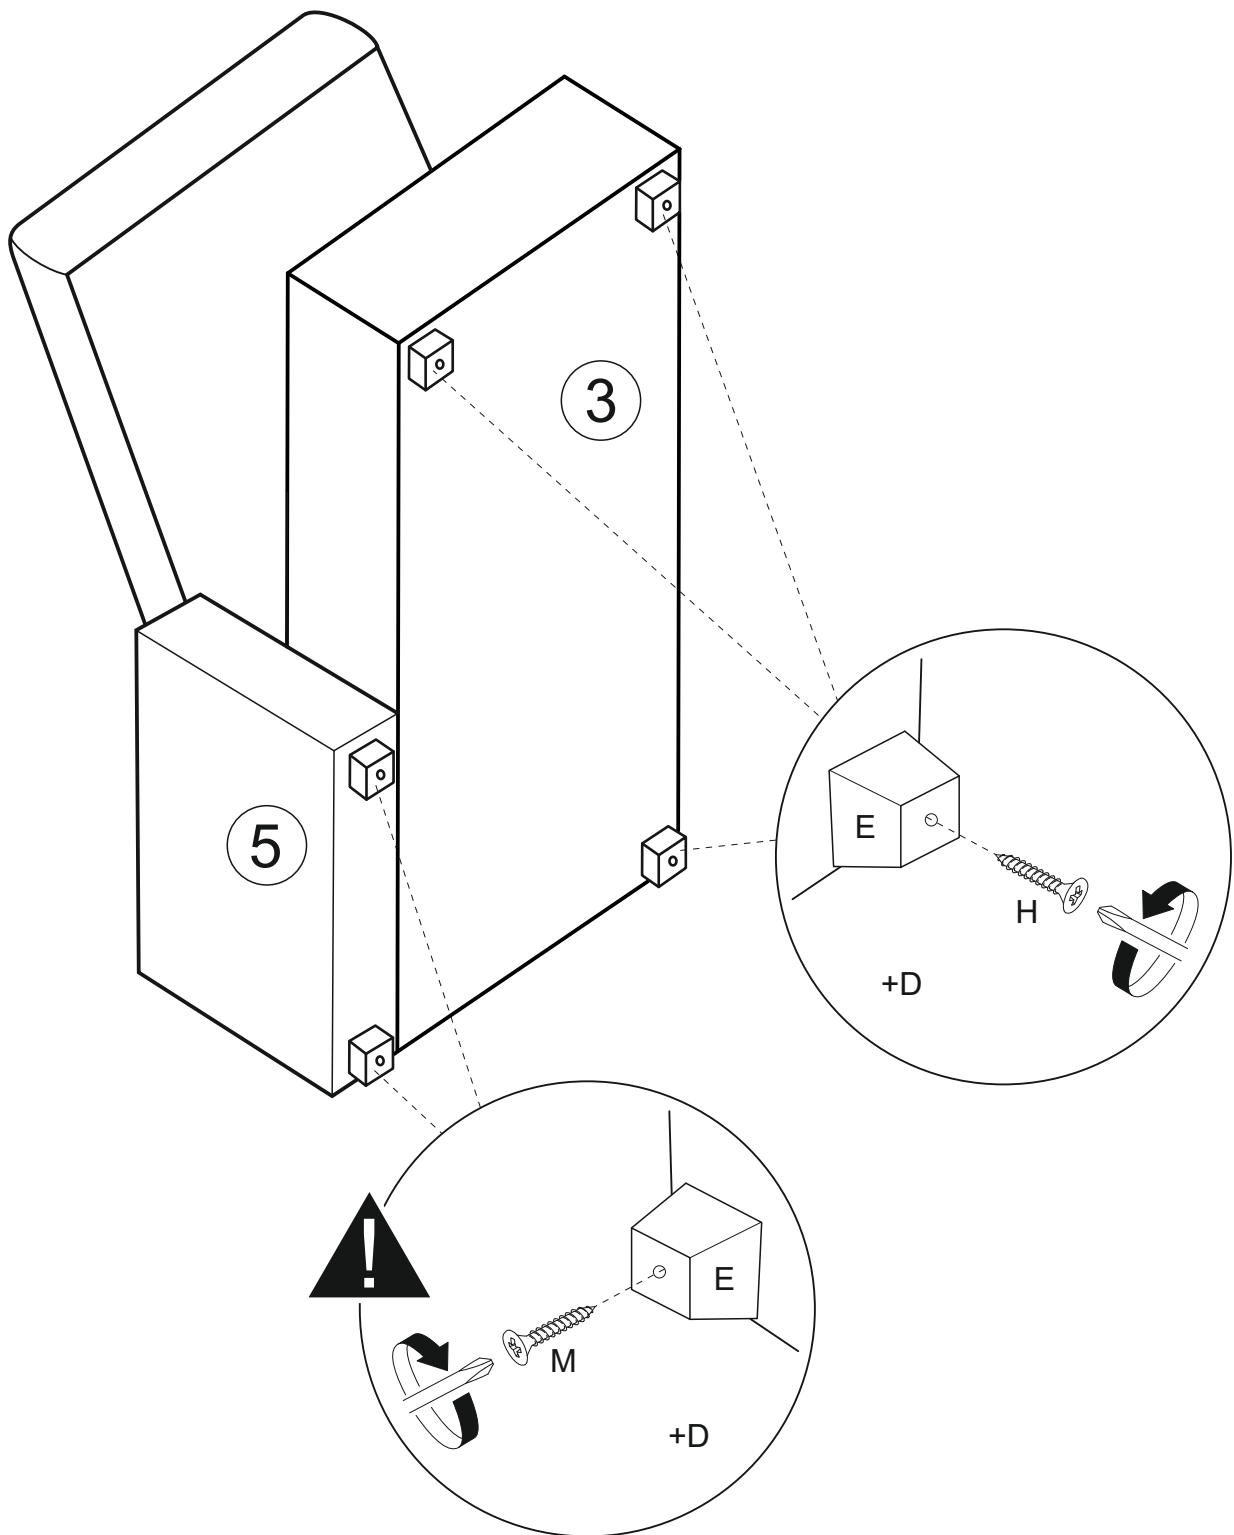





7a,b

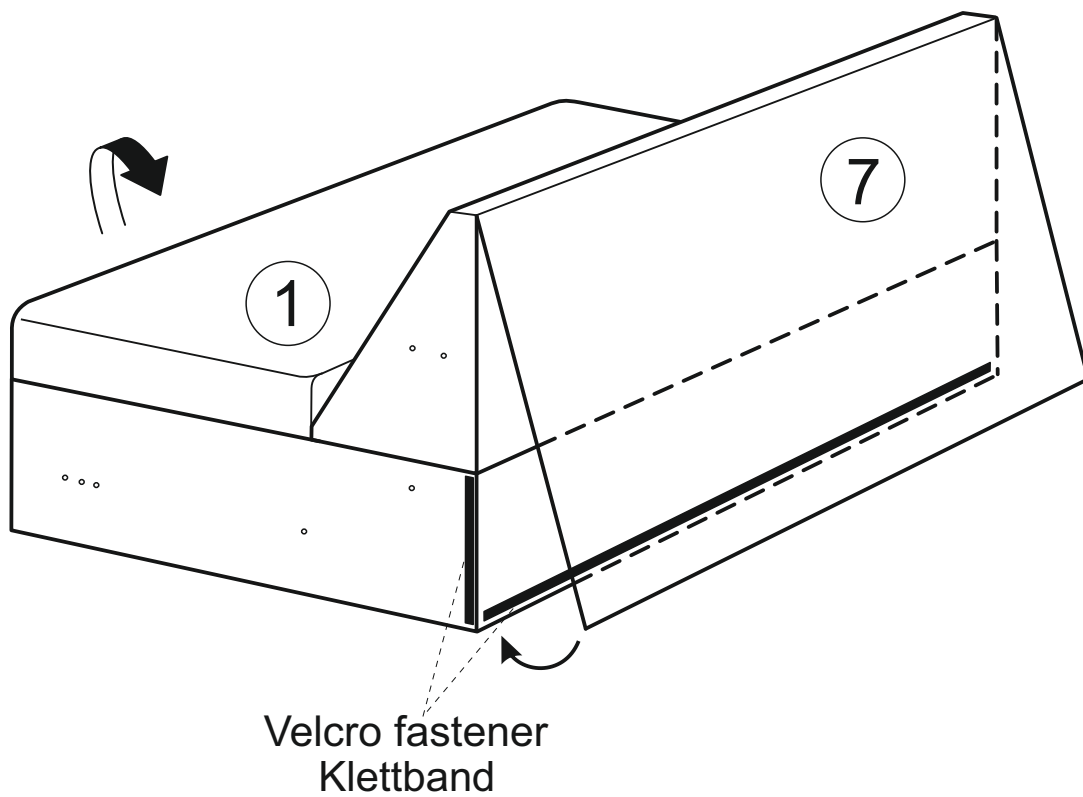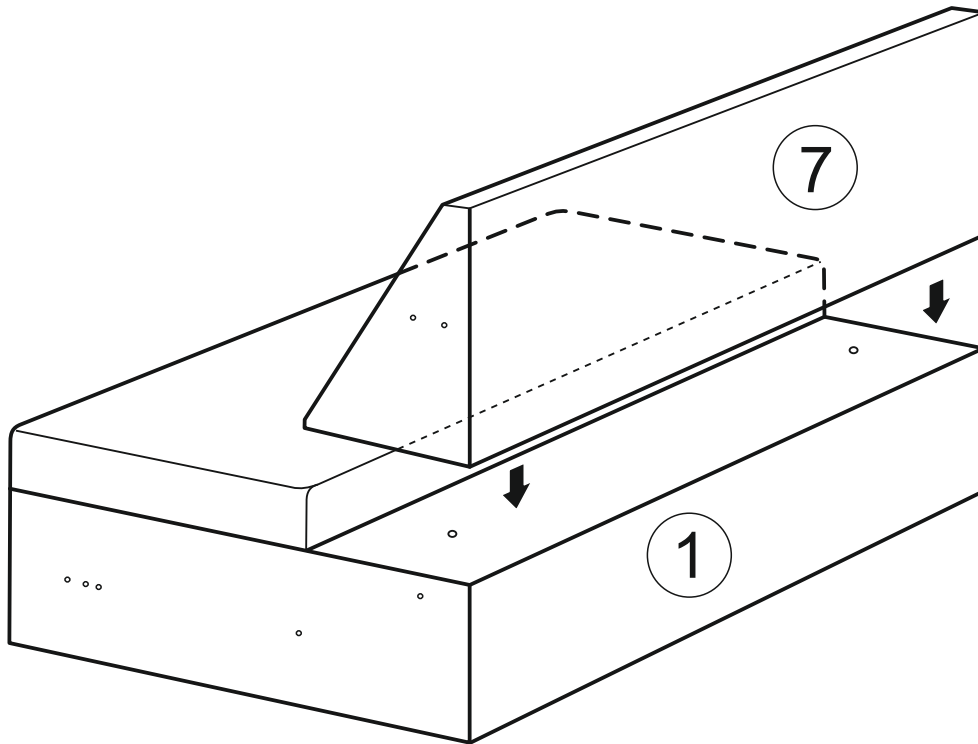



8a,b

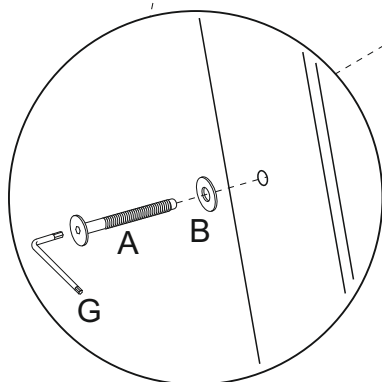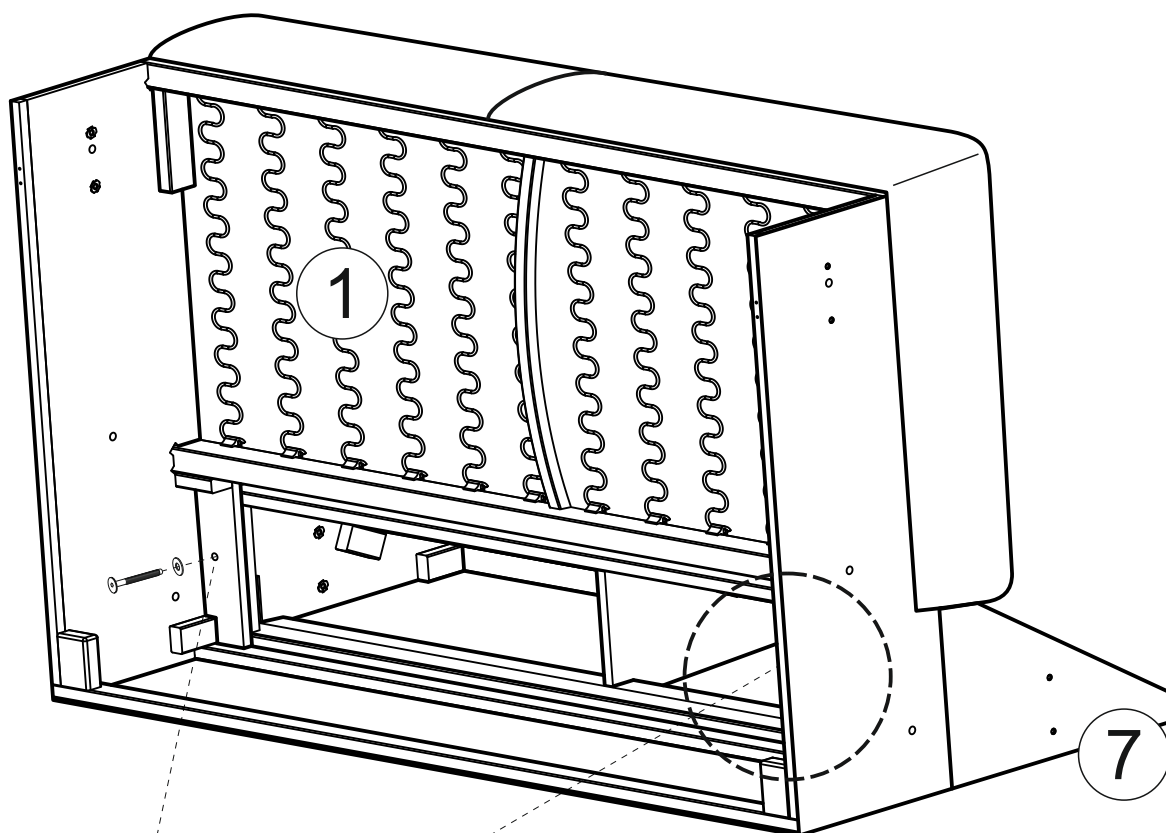

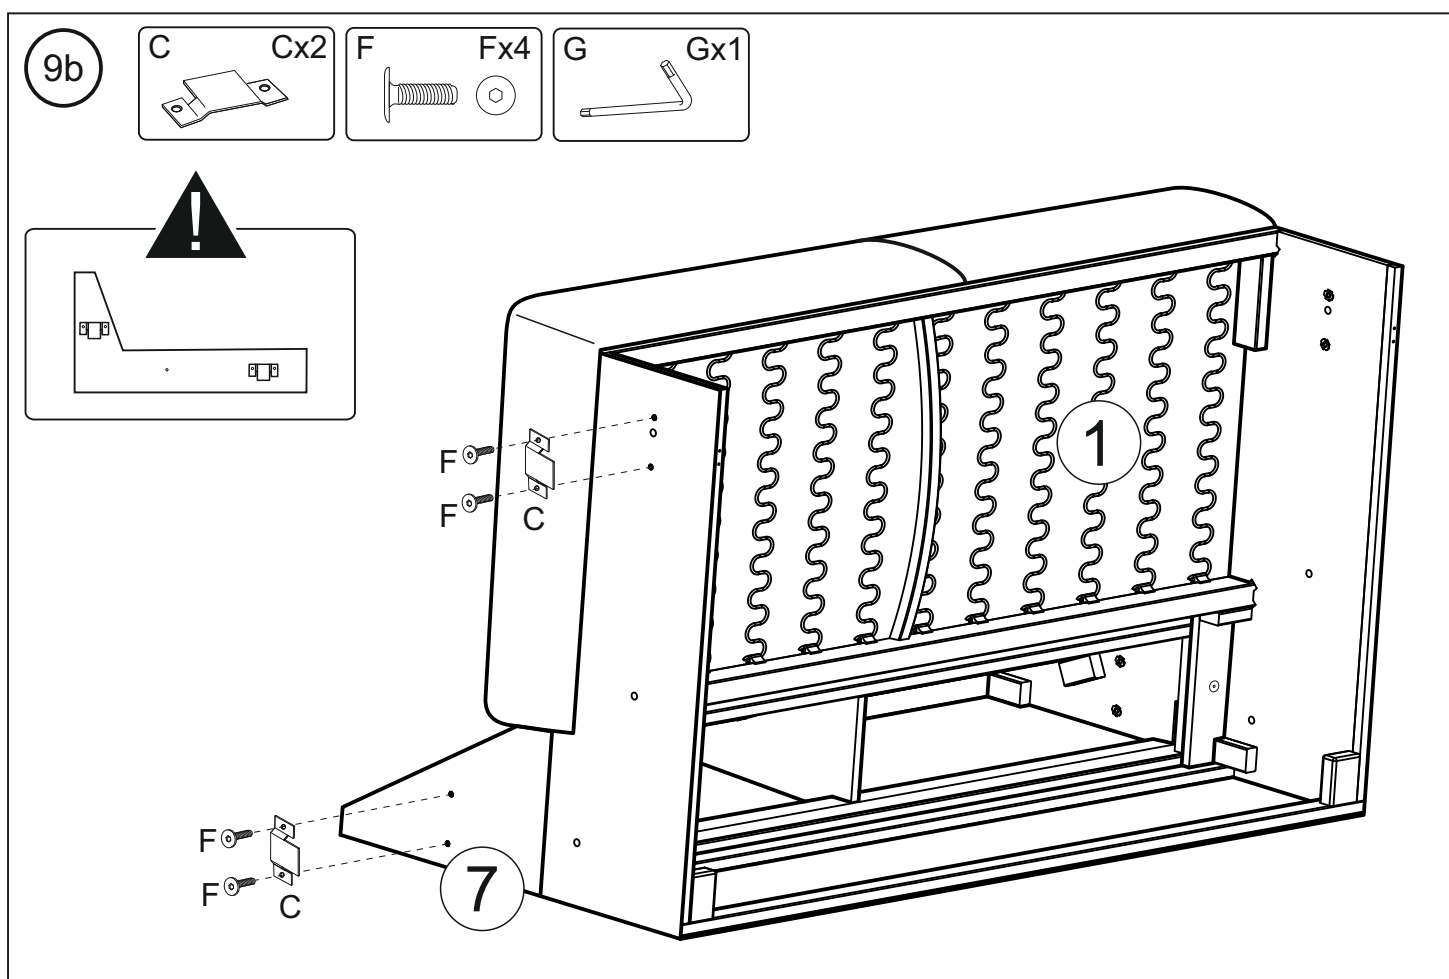
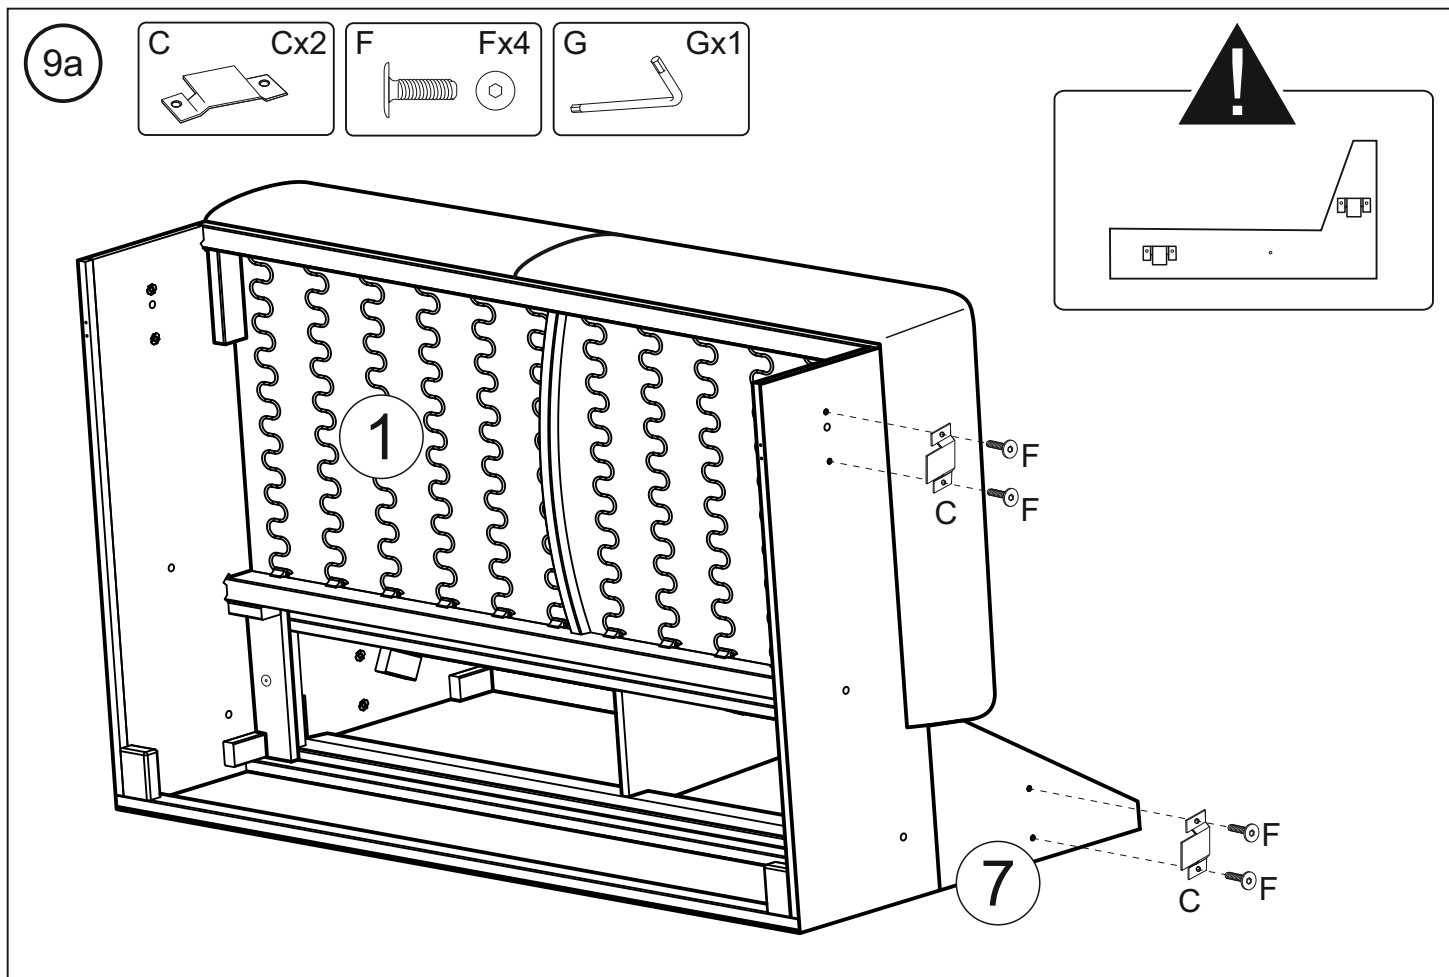


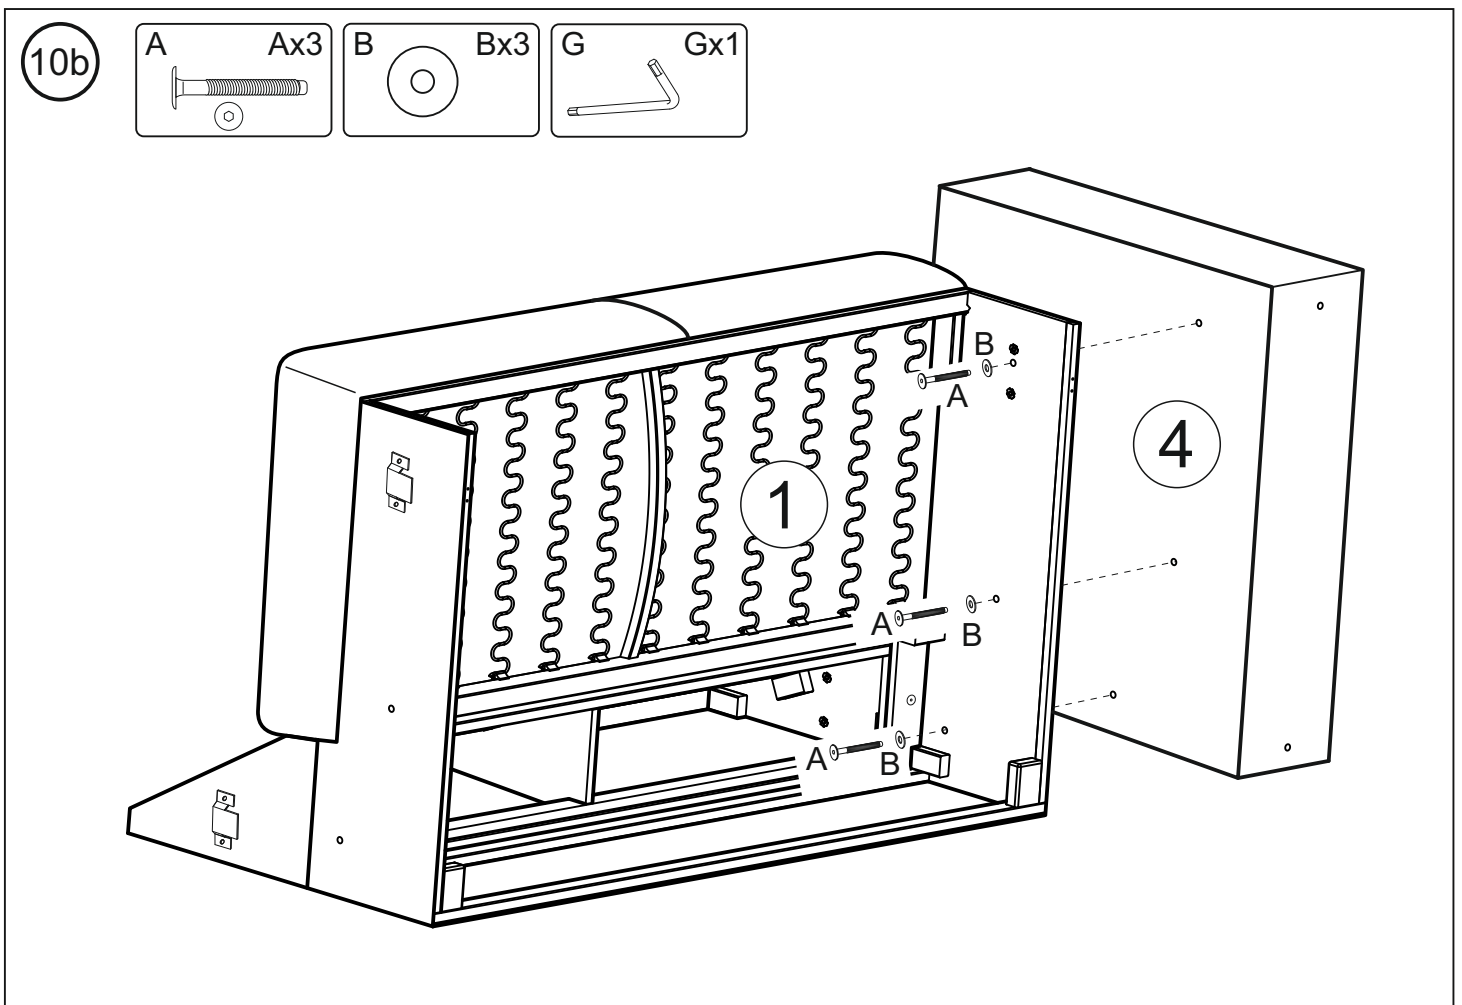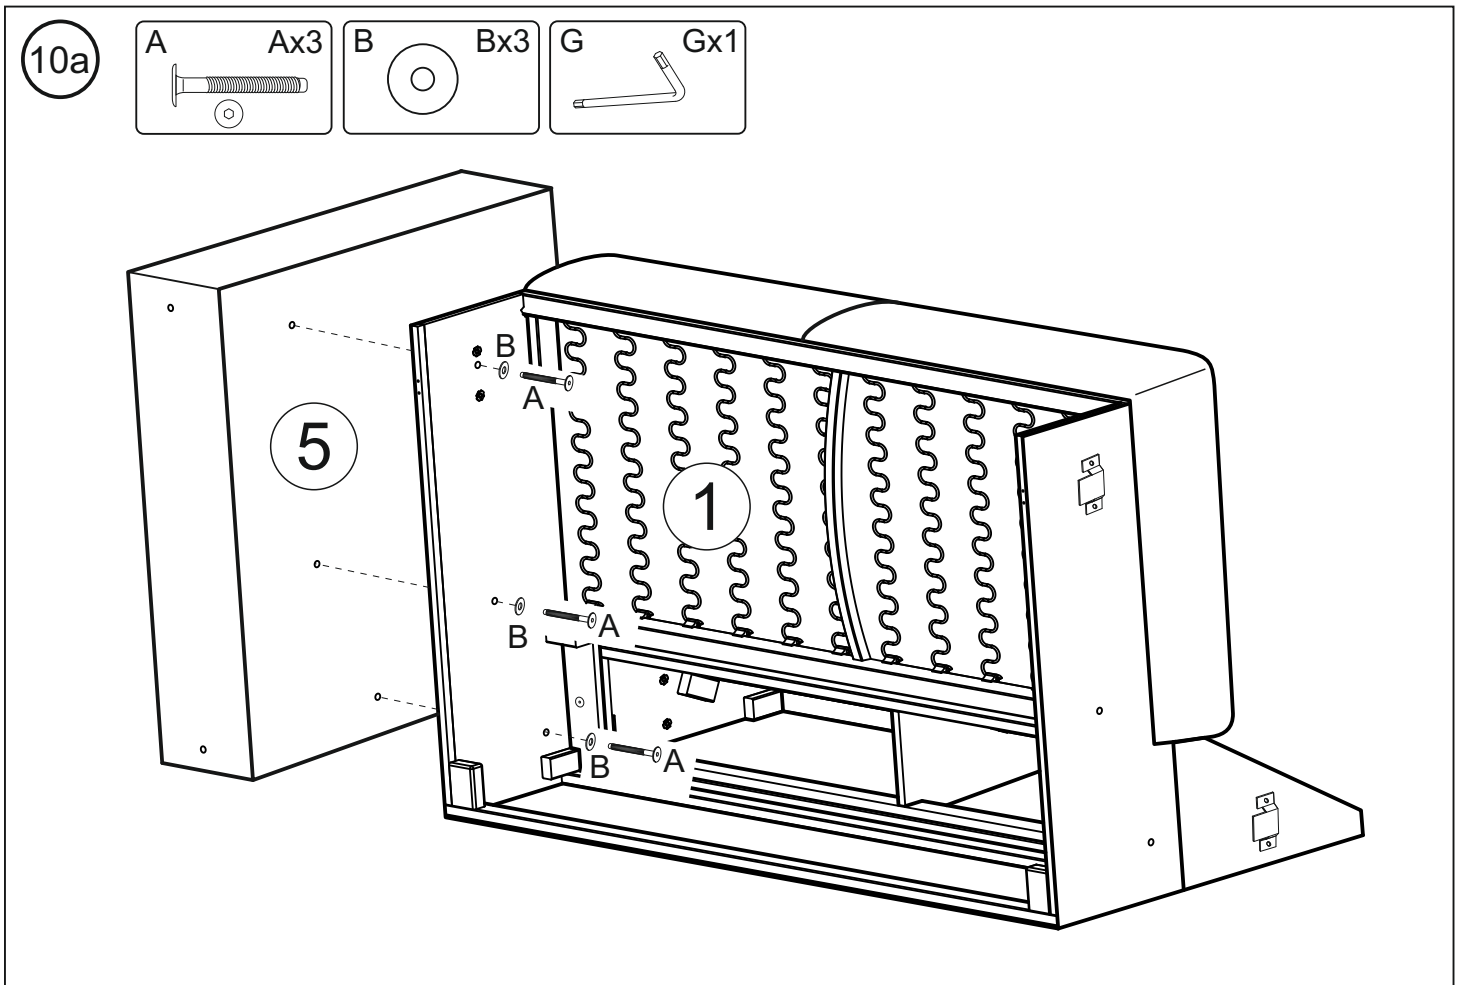






11a

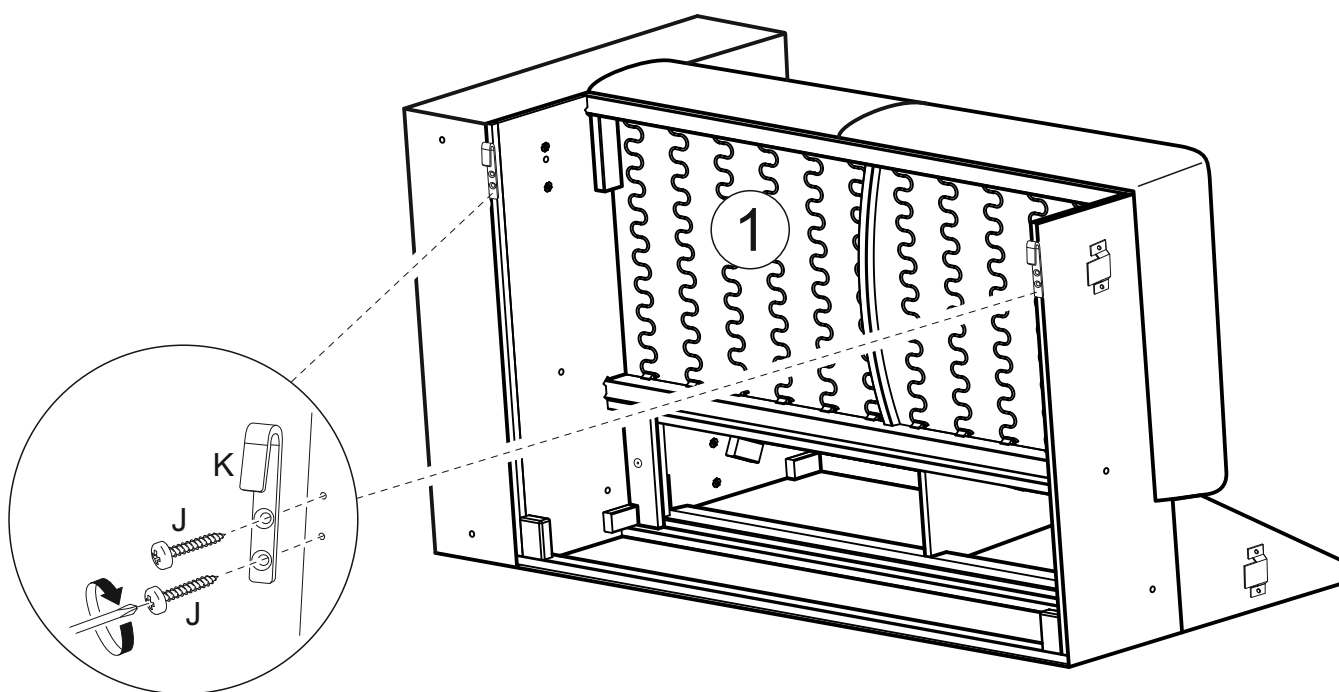






11b

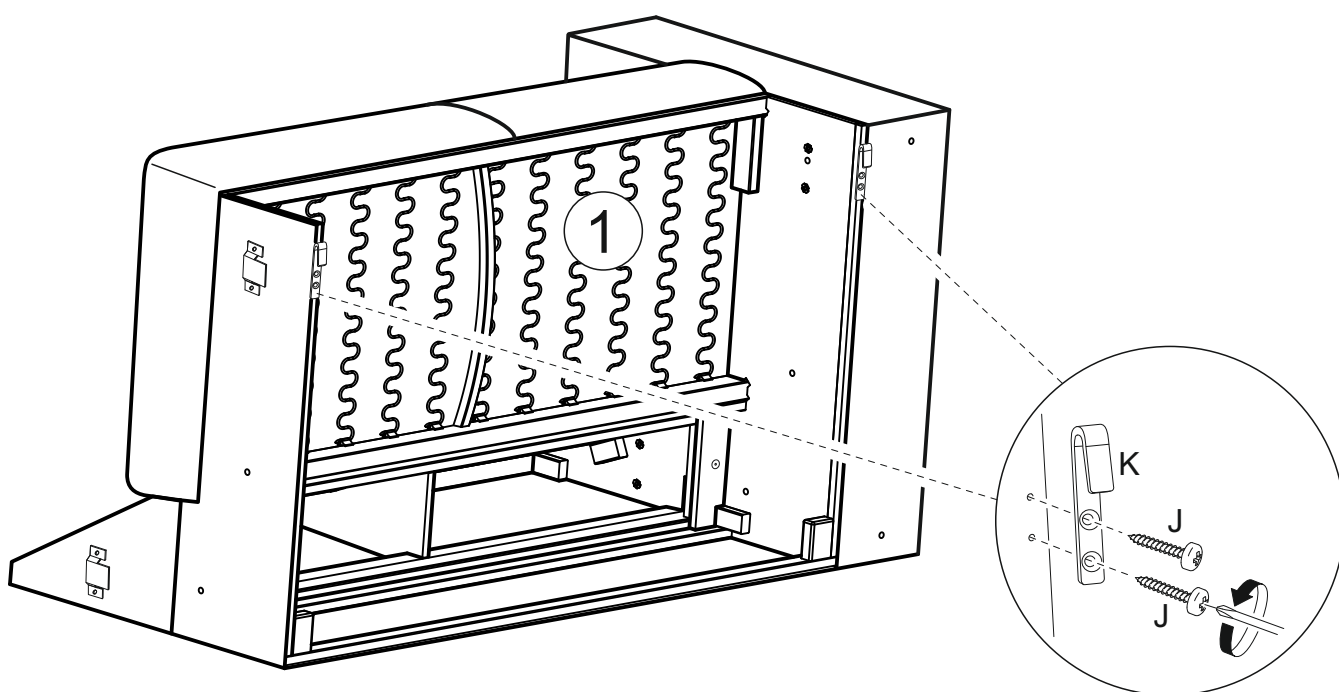



12a

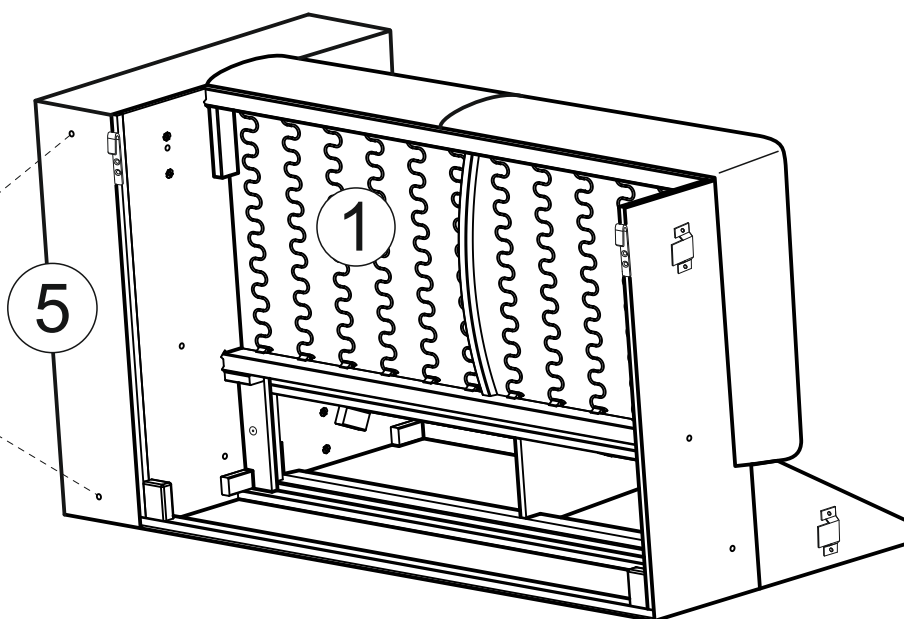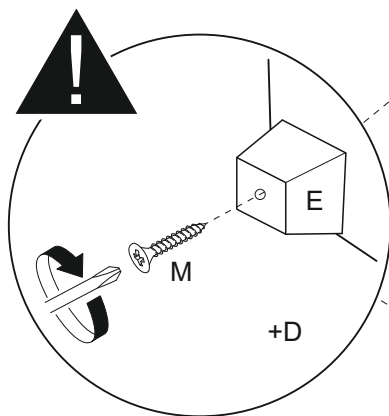



12b

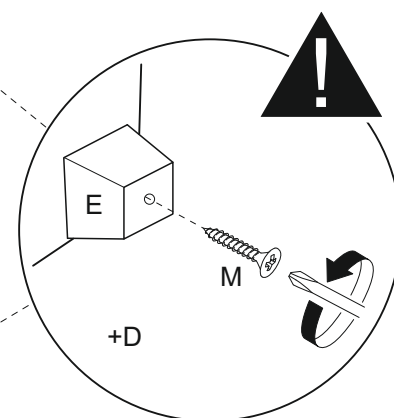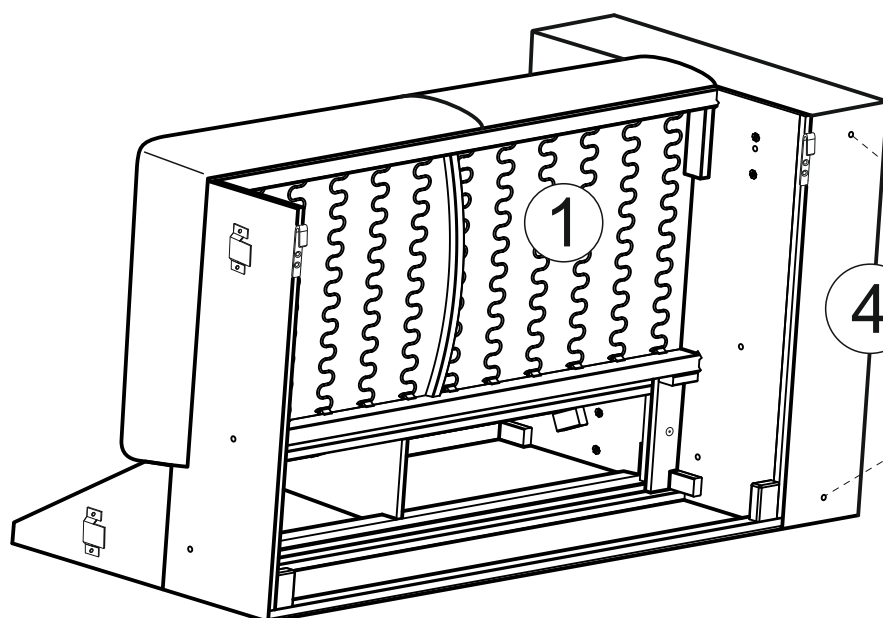


13a,b

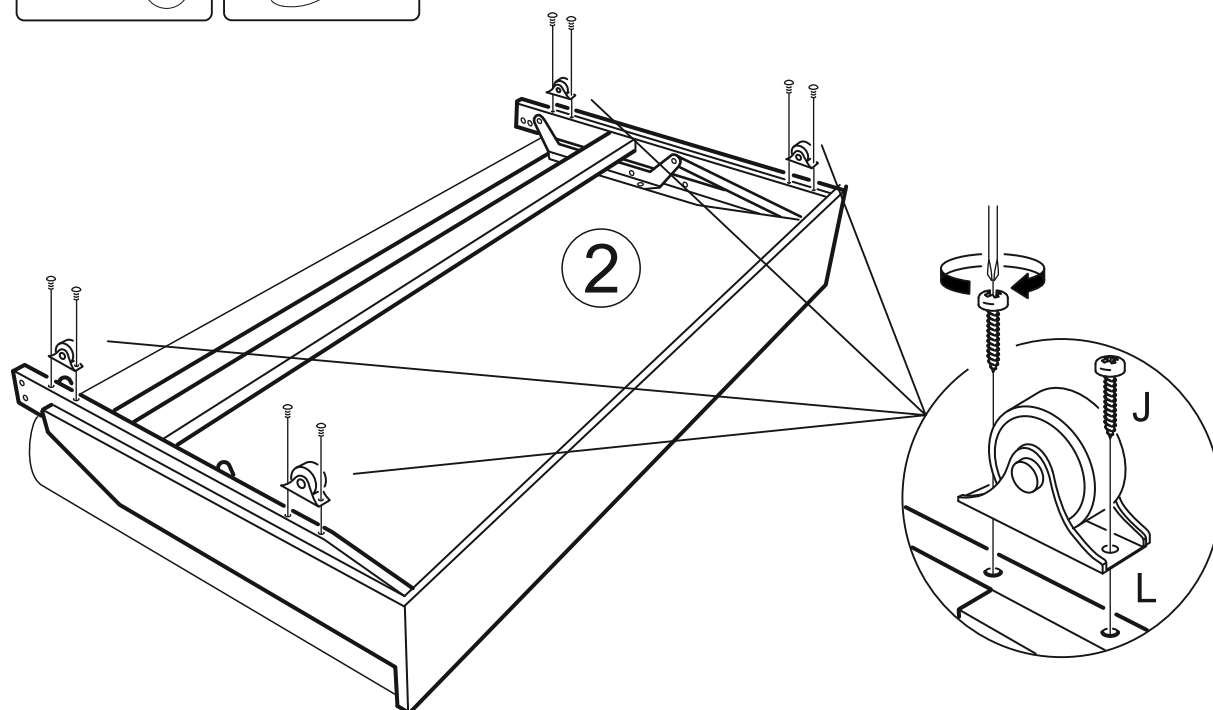


14a,b

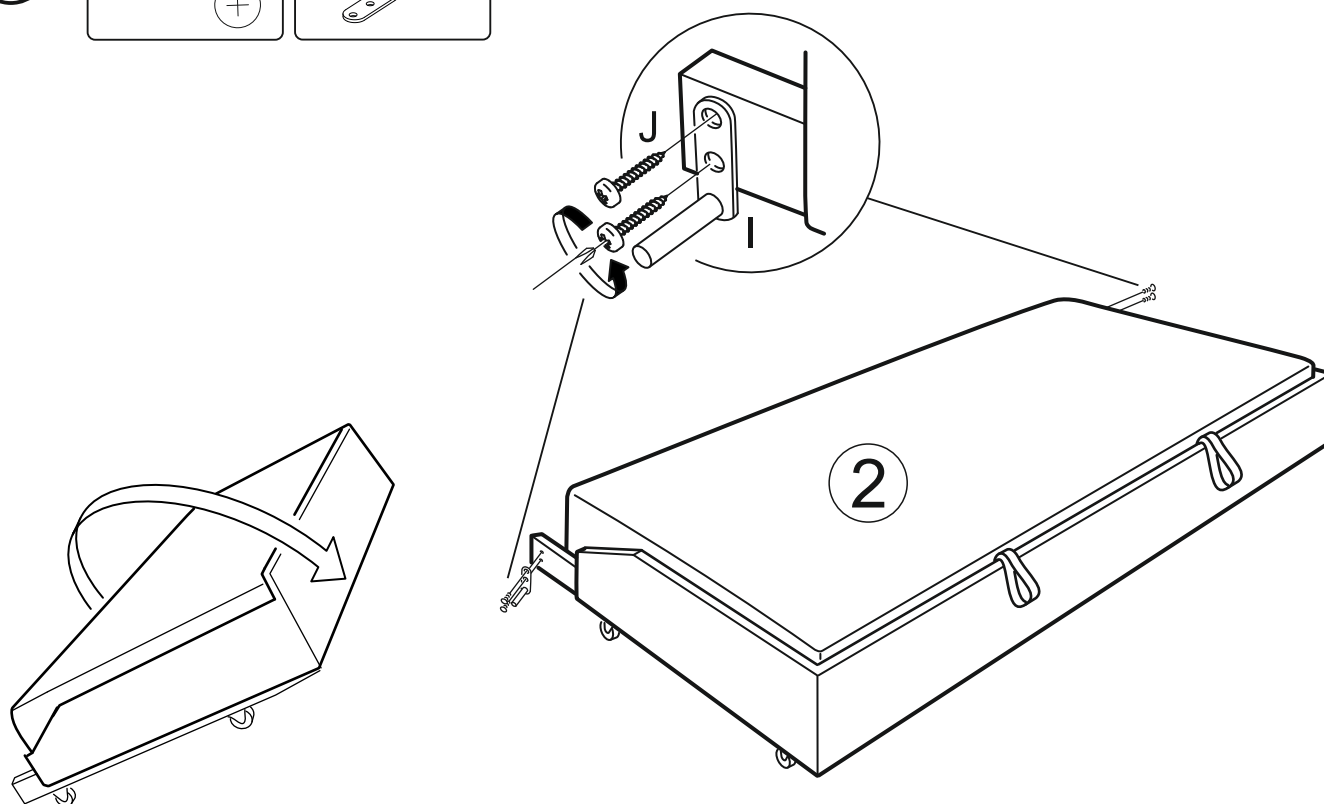






15a




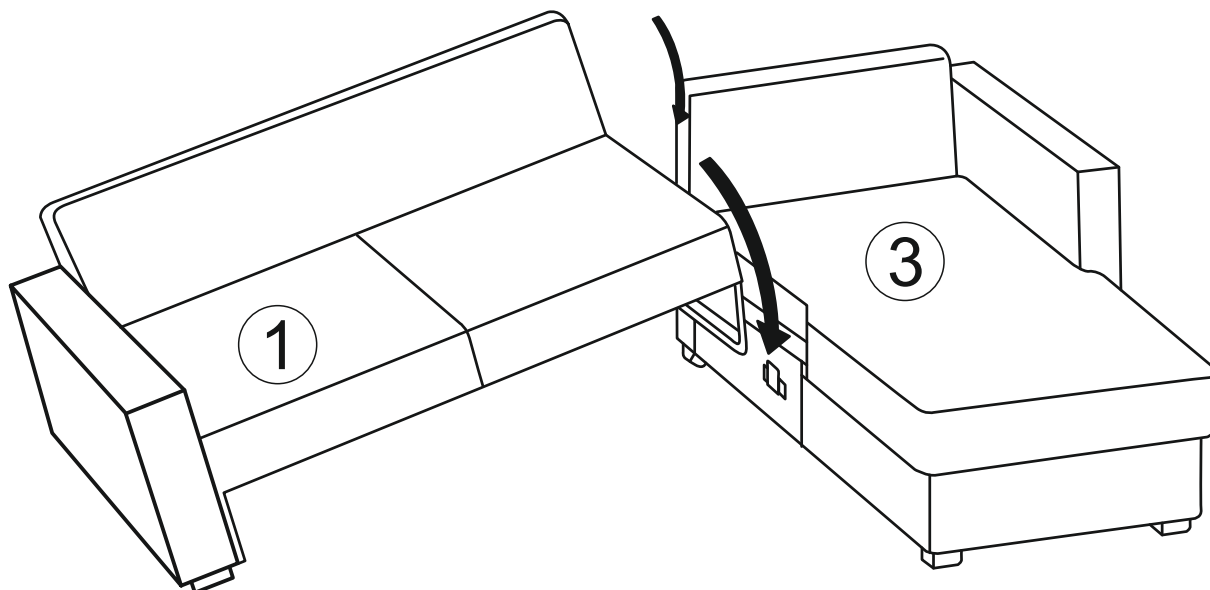


15b

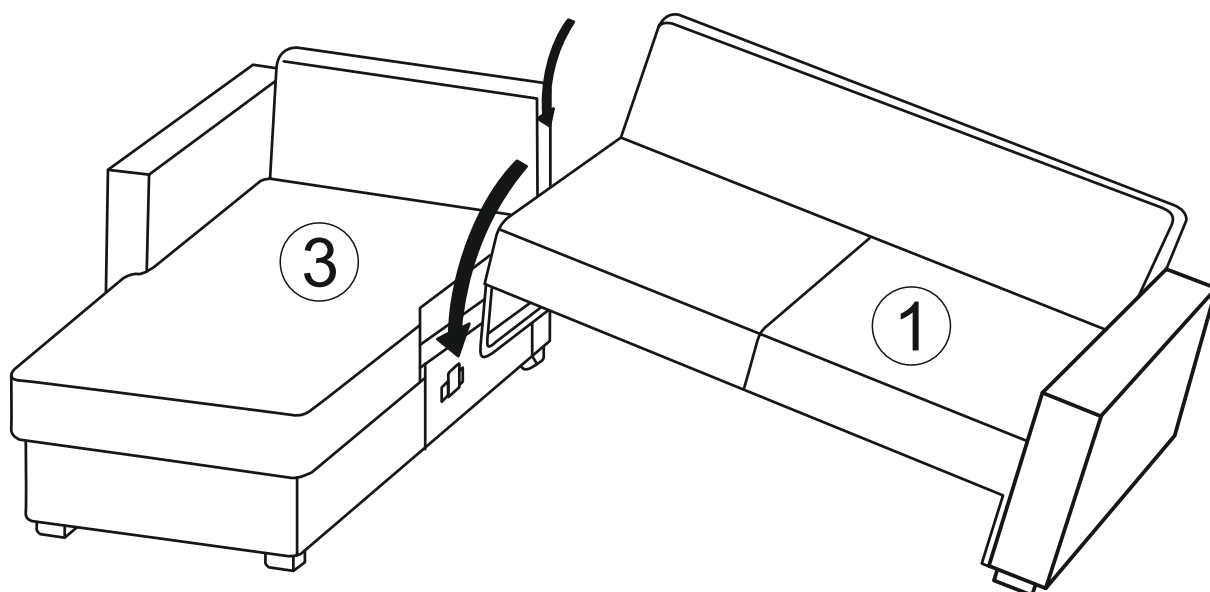

16a,b

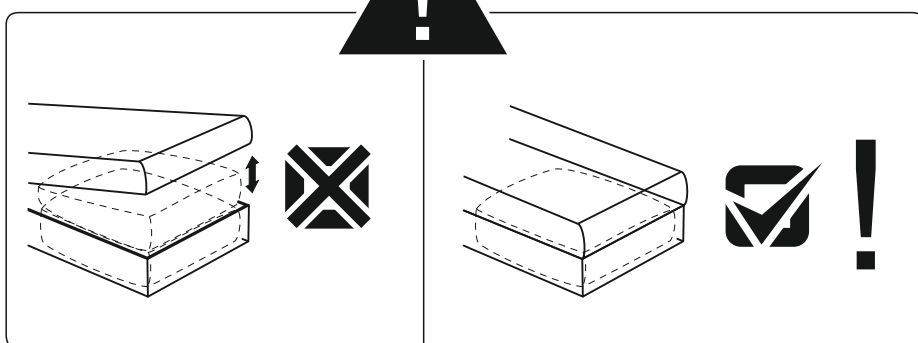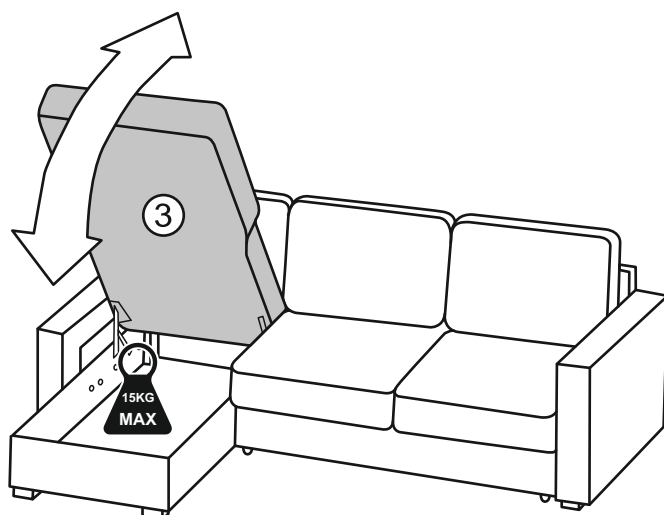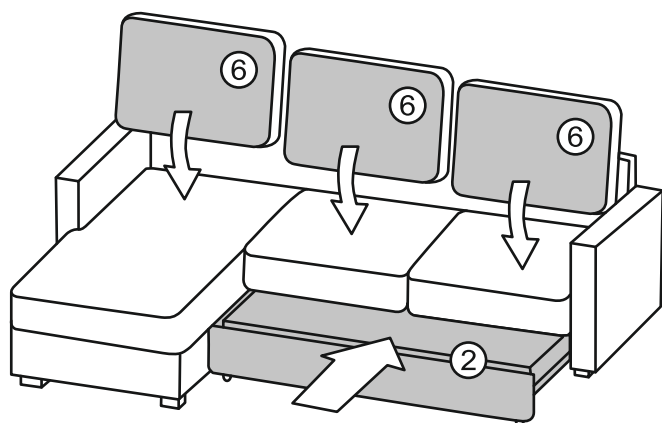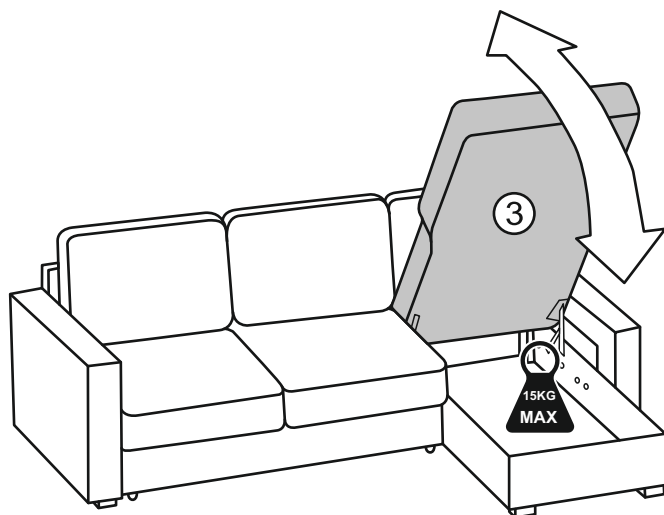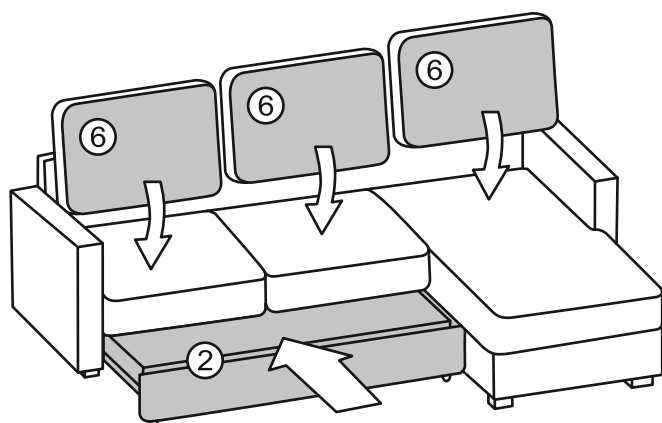

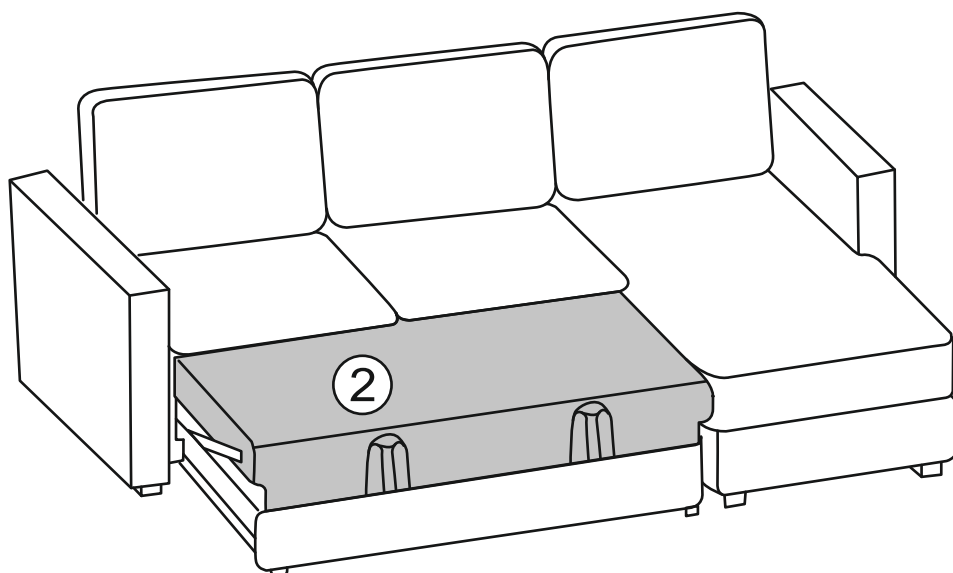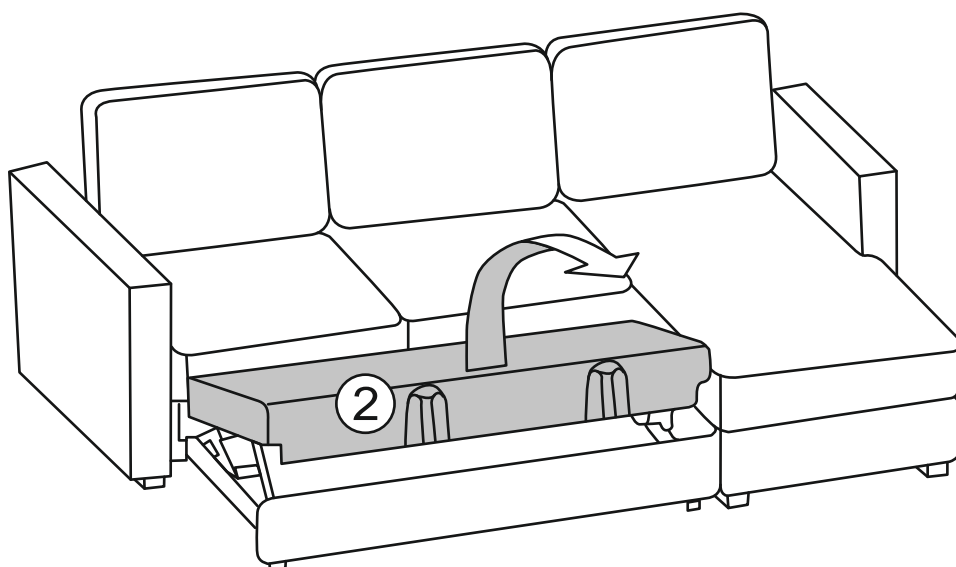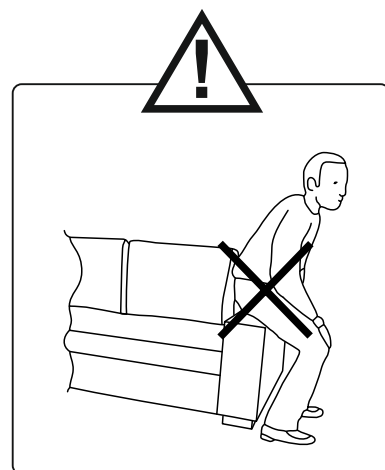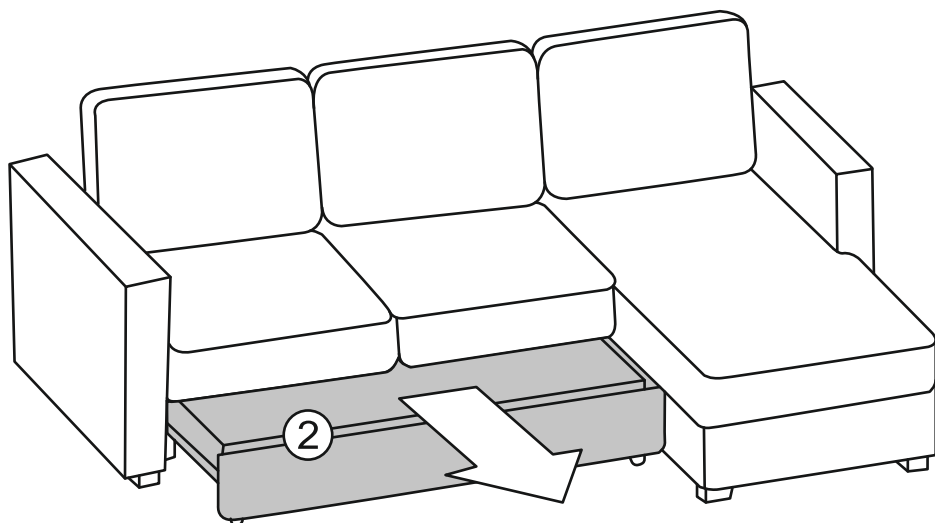

WARNING!

