
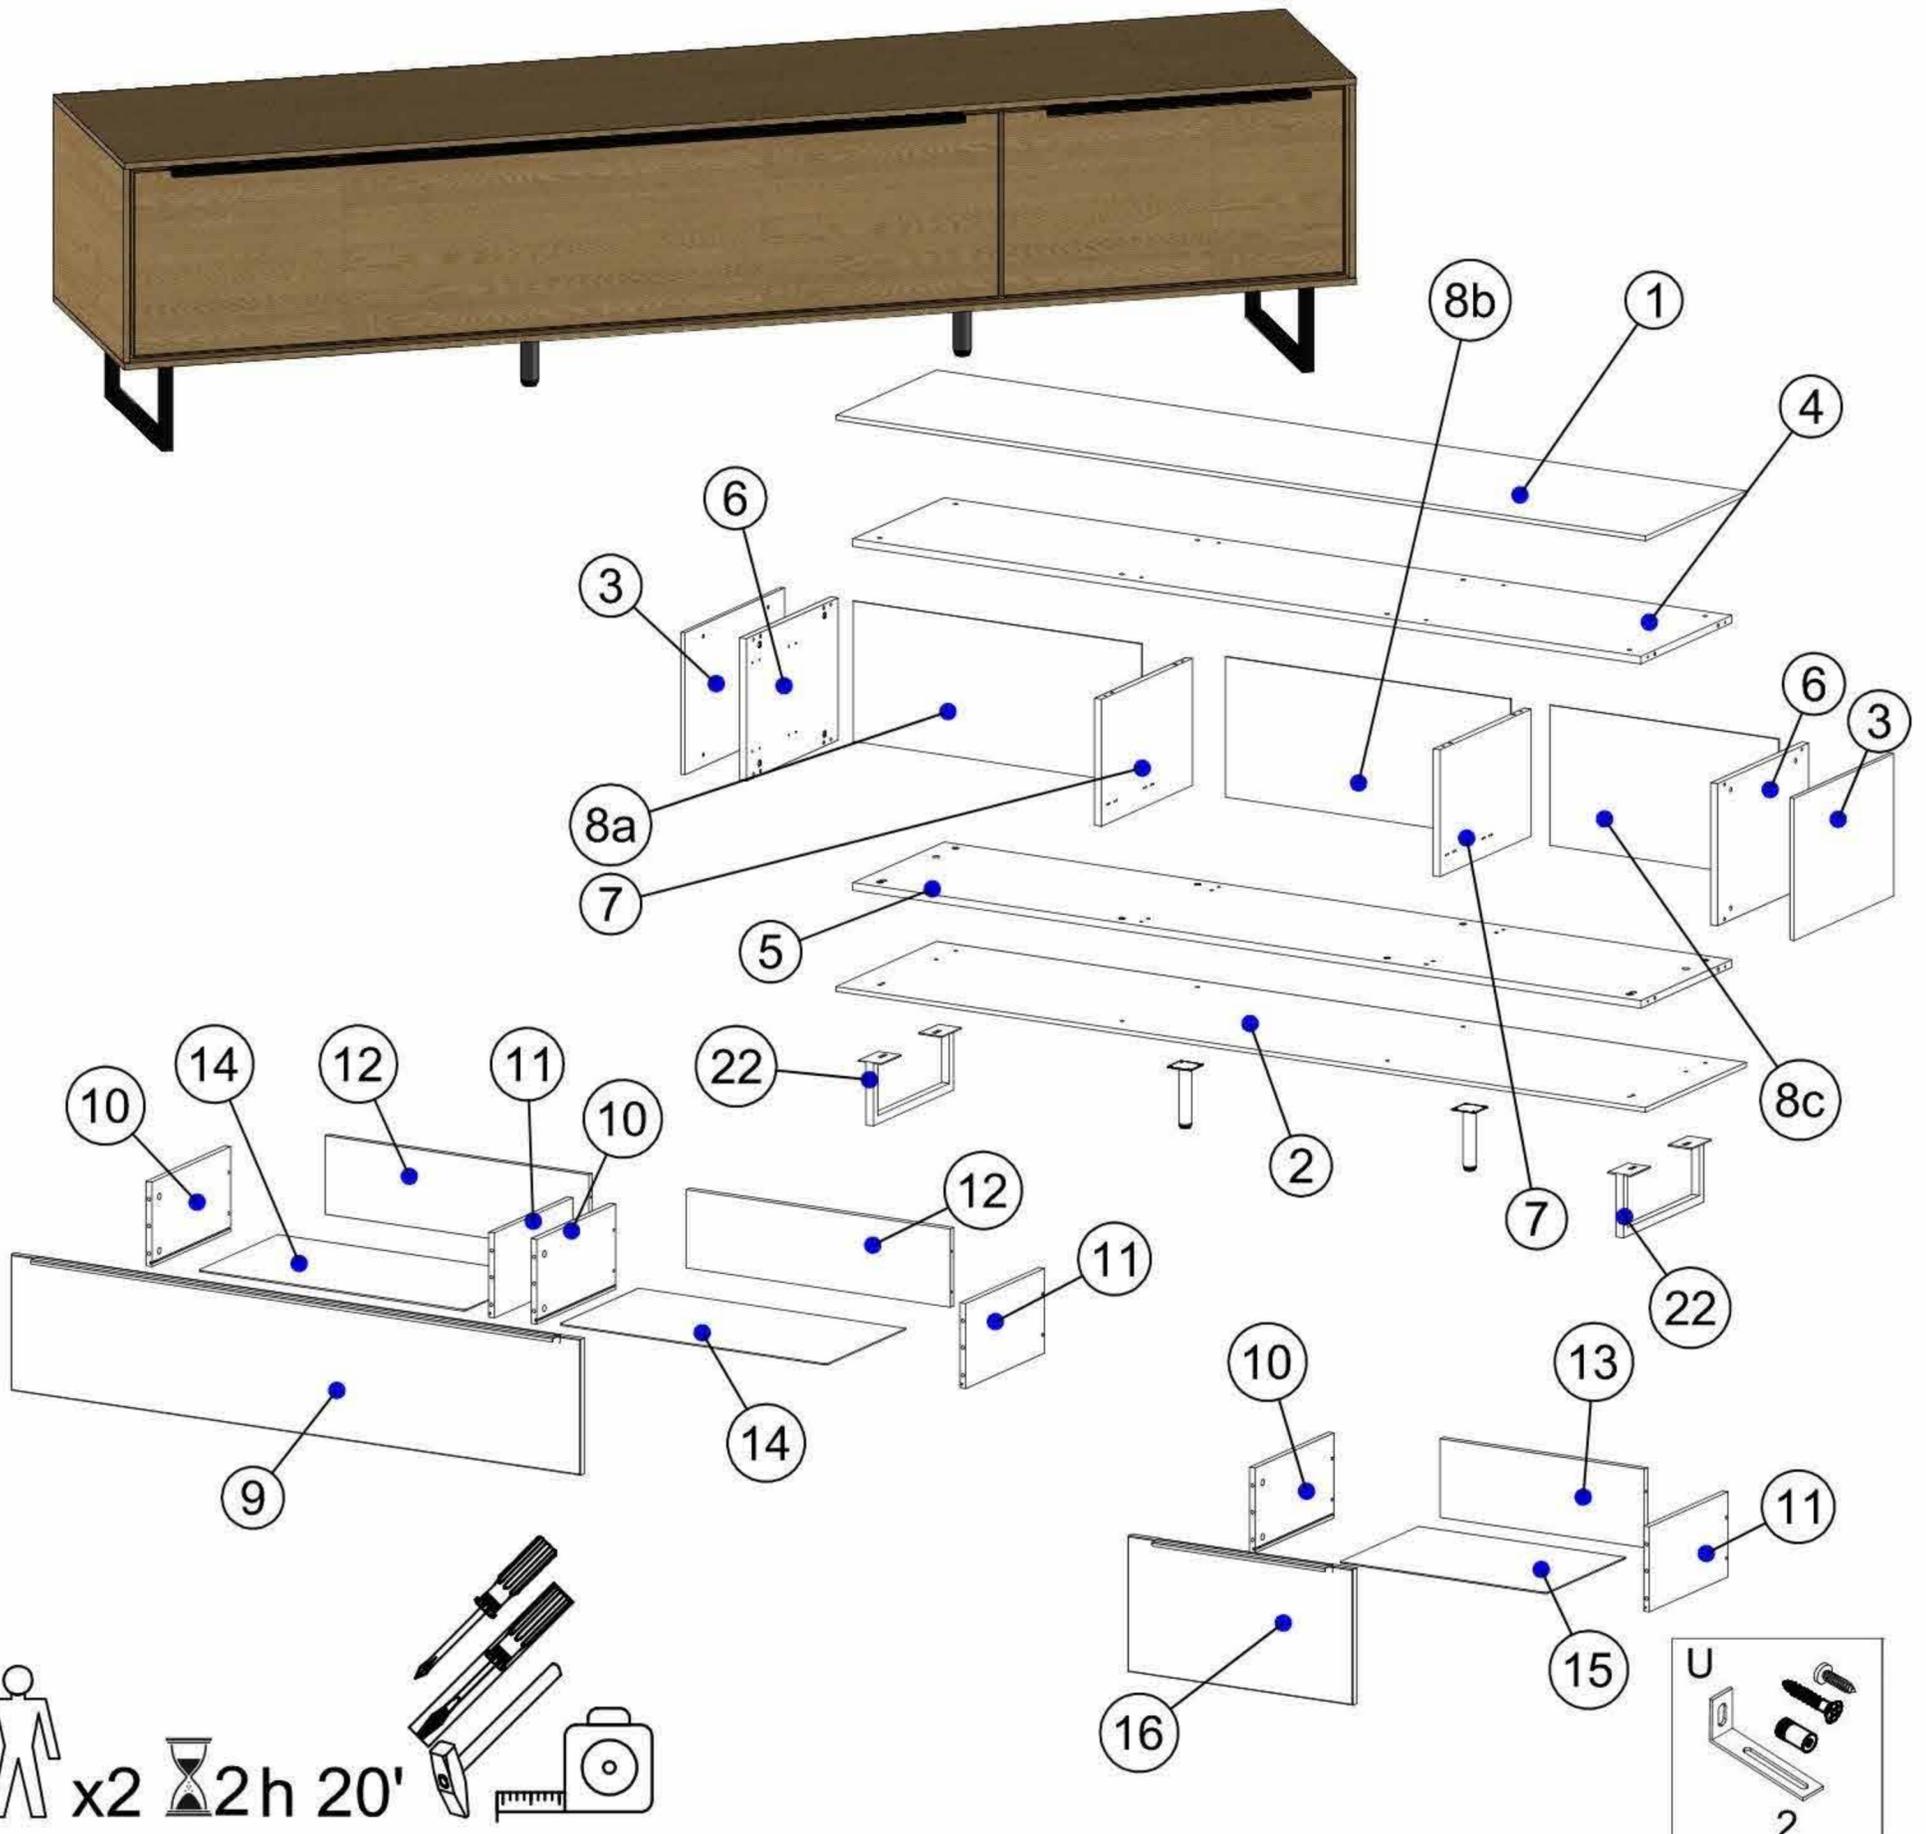


2641

versionsnummer:

11.2023





Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.





A Ø 8x30 22	B 12	D 12	C Ø 4x16 8	M 1350 450 M1/M2	Filz 4	G M6x23 24	H Ø 3x16 44	K M6x22 24
J Ø 5x13 32	L Ø 6,4x50 28	N 1	V 2	Z 40	O OL3/OR3	S 4	P 6	T Ø 3x16 6





x2

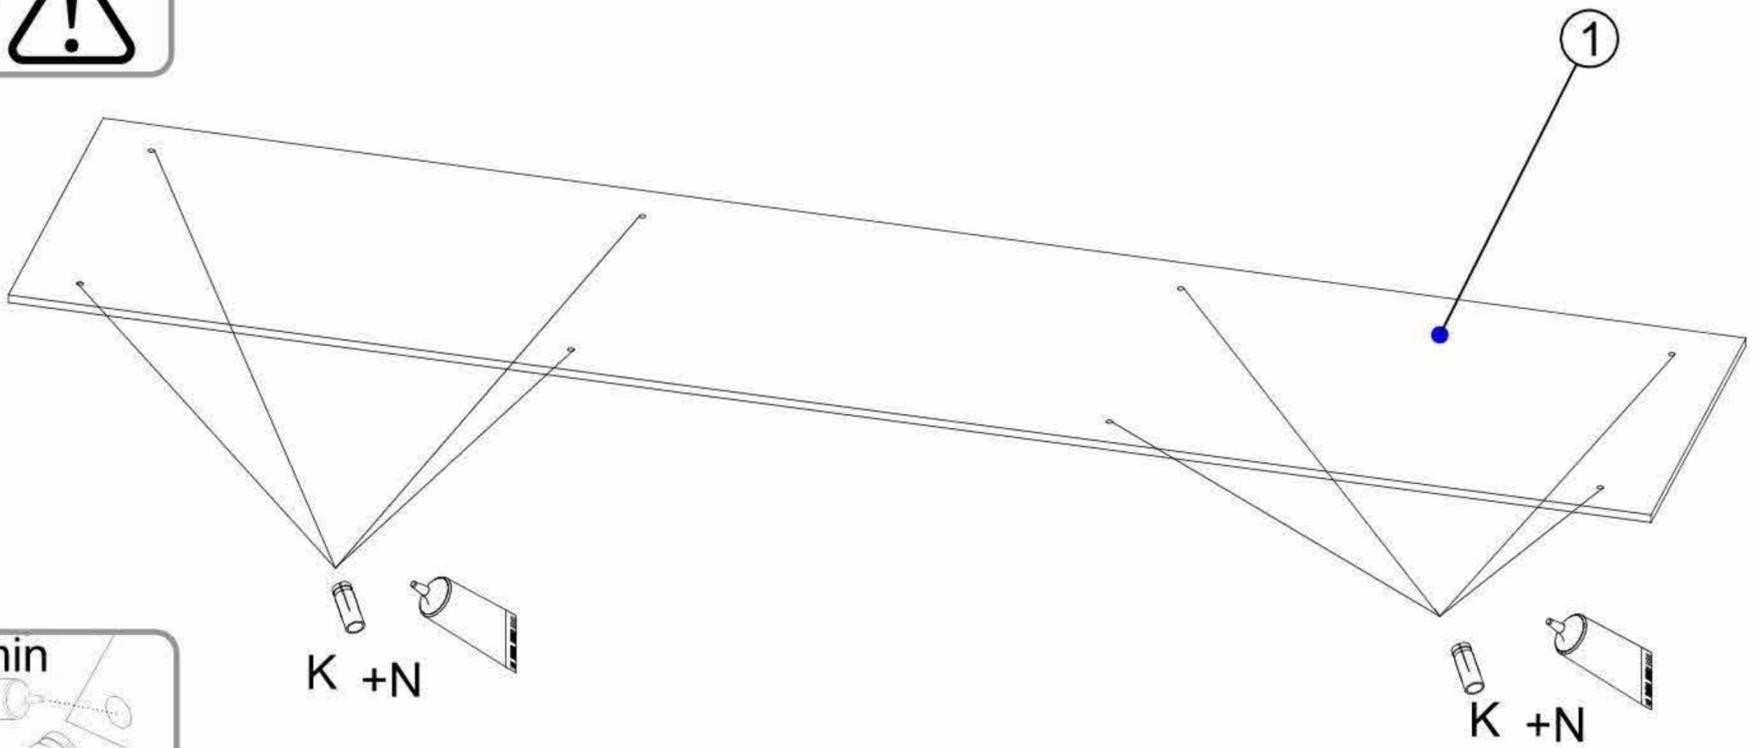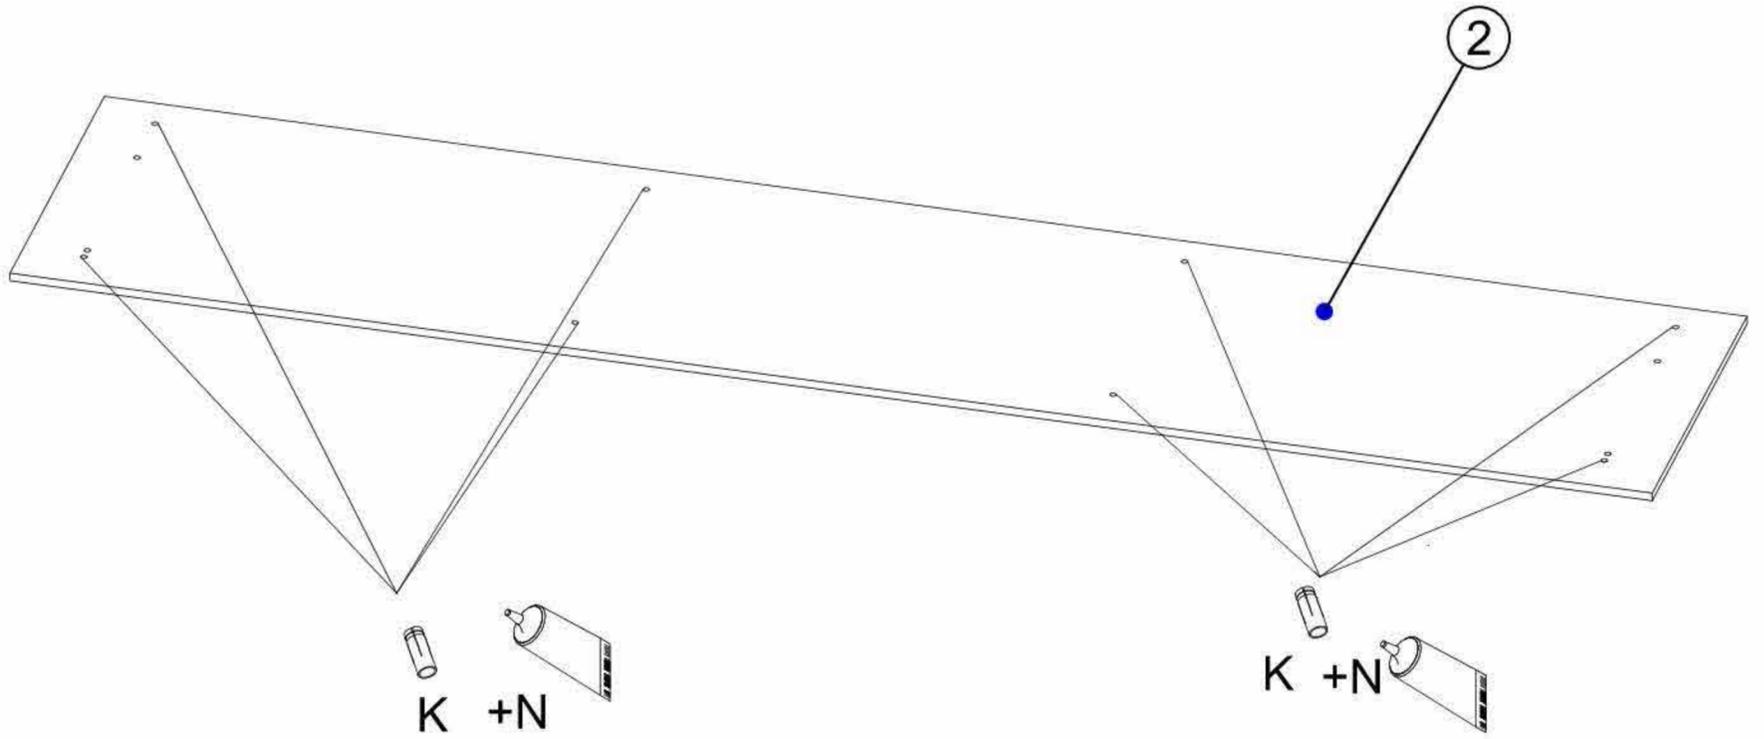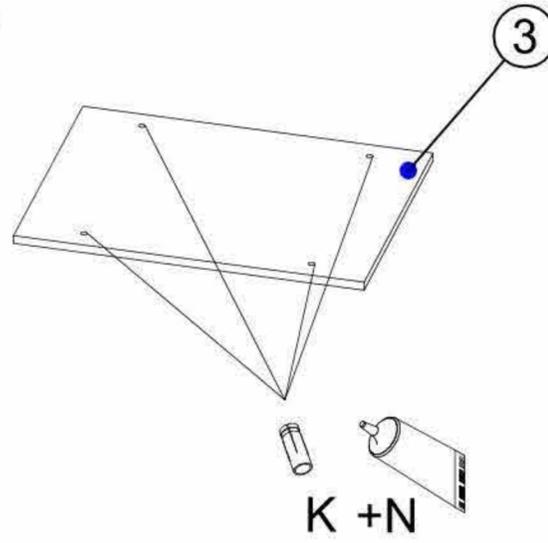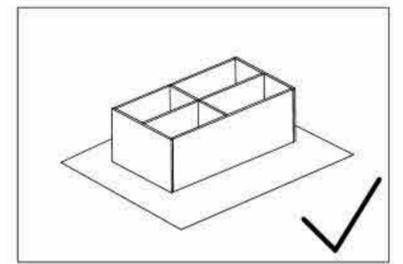

I

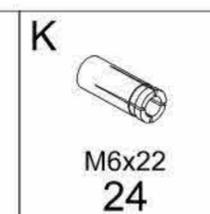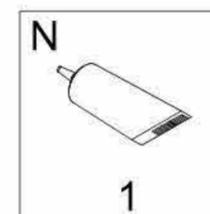

x2

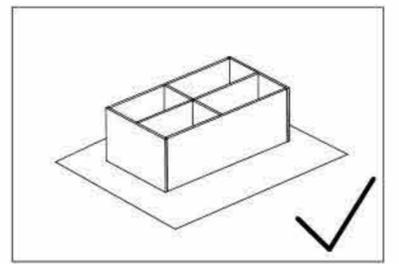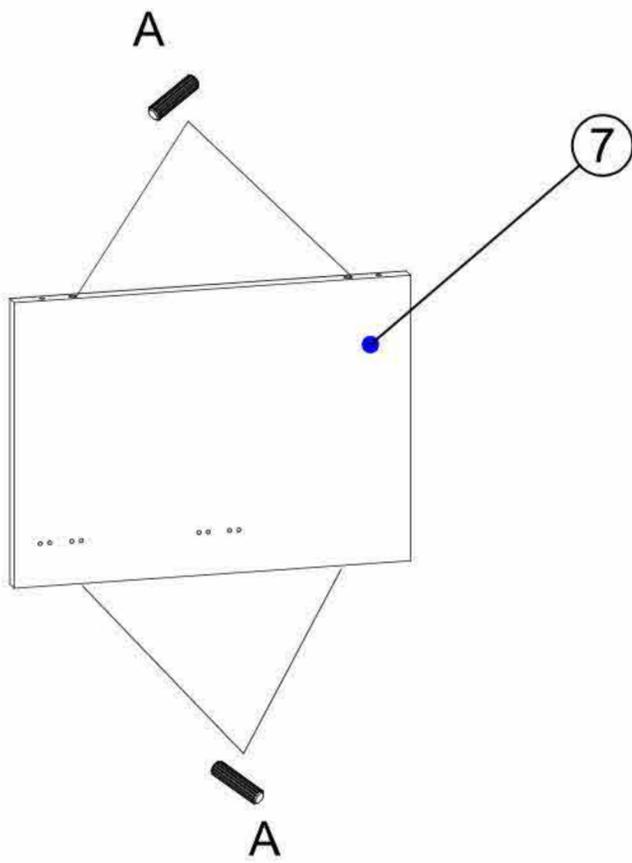

4



5






II

A






Ø 8x30
16

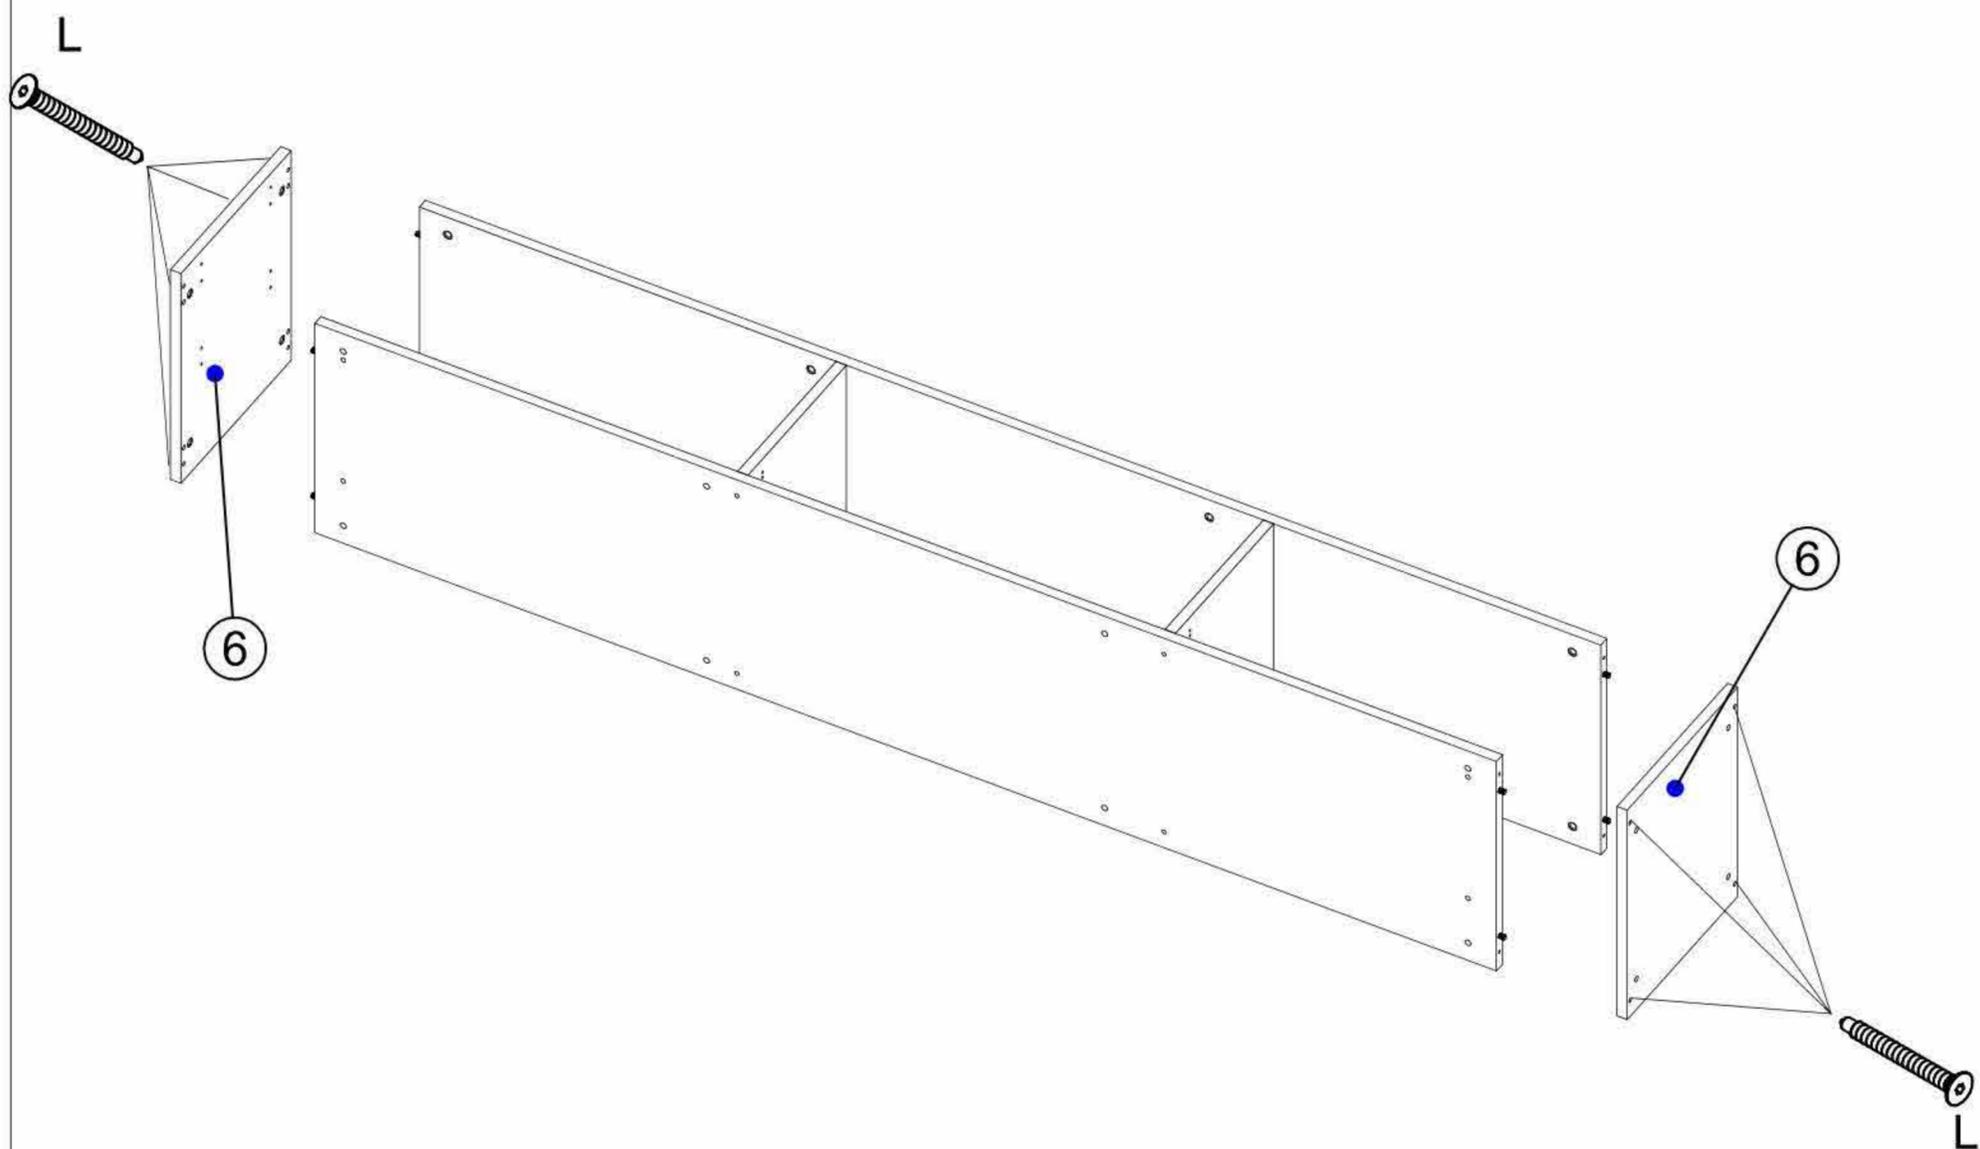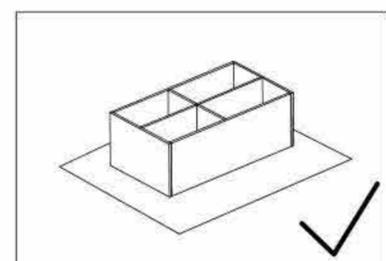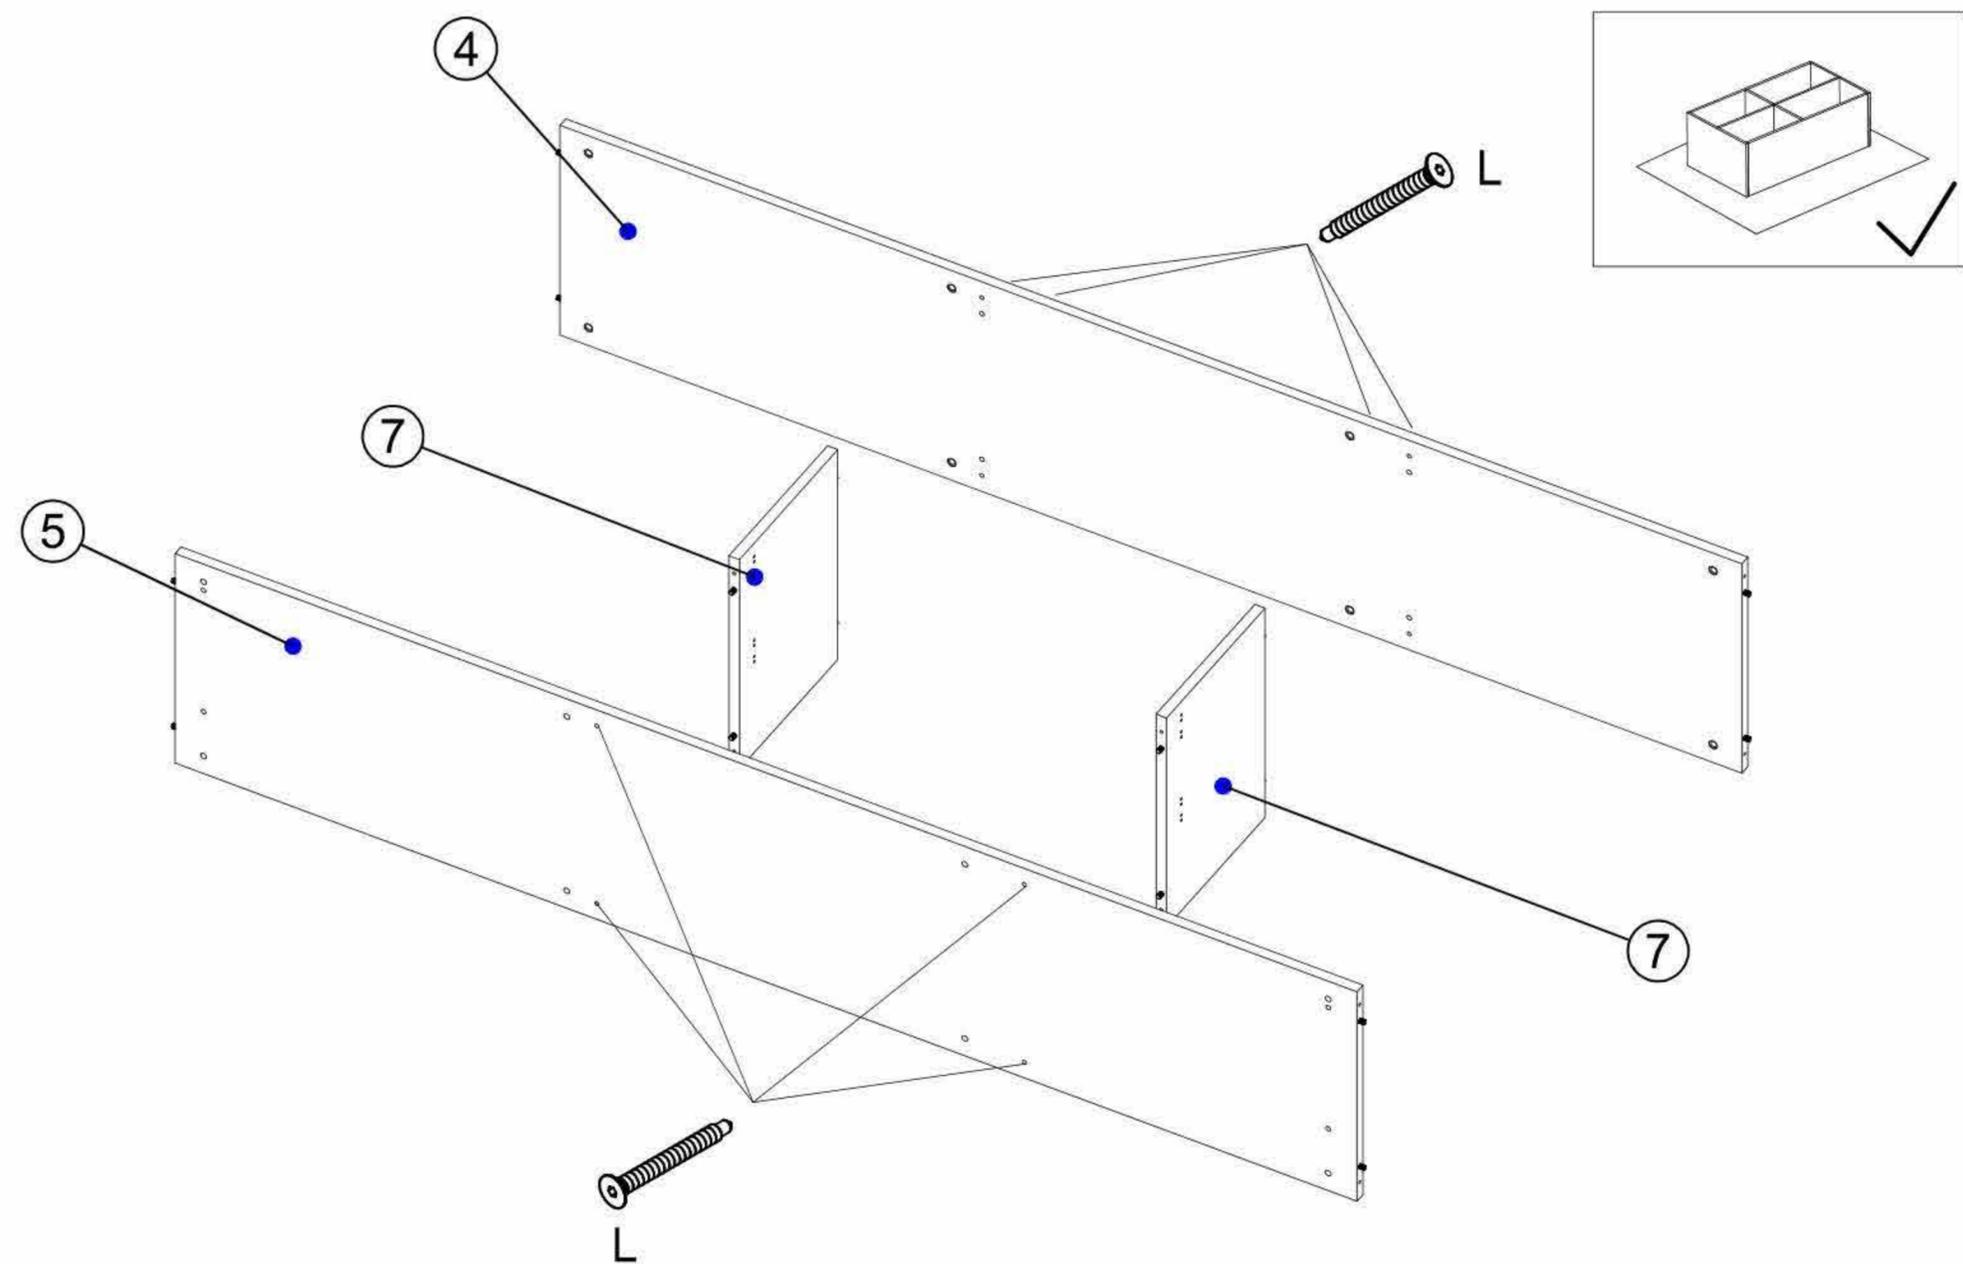


III



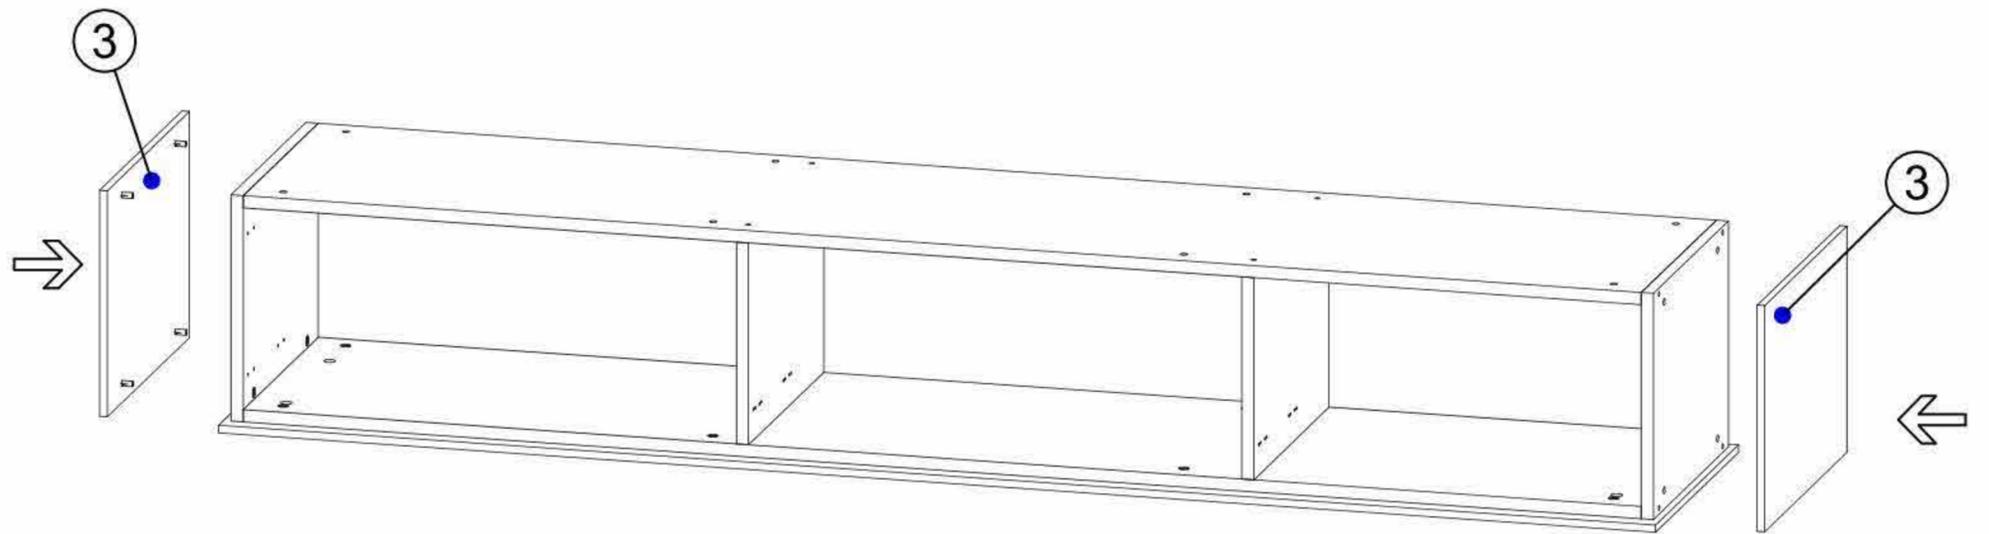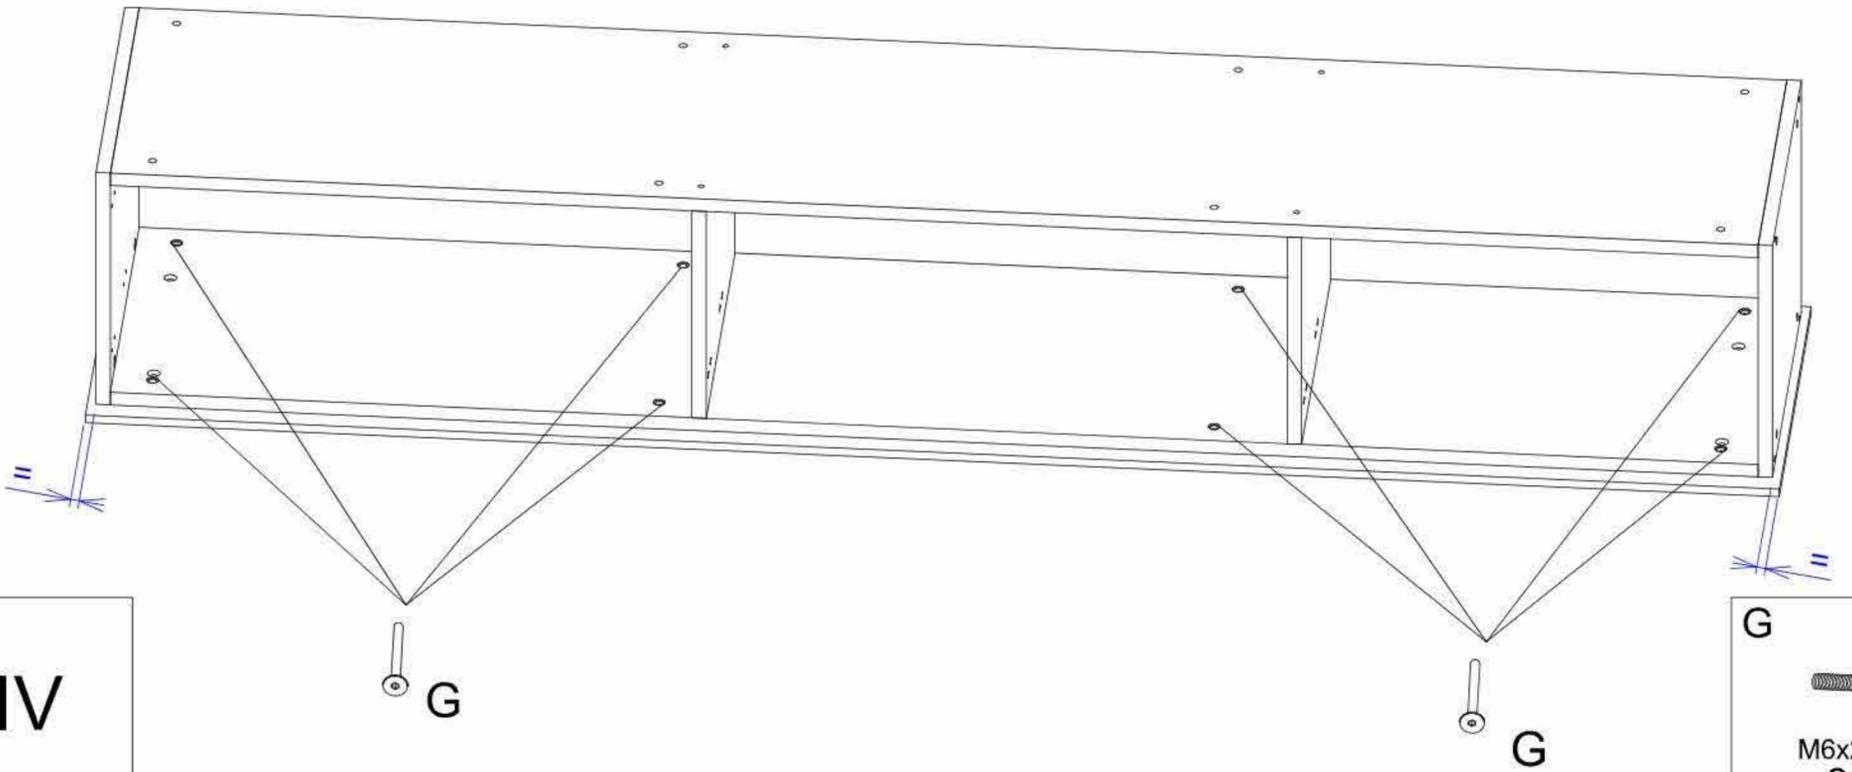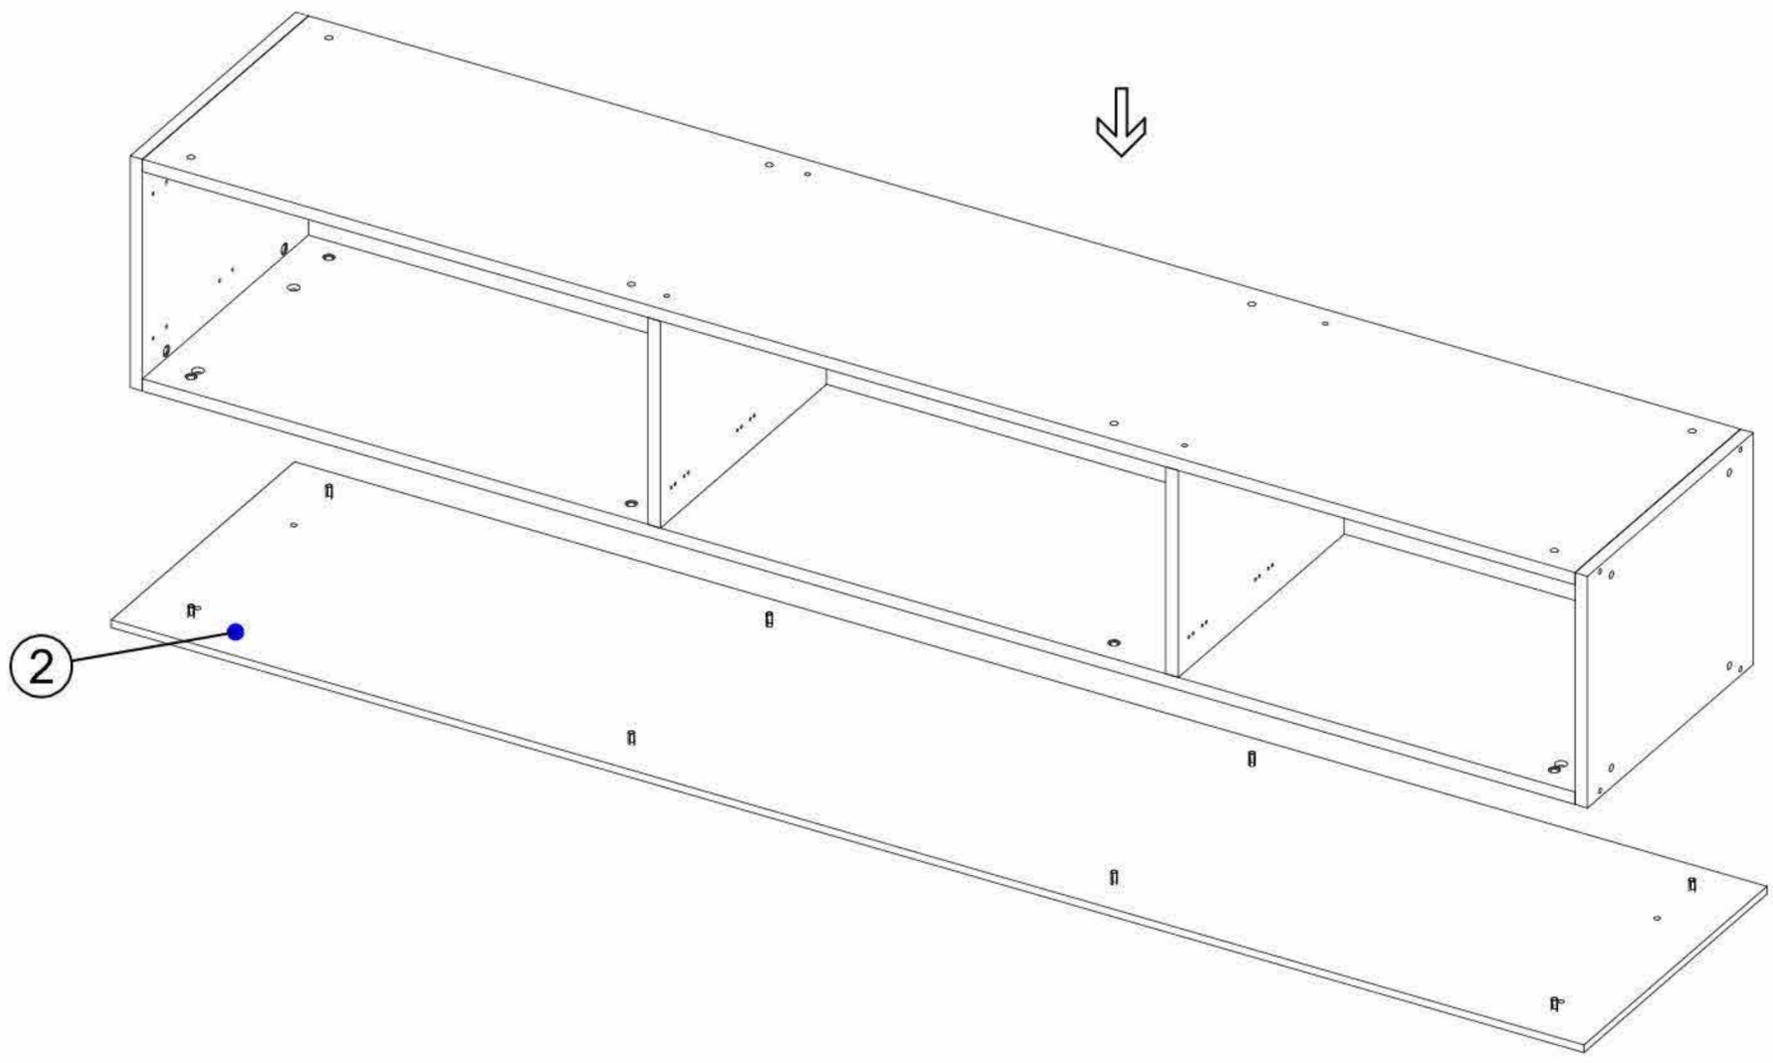

V

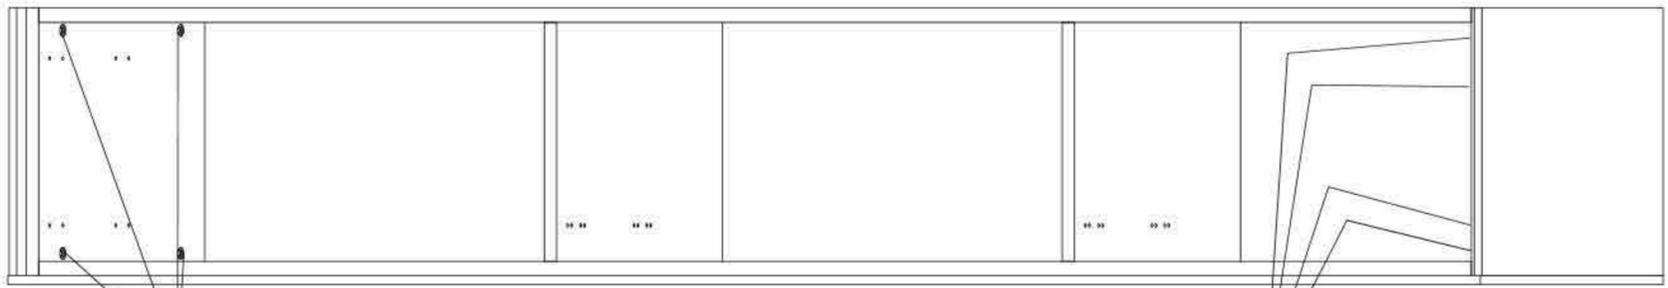


VI




G



M6x23
8

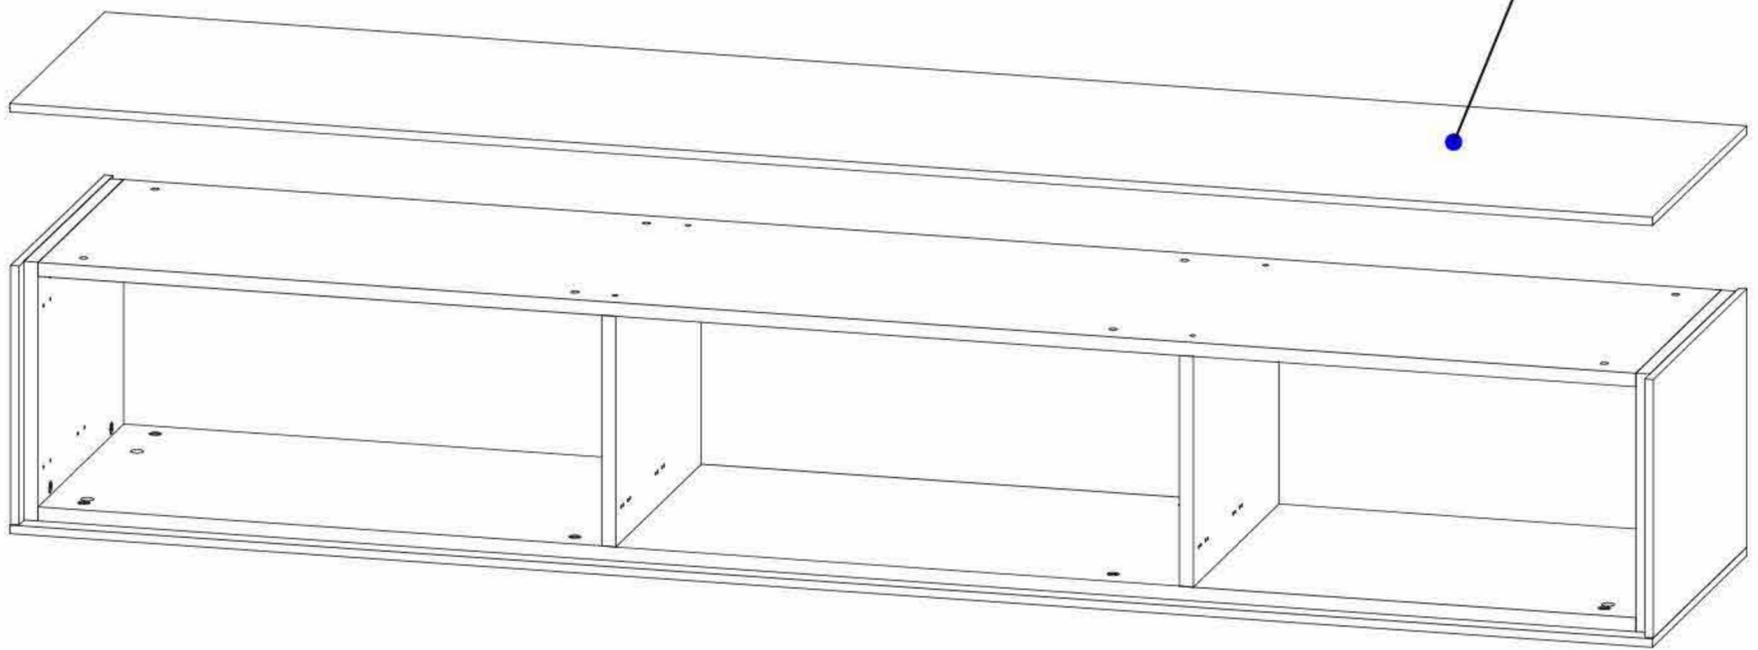

1

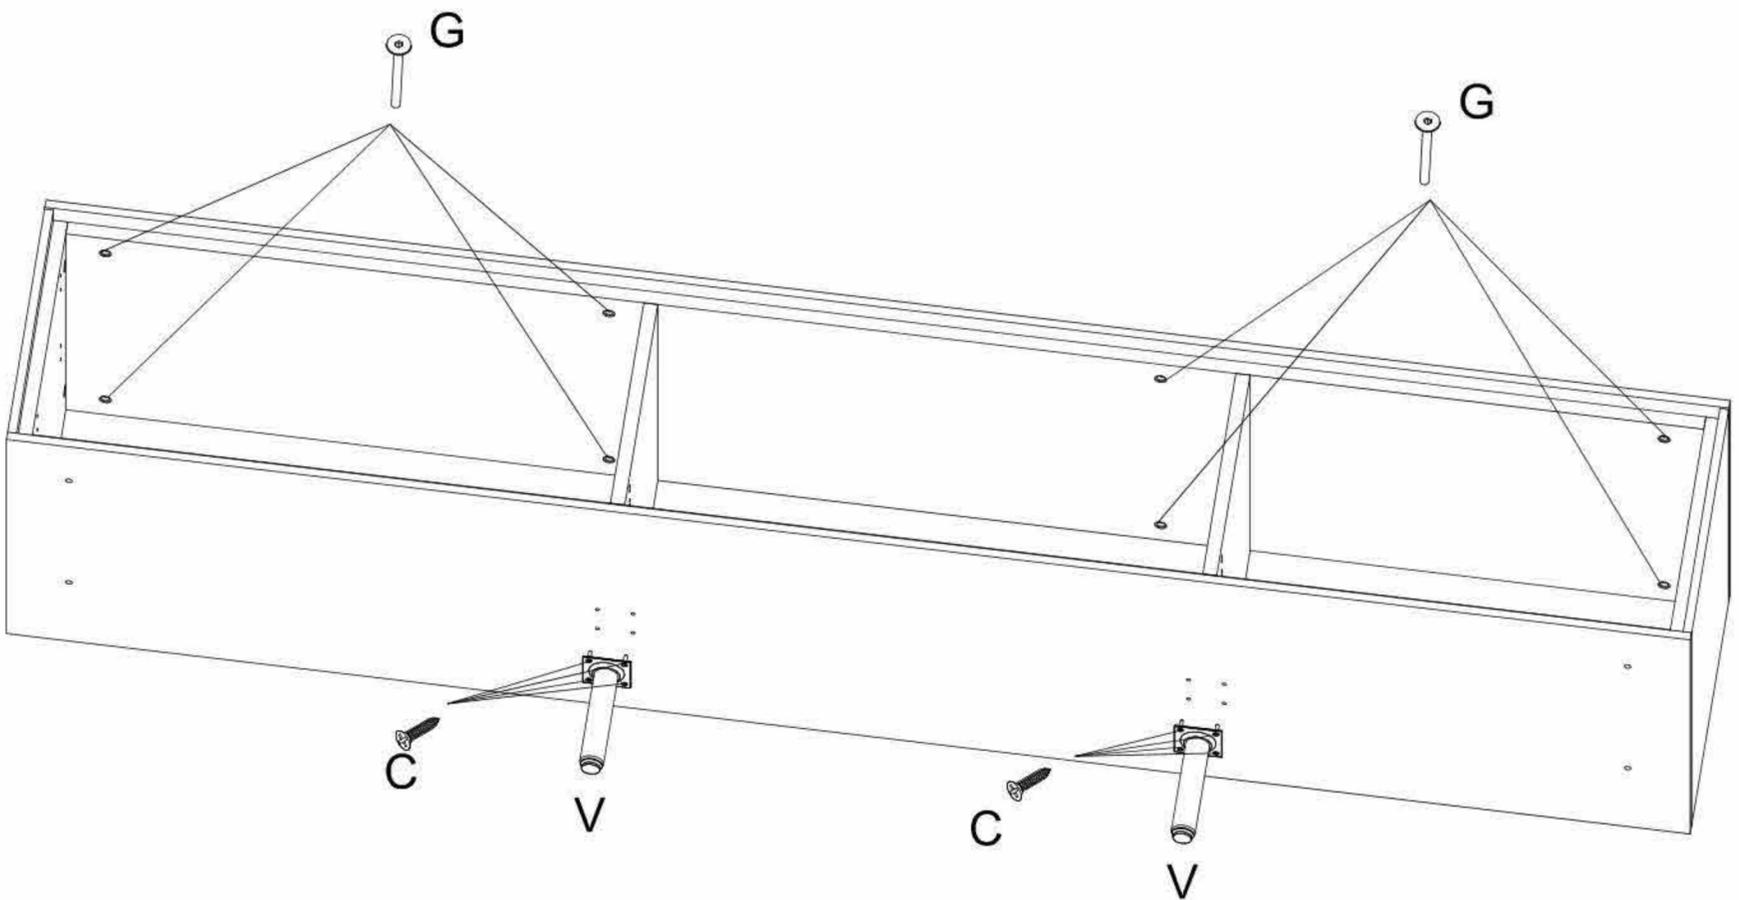

G

G

C

V

C

V

VII

C



Ø 4x16
8

G




M6x23
8



V




2

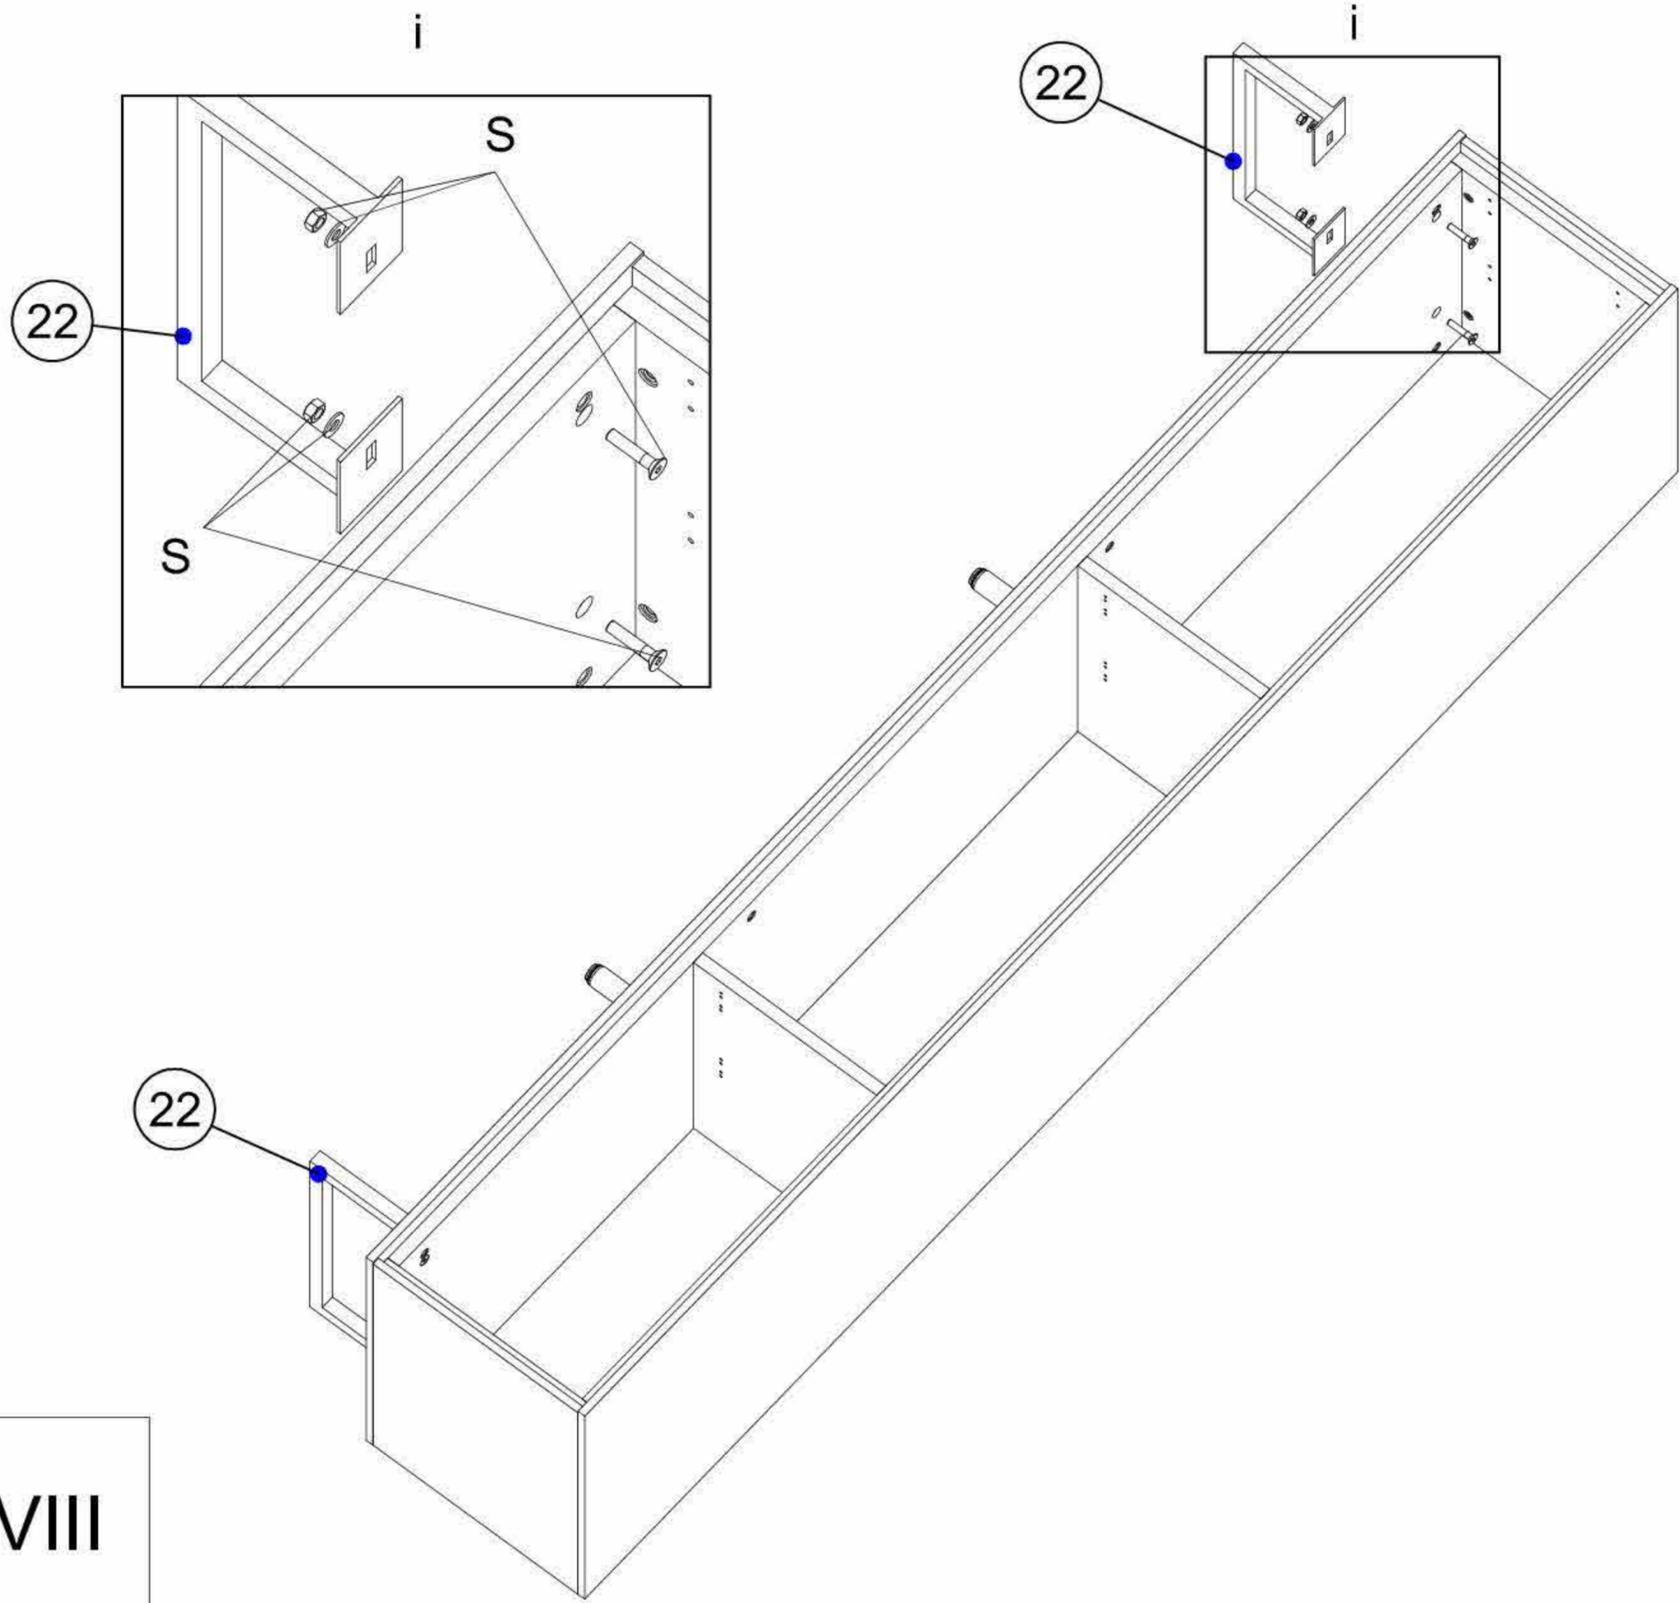


VIII

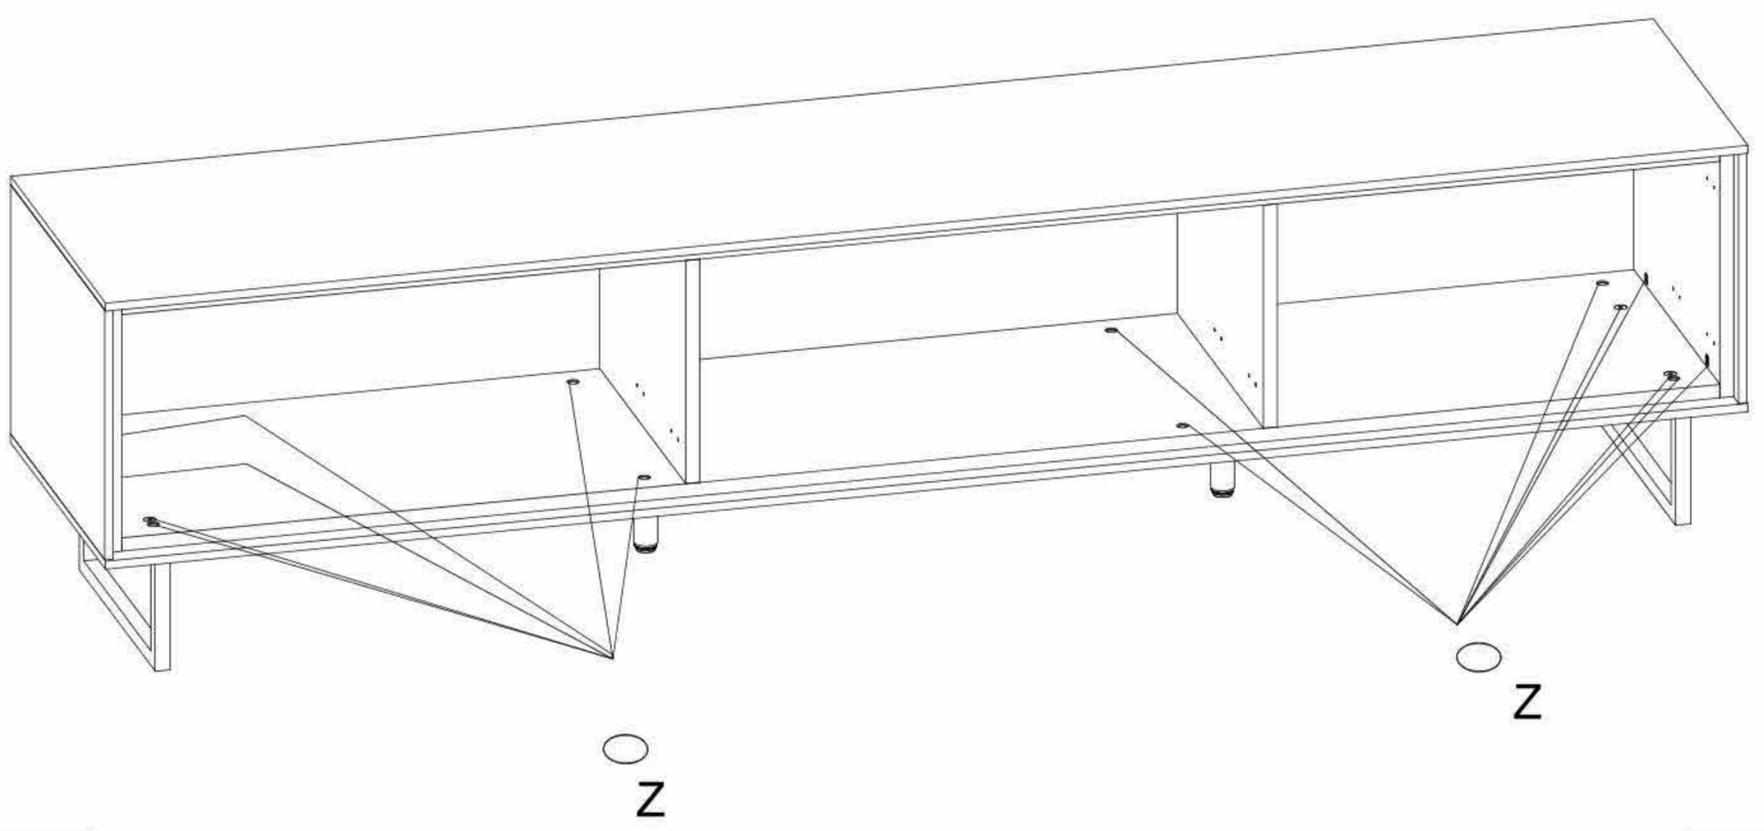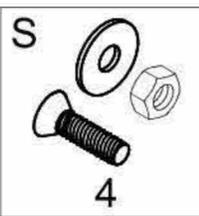


IX

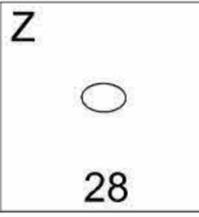

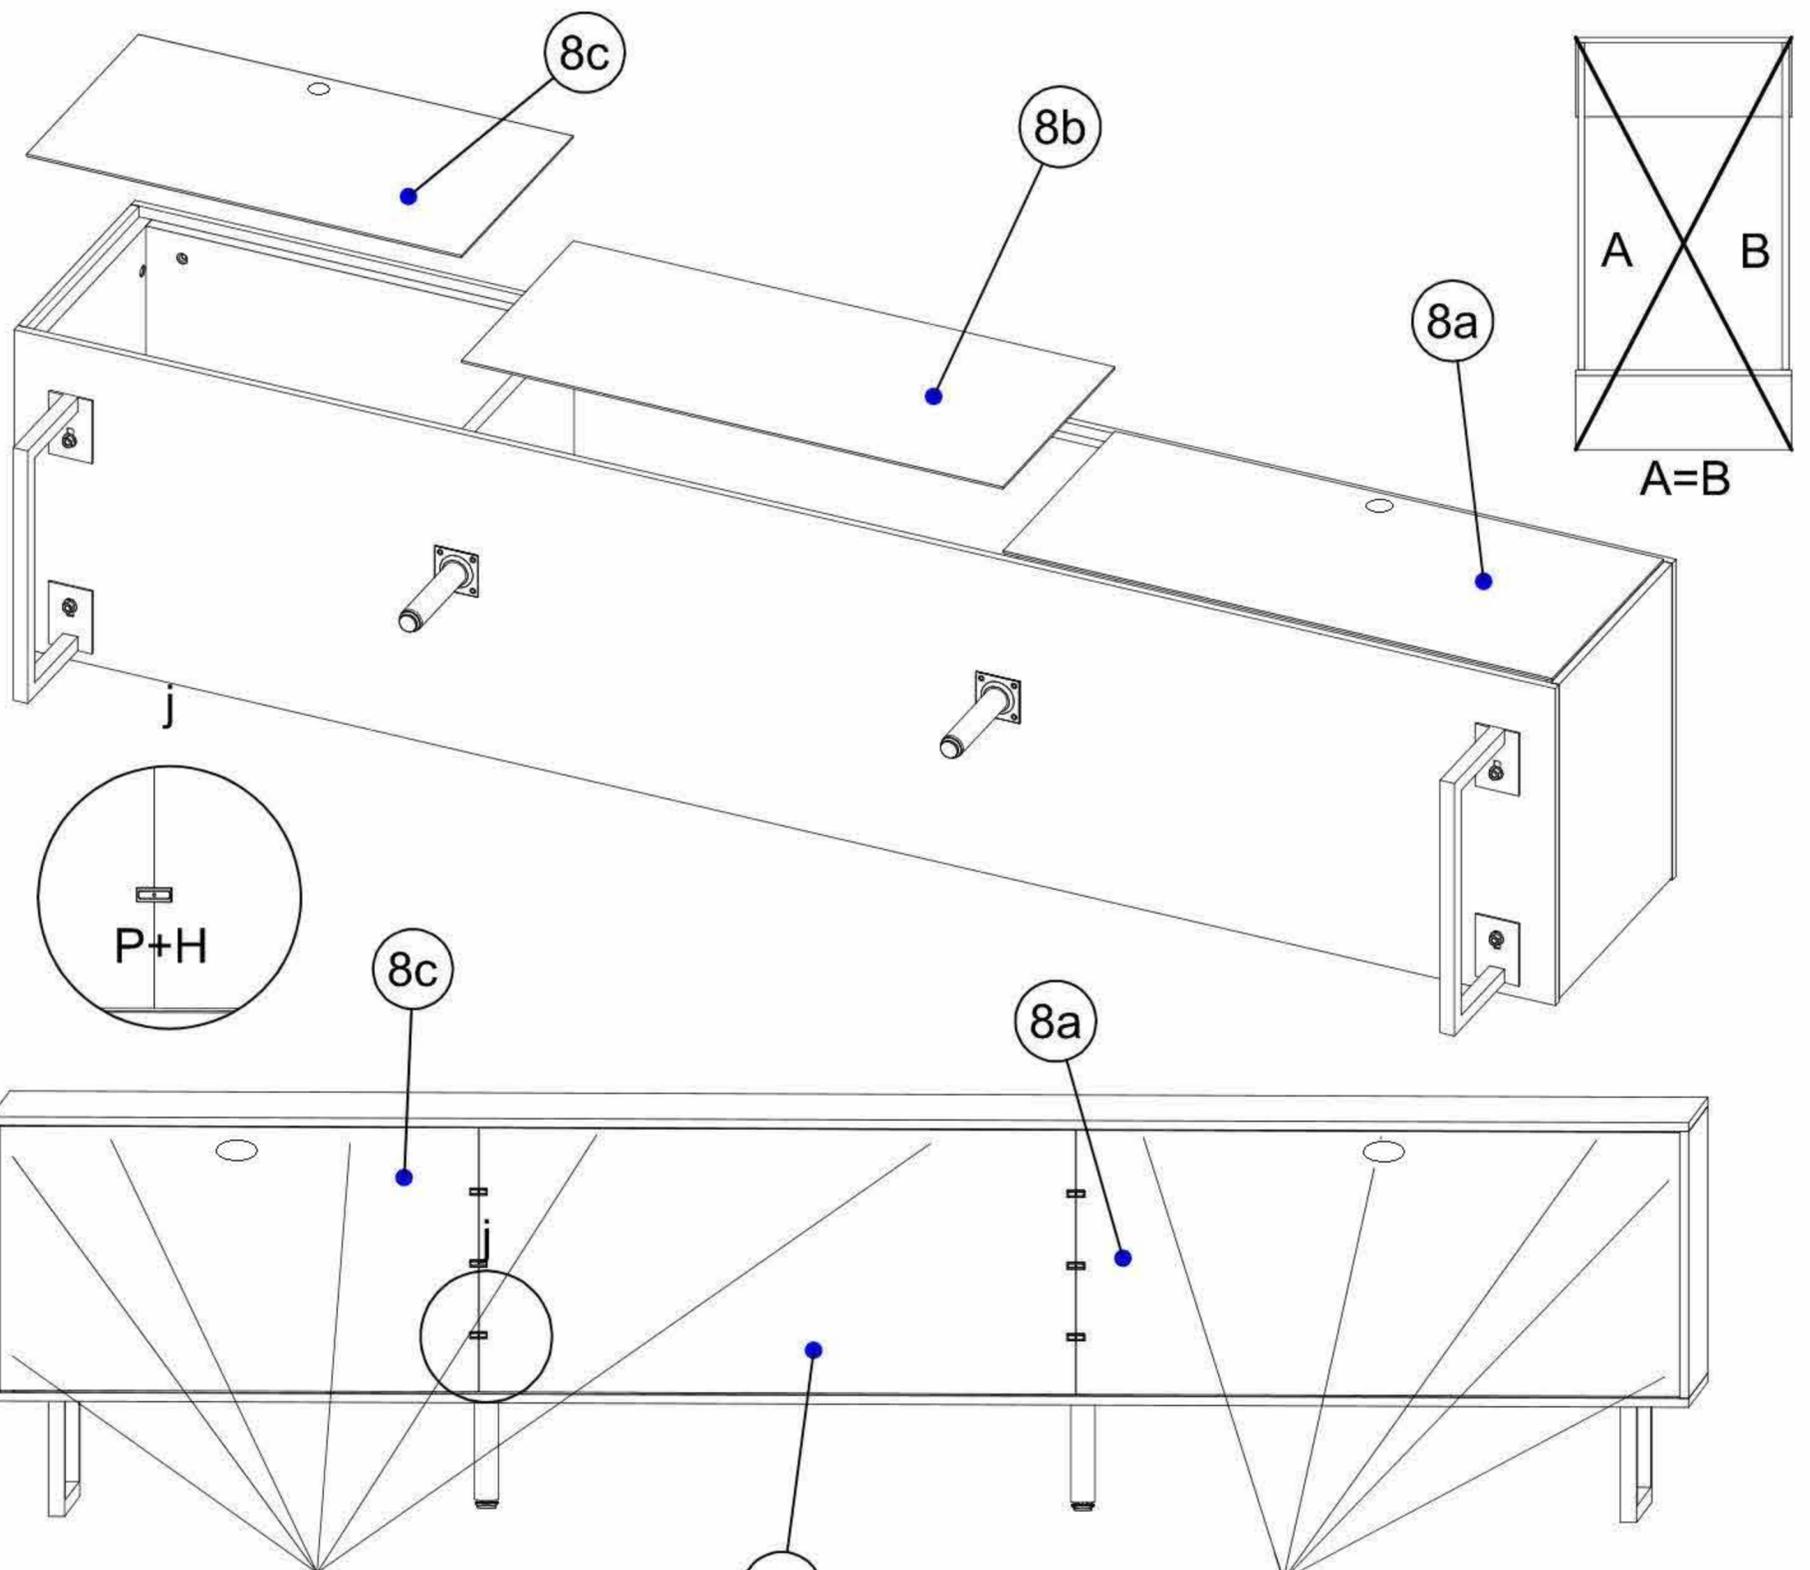

X



H

8b




H

H





Ø 3x16
30


P




6

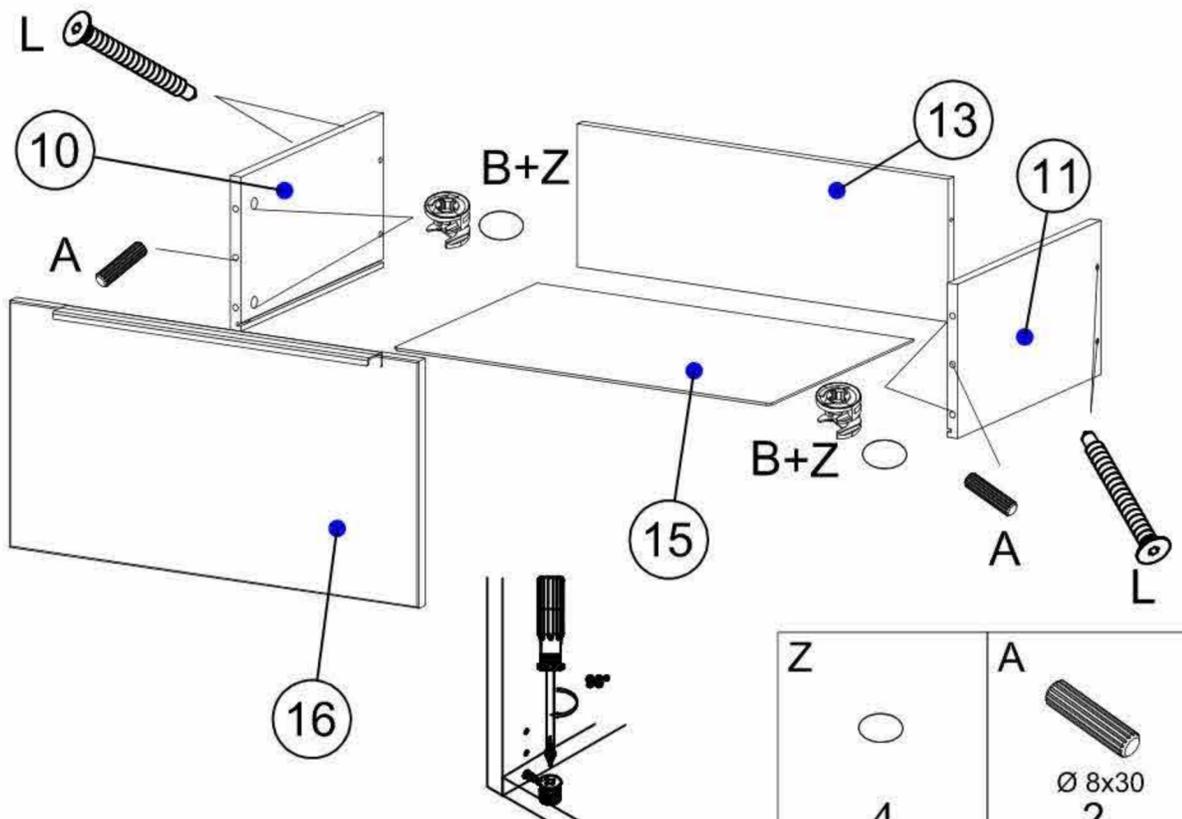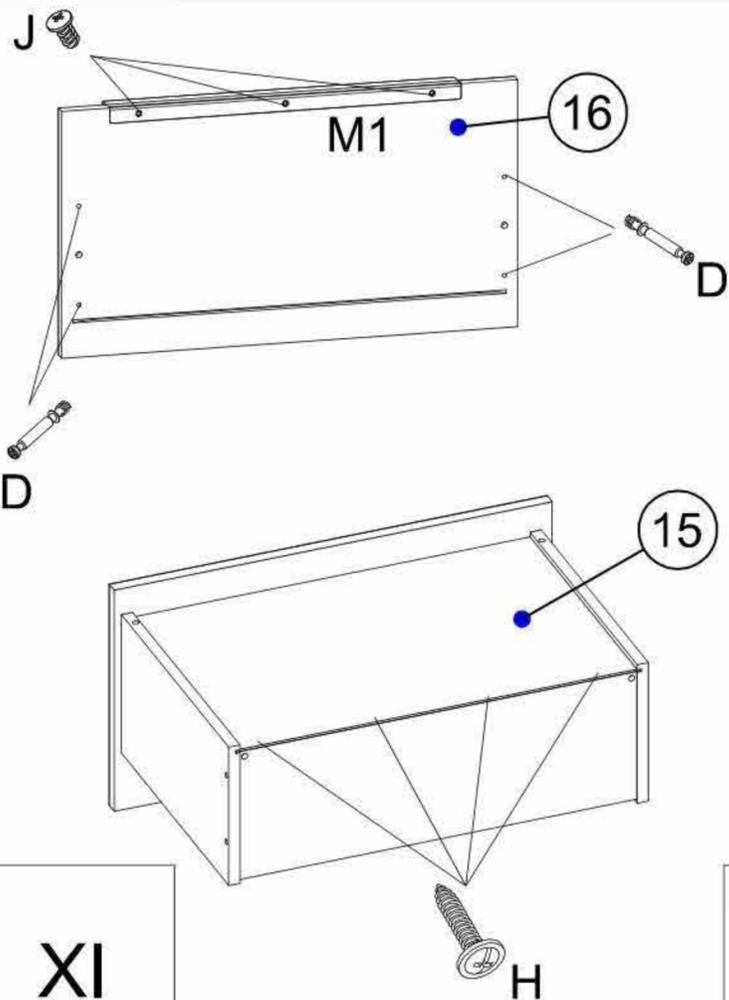


XI

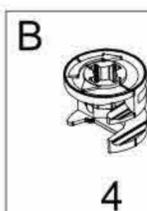


4

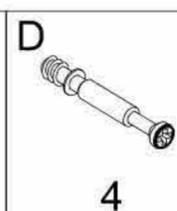


4

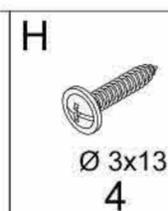


Ø 3x13
4

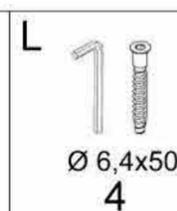

Ø 6,4x50
4

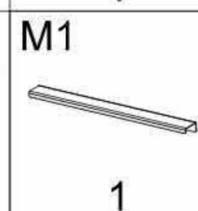

1

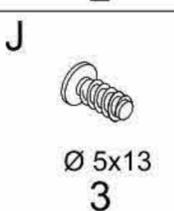

Ø 5x13
3

Z








4


A


















Ø 8x30
2

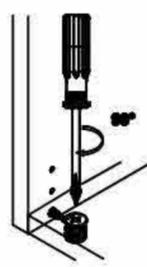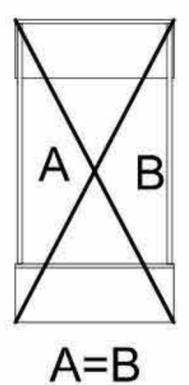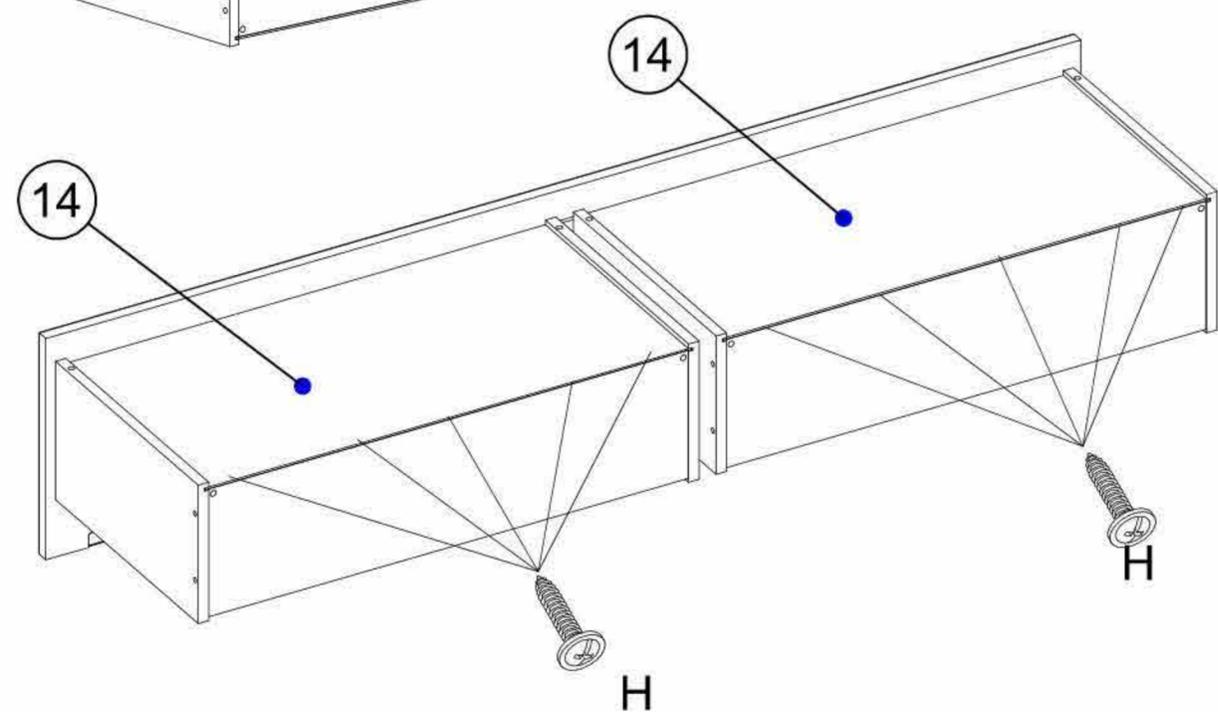
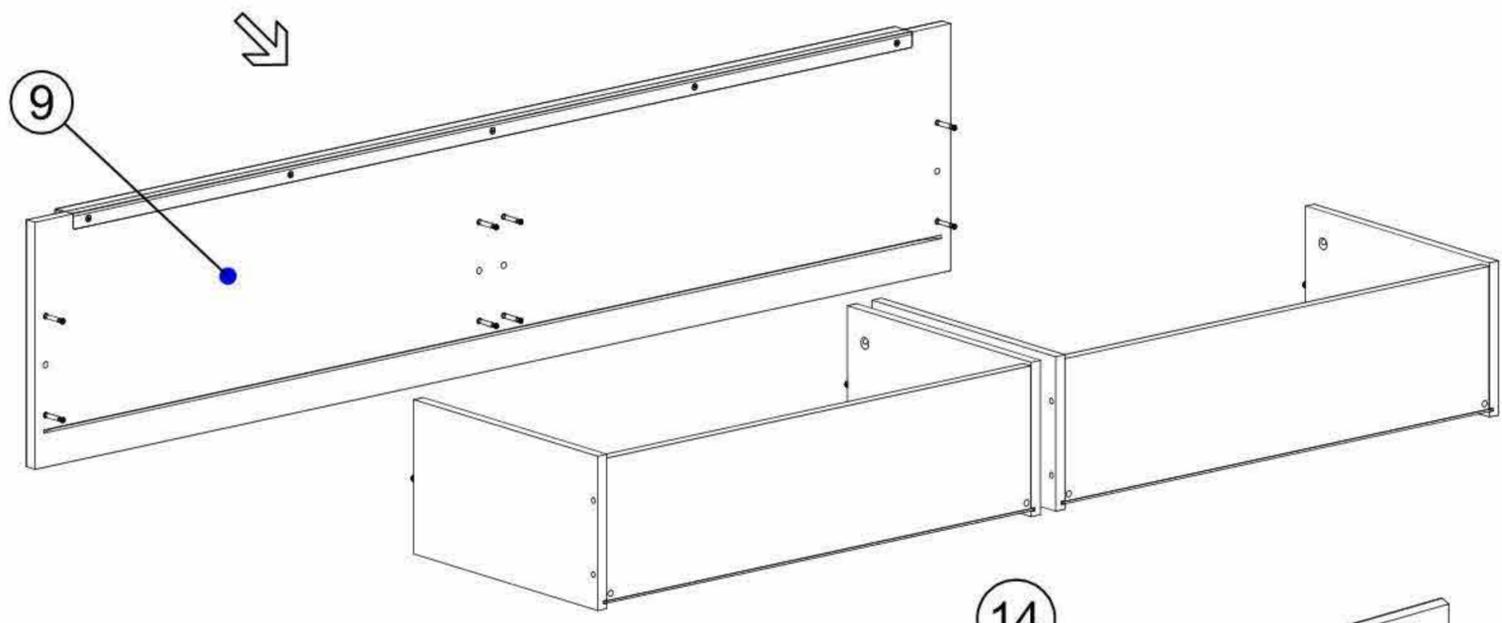
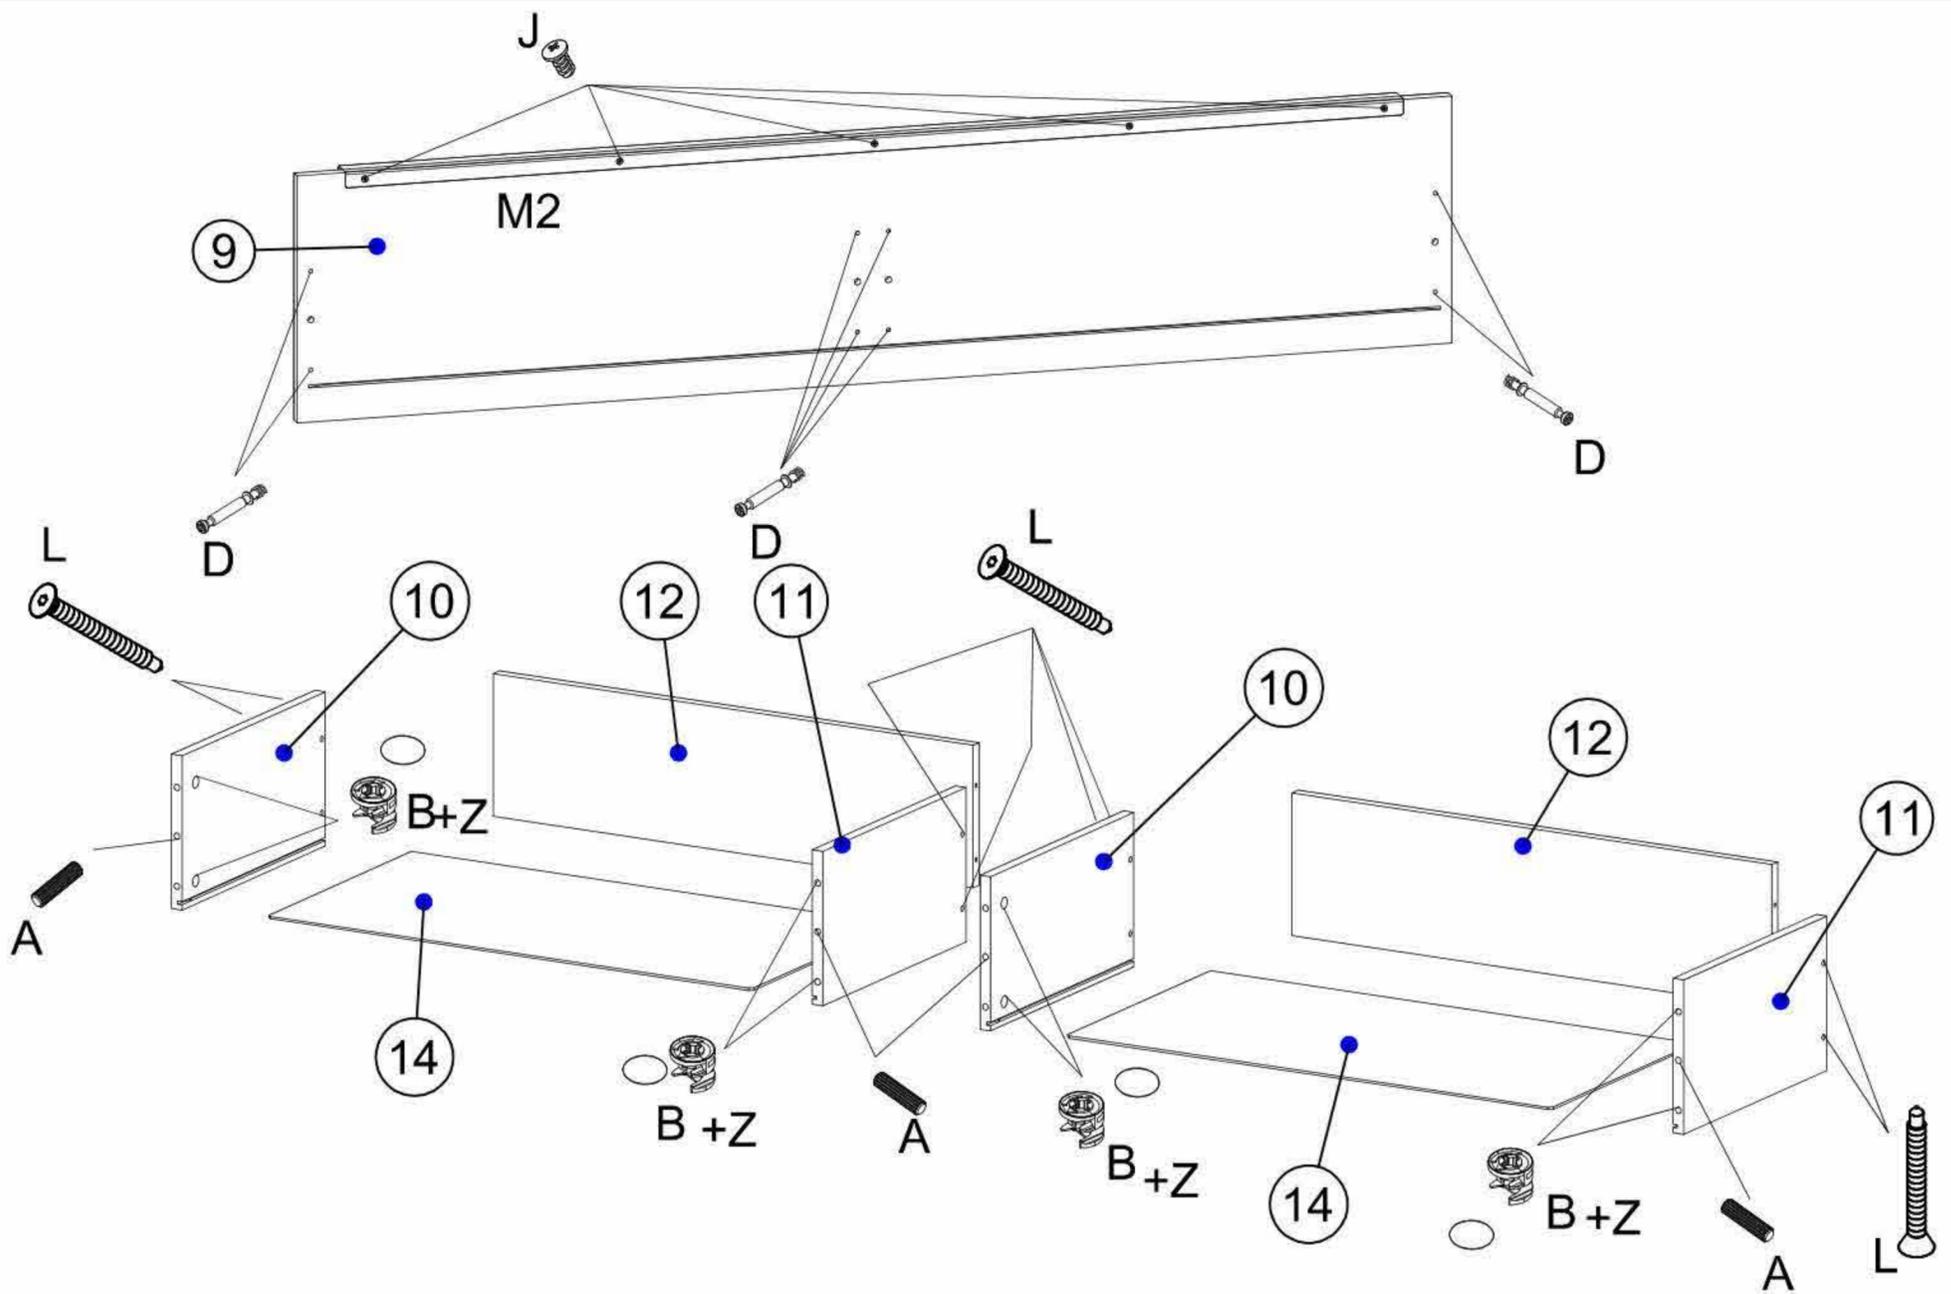


XII

A	B	D	H	L	M2	J
						
Ø 8x30 4	8	8	Ø 3x16 10	Ø 6,4x50 8	1	Ø 5x13 5
						Z 8

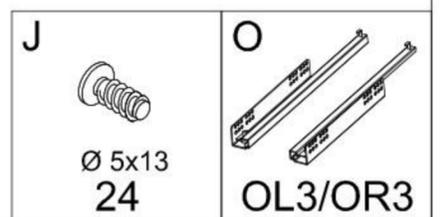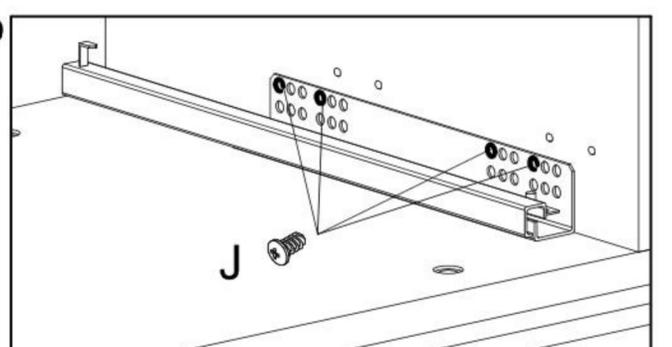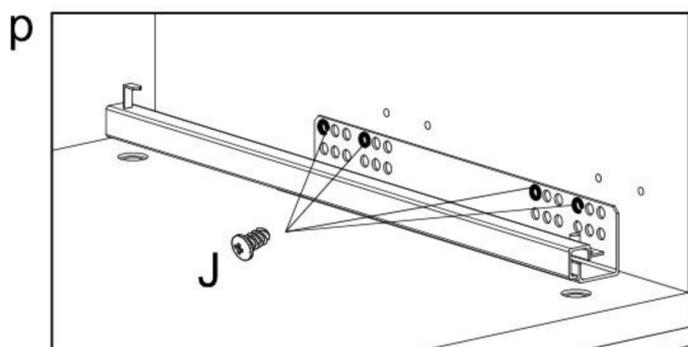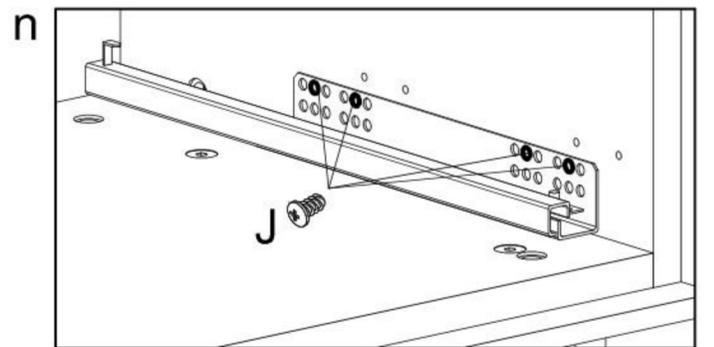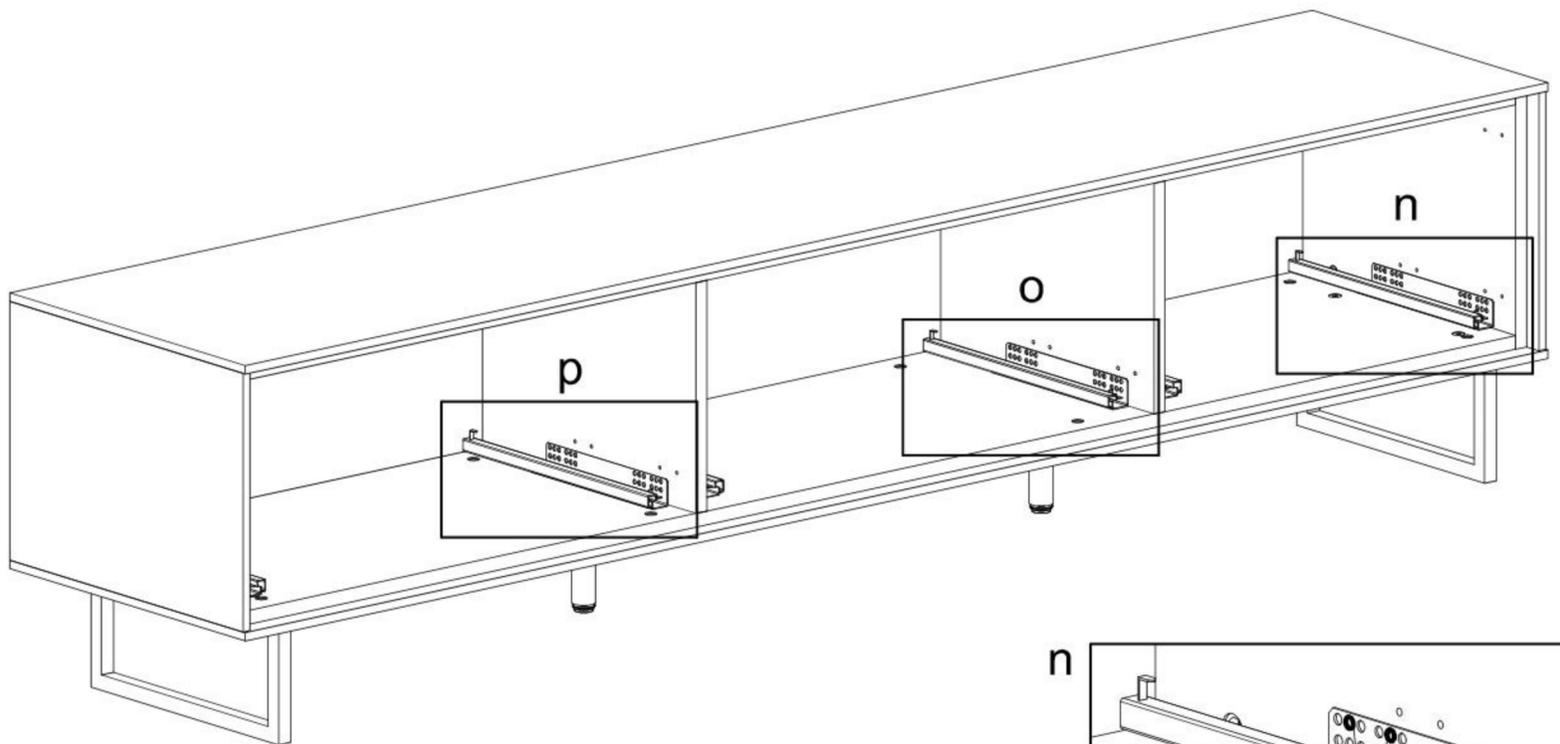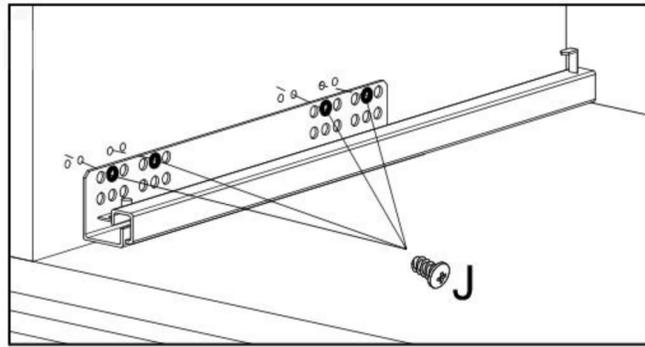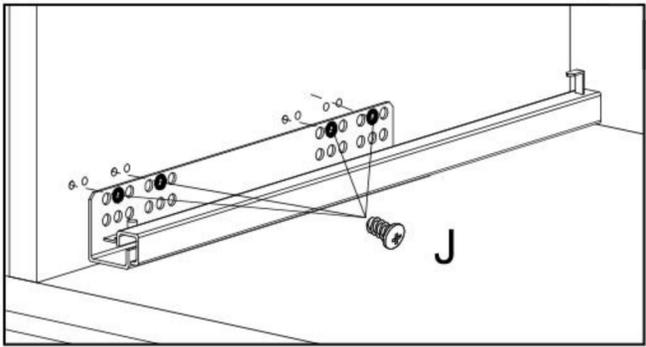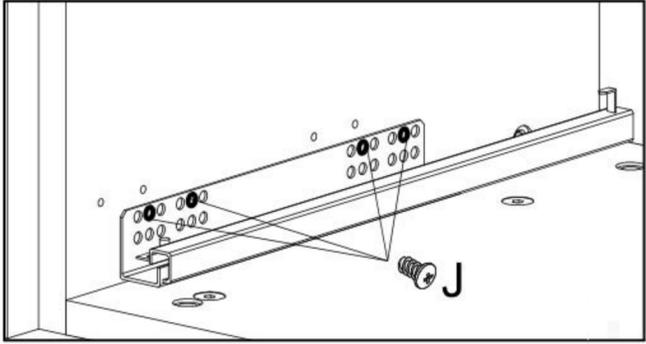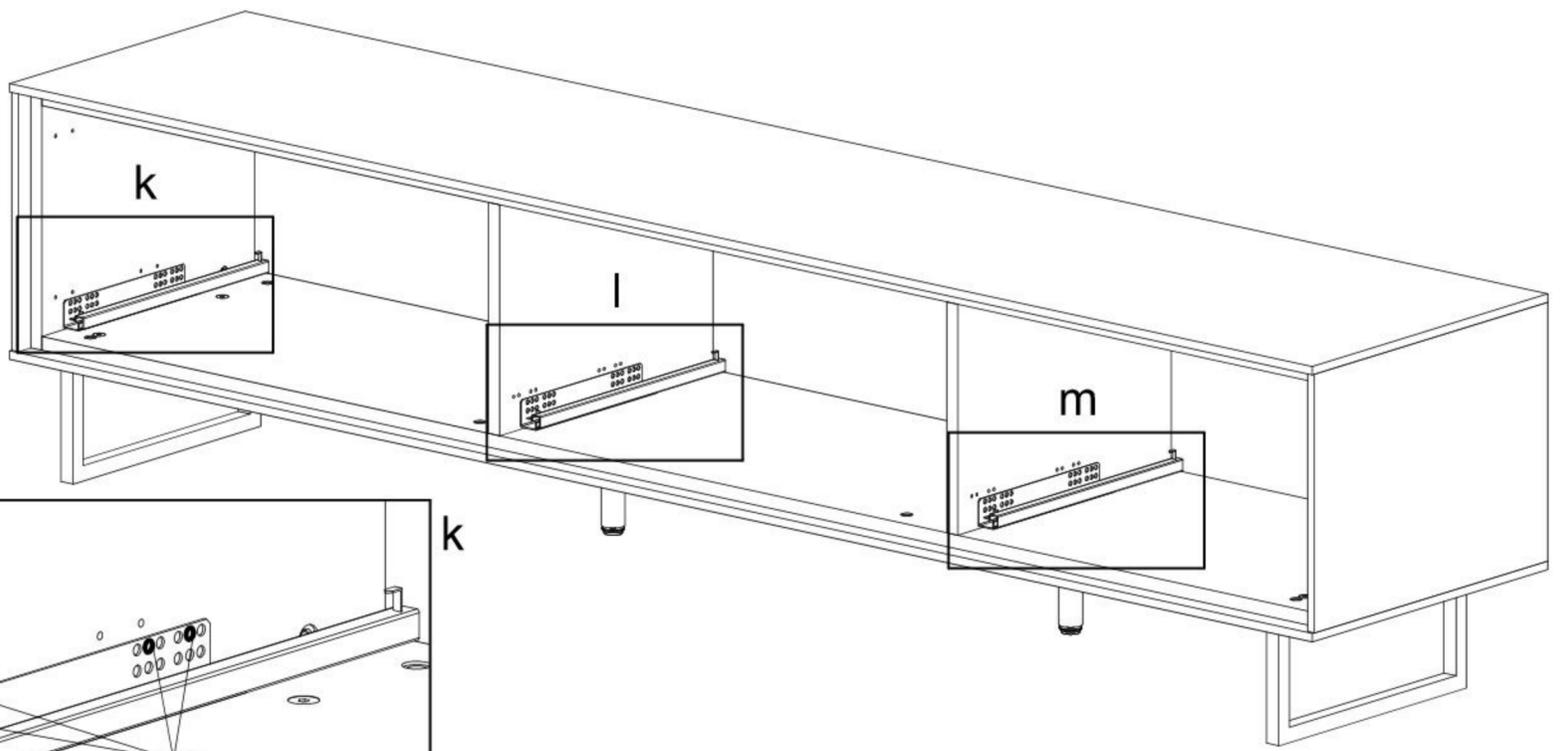

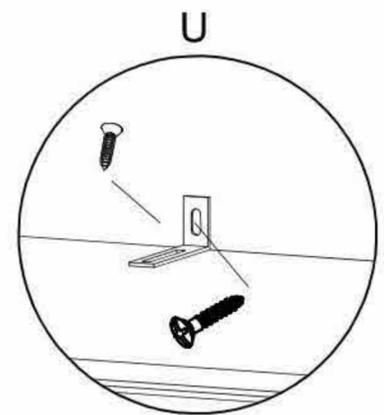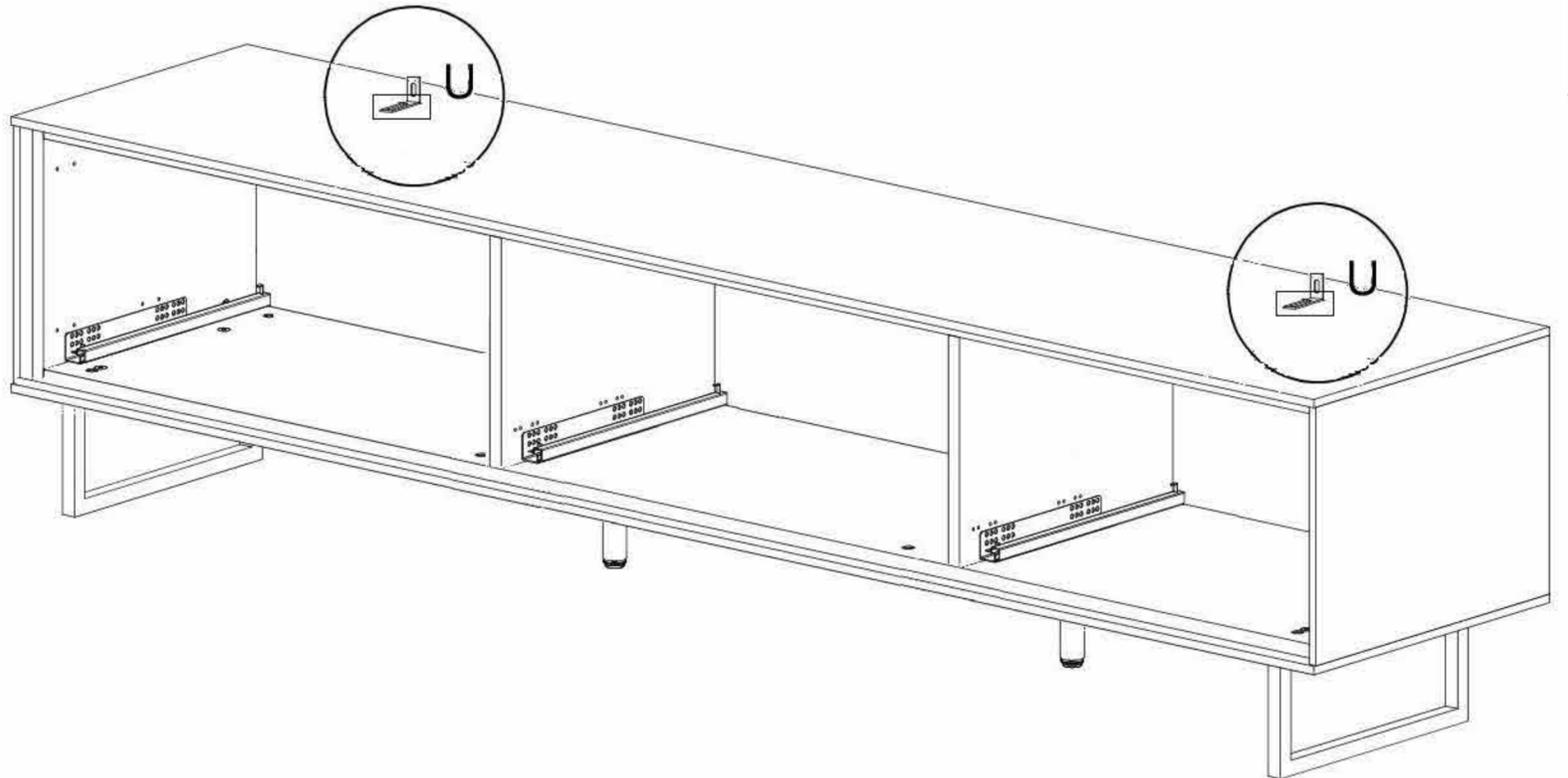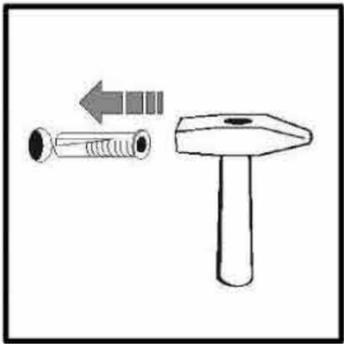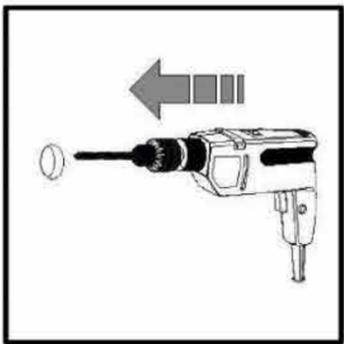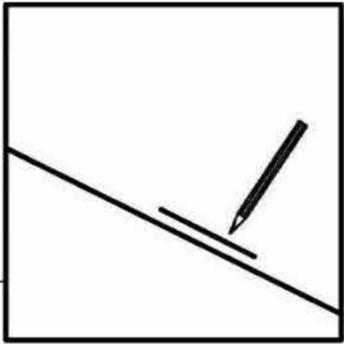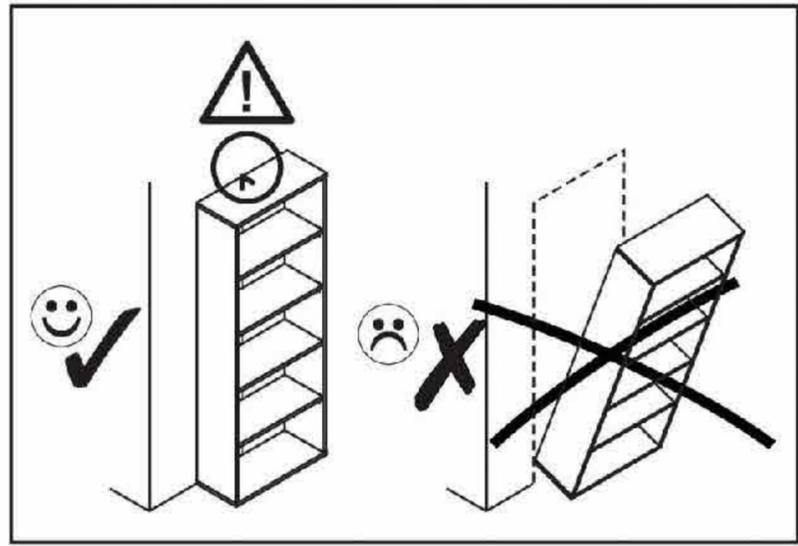

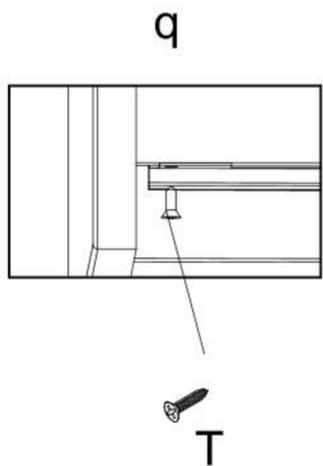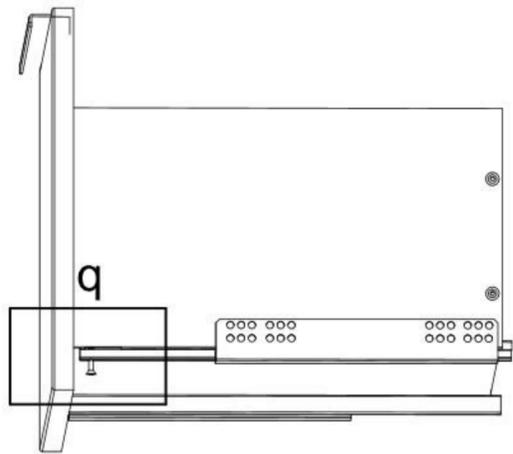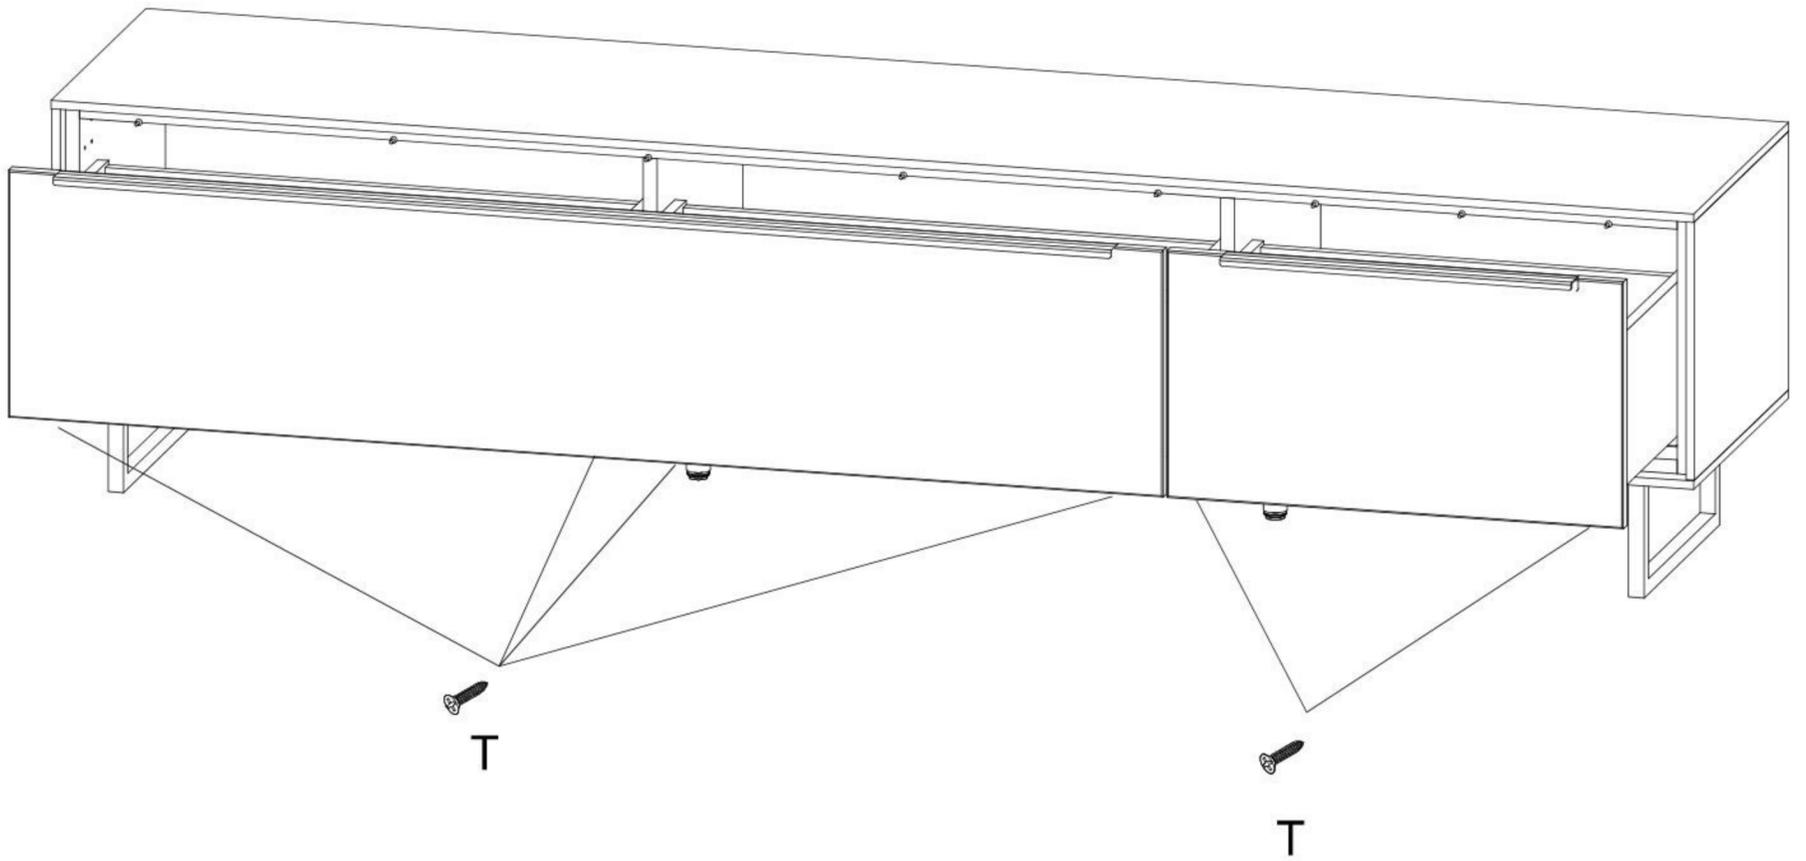

XV

