
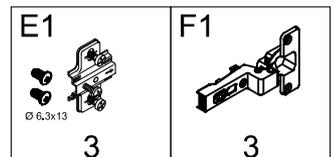
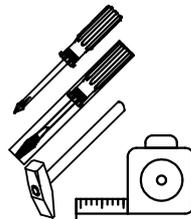
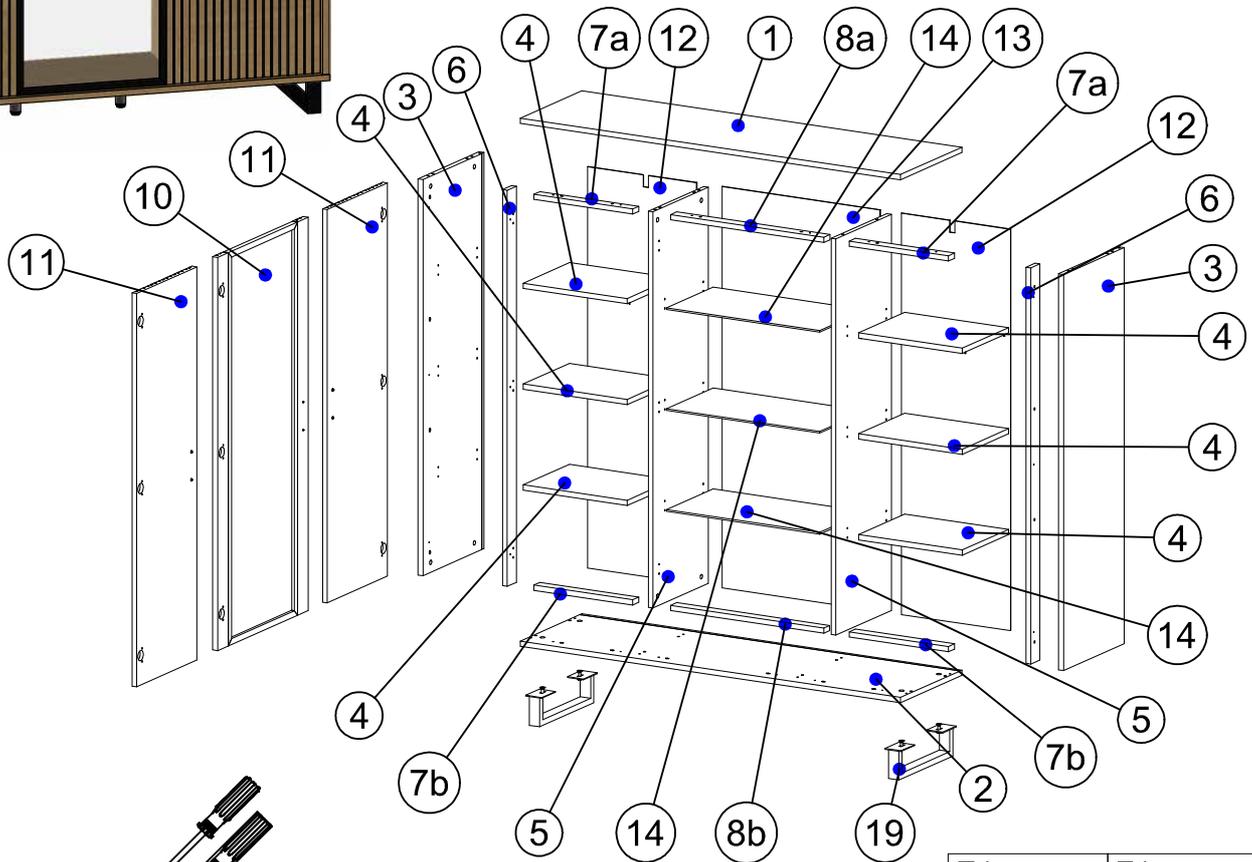


# 3204



versionsnummer:

09.2023

Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.








A1  Ø 8x20 20	A  Ø 8x30 16	B  16	D  16	E  Ø 6,3x13 6	F  6	G  Ø 4x30 18	H  Ø 3x16 14	I2  12	I1  24
J  Ø 5x13 26	Filz  4	M  3	V  2	Z  16	R  M4x25 6	S  4	P  20 14	U  2	






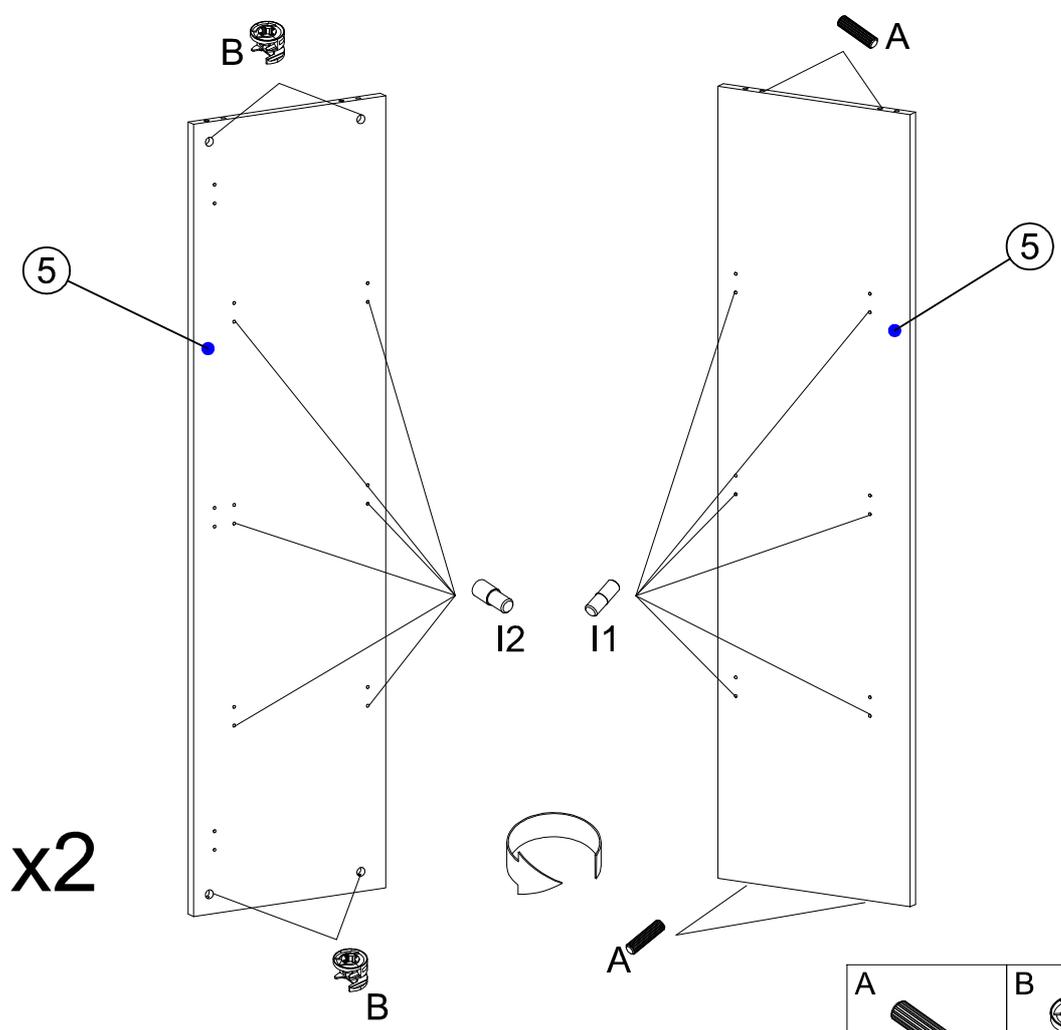
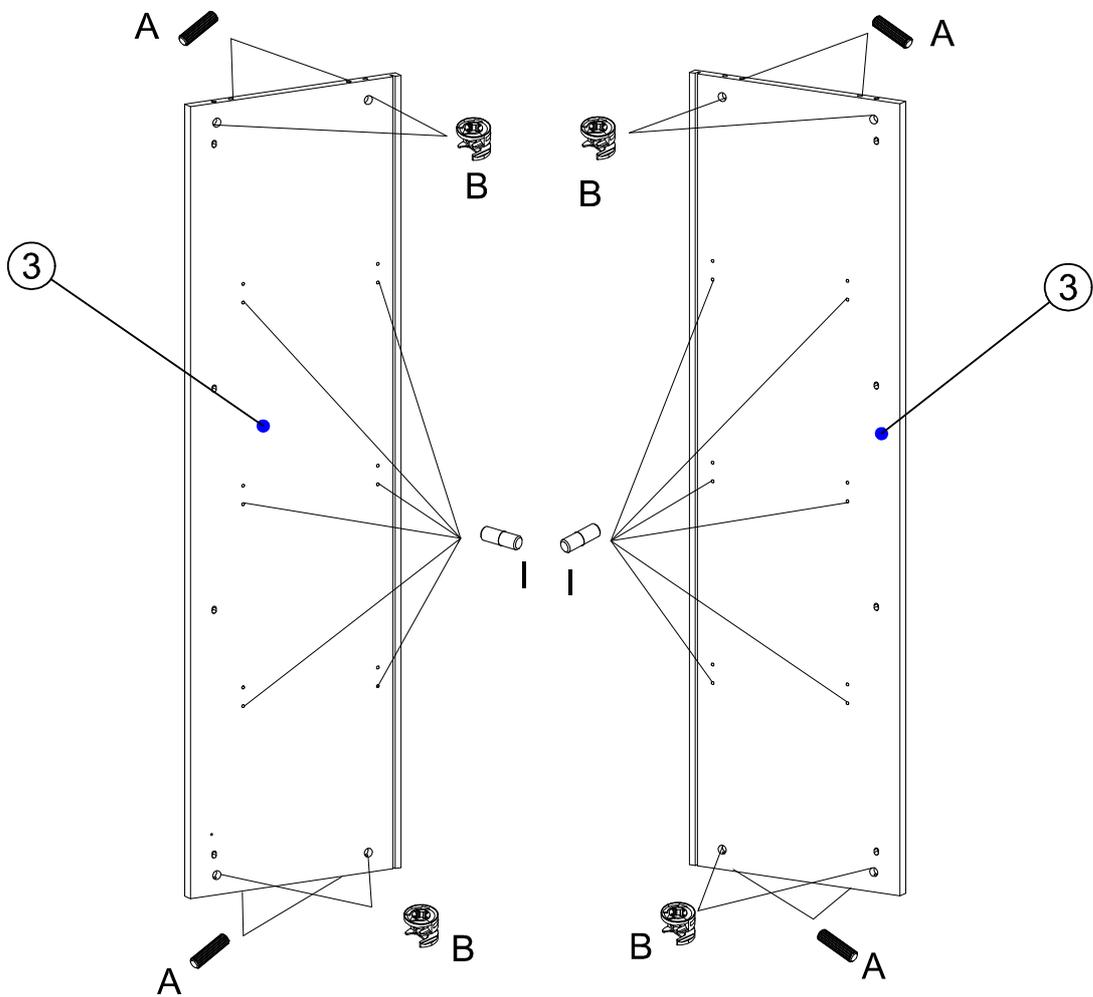


x2


I





<p>A</p>  <p>Ø 8x30 16</p>	<p>B</p>  <p>16</p>	<table border="1"> <tr> <td>I2</td> <td></td> </tr> <tr> <td>I1</td> <td></td> </tr> <tr> <td></td> <td>24</td> </tr> </table>	I2		I1			24
I2								
I1								
	24							

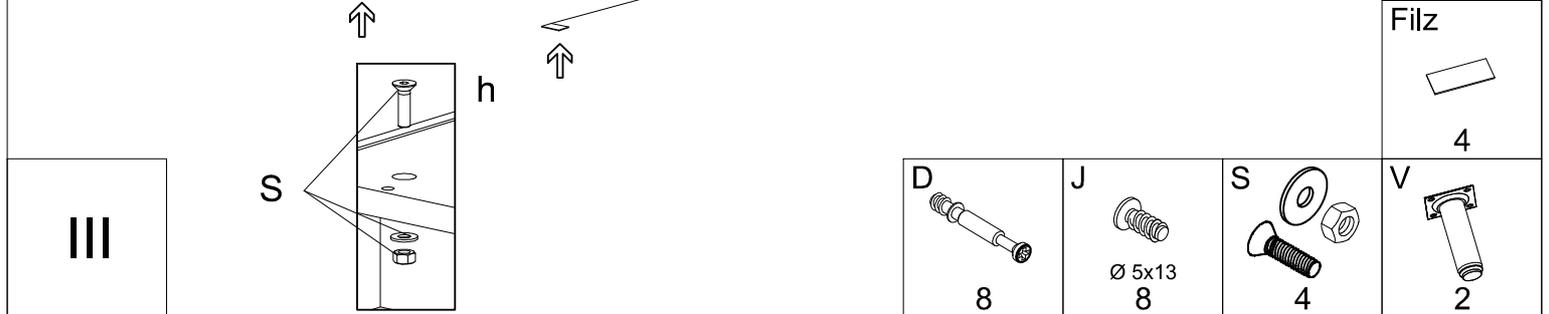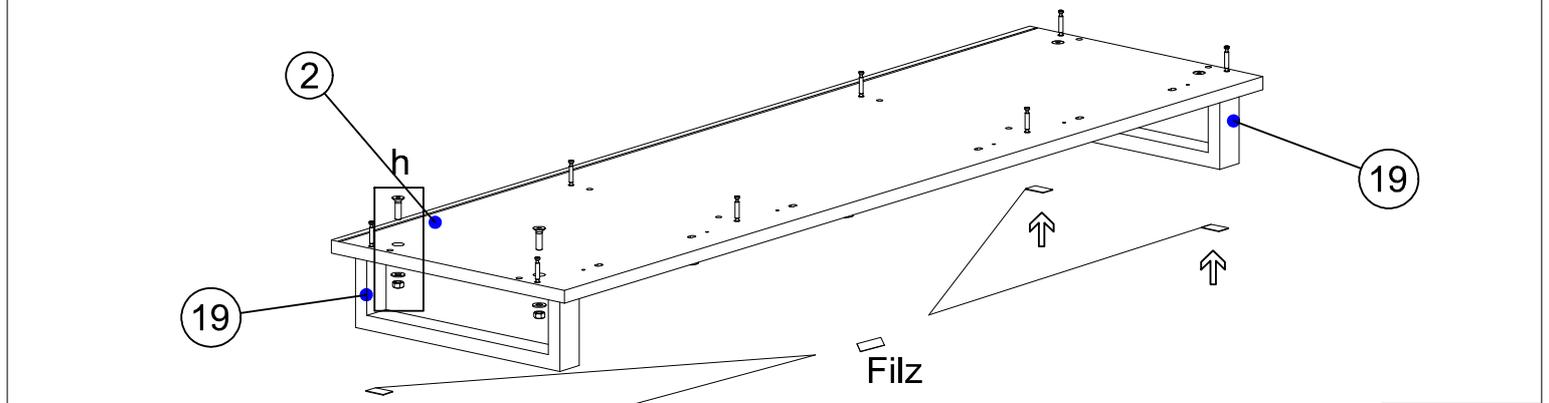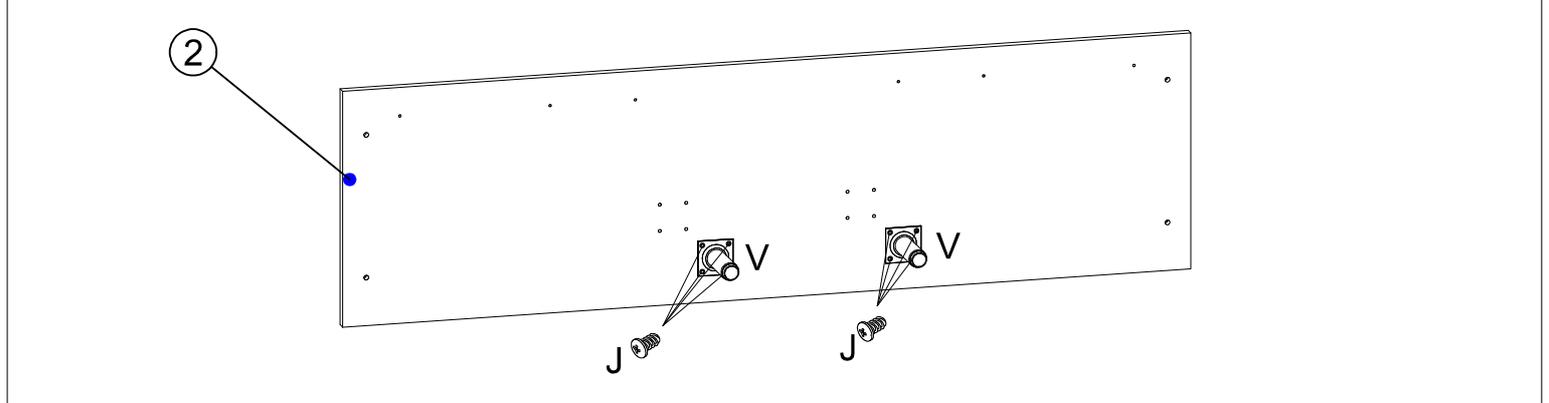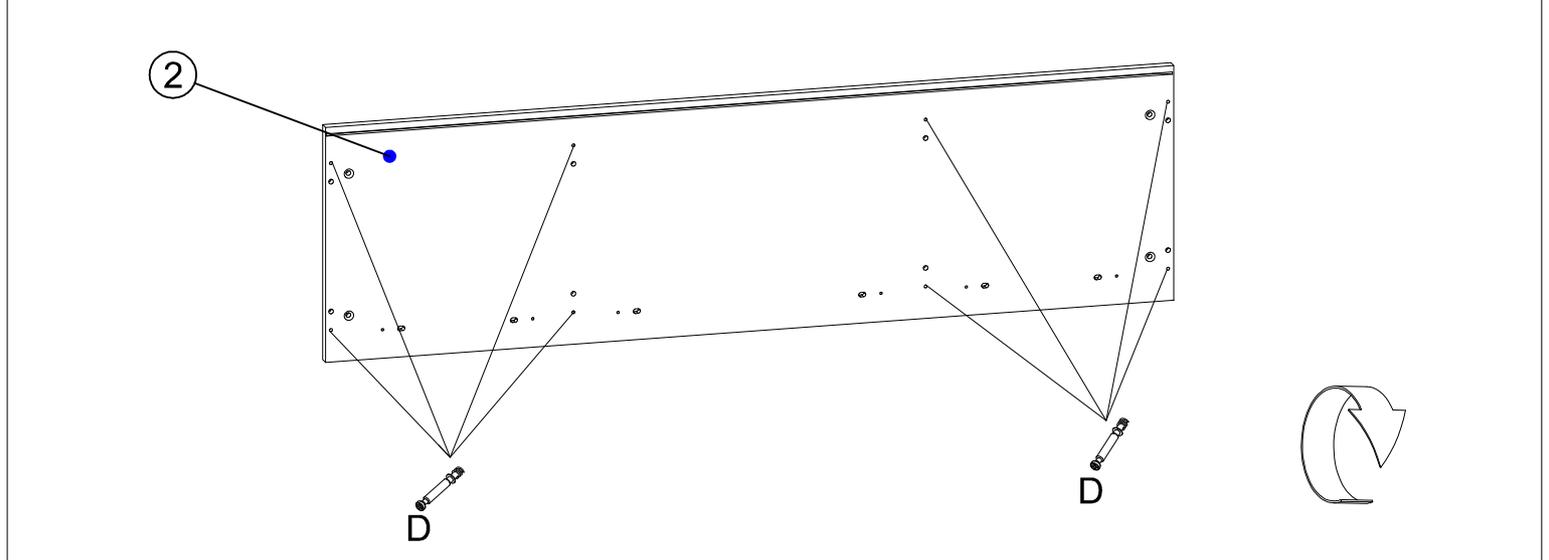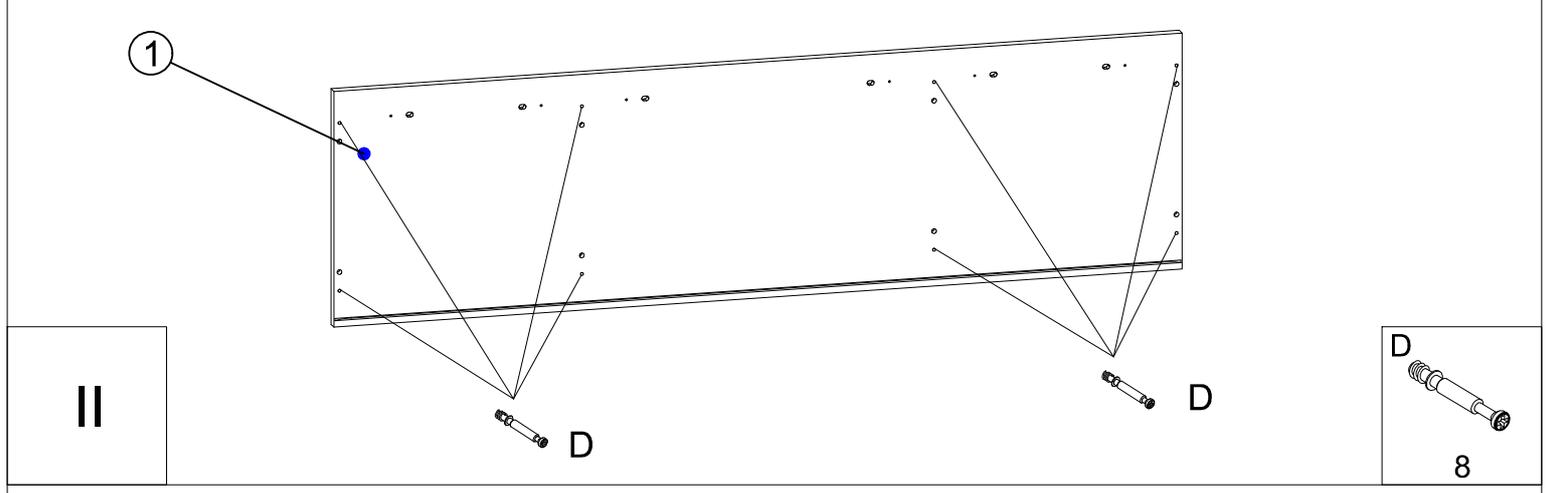

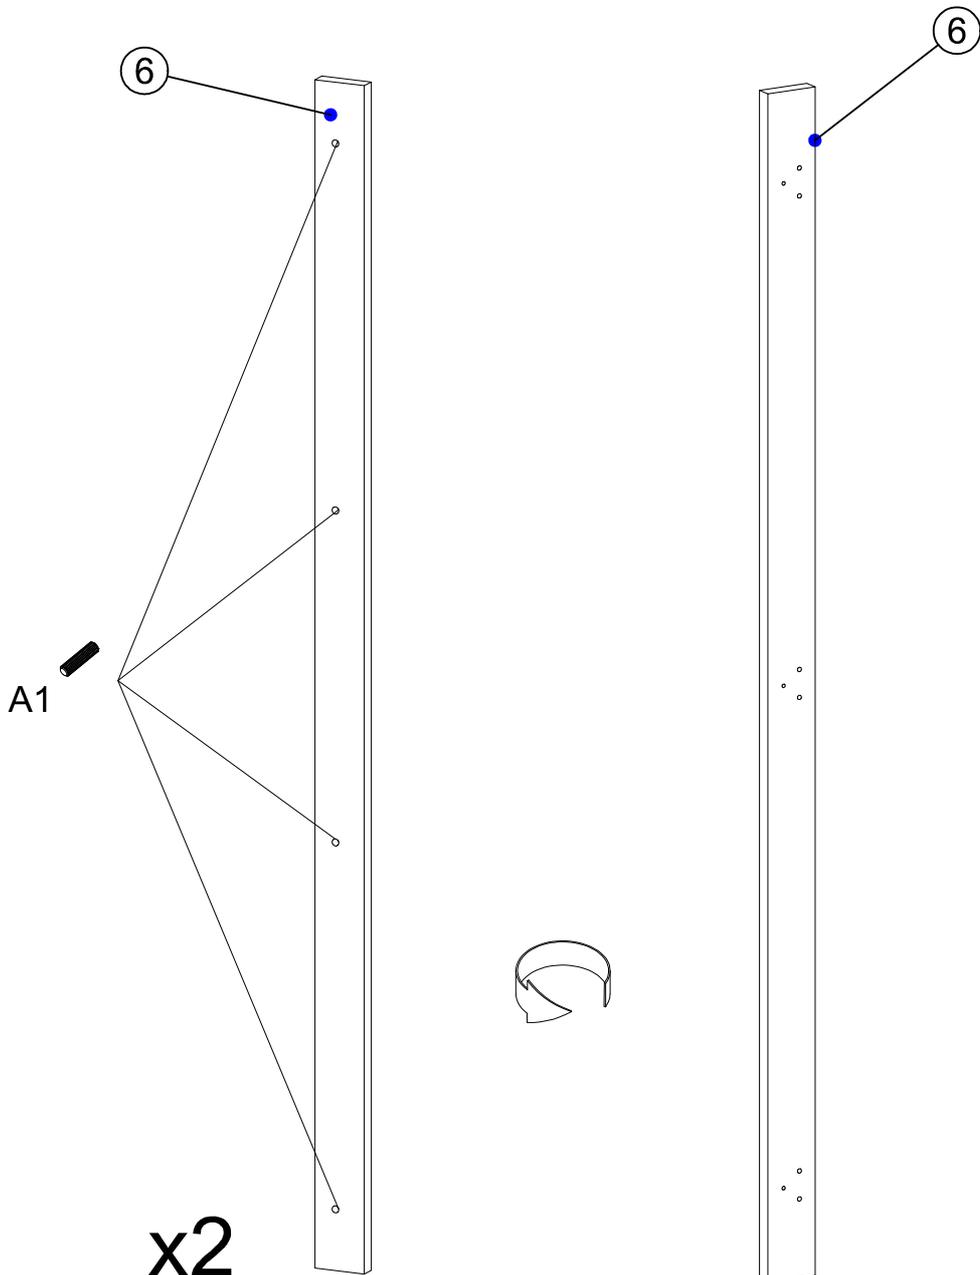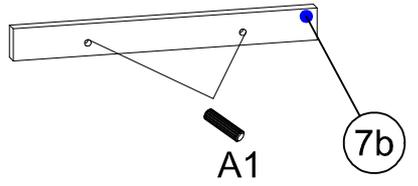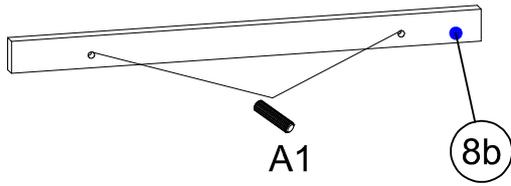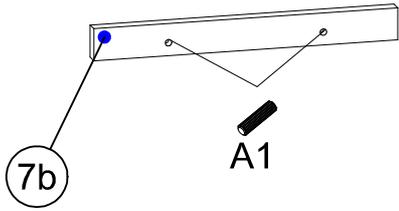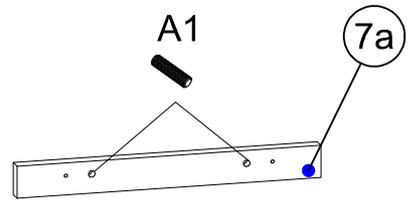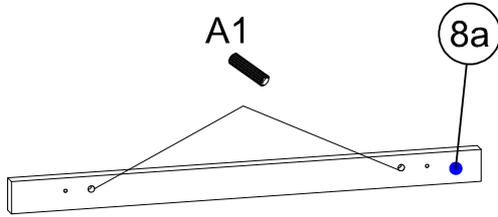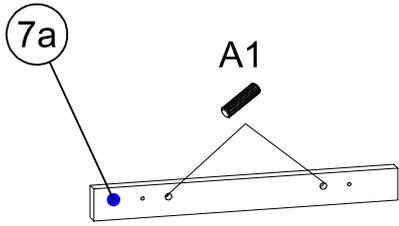


IV


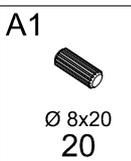


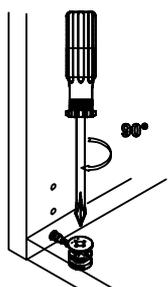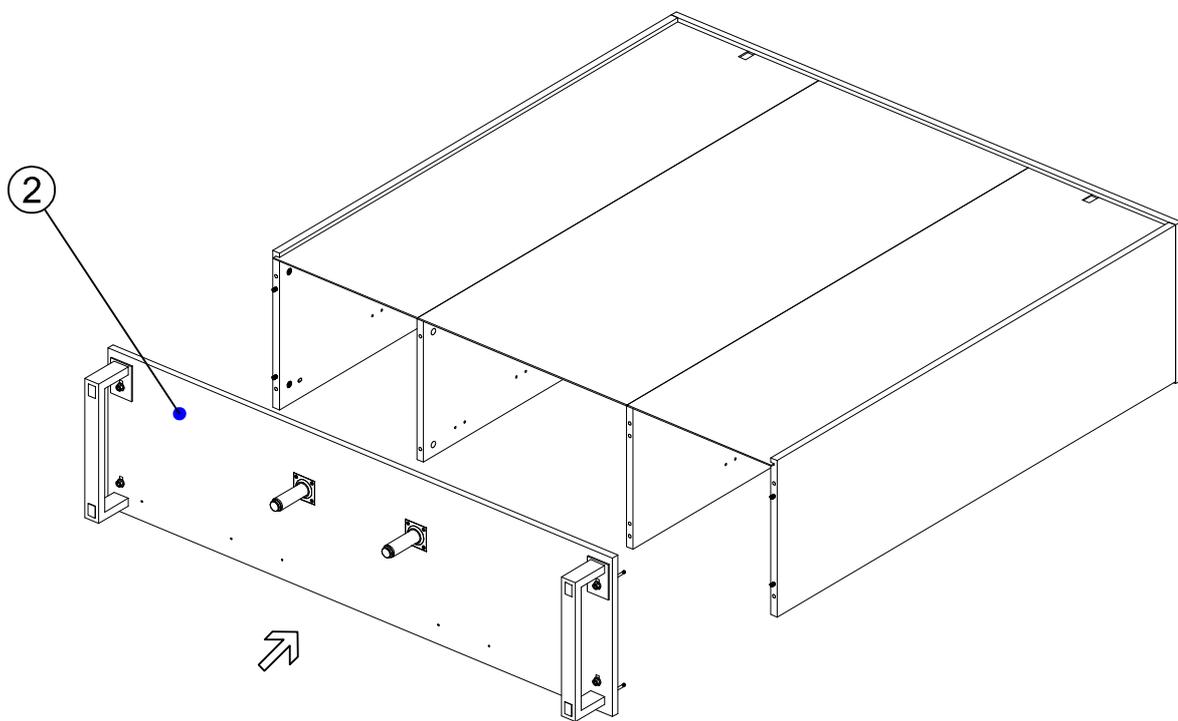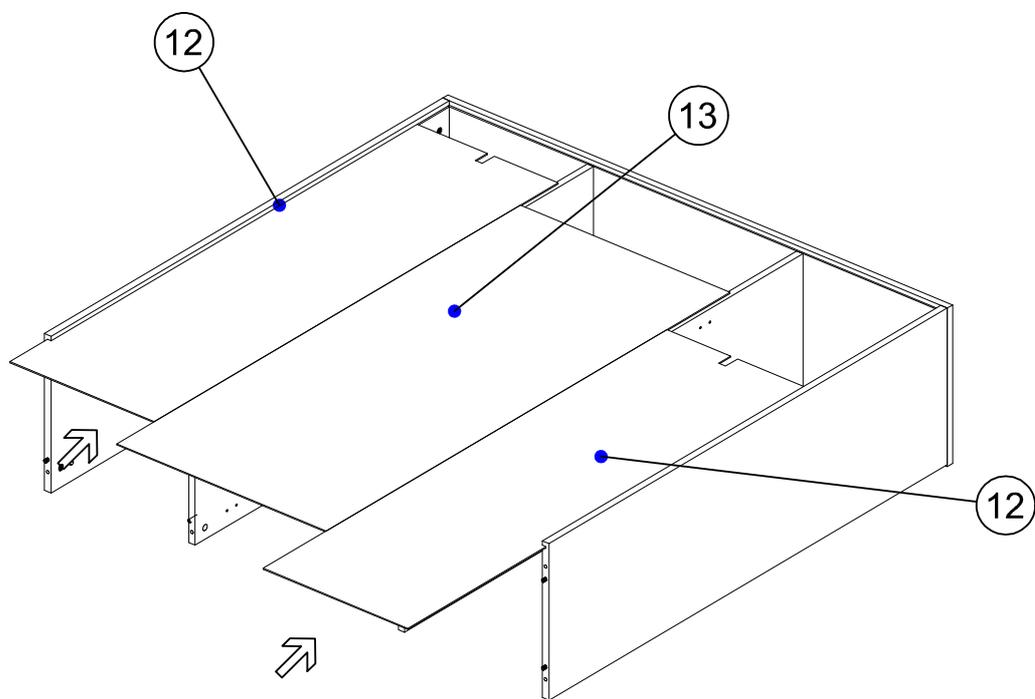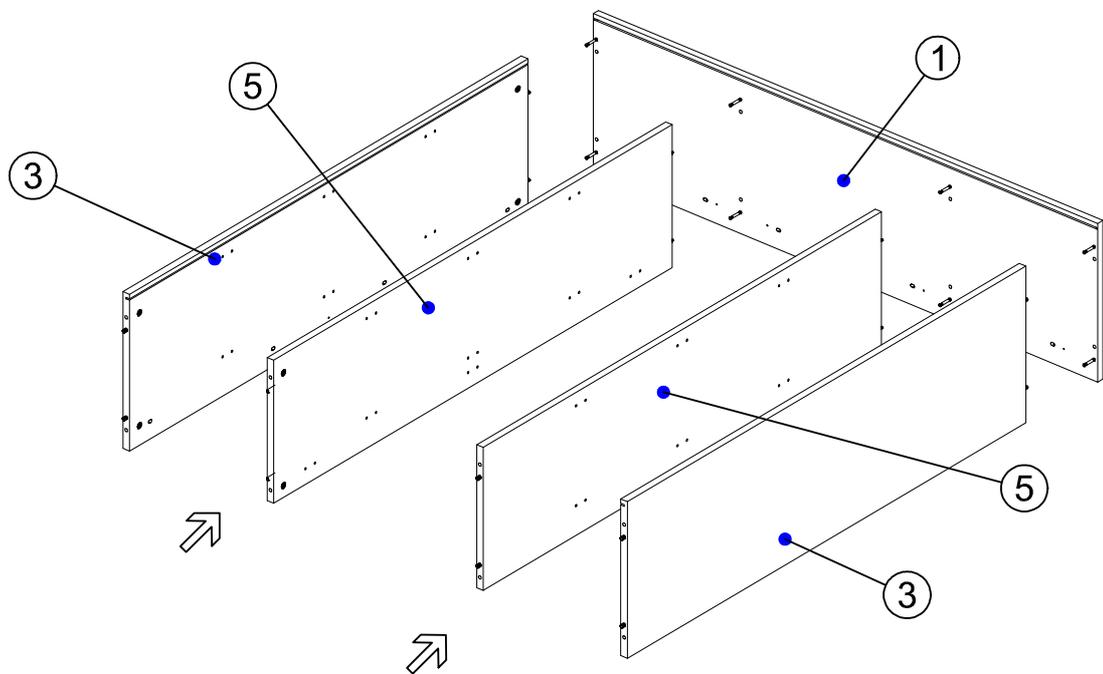


V


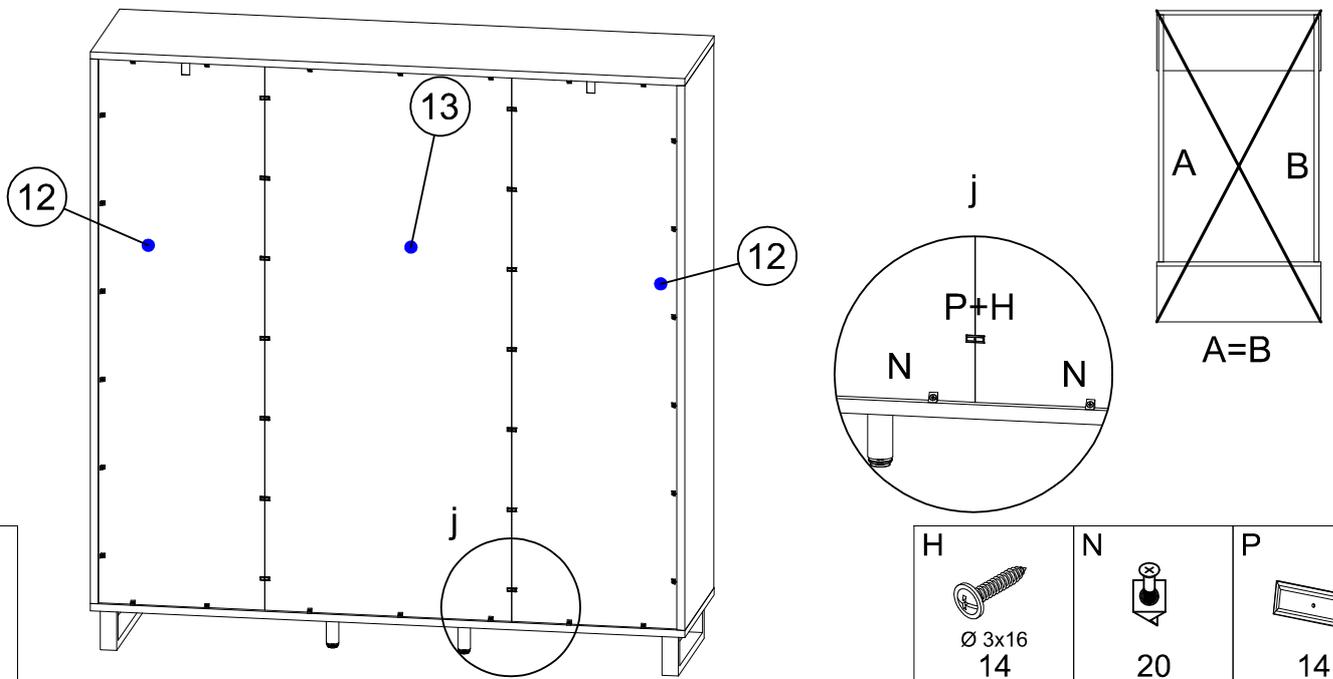


VI

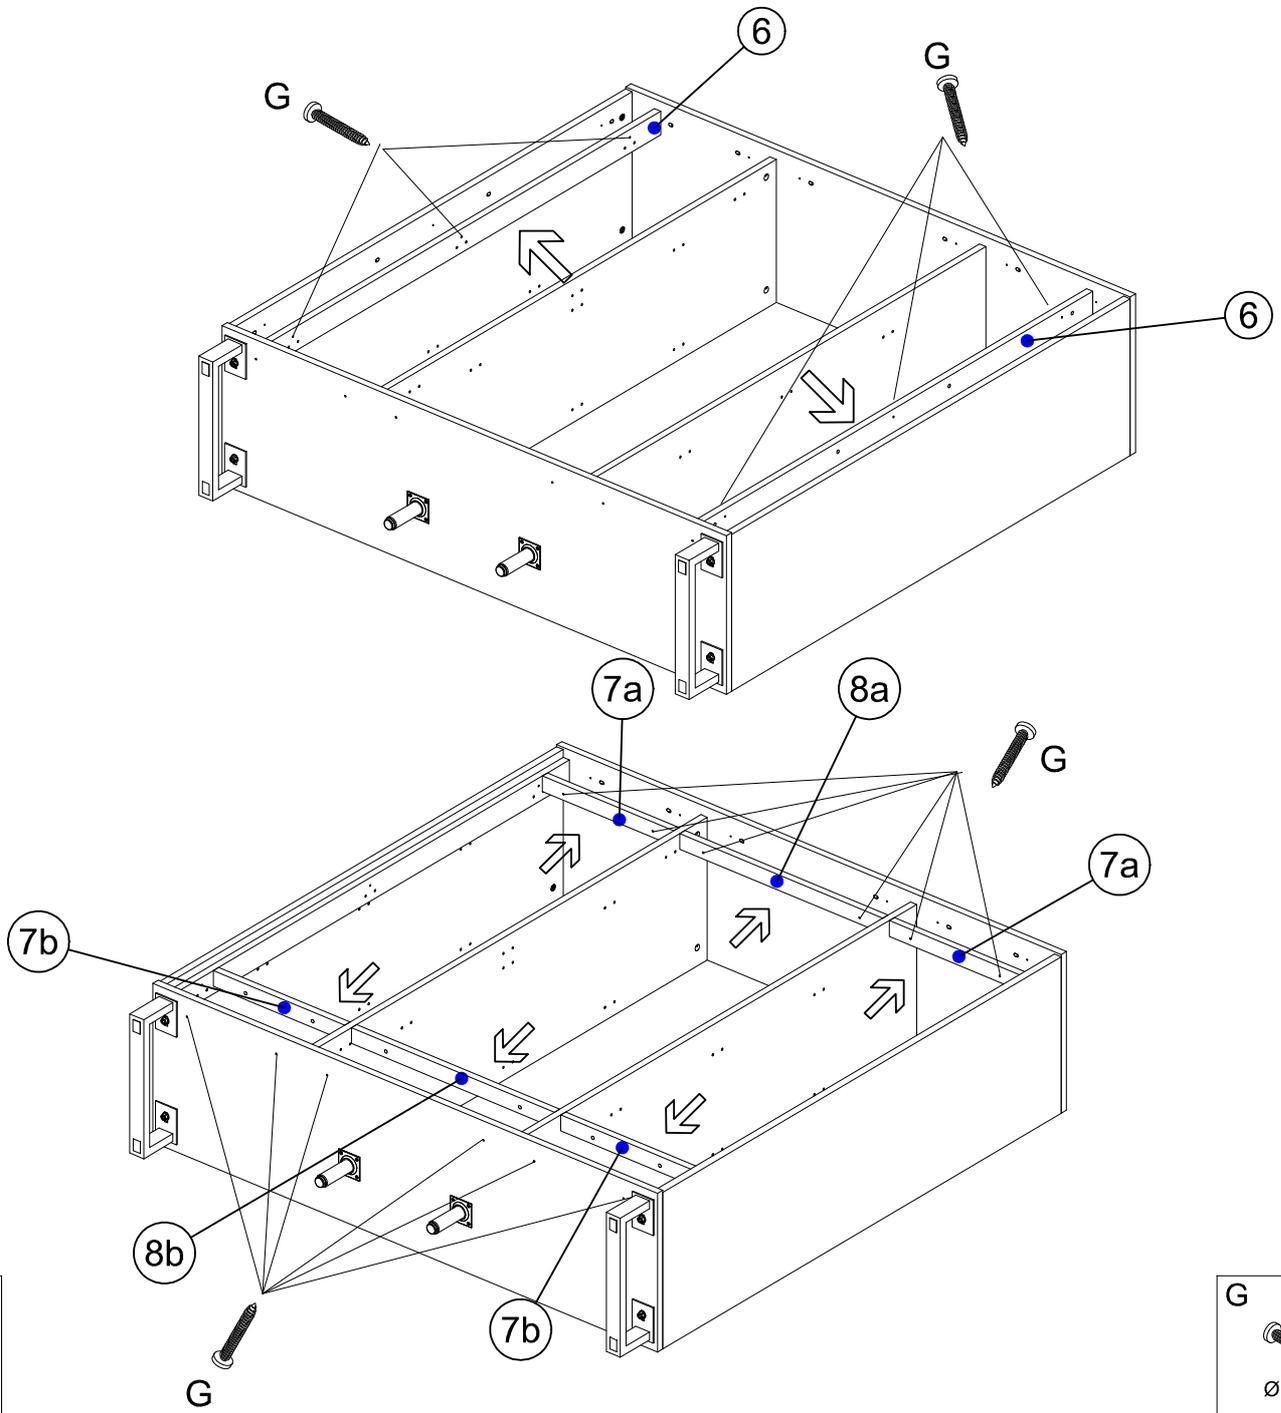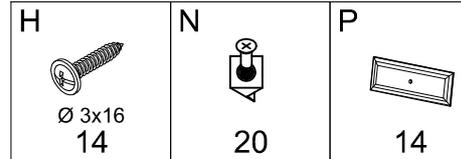


VII

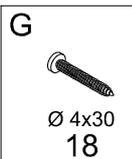

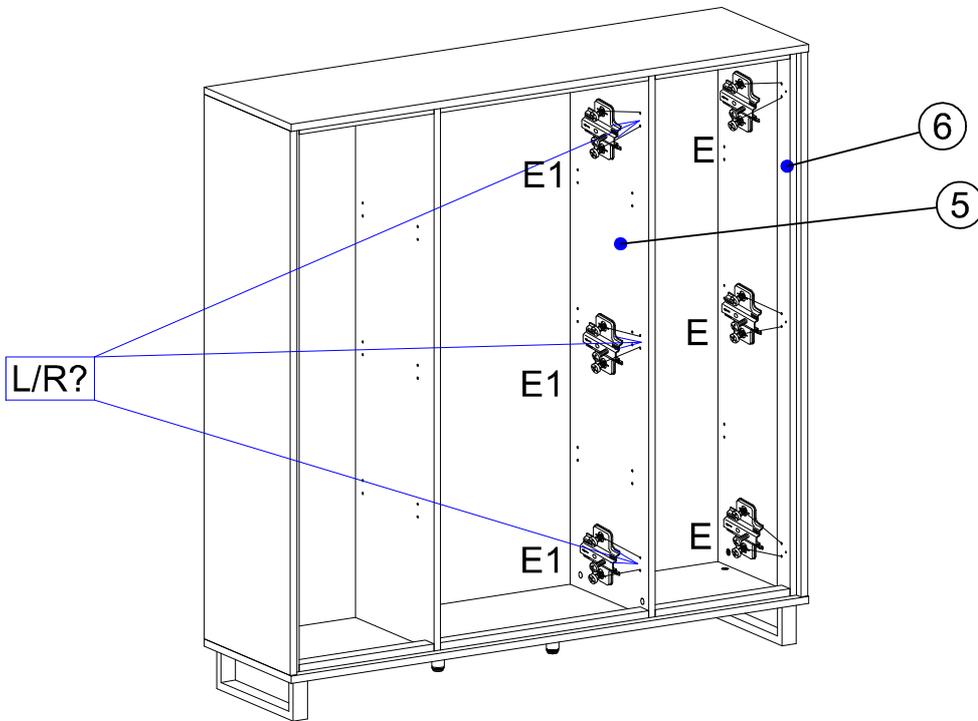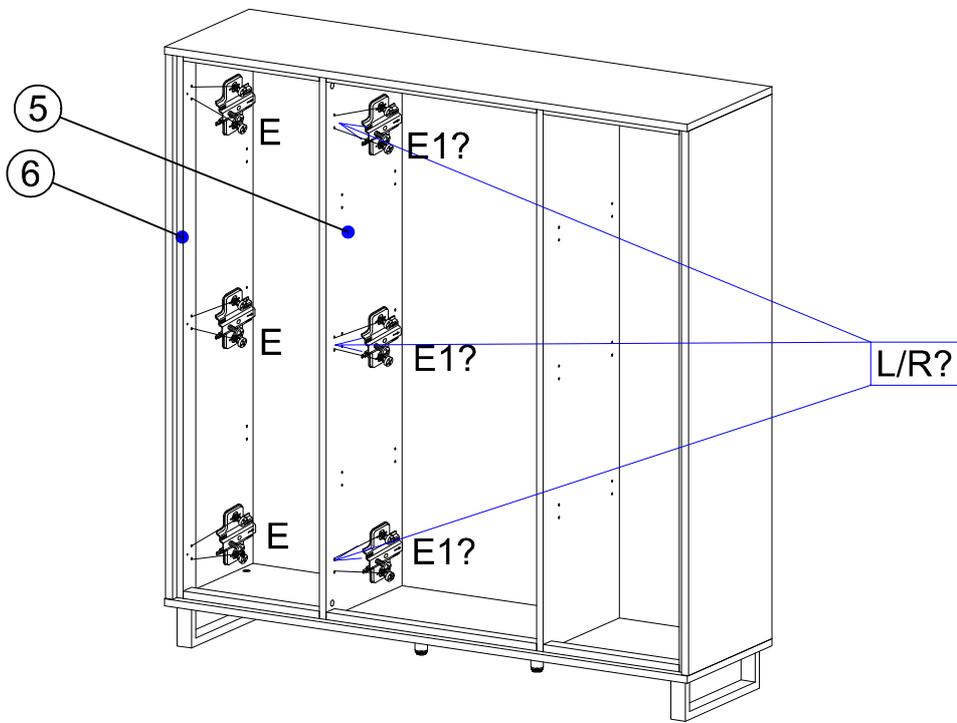


<p><b>E</b></p> <p>Ø 6.3x13</p> <p><b>6</b></p>	<p><b>E1</b></p> <p>Ø 6.3x13</p> <p><b>3</b></p>
---	--

VIII





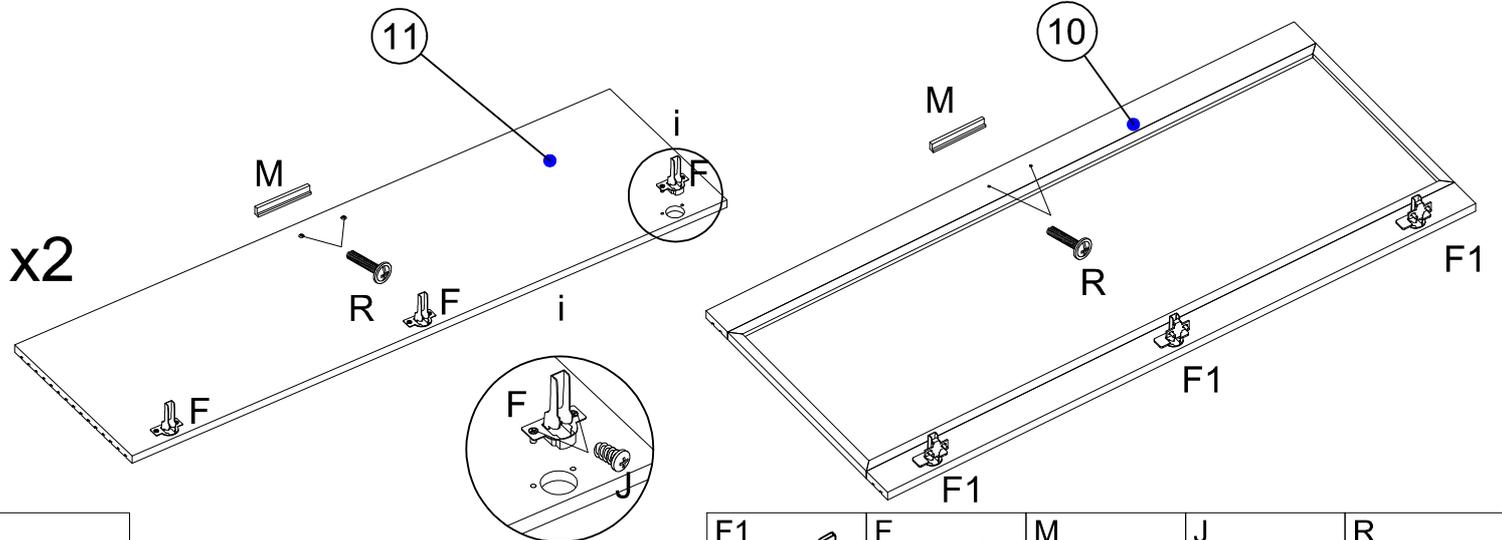


<p><b>F1</b></p> <p><b>3</b></p>	<p><b>F</b></p> <p><b>6</b></p>	<p><b>M</b></p> <p><b>3</b></p>	<p><b>J</b></p> <p>Ø 5x13</p> <p><b>18</b></p>	<p><b>R</b></p> <p>M4x25</p> <p><b>6</b></p>
----------------------------------	---------------------------------	---------------------------------	--	--


IX

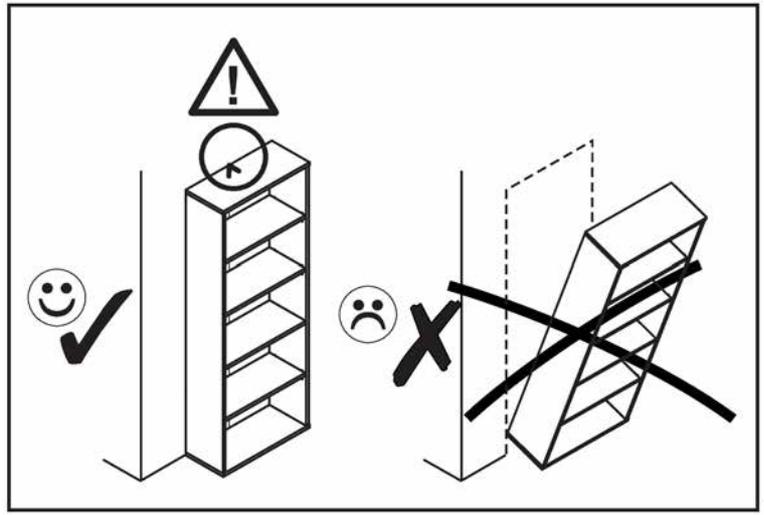


f

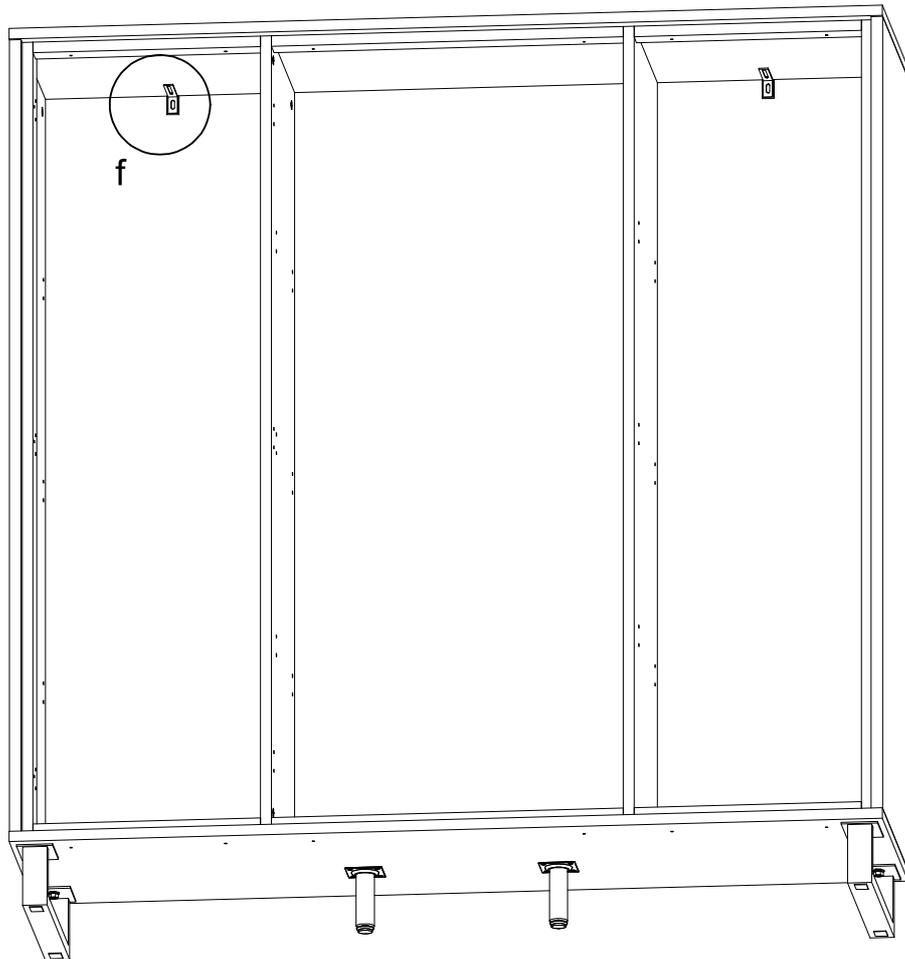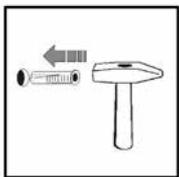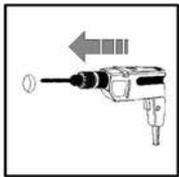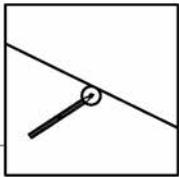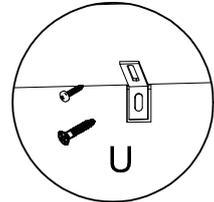


X

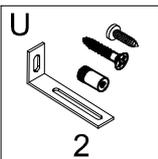

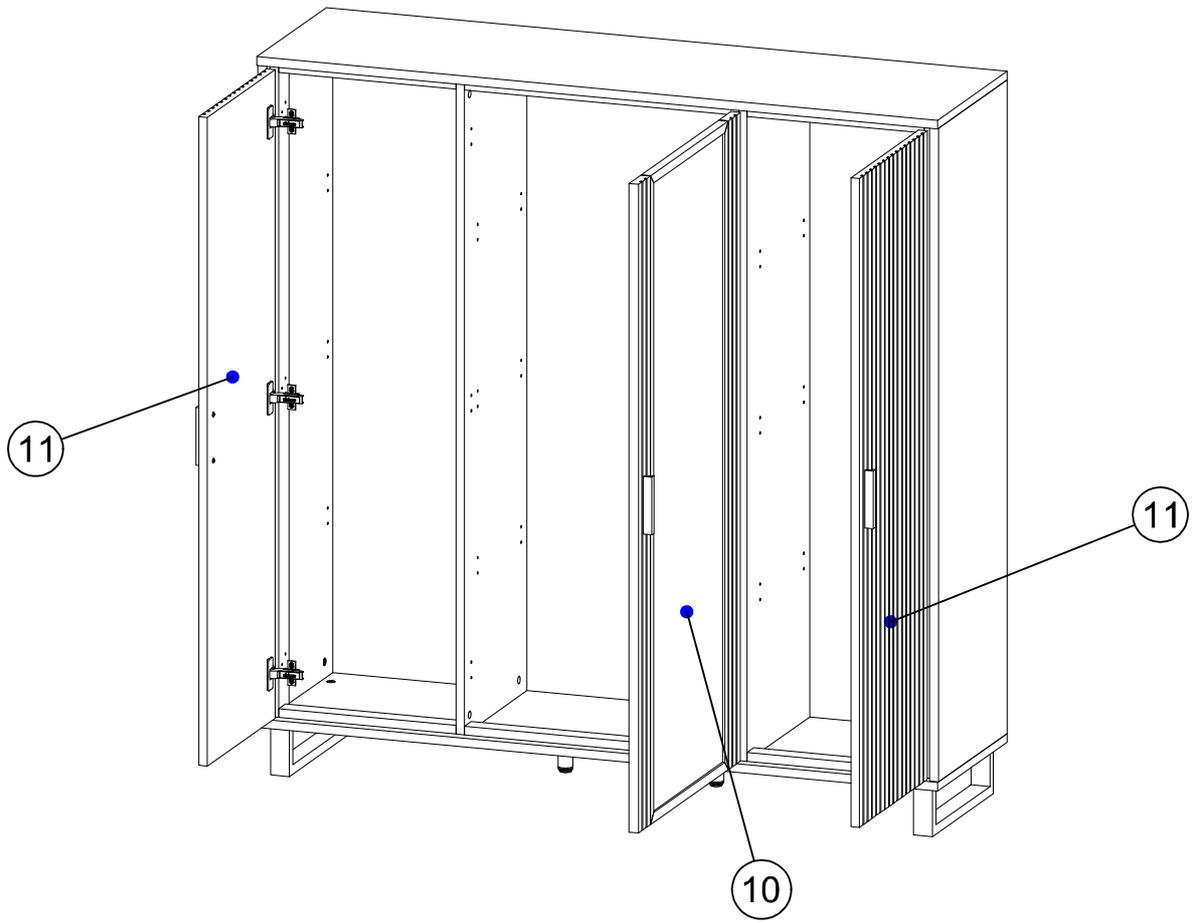

XI

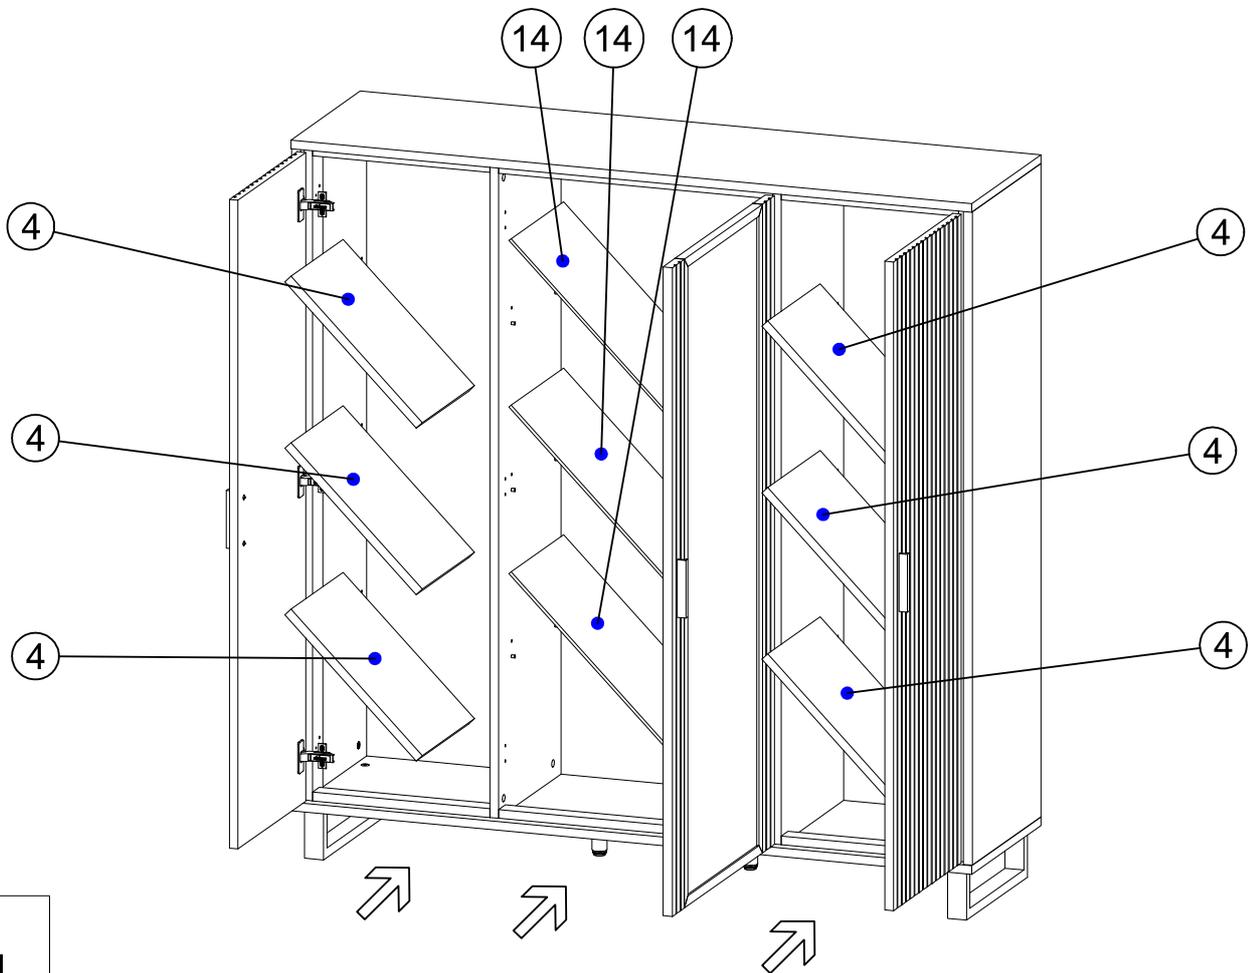

XII

