



# Type 670-101

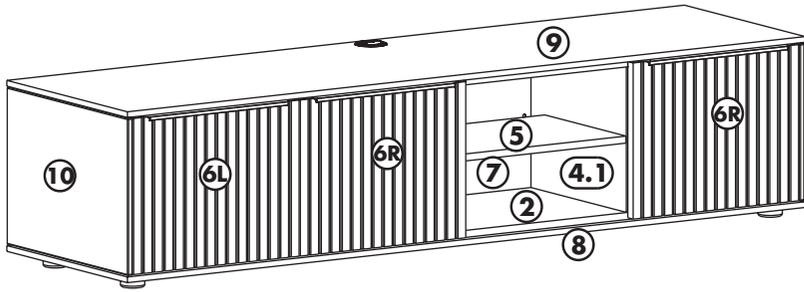

Sie brauchen:  
You need:

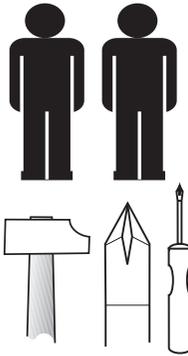

## Wichtige Information!

Sehr geehrter Kunde, lesen Sie bitte vor dem Aufbauen die Montageanleitung sorgfältig durch und überprüfen Sie die Vollständigkeit und Richtigkeit der Möbelteile und Beschläge.

Sollte ein Teil fehlen oder beschädigt sein, wenden Sie sich bitte an Ihren Möbelhändler.

Nehmen Sie die Montage, konsequent nach der in der Montageanleitung angegebenen Reihenfolge vor.

Bewahren Sie die Montageanleitung im eigenen Interesse gut auf!

Nur mit einem Staubtuch oder feuchtem Lappen reinigen.

Keine scheuernde Putzmittel verwenden.

## Important Information!

Dear customer, before you start please read through these instructions and make sure that all the pieces and fittings mentioned are there.

If a piece should be missing or damaged, report this to the store where you purchased this piece of furniture.

Assemble your piece of new furniture using the assembly instructions one step at a time as shown.

After assembly keep these instructions in a safe place, you may need them sometime later!


Only clean with a duster or damp cloth. Don't use strong detergents or solvents.

## Beschlagliste Fittings

CAD und Design  
Light Line 7 670-101 / 11.21



16x ak4a	20x M4 x 23 gs3s	8x 4 x 25 S47	5x fo	24x e2	6x D 6mm d4
6x c3b	12x rh	12x 3 x 20 s7	2x kbs1	6x 1,5 mm tad	
3x 446mm gr32	6x 3 x 20 RW1	1x Ø13 mm Ø8 mm ak1	12x 4 x 16 s4	6x 6,3 x 16 es5	
28x a1	30x Ø8 mm Ø5 mm ak	4x 12 mm 4x e5	24x 8 x 40 p1	5x fu	



## A

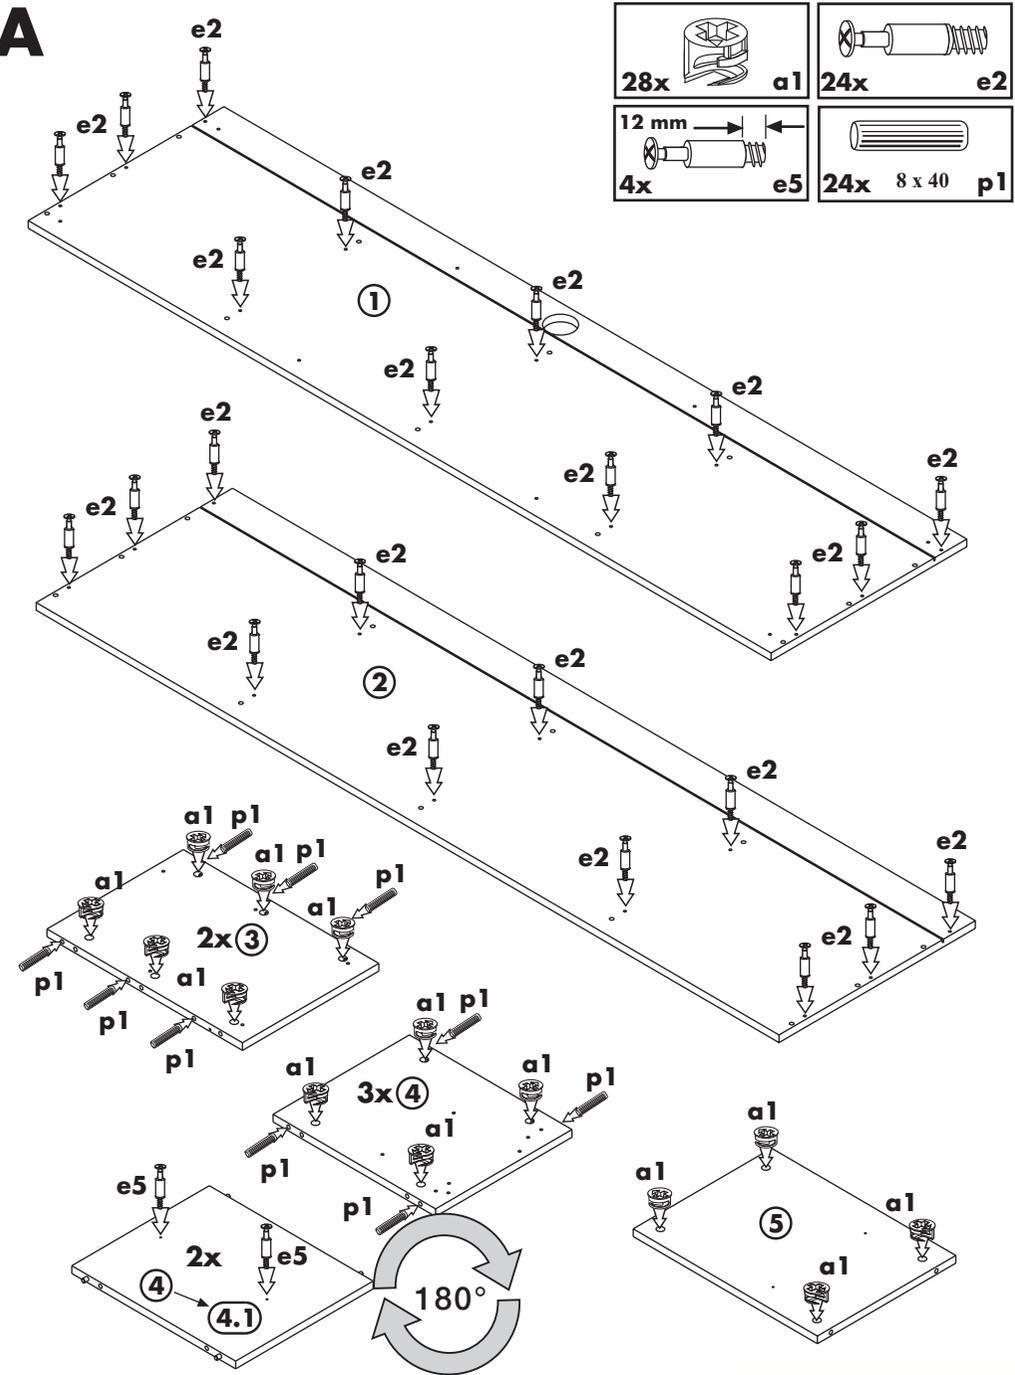



28x a1	24x e2
4x 12 mm 4x e5	24x 8 x 40 p1

**B**



 3x 446mm gr32	 6x c3b	 6x 6,3 x 16 es5
 12x 4 x 16 s4	 6x tad	 6x ak

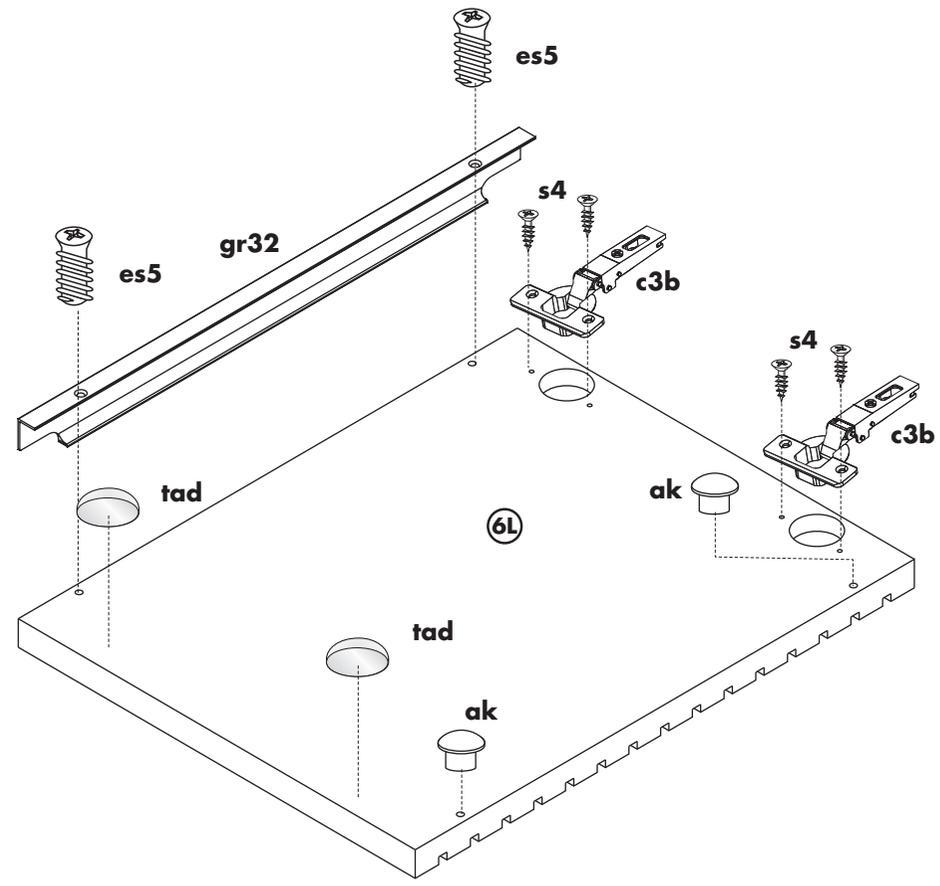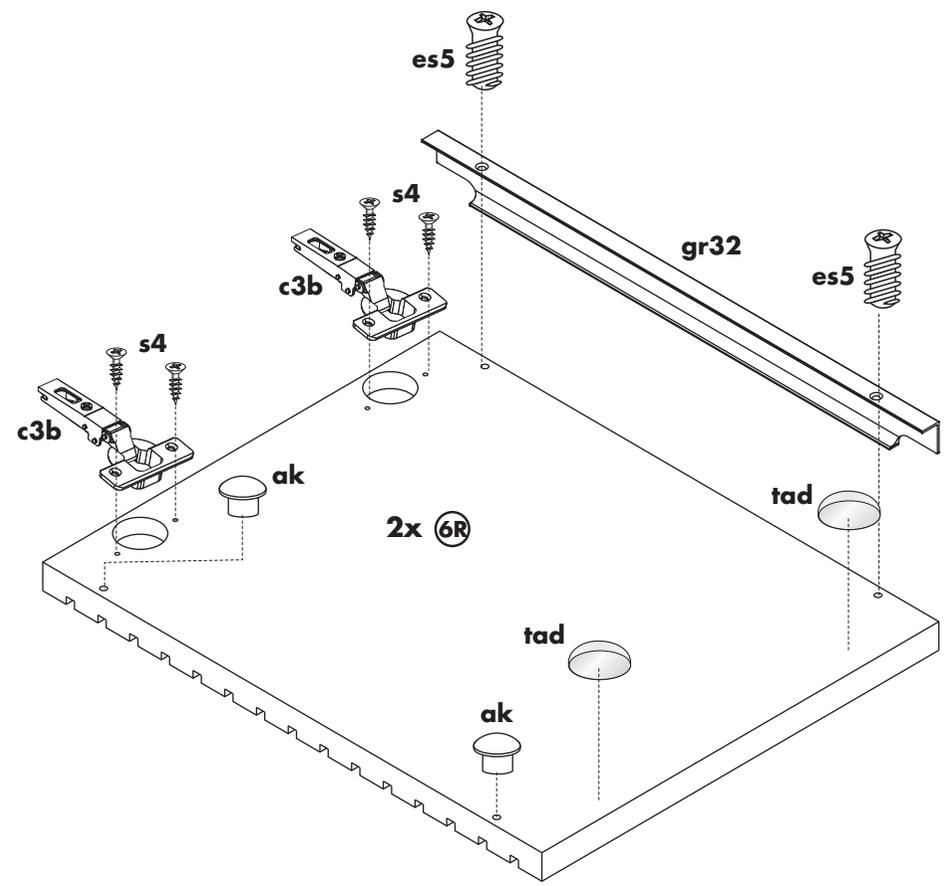


C

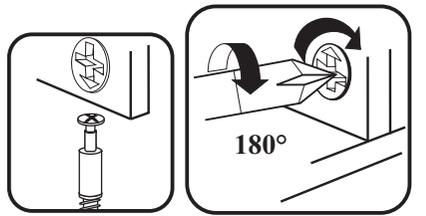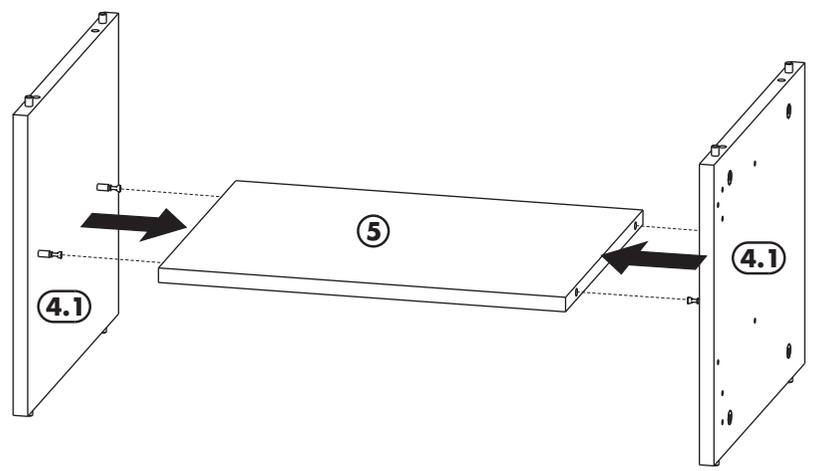



D

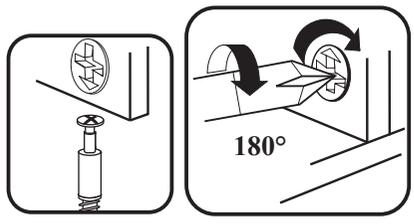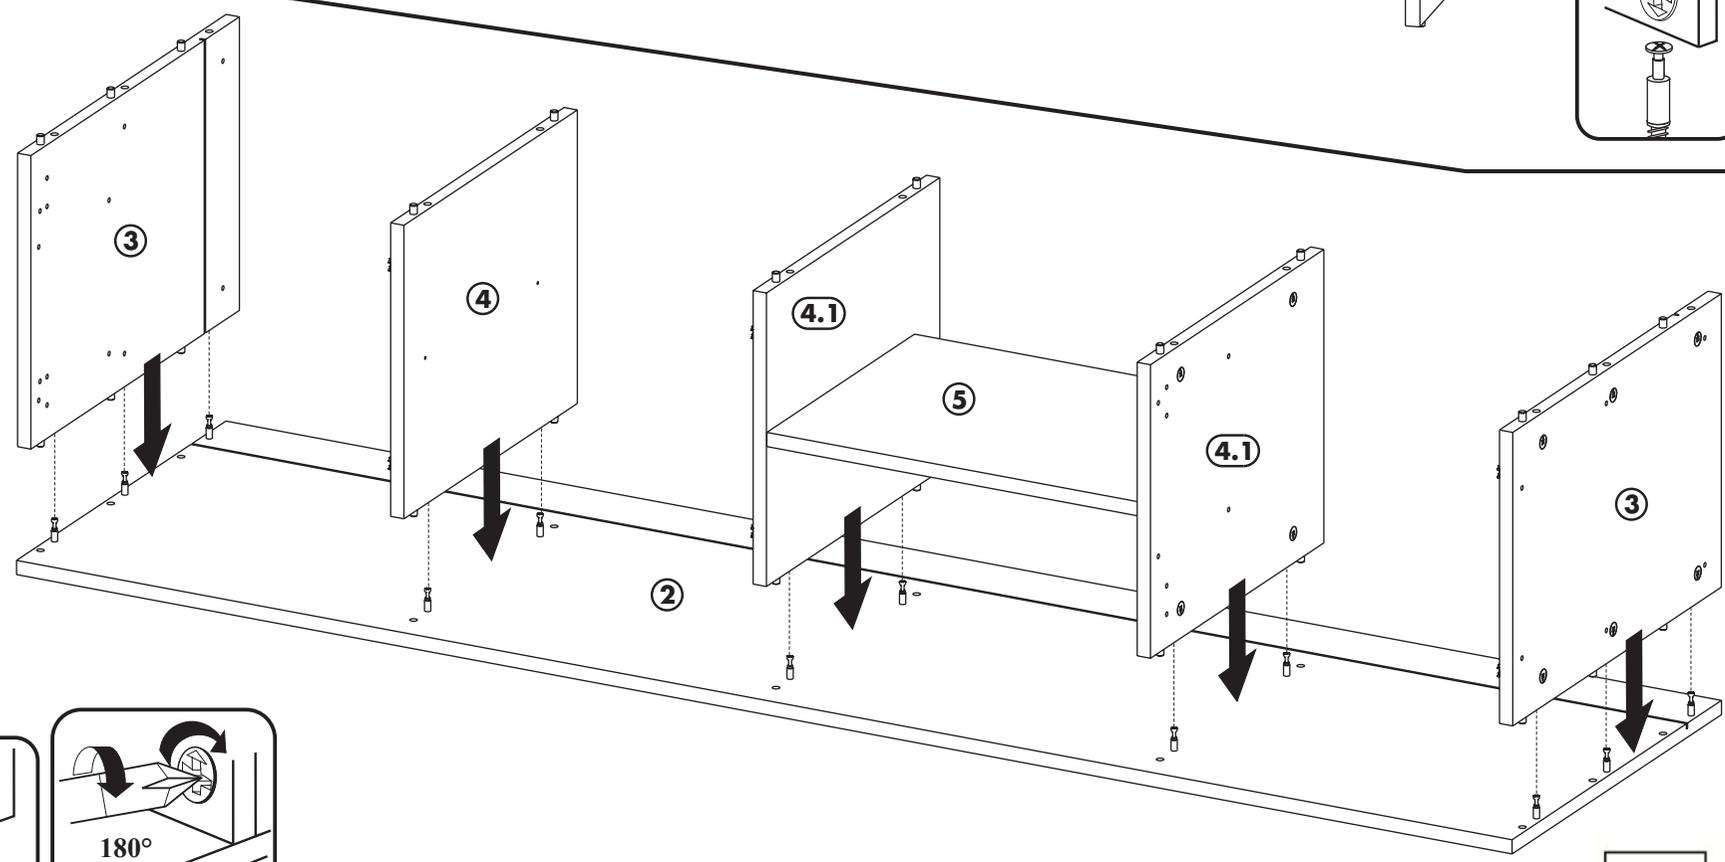

**E**

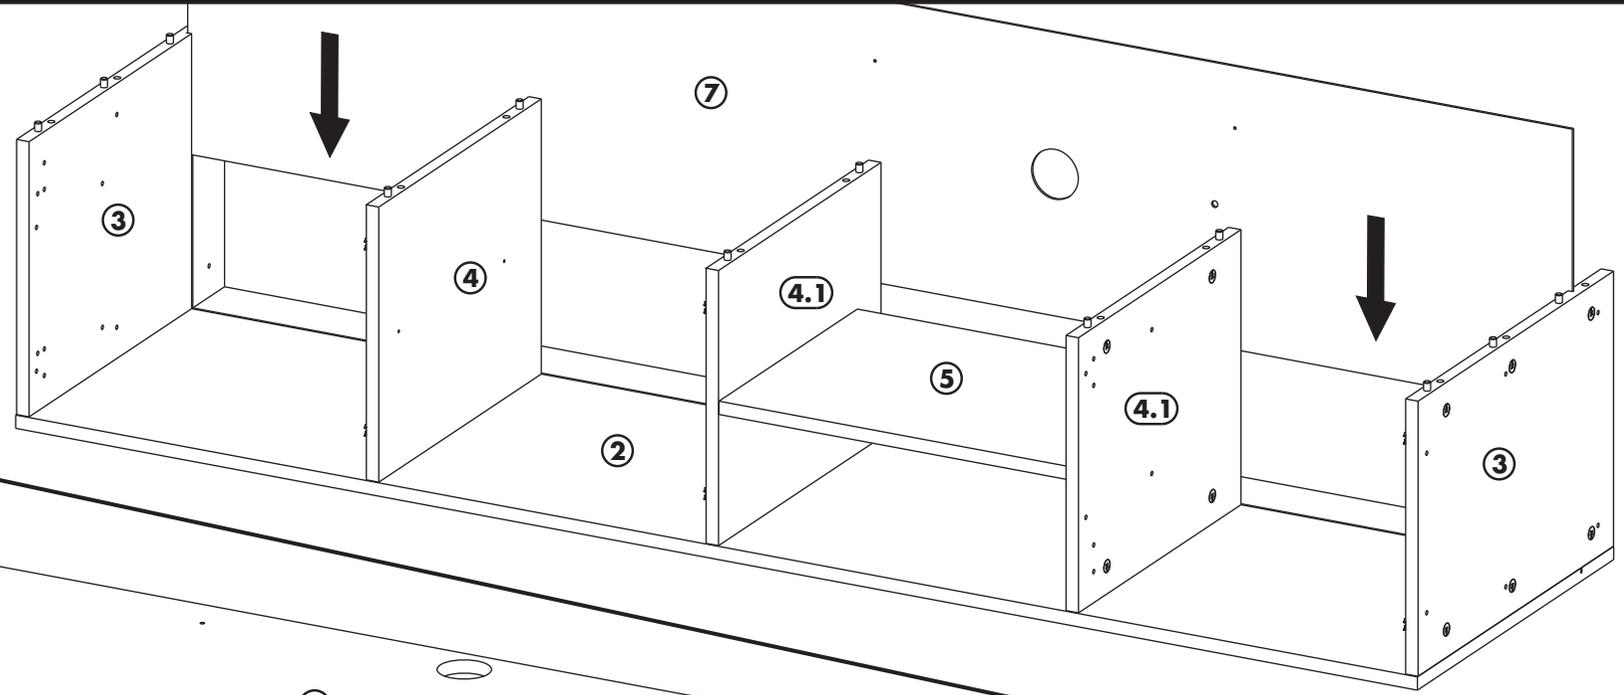


**F**

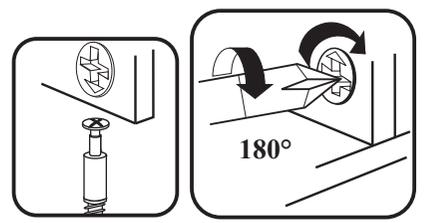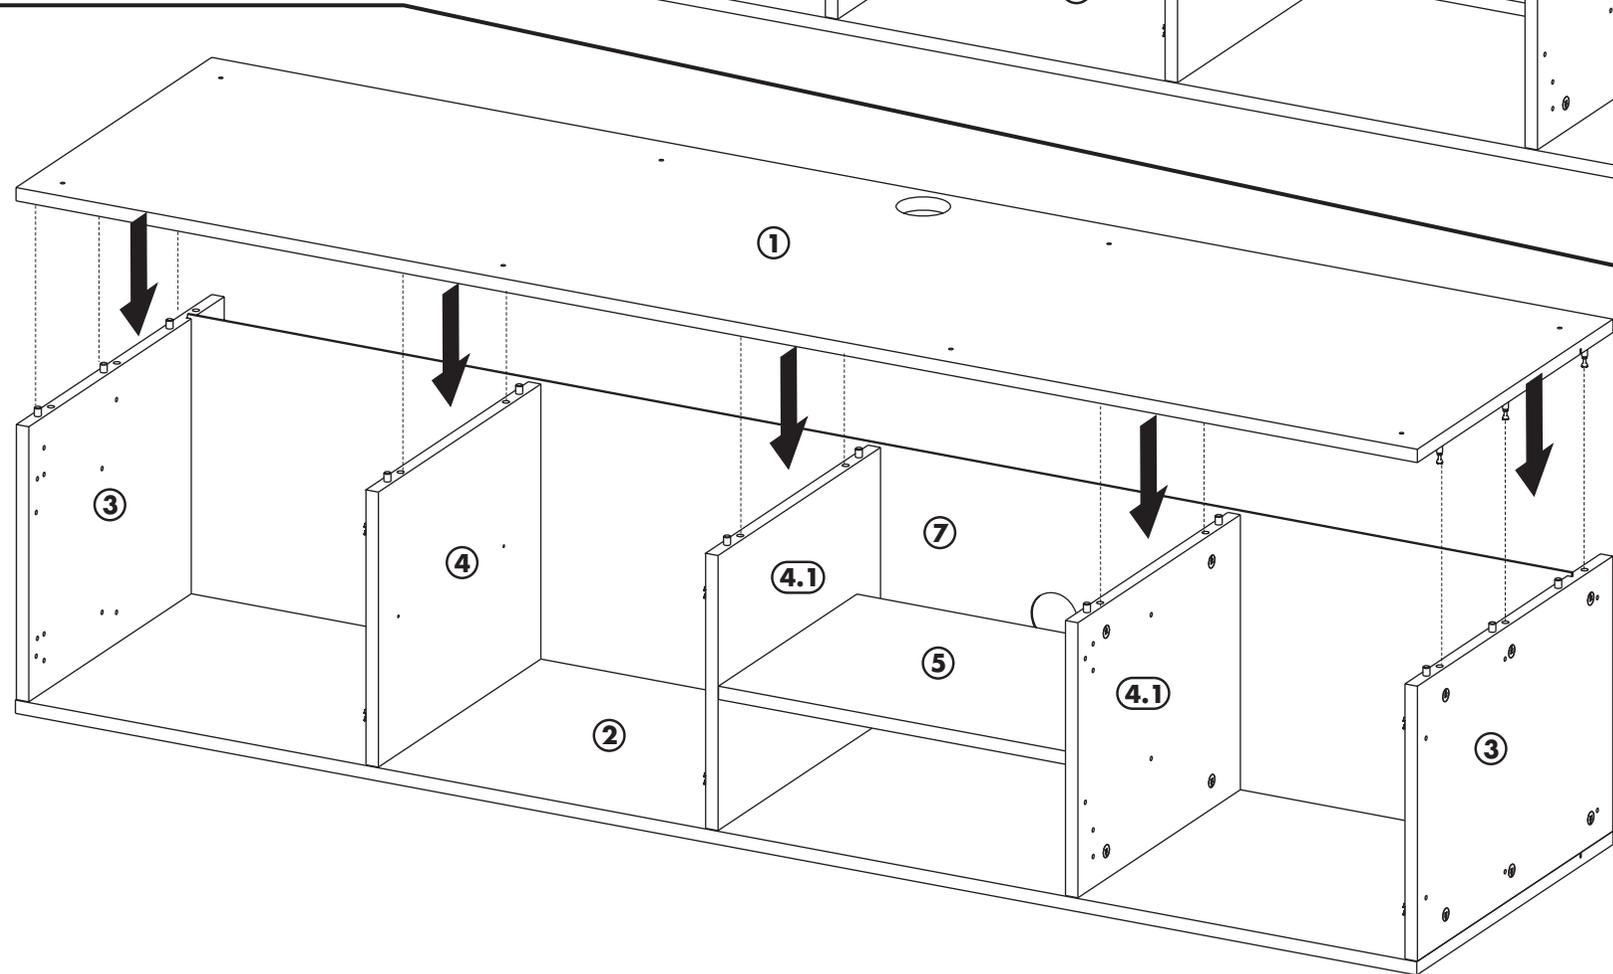


G


	<b>12x</b>	rh		<b>12x</b>	3 x 20	s7
				<b>6x</b>	3 x 20	RW1

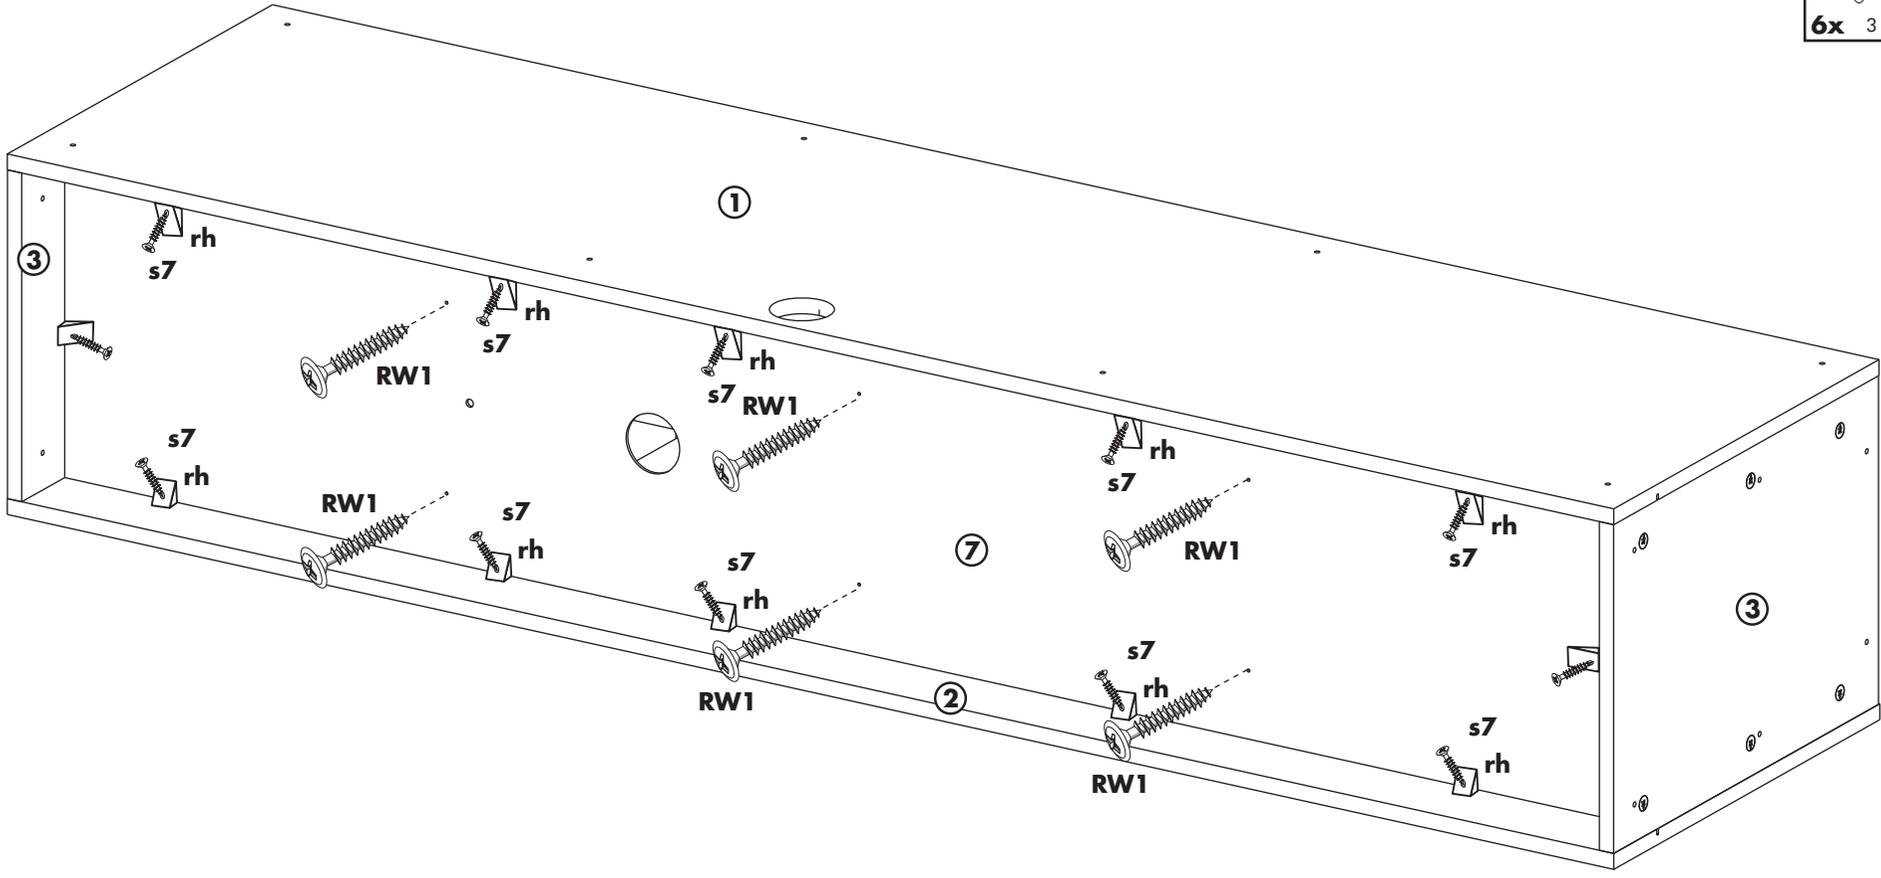

H


		
8x 4 x 25 S47	5x fo	5x fu

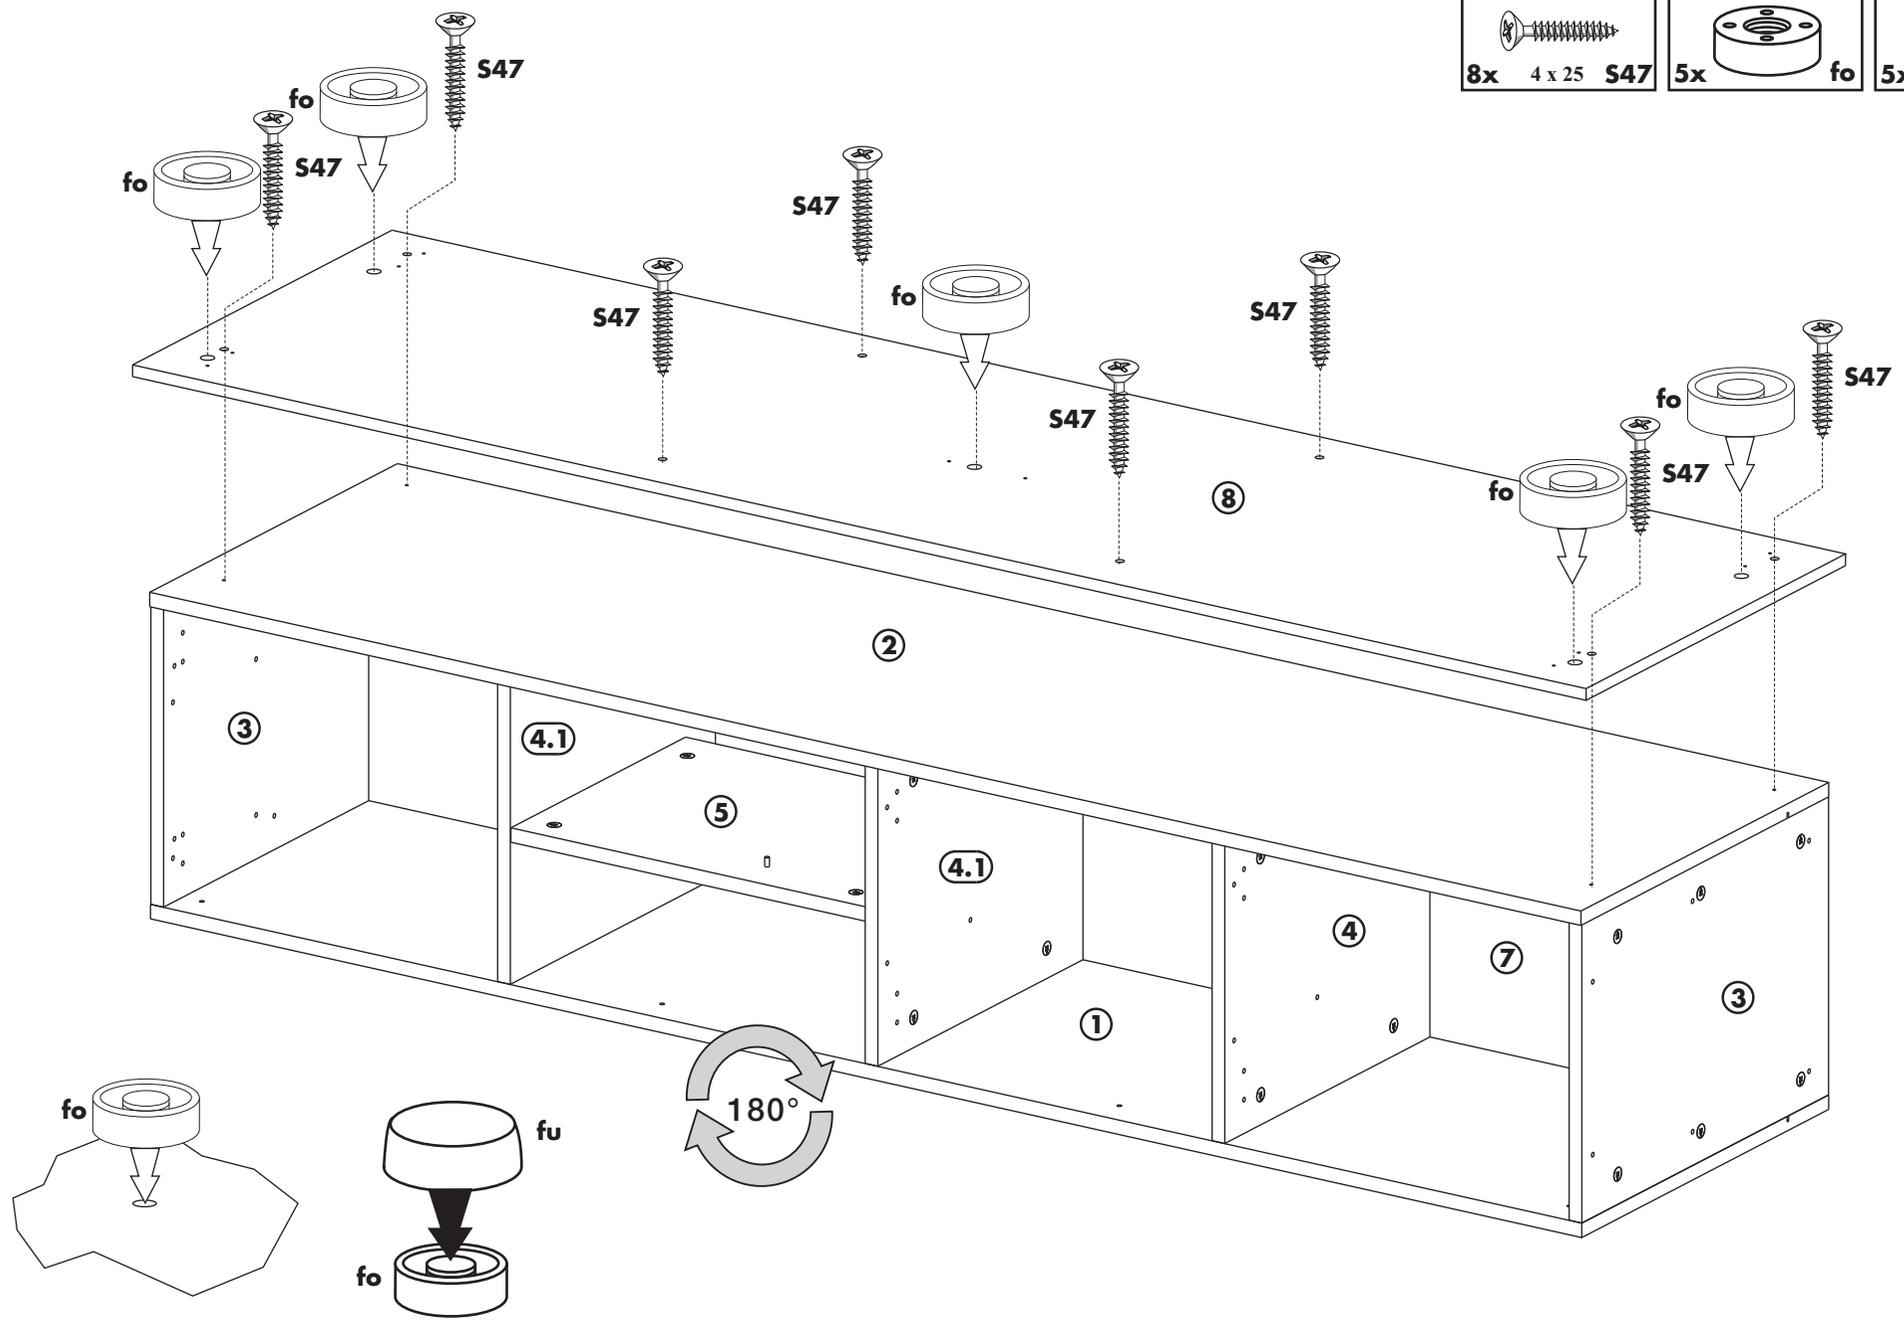


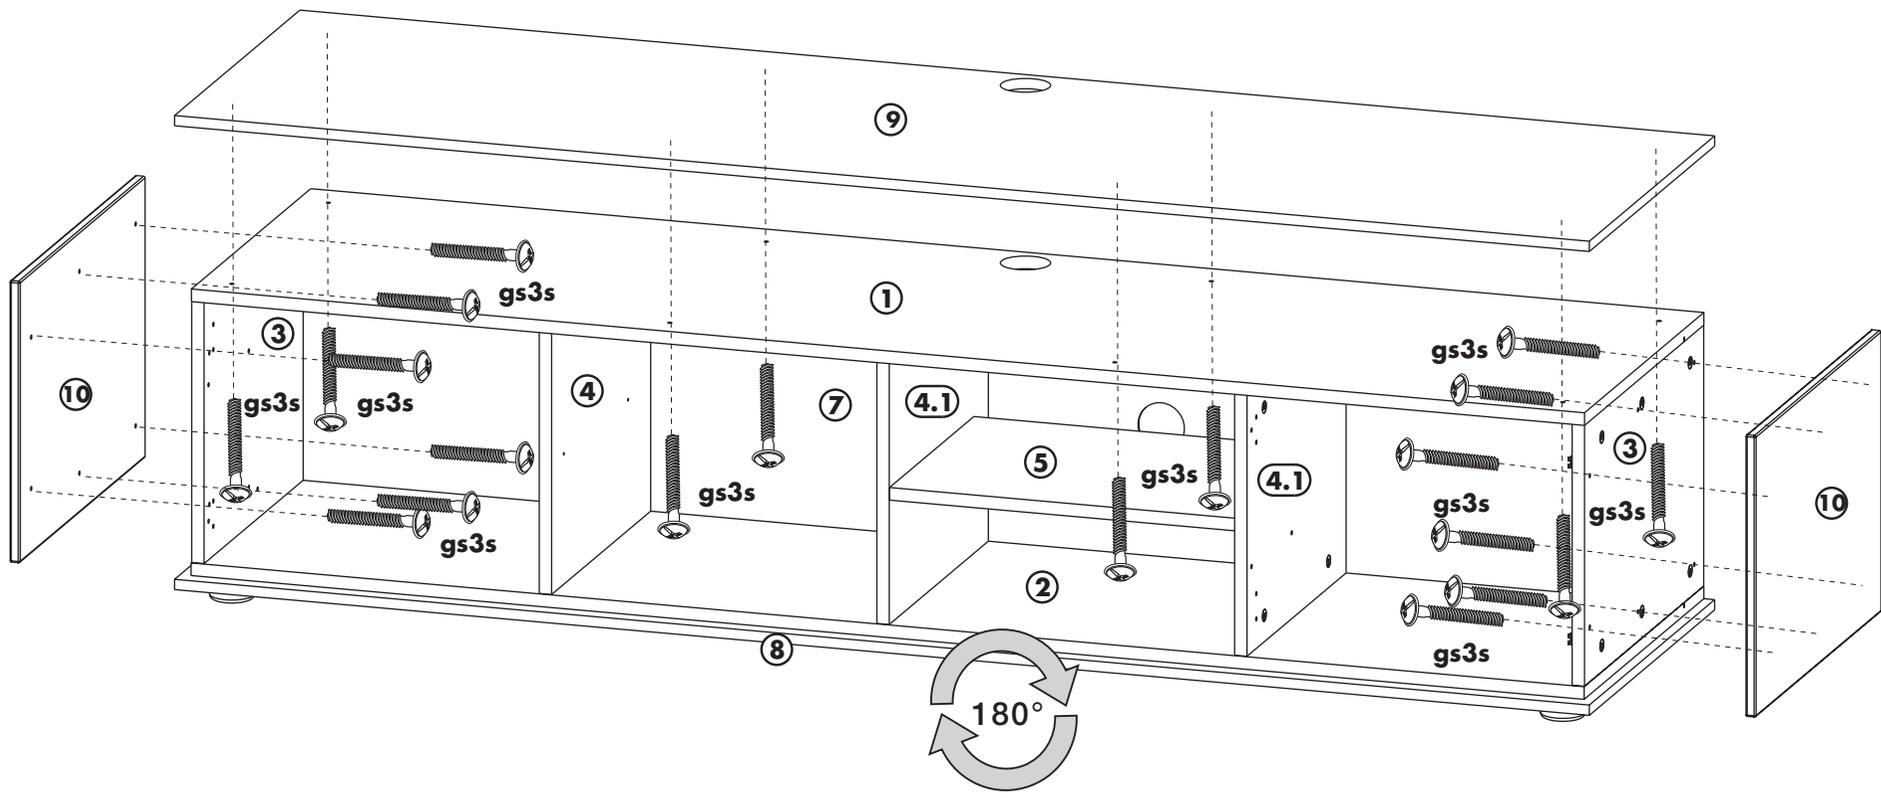




J

2x		kbs1	6x		d4
			D 6mm		

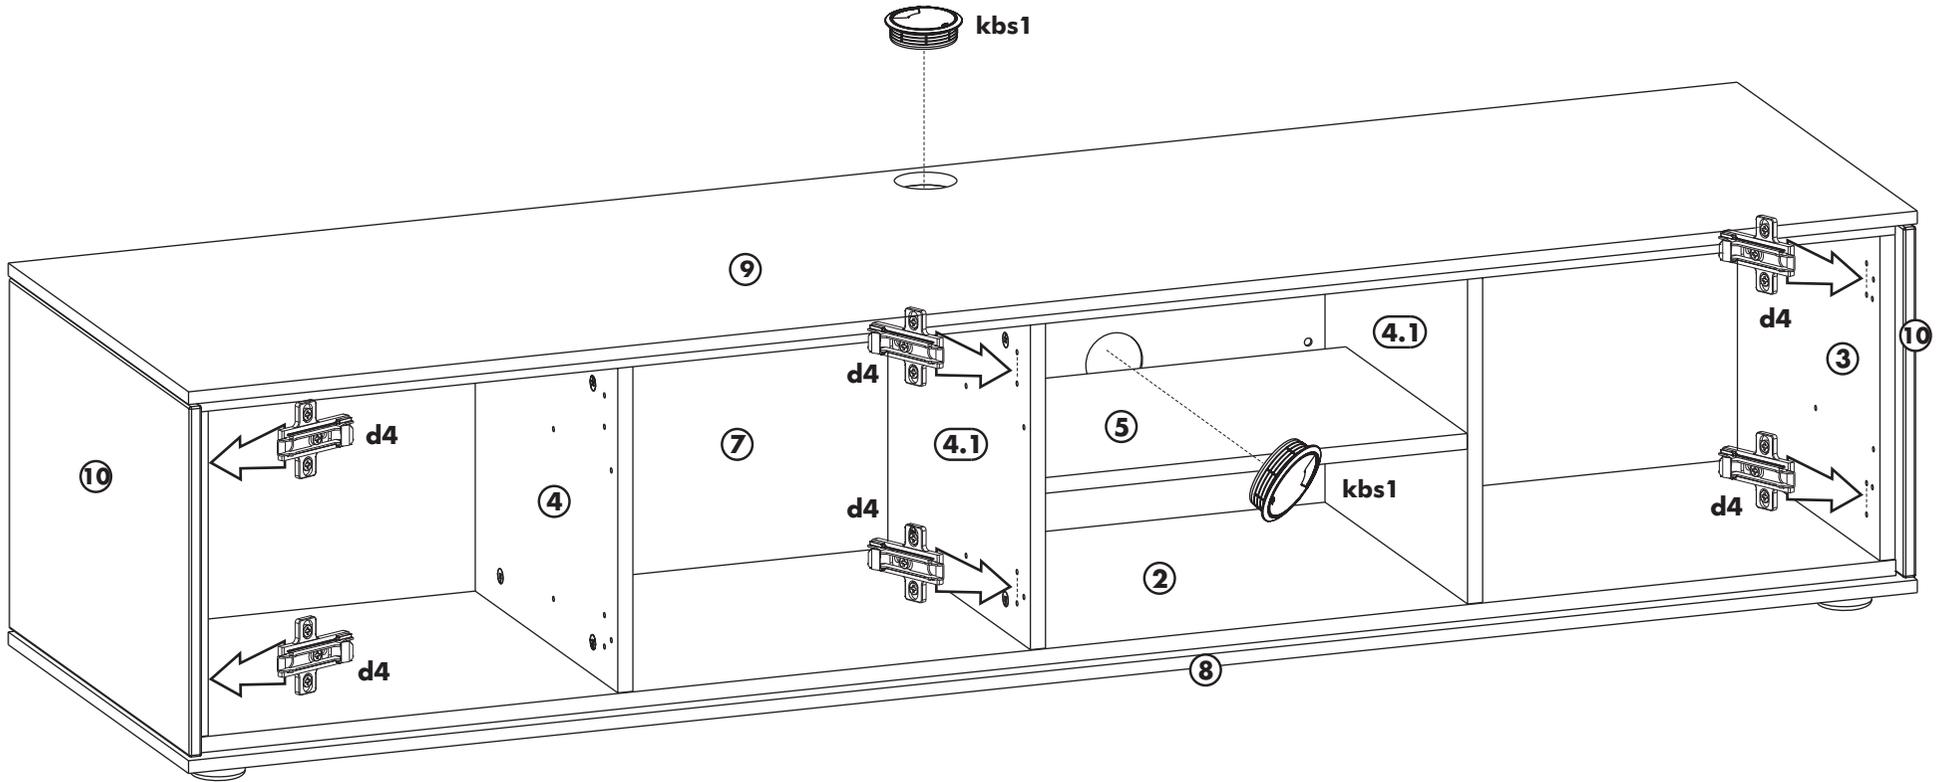



**K**

	
24x	16x
ak	ak4a
	
1x	ak1

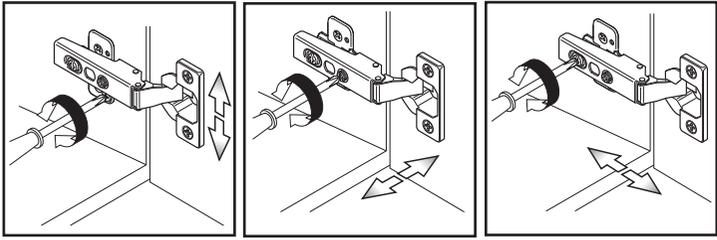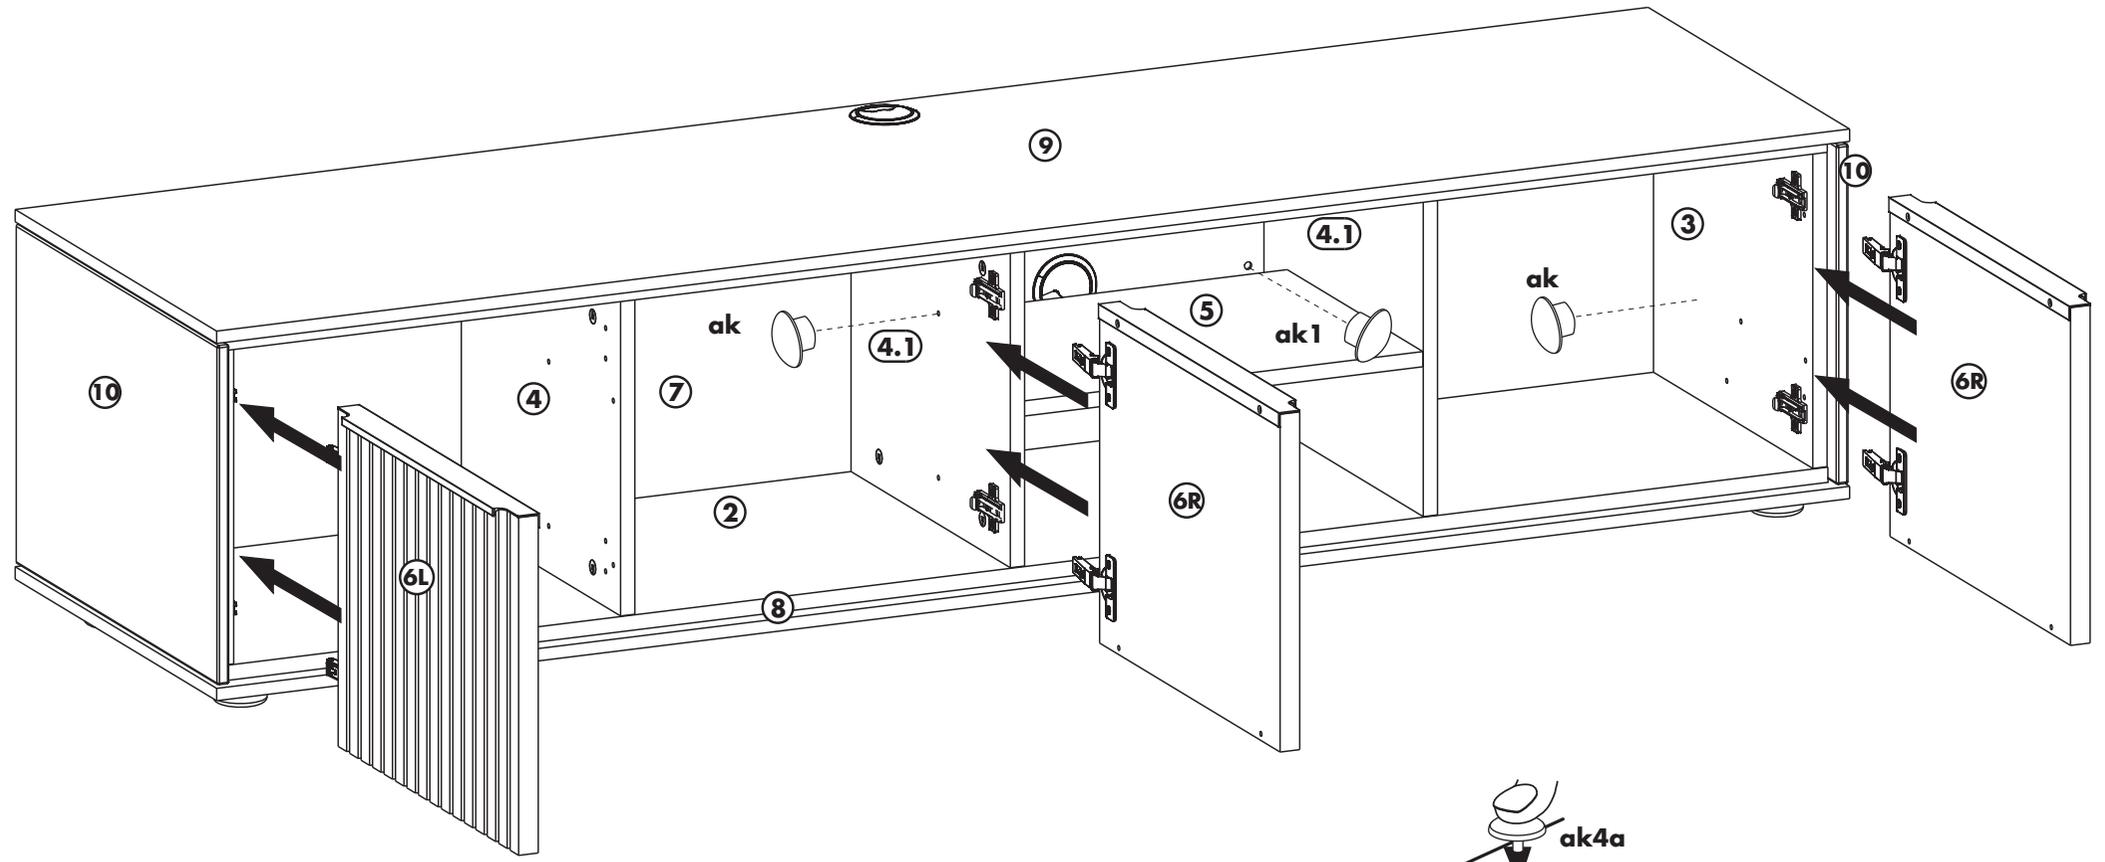

Type 620-950  
 Type 670-950  
 Type 690-950

Sie brauchen:  
 You need:

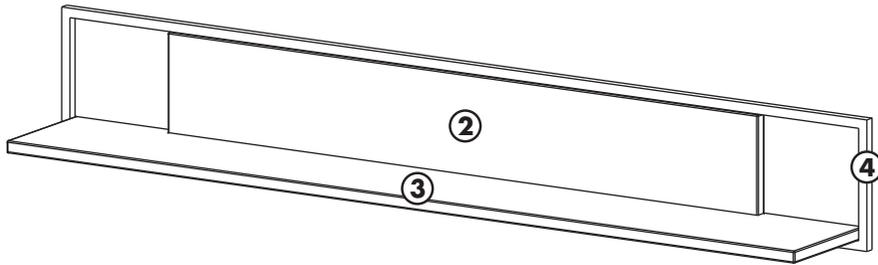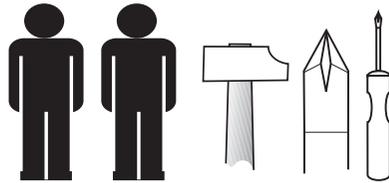

**Wichtige Information!**

Sehr geehrter Kunde, lesen Sie bitte vor dem Aufbauen die Montageanleitung sorgfältig durch und überprüfen Sie die Vollständigkeit und Richtigkeit der Möbelteile und Beschläge.

Sollte ein Teil fehlen oder beschädigt sein, wenden Sie sich bitte an Ihren Möbelhändler.

Nehmen Sie die Montage, konsequent nach der in der Montageanleitung angegebenen Reihenfolge vor.

Bewahren Sie die Montageanleitung im eigenen Interesse gut auf!

Nur mit einem Staubtuch oder feuchtem Lappen reinigen.

Keine scheuernde Putzmittel verwenden.

**Important Information!**

Dear customer, before you start please read through these instructions and make sure that all the pieces and fittings mentioned are there.

If a piece should be missing or damaged, report this to the store where you purchased this piece of furniture .

Assemble your piece of new furniture using the assembly instructions one step at a time as shown.

After assembly keep these instructions in a safe place, you may need them sometime later!


Only clean with a duster or damp cloth. Don't use strong detergents or solvents.

Beschlagliste  
 Fittings

CAD und Design  
 Aarhus 690-950 / 10.21


6x 3,5 x 16 s25	2x ESM	2x RS	3x ph
3x sh	12x 4,0 x 30 s62	5x 7,0x60 vs1	8x 3,5 x 17 s73
			3x wd

**A**

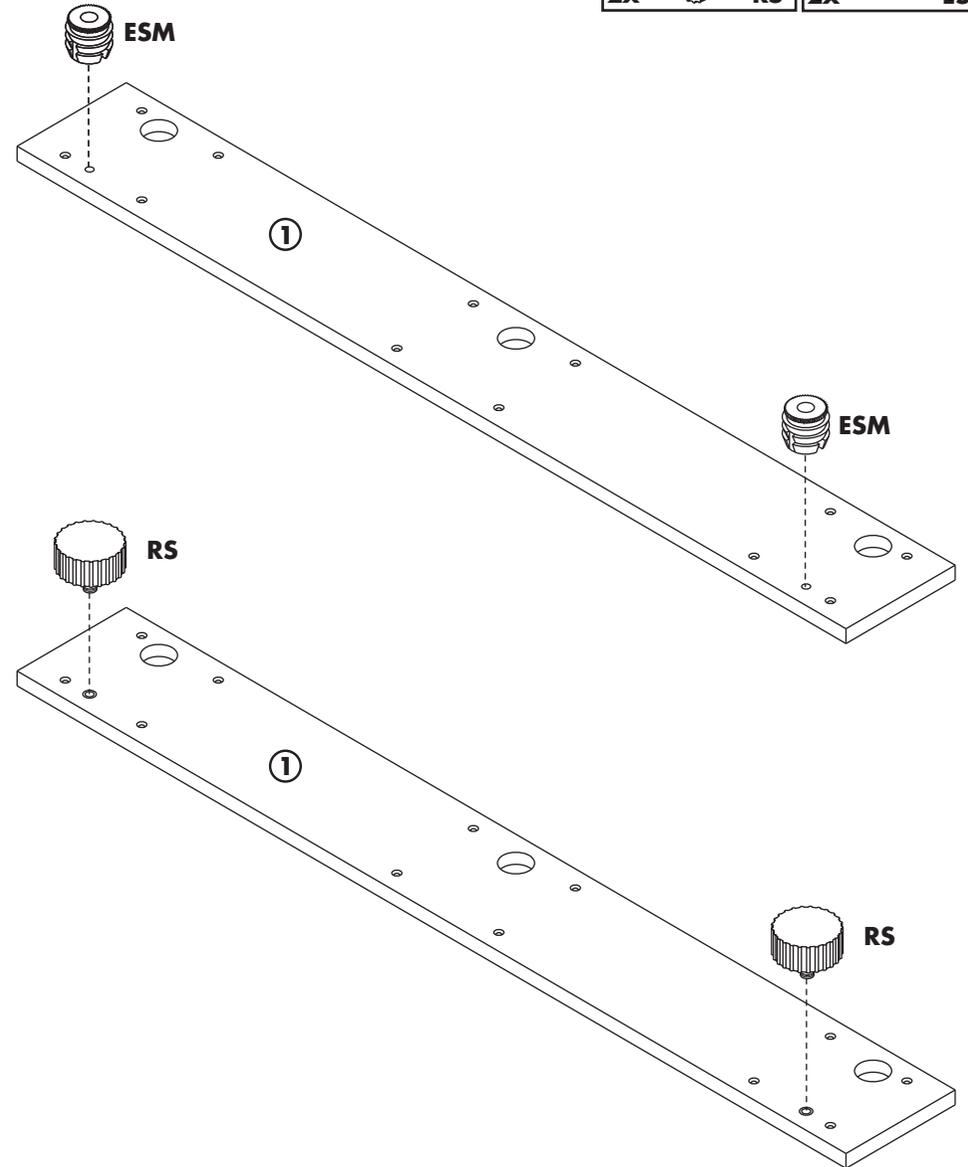




**D**

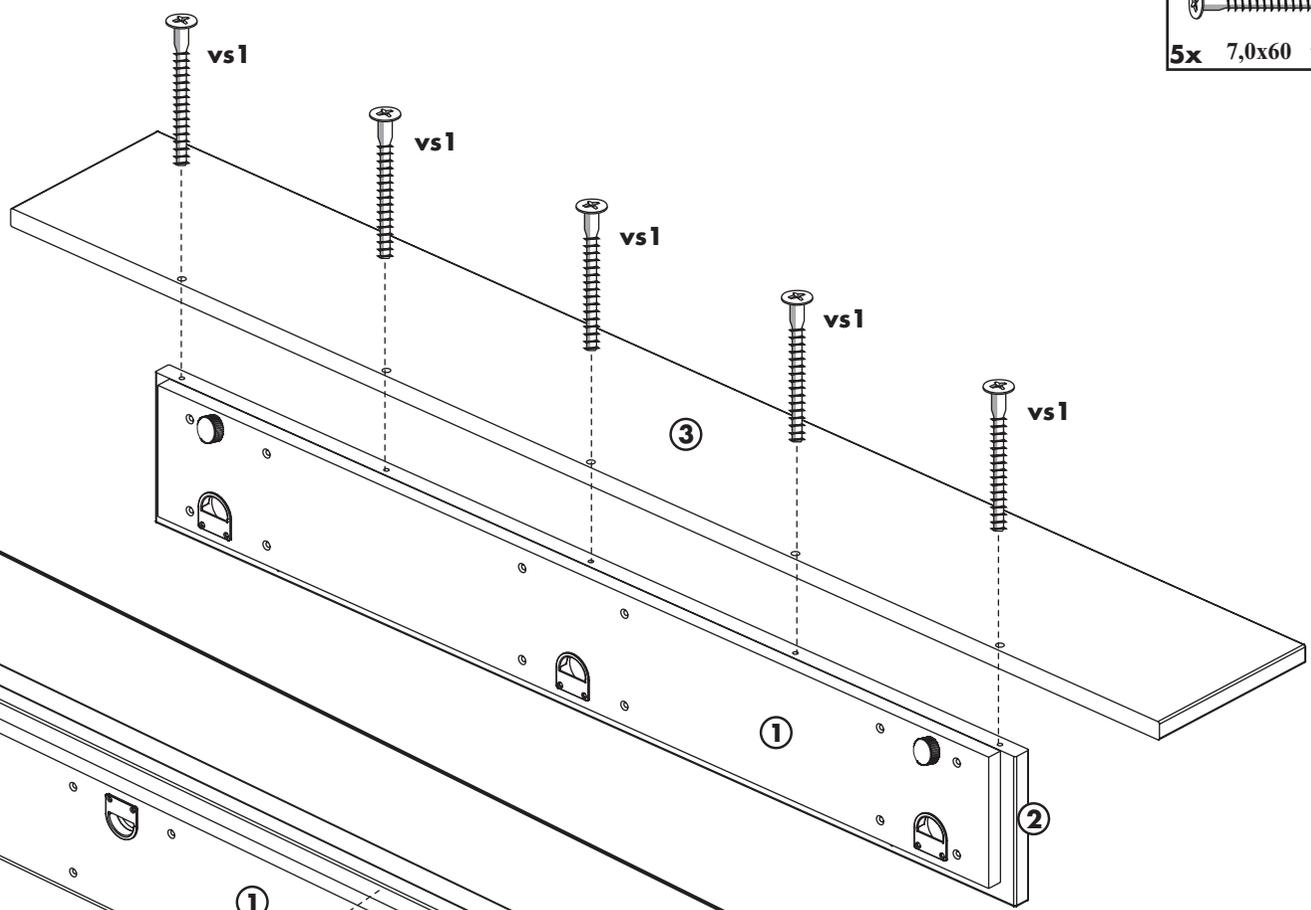

**E**

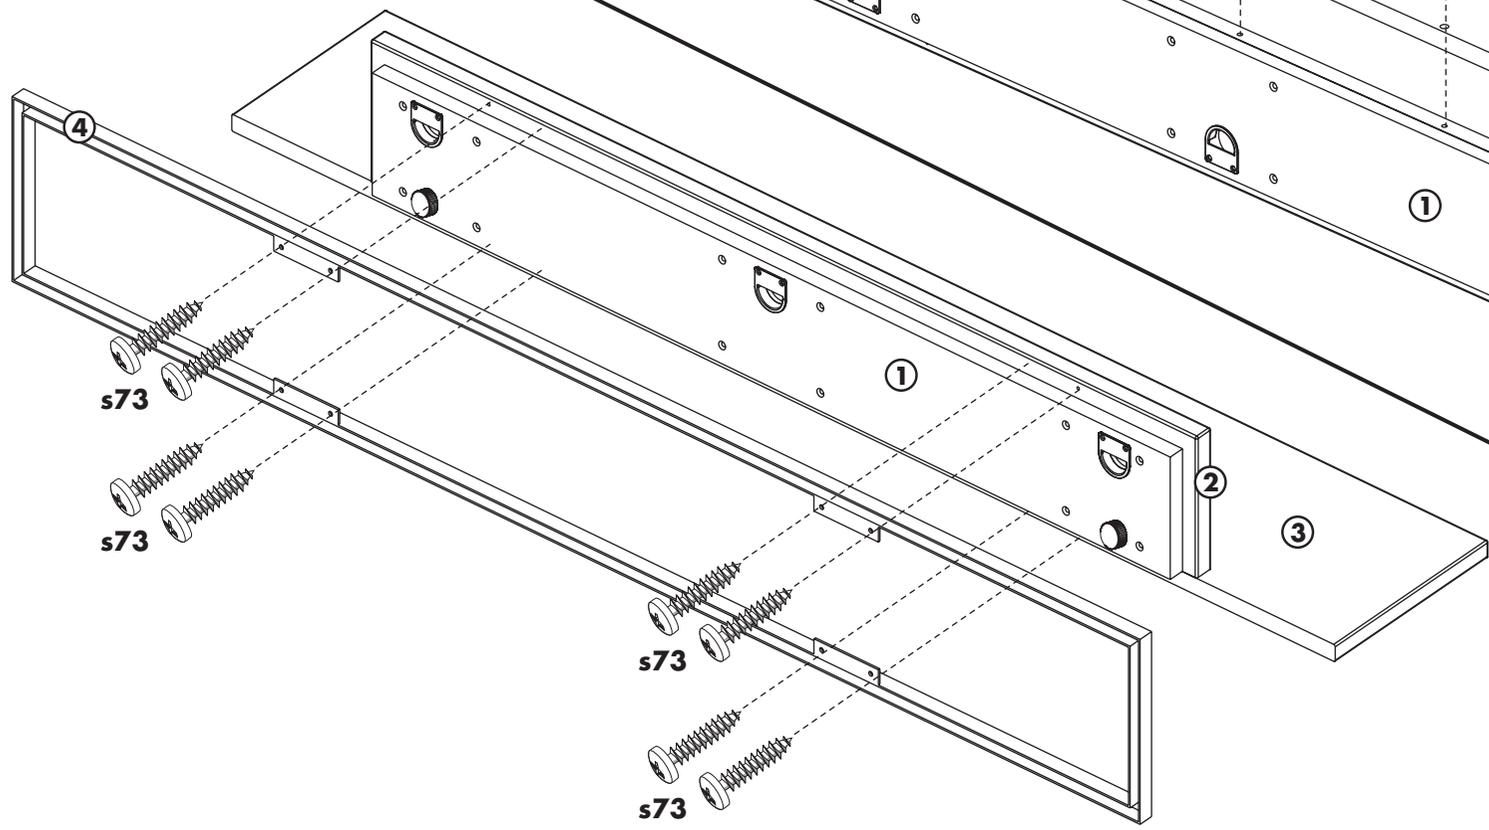

F

