



"2331"

versionsnummer:

06.2015


Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.

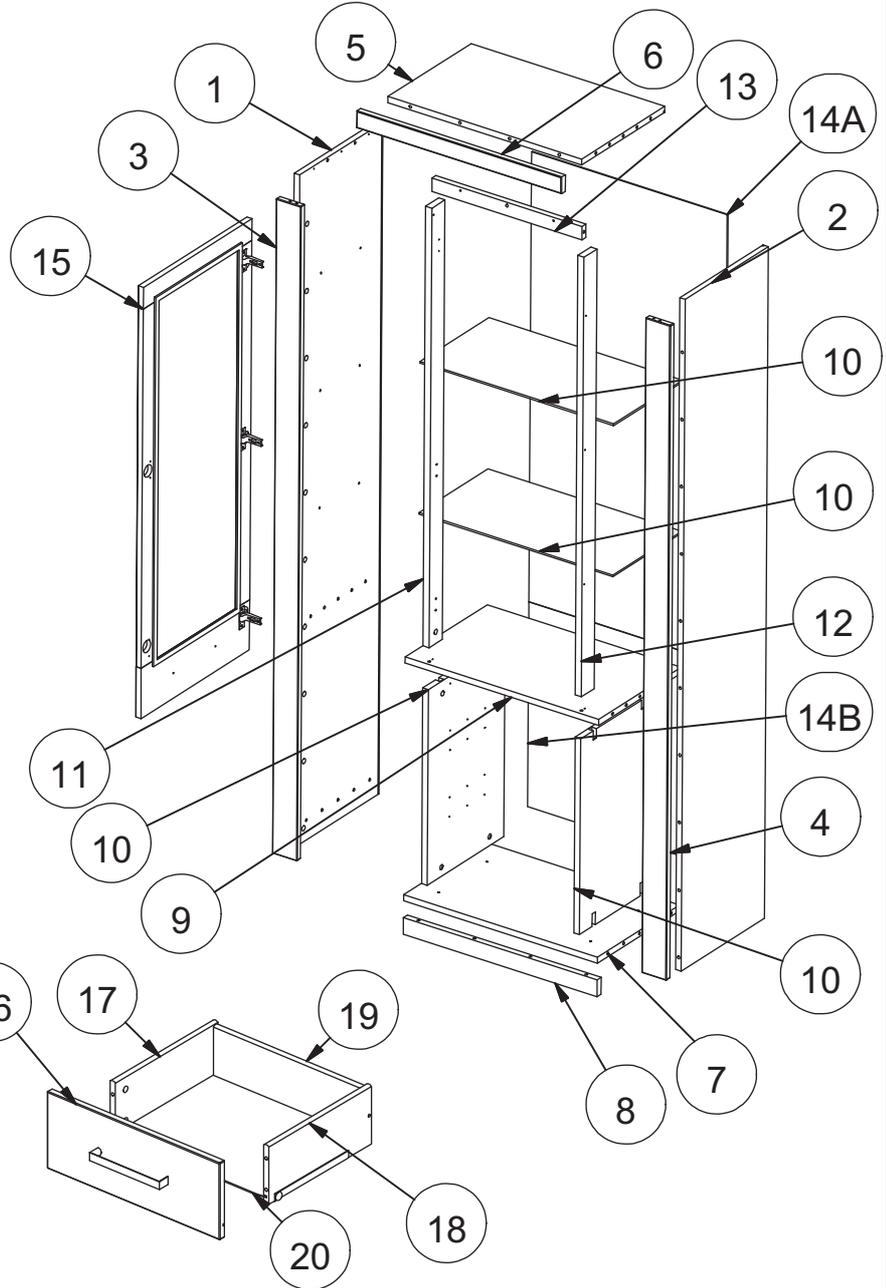


x2



60'


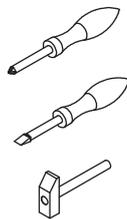


A Ø 8x30 28	B 72		D 72	F 3	E Ø 6,3x13 3	G M 4x30 4	H 80	K 6
I 8	J Ø 5x13 48		R M 4x22 8	M 4	L Ø 7x50 6	P 5	N 4	O 6

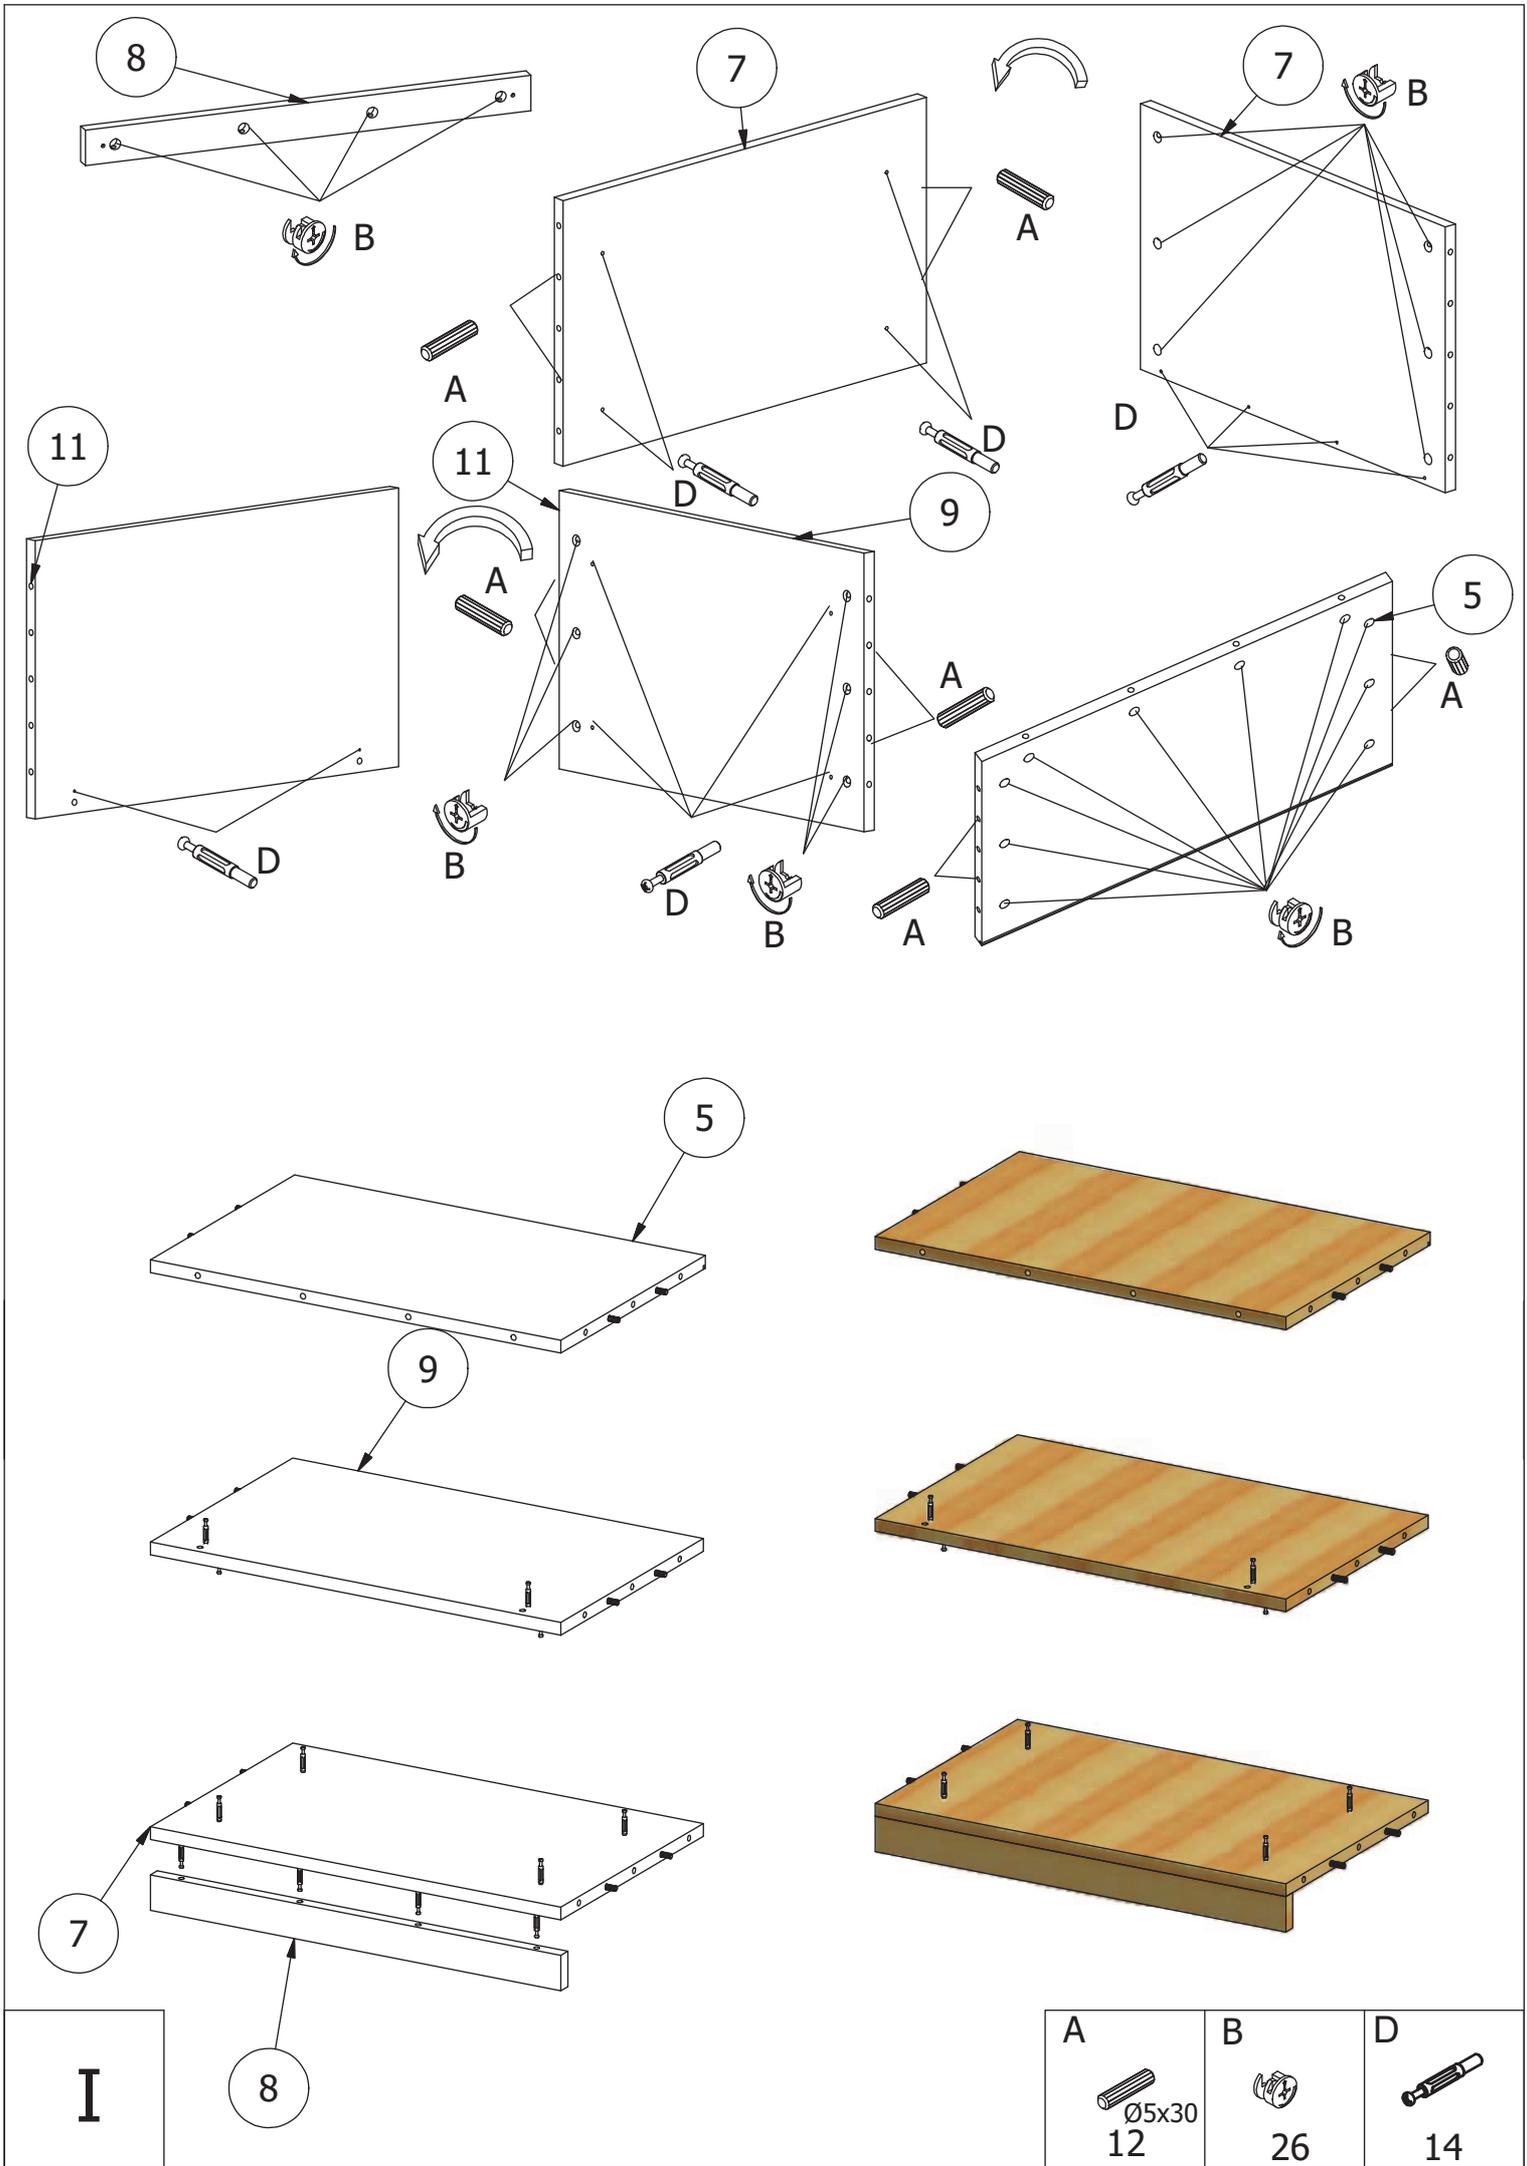



I

A	B	D
		
Ø5x30 12	26	14

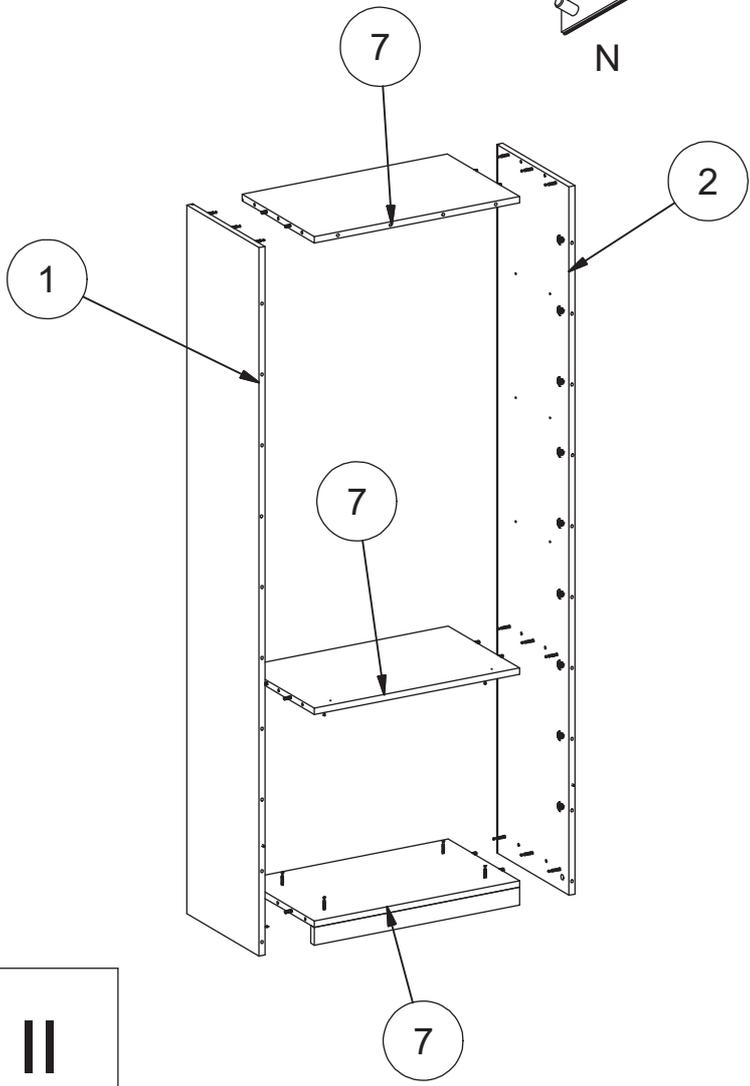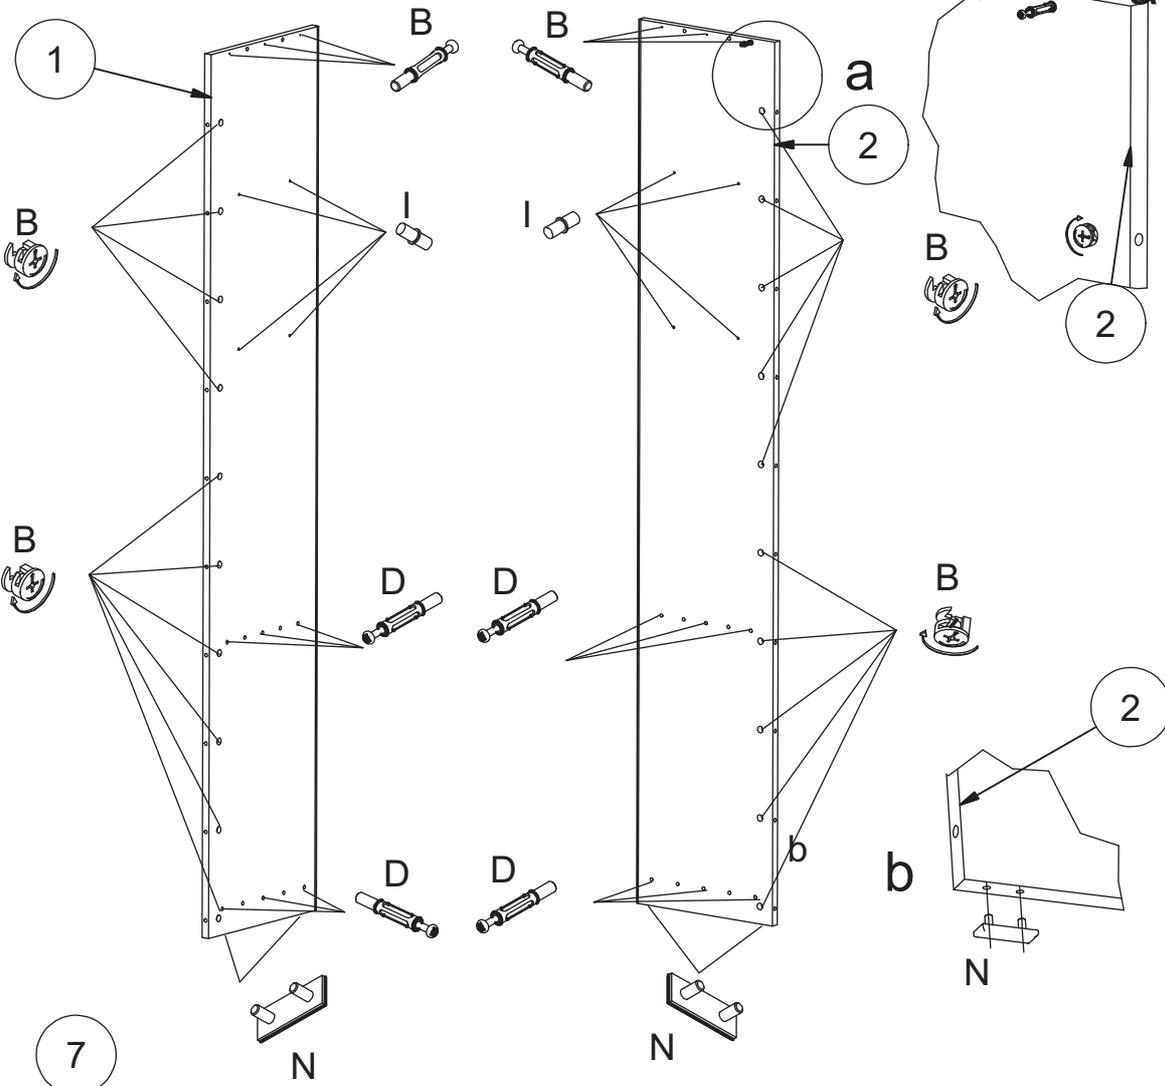



II

B	D	I	N
			
18	18	8	4


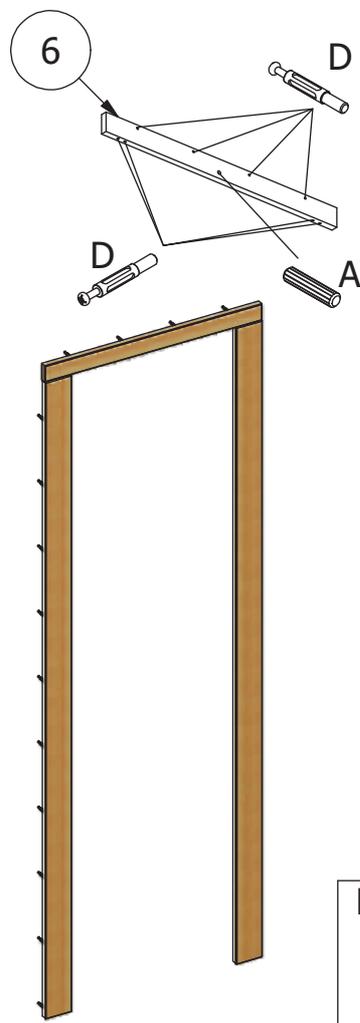
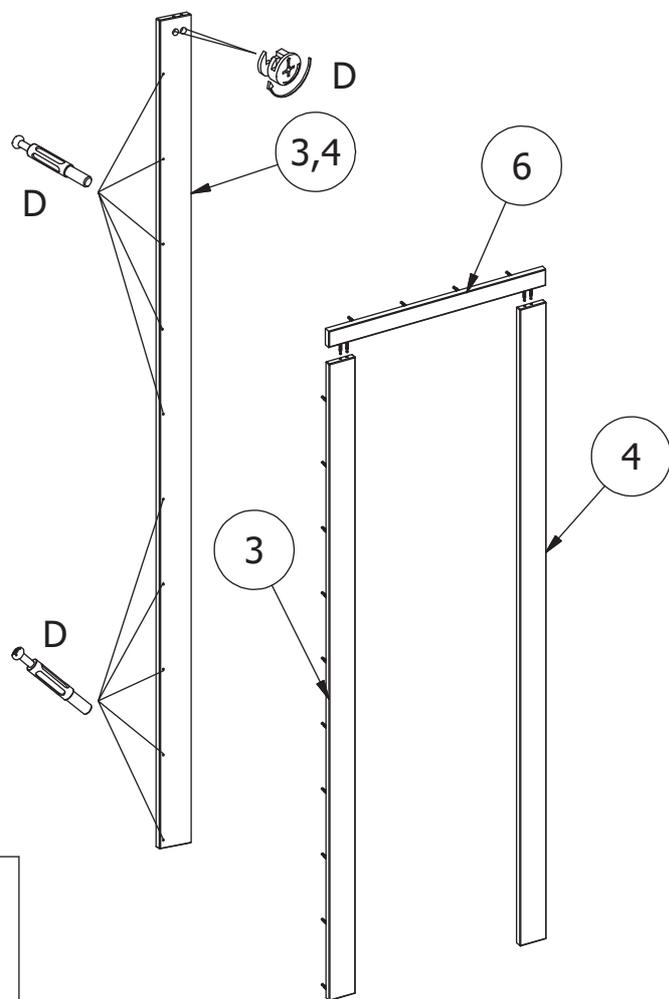


III

B	A Ø8x30 1
4	D 26

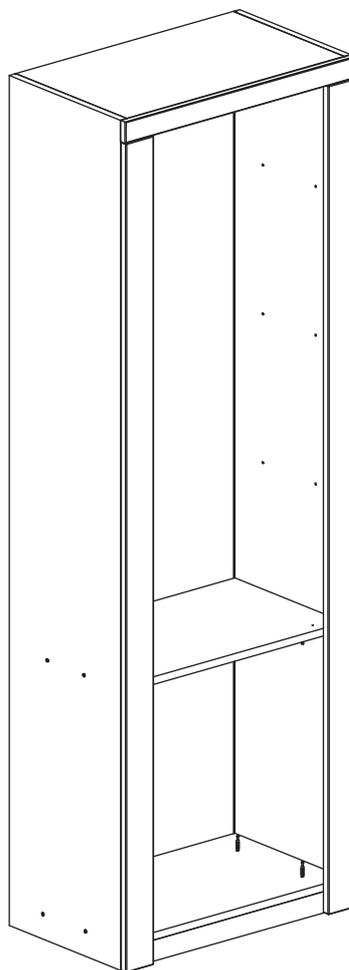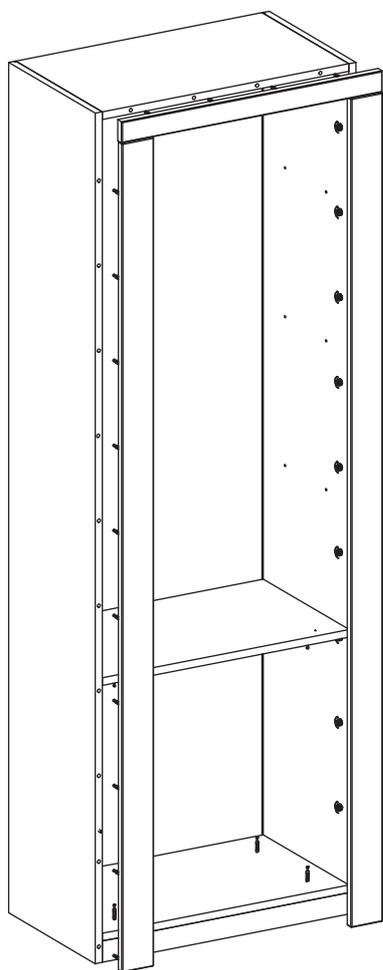





IV

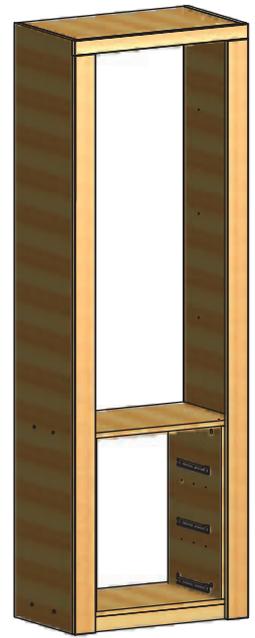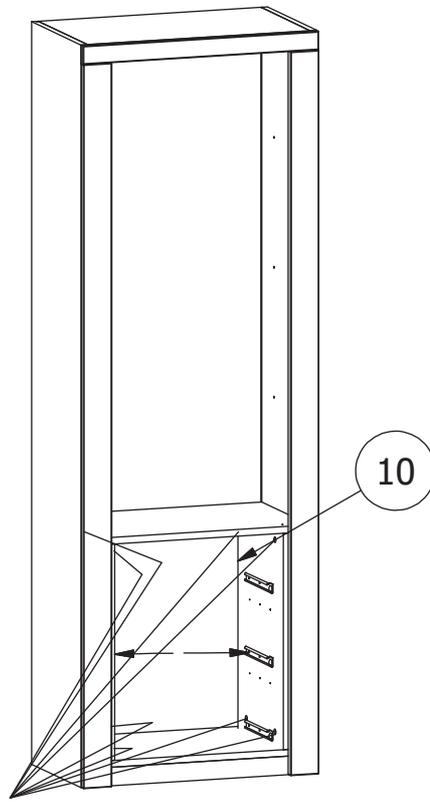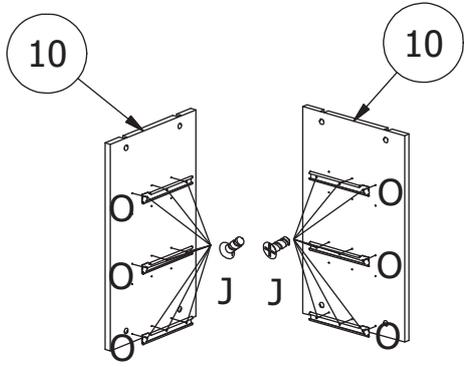

V




B	J	O
8	18	6

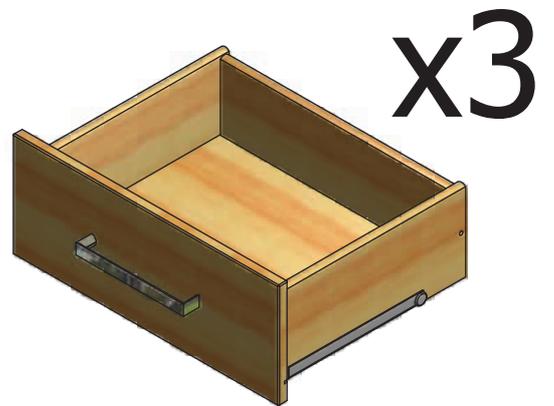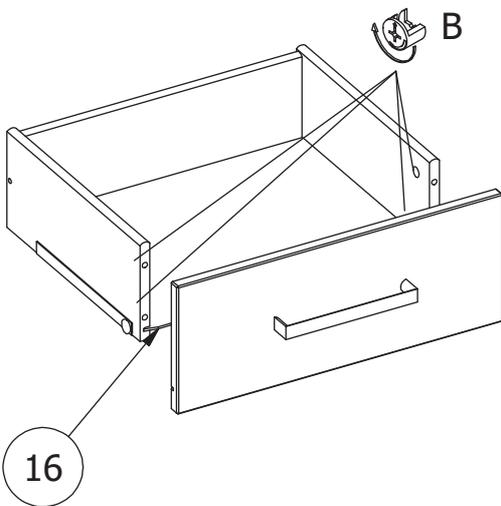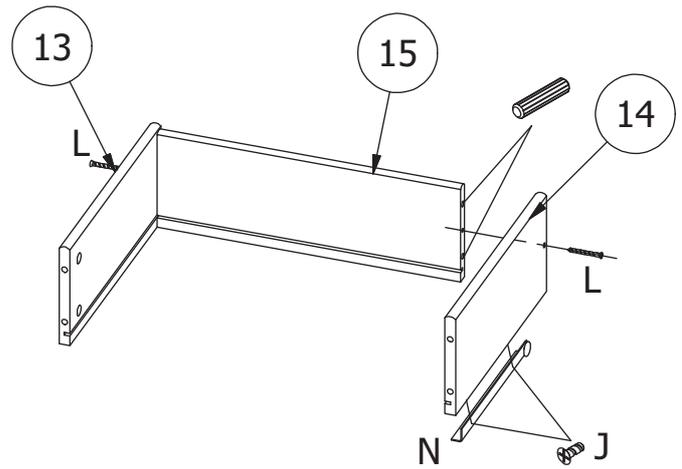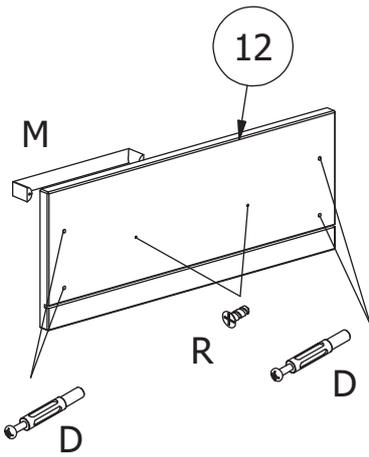


VI

A	B	D	L	M	R	J	O
12	12	12	6	3	6	12	6

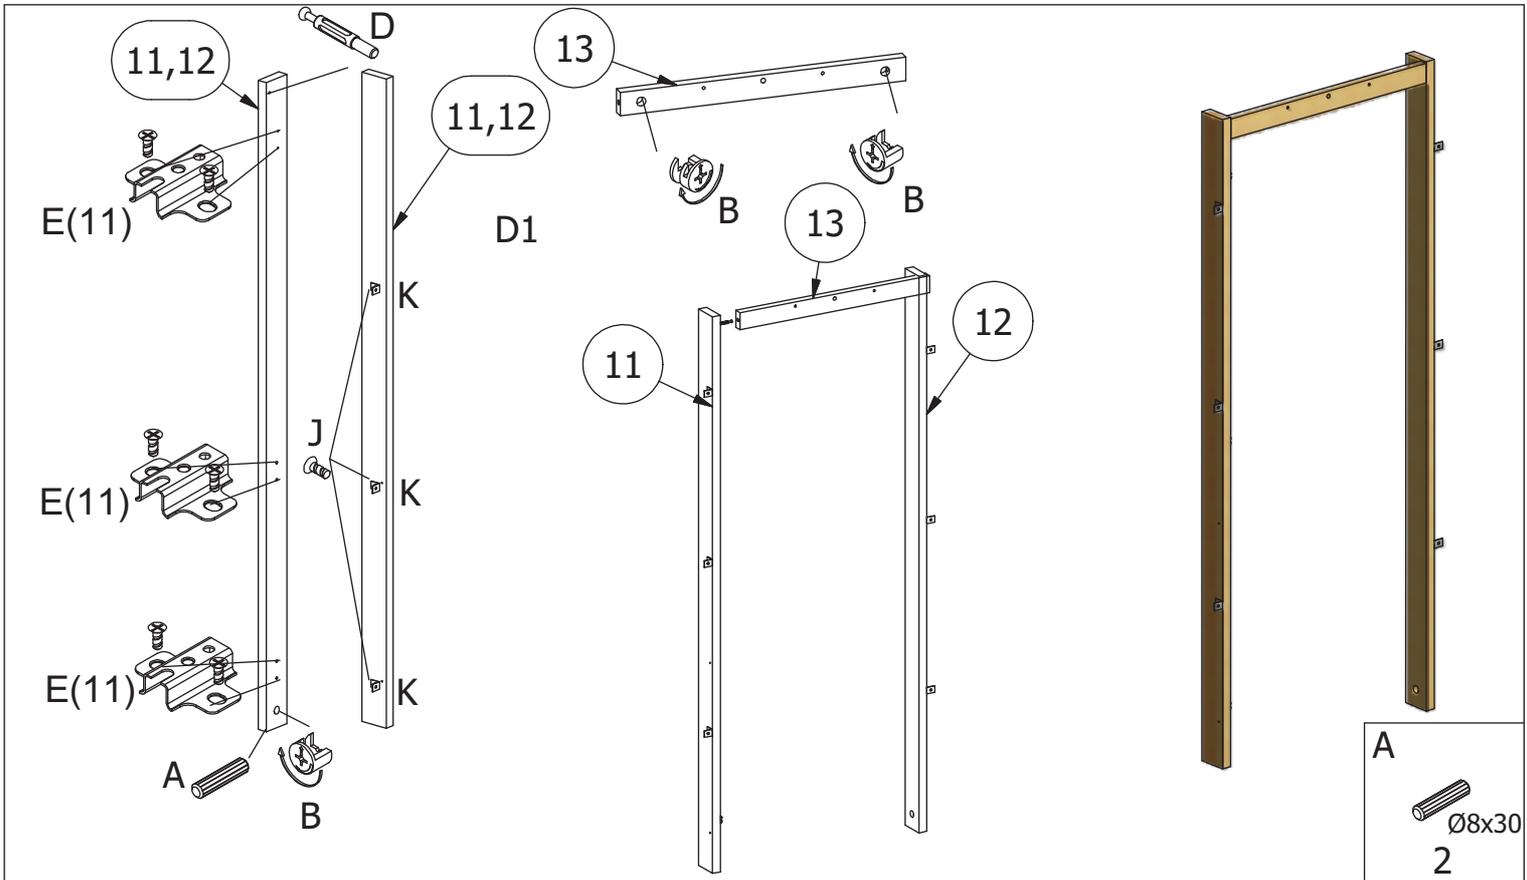


VII

B  4	D  2	J  Ø5x13 6	E  3	K  6
---	--	--	---	---

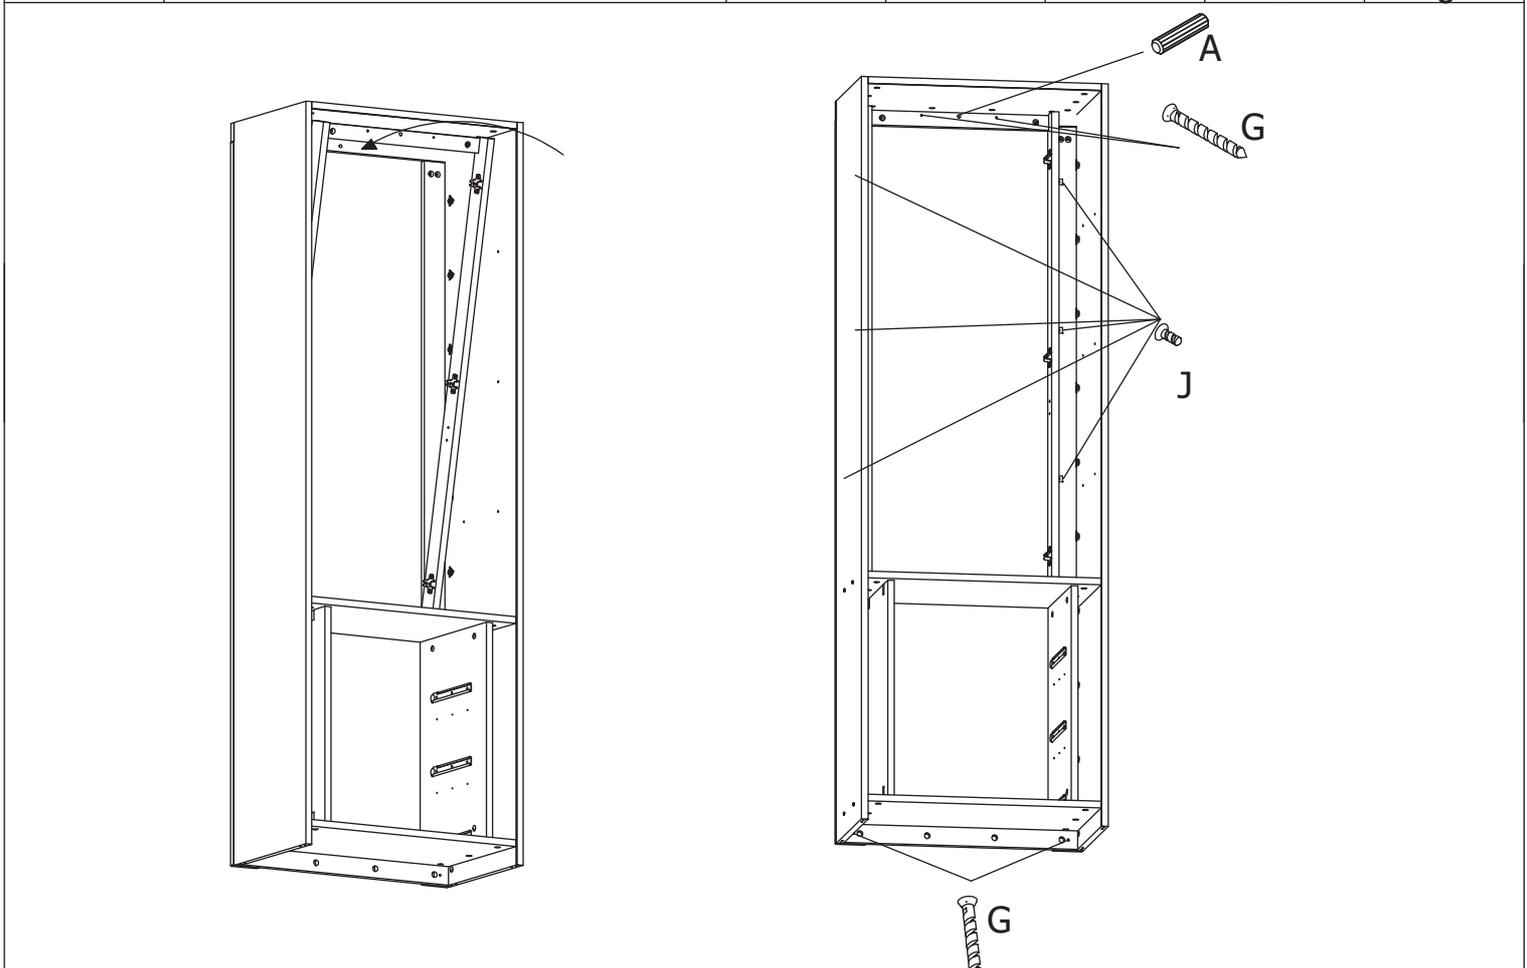


VIII

A  Ø8x30 1	G  4	J  Ø5x13 6
---	--	---

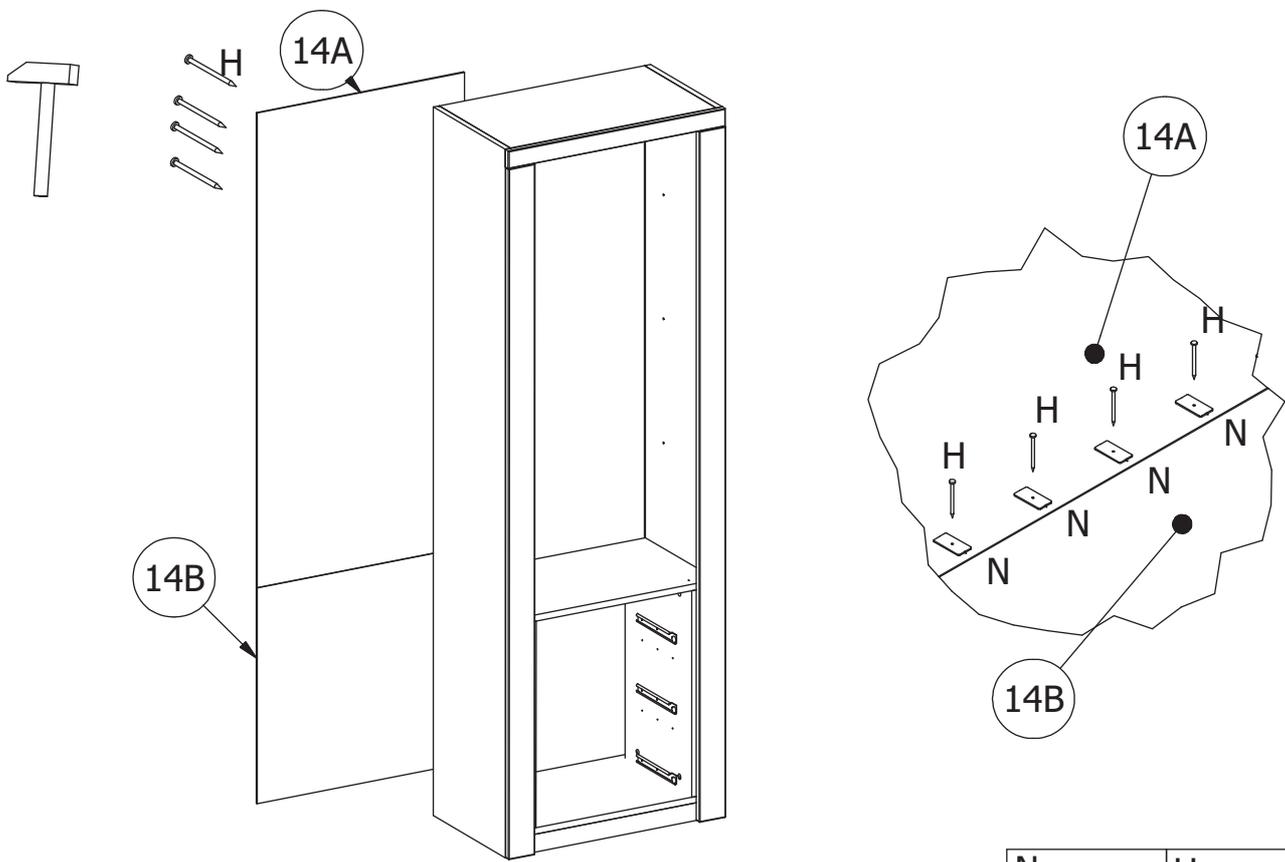

IX

N	H
5	80

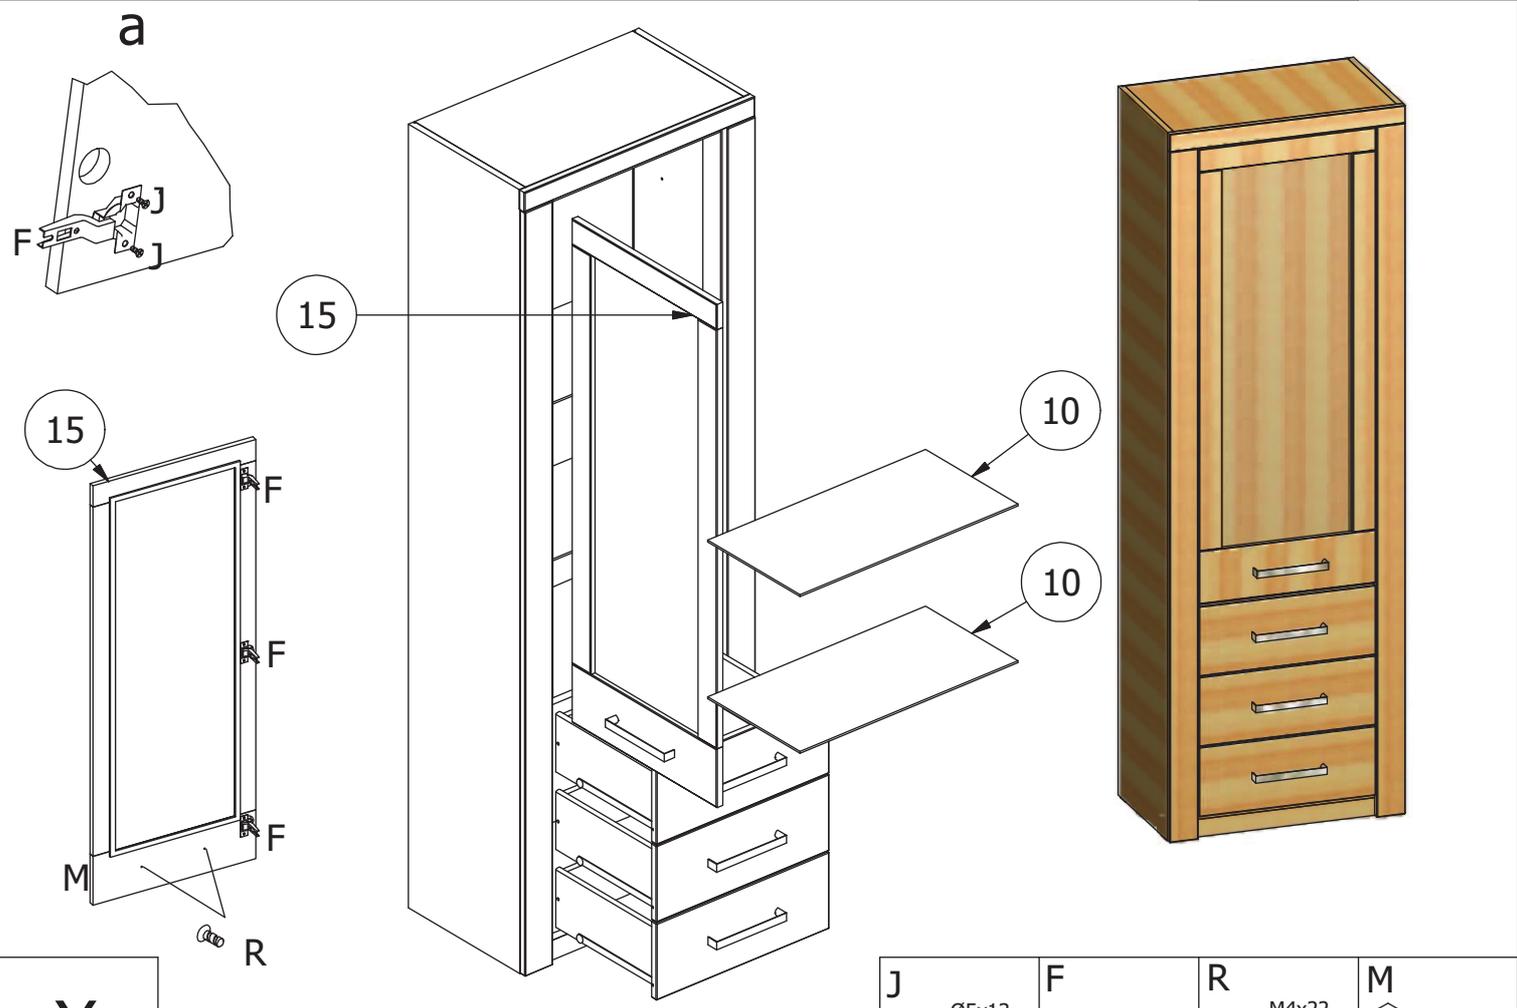

X

J	F	R	M
6	3	2	1