
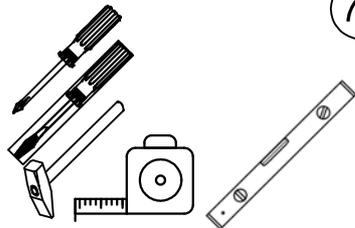
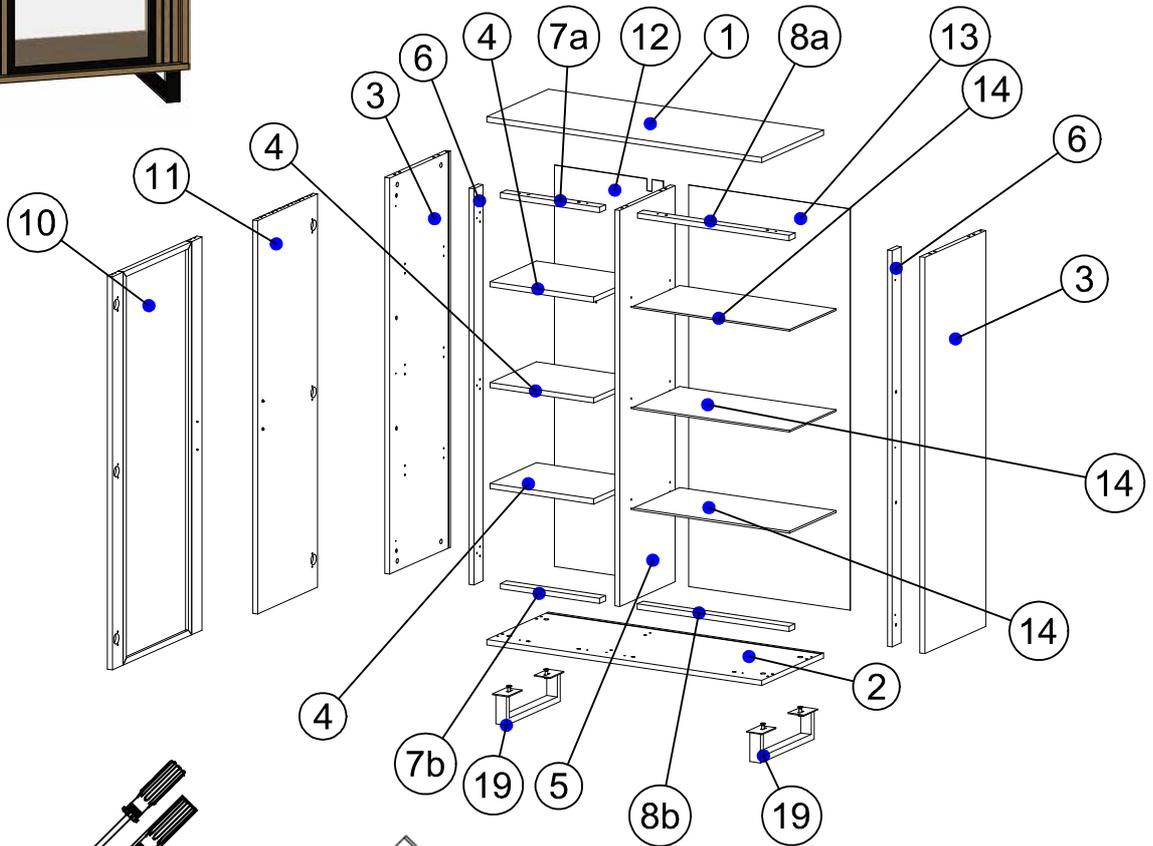
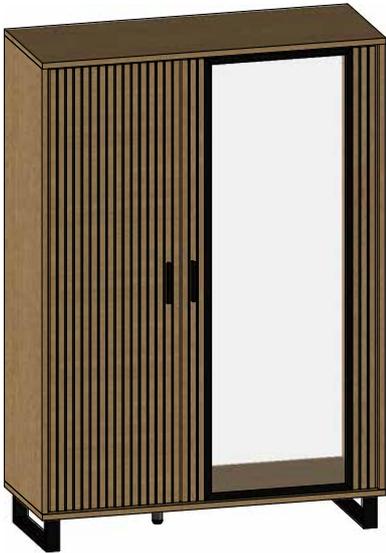


3203



versionsnummer:

10.2023

Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.














A1 Ø 8x20 16	A Ø 8x30 12	B 12	D 12	E Ø 6.3x13 6	F 6	G Ø 4x30 14	H Ø 3x16 7	I2 12
J Ø 5x13 16	Filz 4	M 2	V 1	Z 10	R M4x25 4	S 4	P 20	U 7

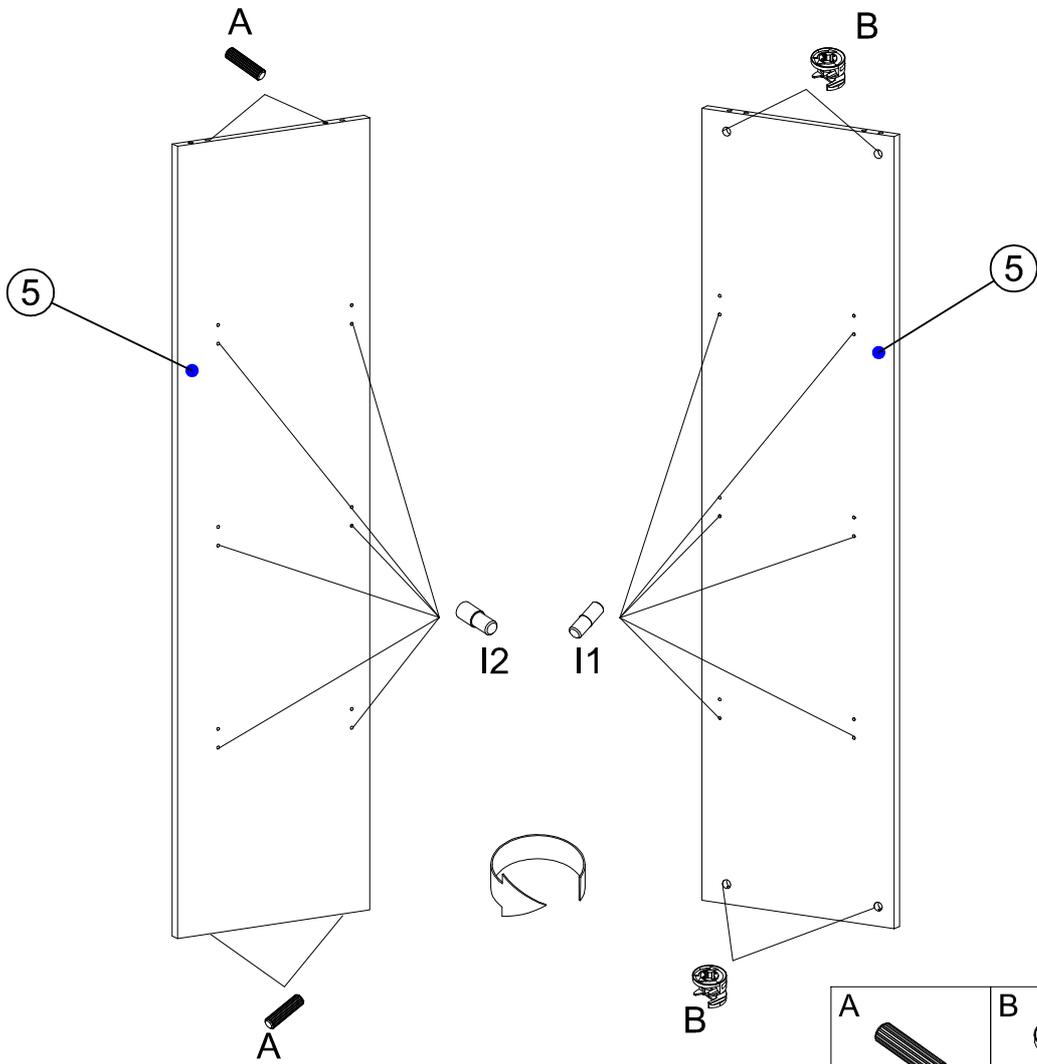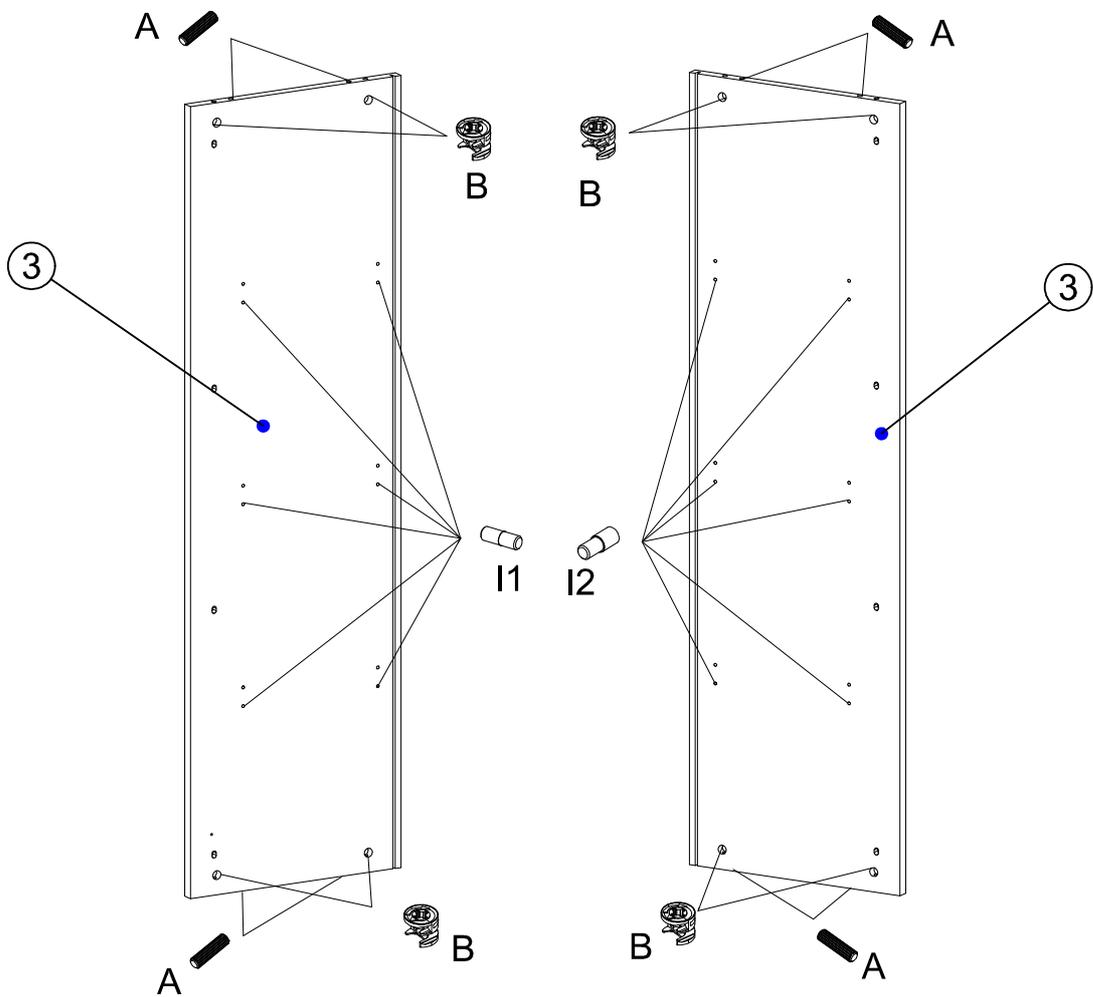







I




<p>A</p>  <p>Ø 8x30 12</p>	<p>B</p>  <p>12</p>	<table border="1"> <tr> <td data-bbox="1404 2049 1556 2139">I2</td> <td data-bbox="1468 2072 1548 2139"></td> </tr> <tr> <td data-bbox="1404 2139 1556 2228">I1</td> <td data-bbox="1468 2139 1548 2206"></td> </tr> </table> <p>12</p>	I2		I1	
I2						
I1						

II

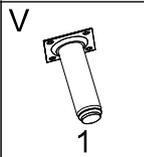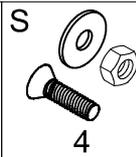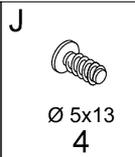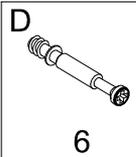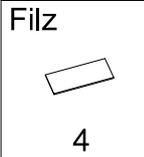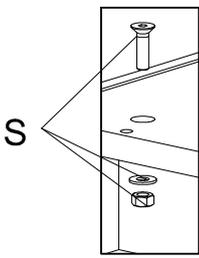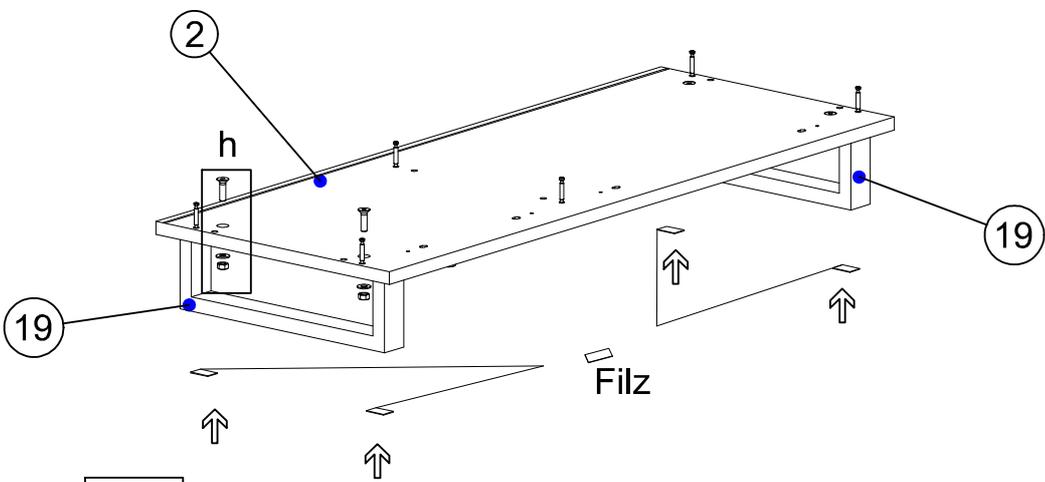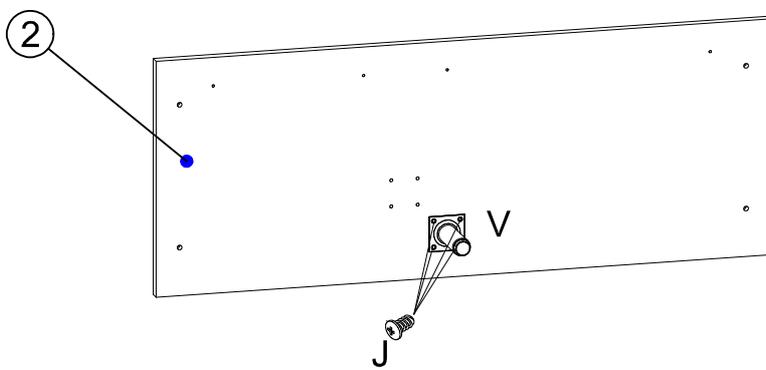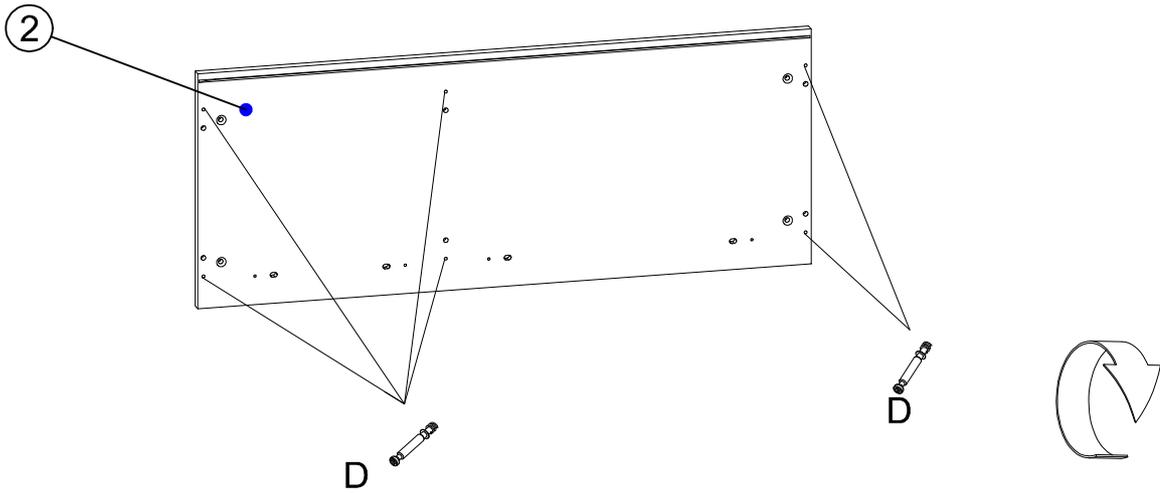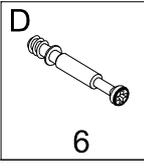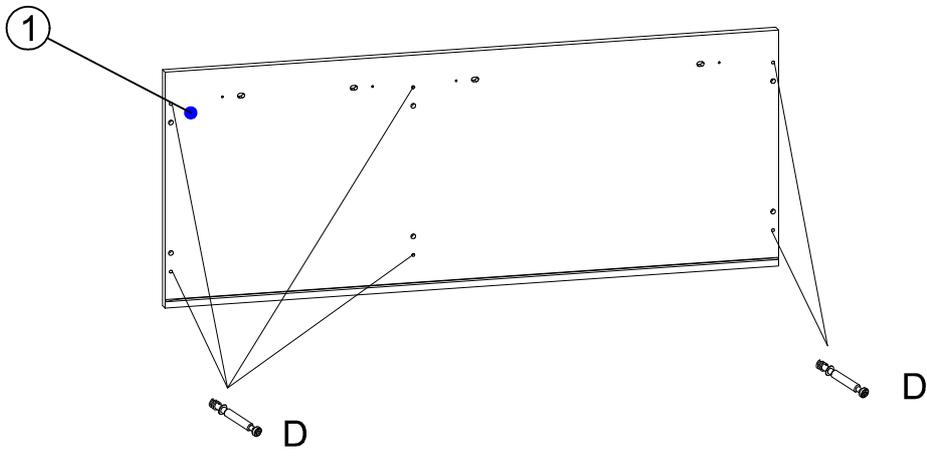

III

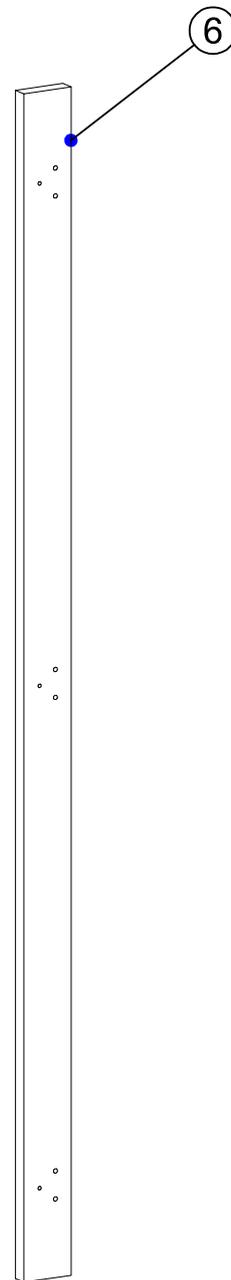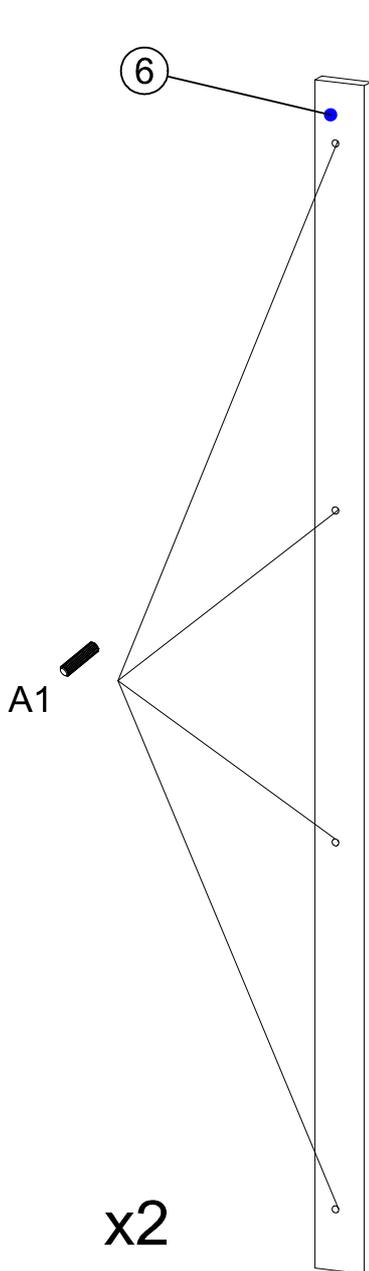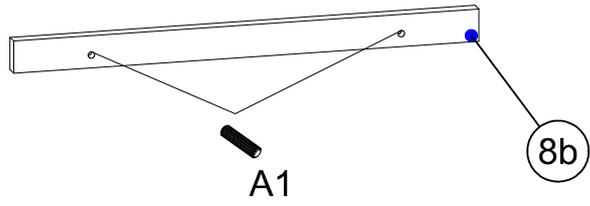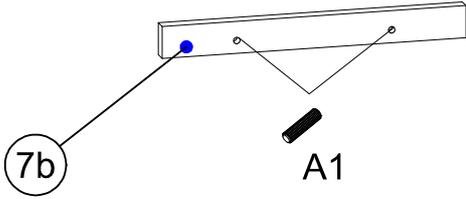
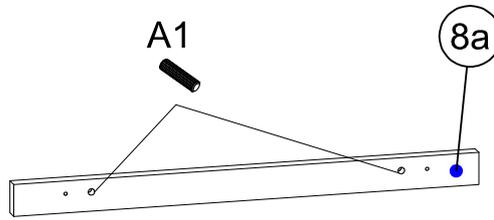
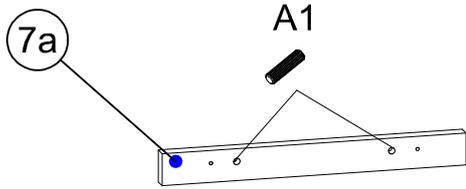


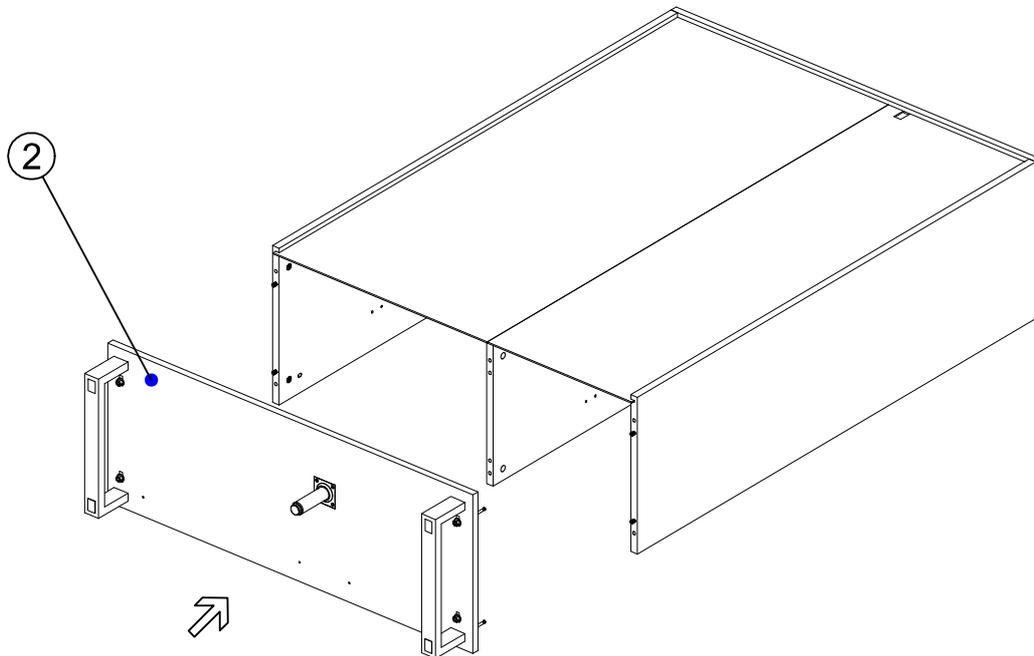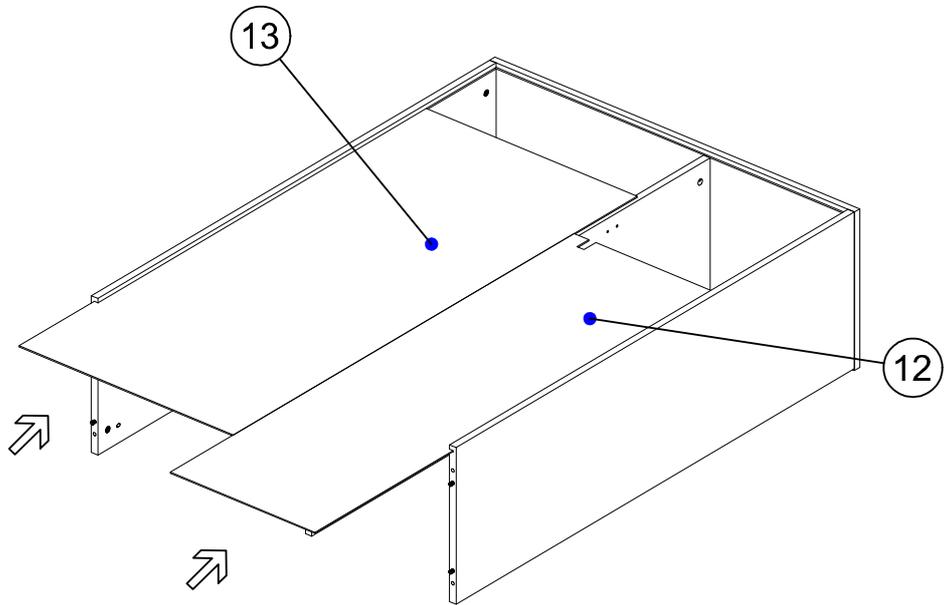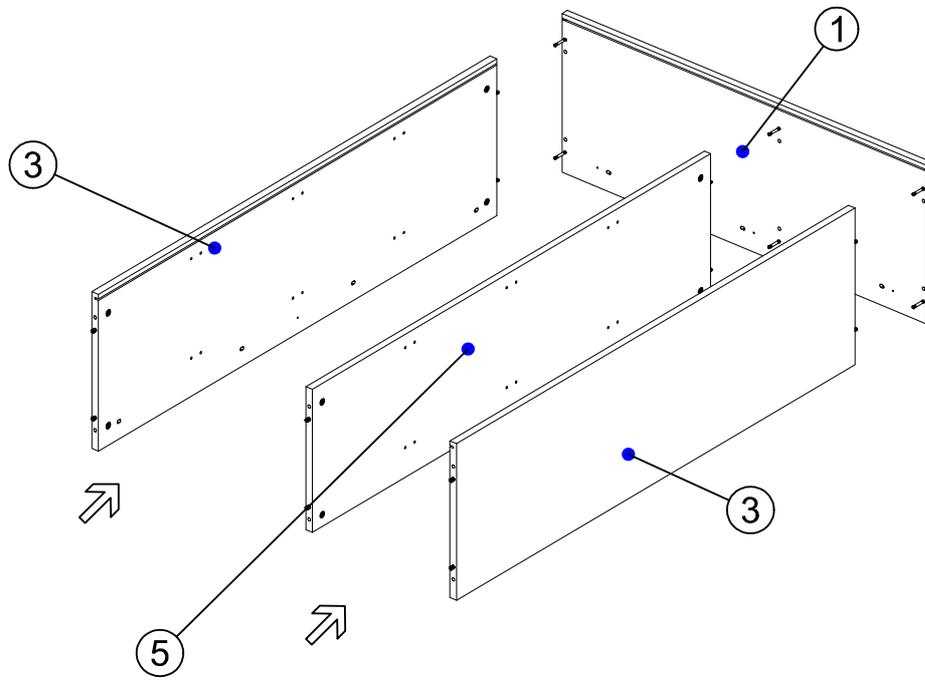






V

13


12

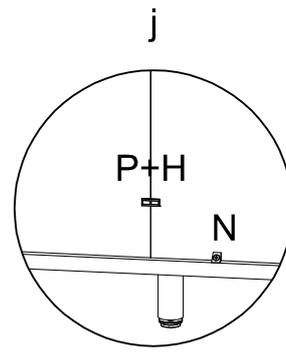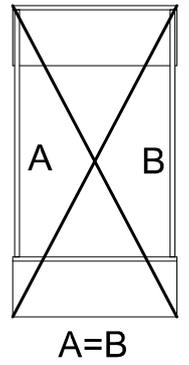
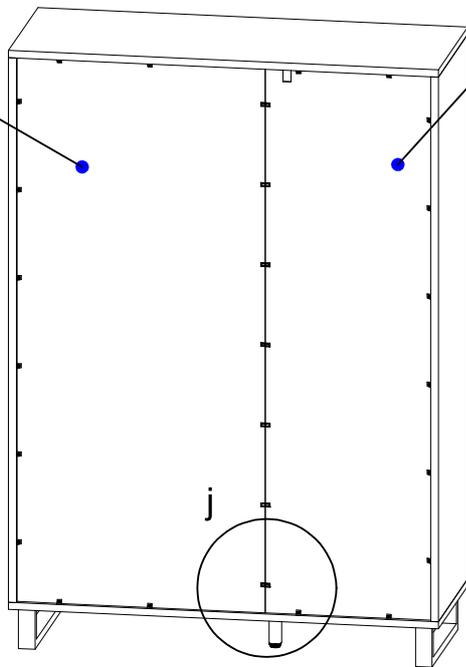


VI

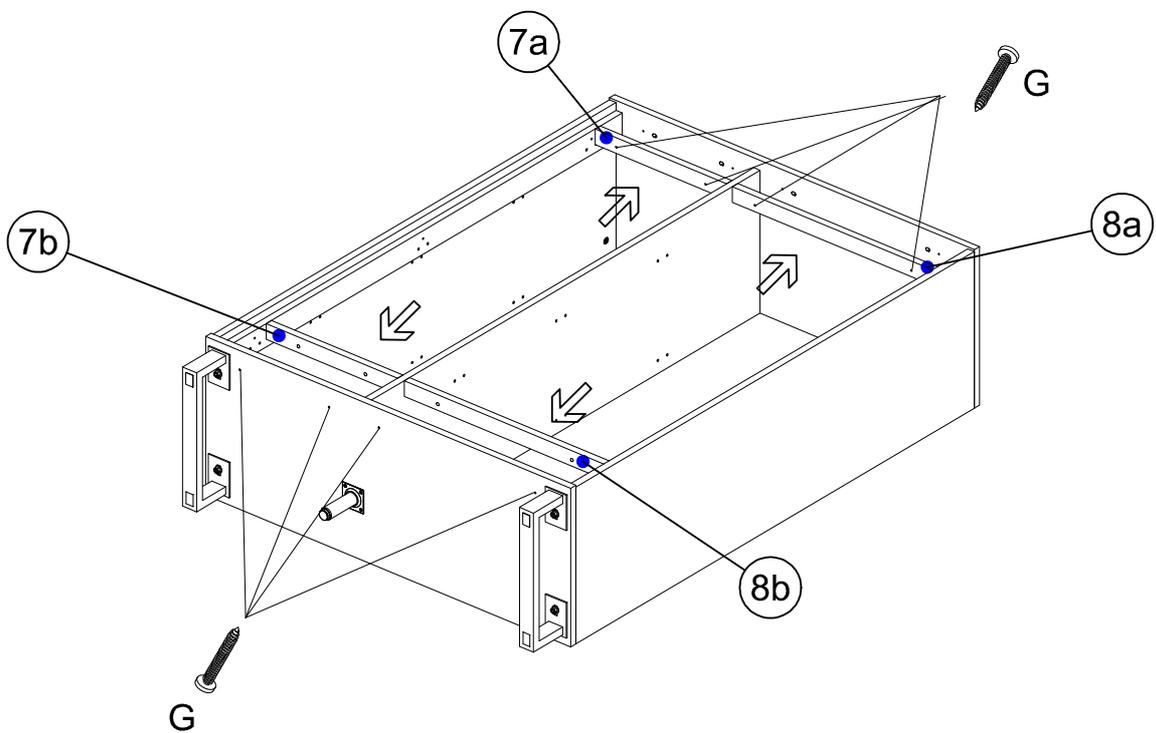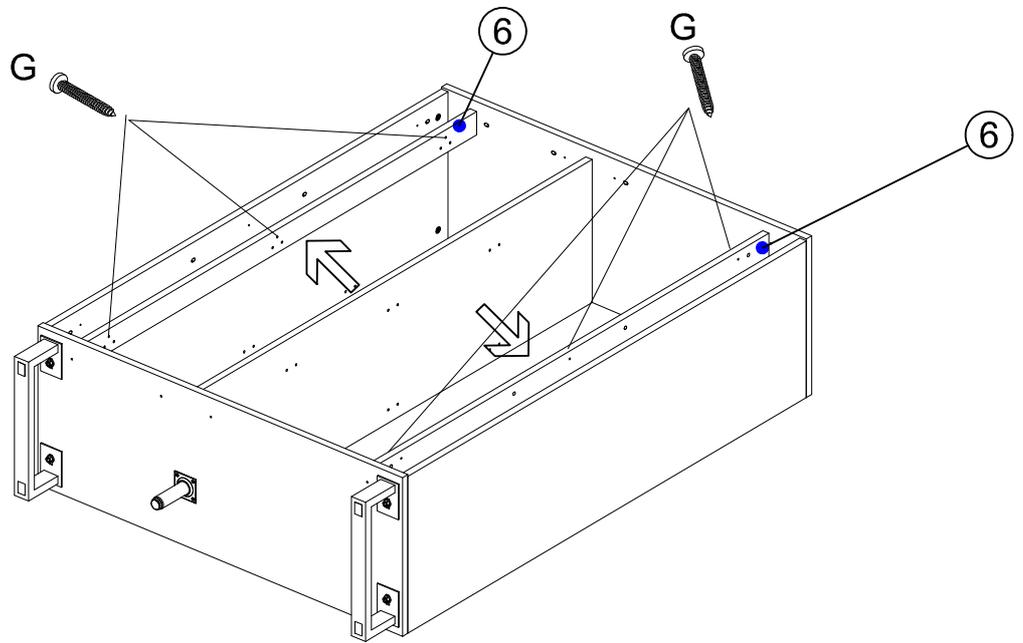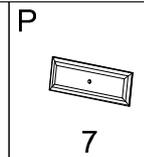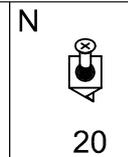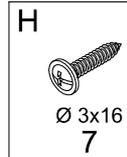


VII

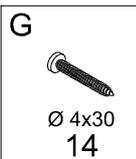

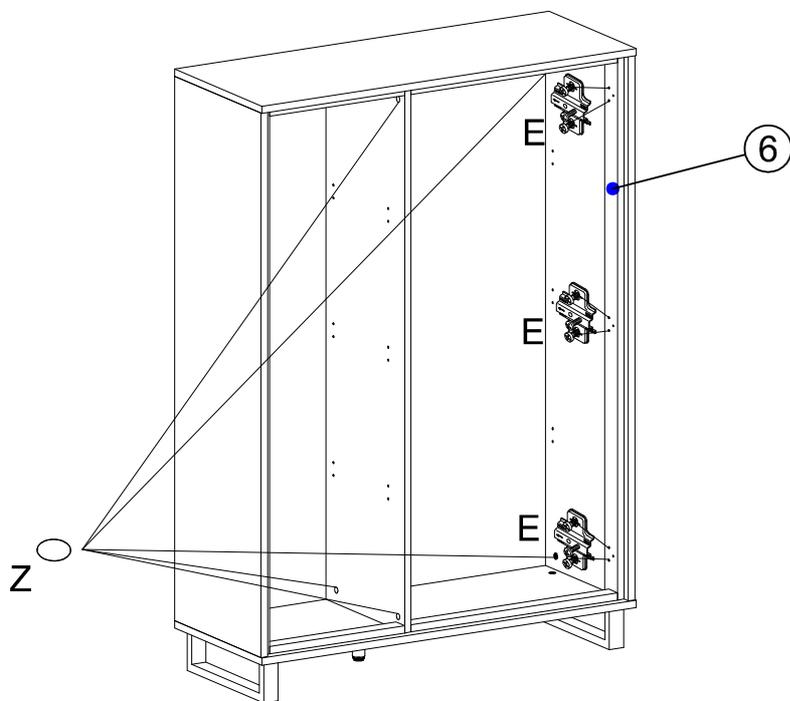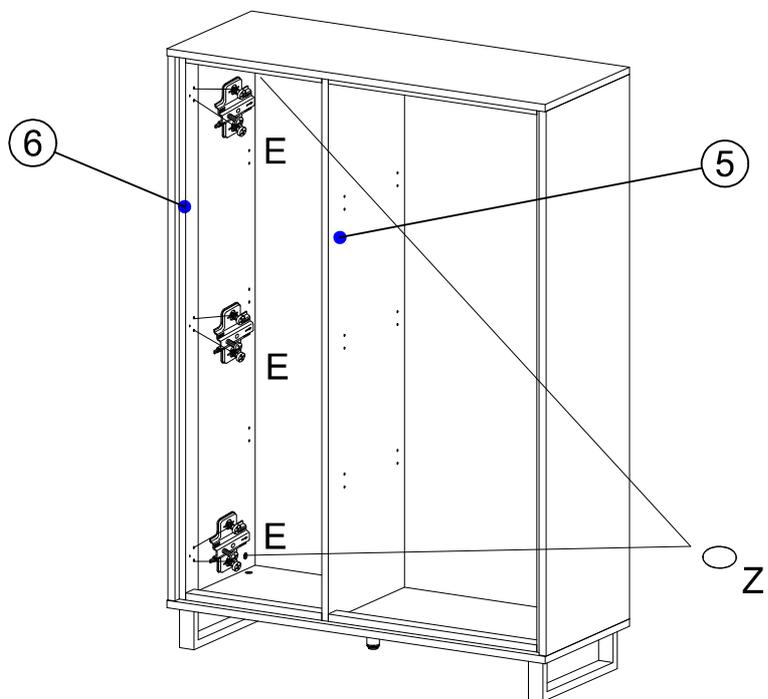


Z	
10	
E	
6	<small>Ø 6.3x13</small>

VIII






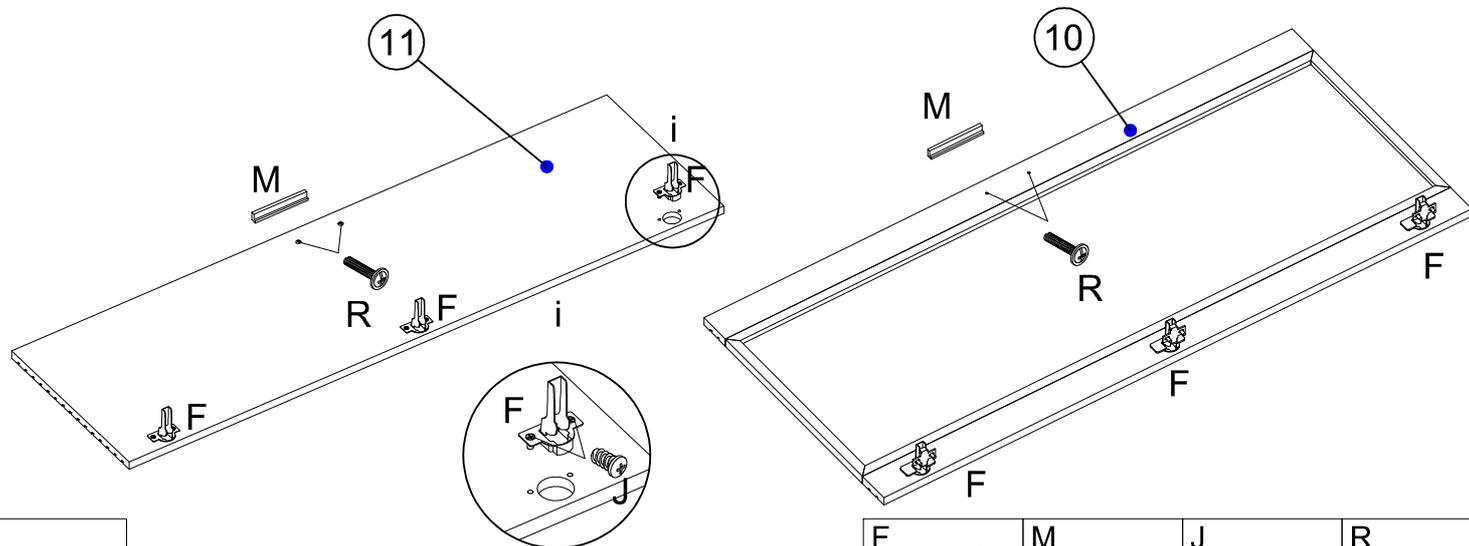


F	M	J	R
6	2	Ø 5x13 12	M4x25 4


IX

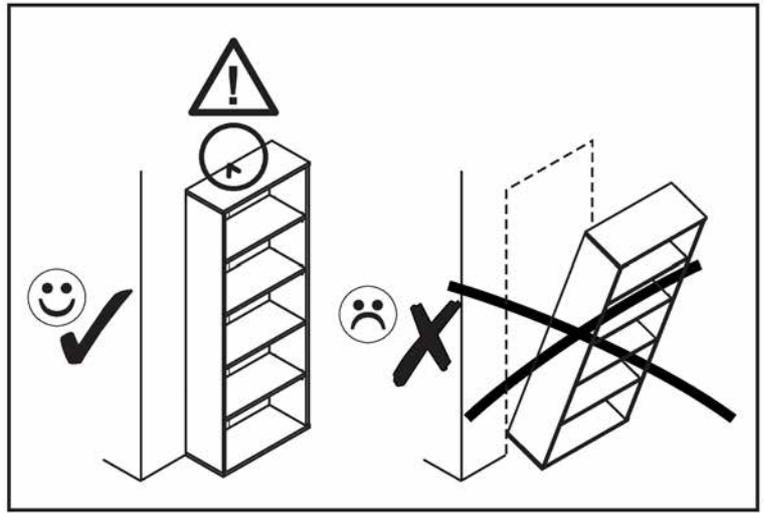


f

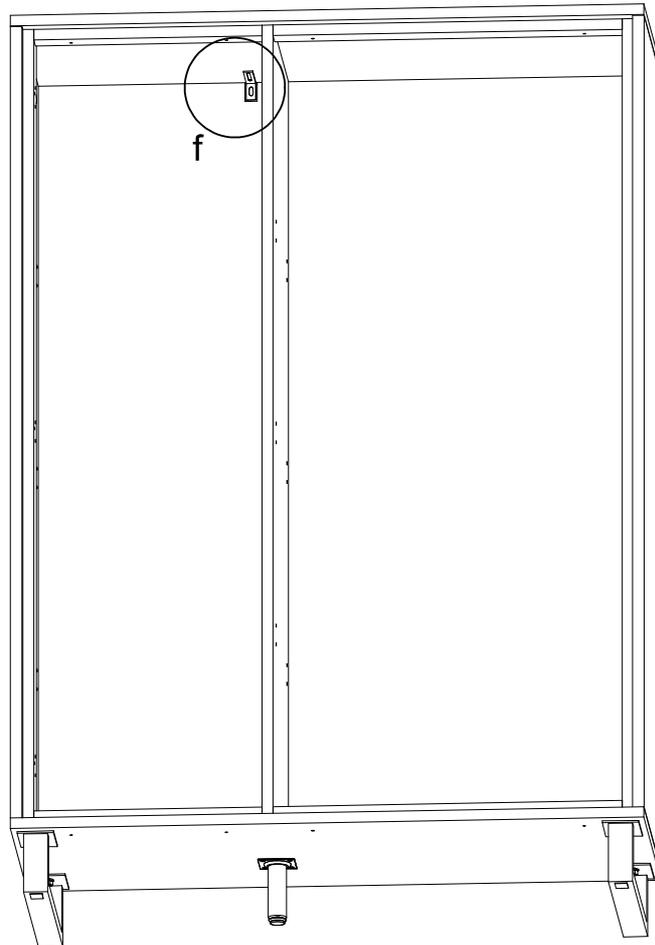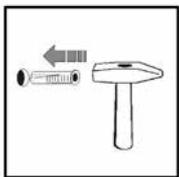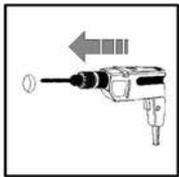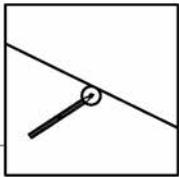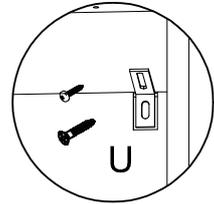


X

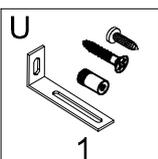

1

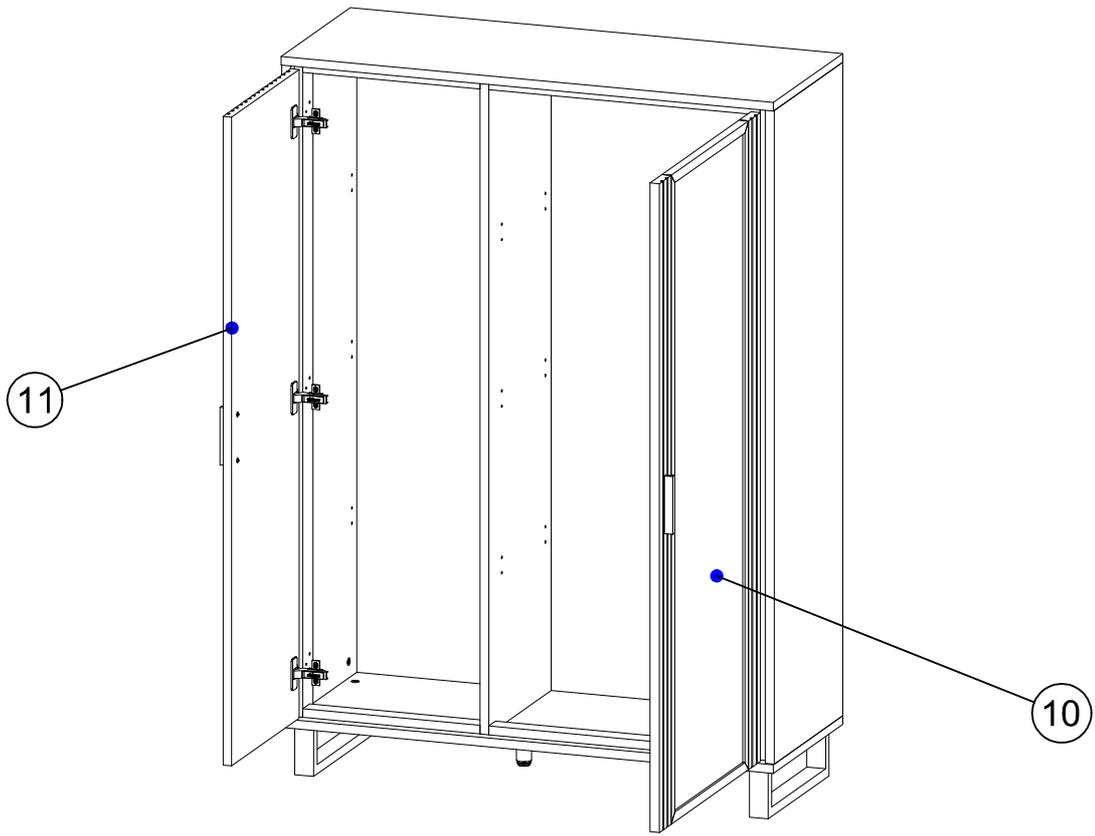

XI

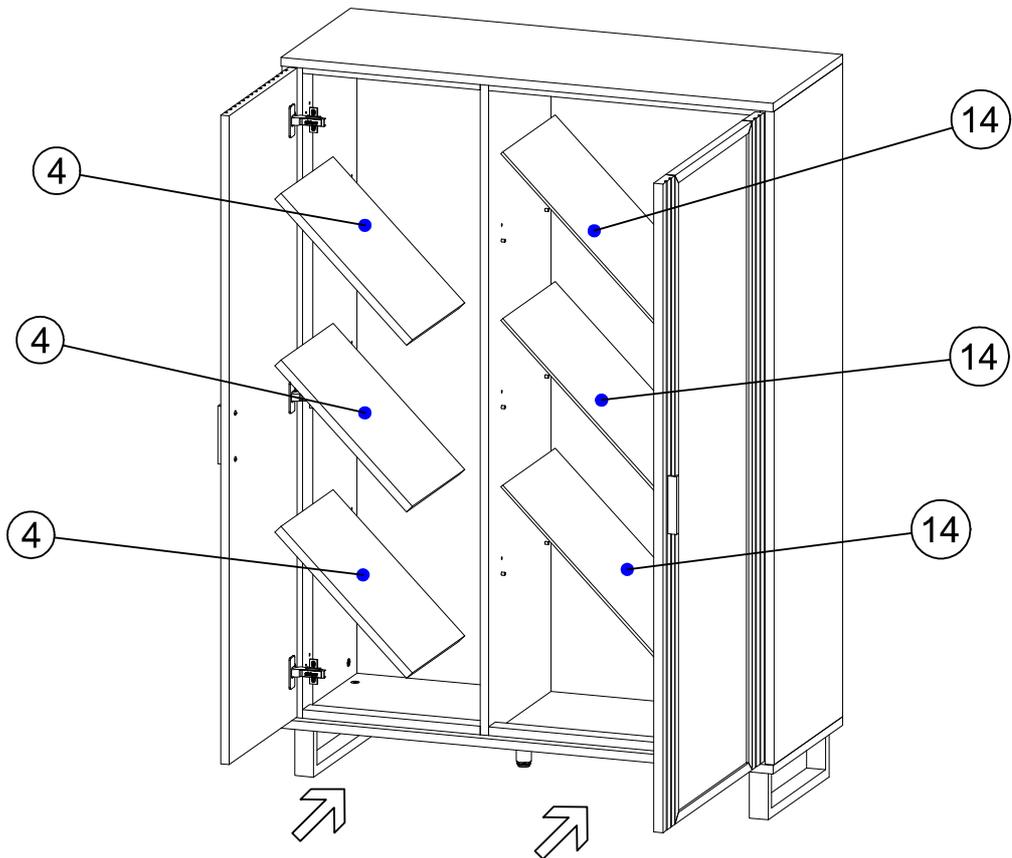

XII

