
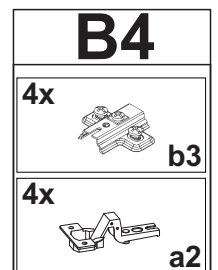
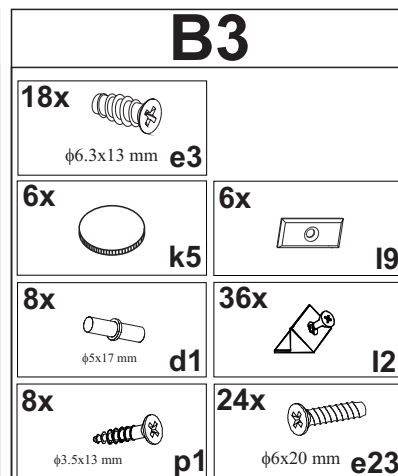
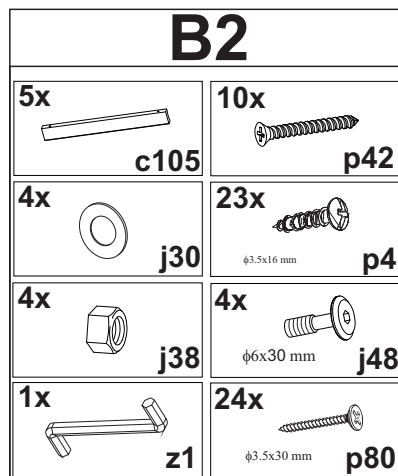
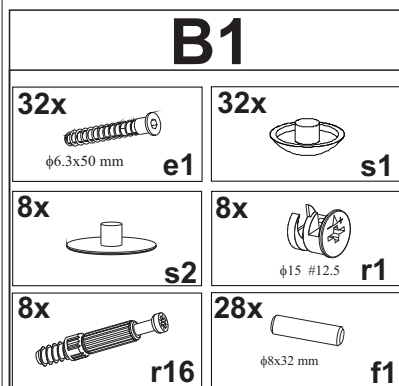
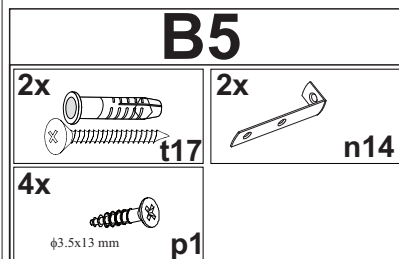
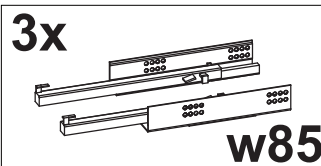
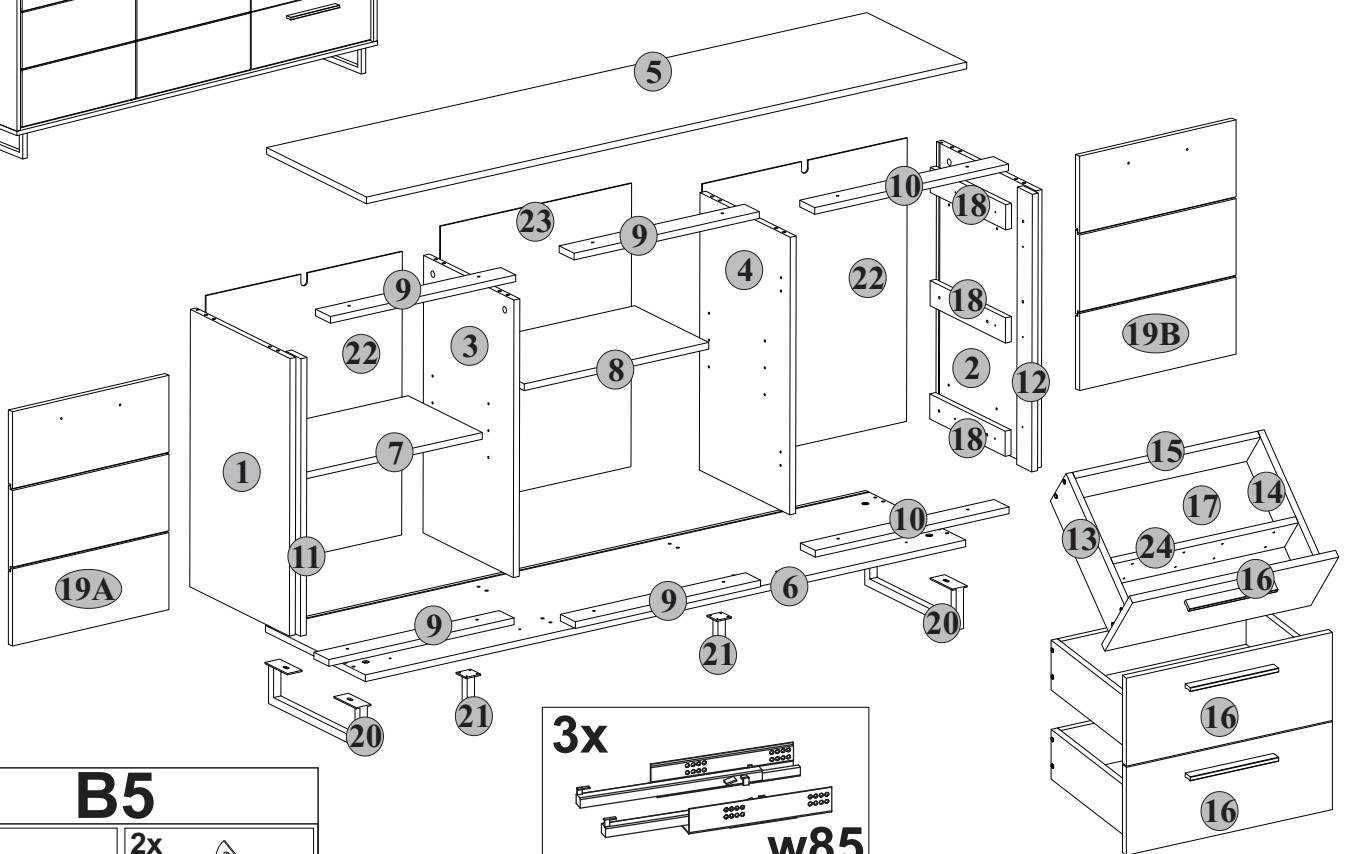

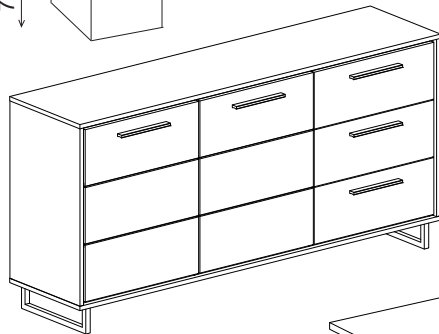
















5811

versionsnummer: 18.05.2025

Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.



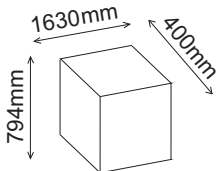


1

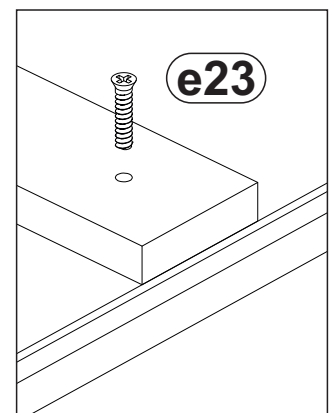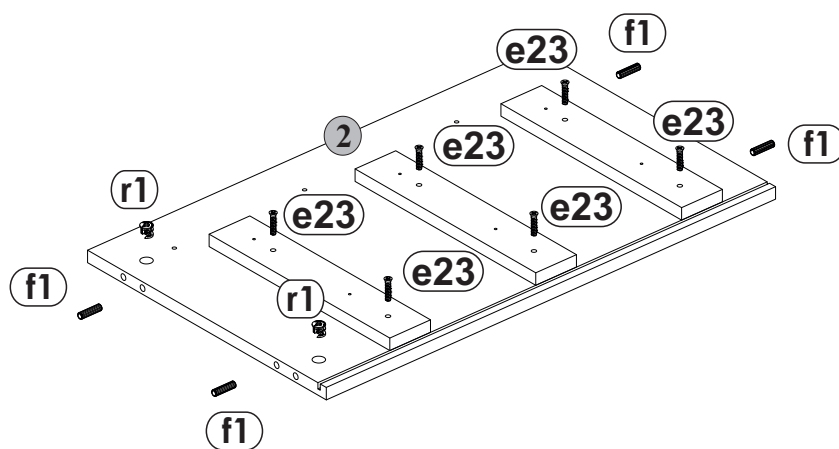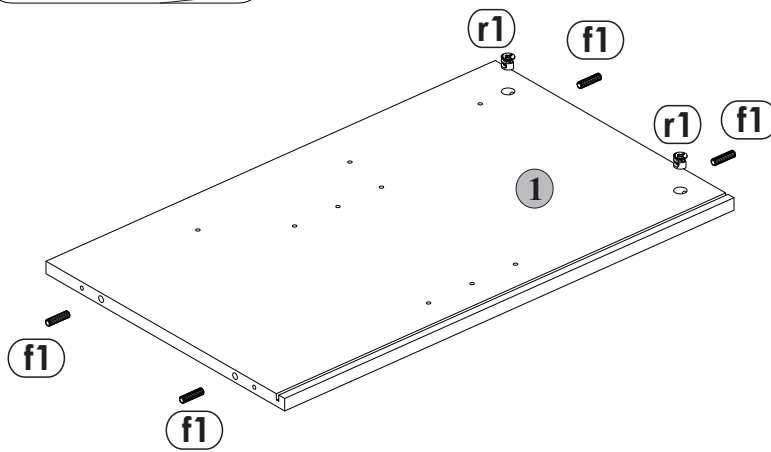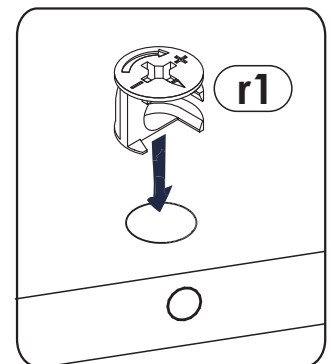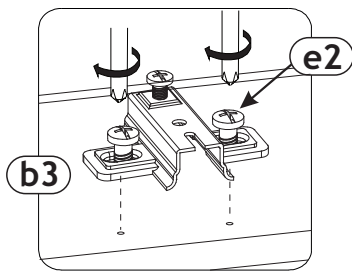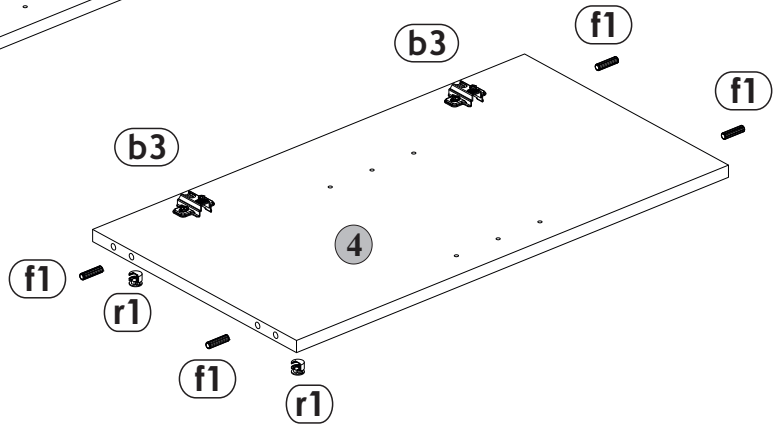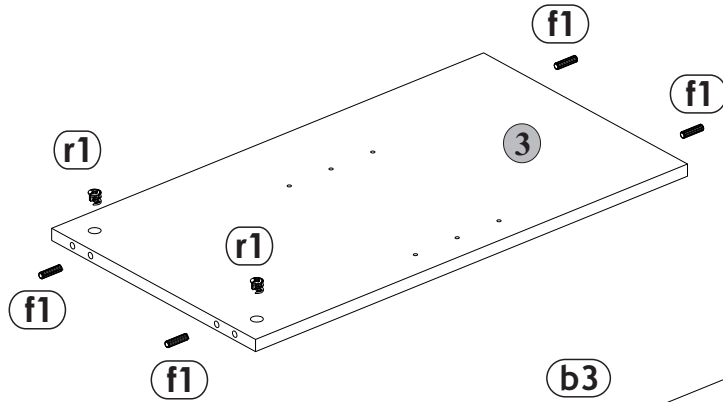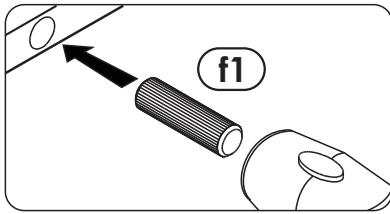


2


2

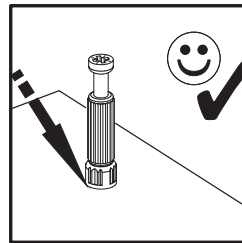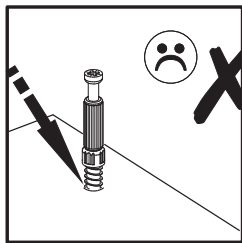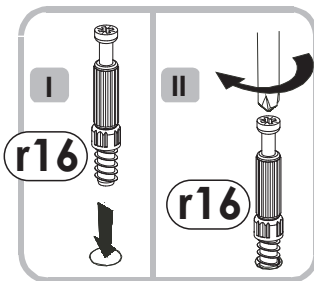

8x
r16

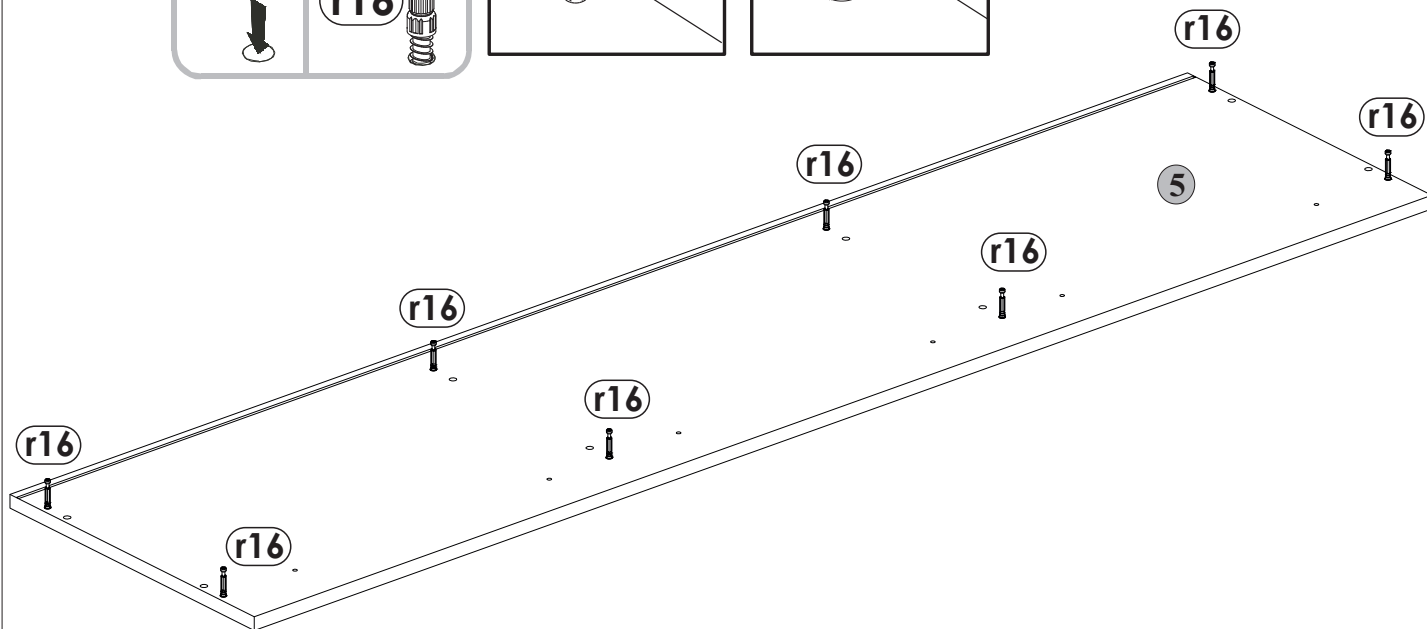


3

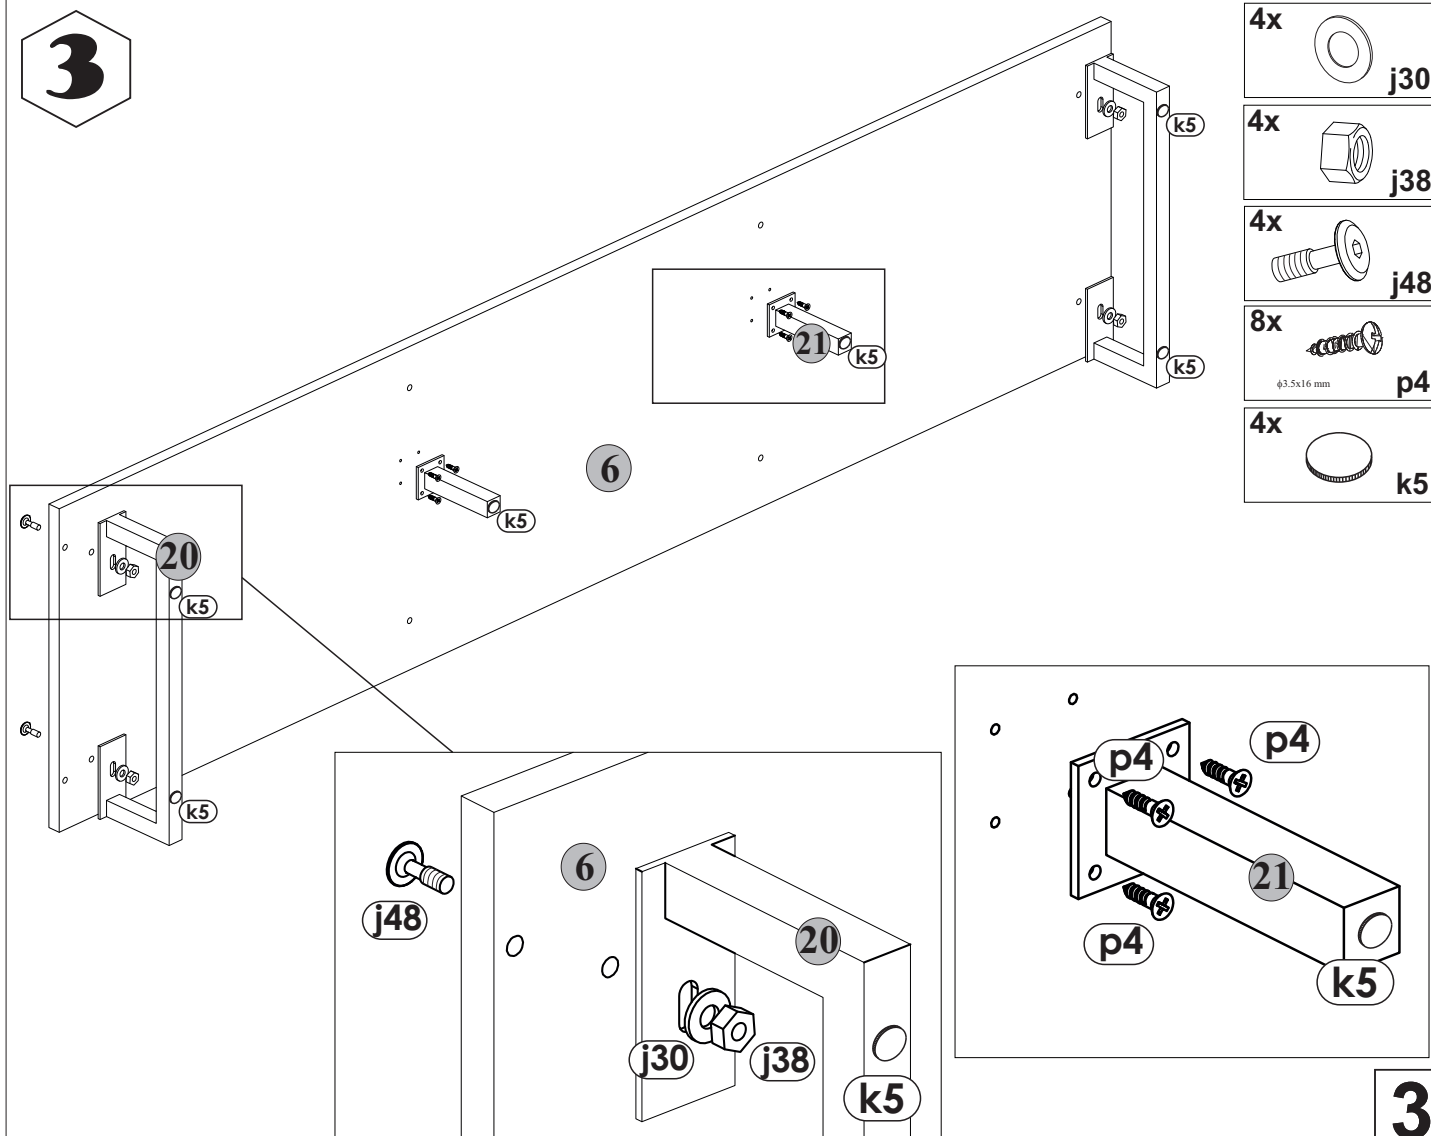

4

2x  b3



4x  e2
φ6.3x13 mm

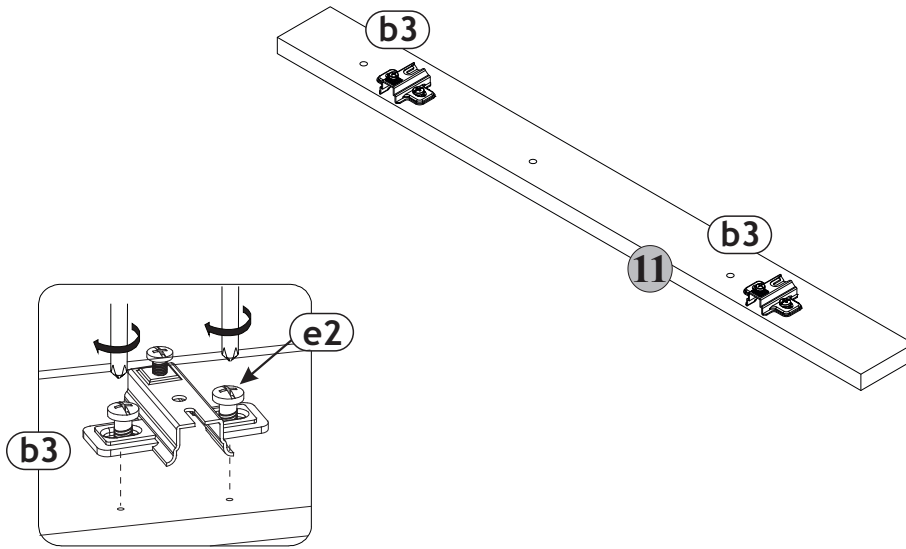

5

4x  a2

8x  p1
φ3.5x16 mm

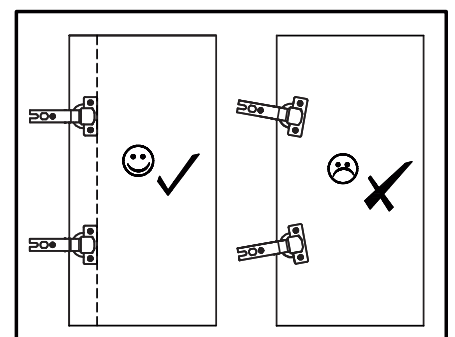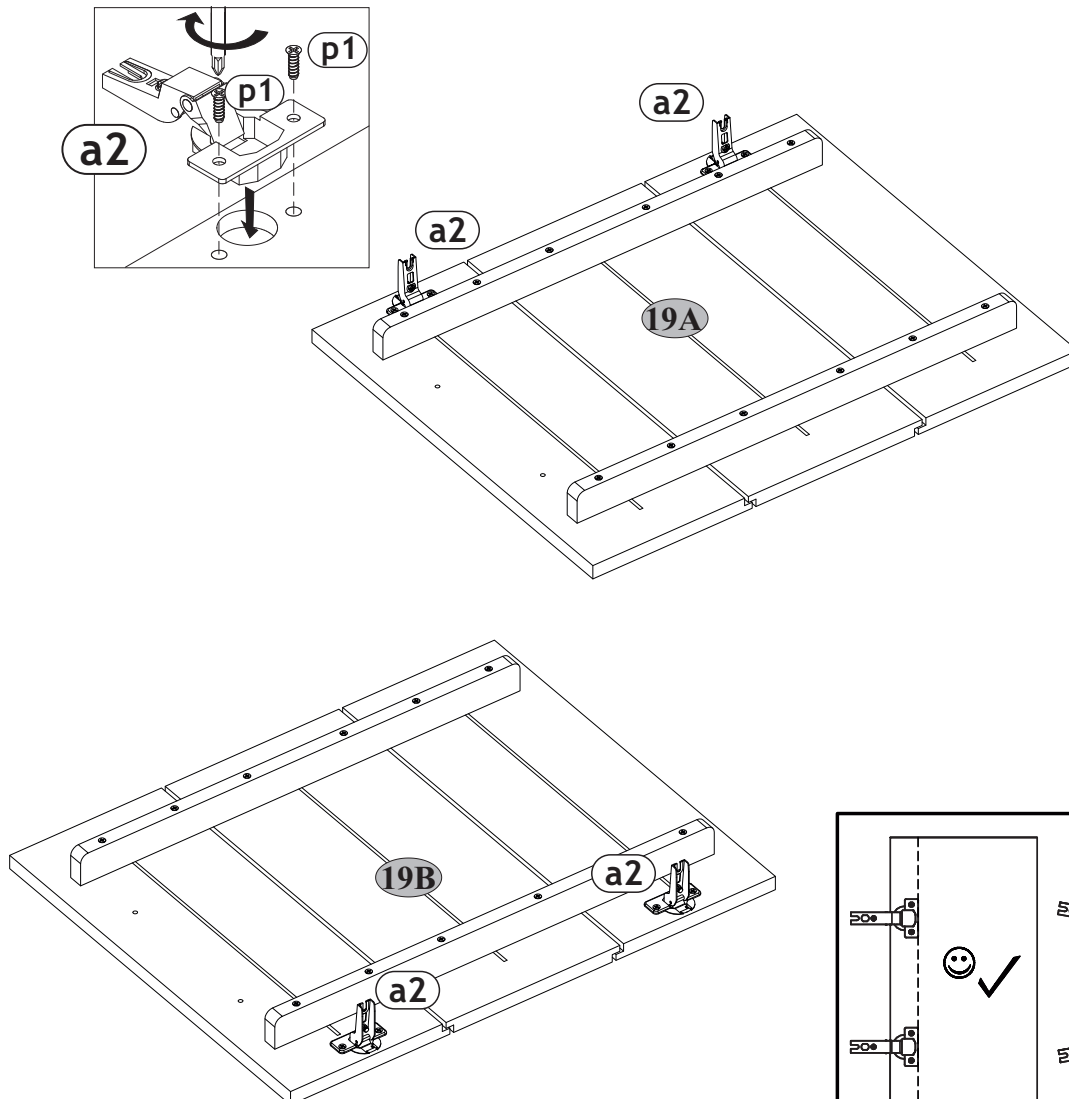

4





8x



e



8x  s1

1x  z1

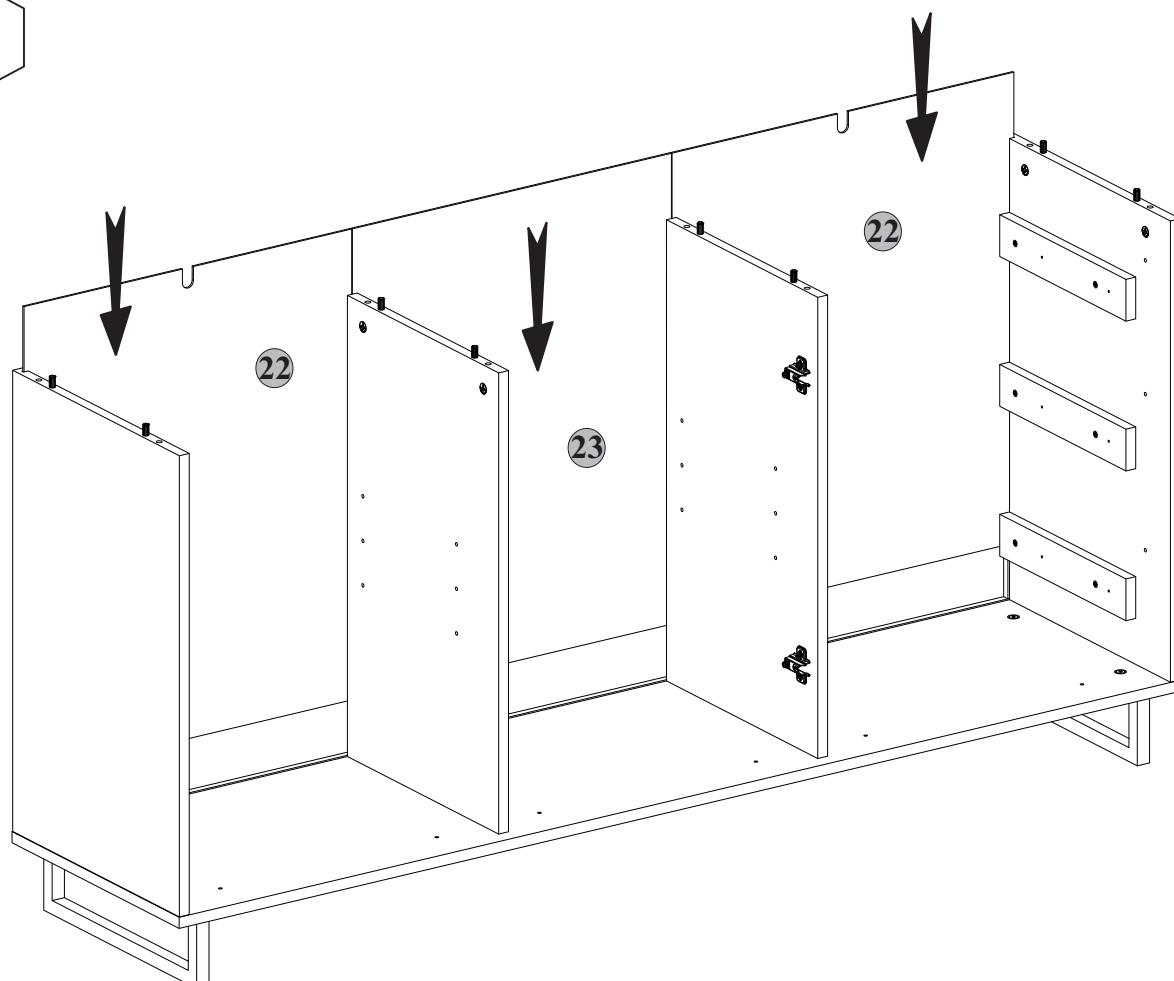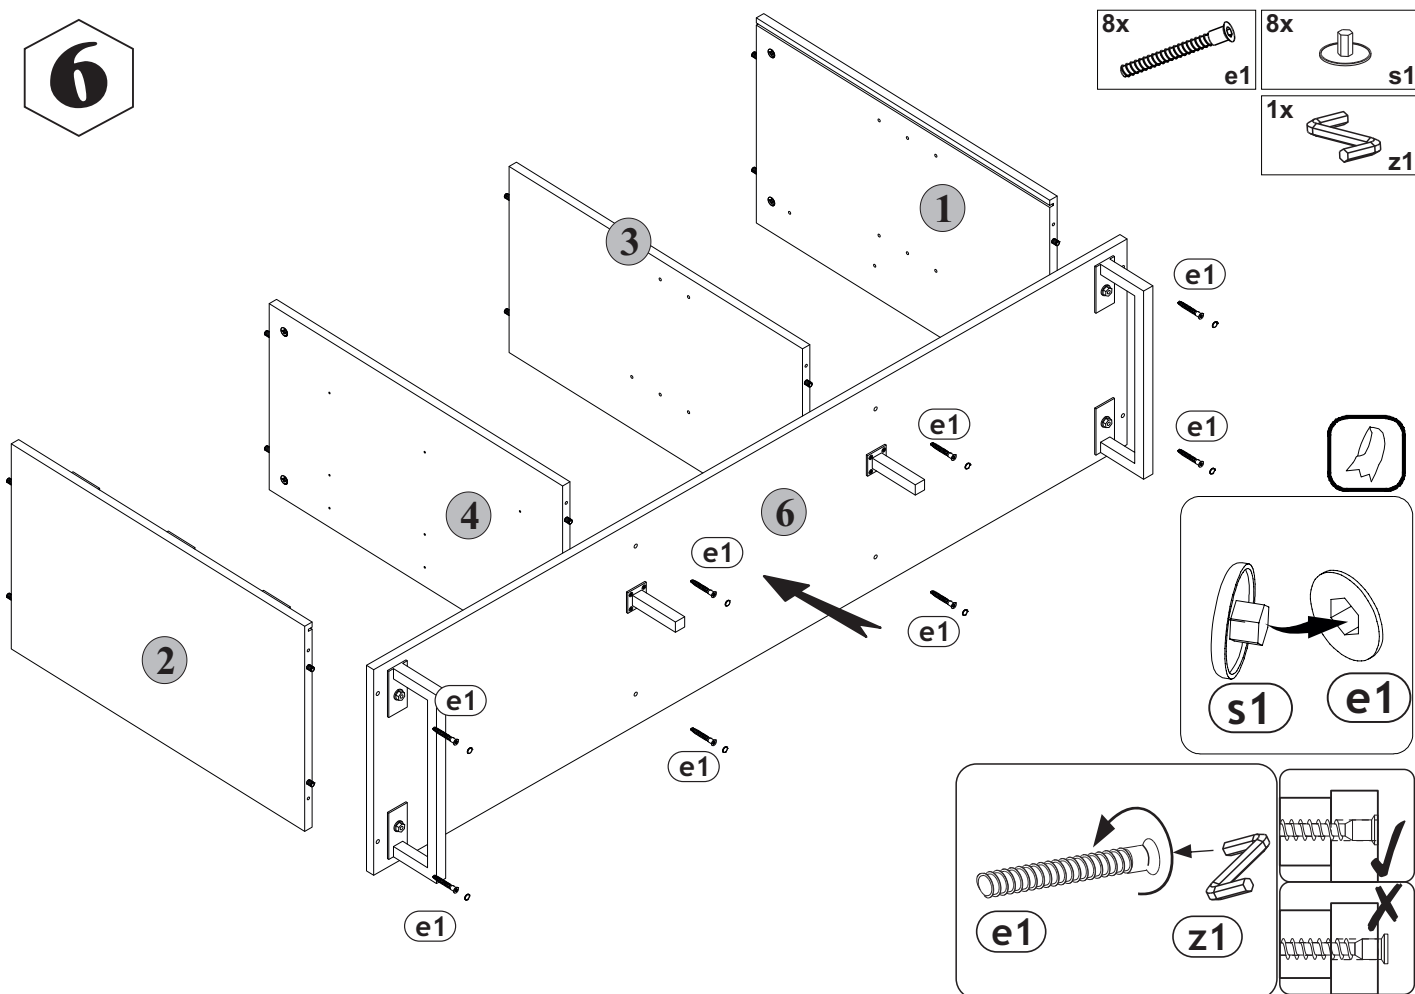


5

8

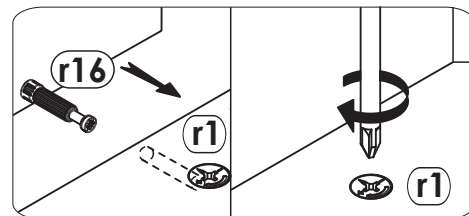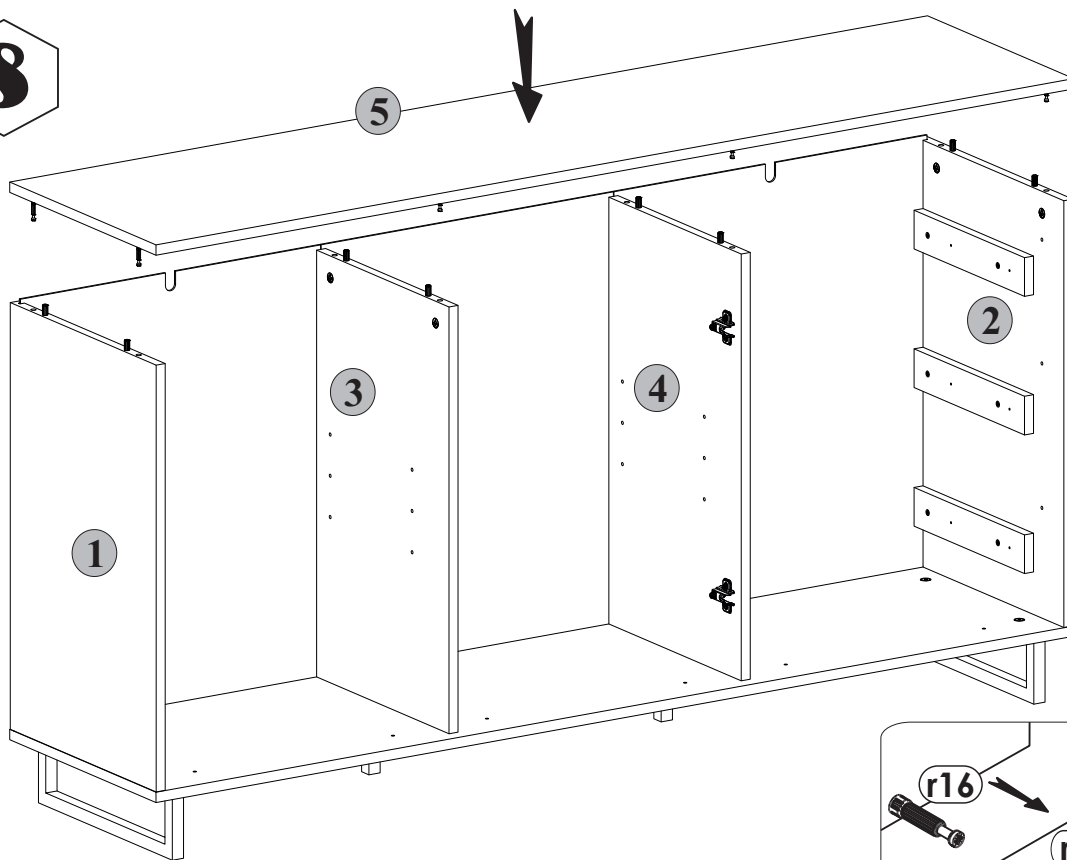






9

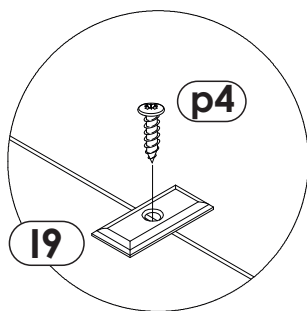

18x
I2

6x
I9



6x
φ3.5x16 mm
p4

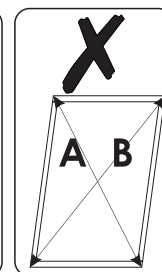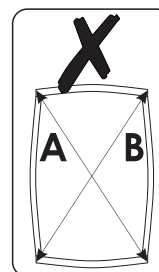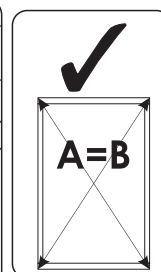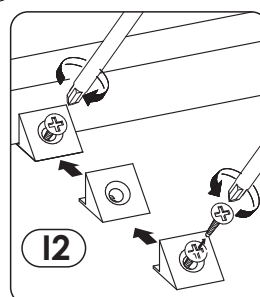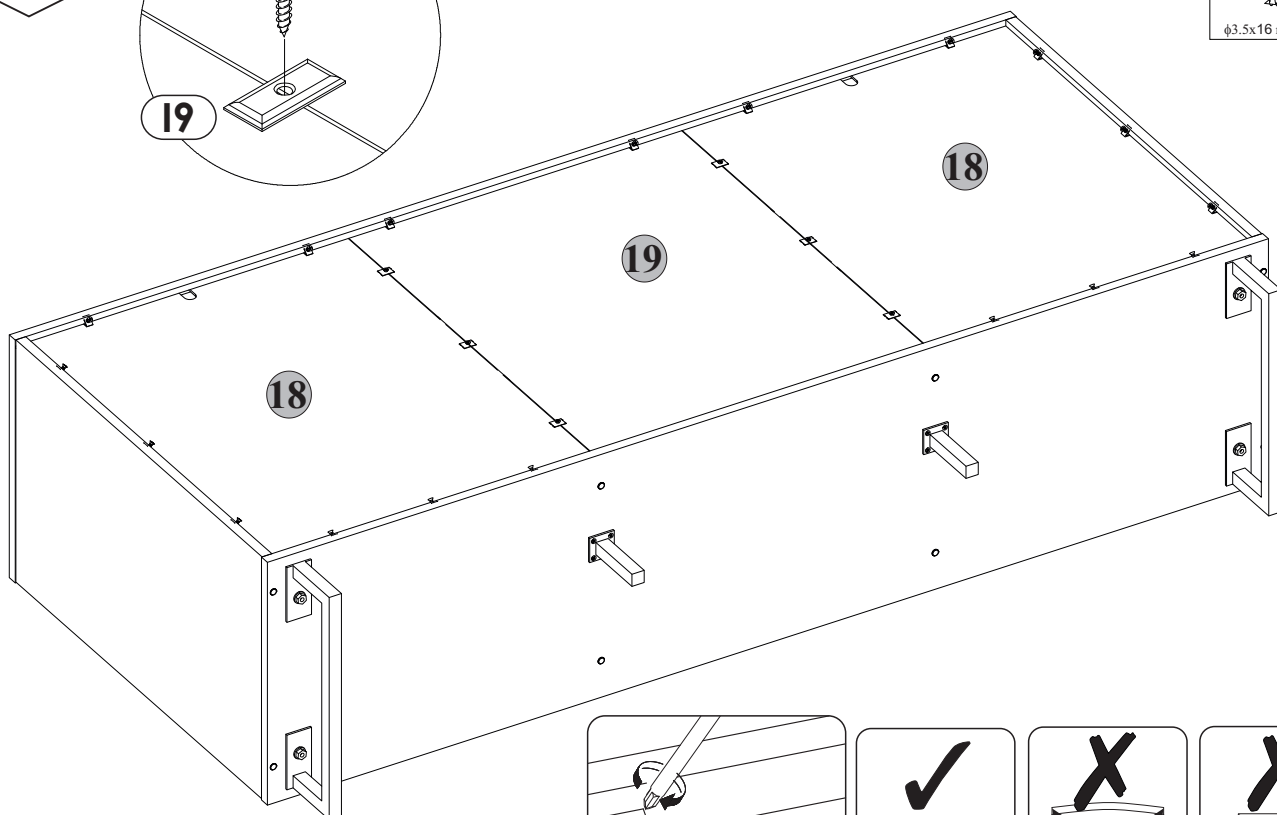

6



10

6x
φ6x20 mm
e23

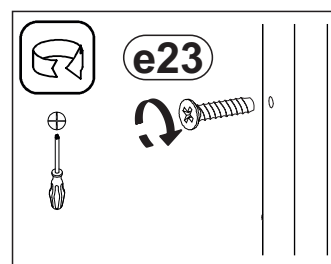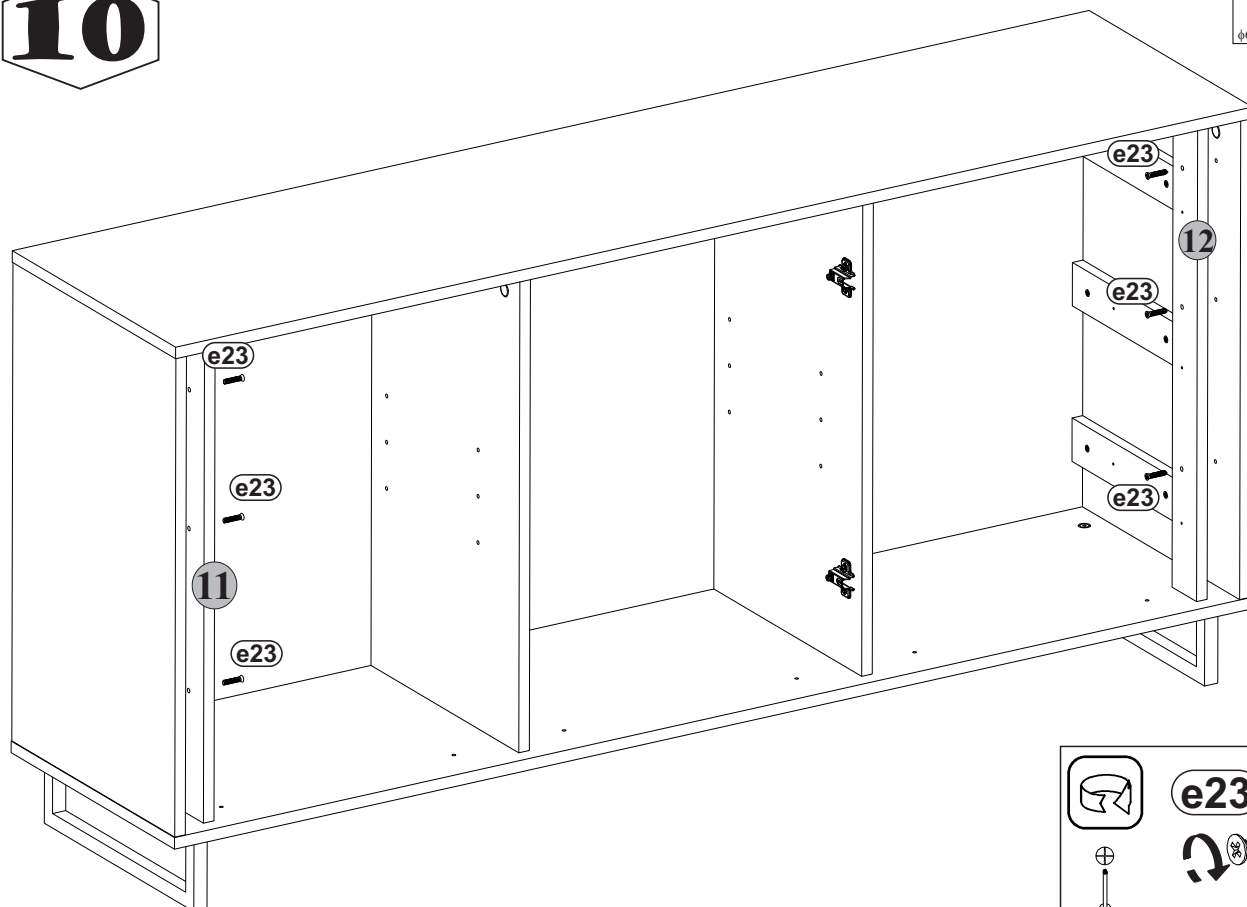













11

12x
φ6x20 mm
e23







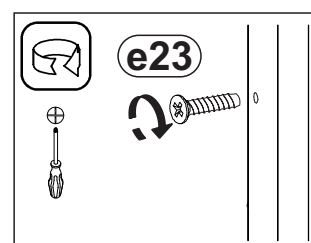
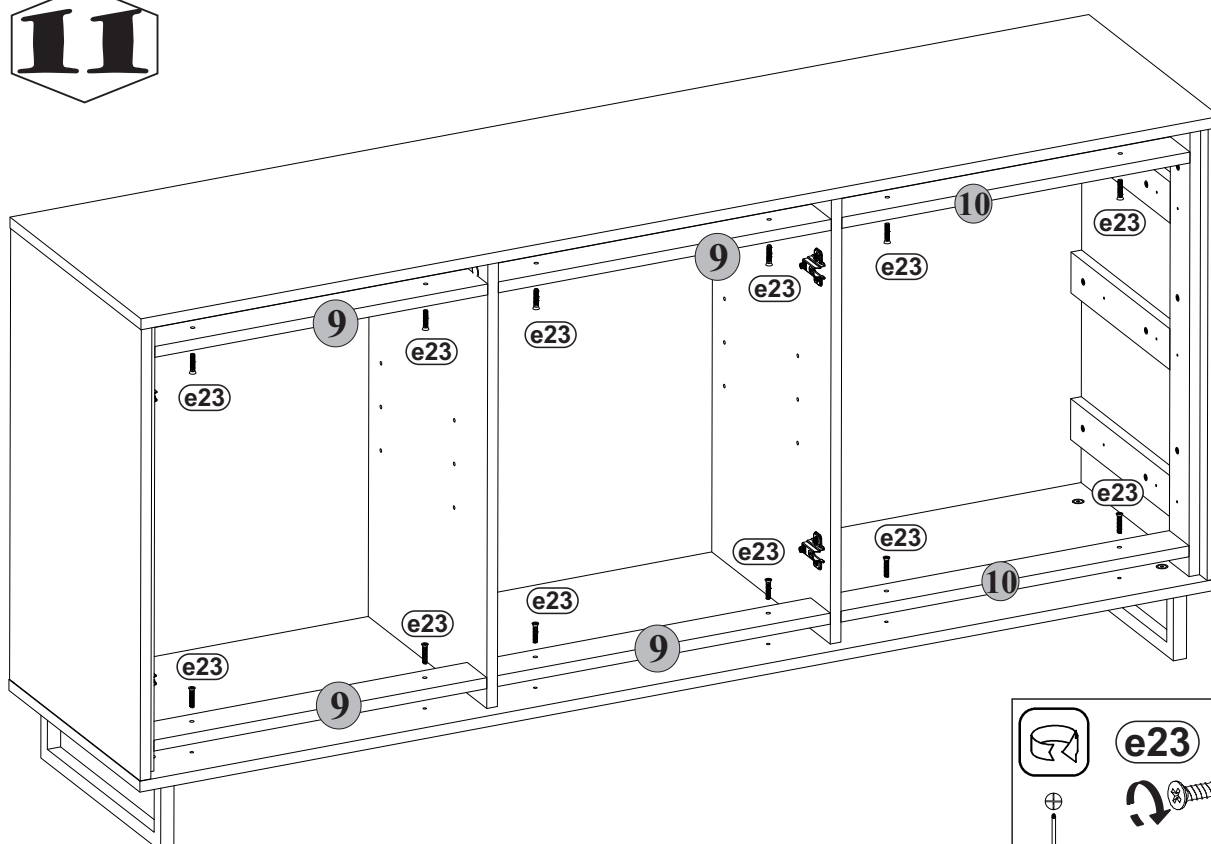


7









12

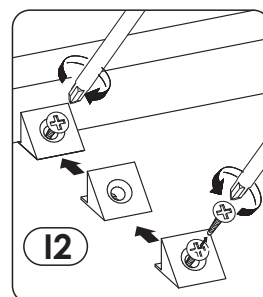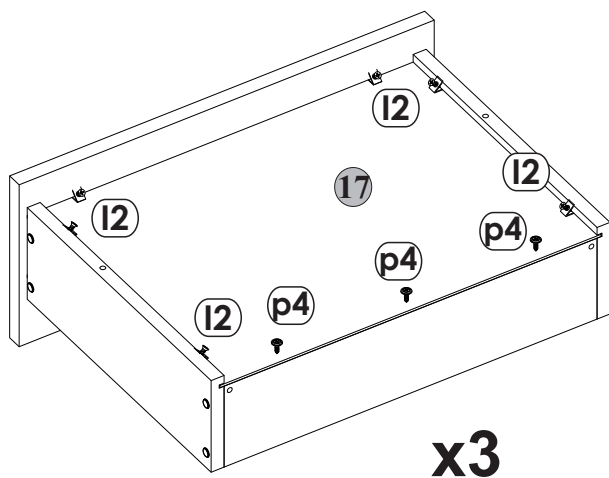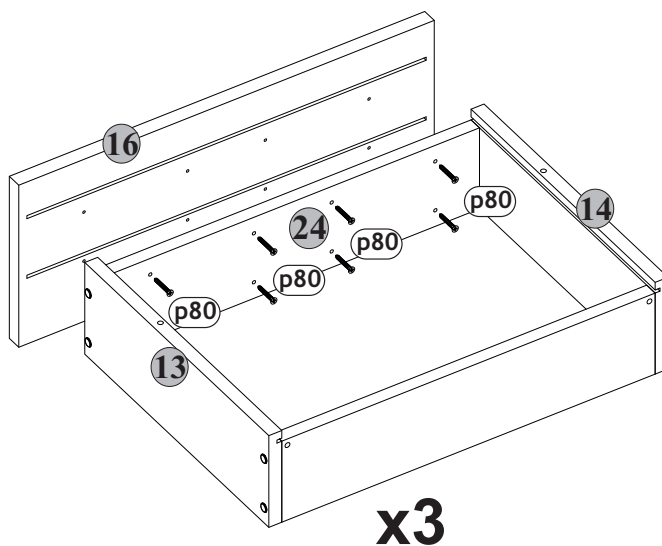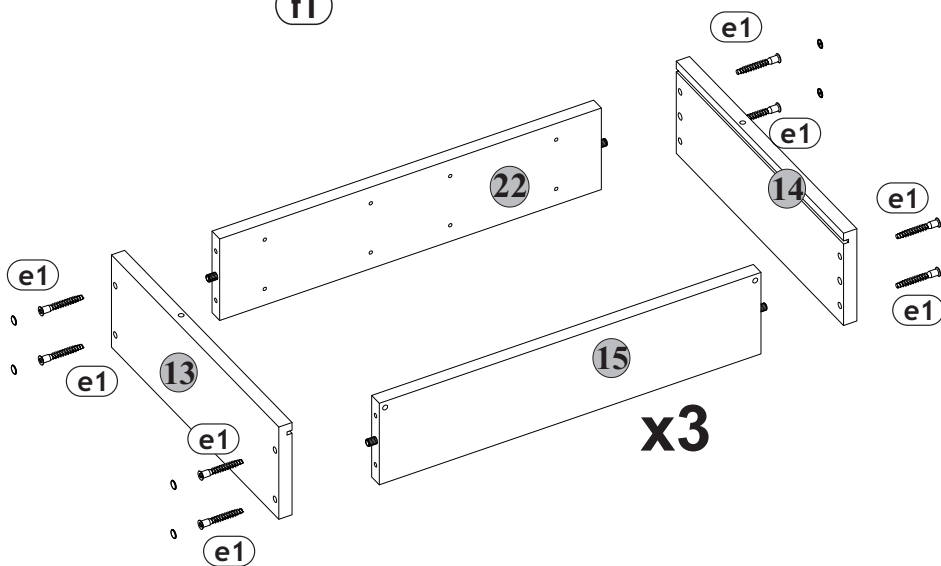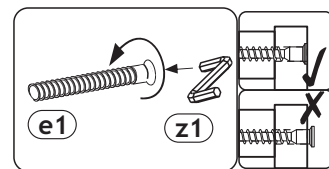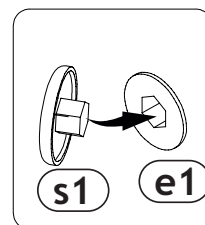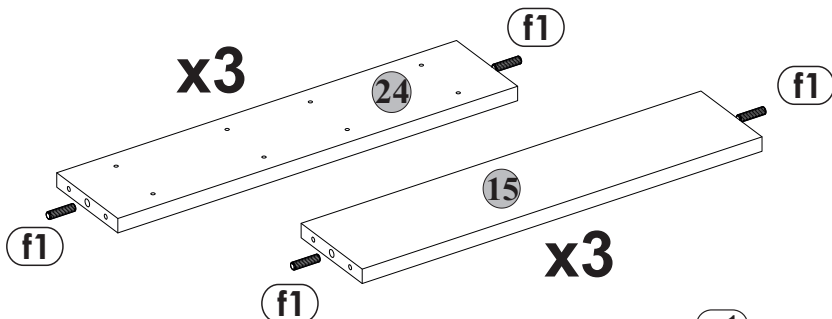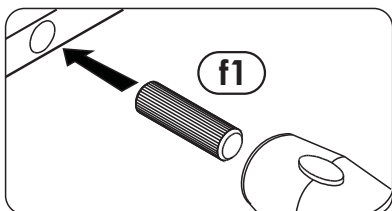

13

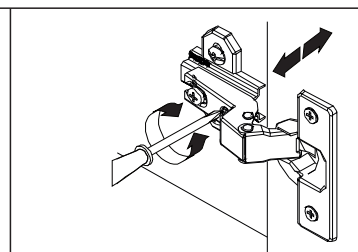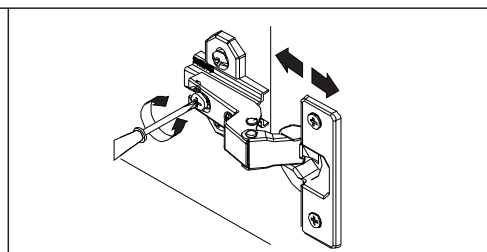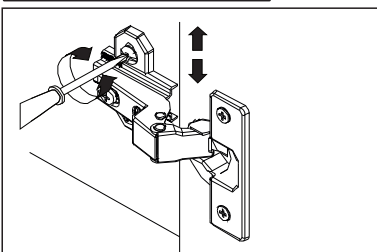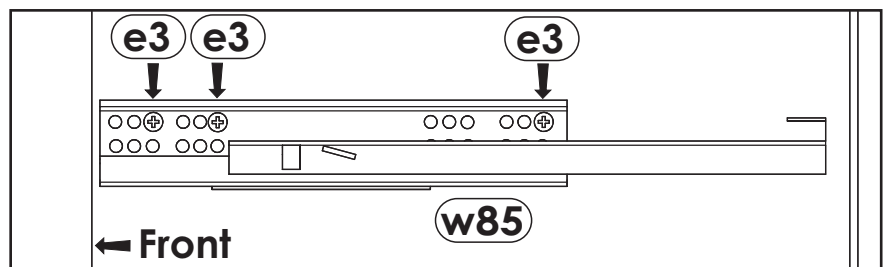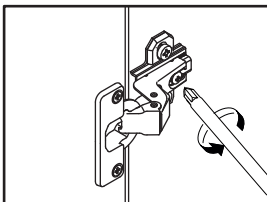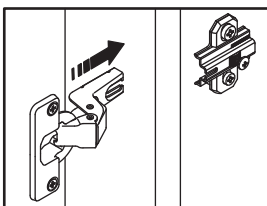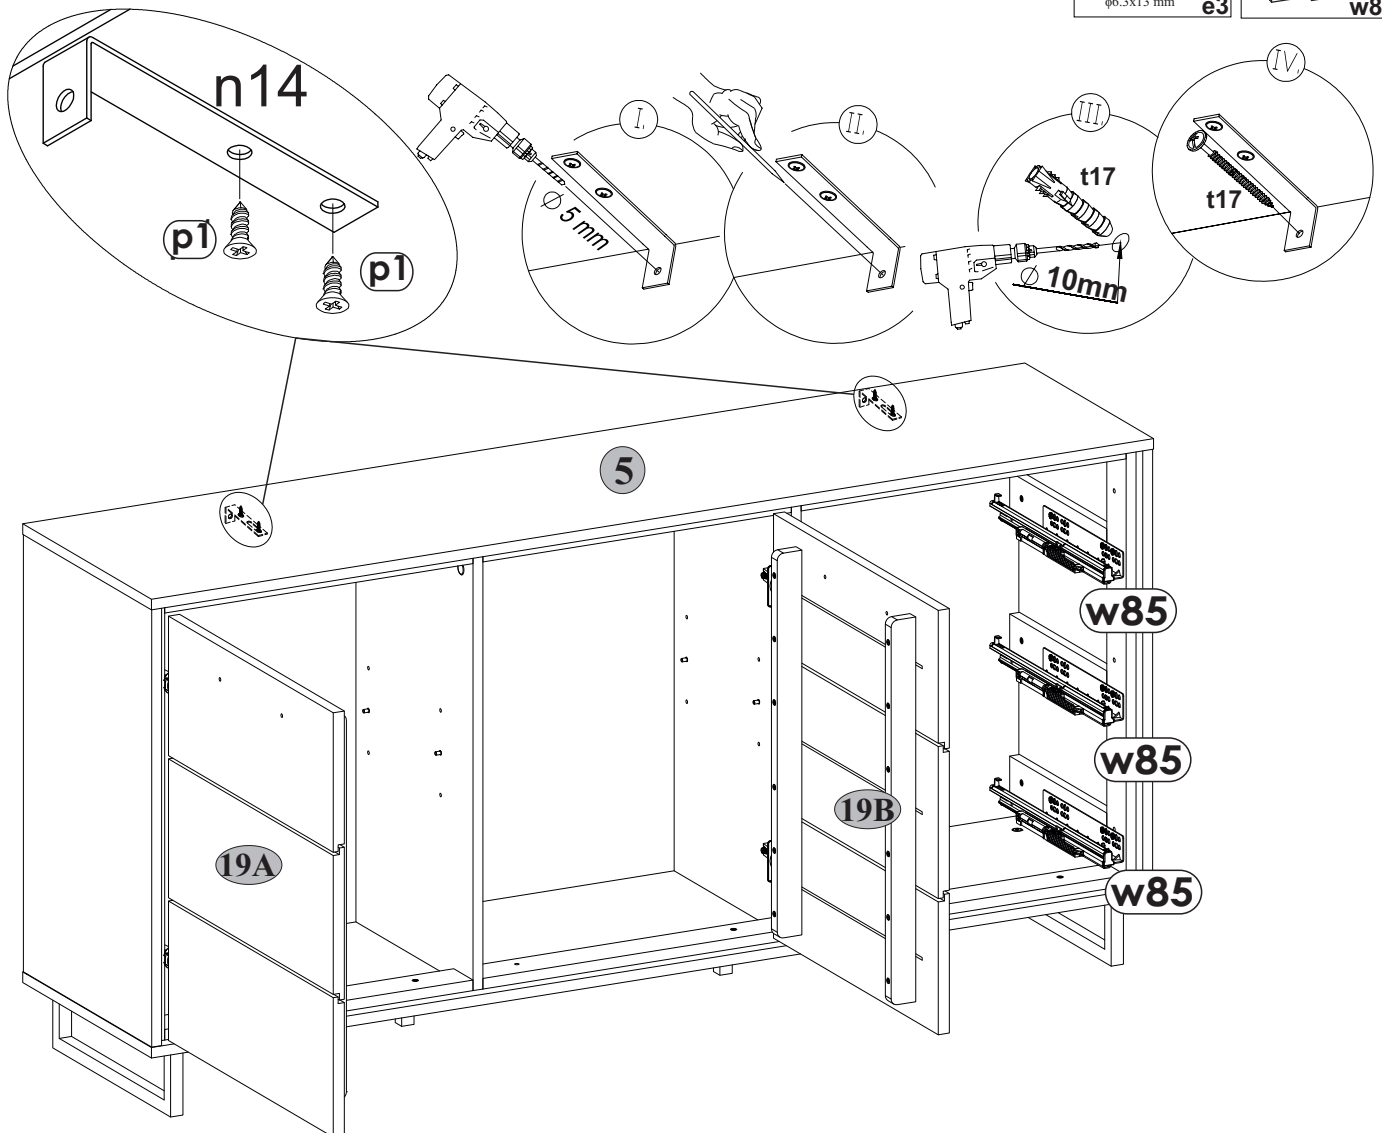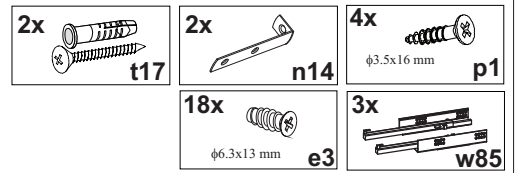

I4

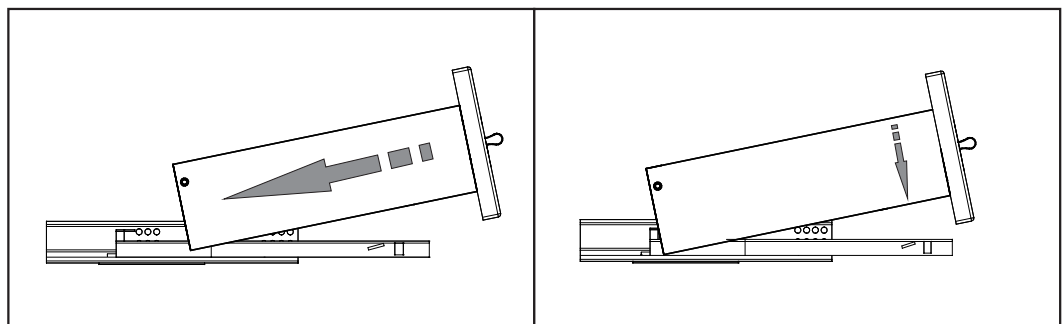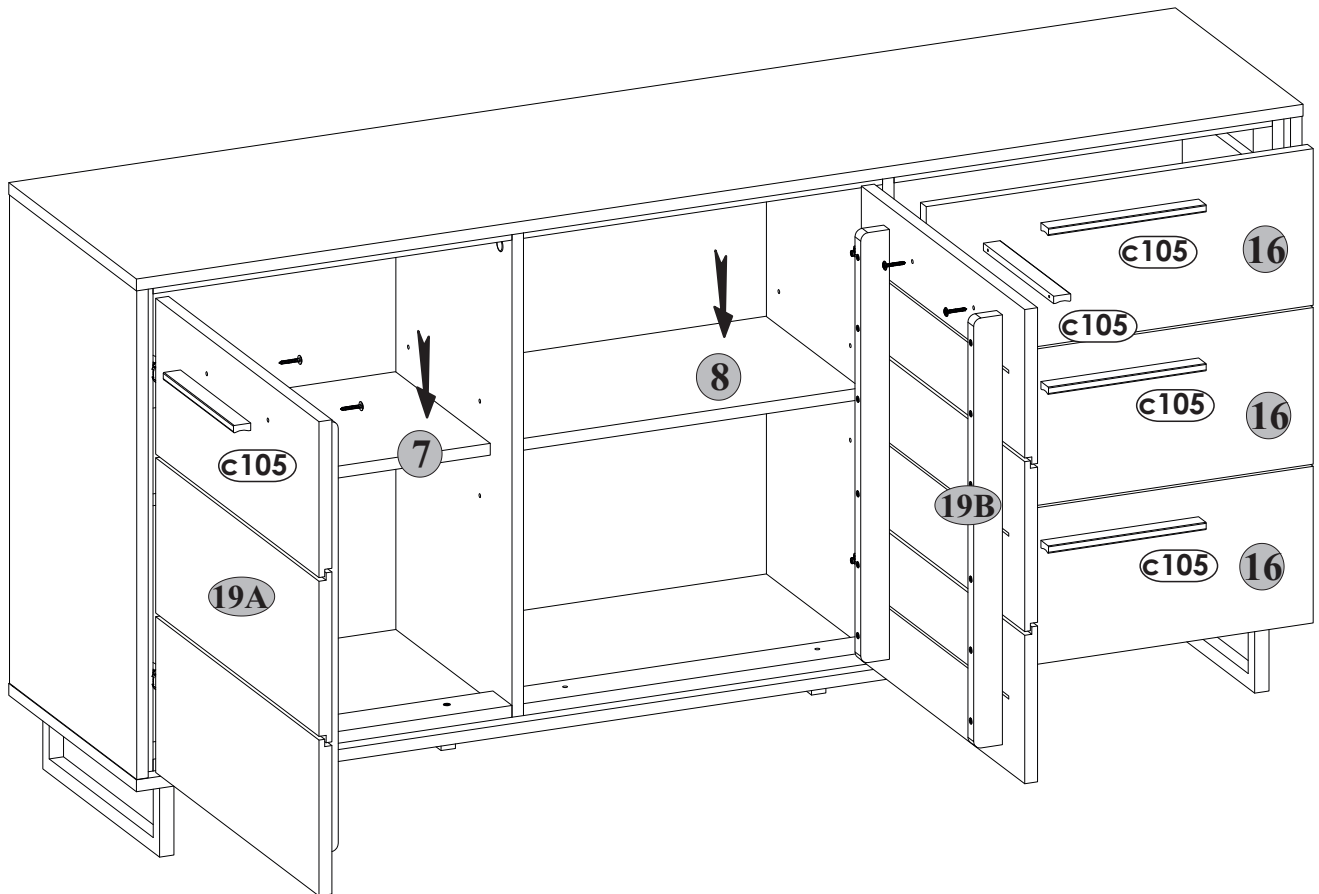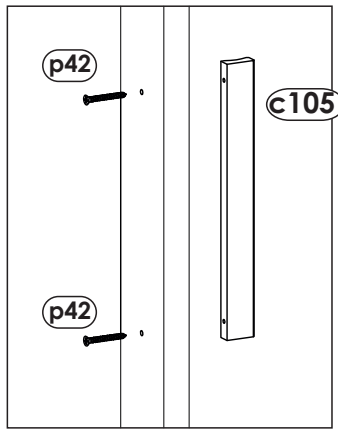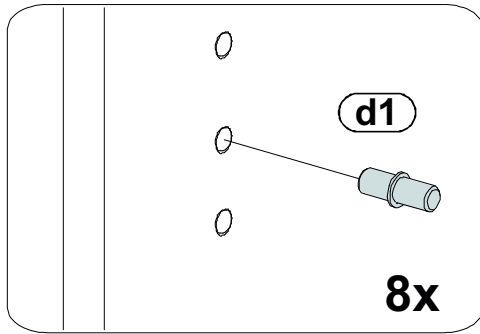

10