

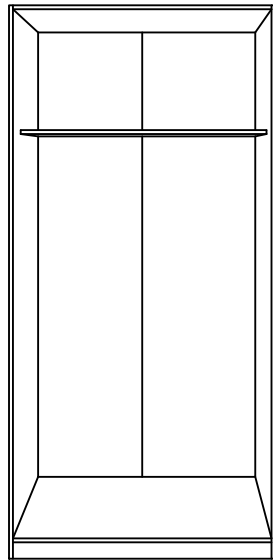





1089

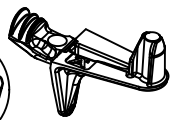



1

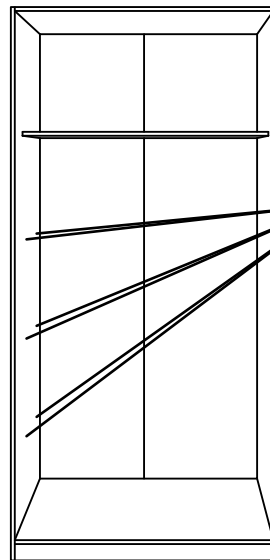


1089

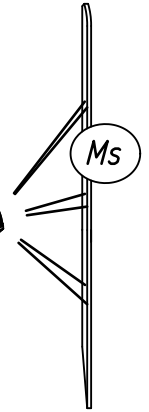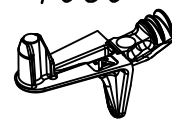

2

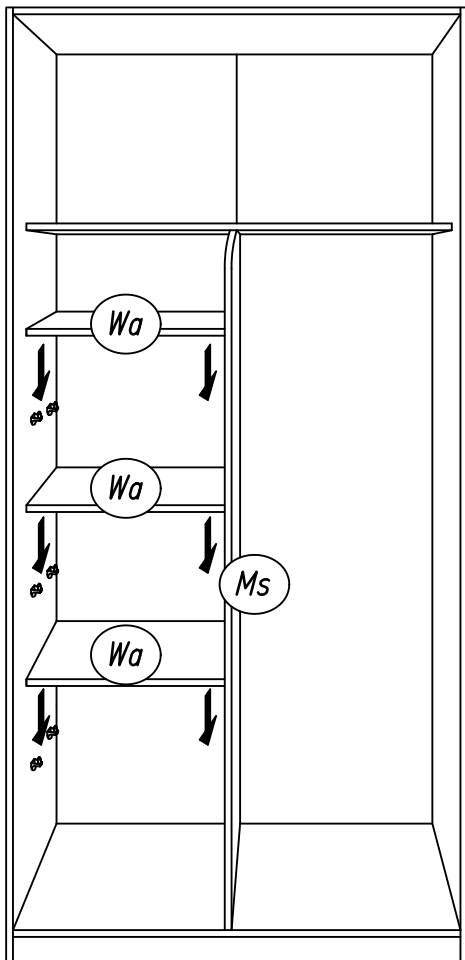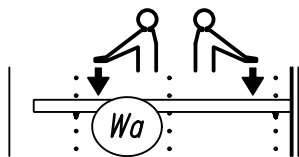




3

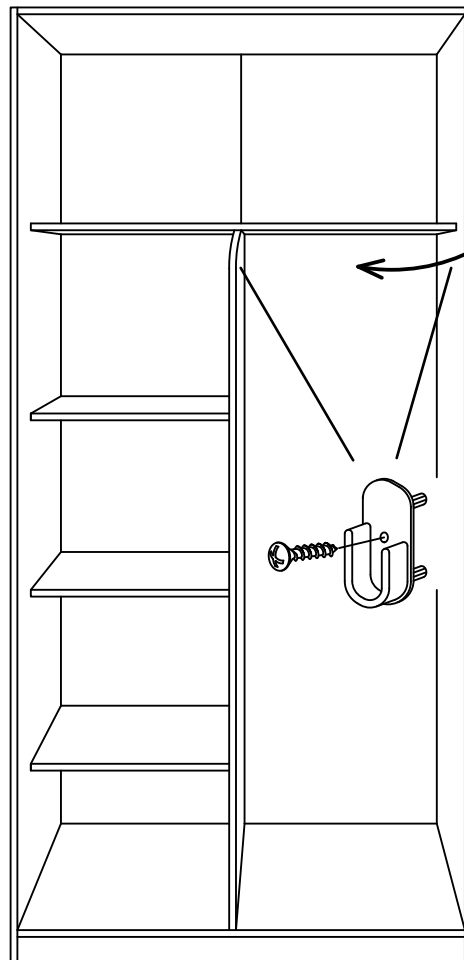

1.





MD105_03

rauch

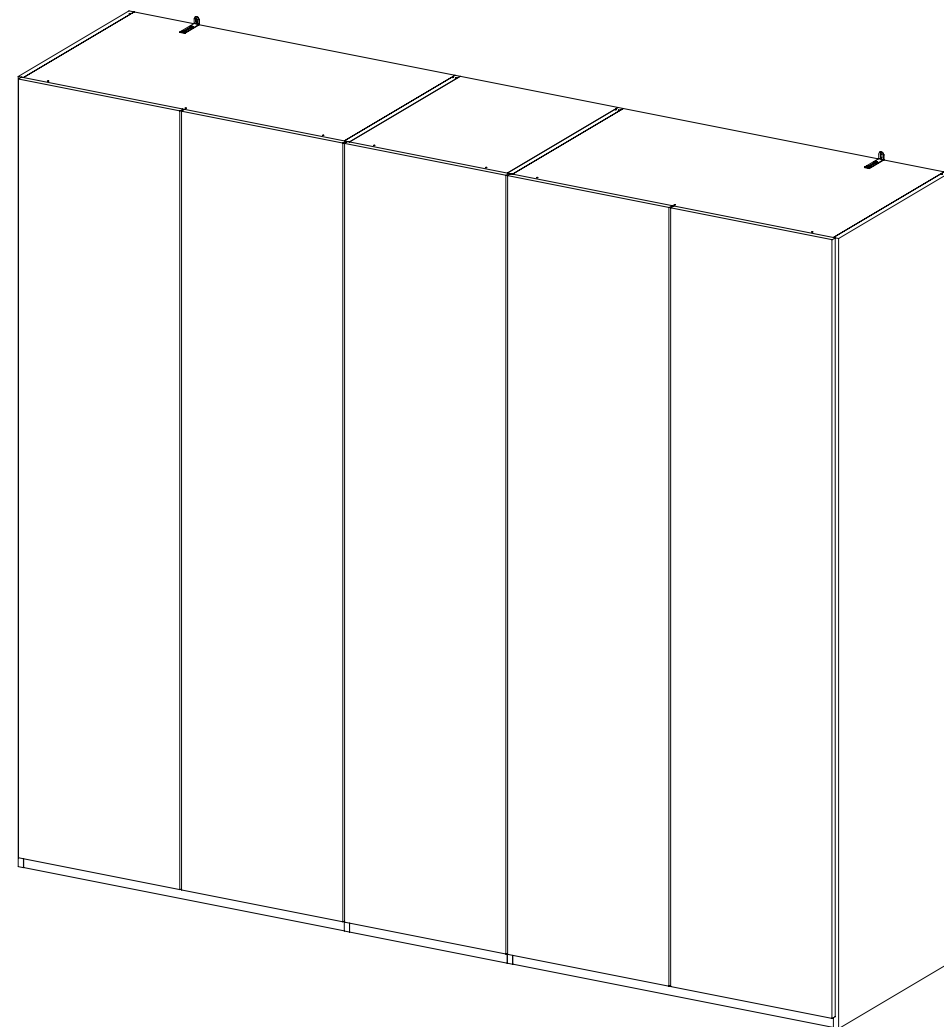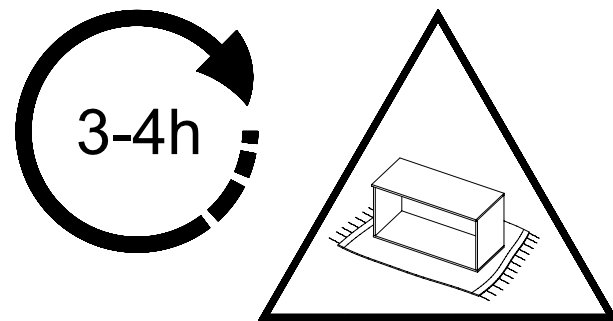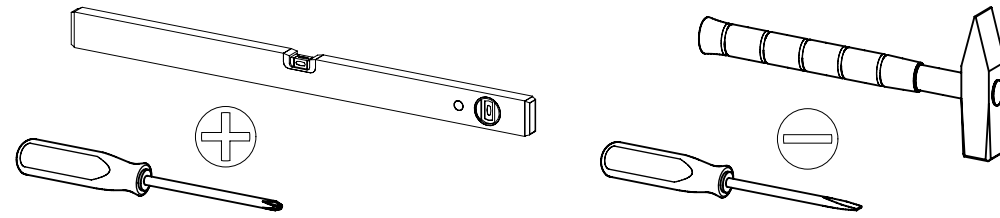





MD105

2.

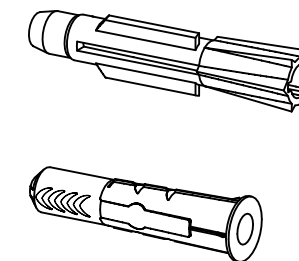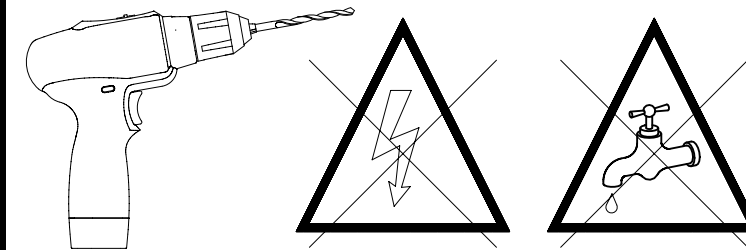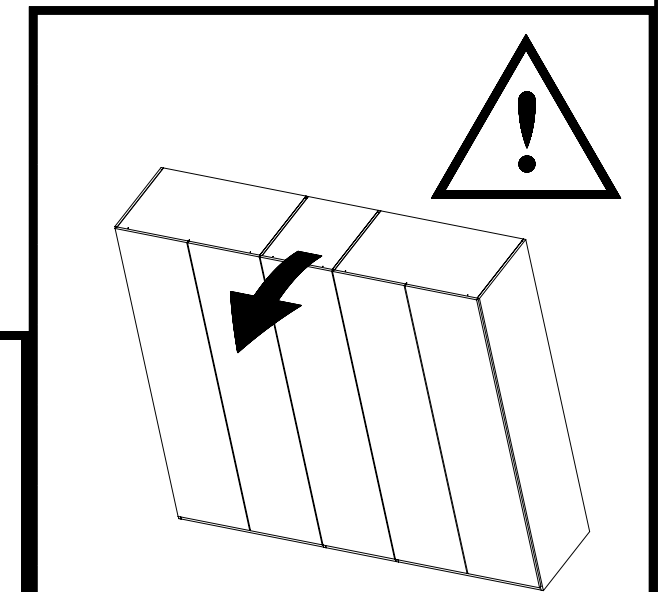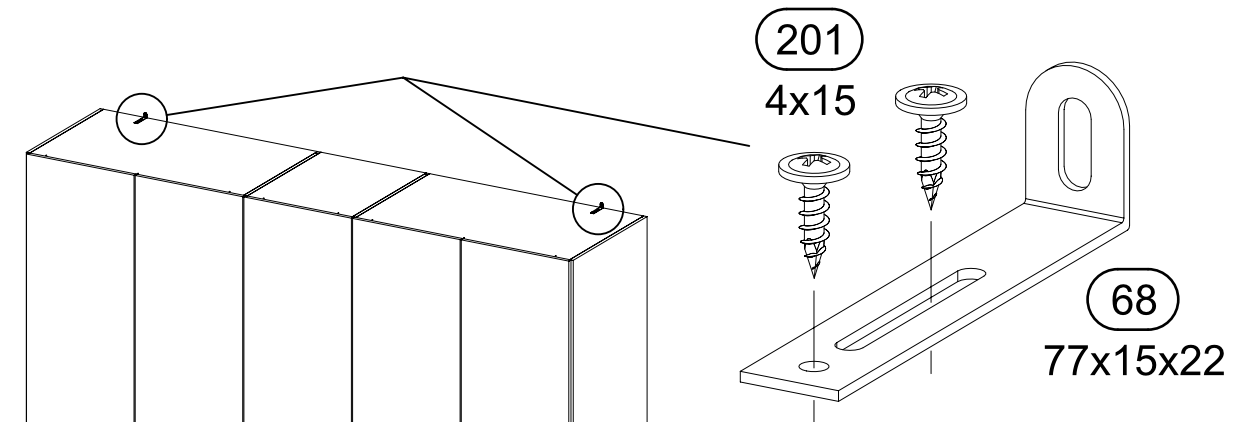

?





ØXmm









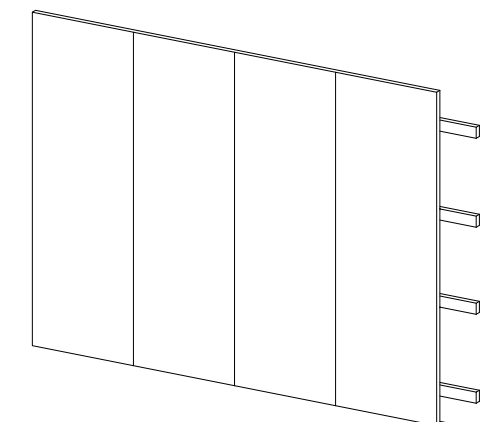
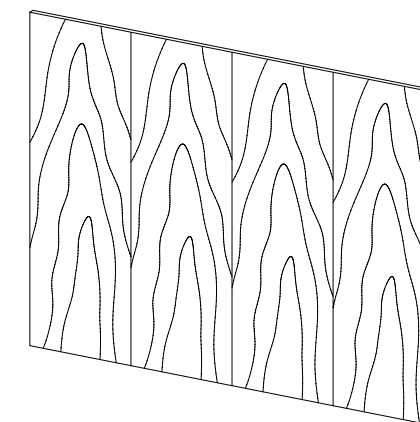
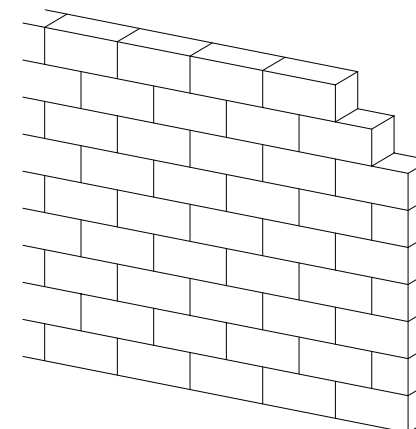
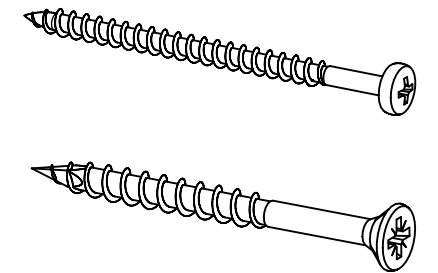



MD105




SE020 = SE030

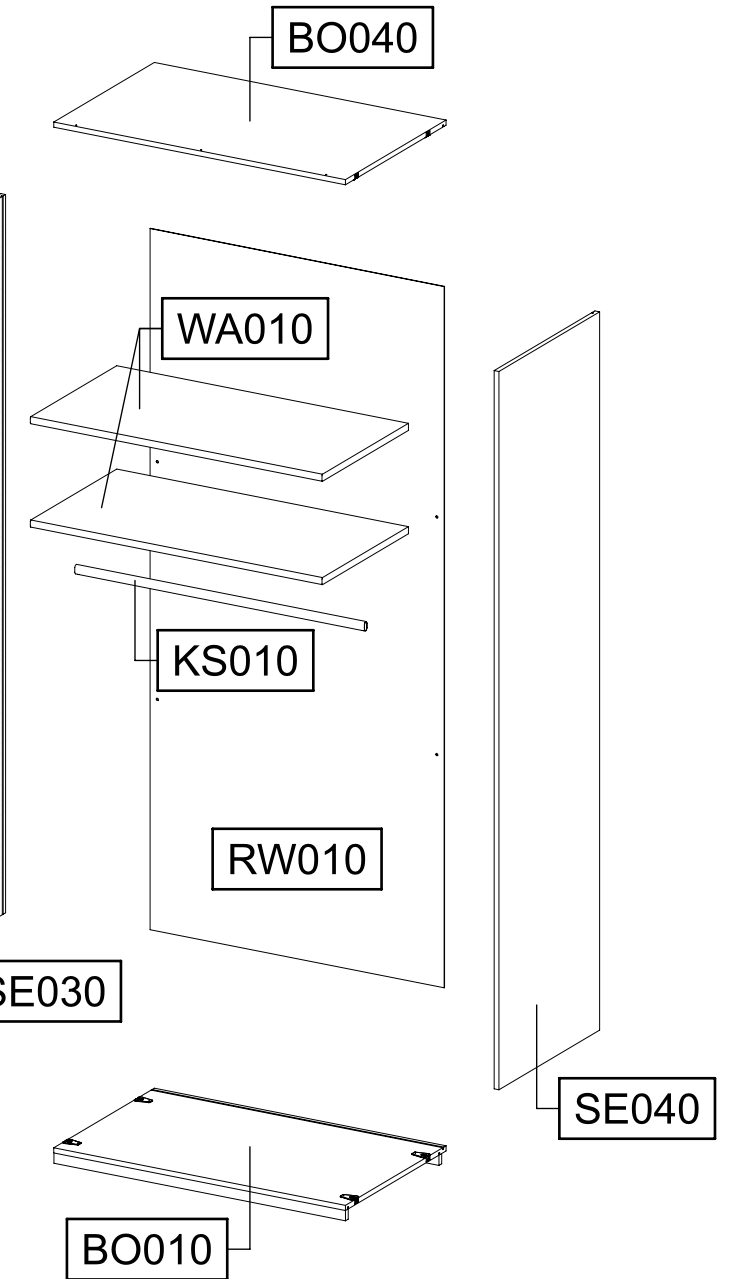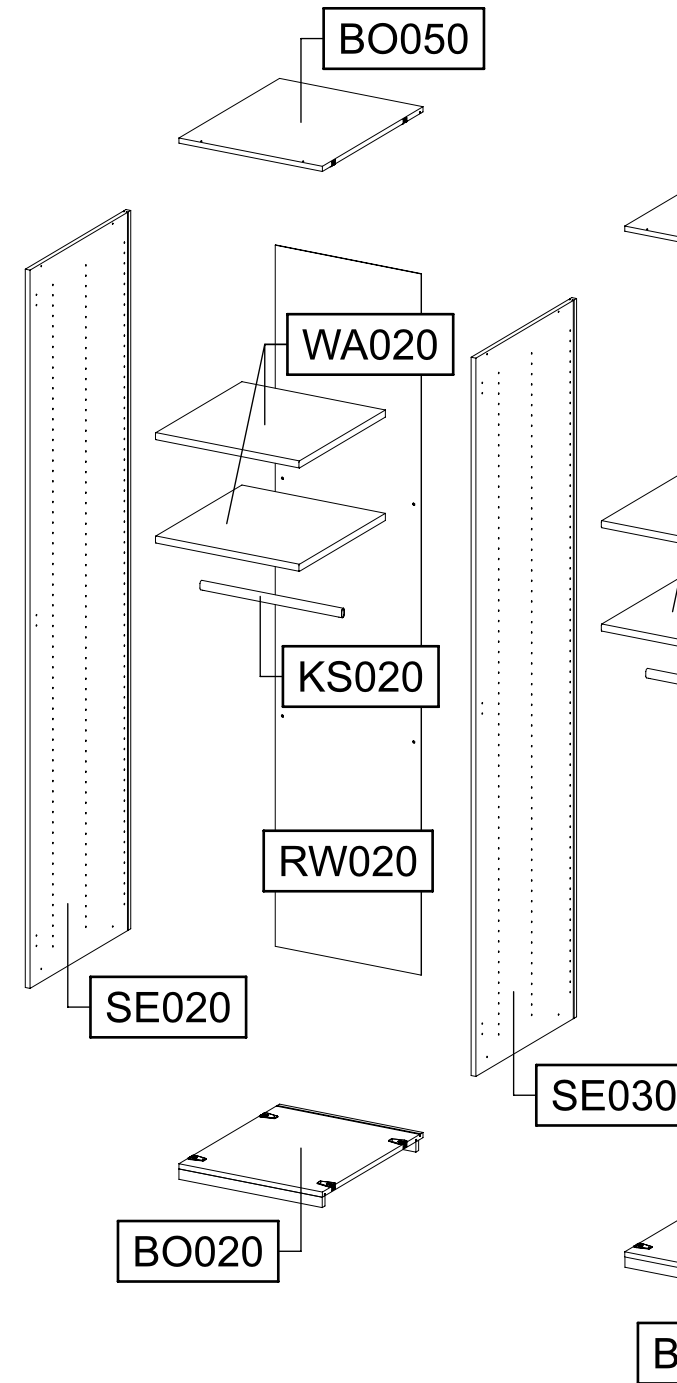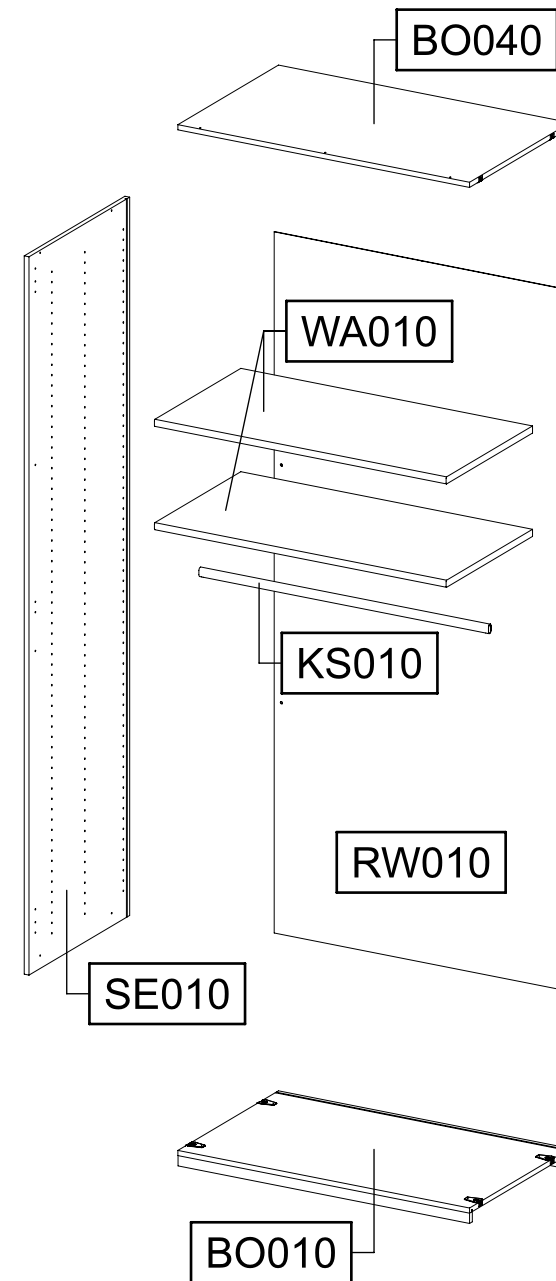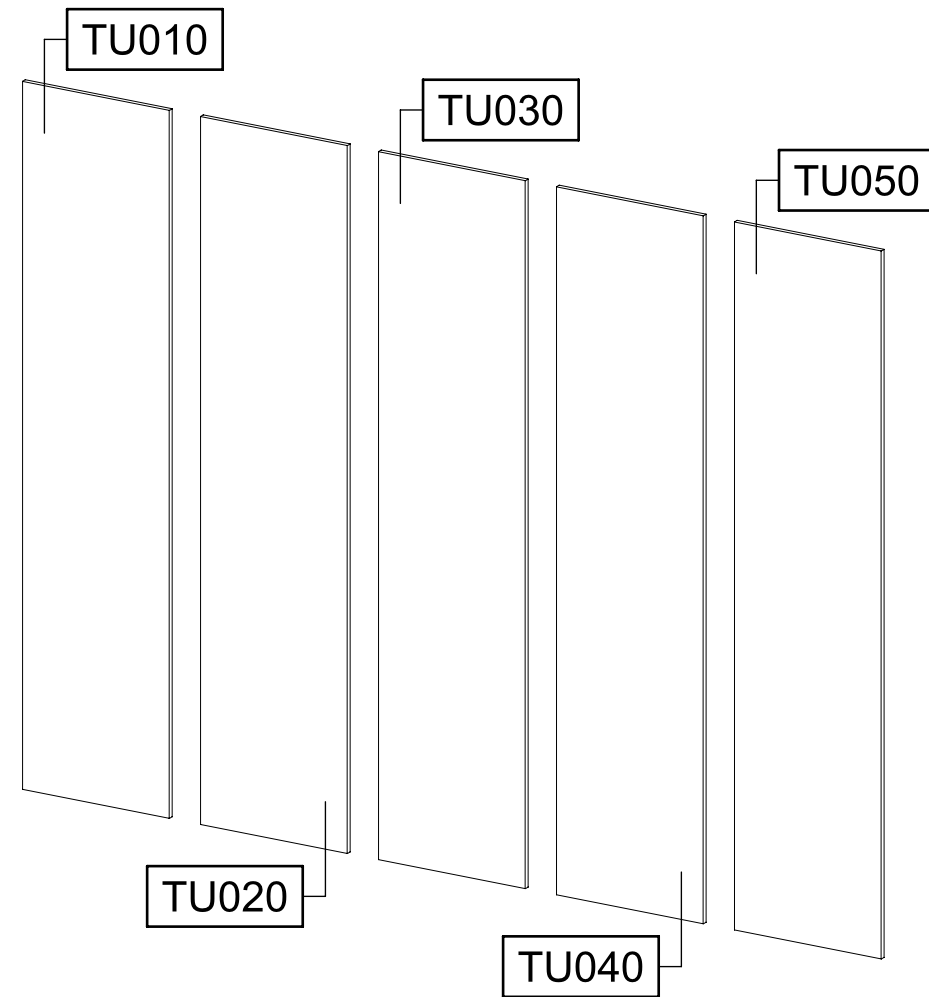

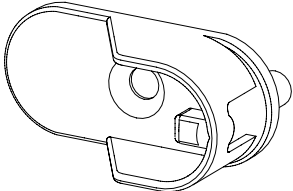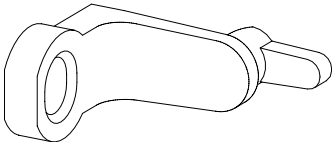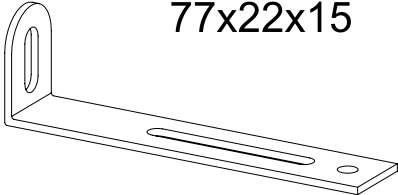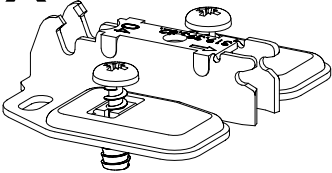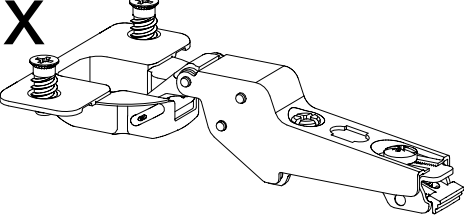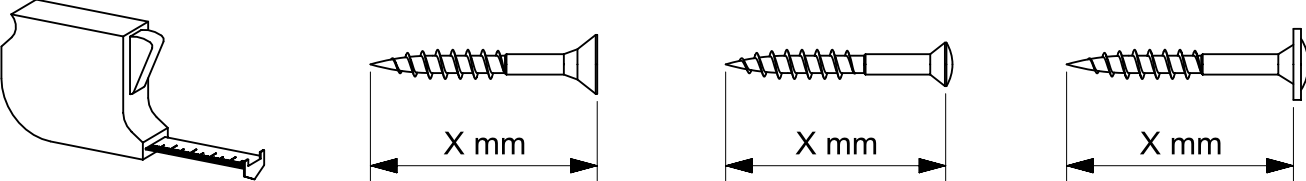8x 55x16x6,2 12 	6x 29 
12x 47 	2x 77x22x15 68 
4x 4x15 201 	6x 3,5x15 205 
30-40x 4x13 621 	12x 6,5x12 779 
8x 1085 	8x 1086 
24x 1089 	15-20x 1291 
15-20x 1292 	
	

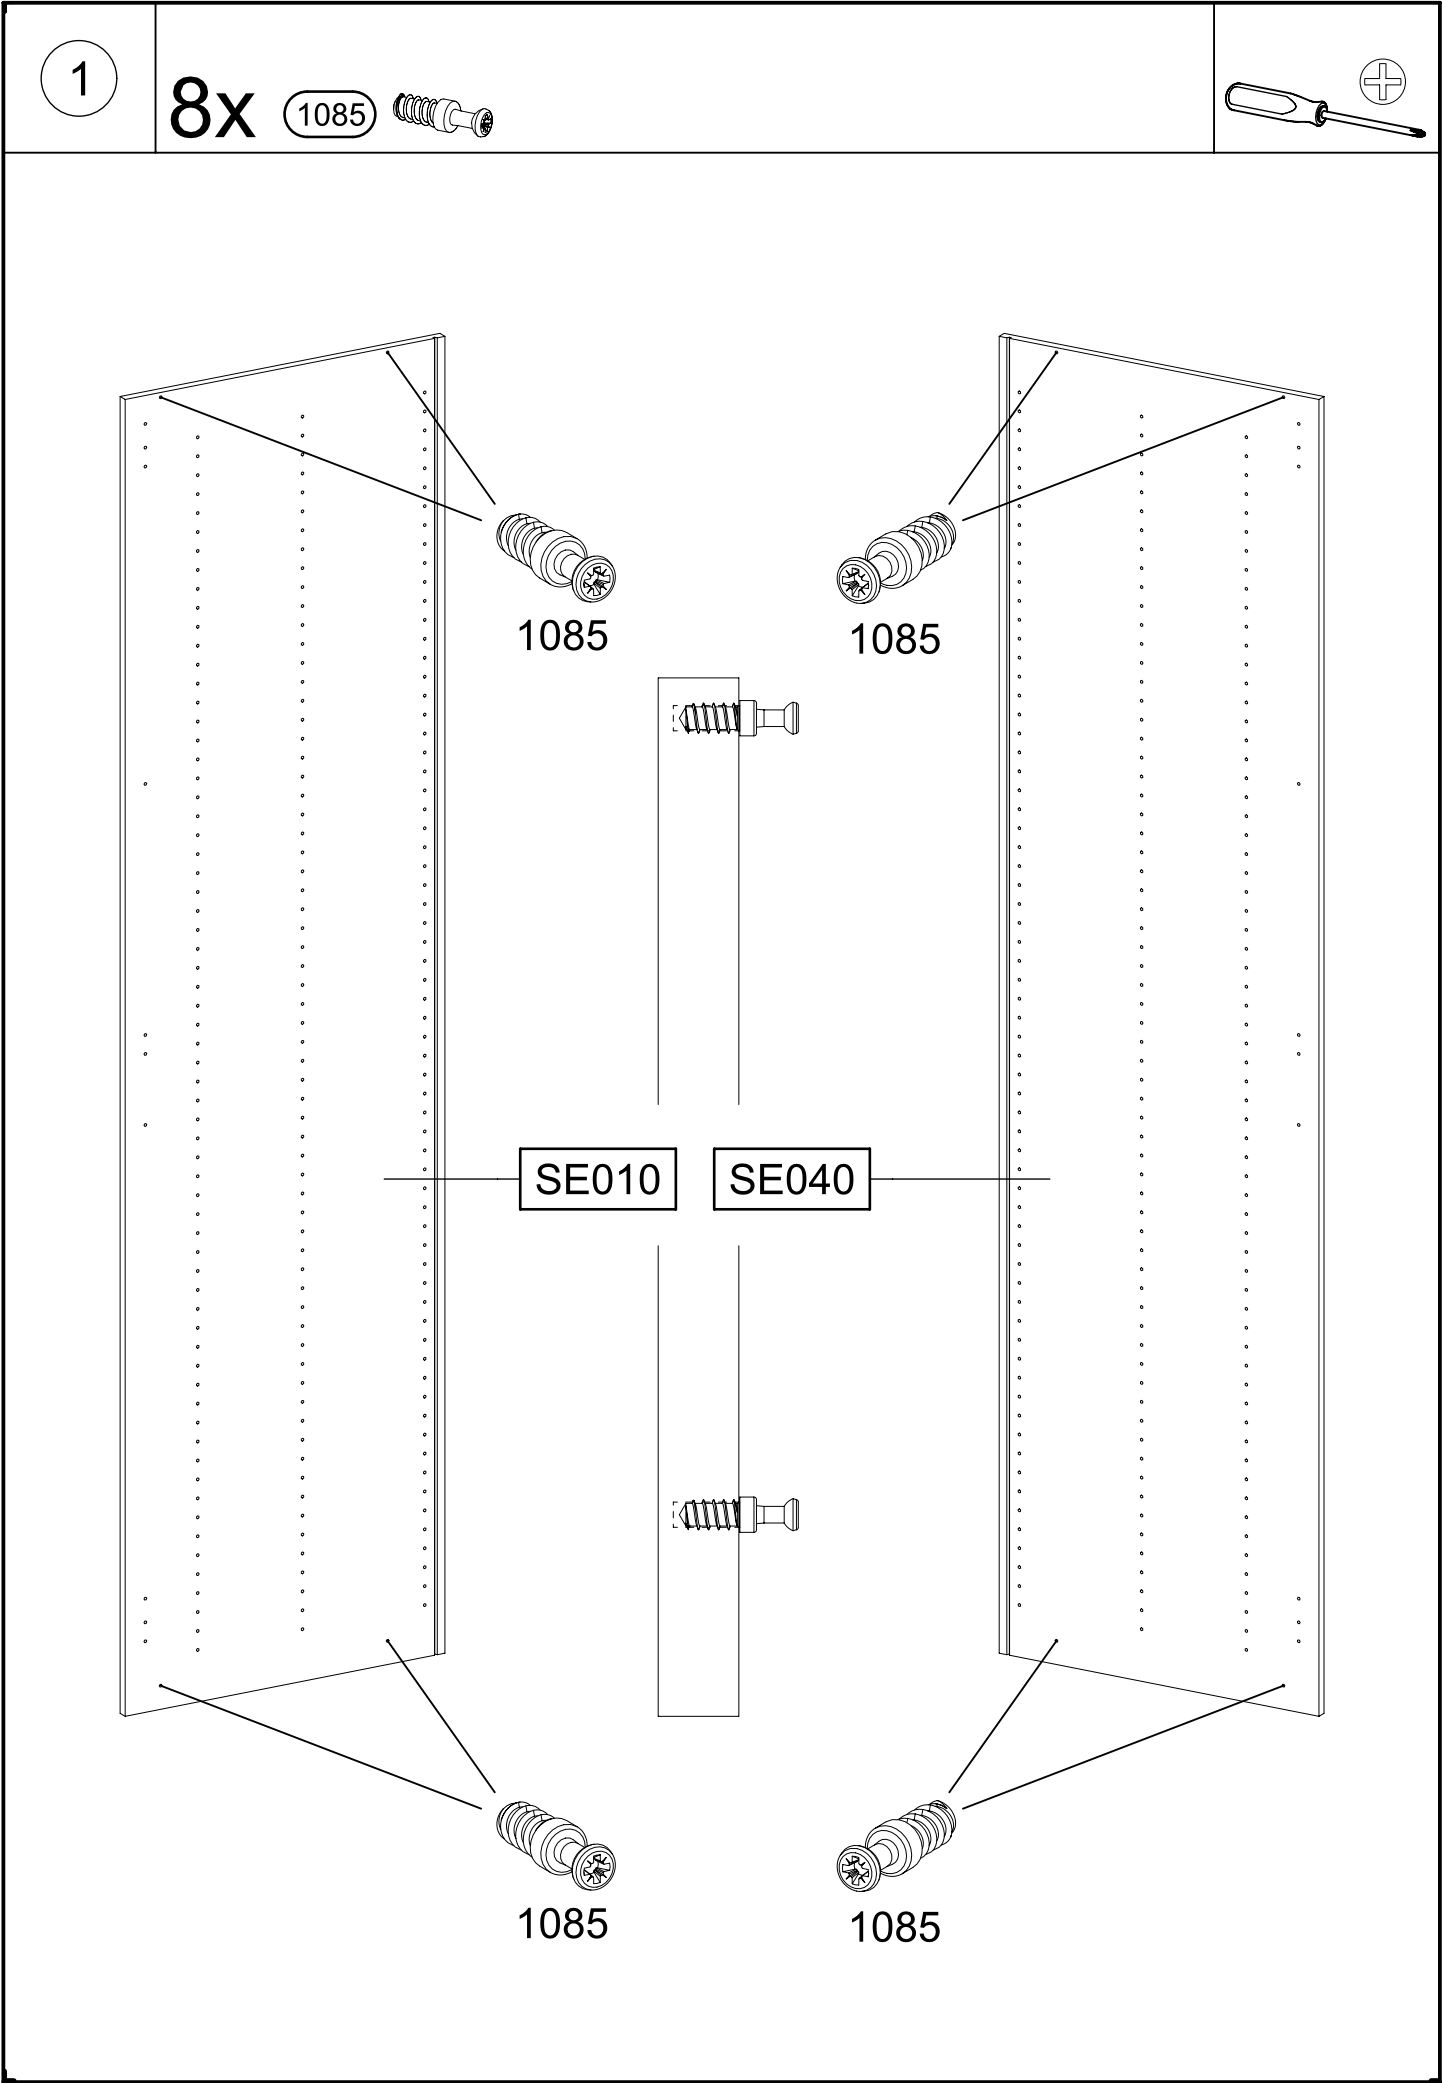


7.


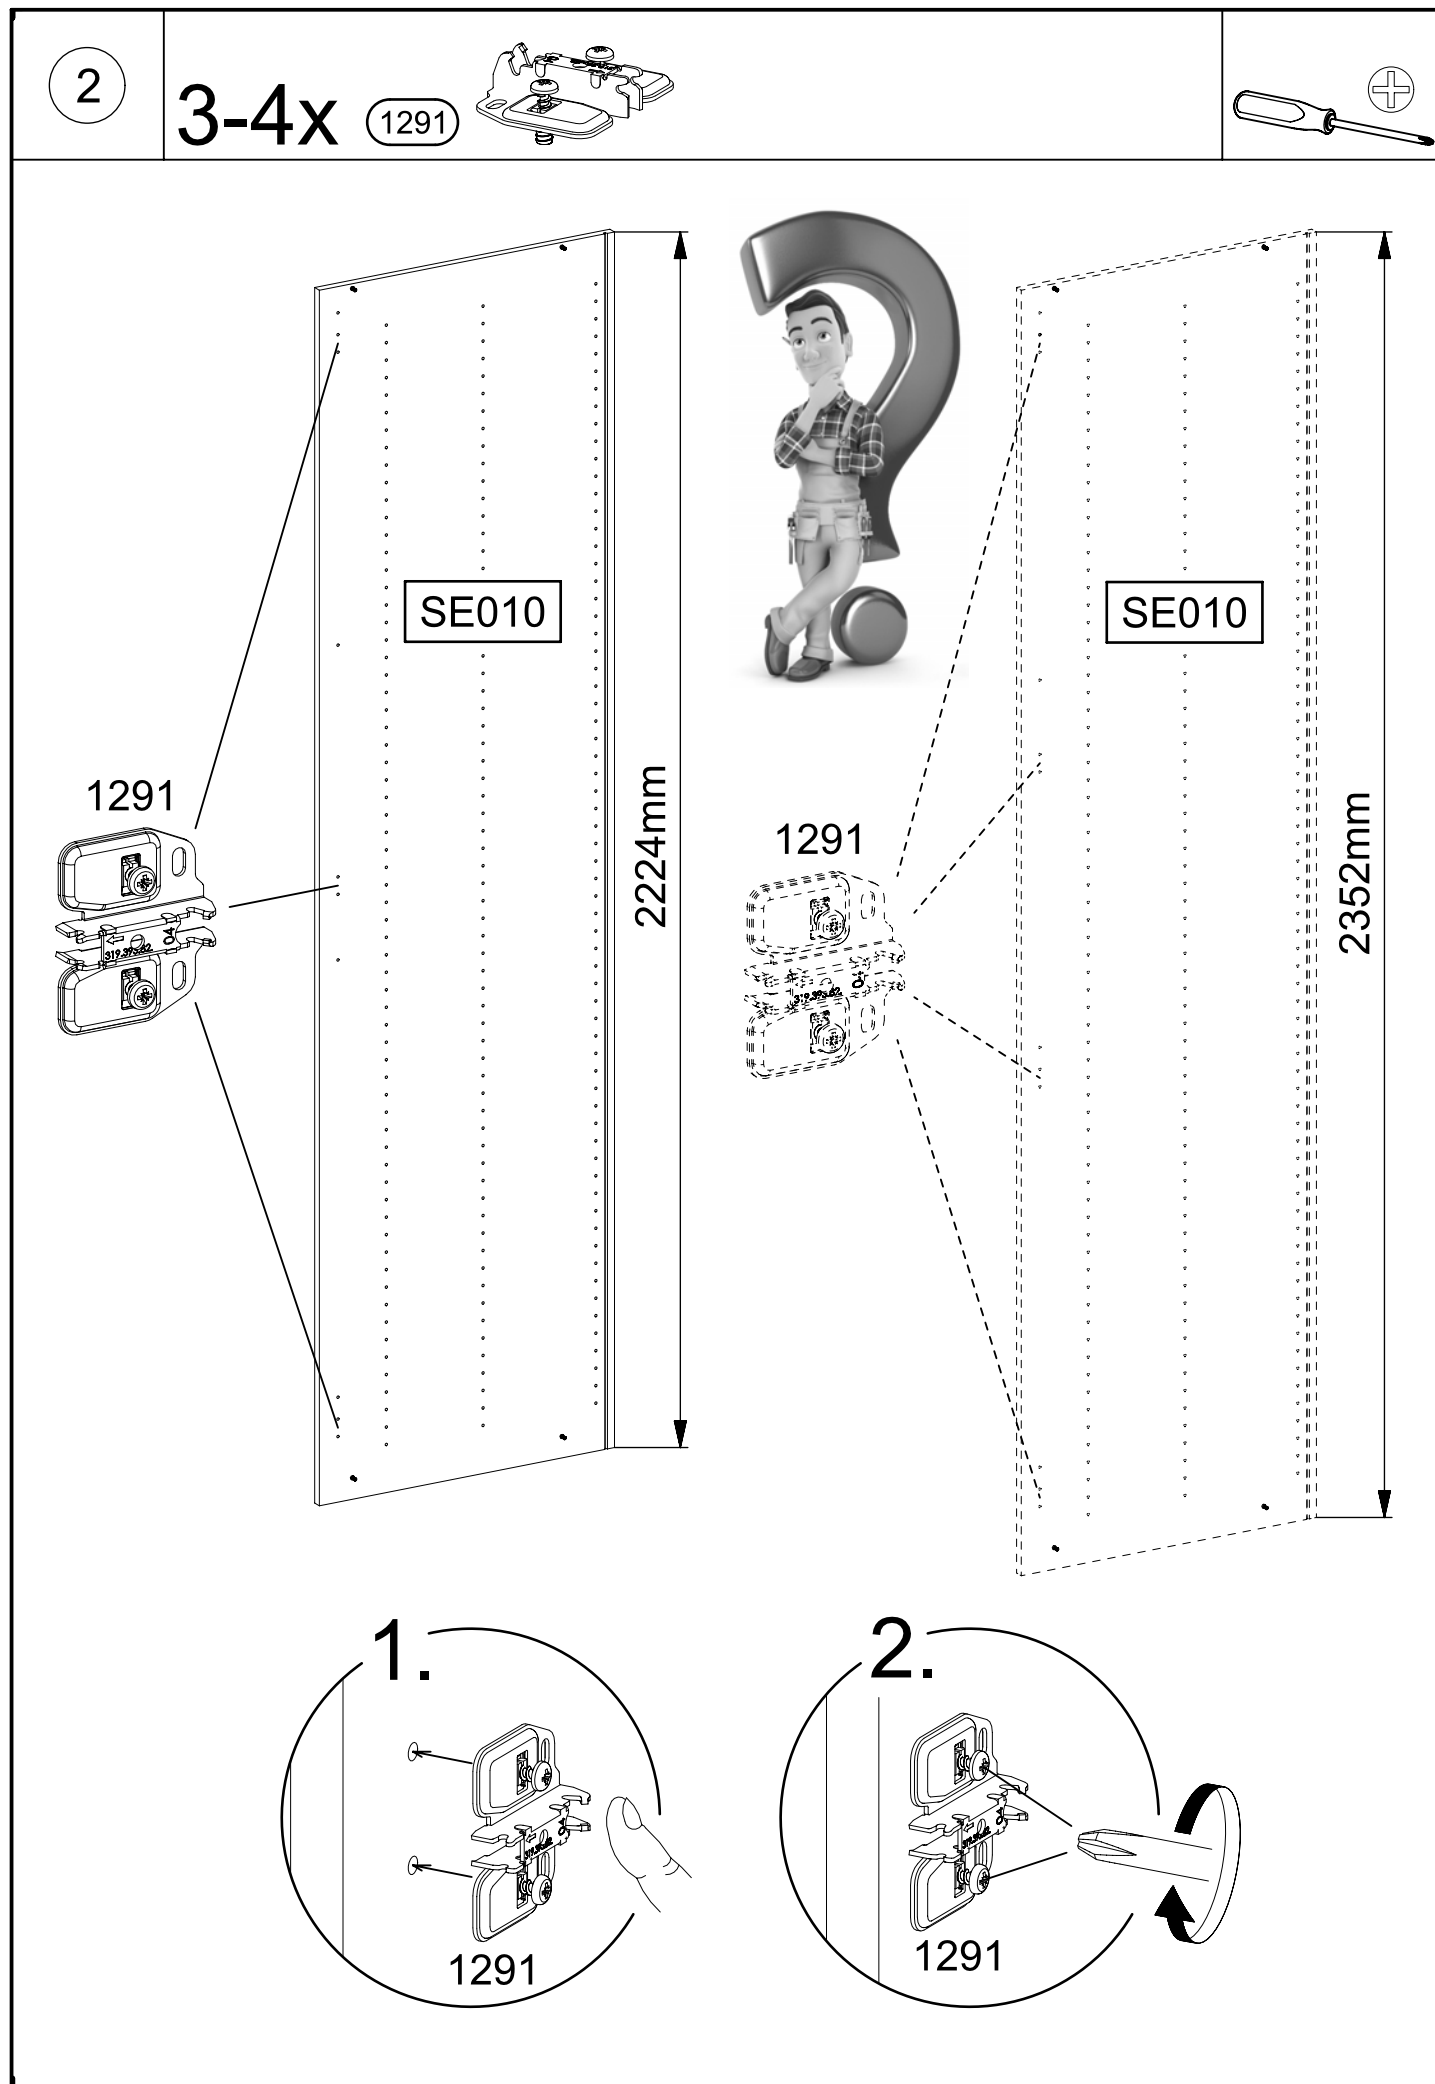




MD105



8.


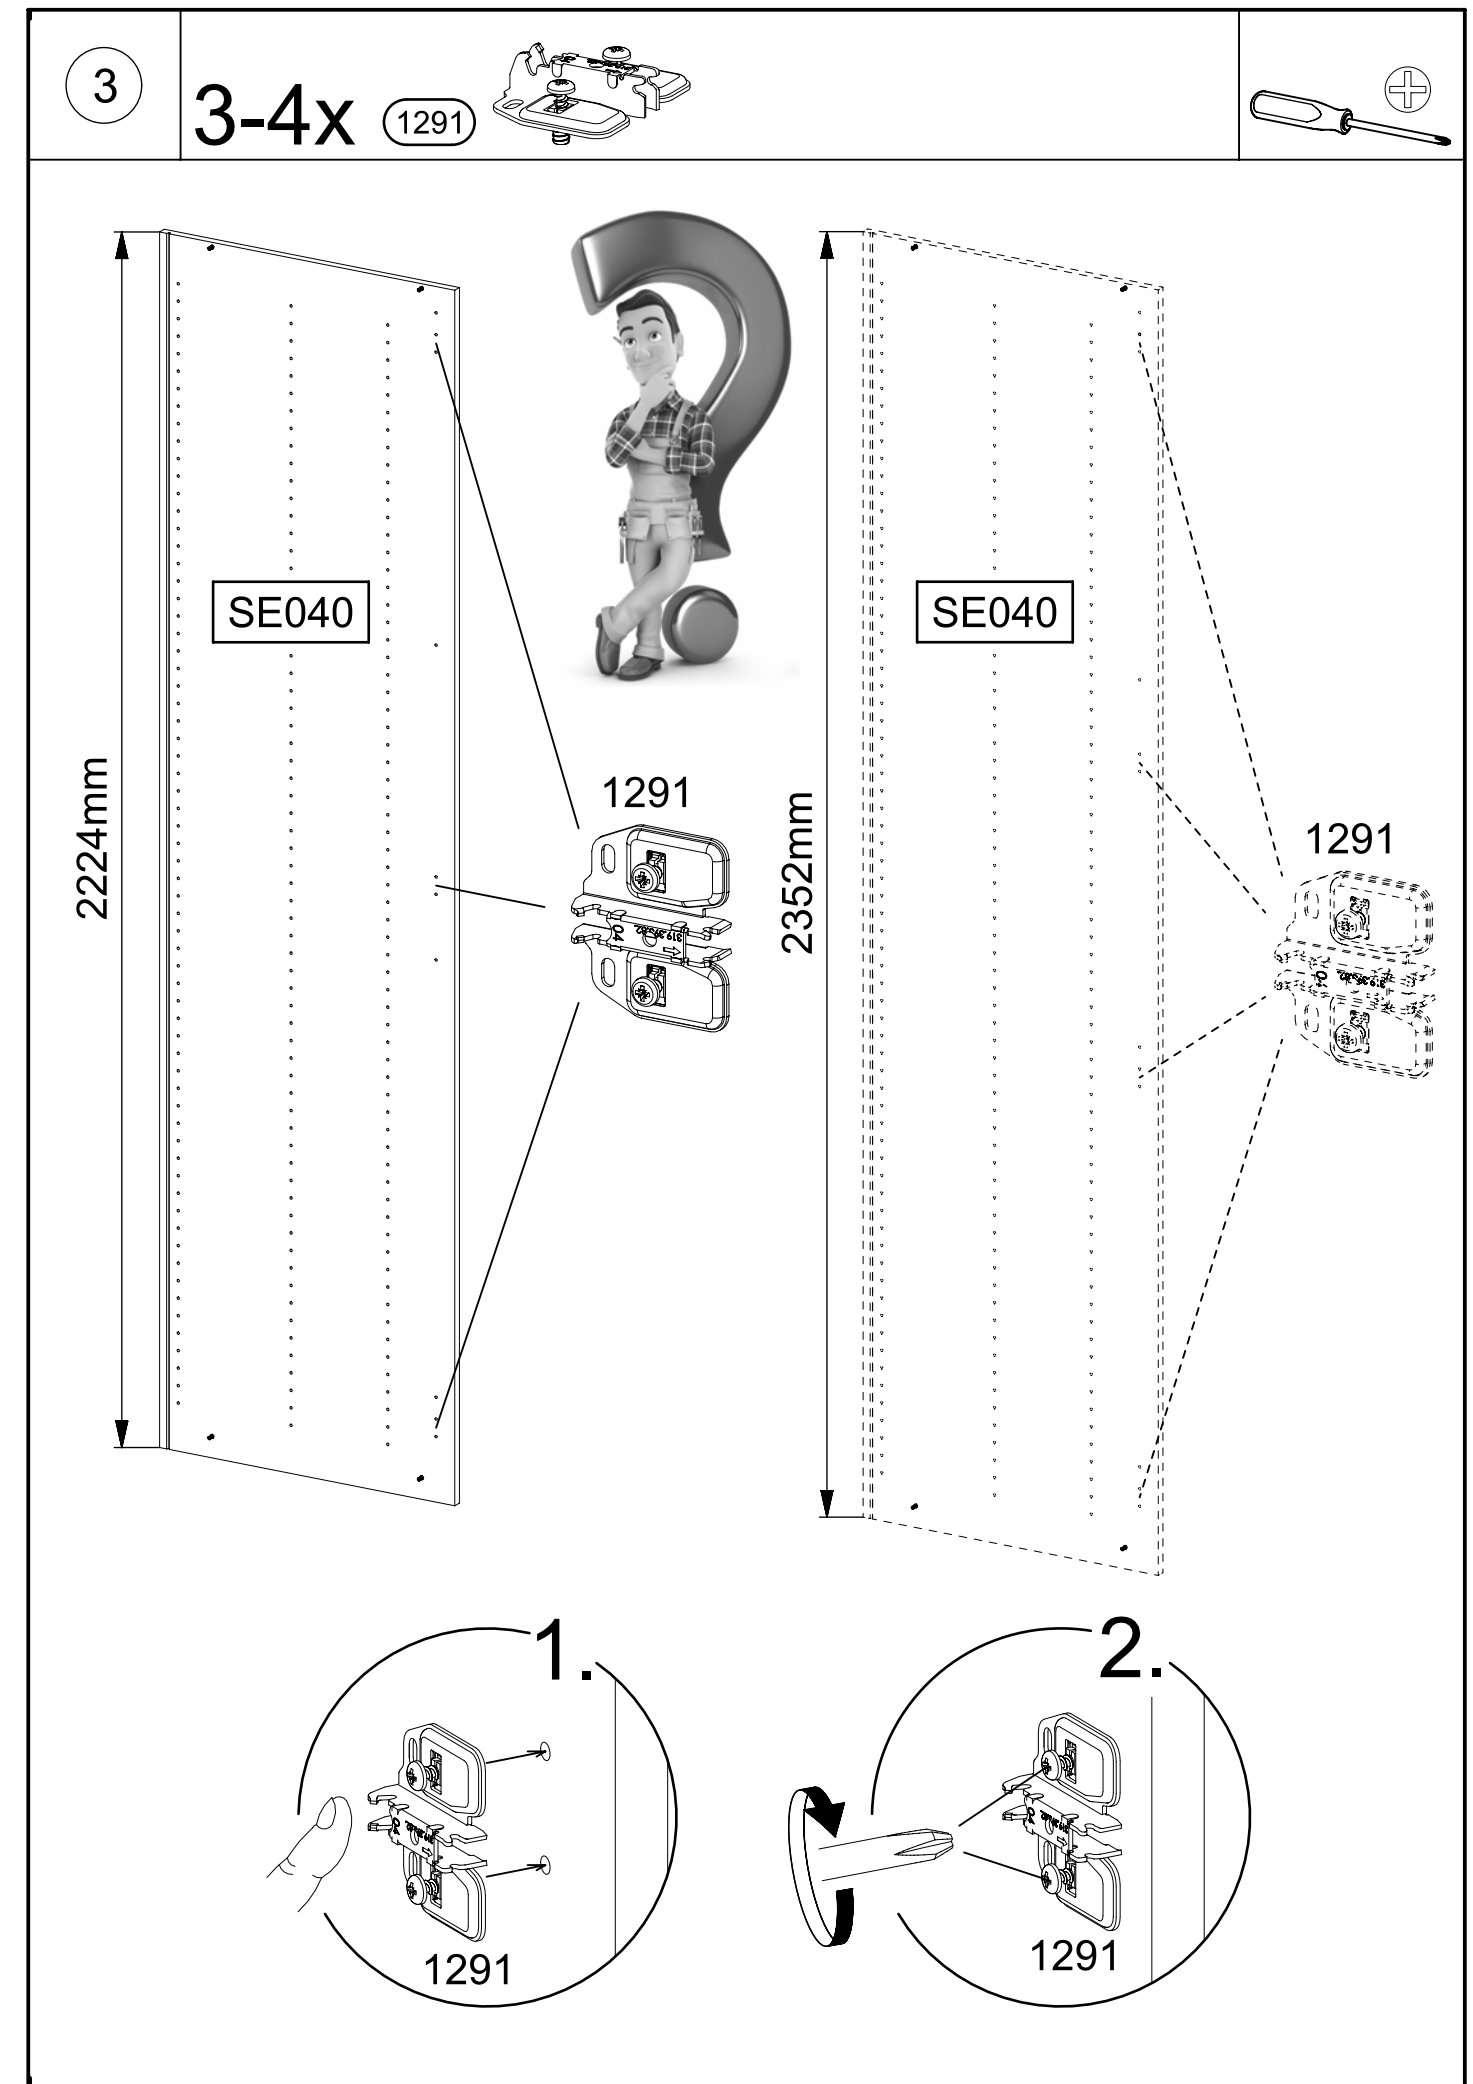




MD105

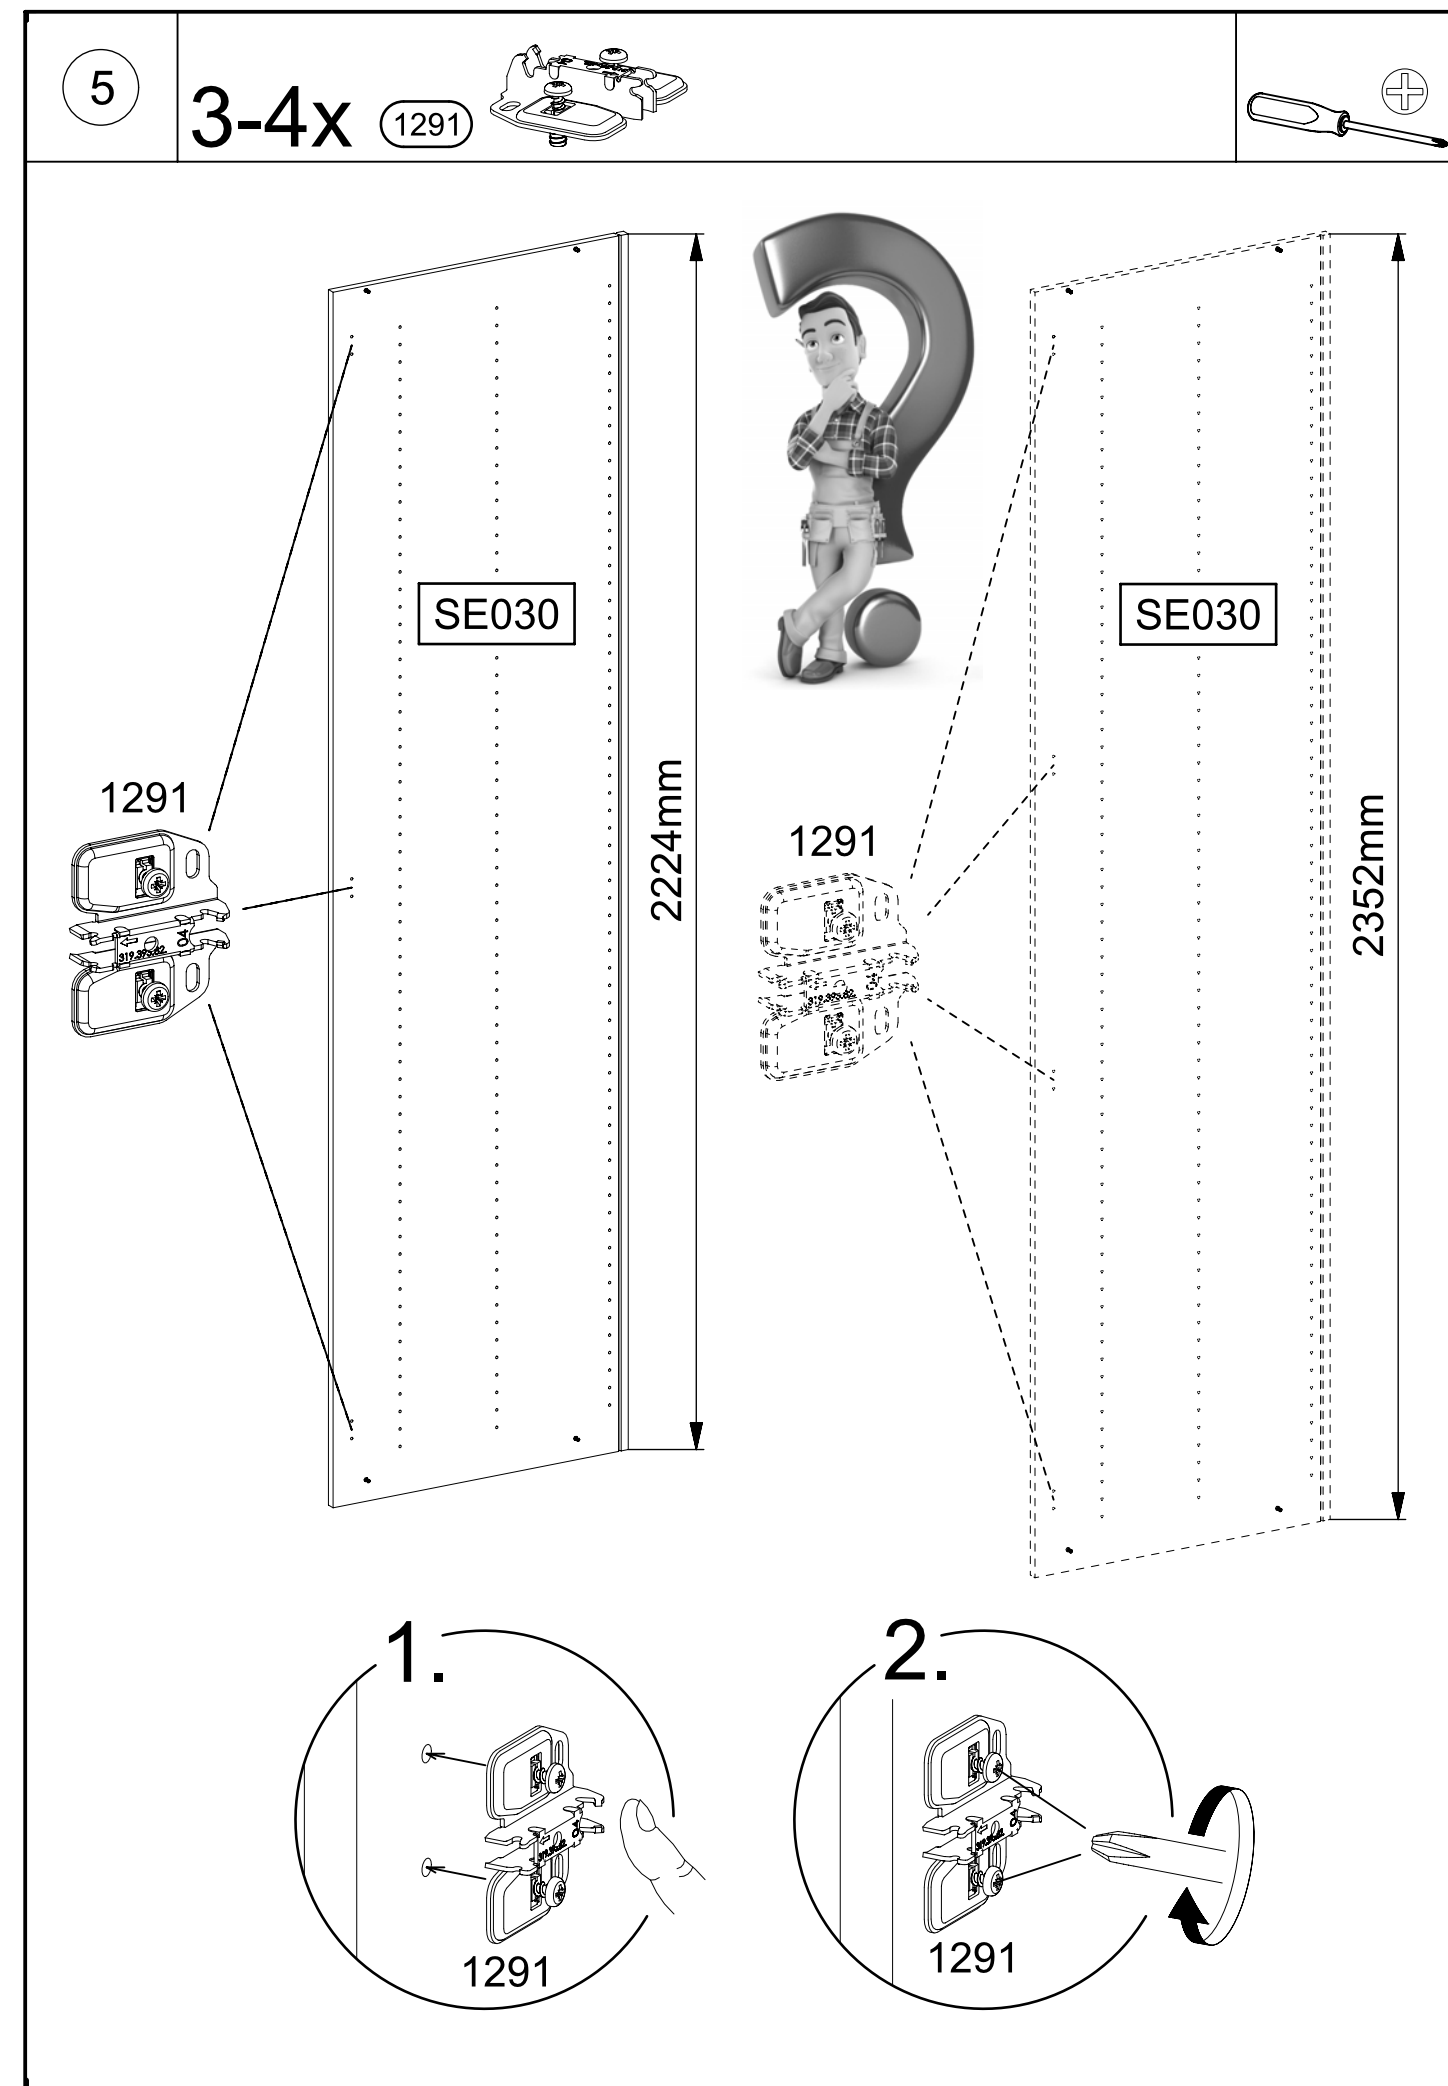
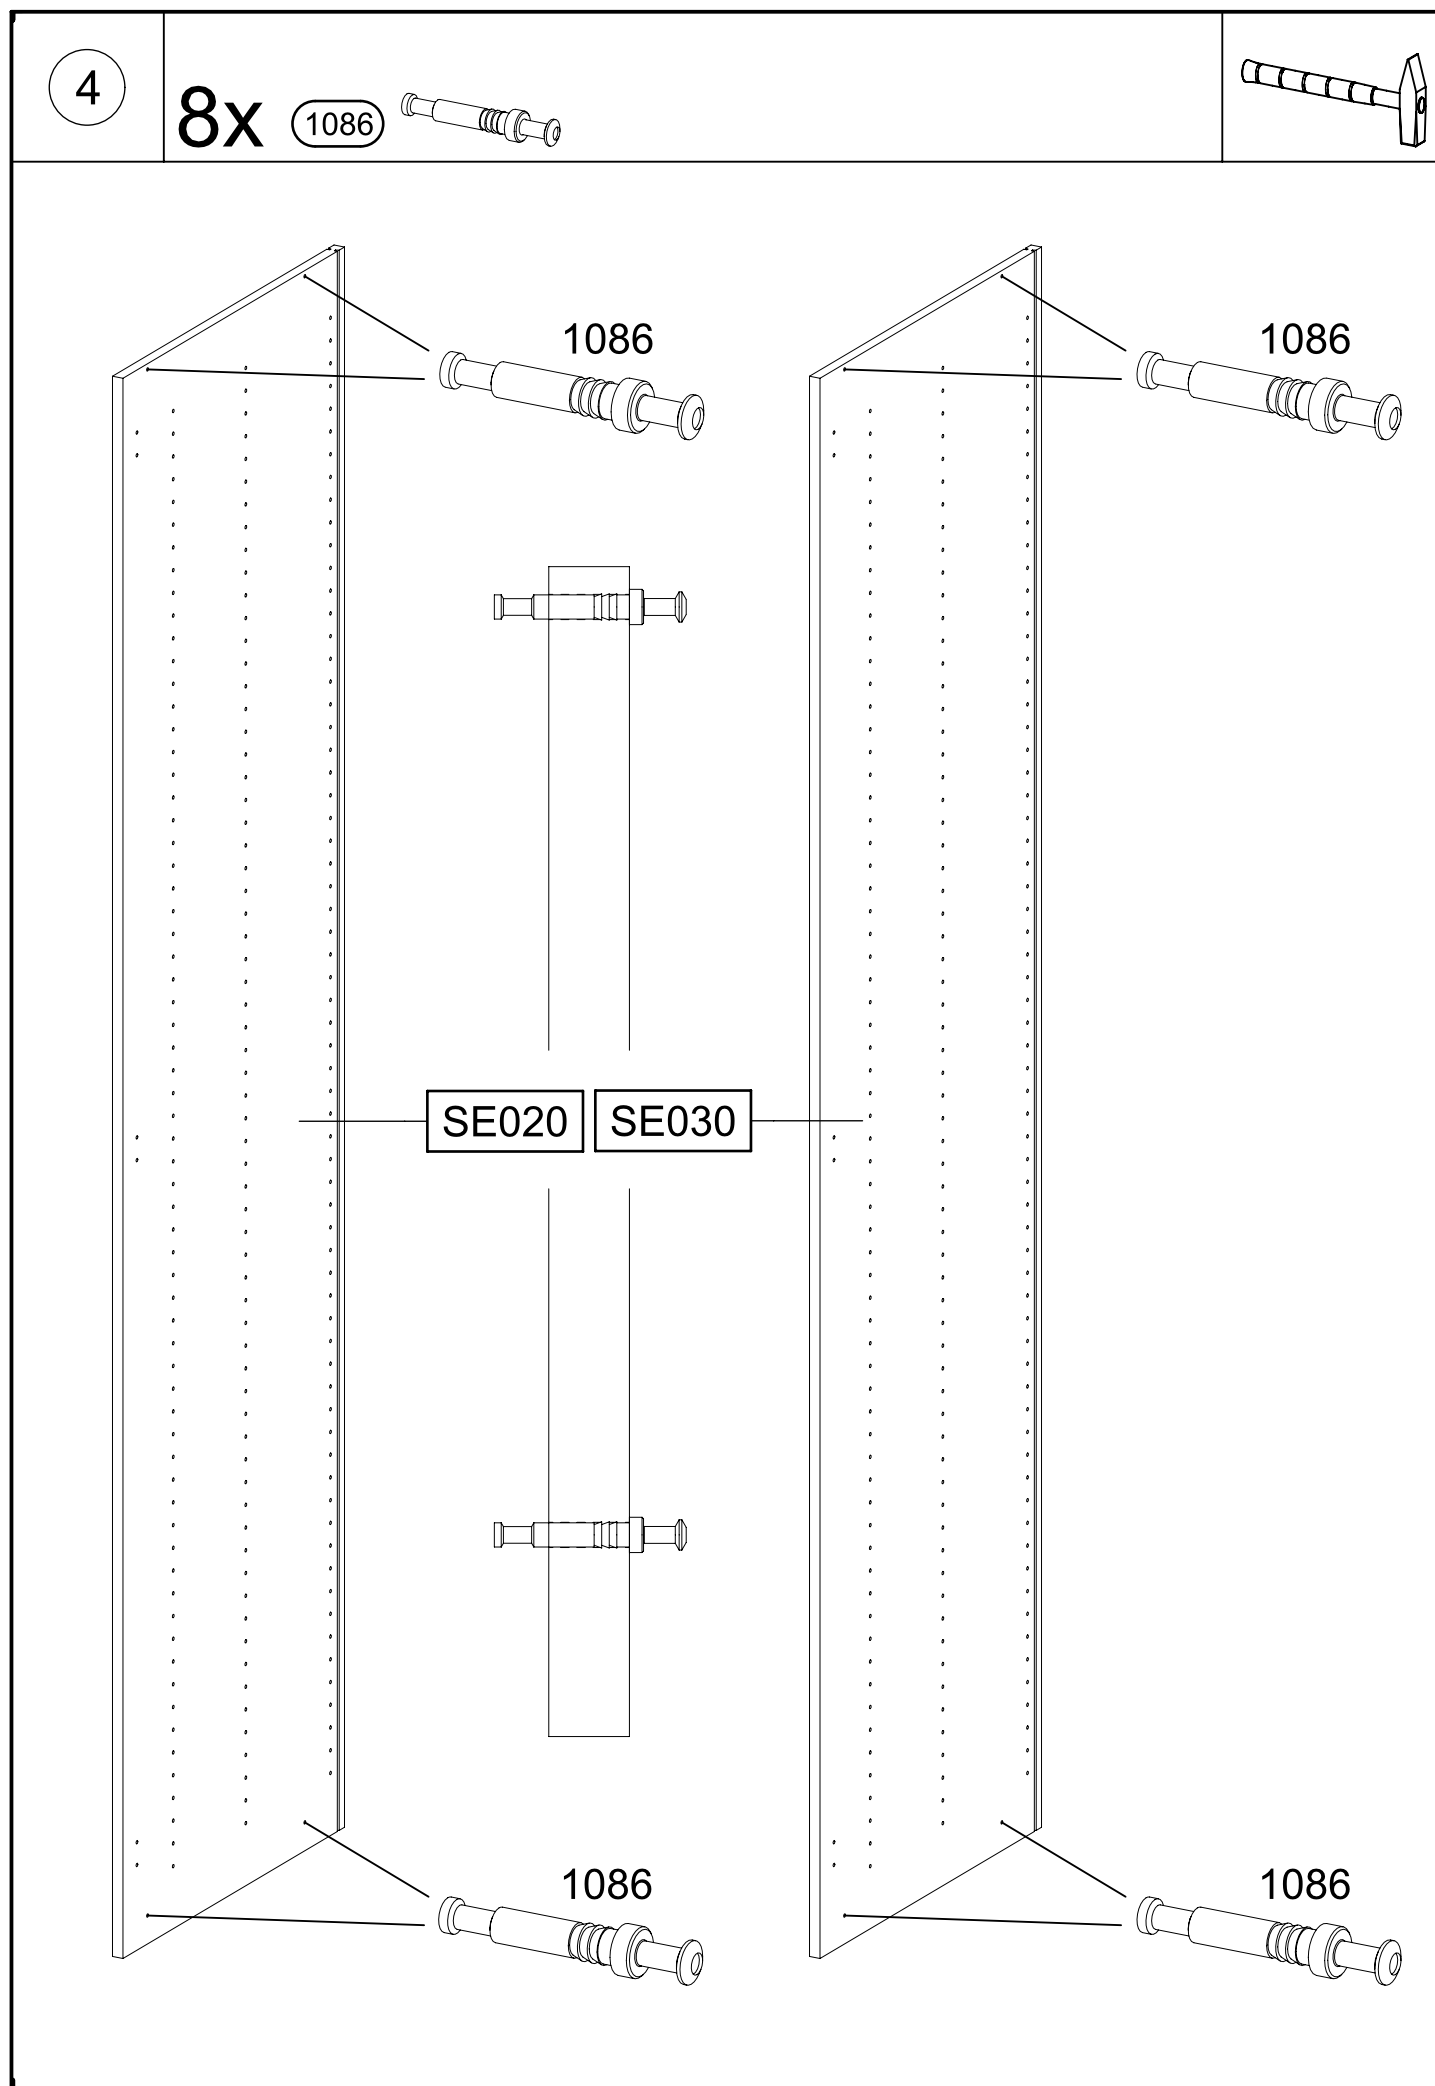


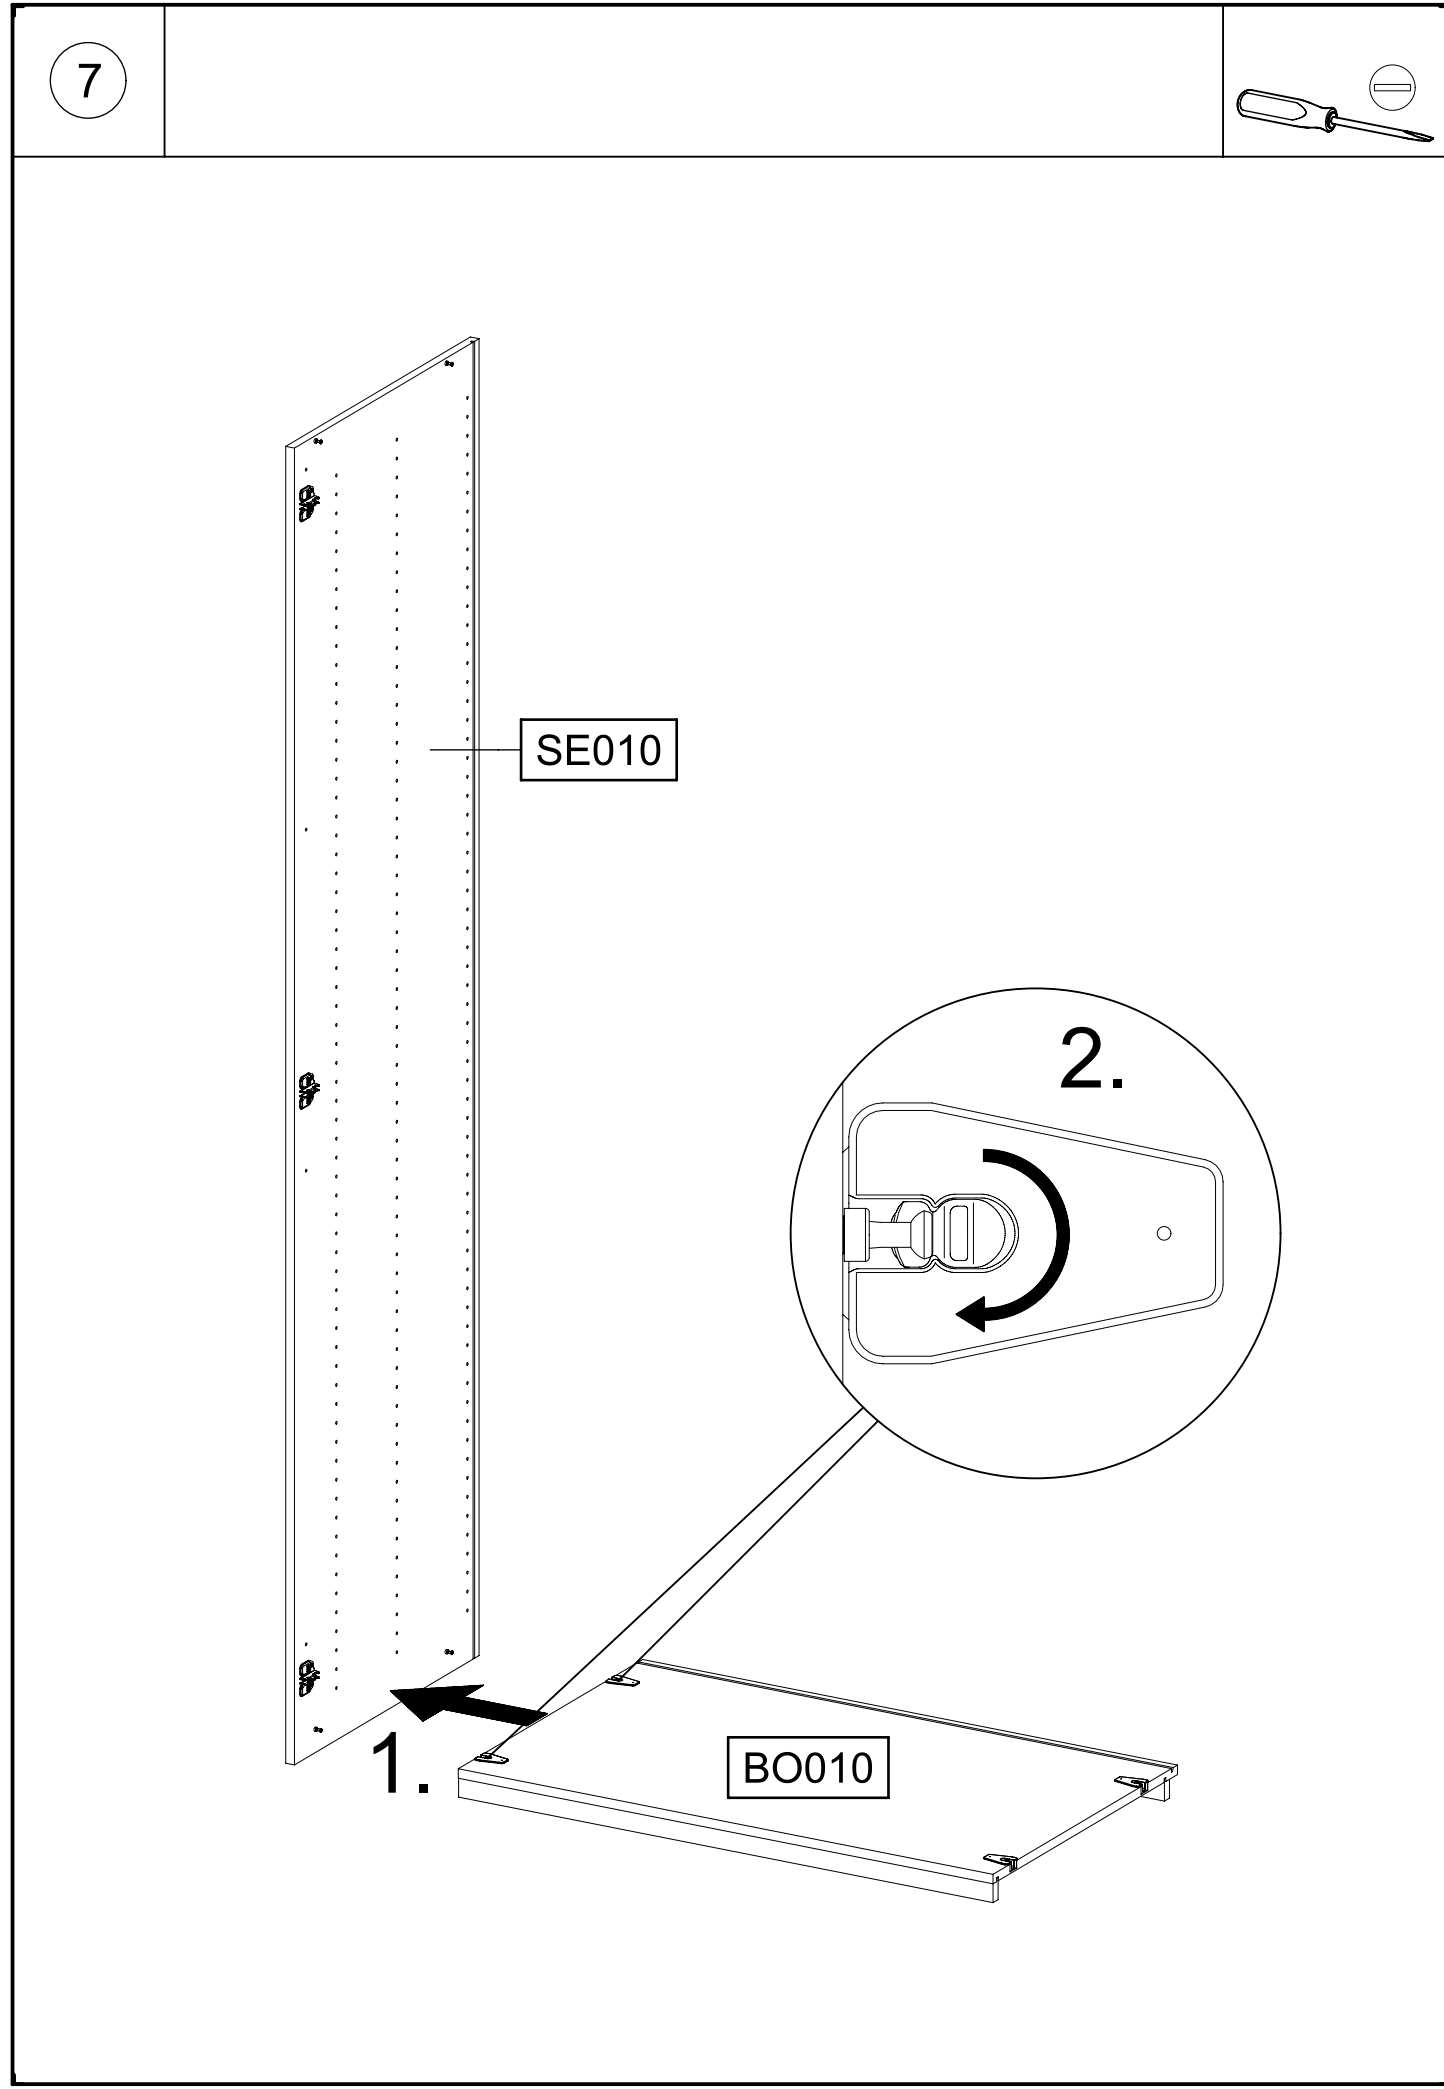
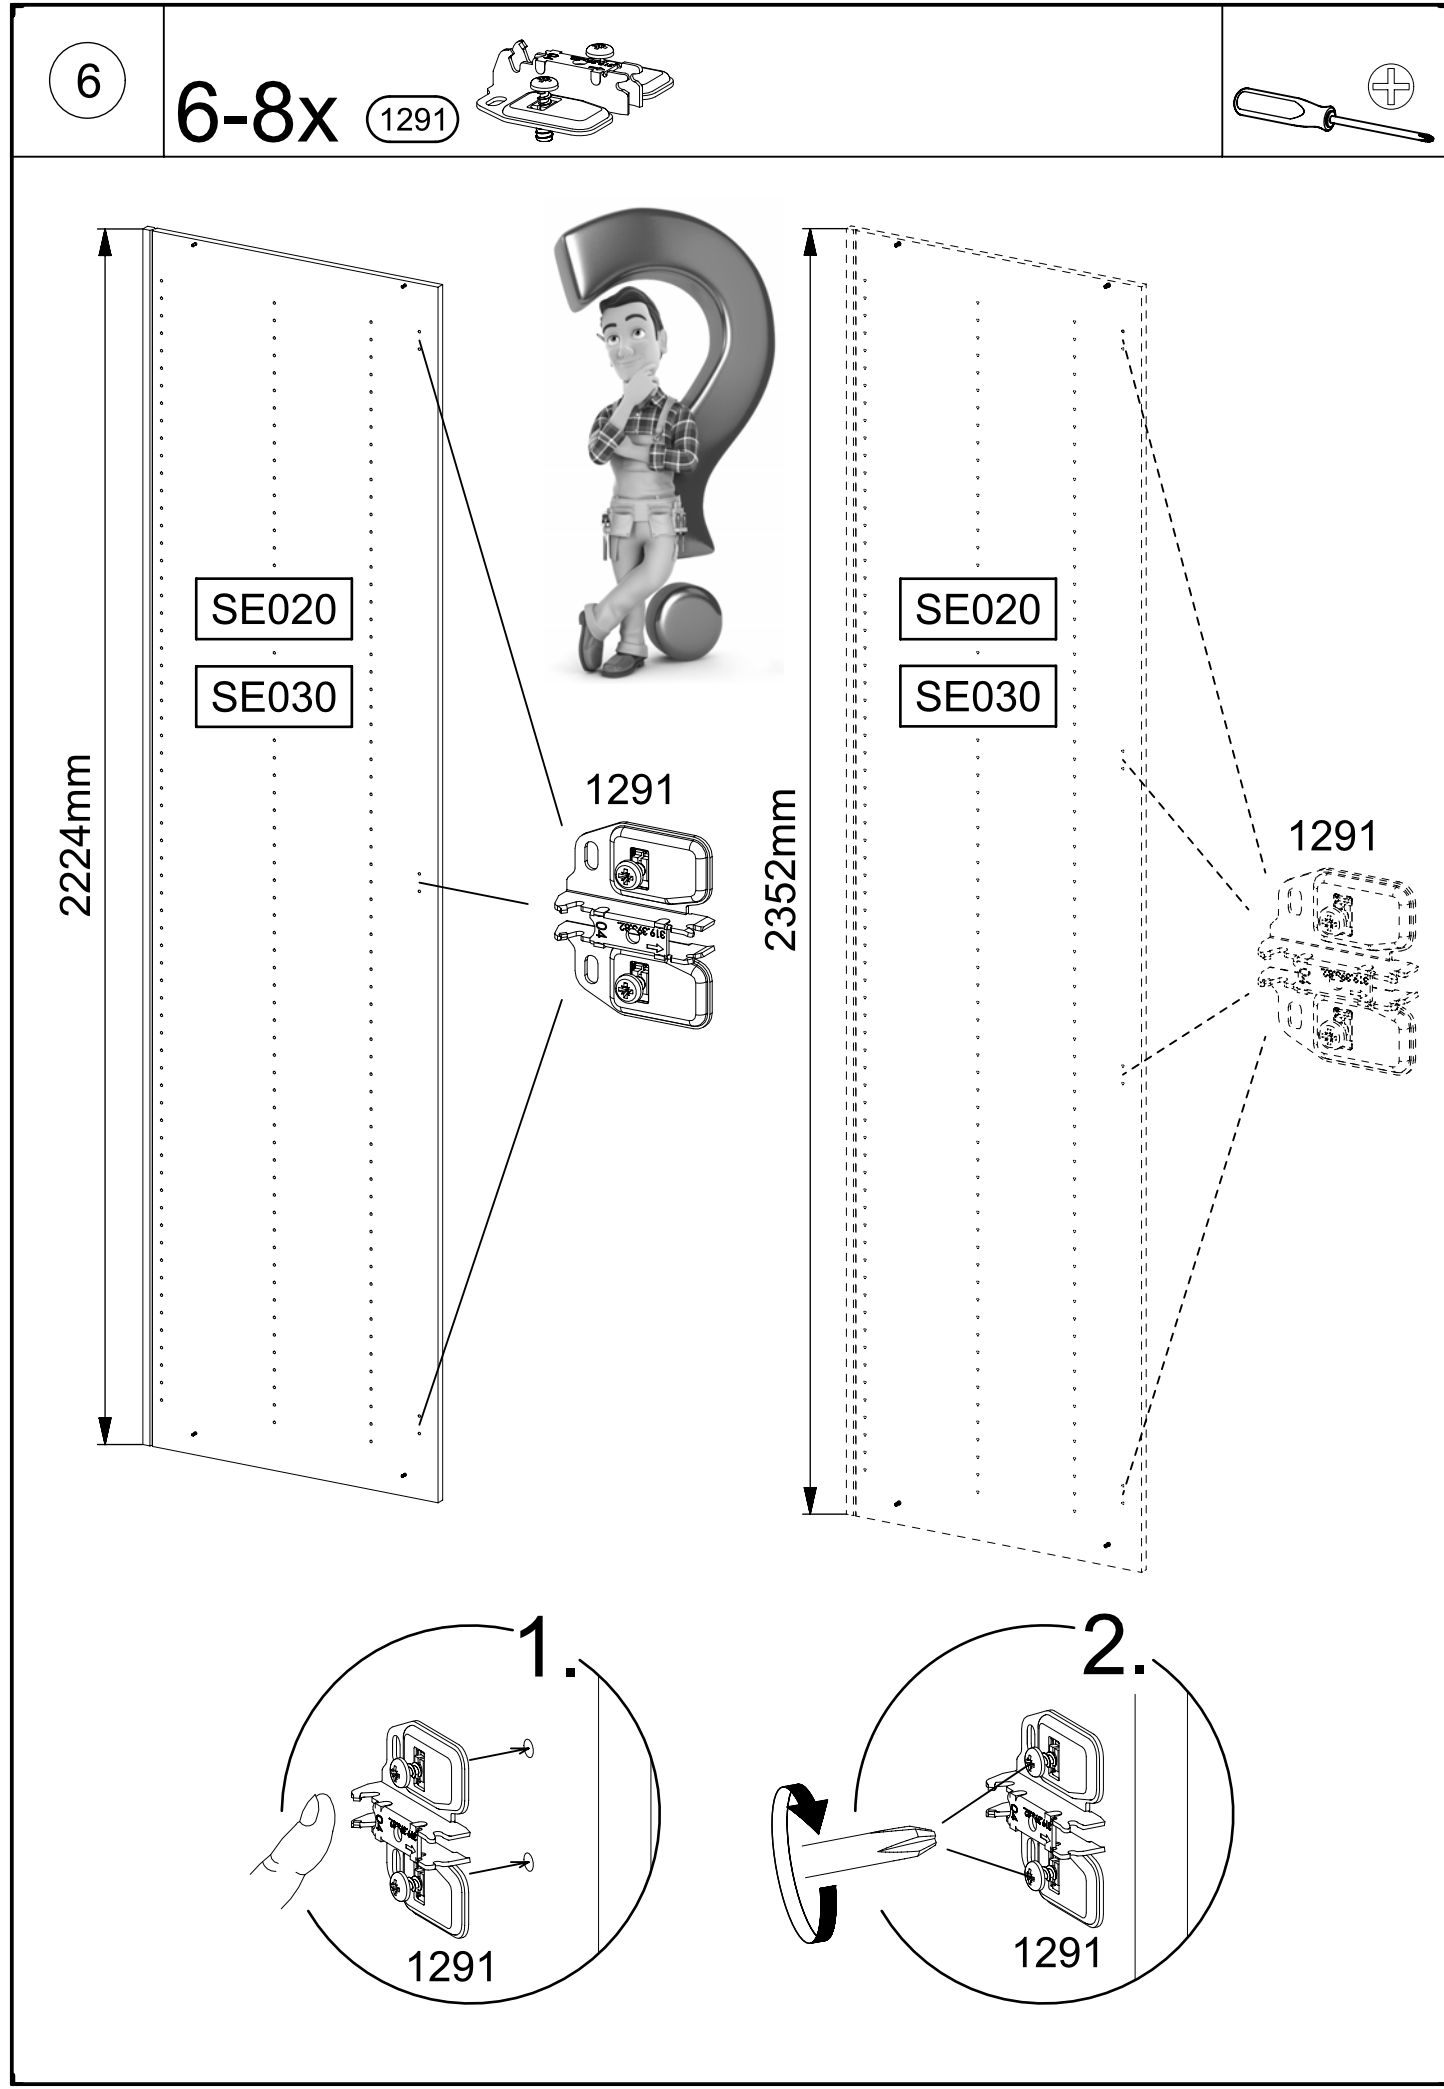


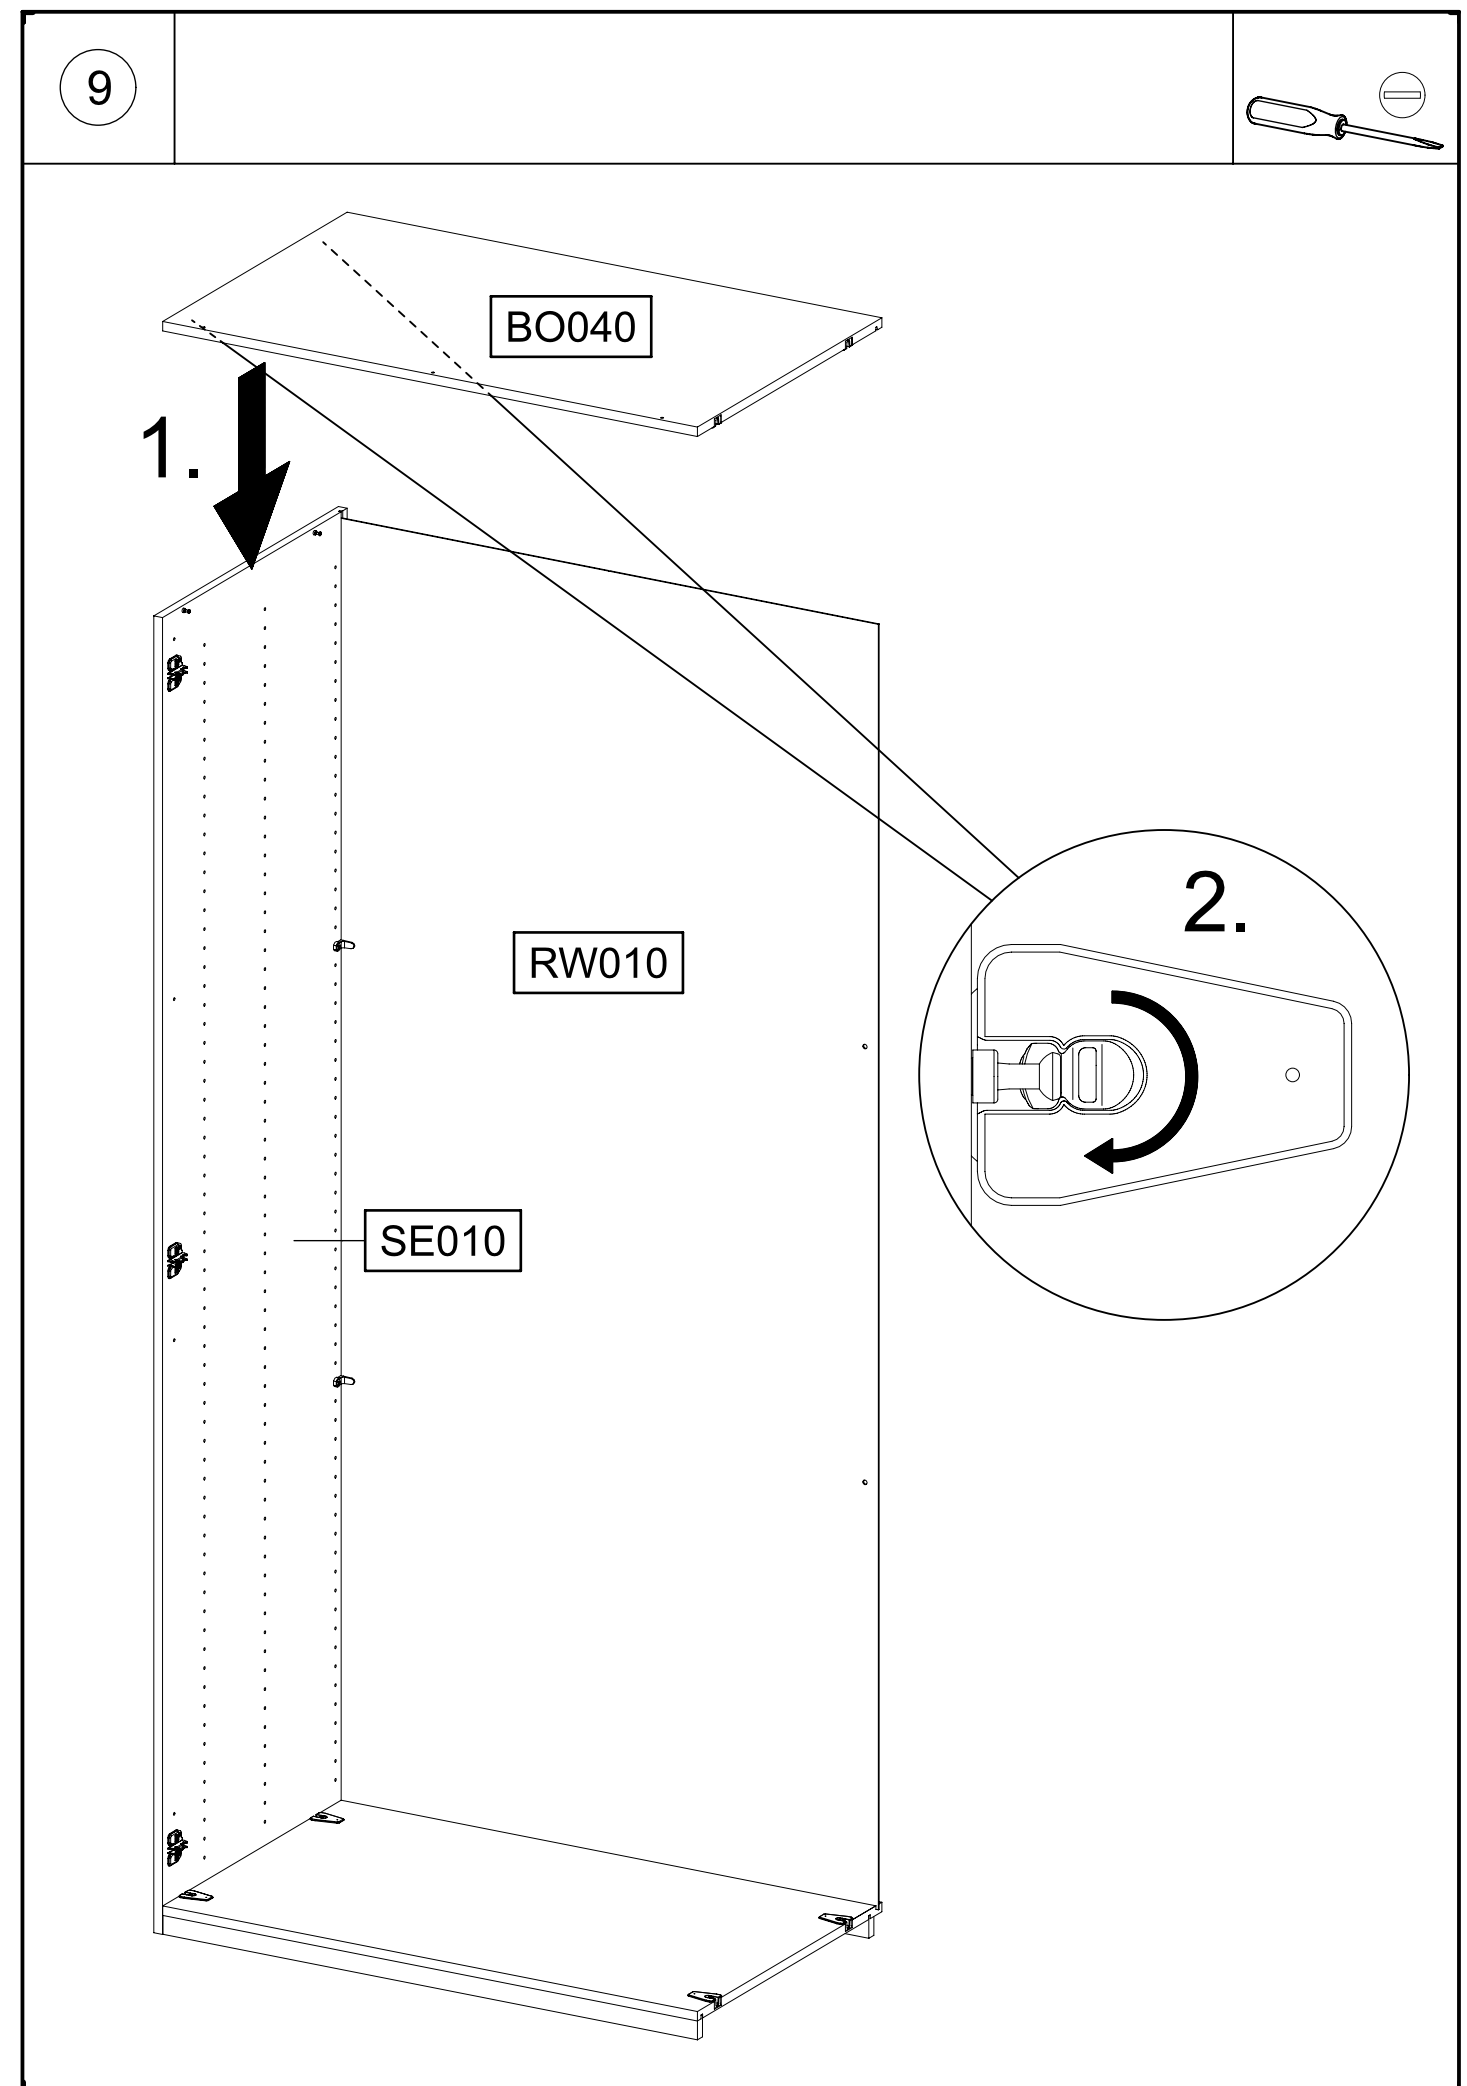
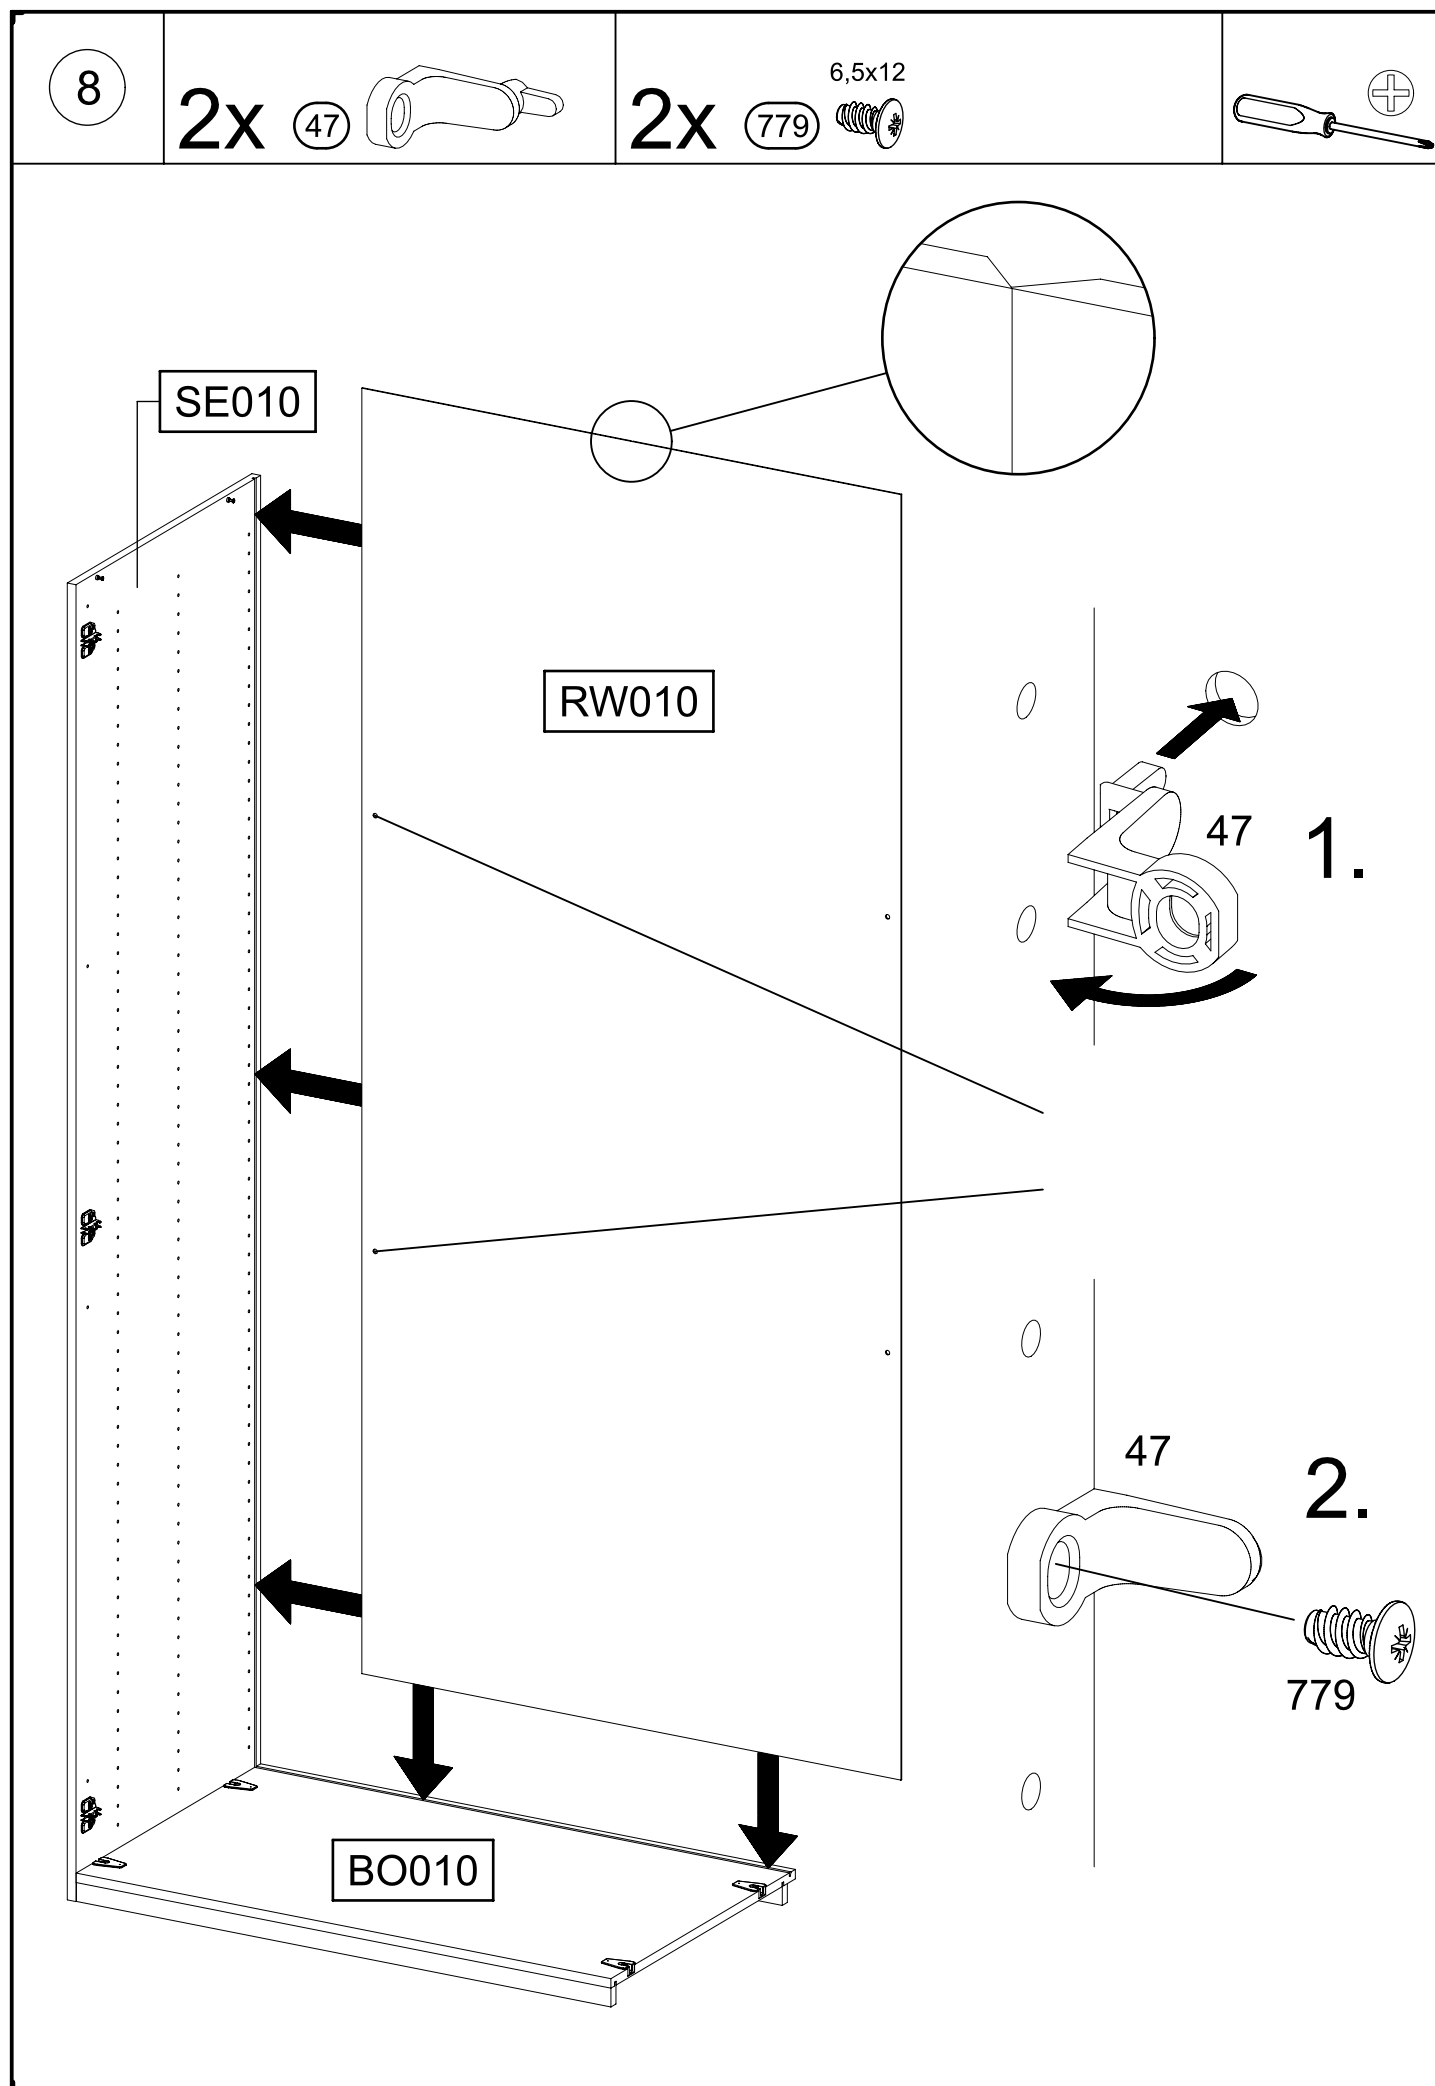


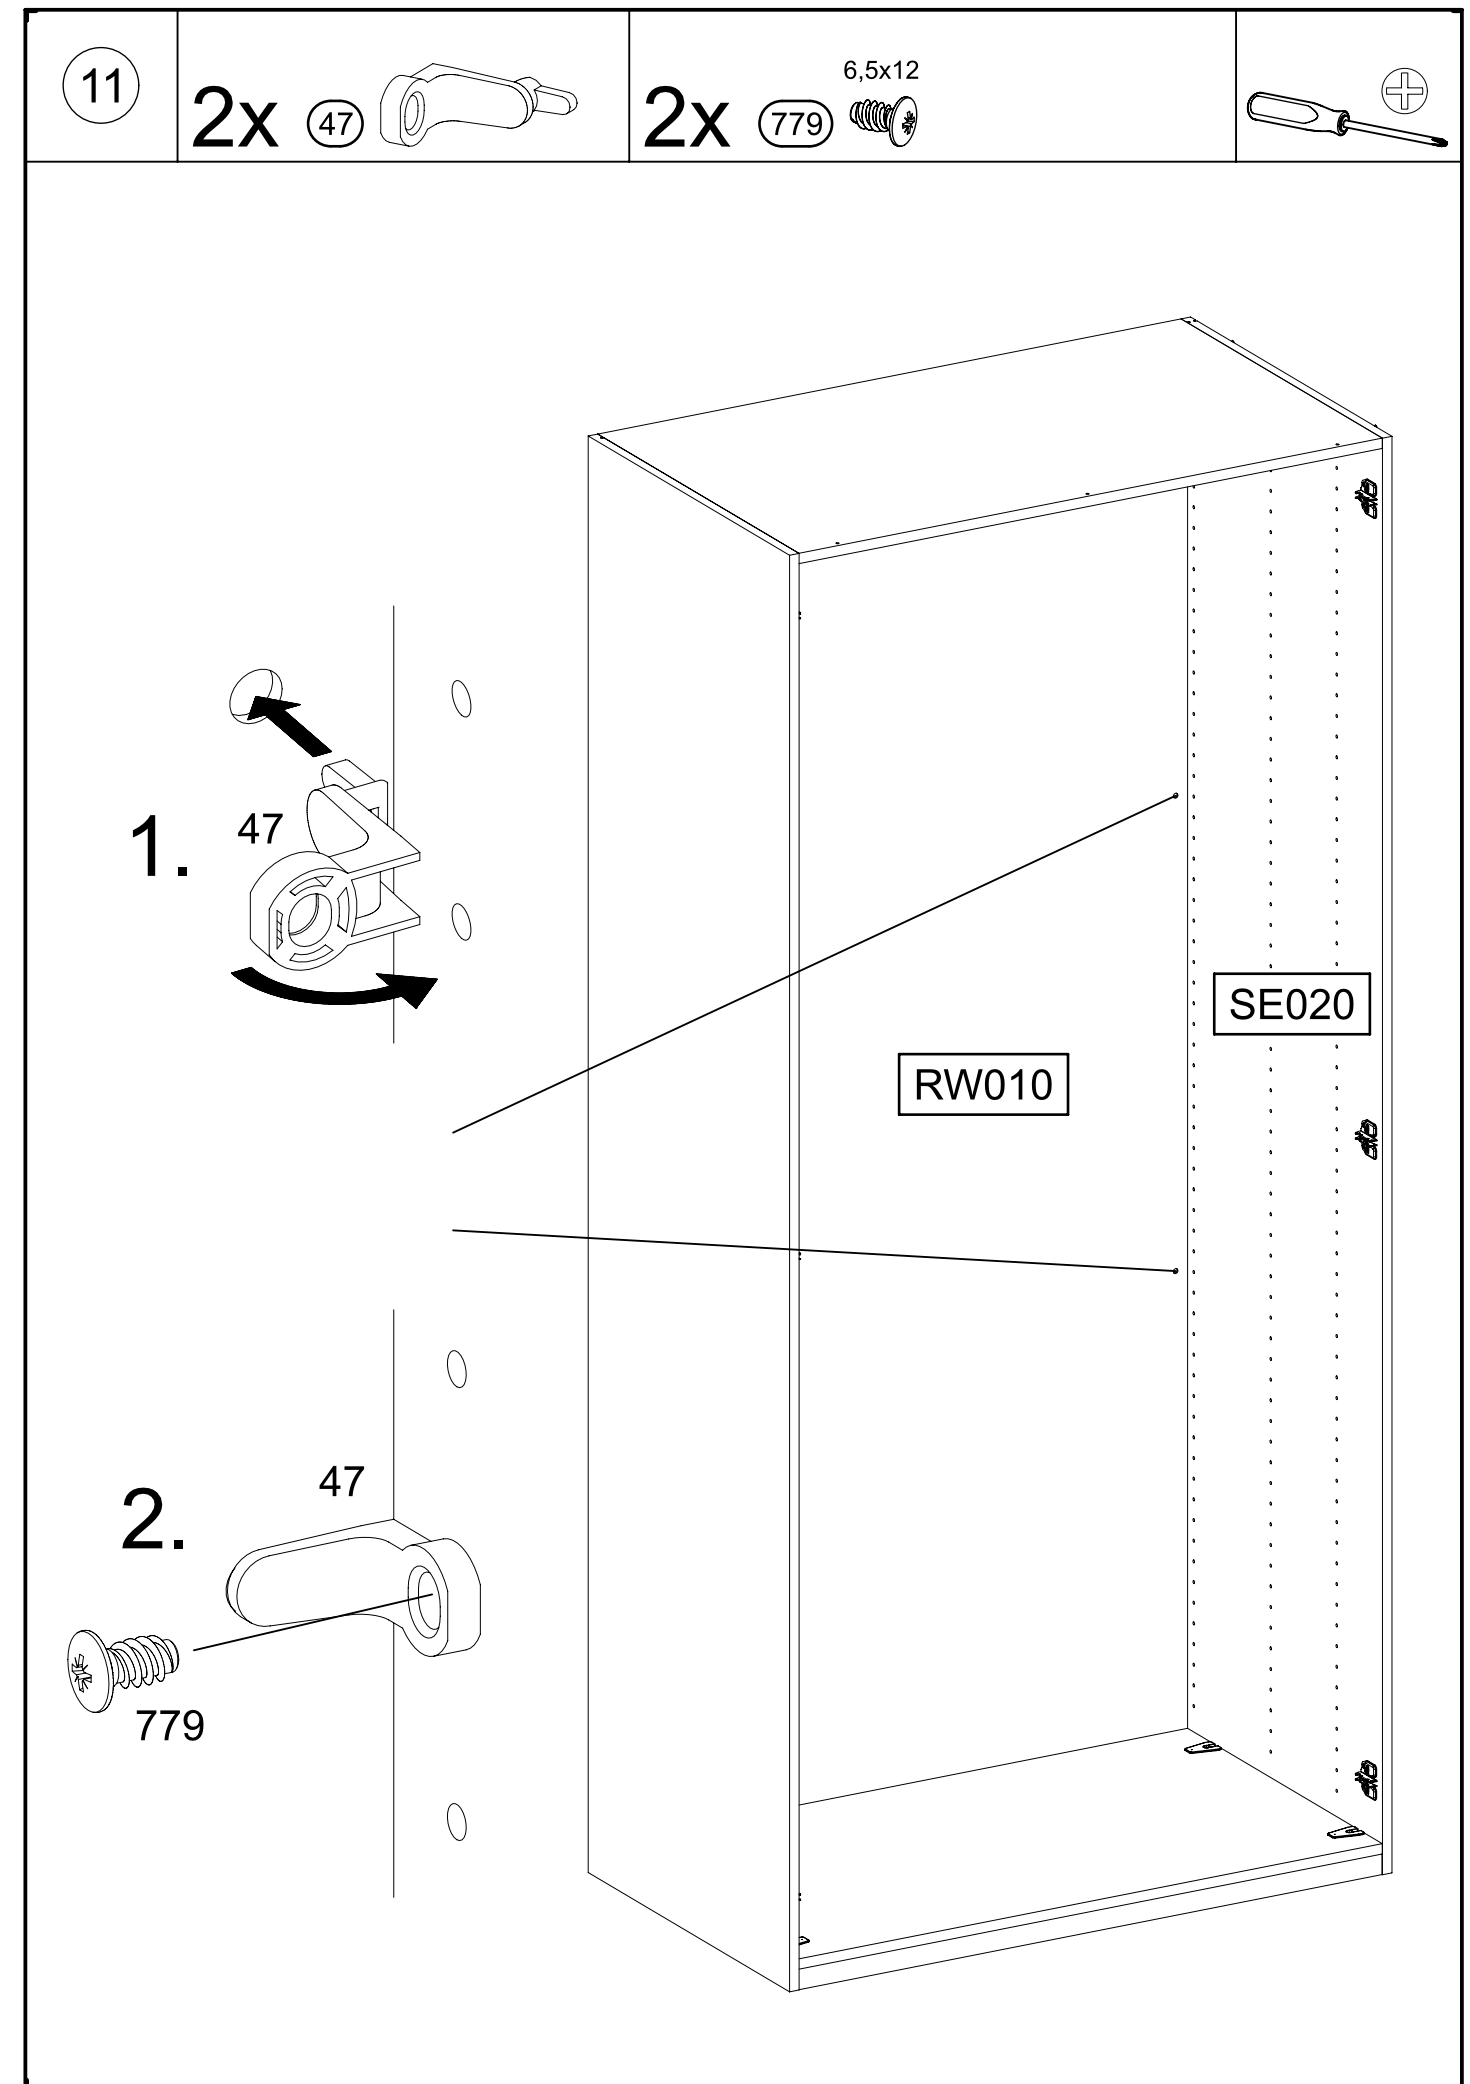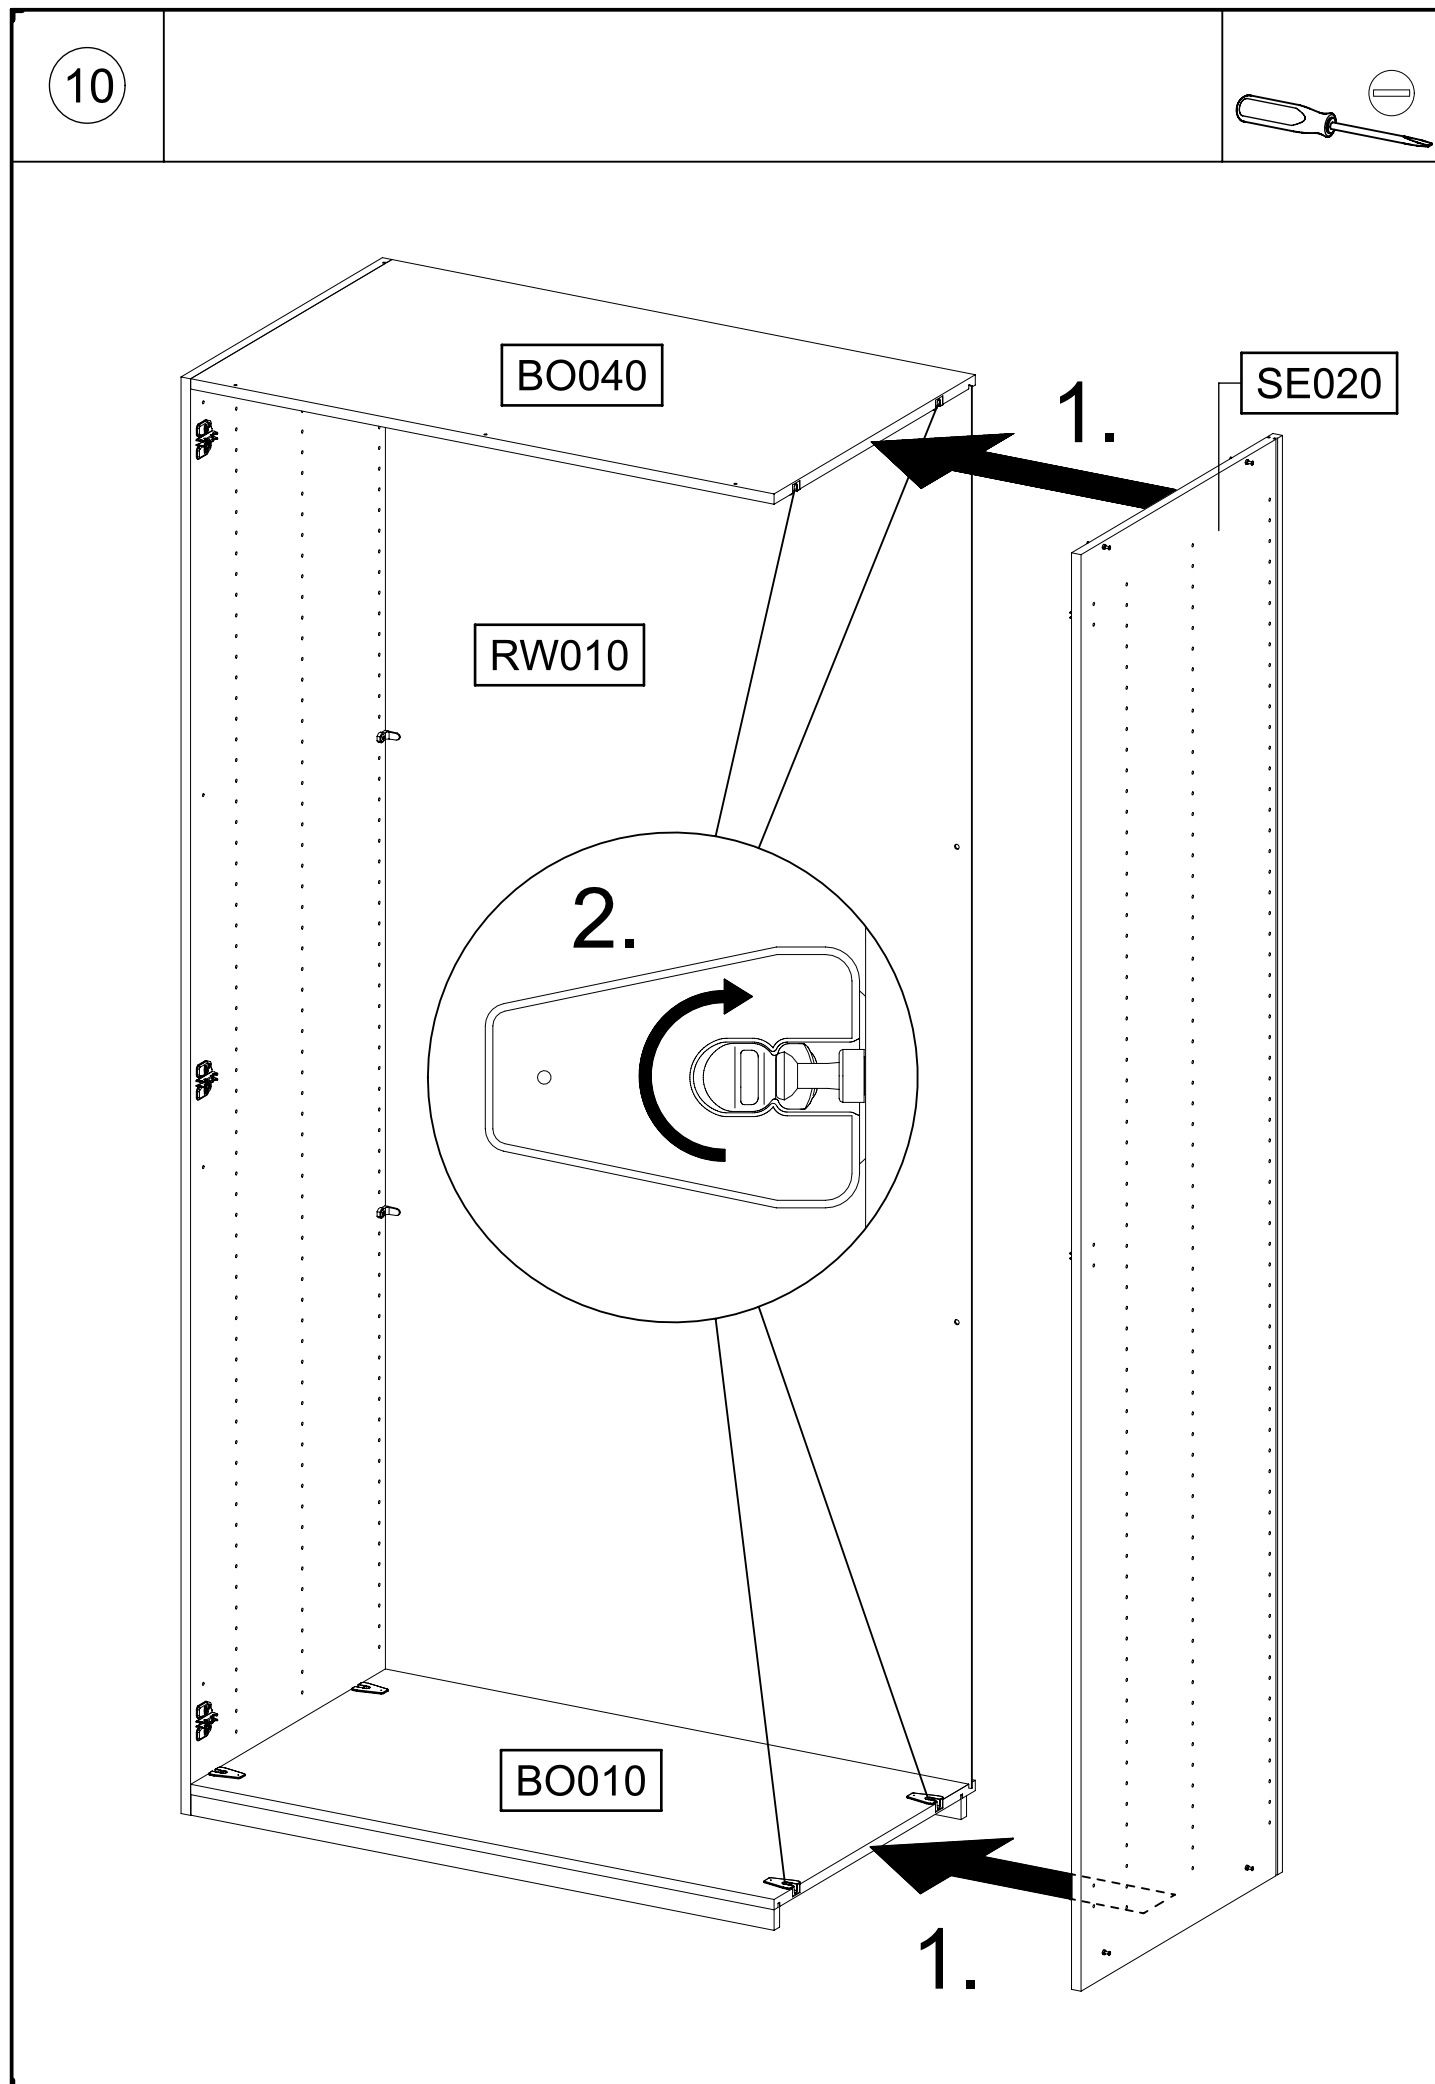

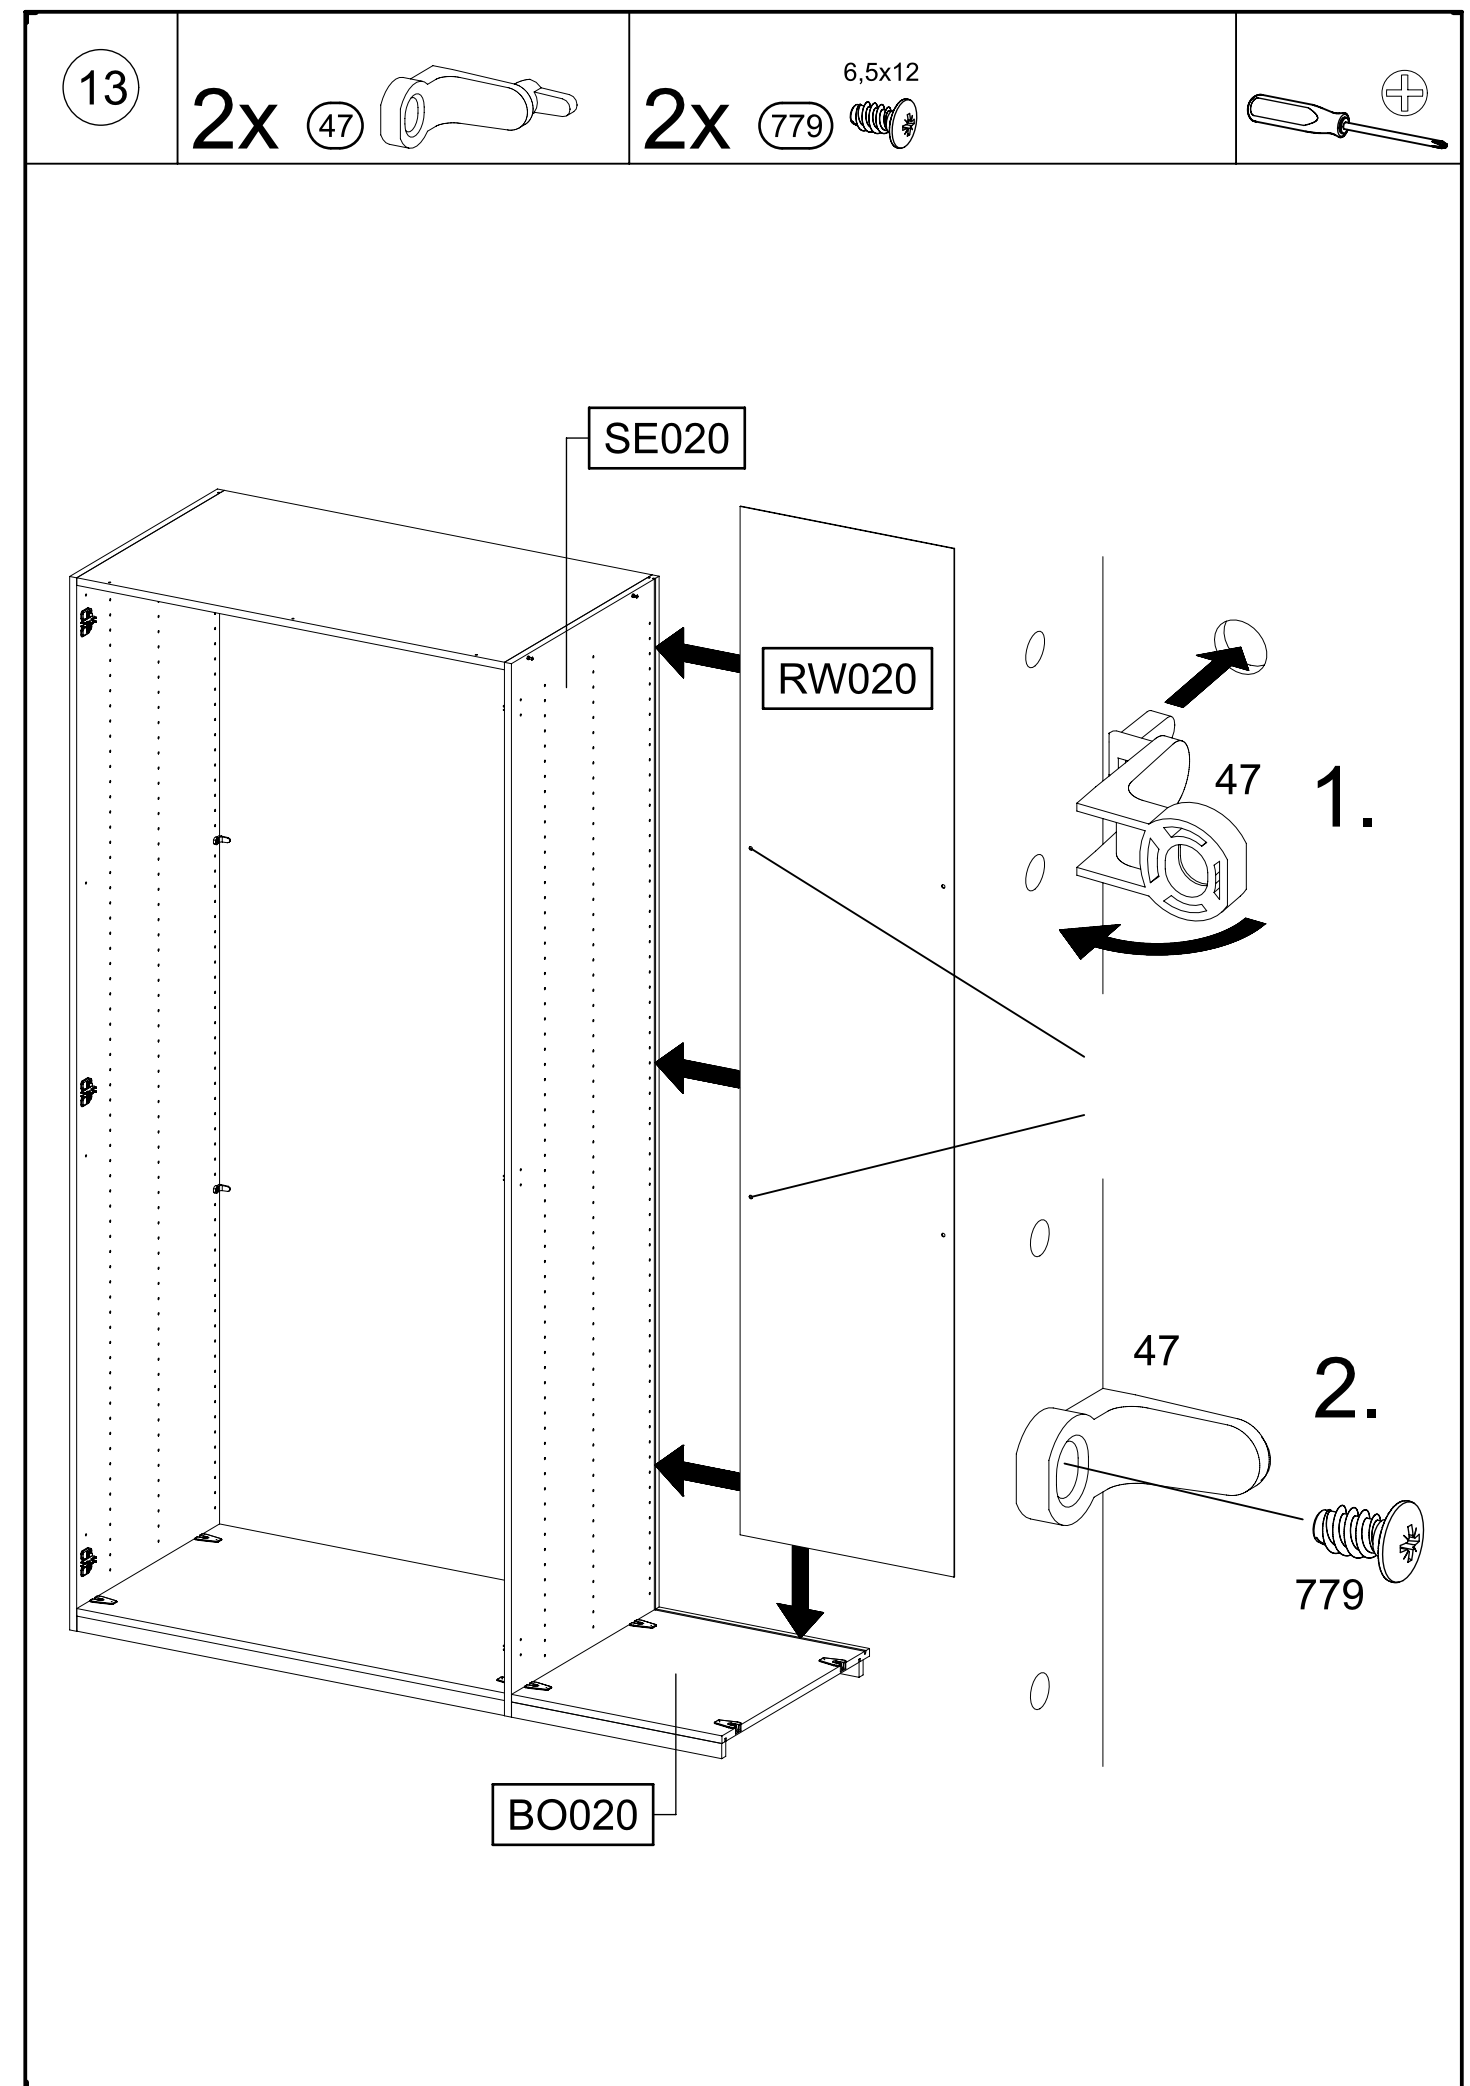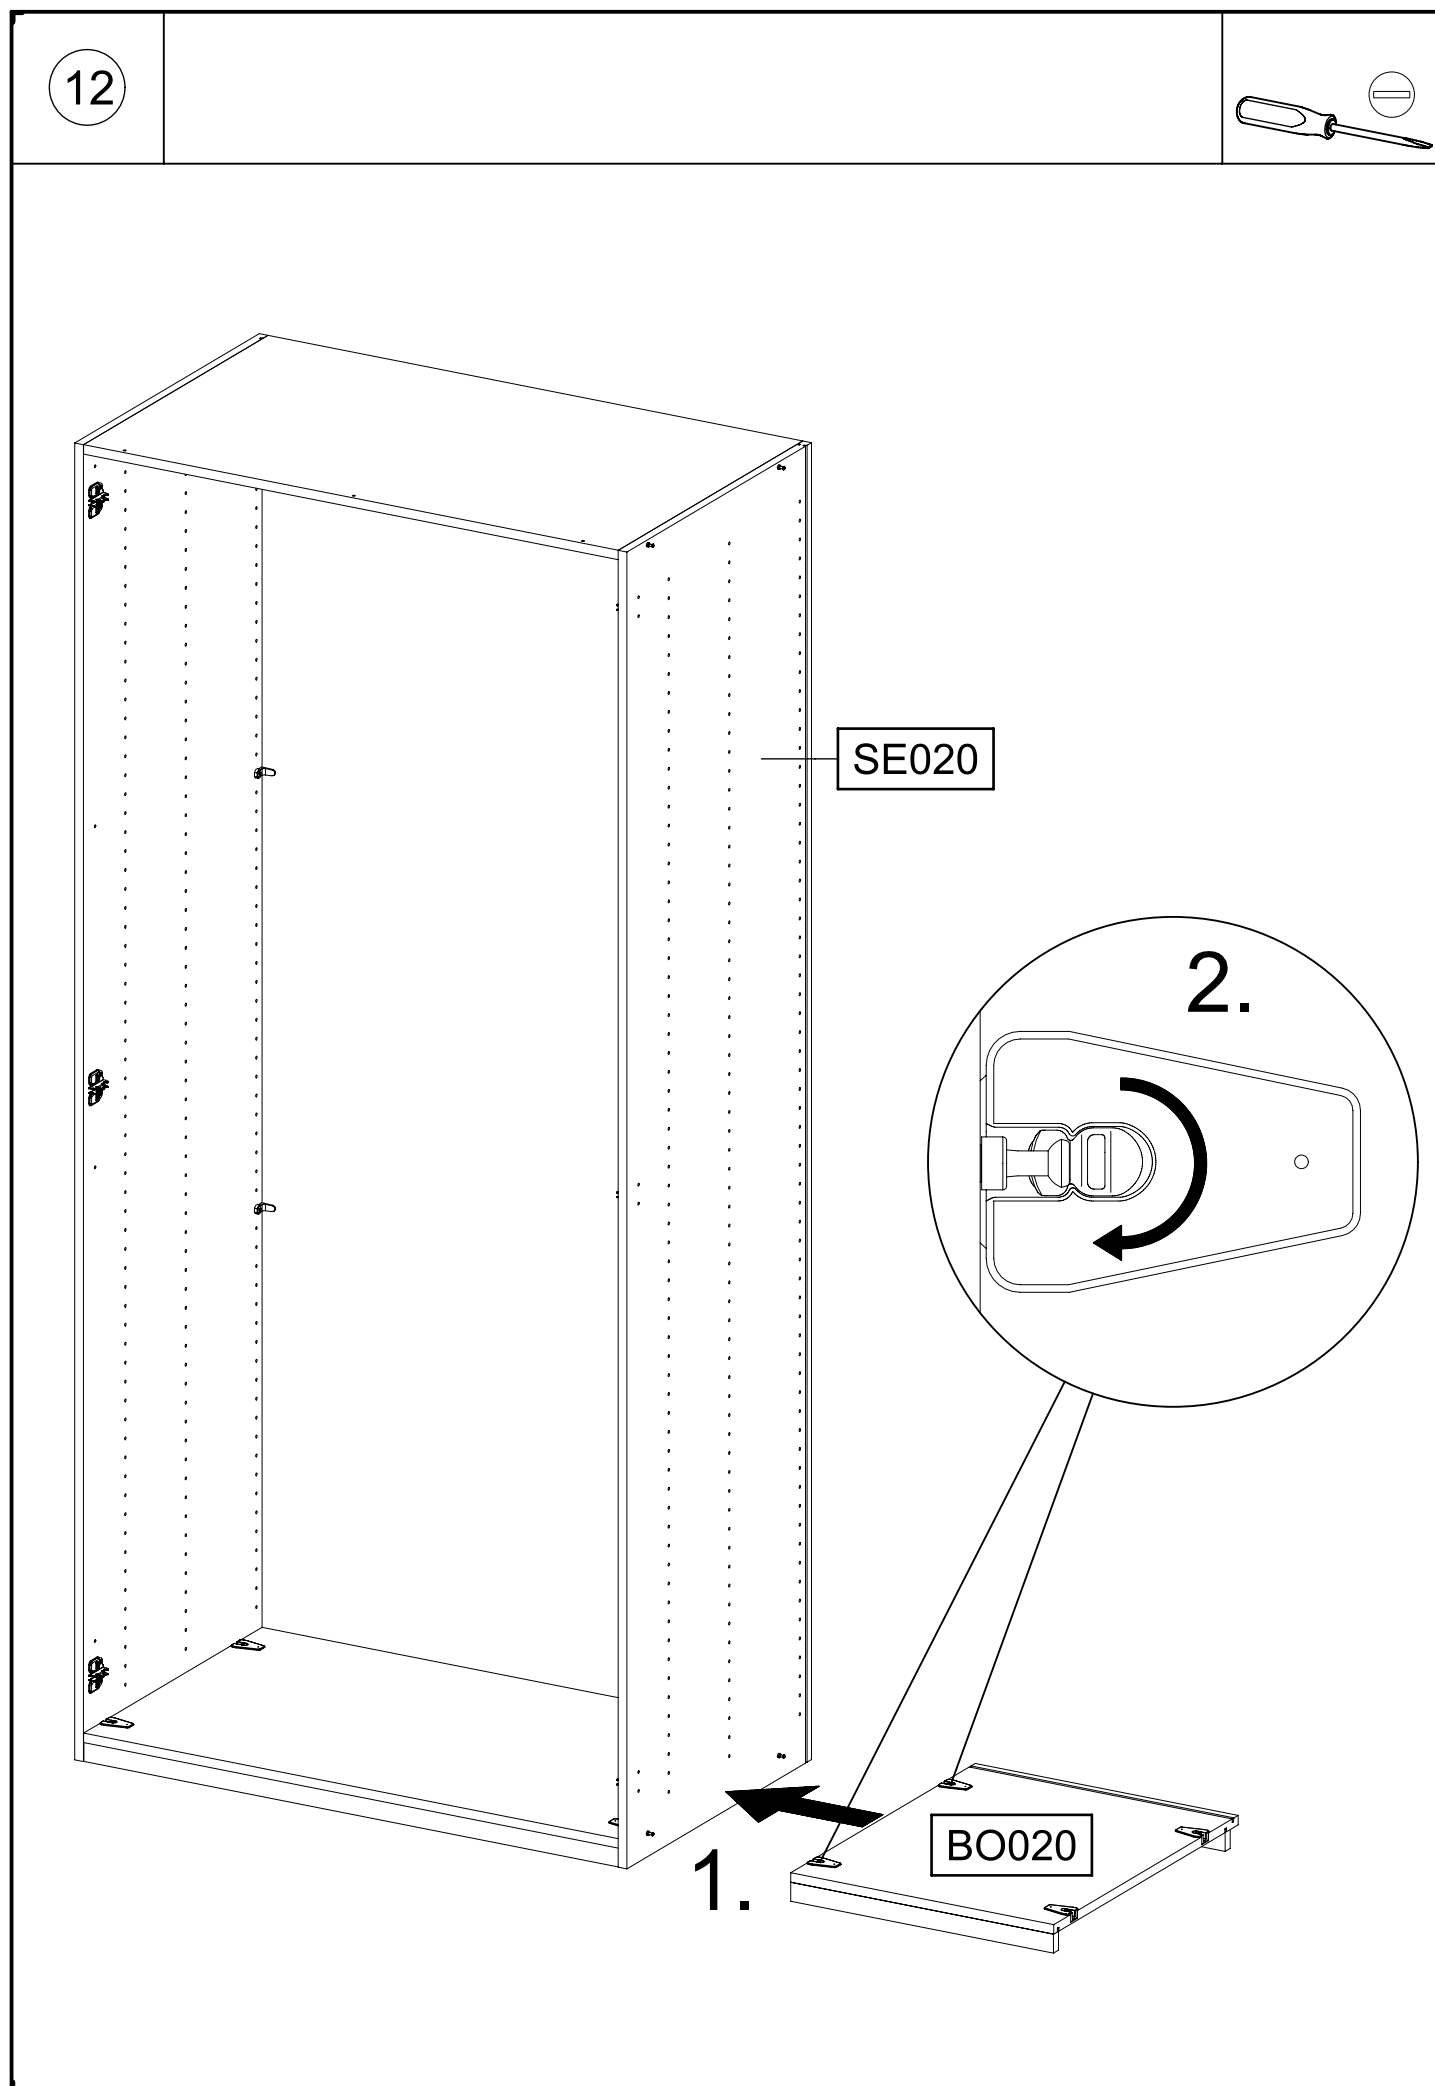


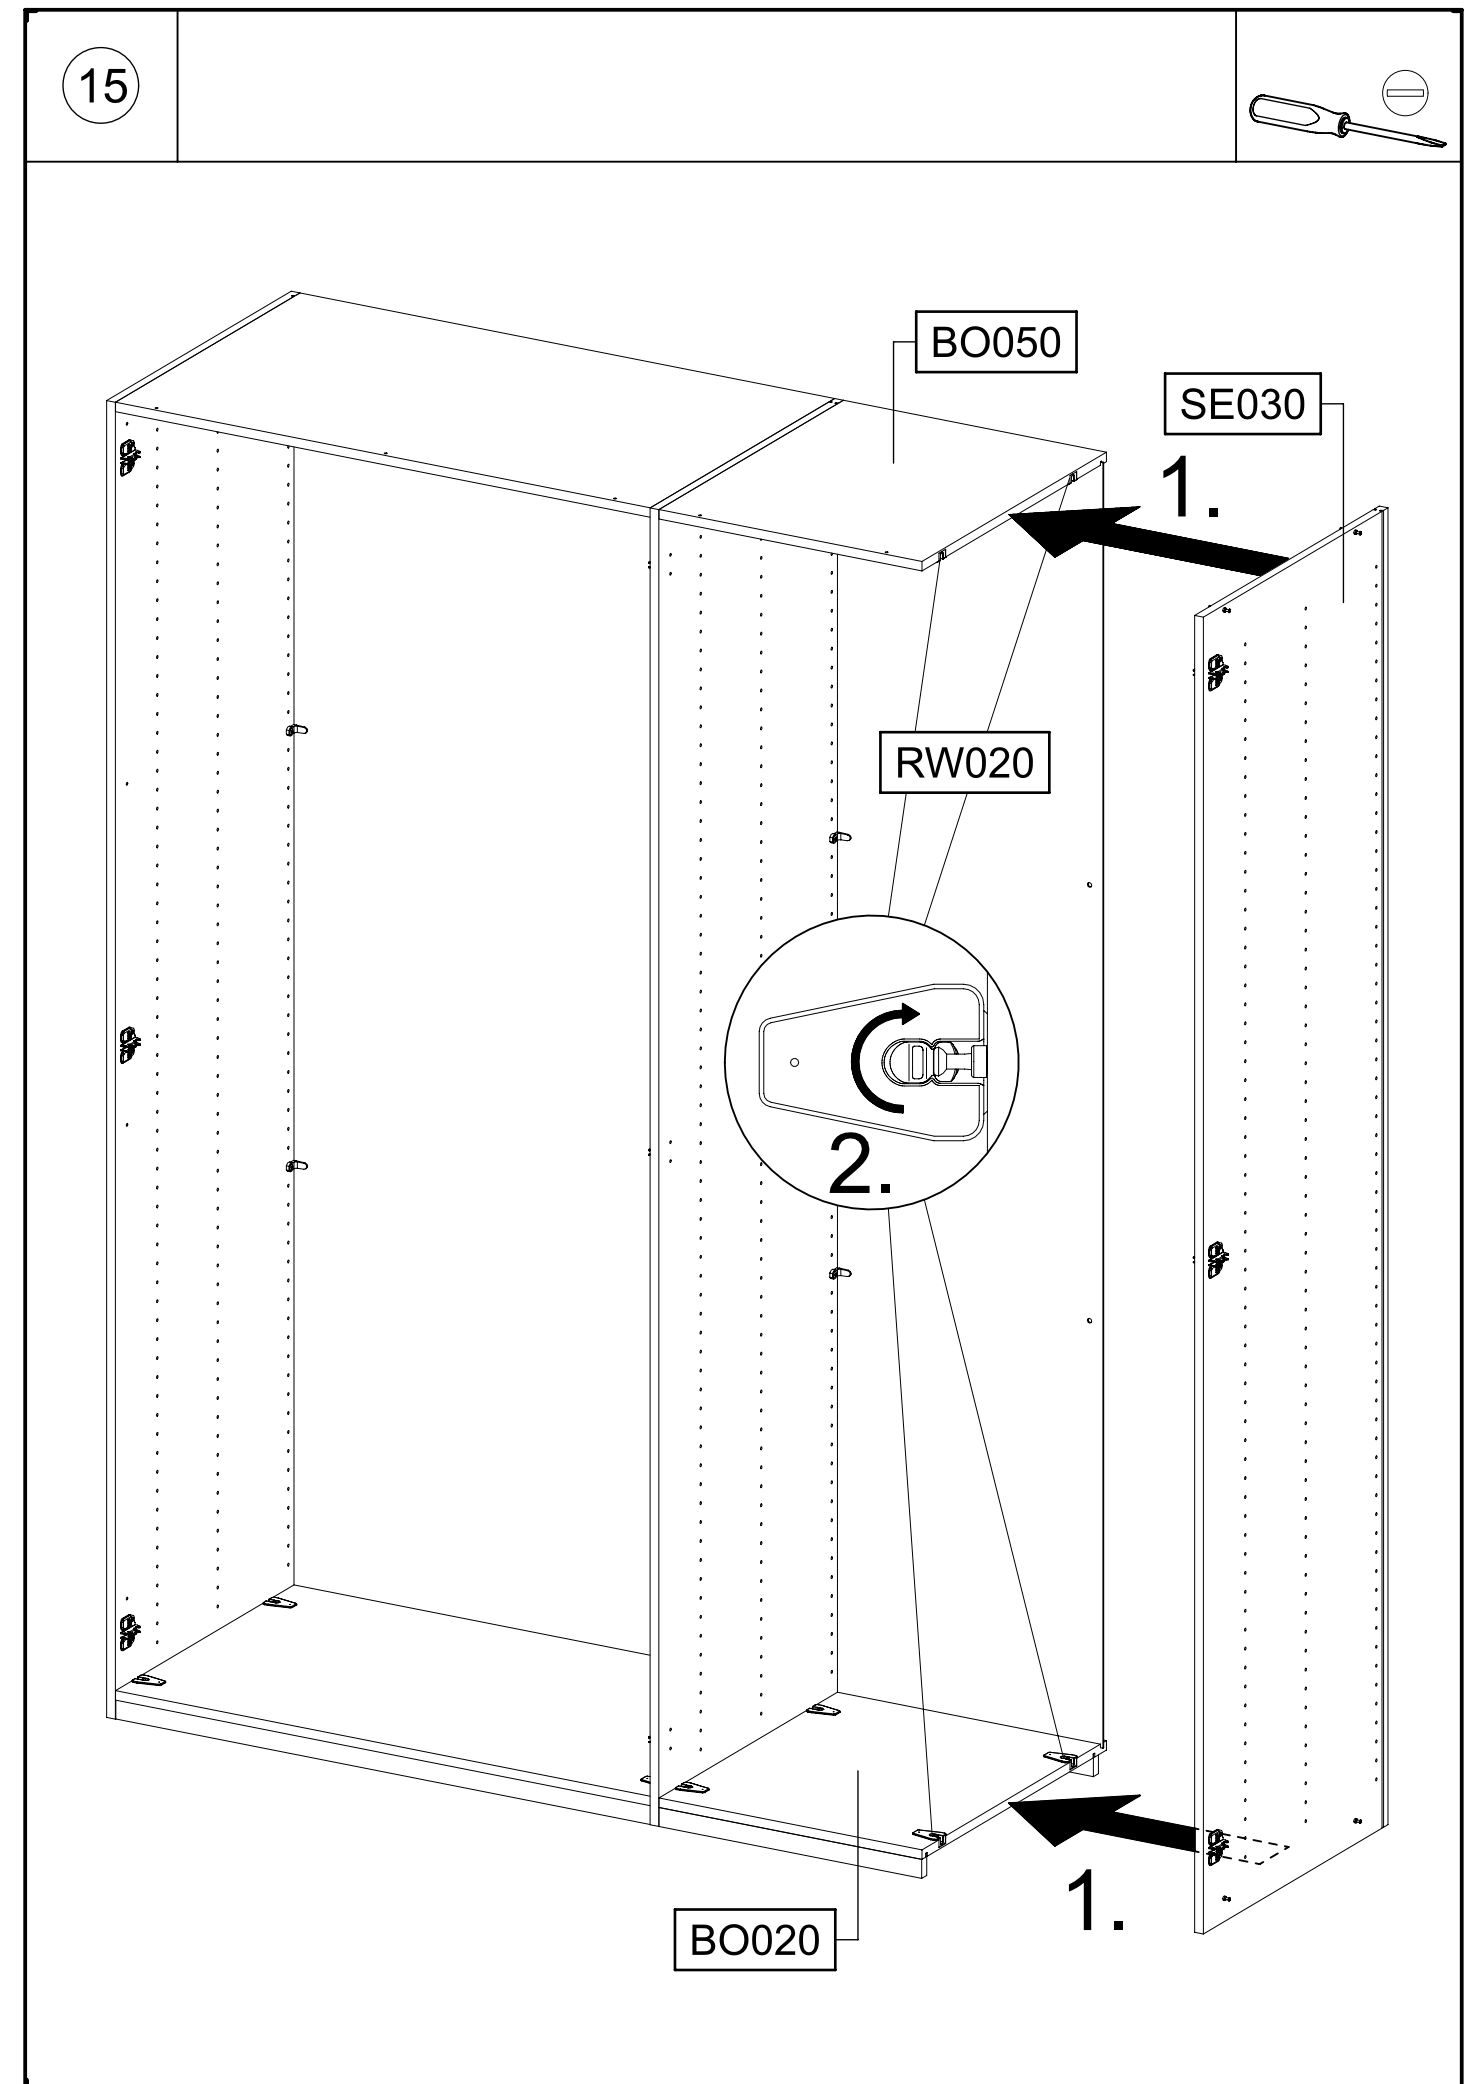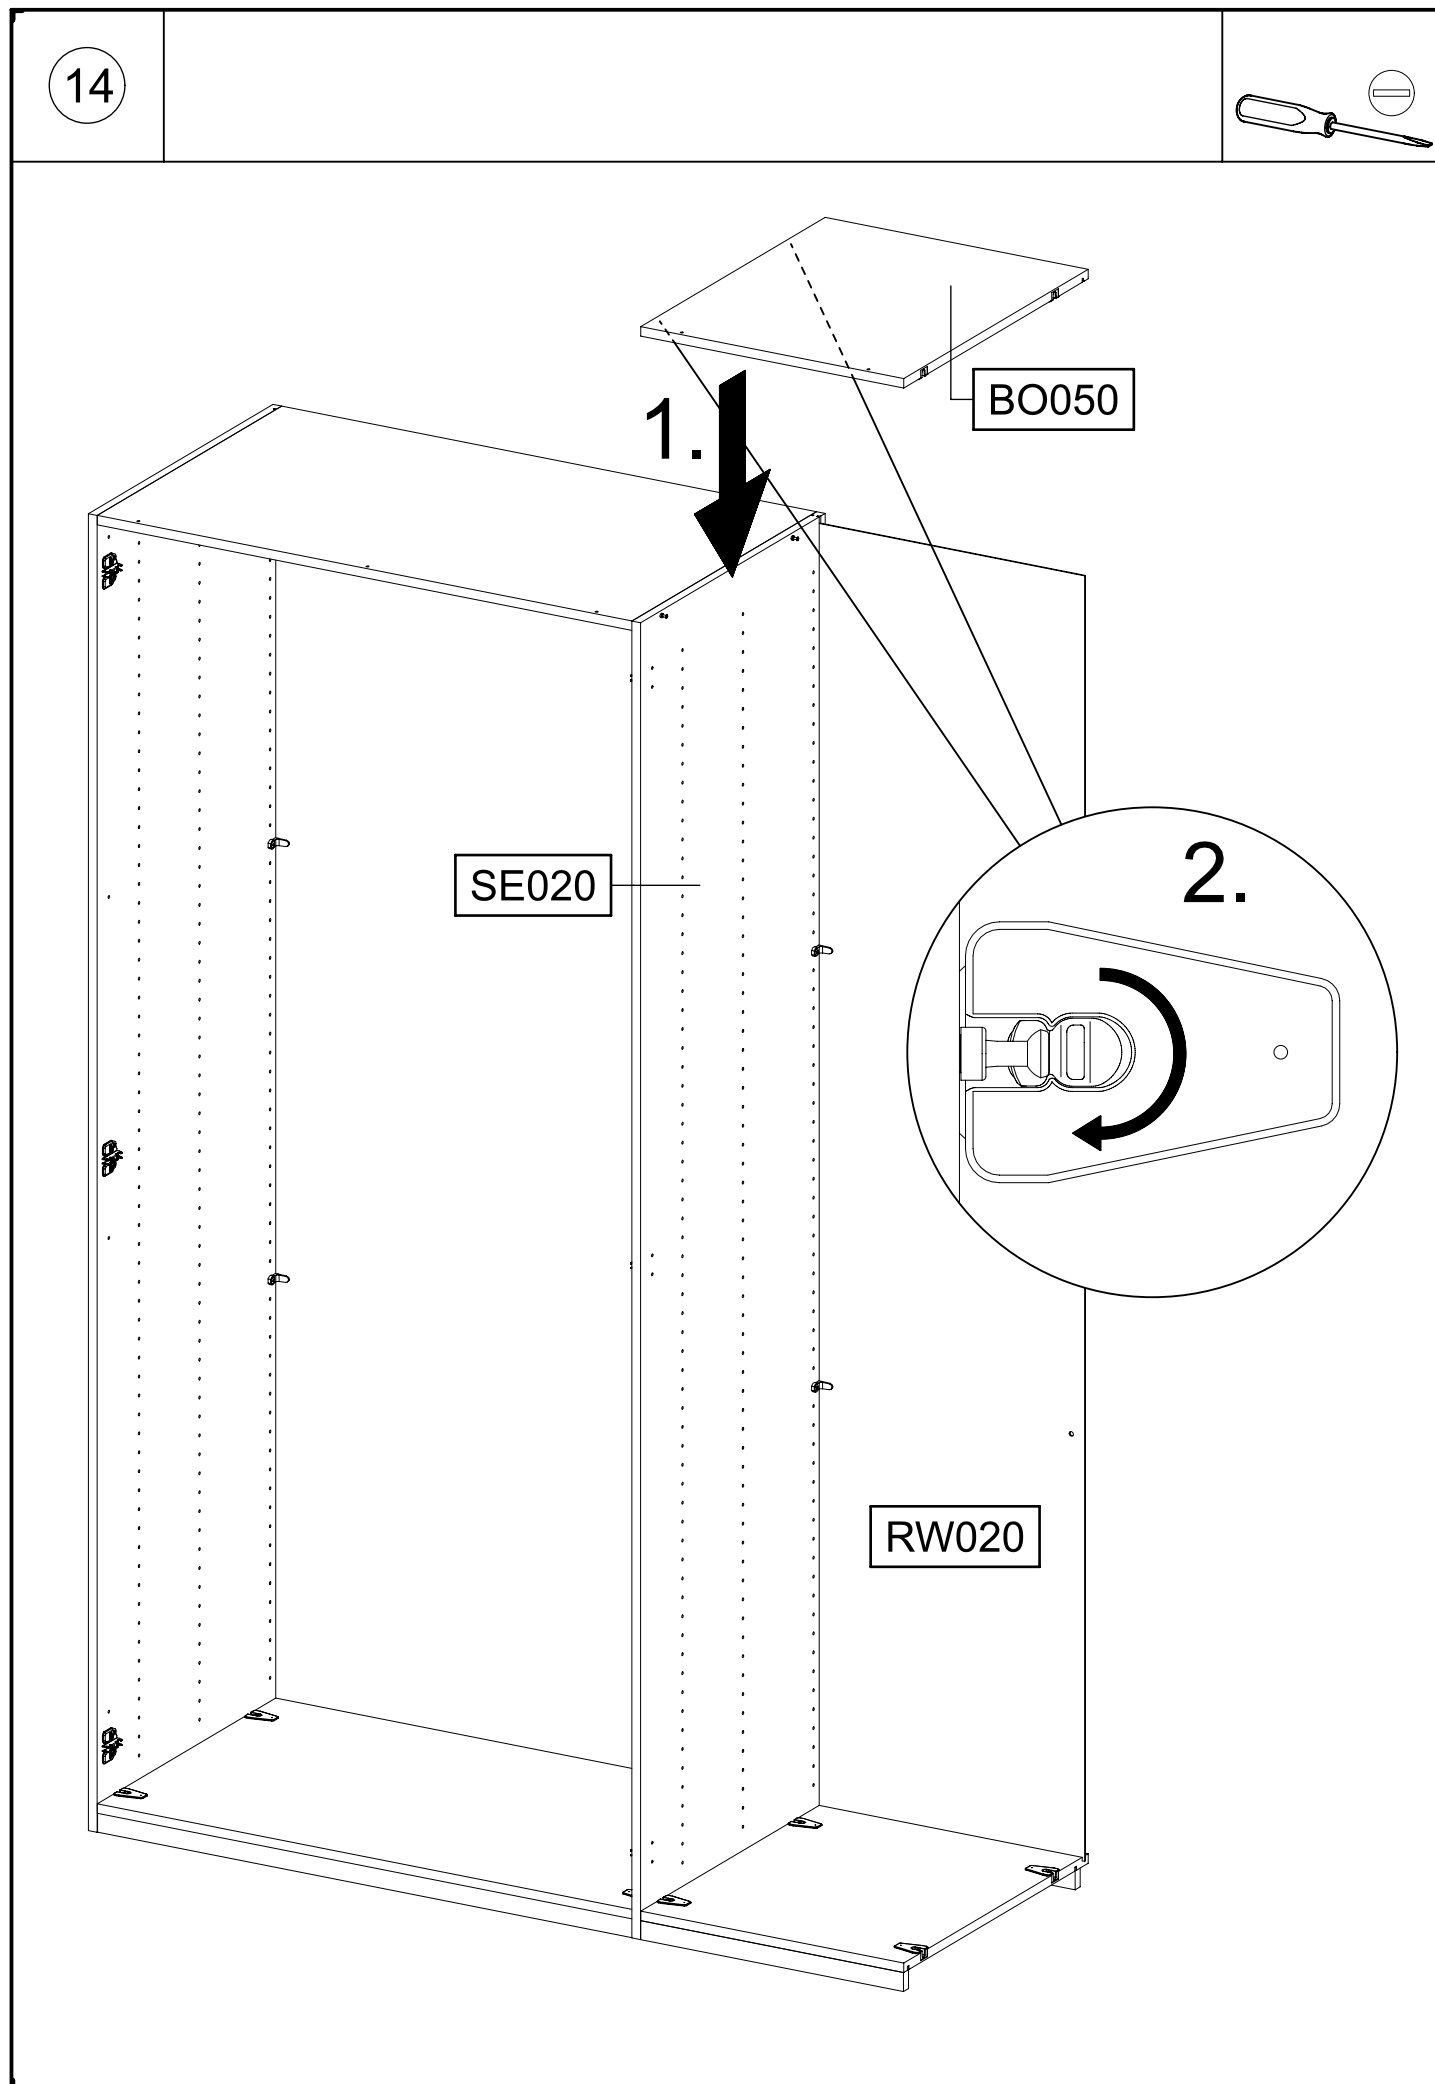

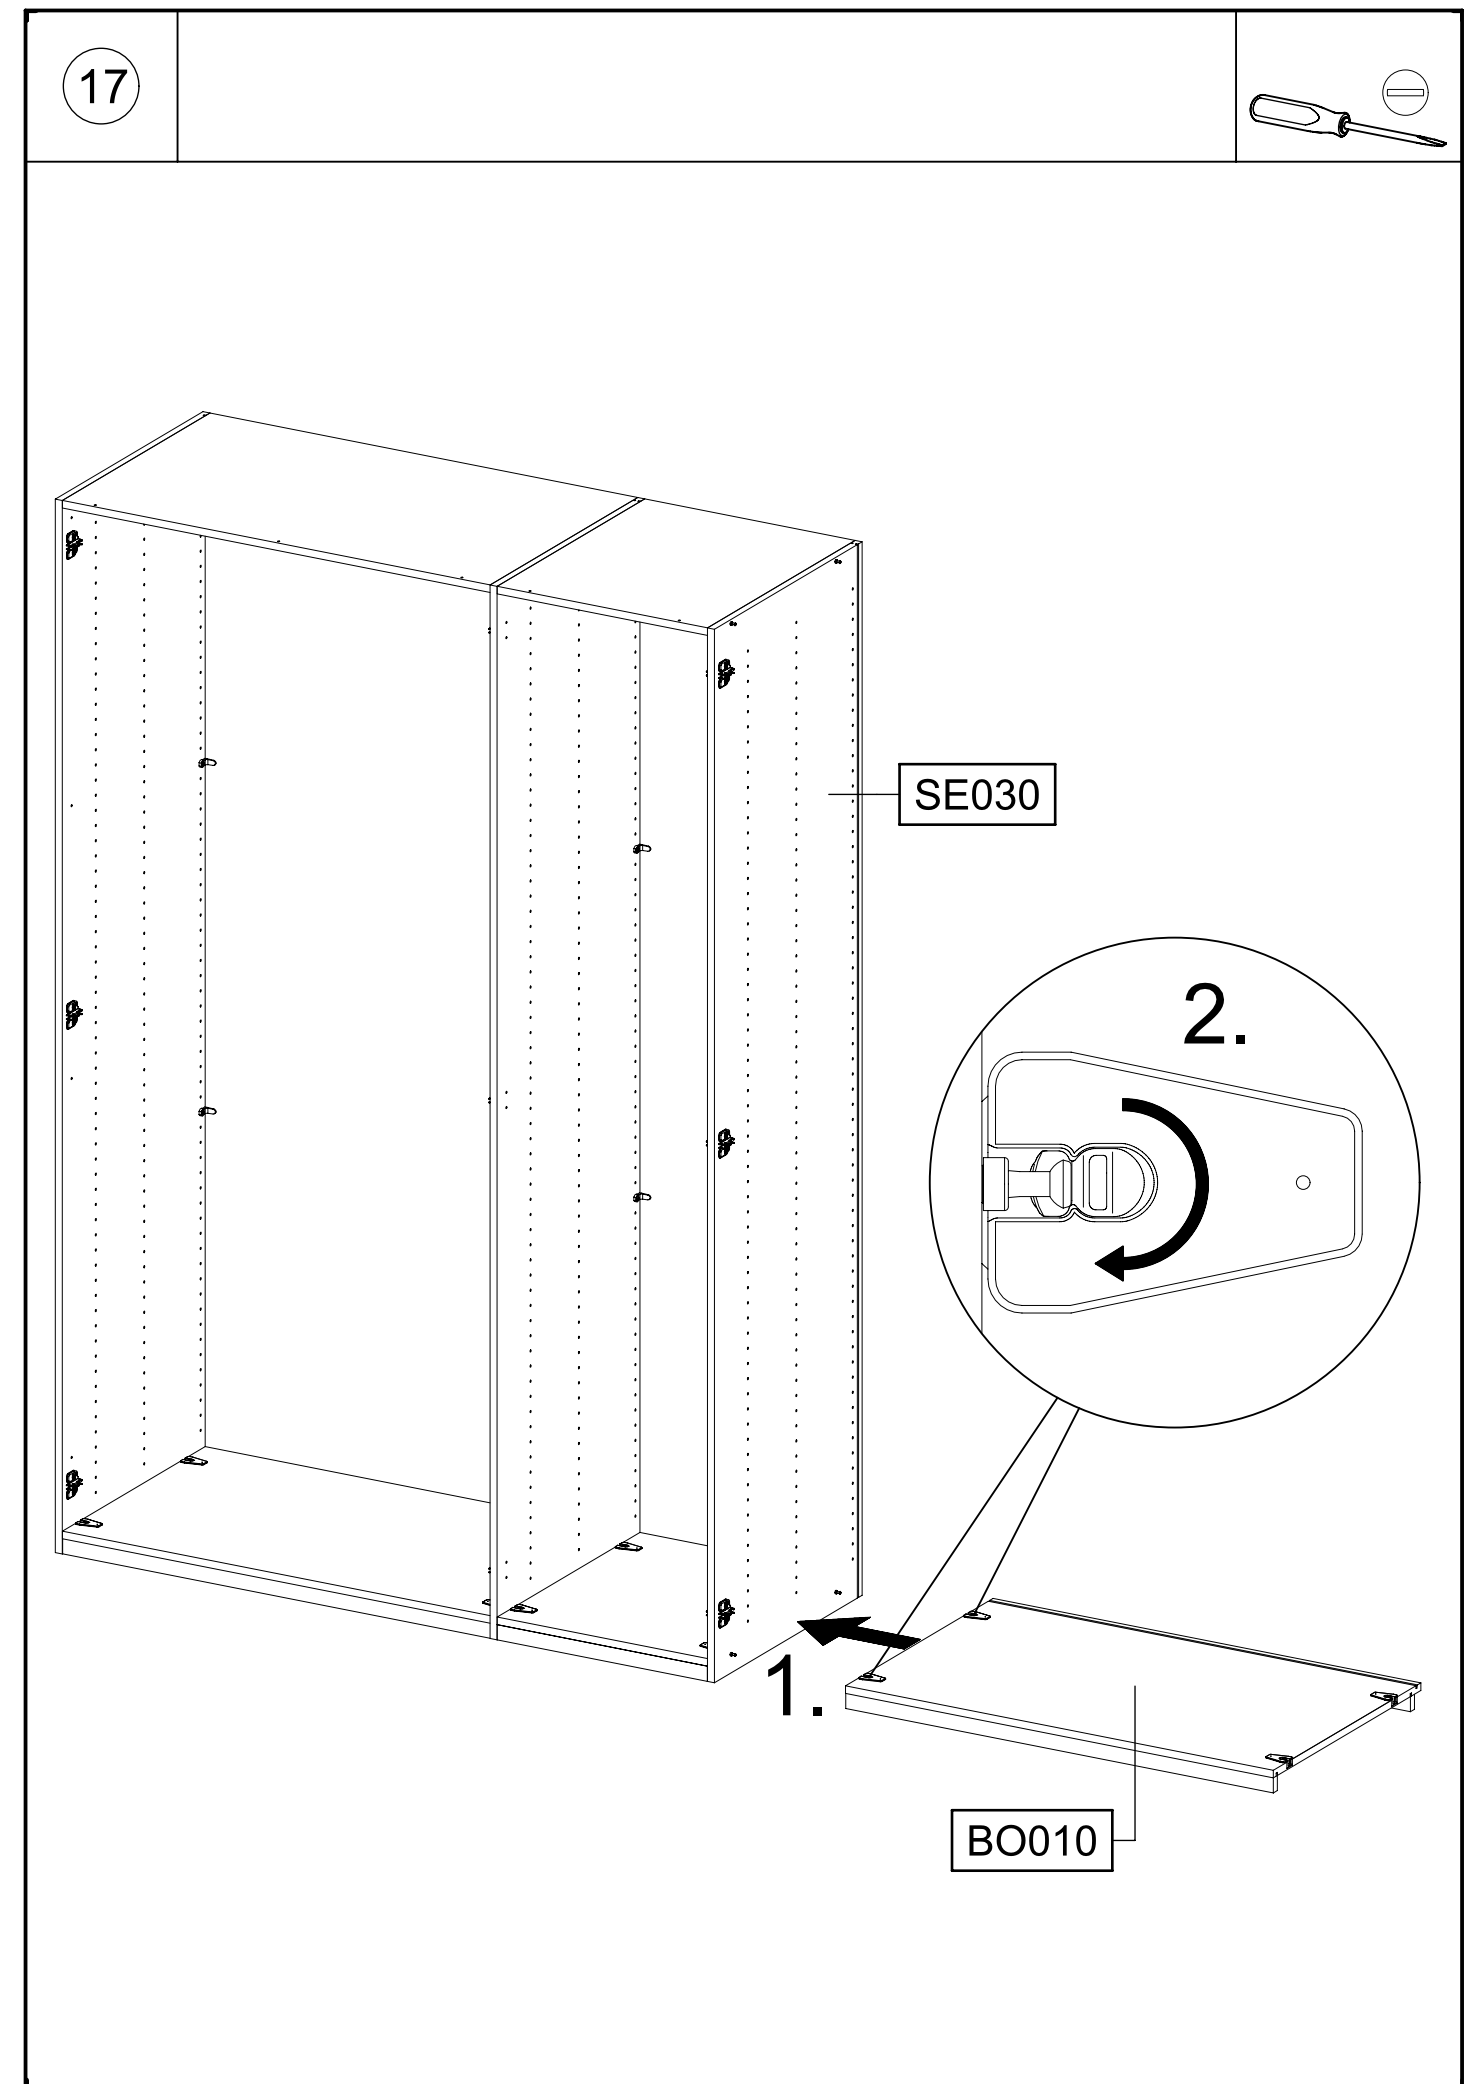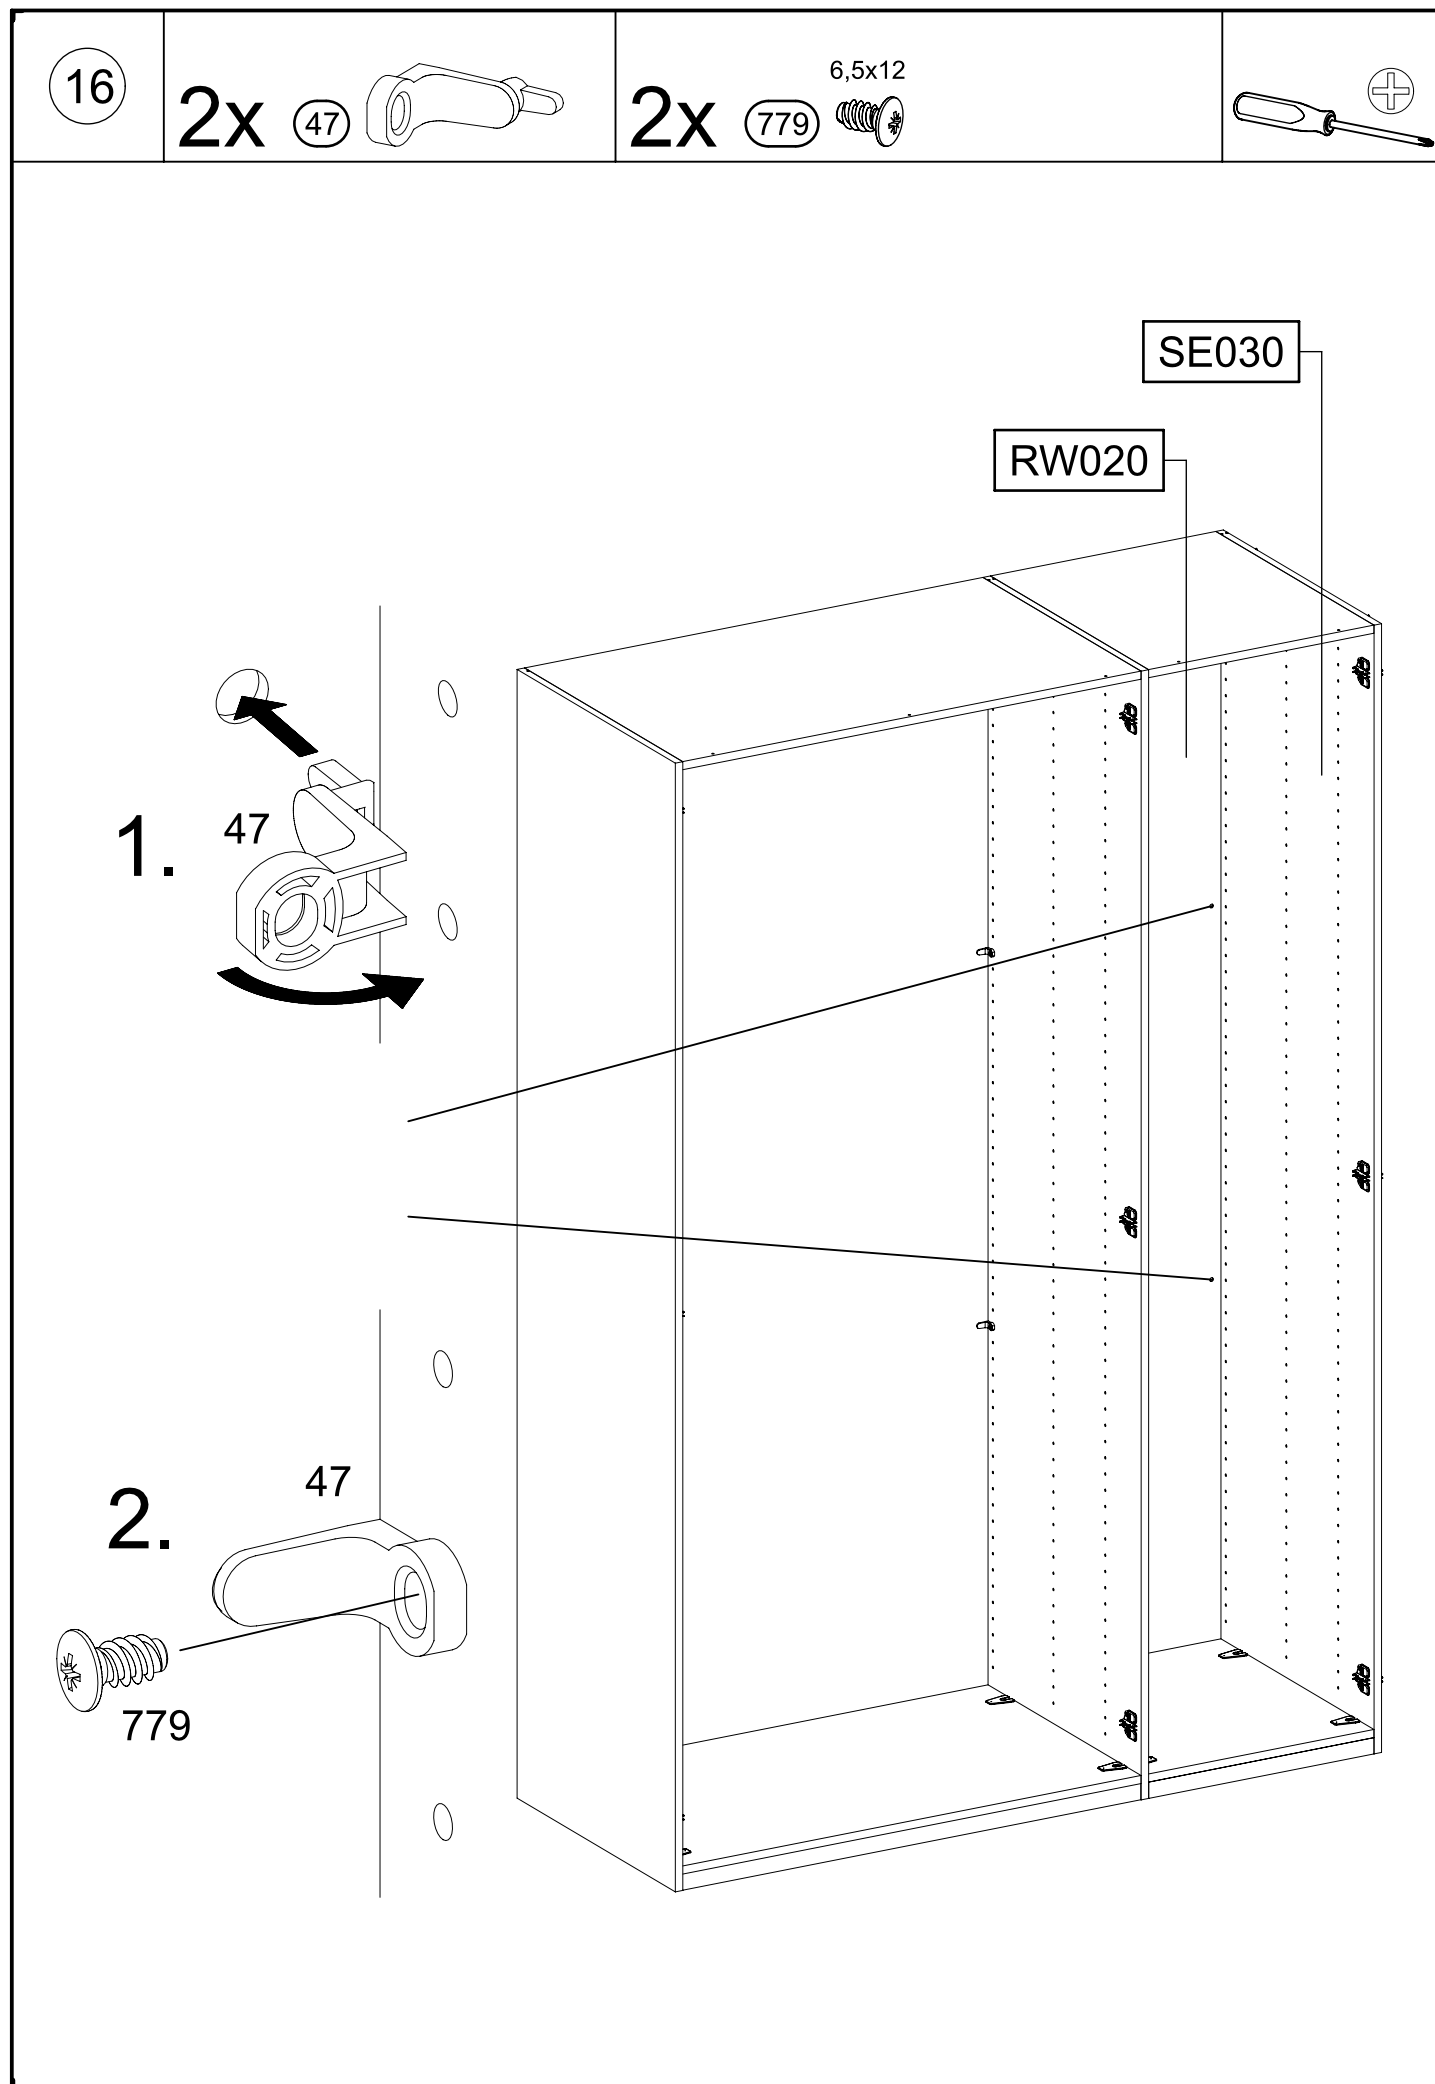

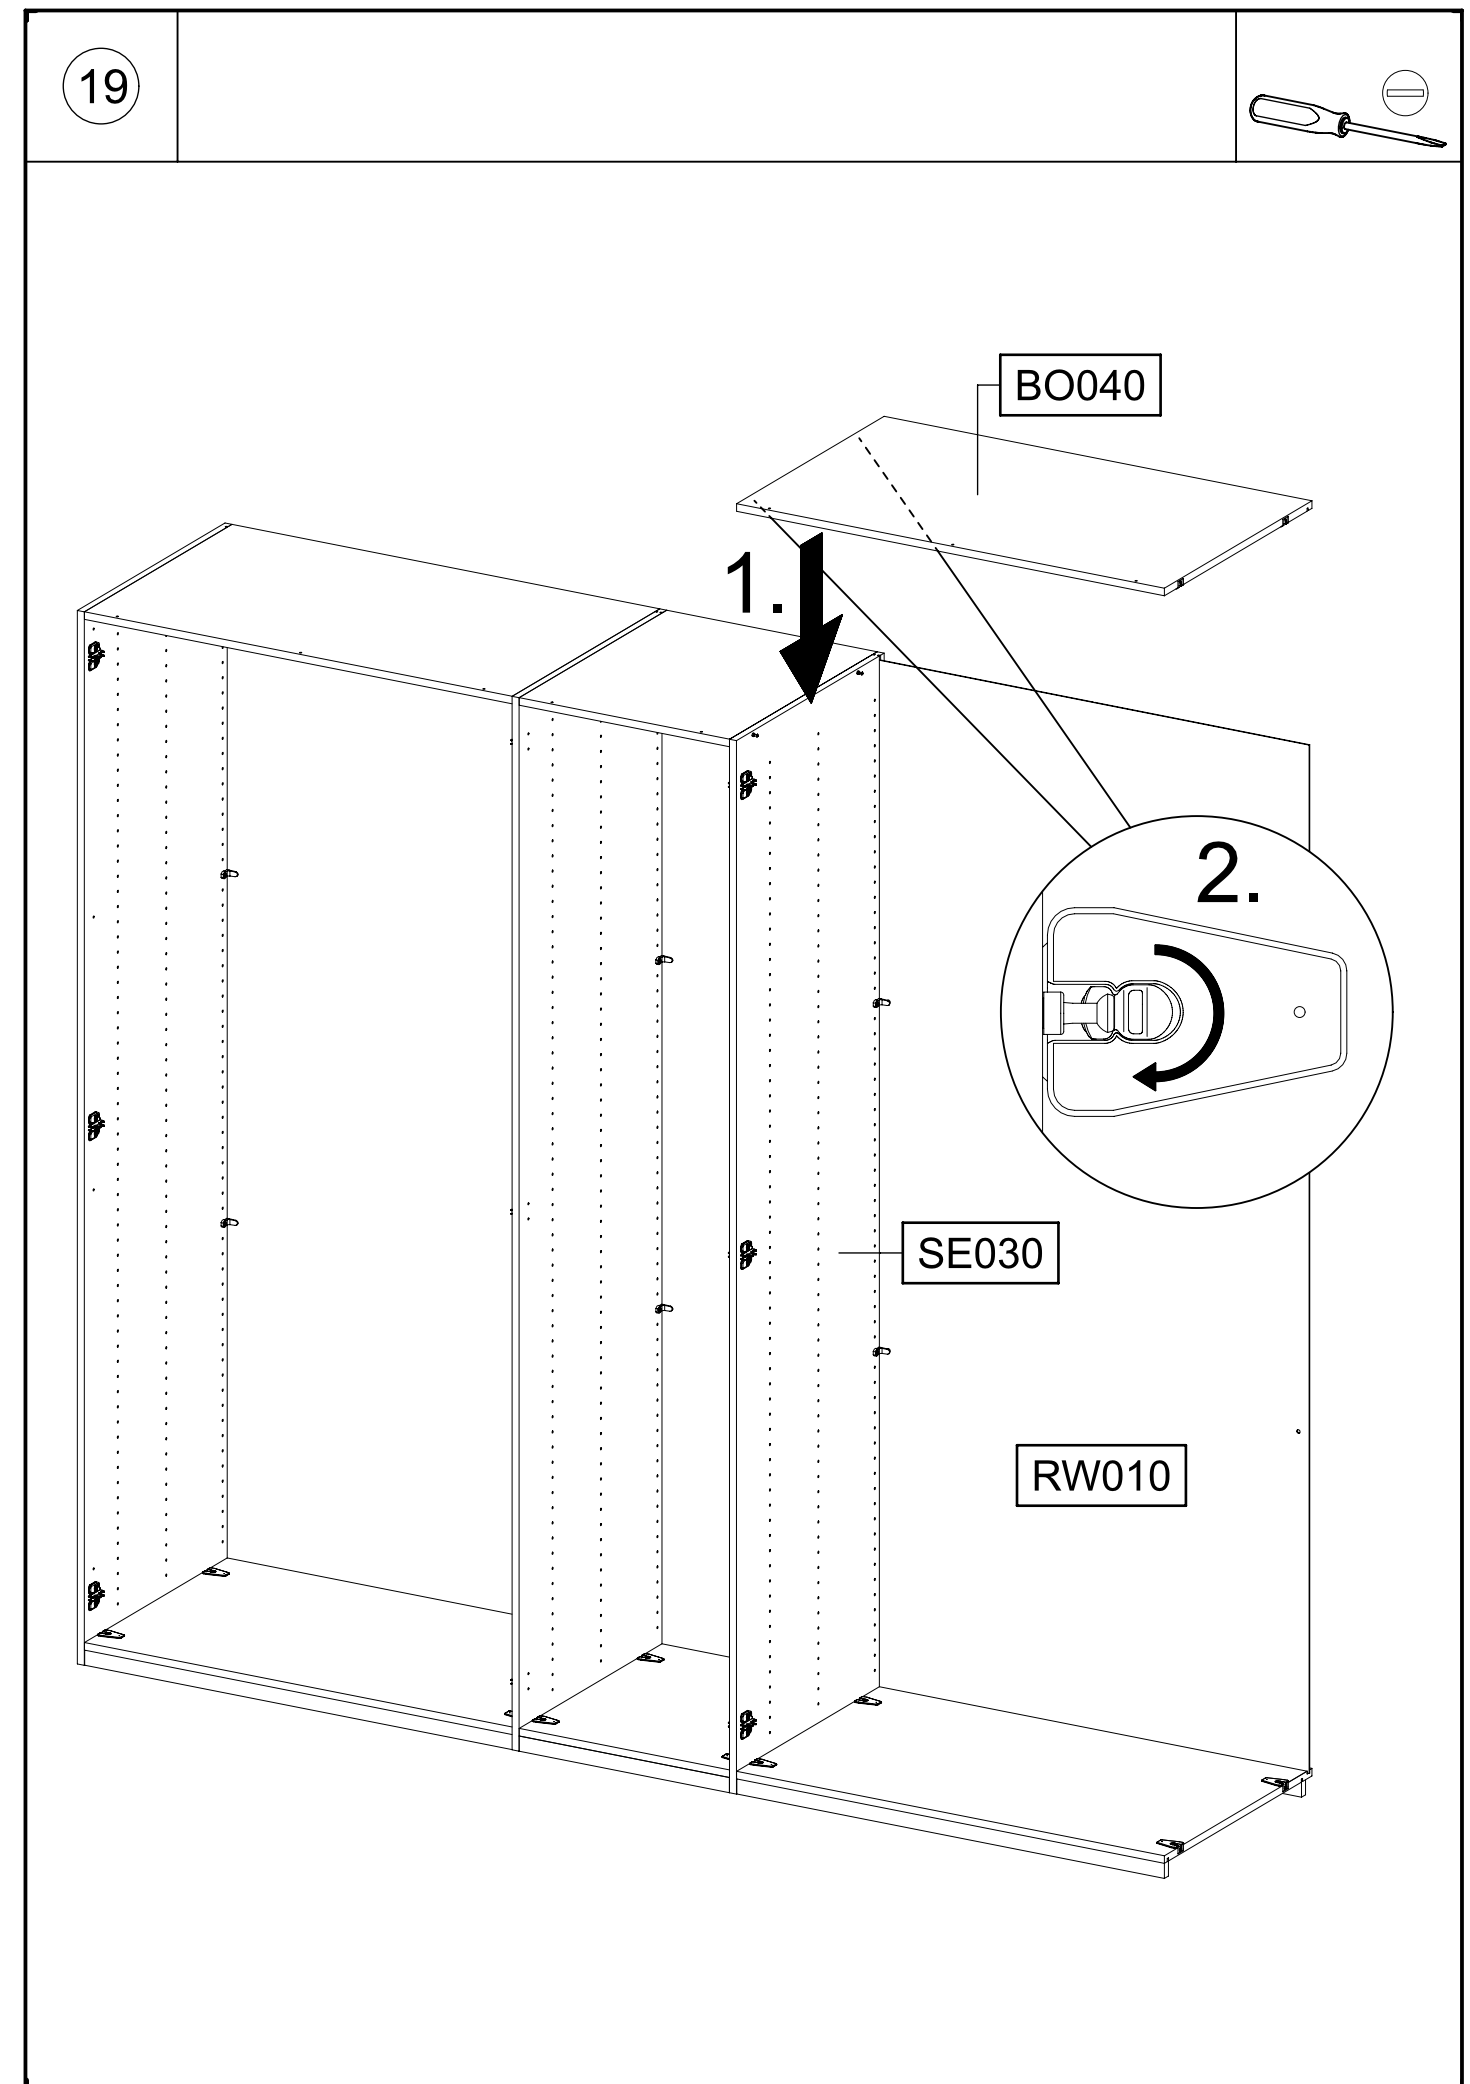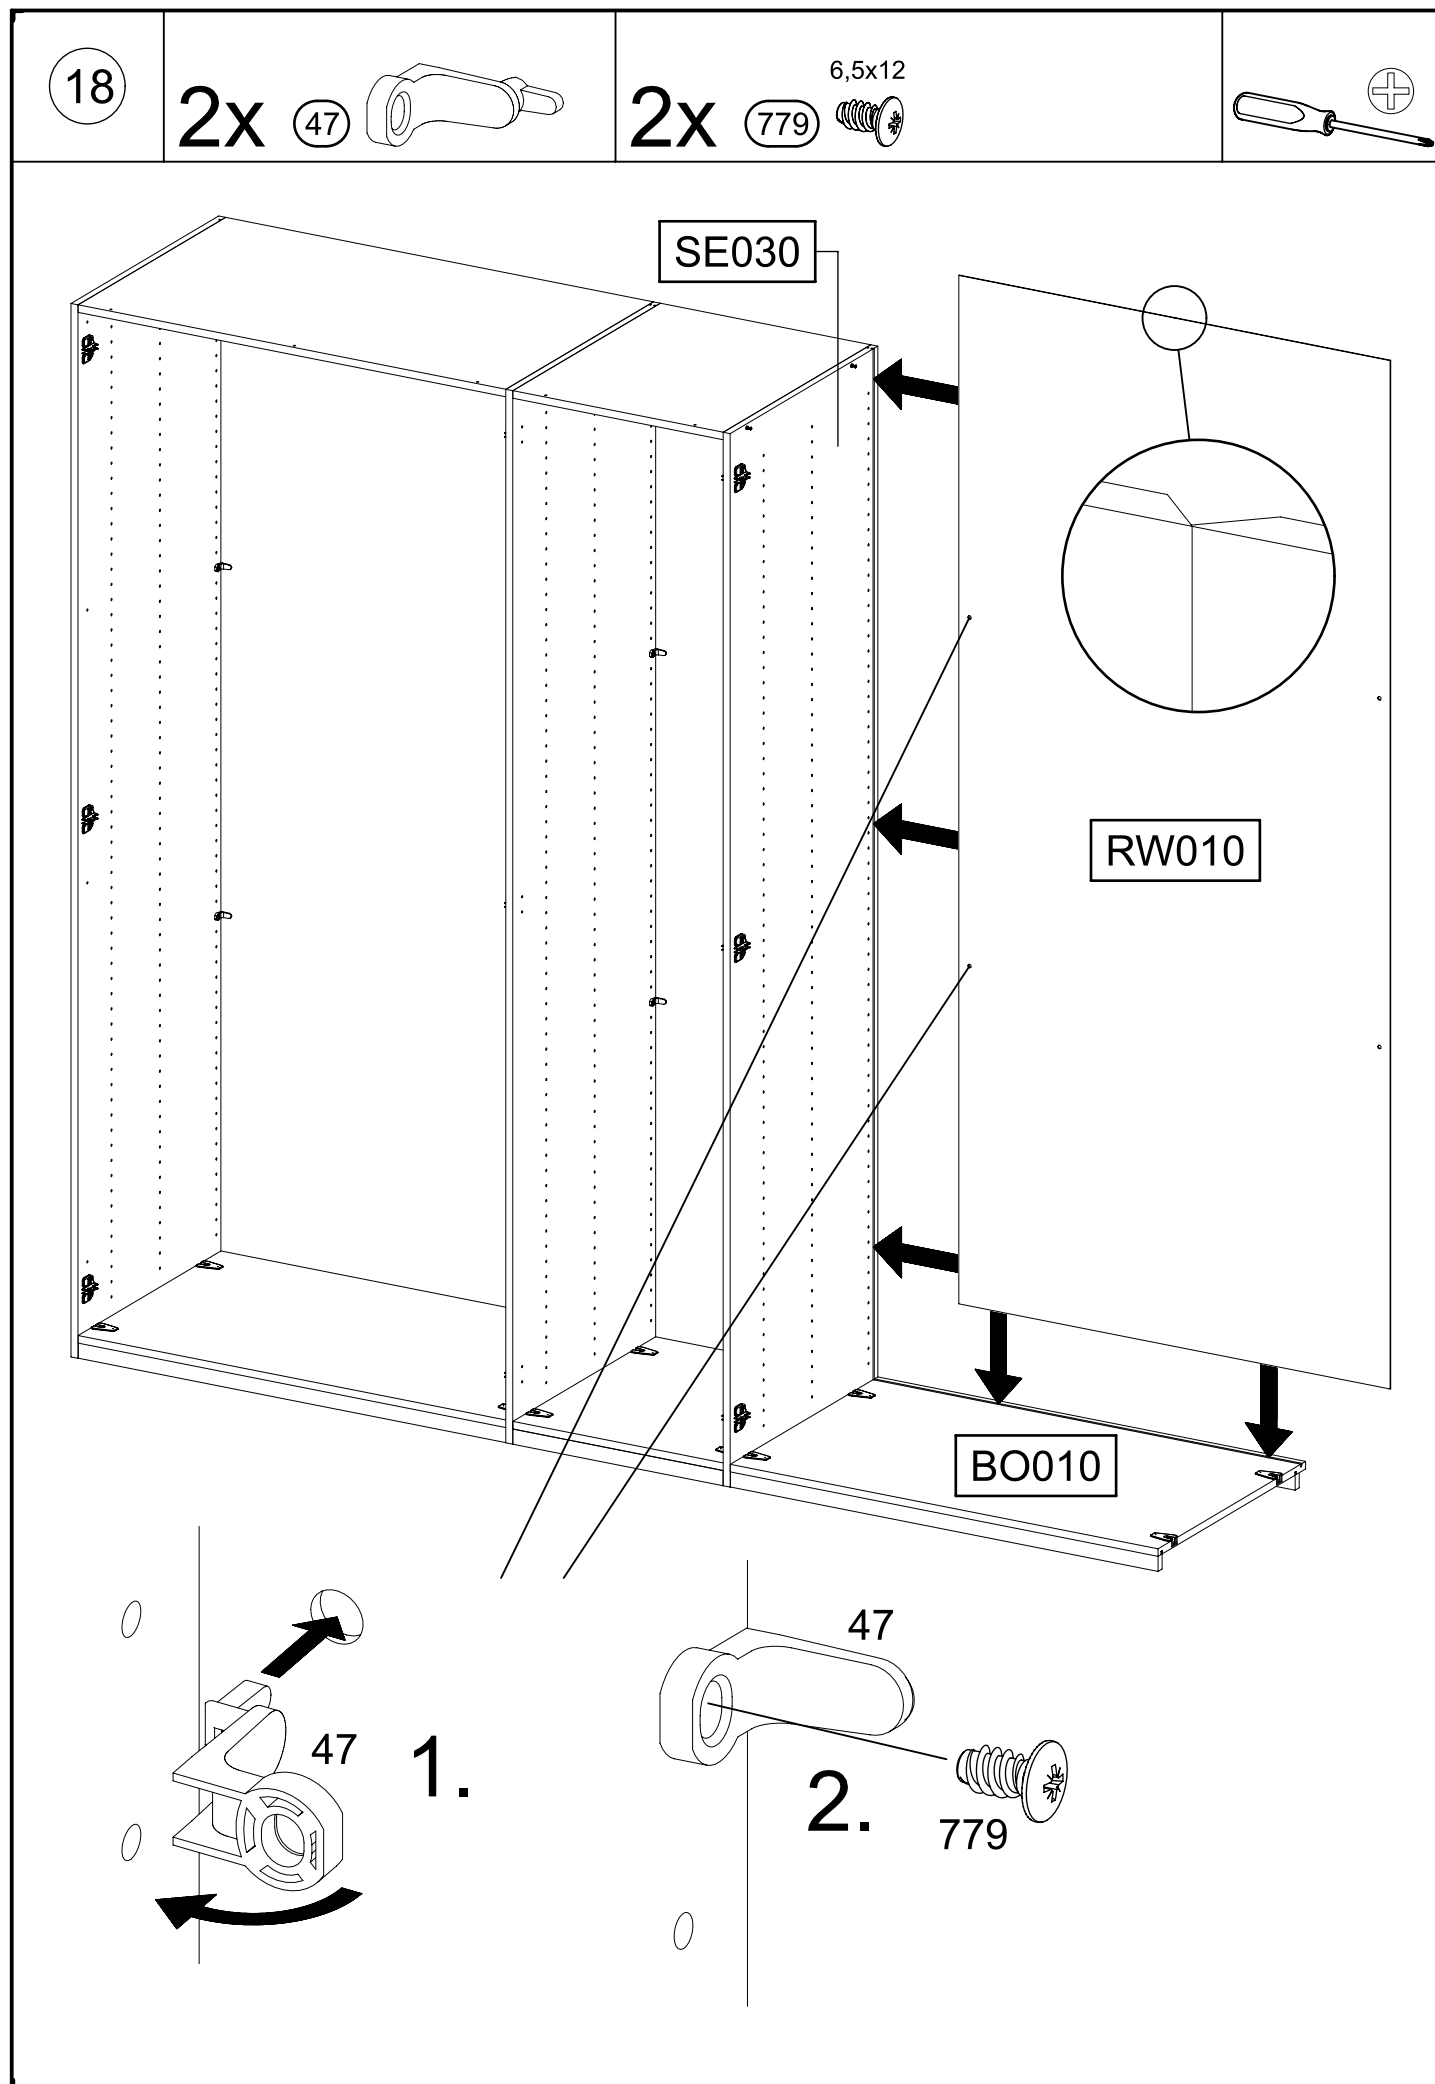


25.

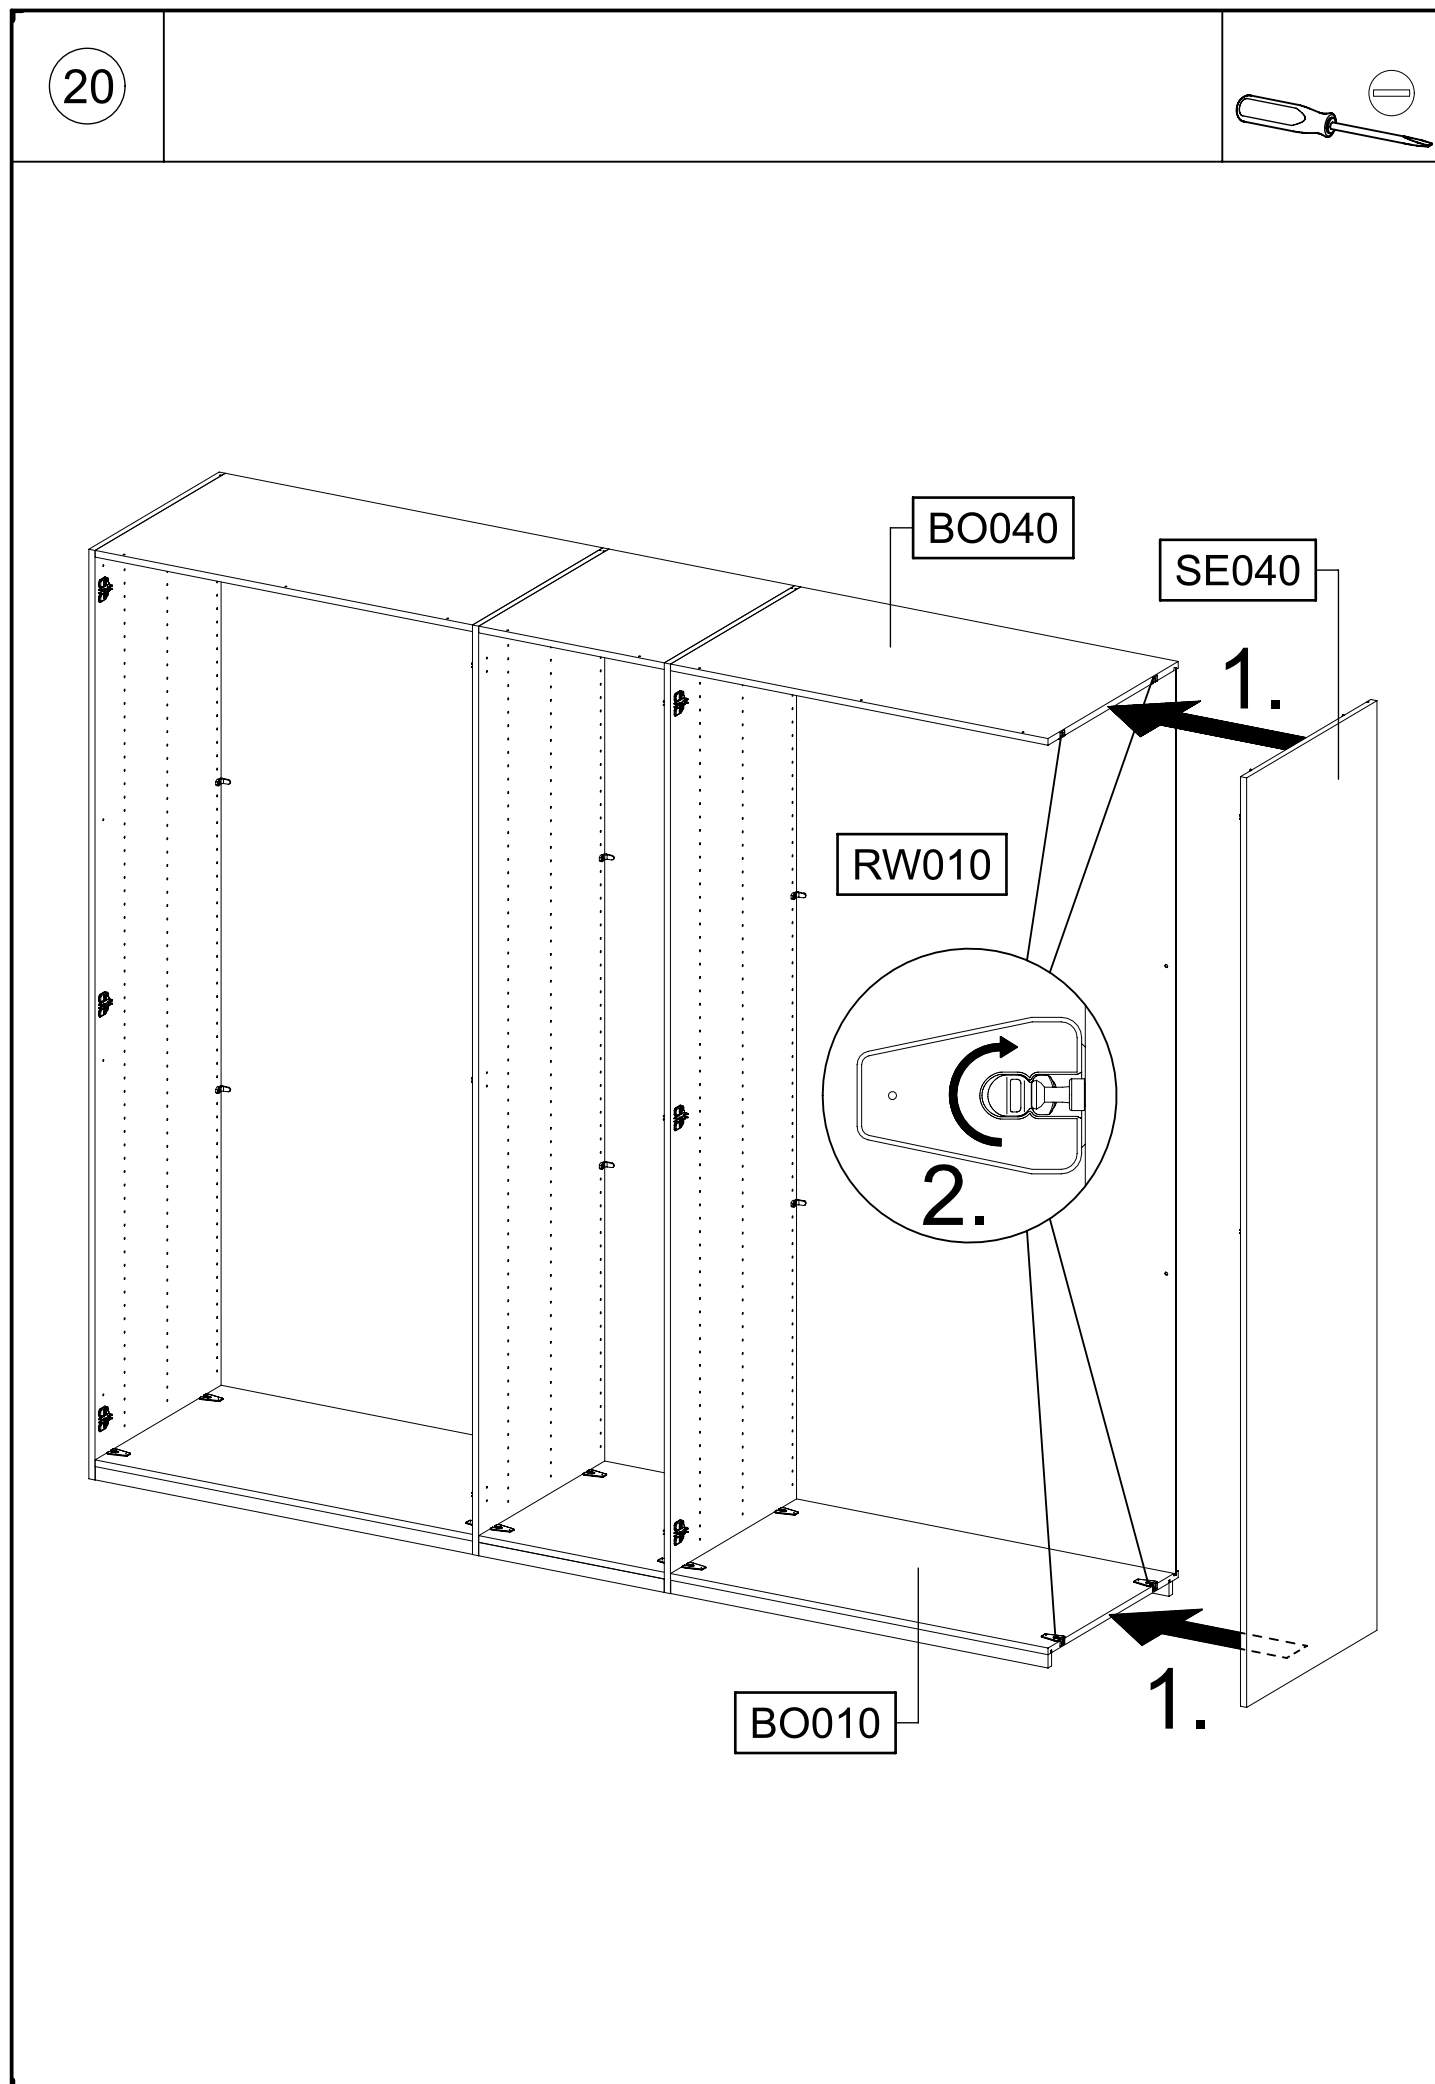

MD105

26.

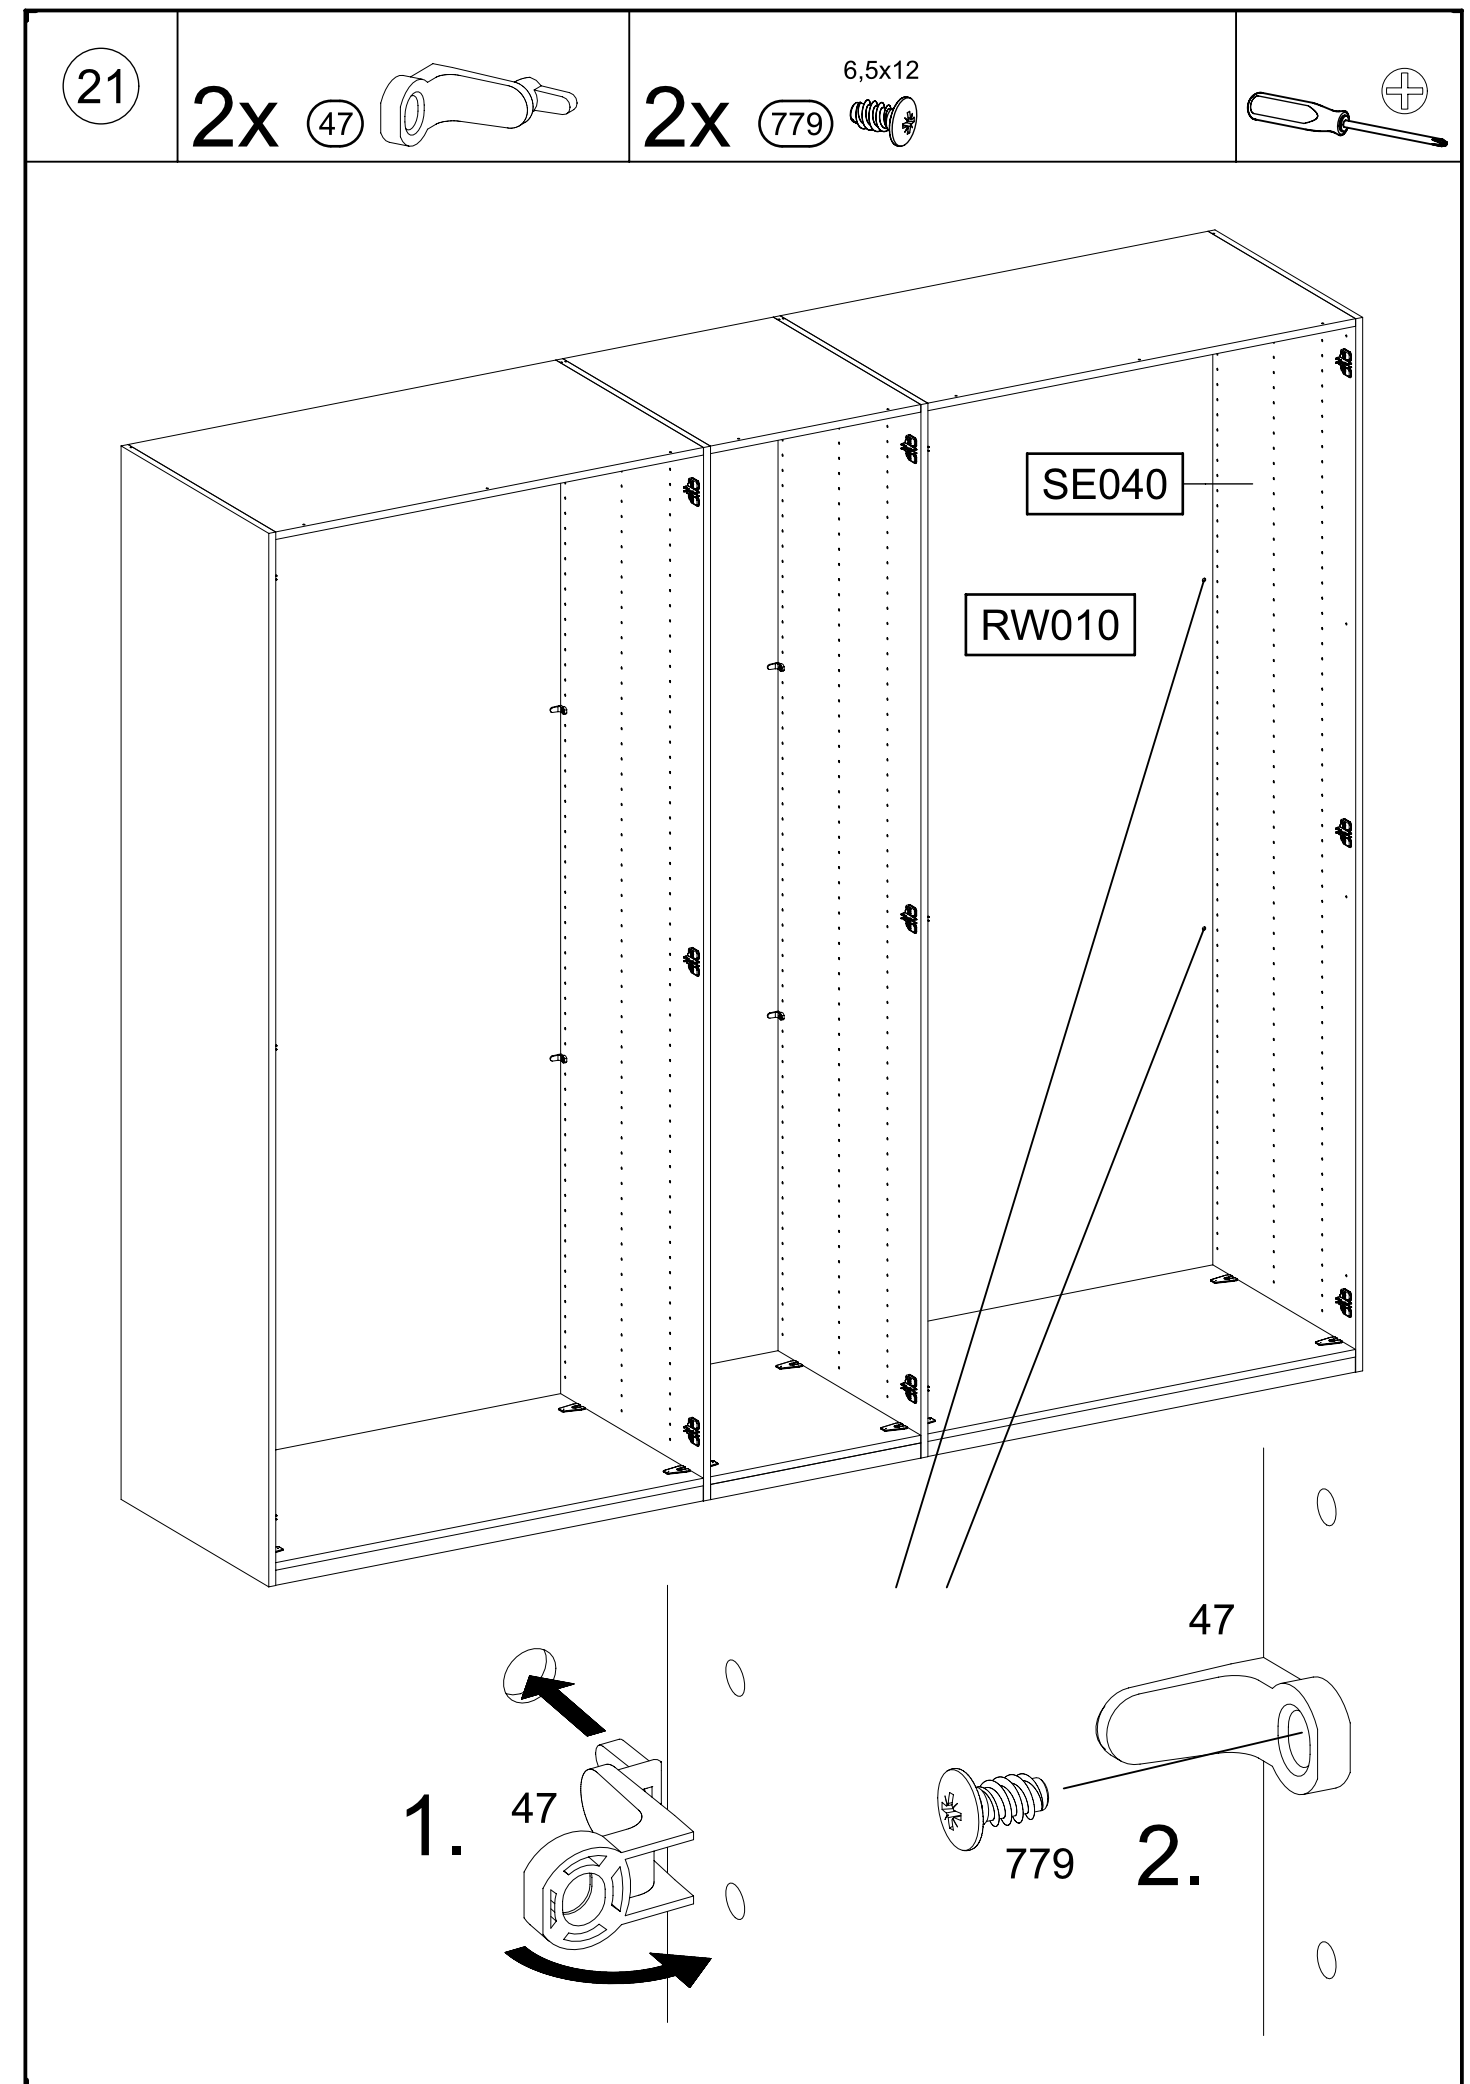



MD105

27.

22

24x

1089

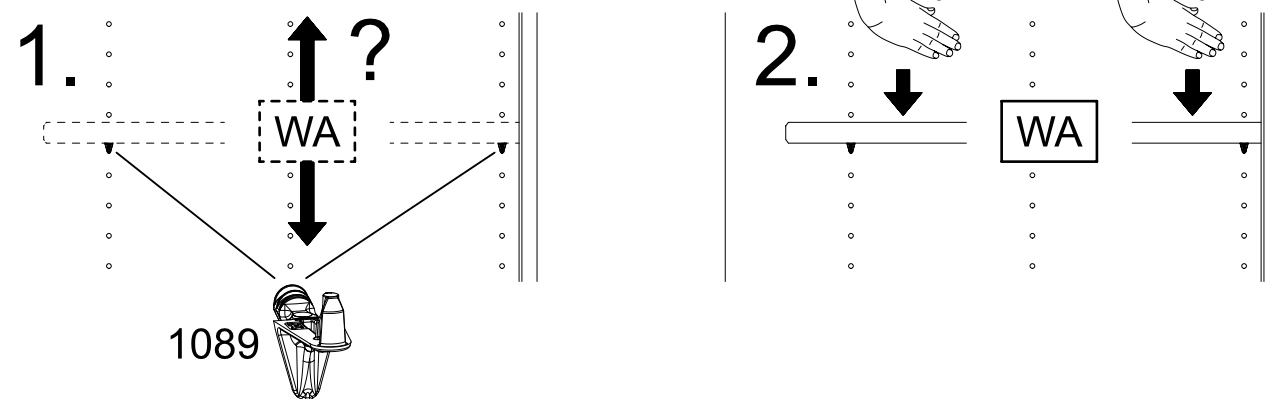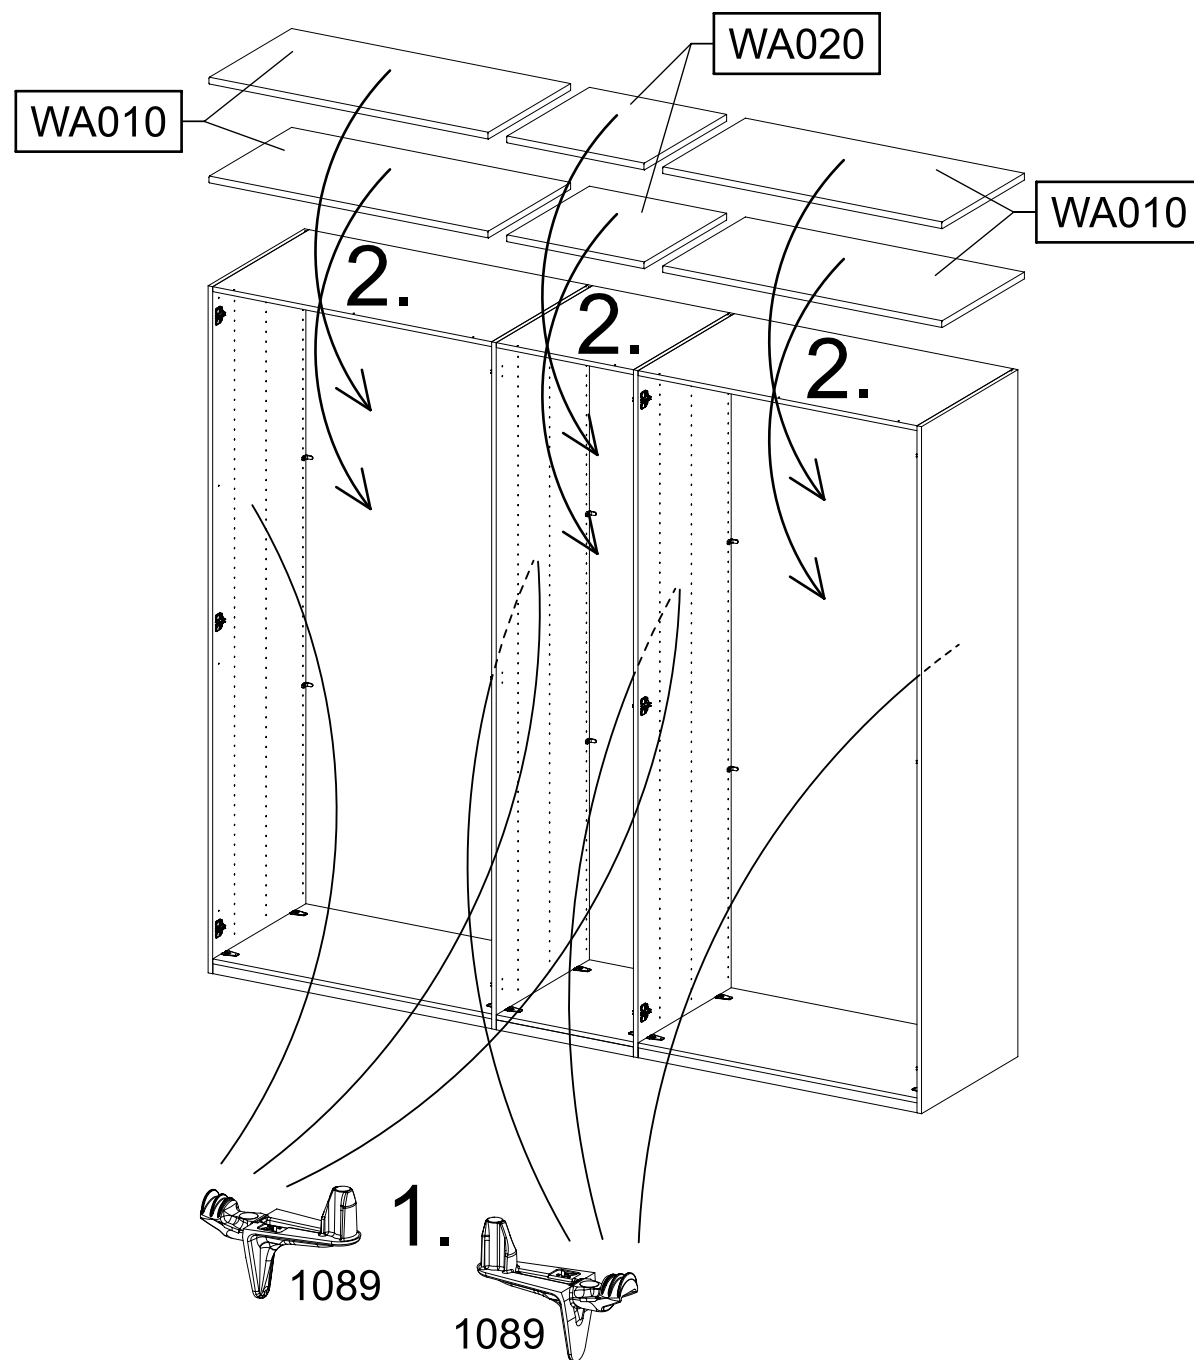


MD105

28.

23

6x



29

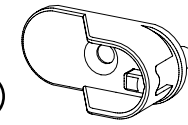

6x

205






3,5x15

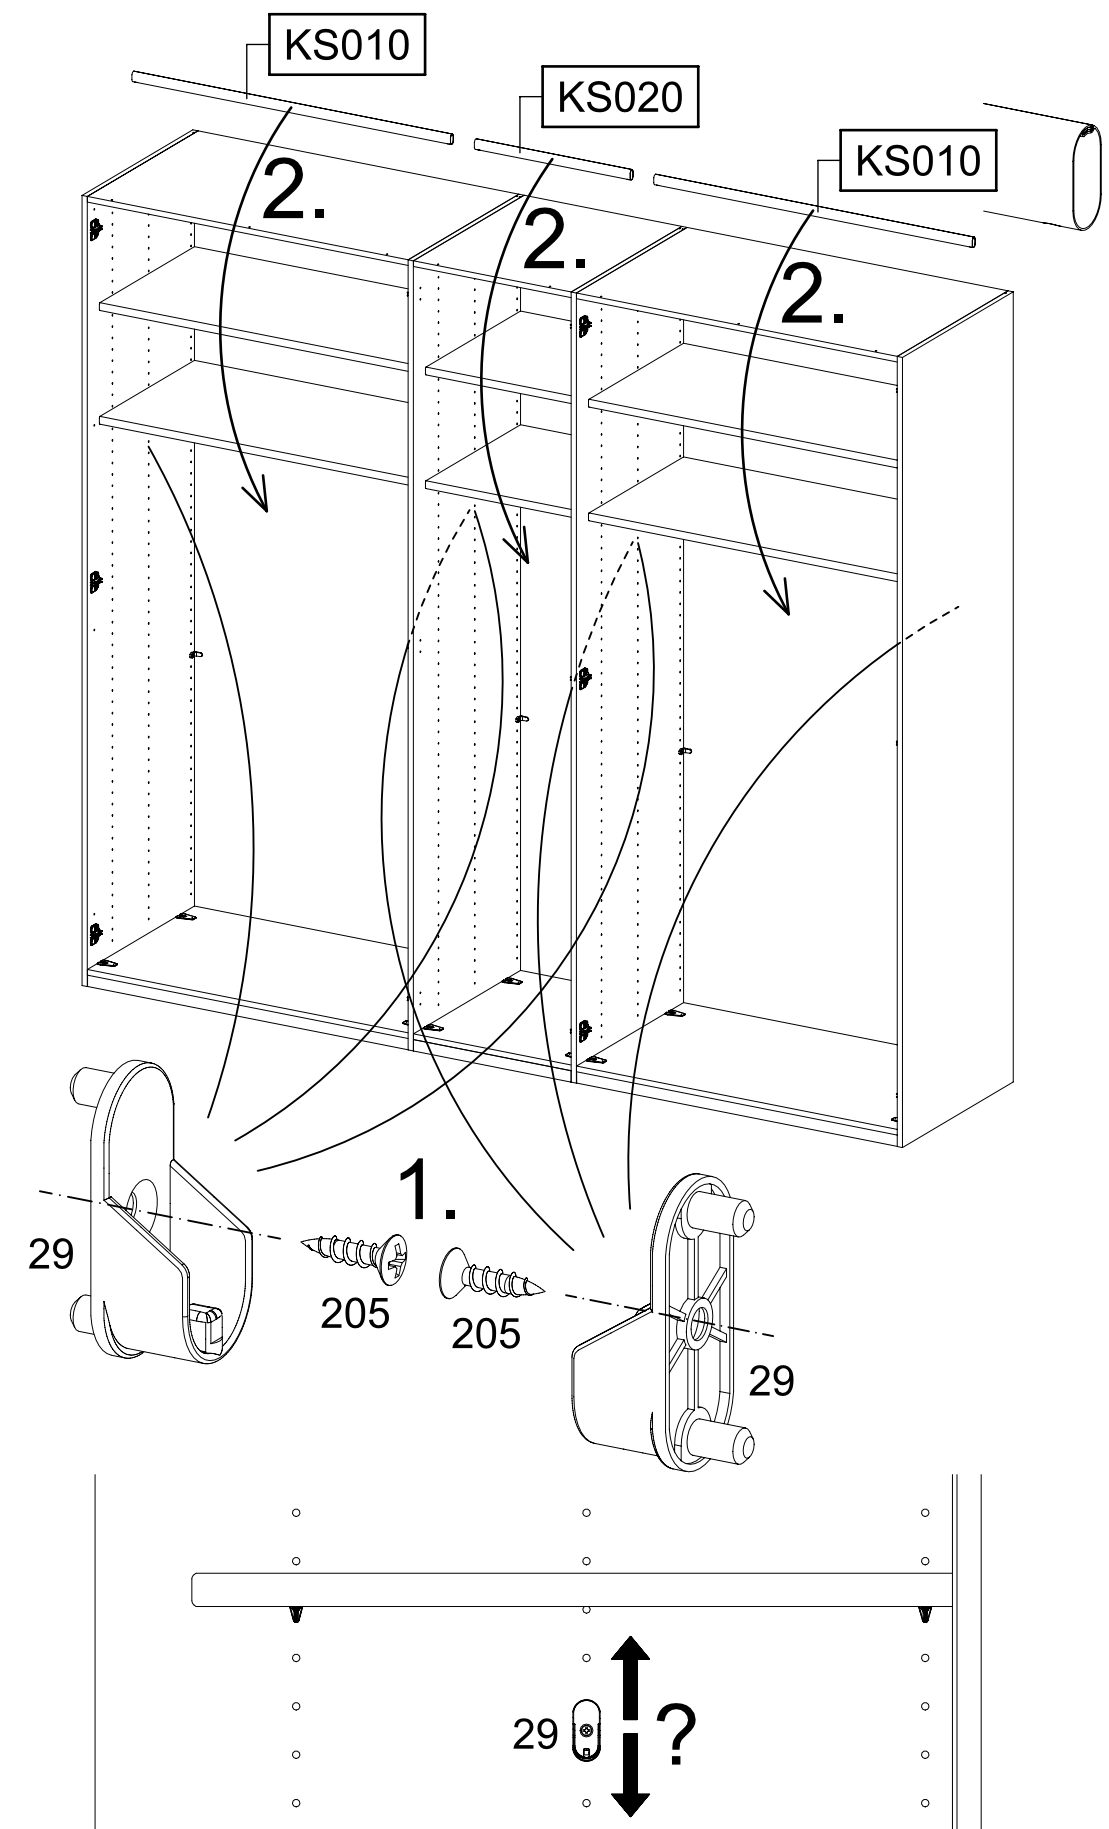




MD105

24

15-20x (1292)

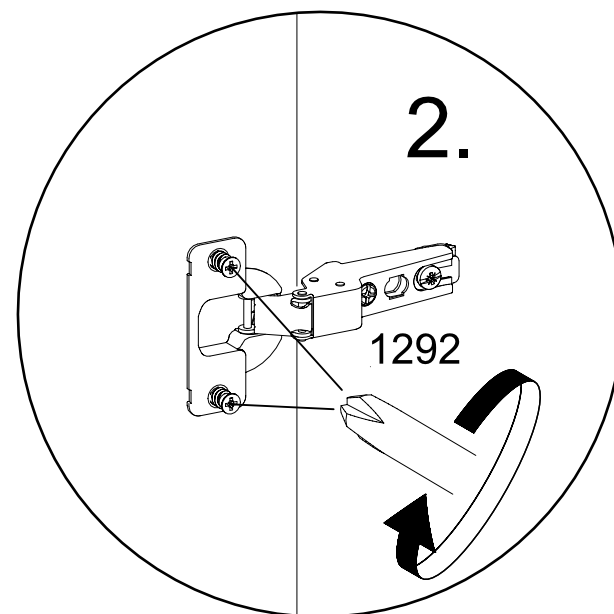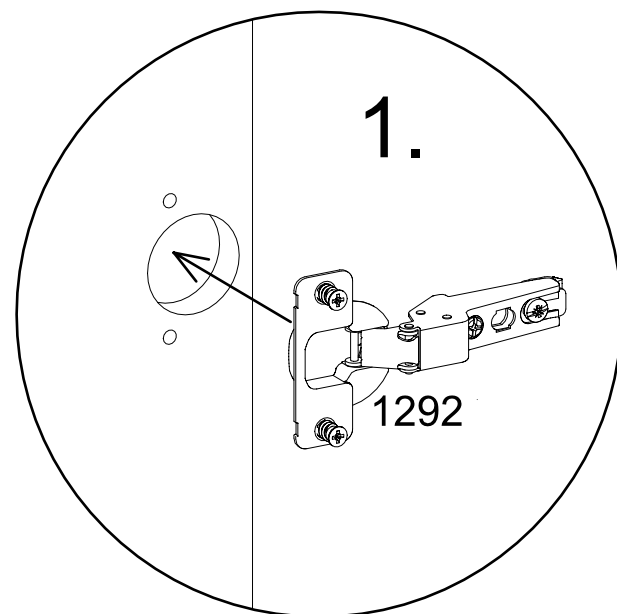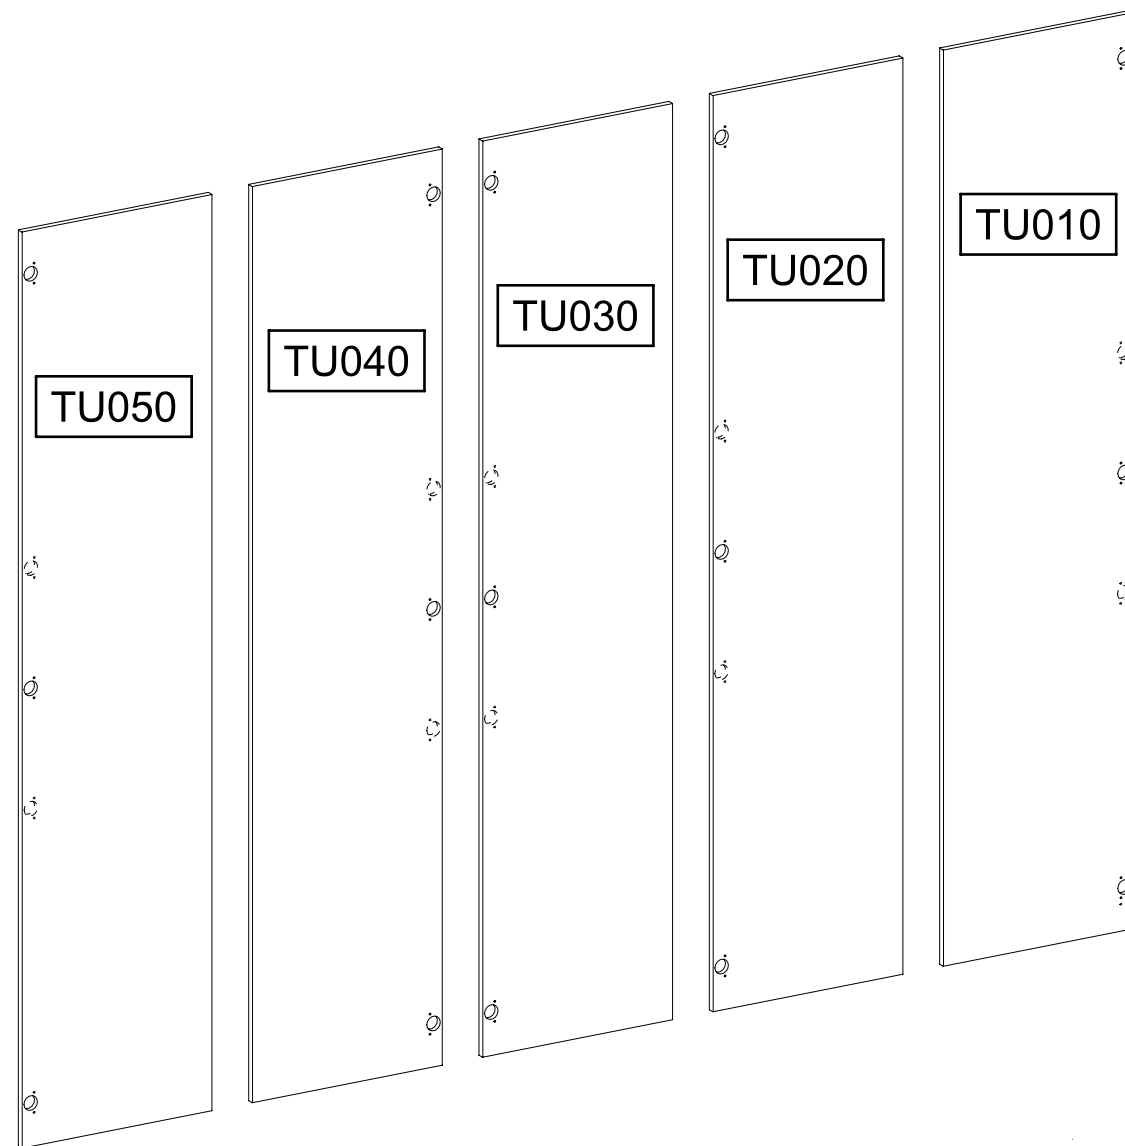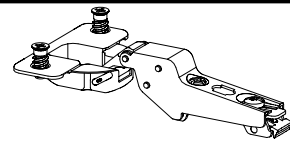

25

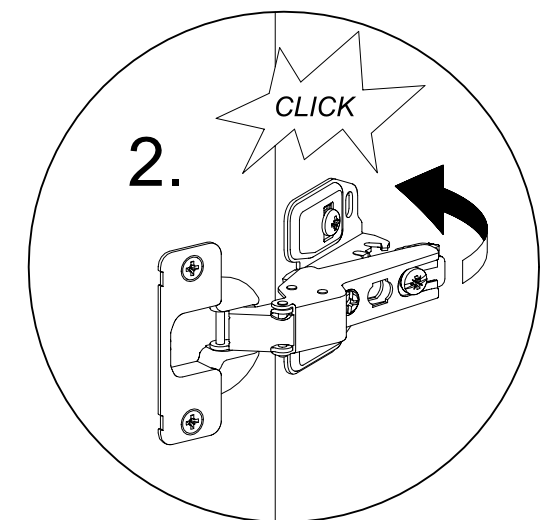
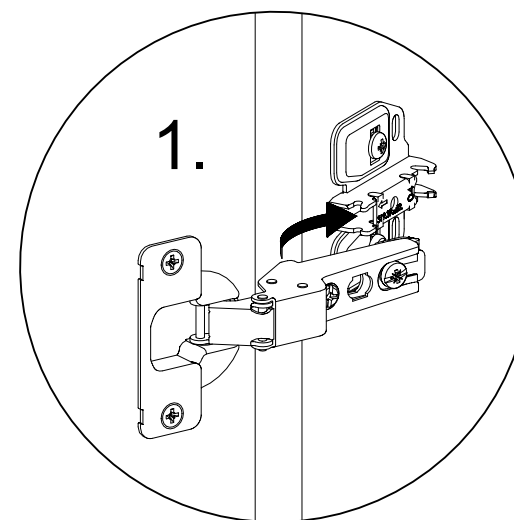
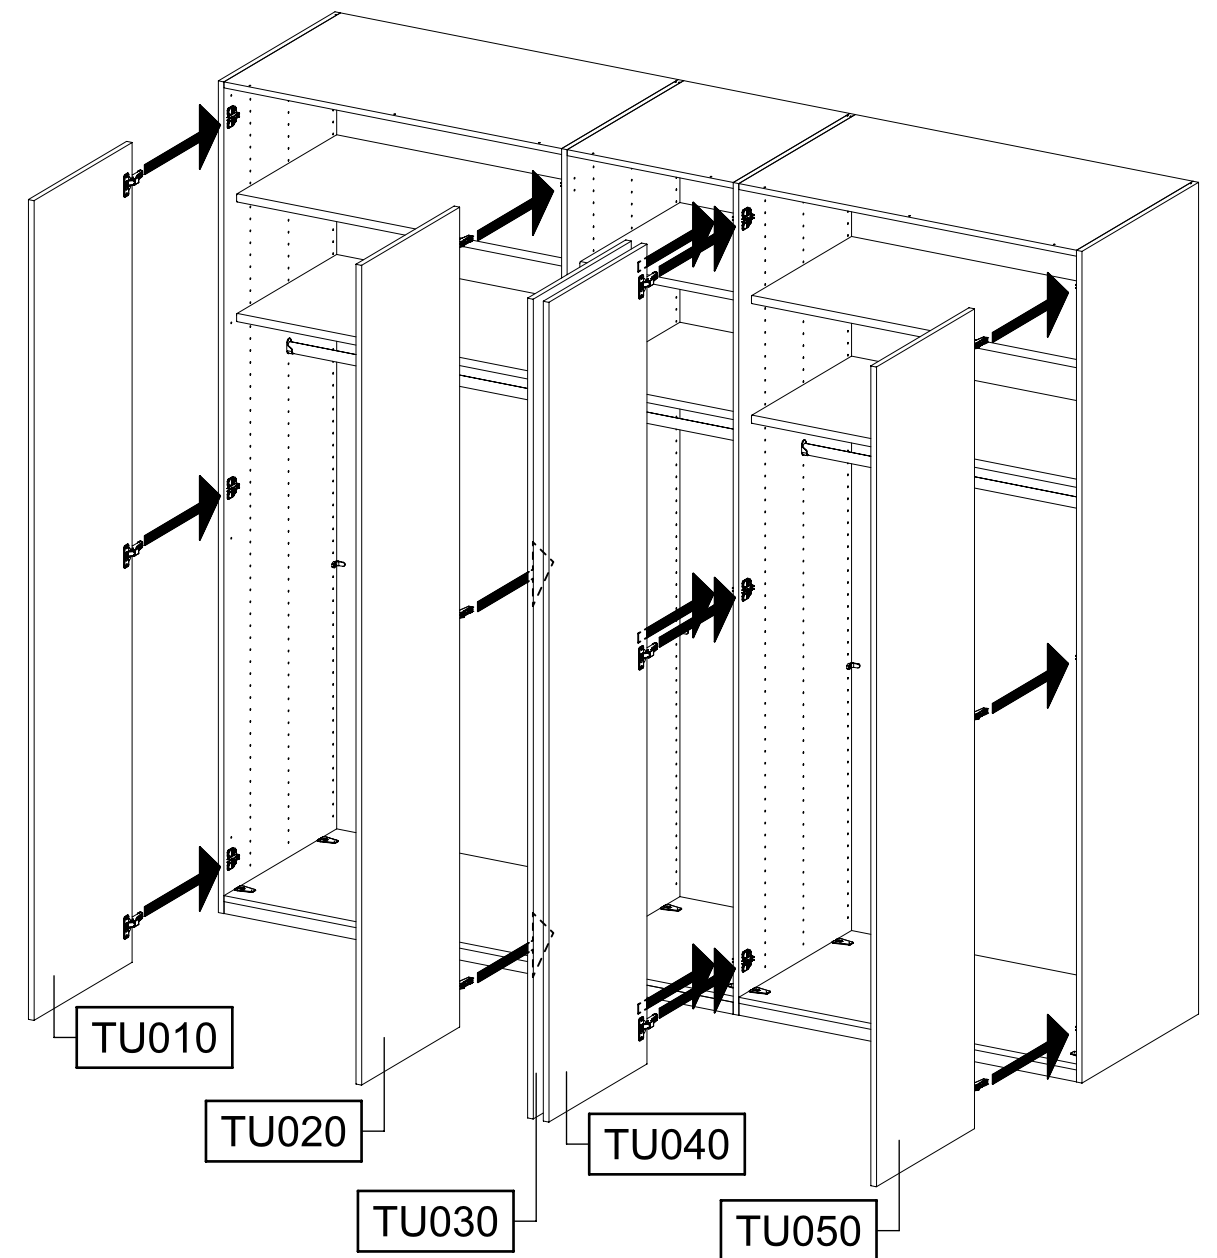


26


0-8x

12








55x16x6,2

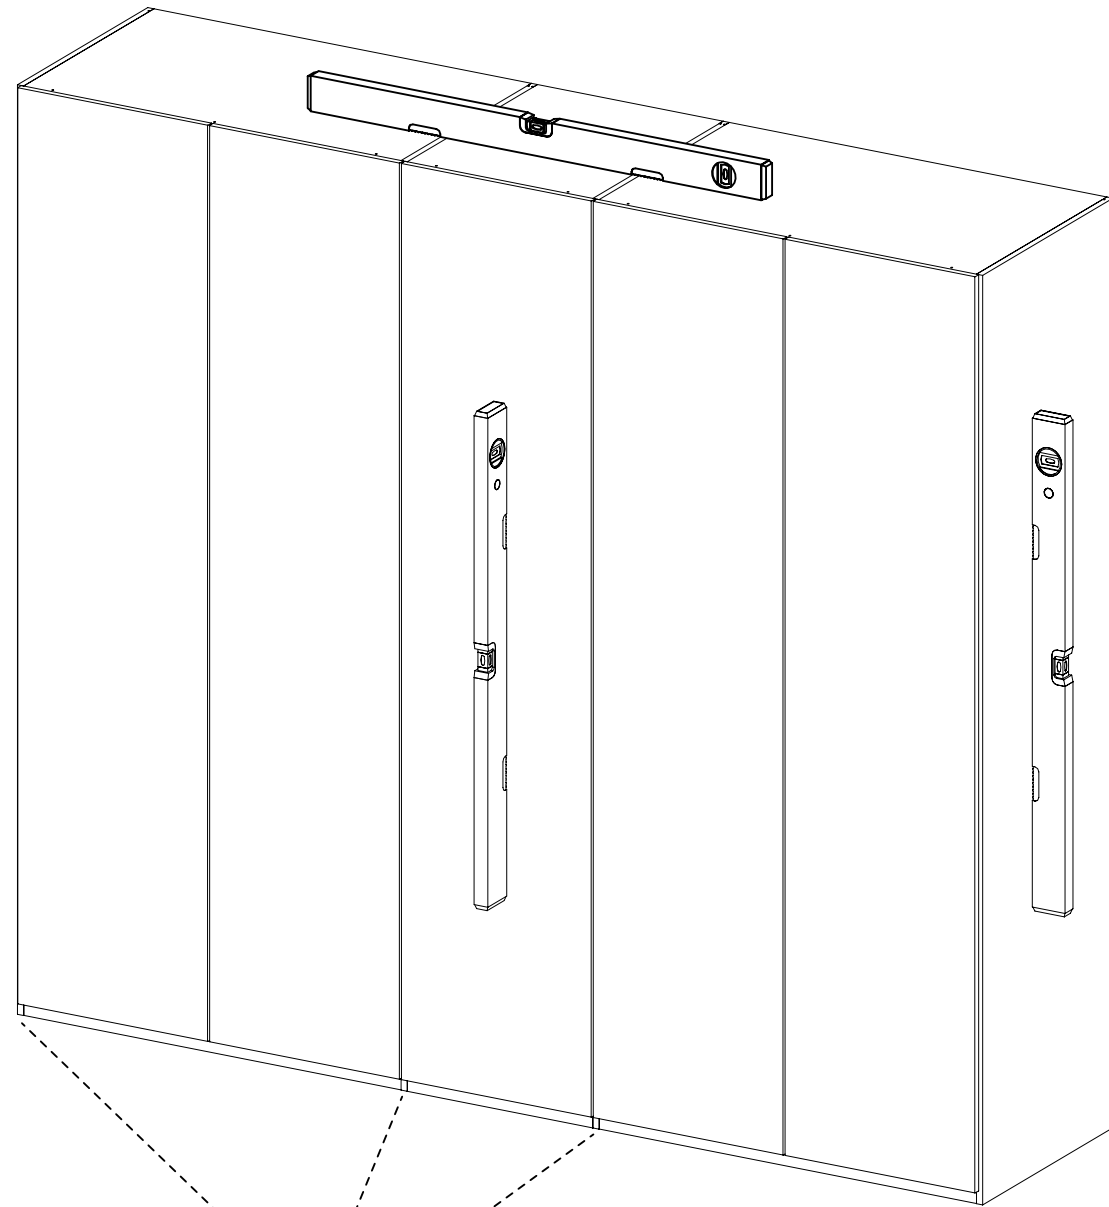


12

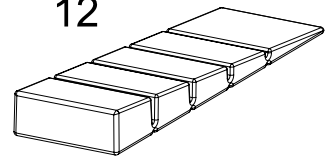

27

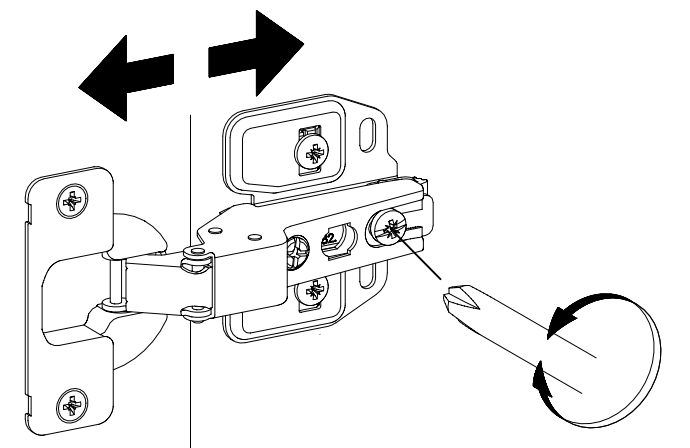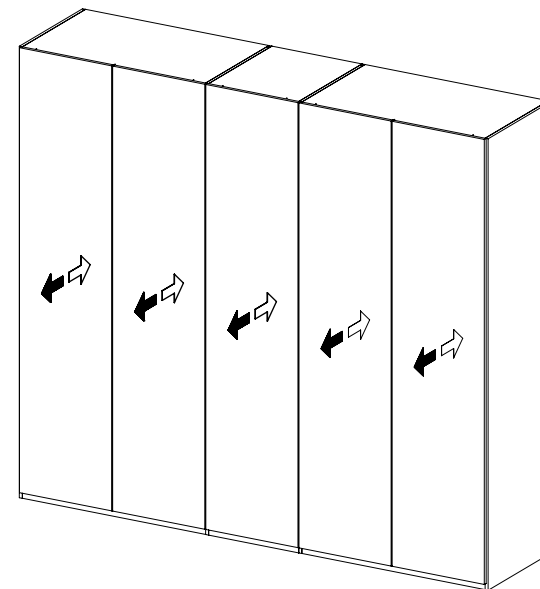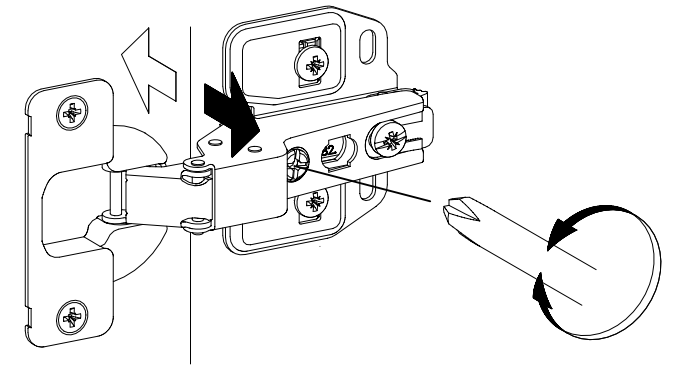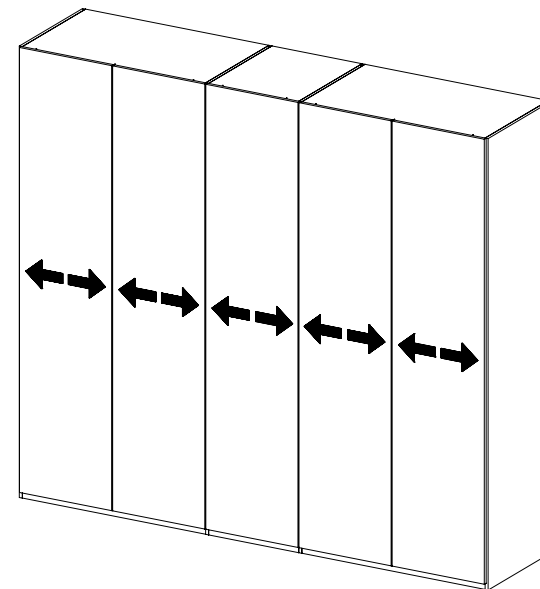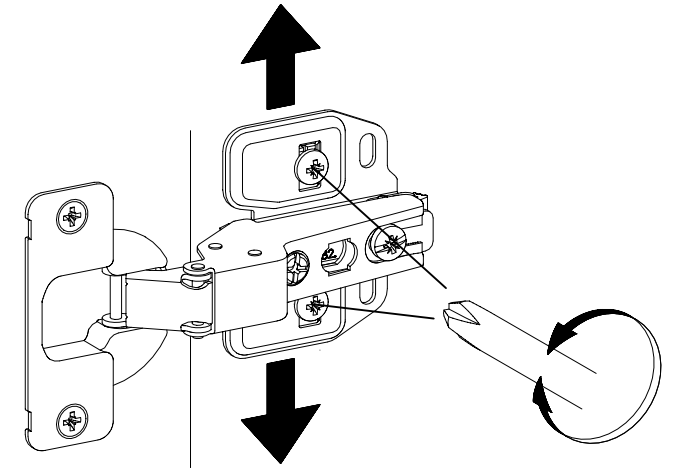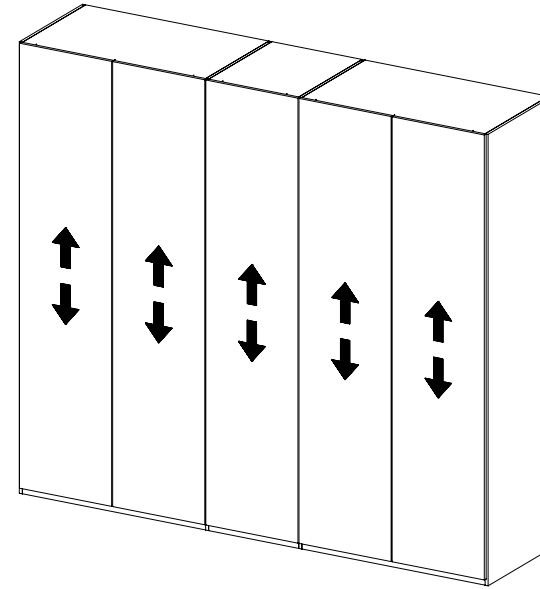


33.


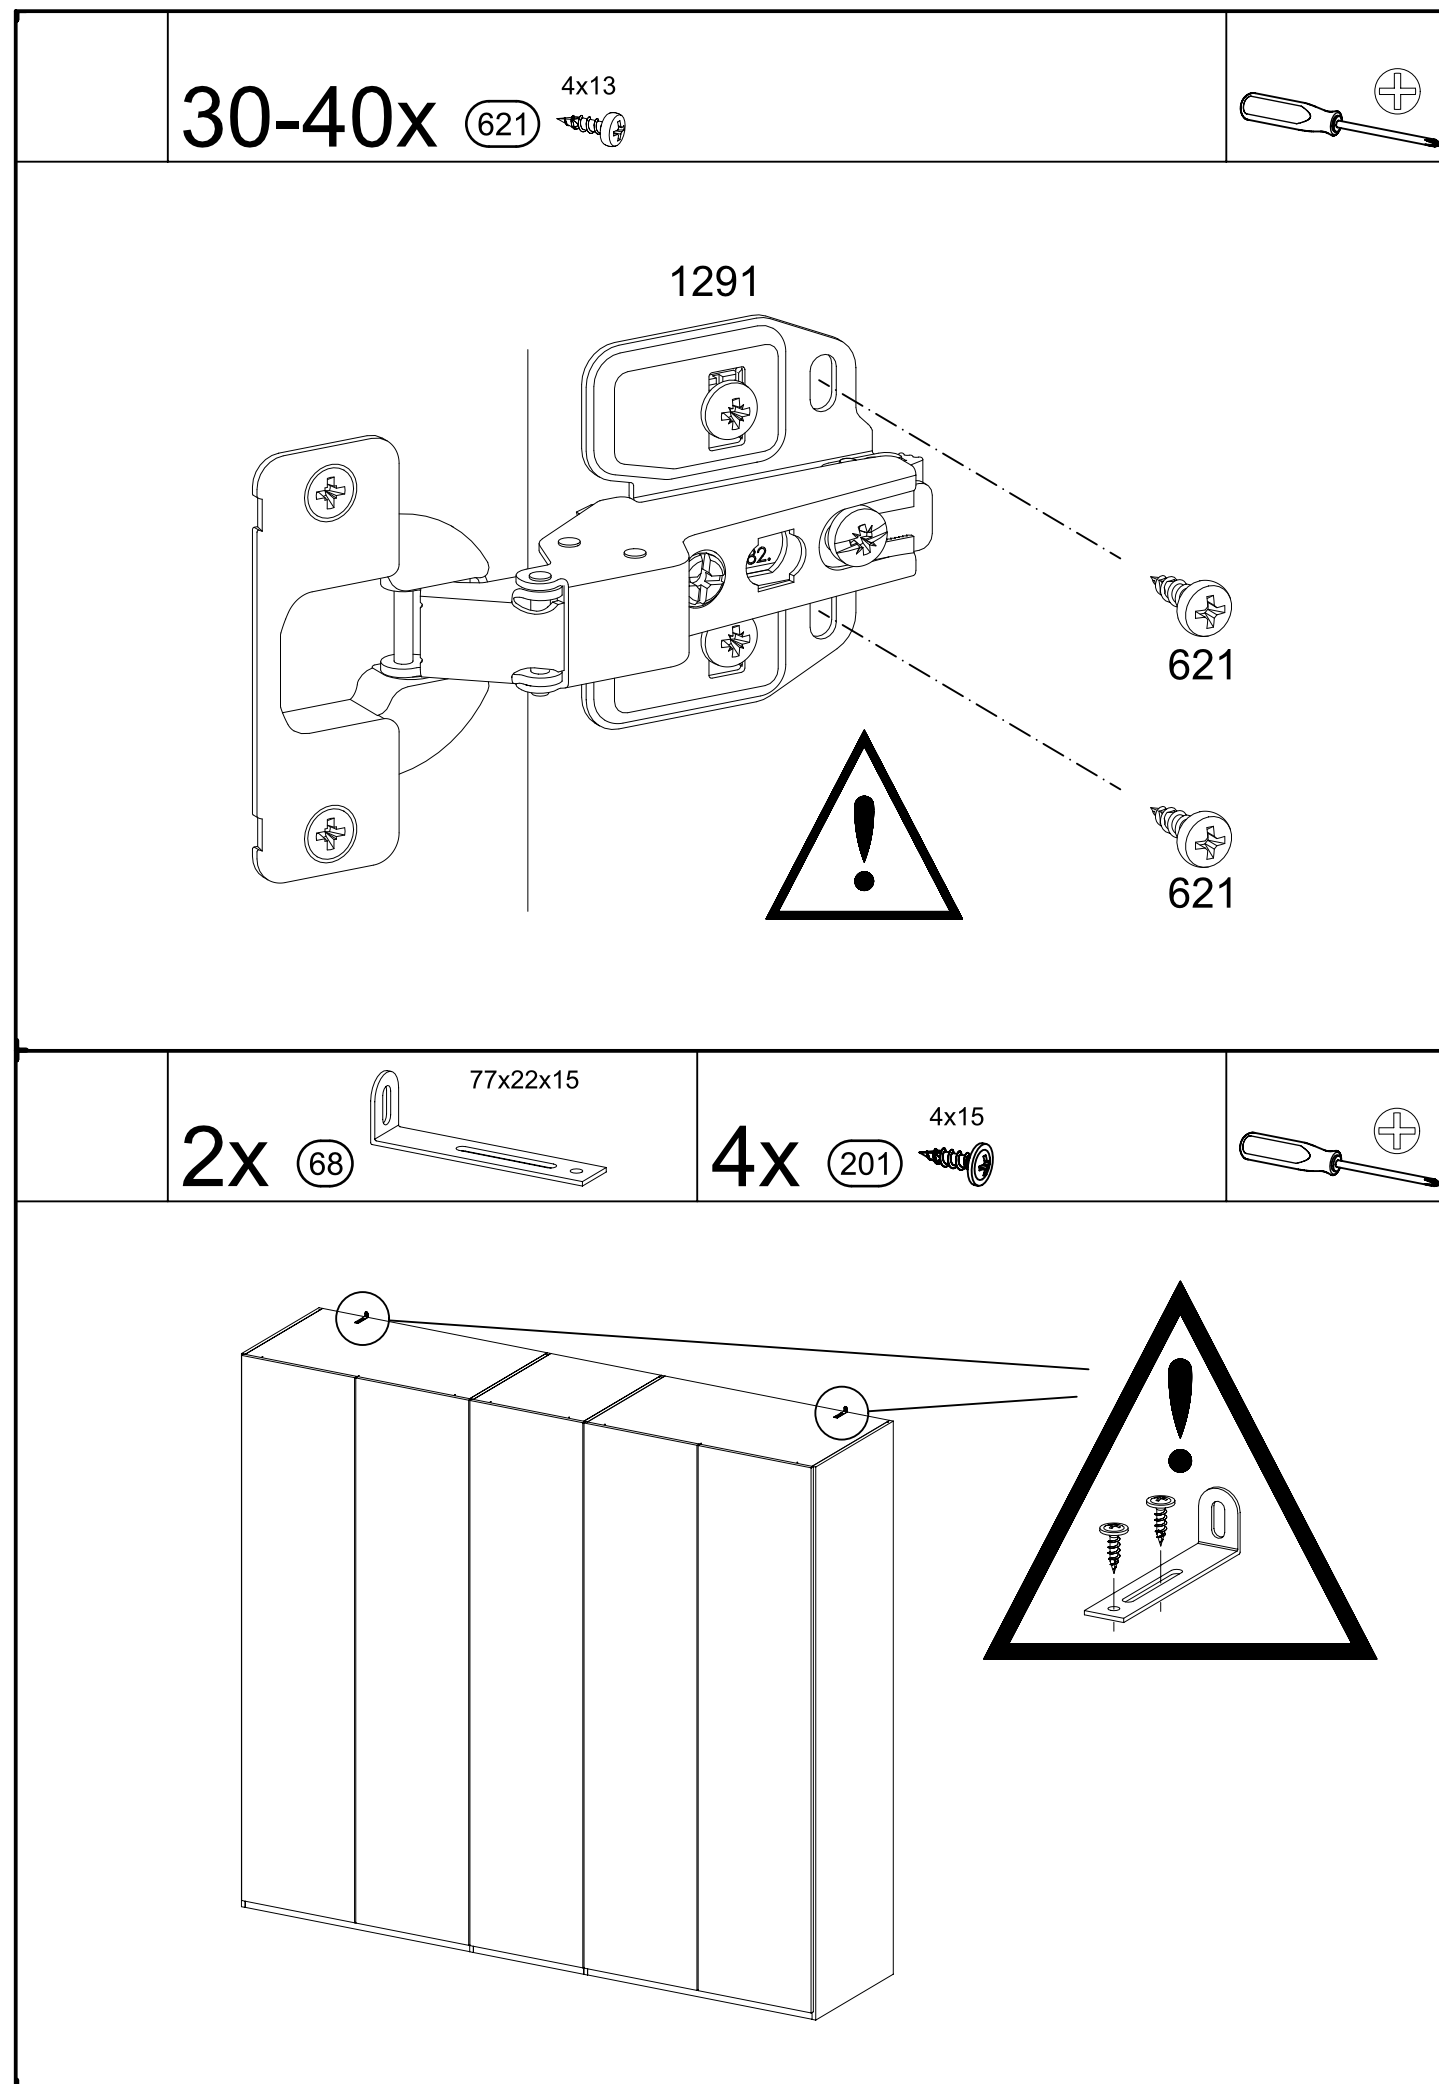


MD105

34.

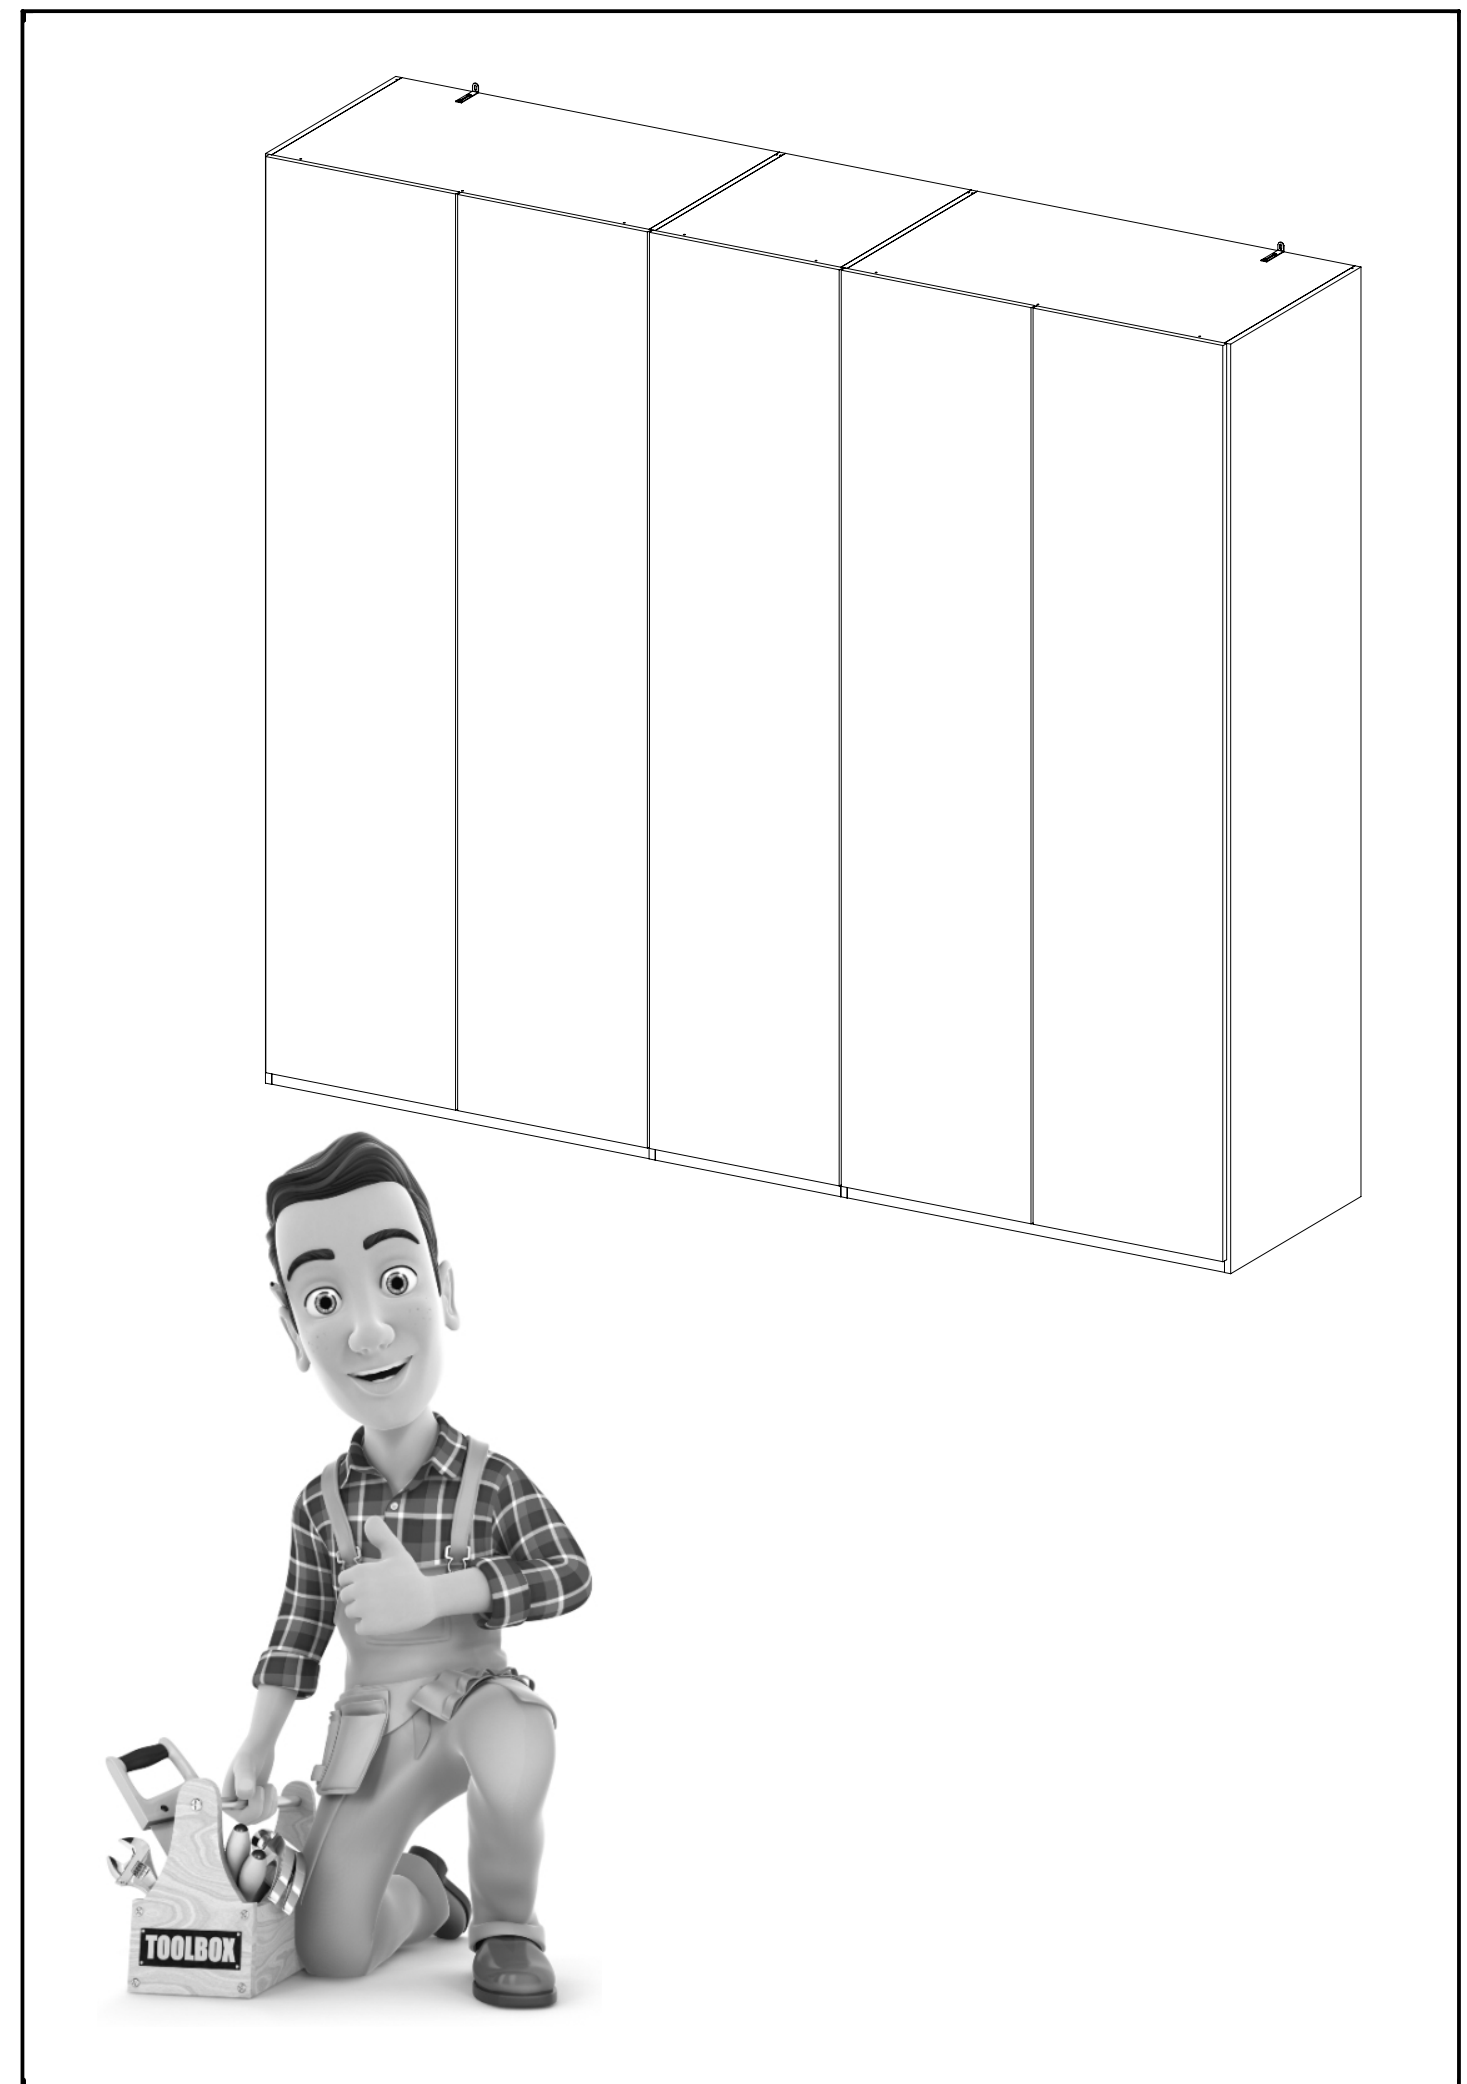



MD105

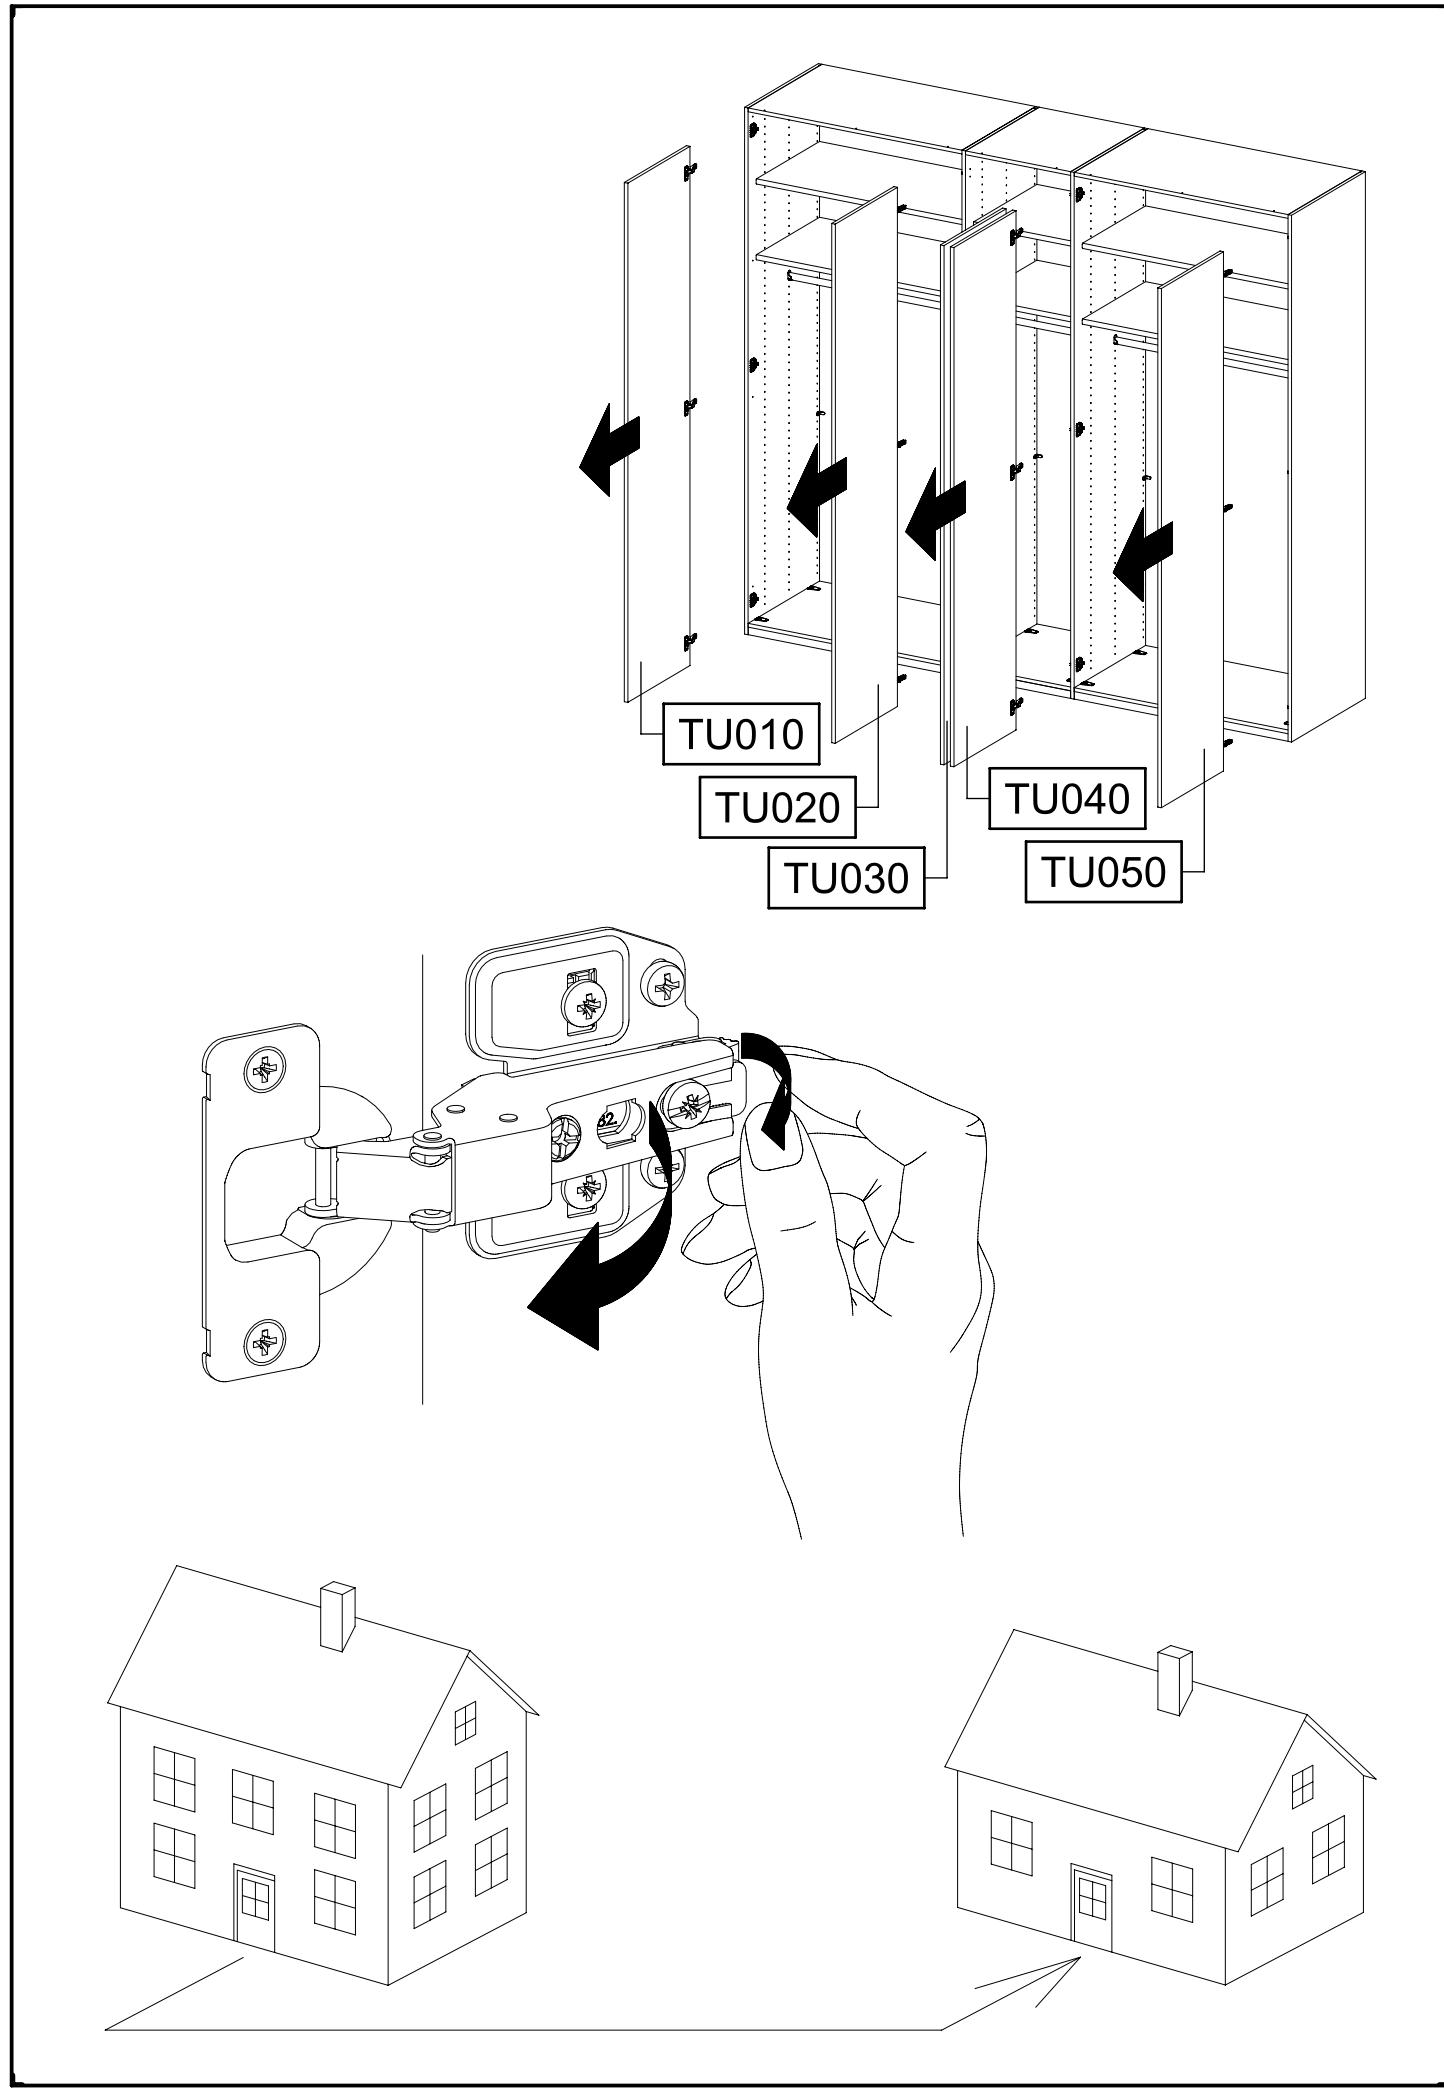

1.

ME190_02


rauch

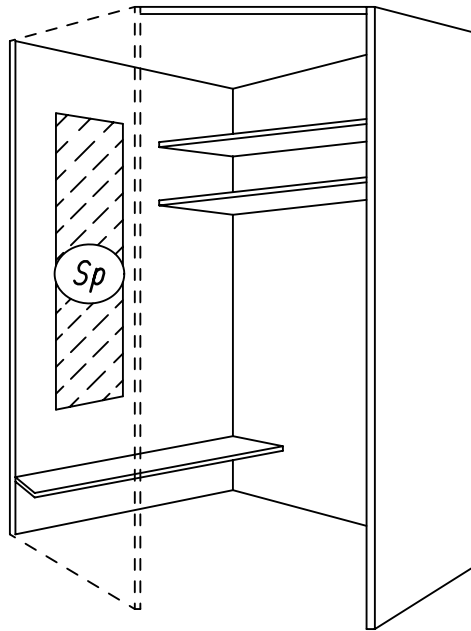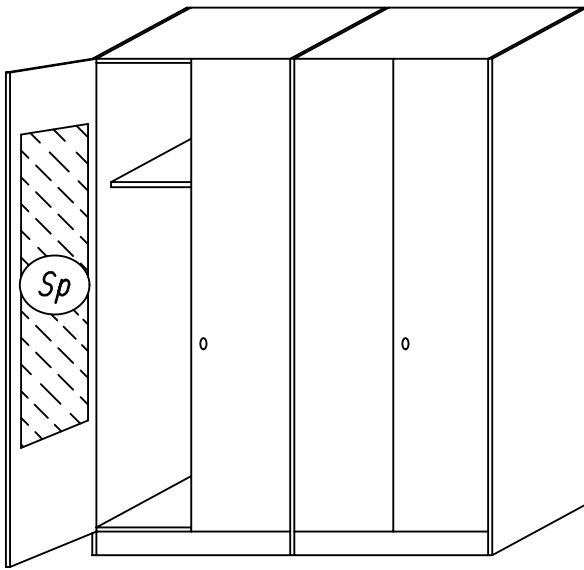

637




492




3x15


1

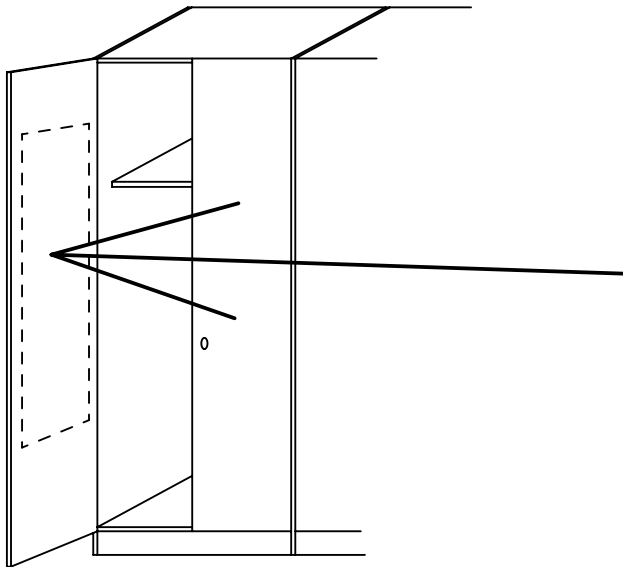


2

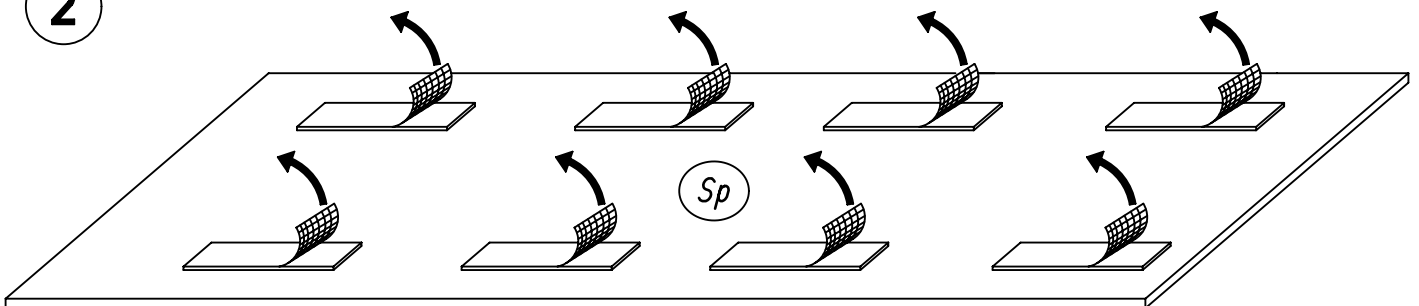

3



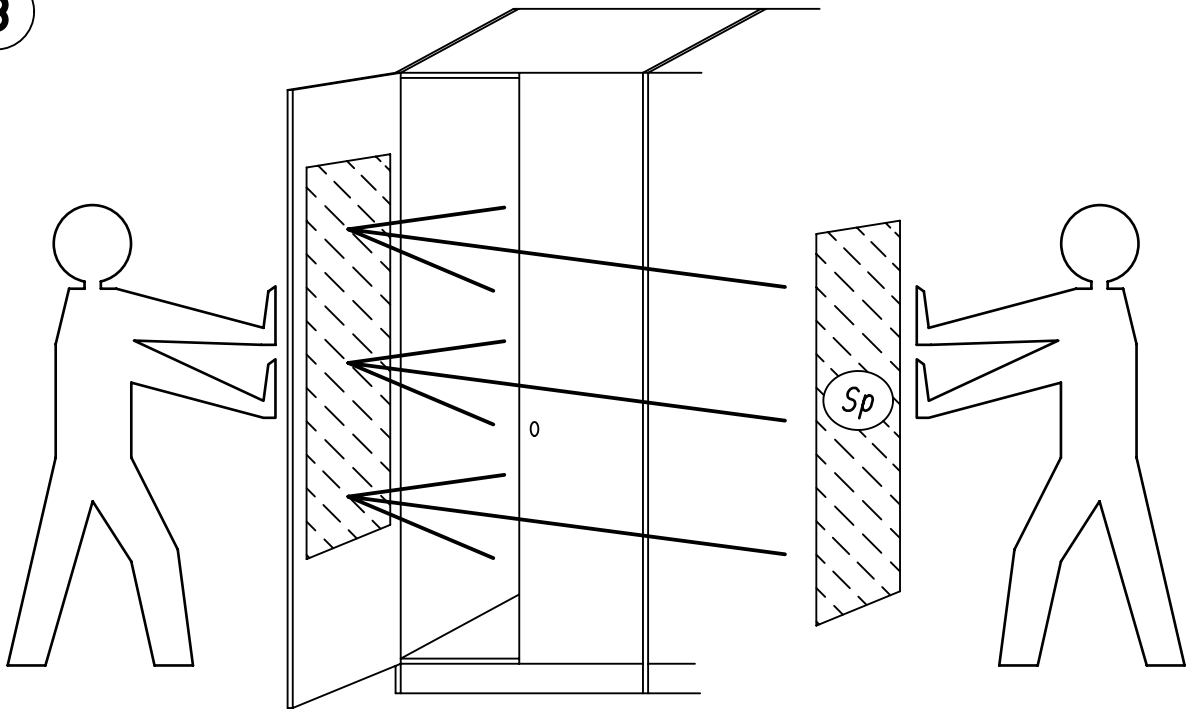


4



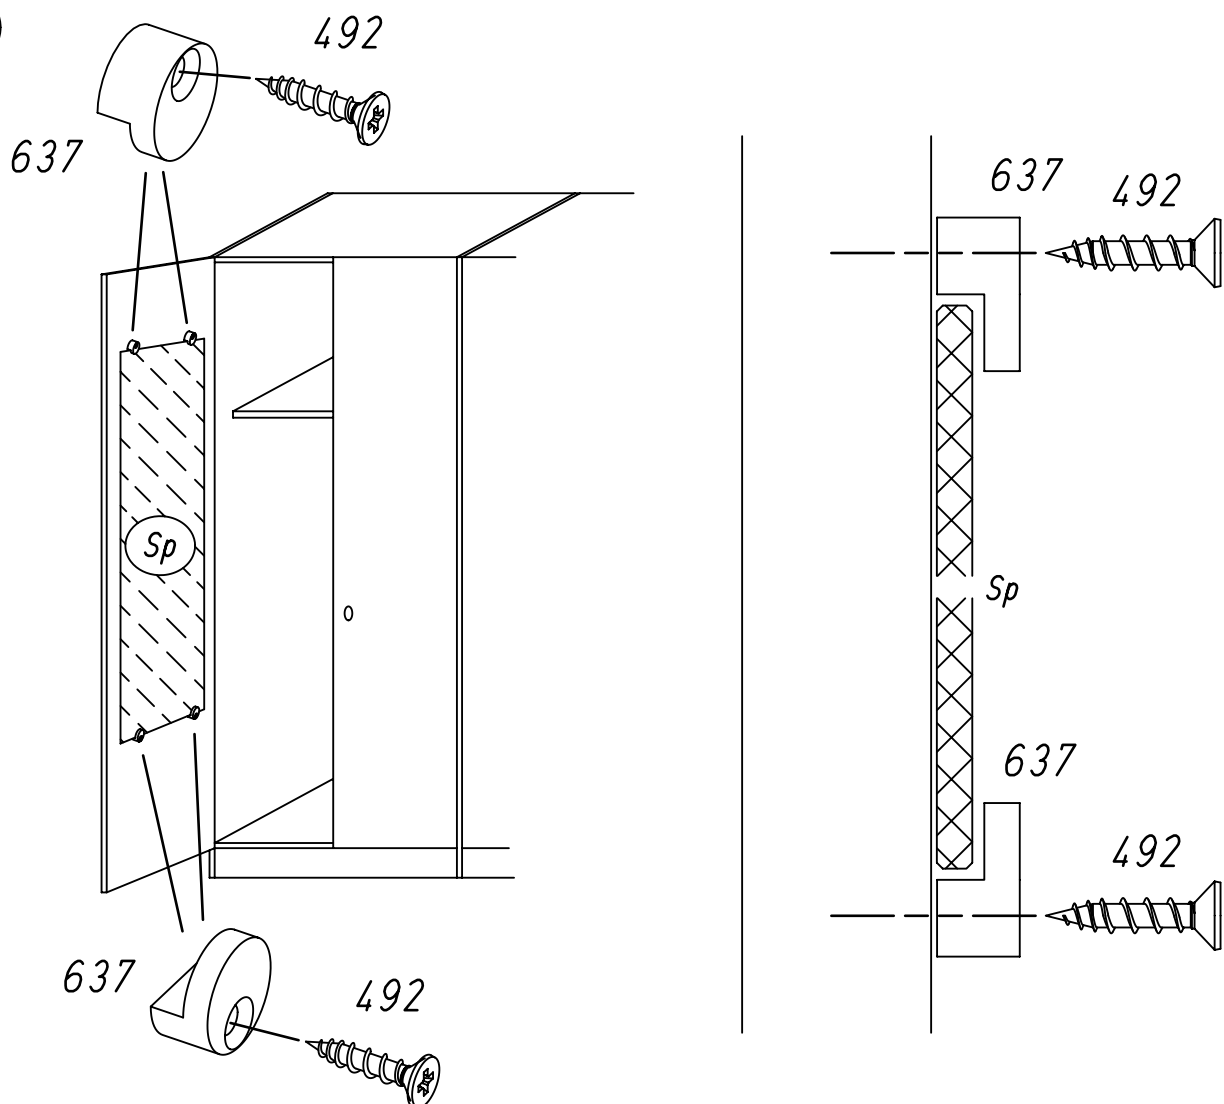


1.
ME 4 4 2

rauch

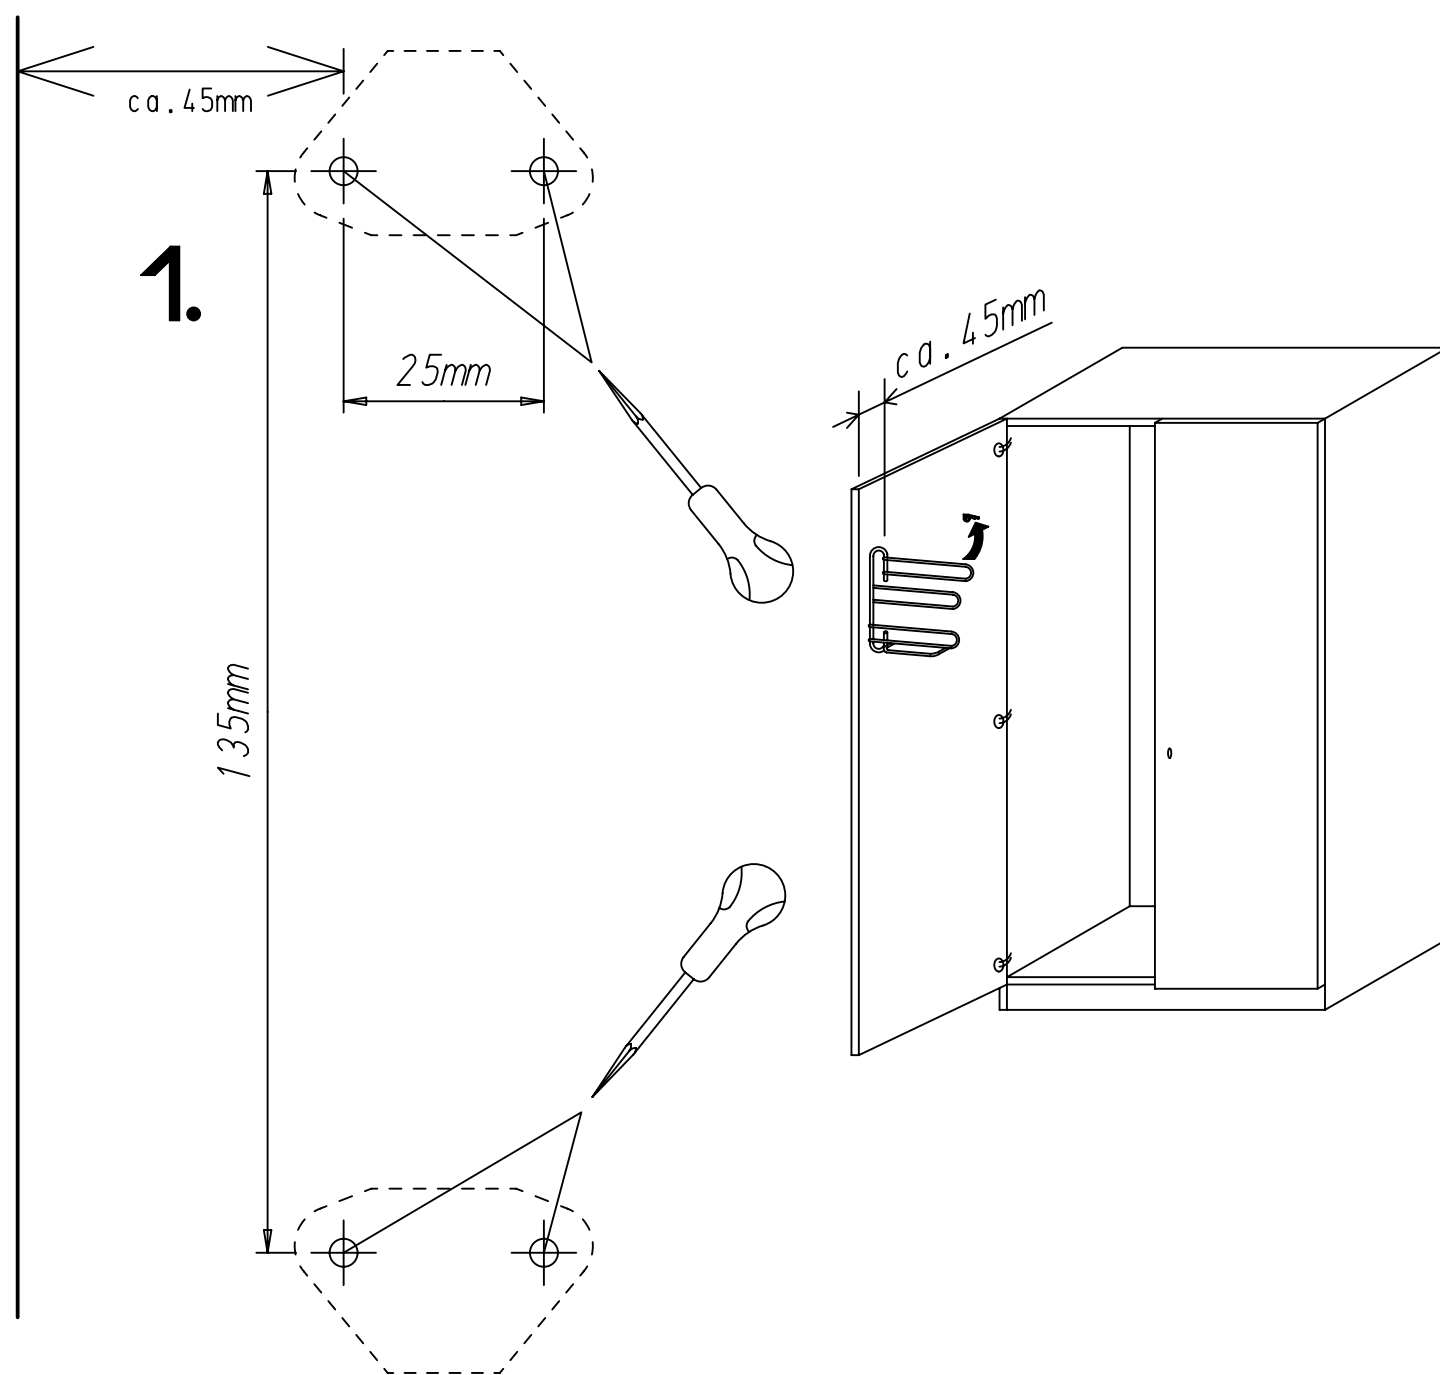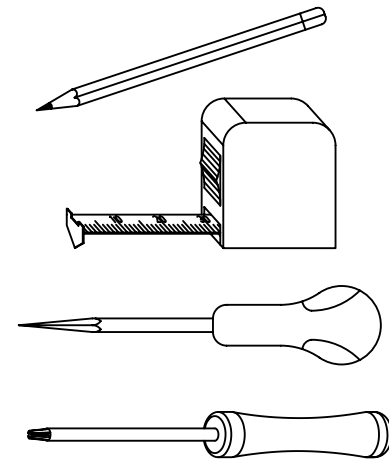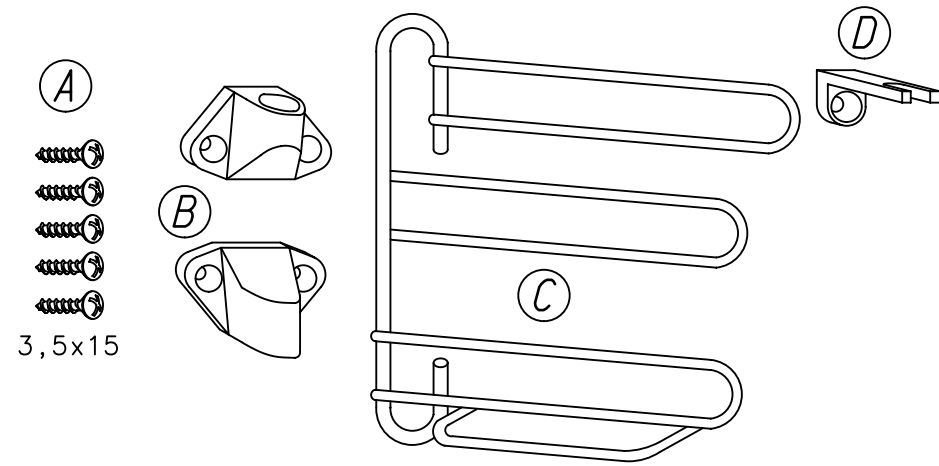

2.

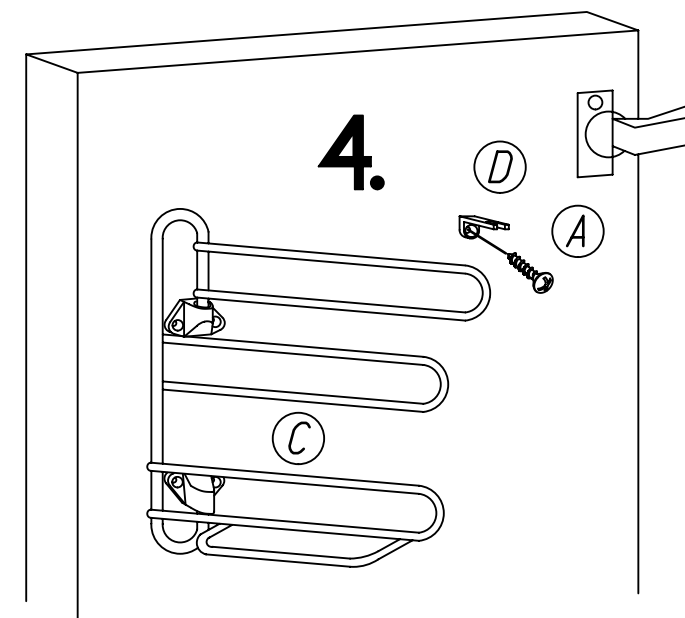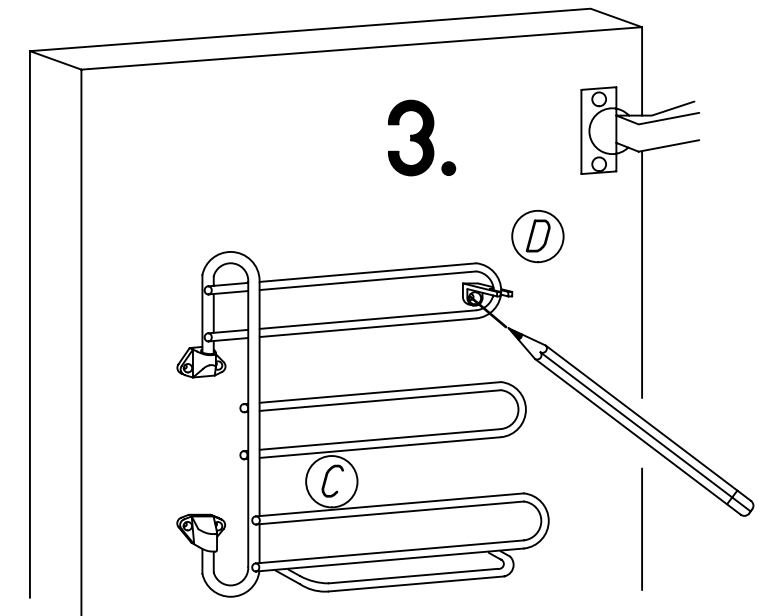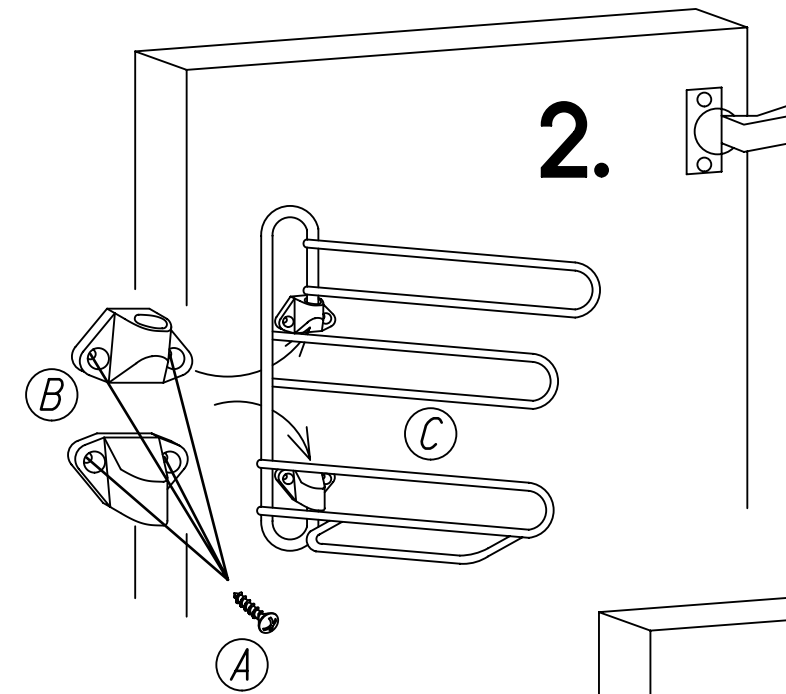

1.

MZ081_01

rauch

Kn

1

1.

Typ I

Typ II

2.



4x

70mm


70mm

2.



2

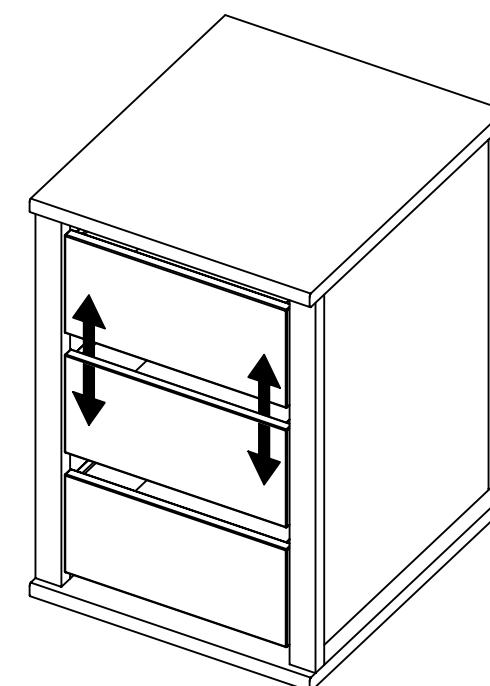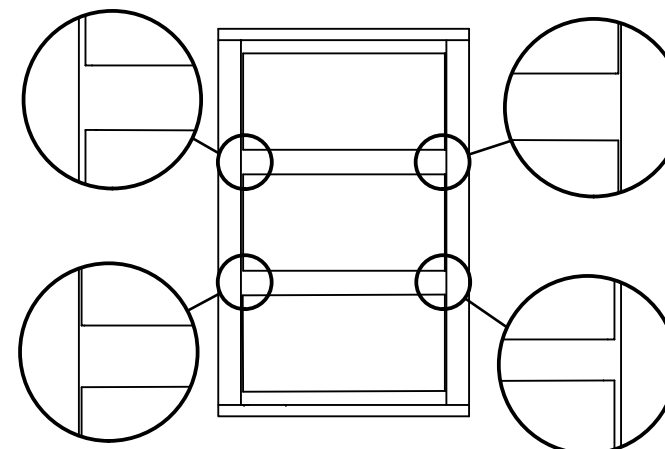

1.

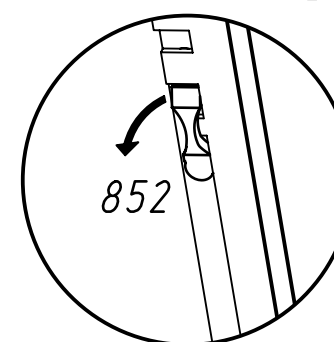


852

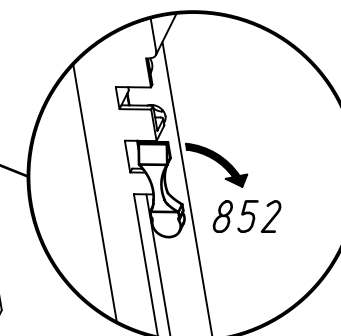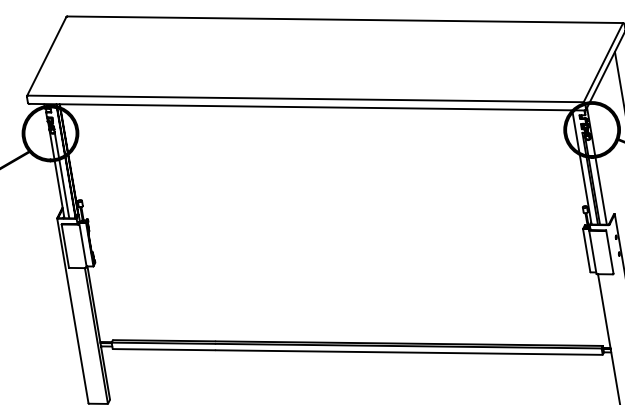


852


2.

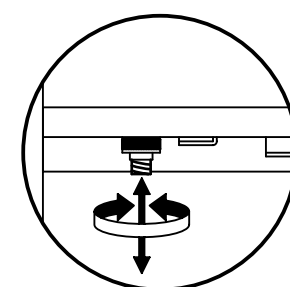



Sk

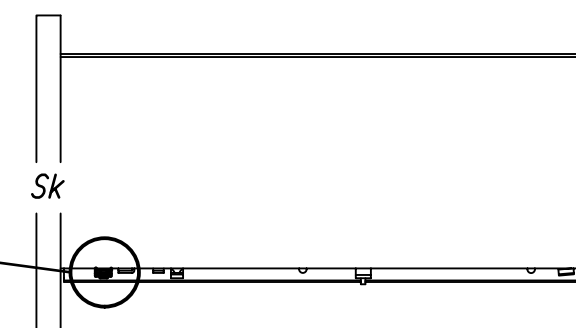

3.

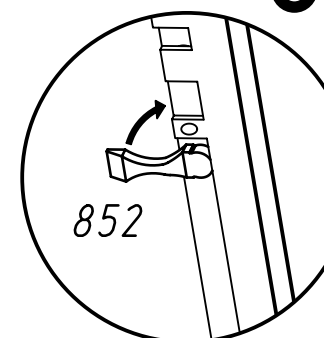

852

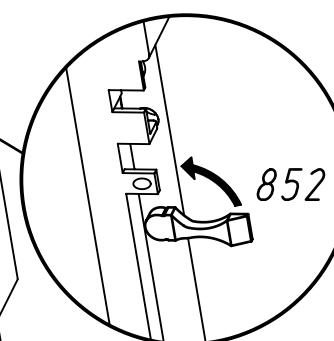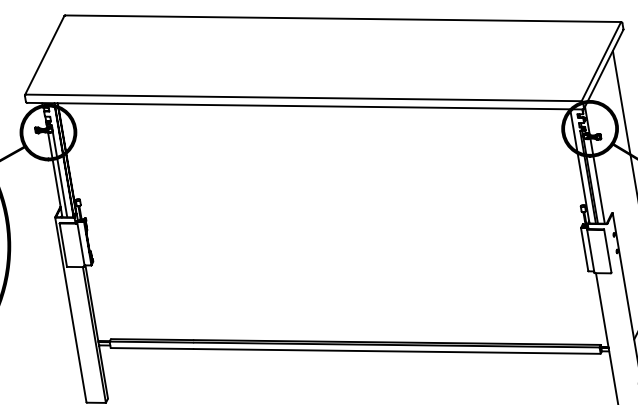


852



Montageanleitung / Mounting Instruction – Nexis für Nexis Bänder / Nexis for Nexis hinges

Zuerst Türeinrichtungen vornehmen / Make door adjustments first



1

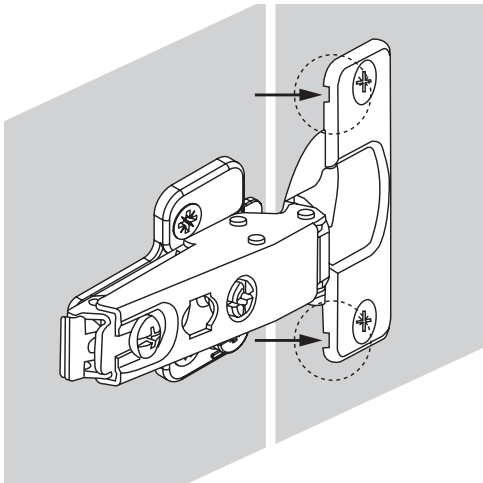



2

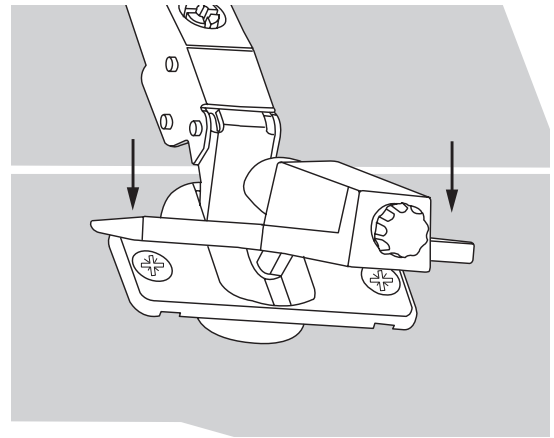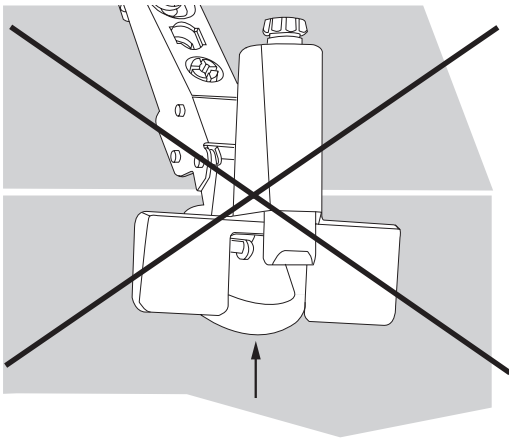

3

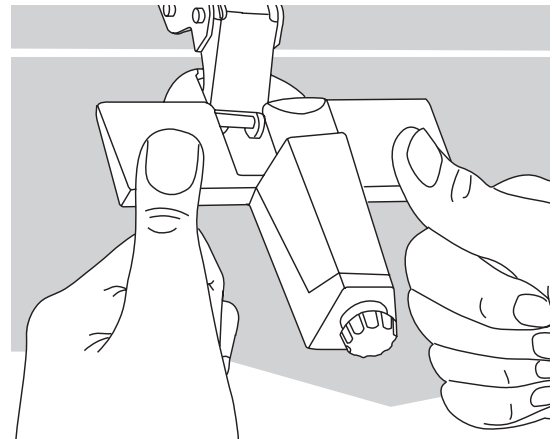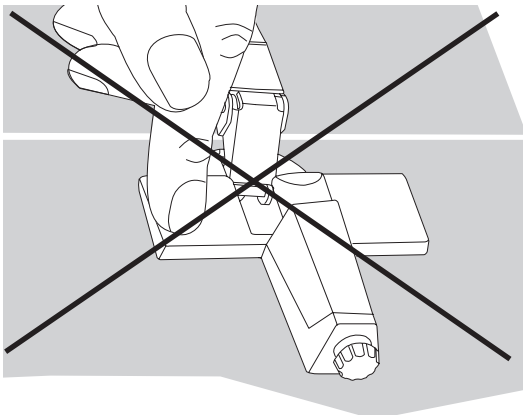

4

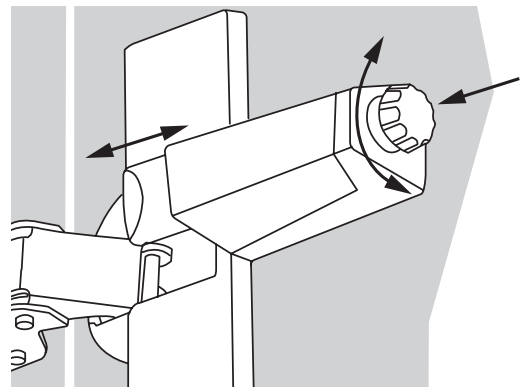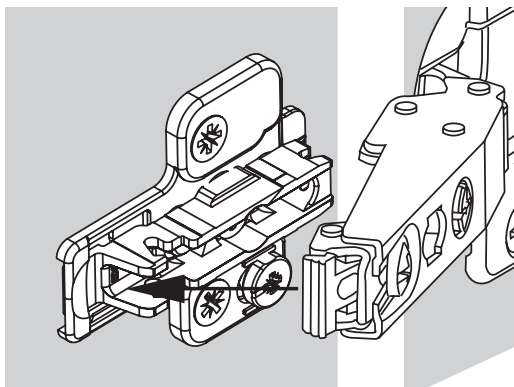

Demontage / Dismounting

