
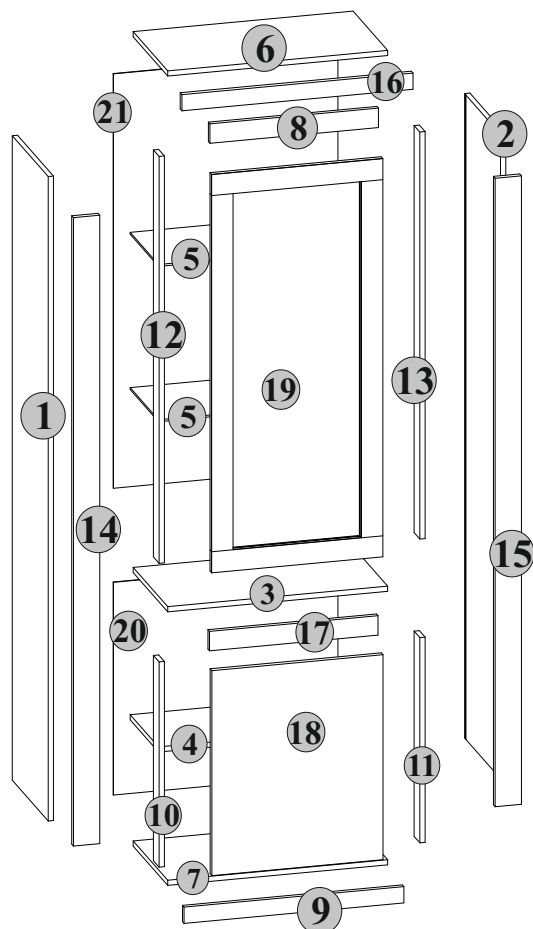
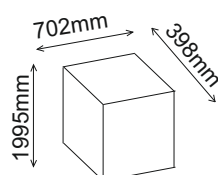
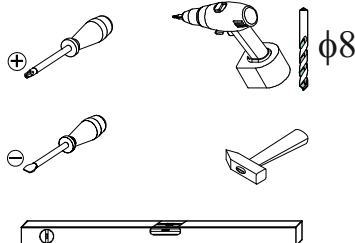
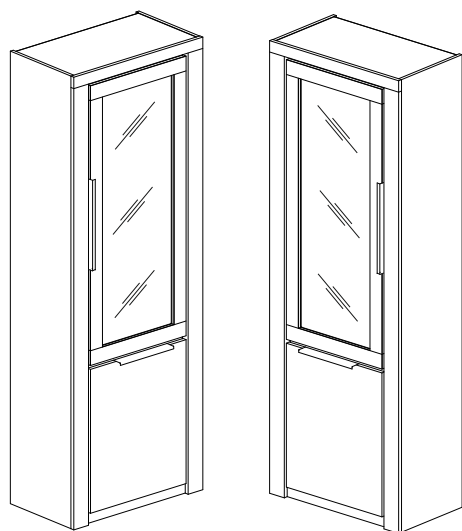


“2551”



versionsnummer: 24.02.2019

Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.


R **L**




B5

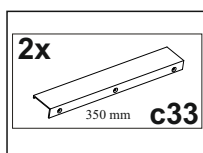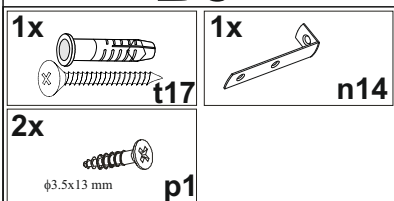


B1

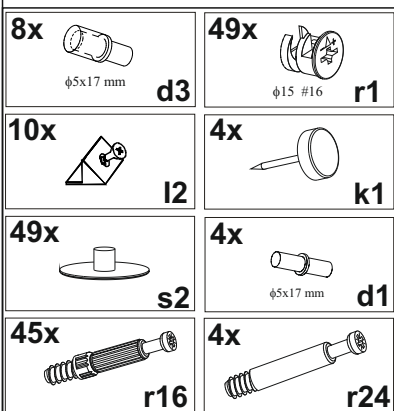


B2

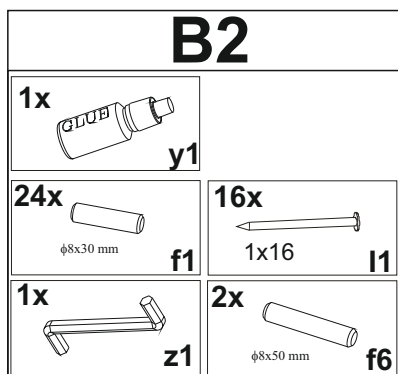



B3

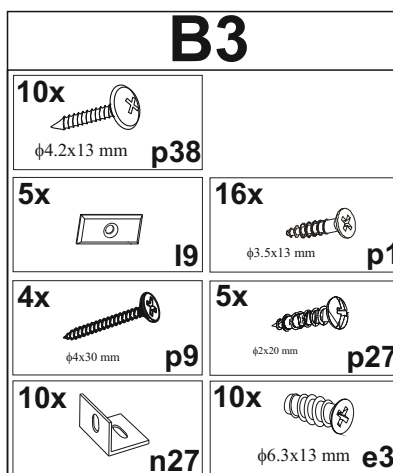

B4

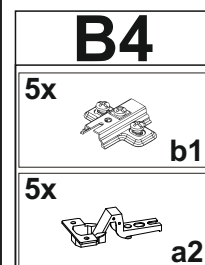




I

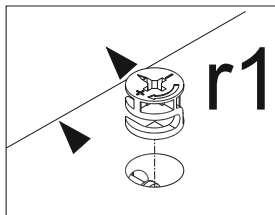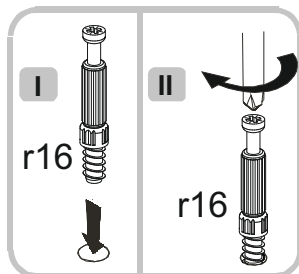


4x
 $\phi 8 \times 30$ mm
f1

12x
r16

16x
 $\phi 15 \#12.5$
r1


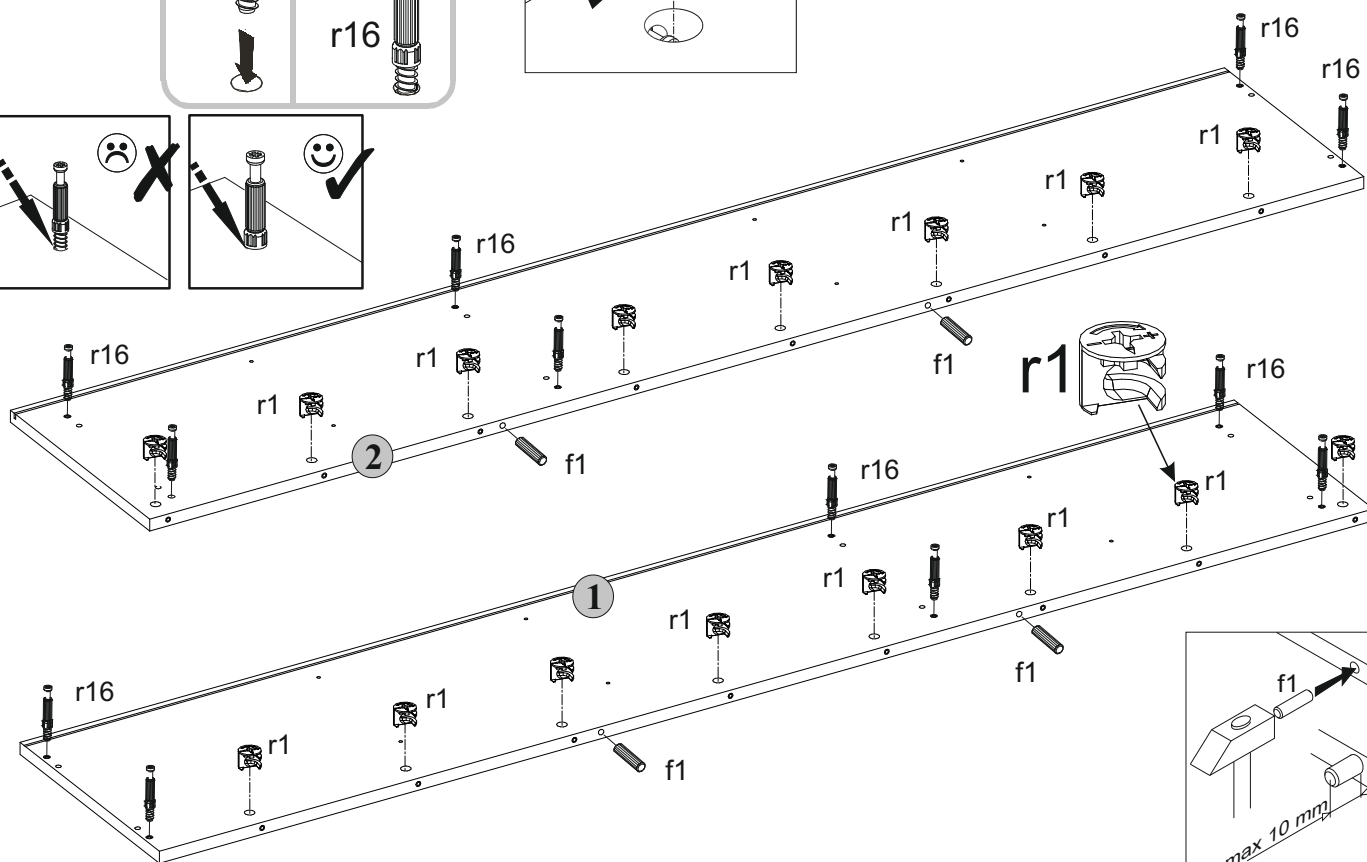
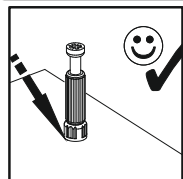
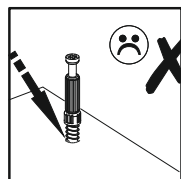


2

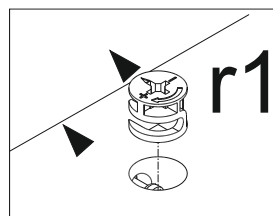



7x
 $\phi 15 \#12.5$
r1

4x
 $\phi 8 \times 30$ mm
f1

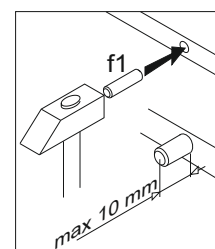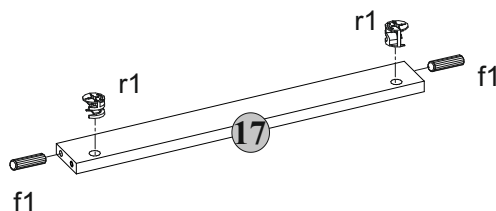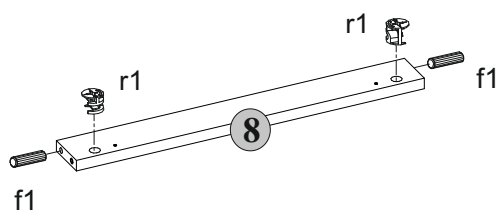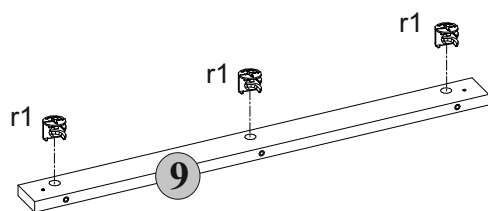


2

3

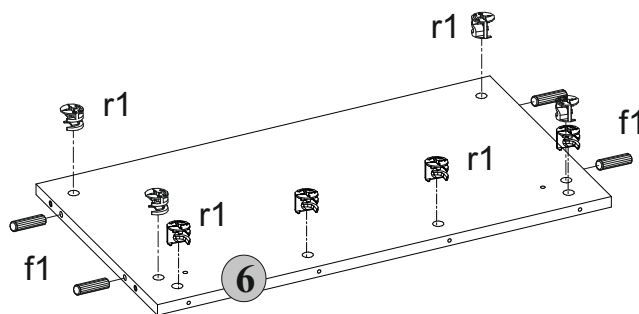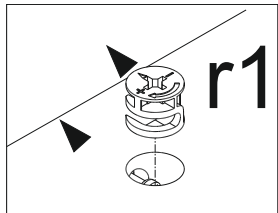


16x










 r1
 φ15 #12.5

5x

 r16

12x










 f1
 φ8x30 mm

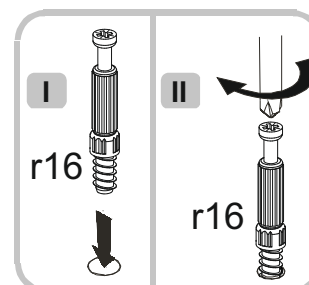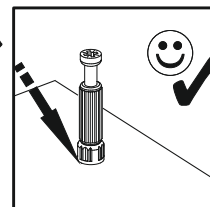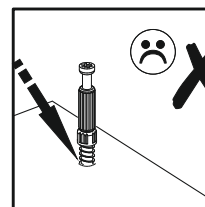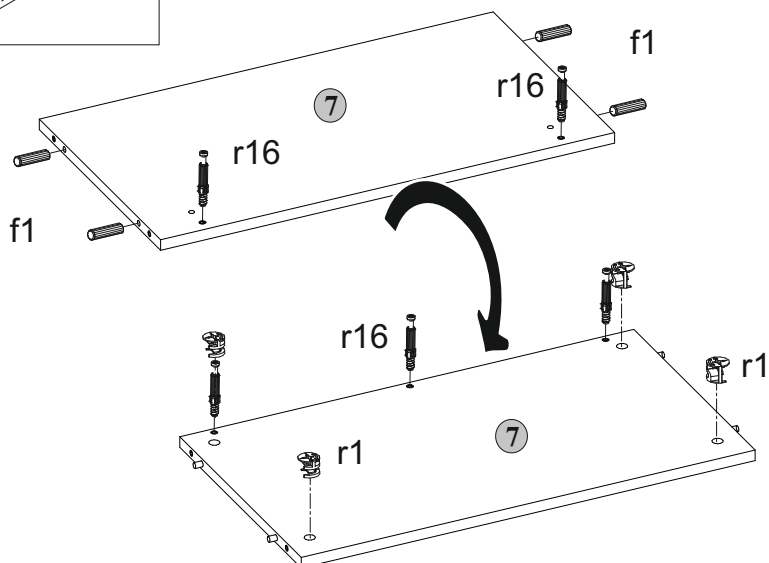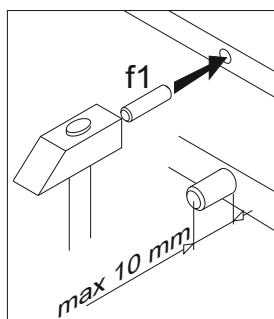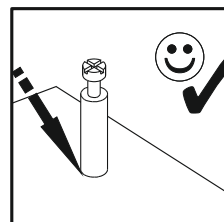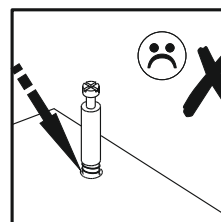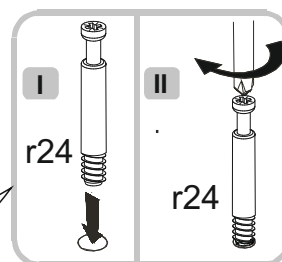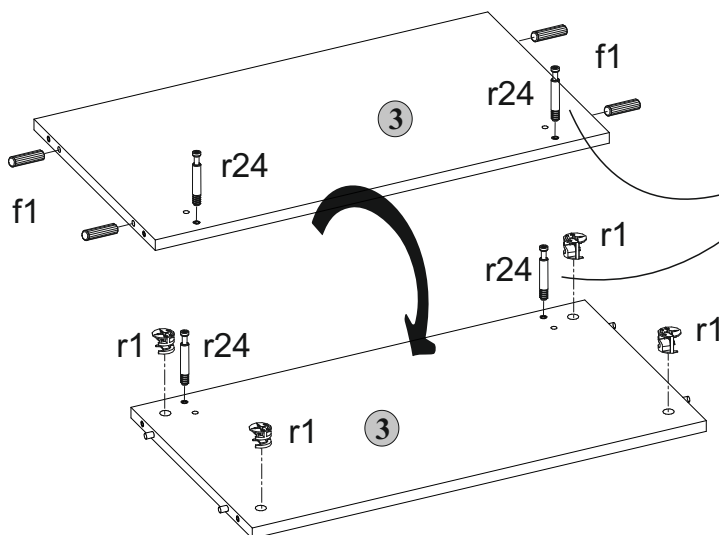4x

 r24









3

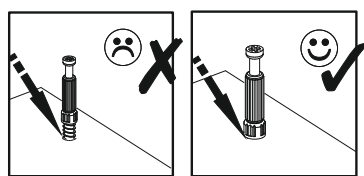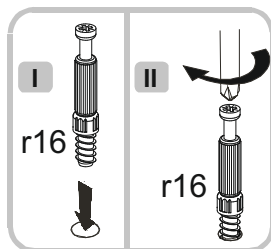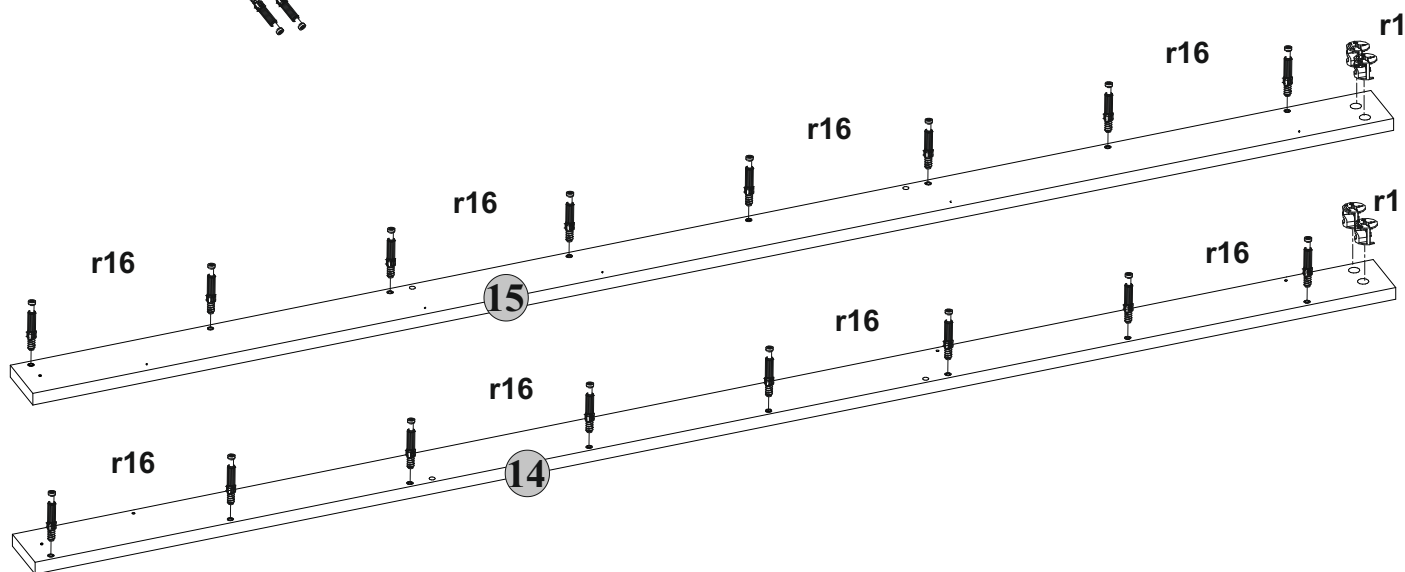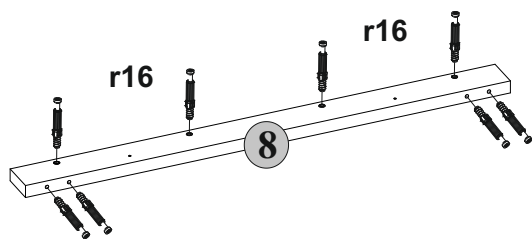4






5

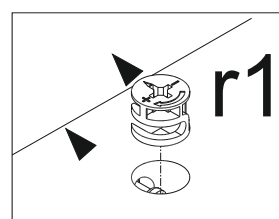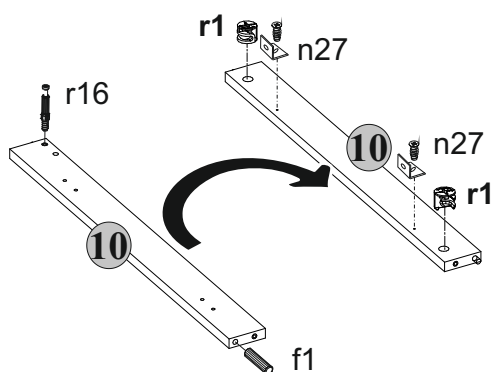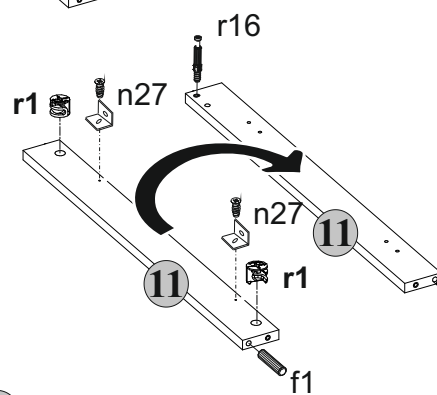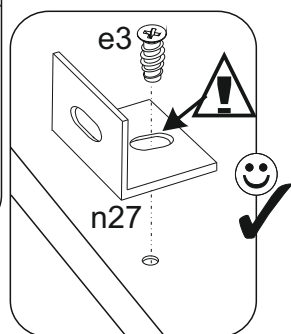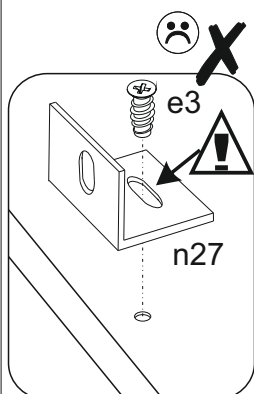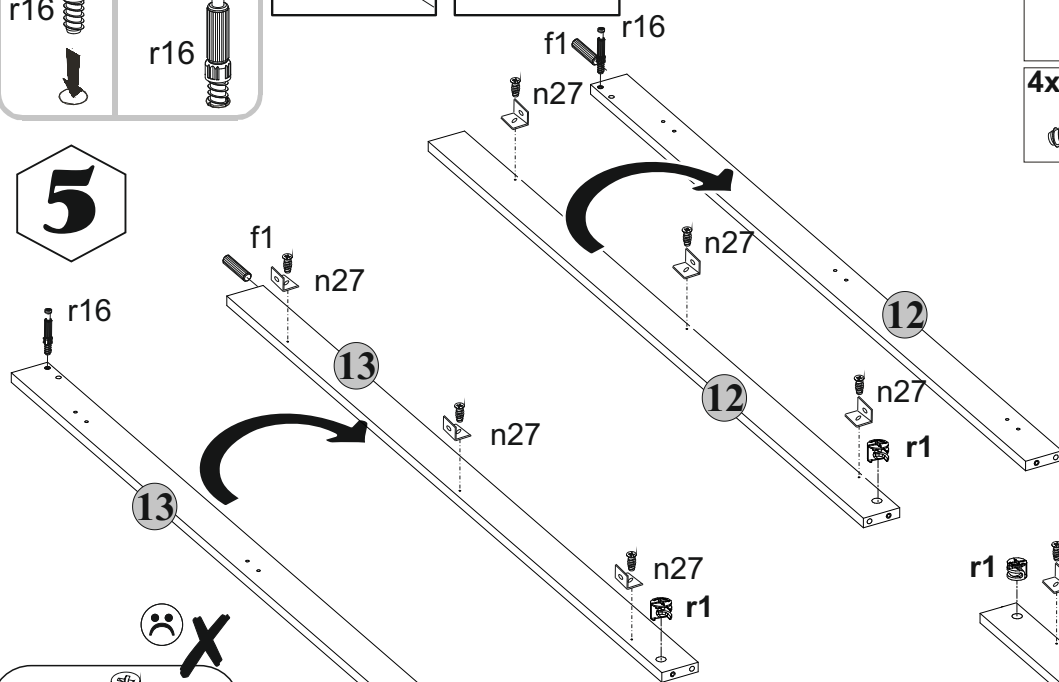



4

6

- 5x  a2
- 10x  p1
φ3.5x13 mm

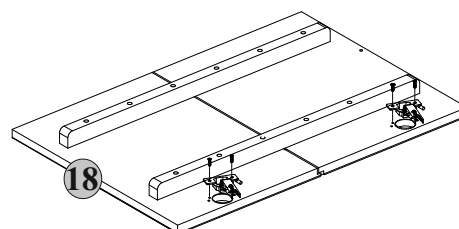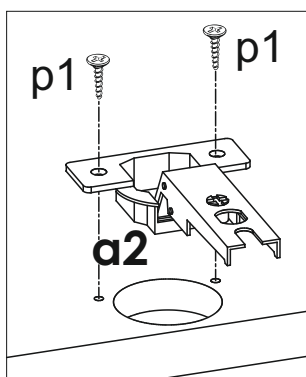
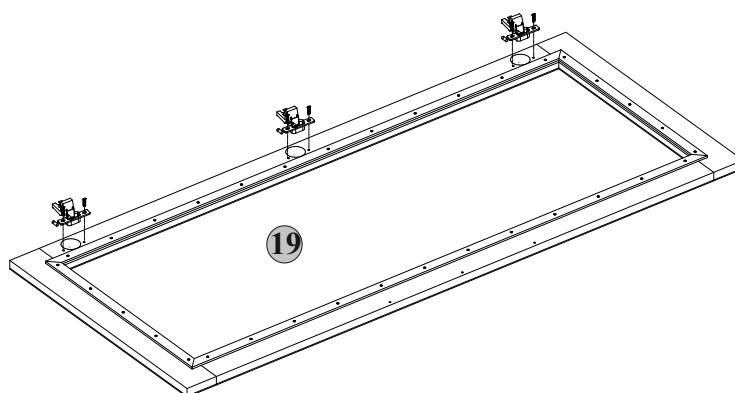


7

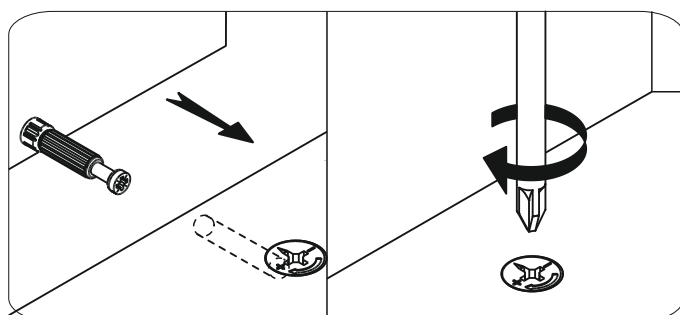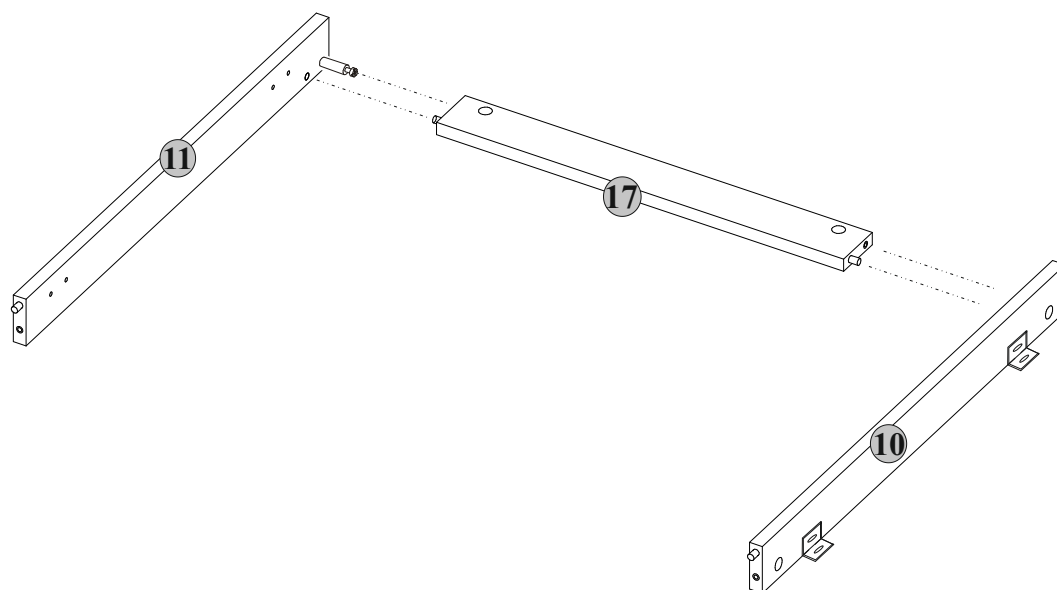


5



8

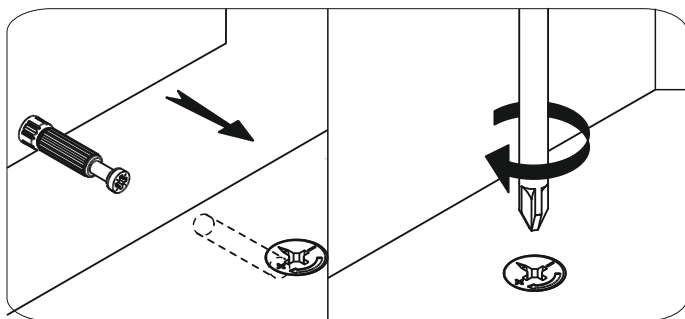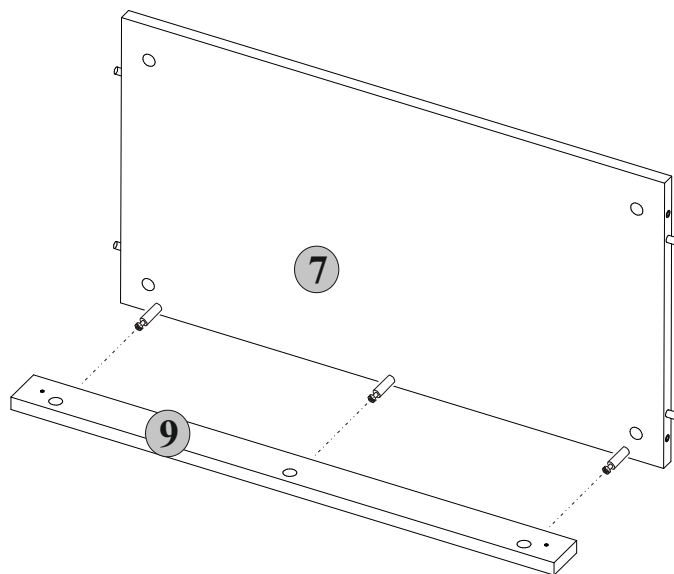

9

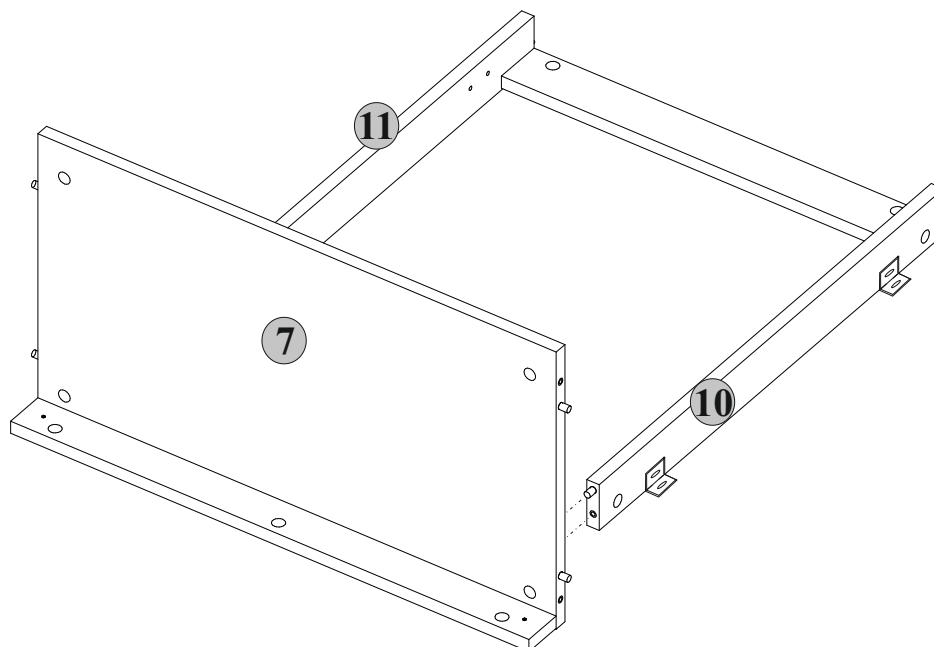


10

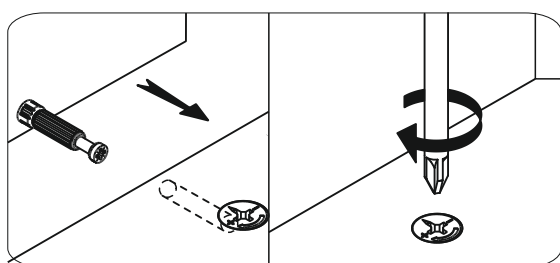
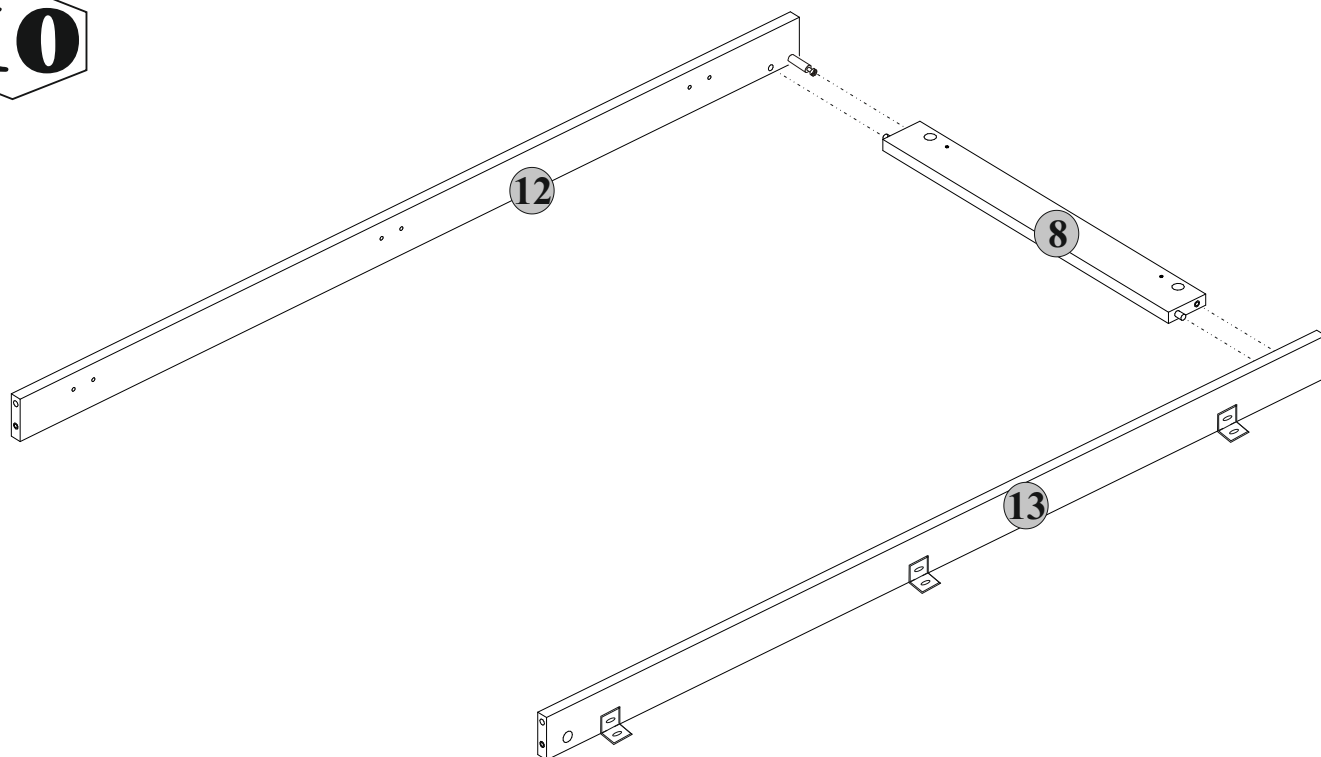


2x
φ8x50 mm
f6




11

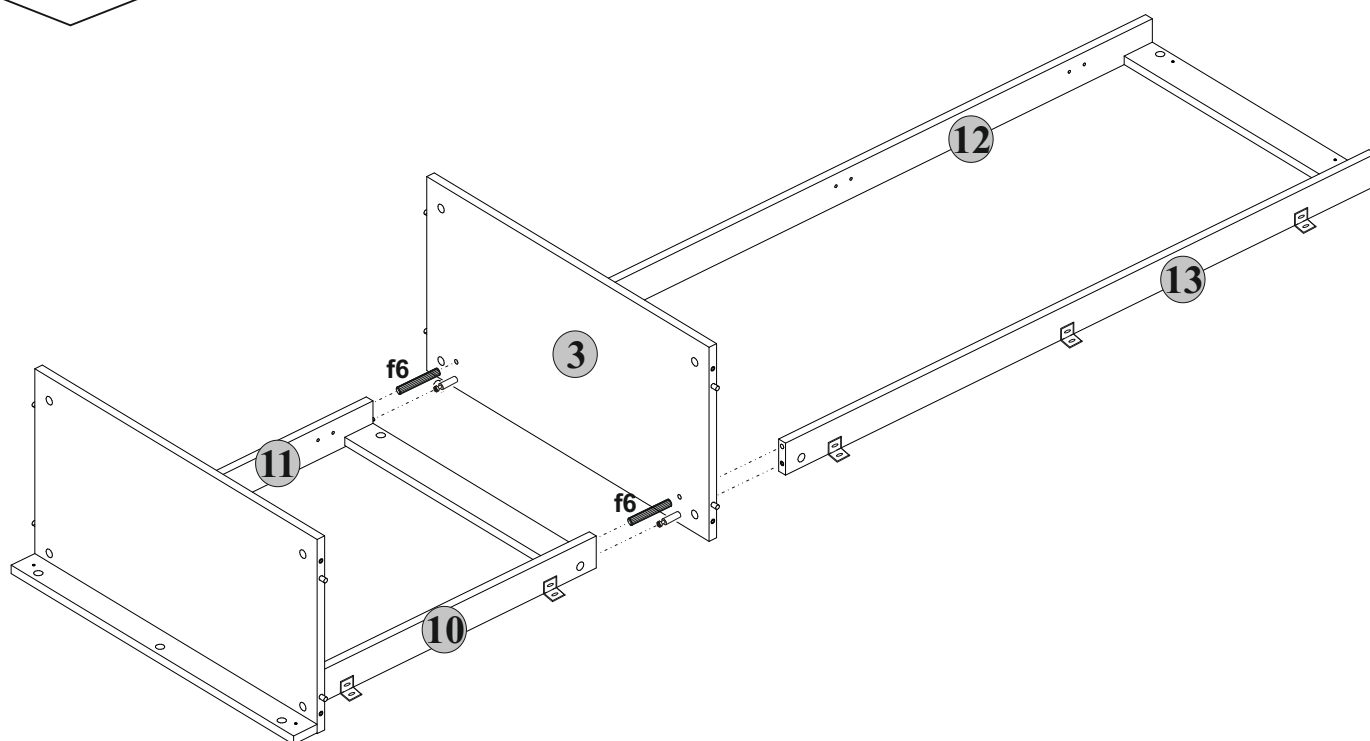

12

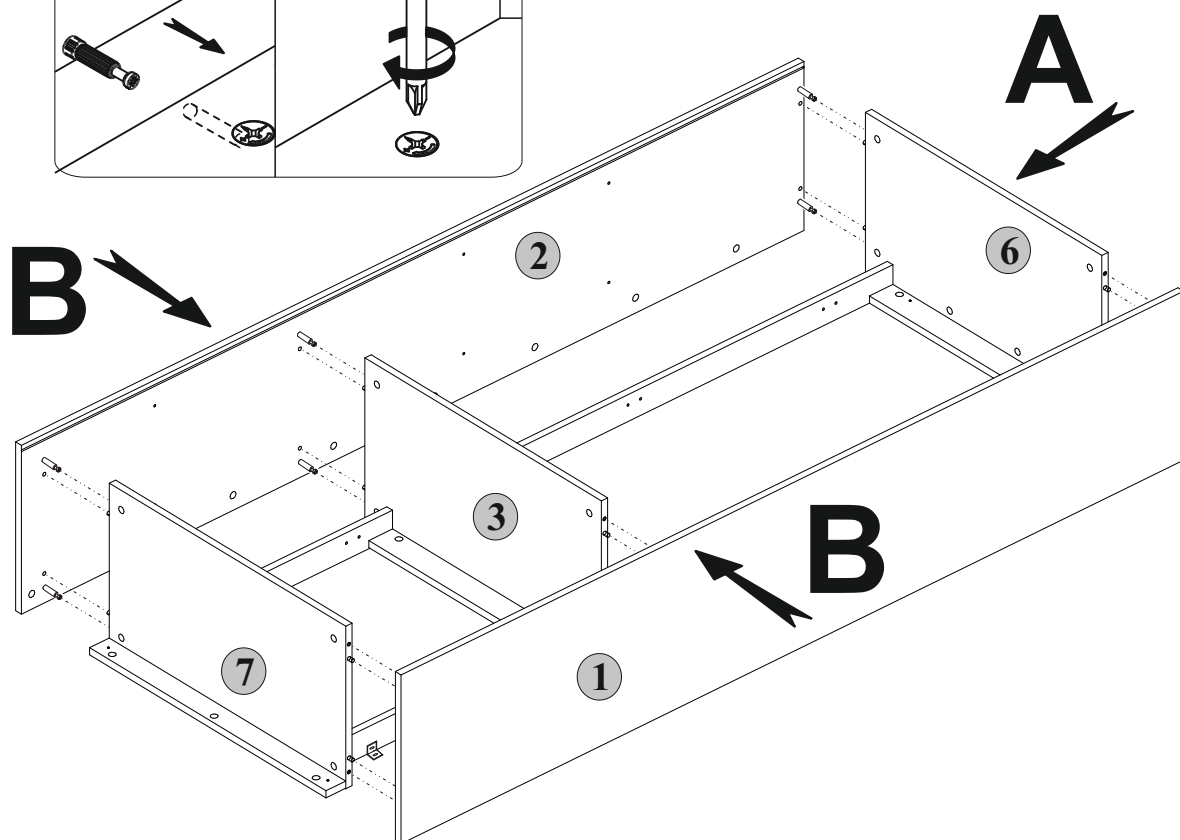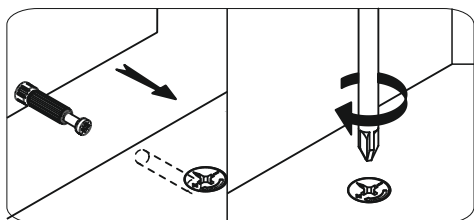





13

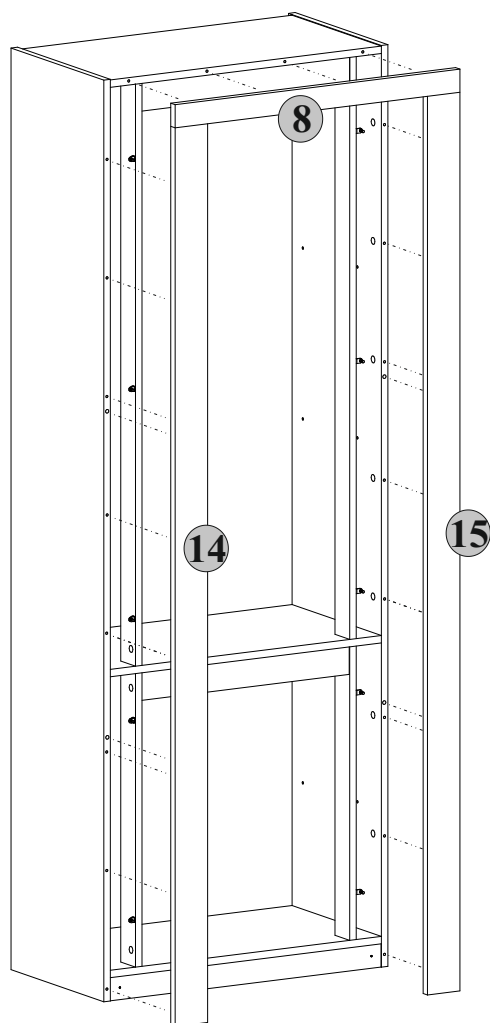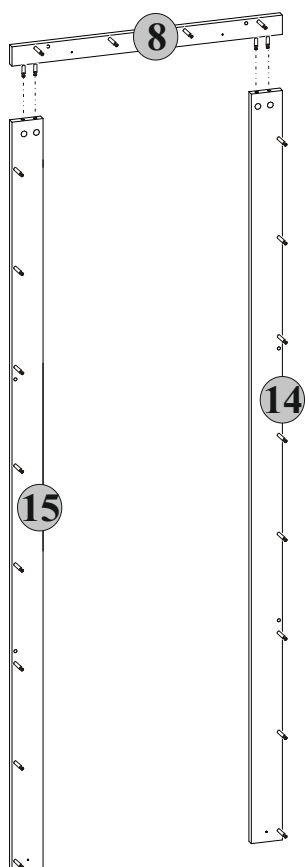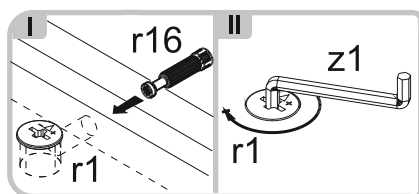

14

10x  $\phi 4.2 \times 13 \text{ mm}$ p38

4x  $\phi 4 \times 30 \text{ mm}$ p9

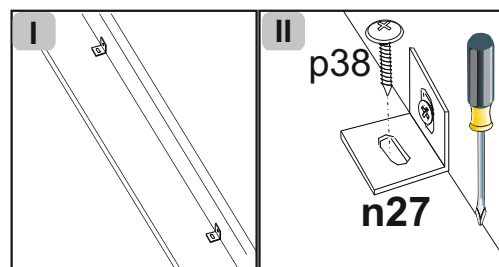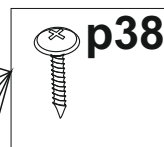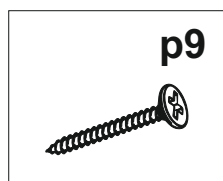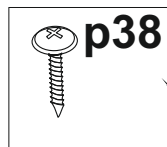

15






5x  $\phi 2 \times 20 \text{ mm}$ p27

4x  k1

5x  I9

16x  I1




10x  I2

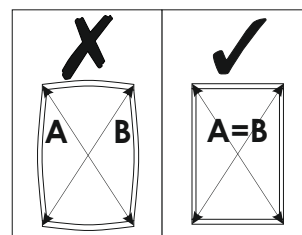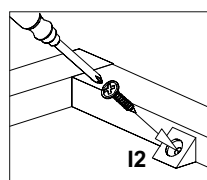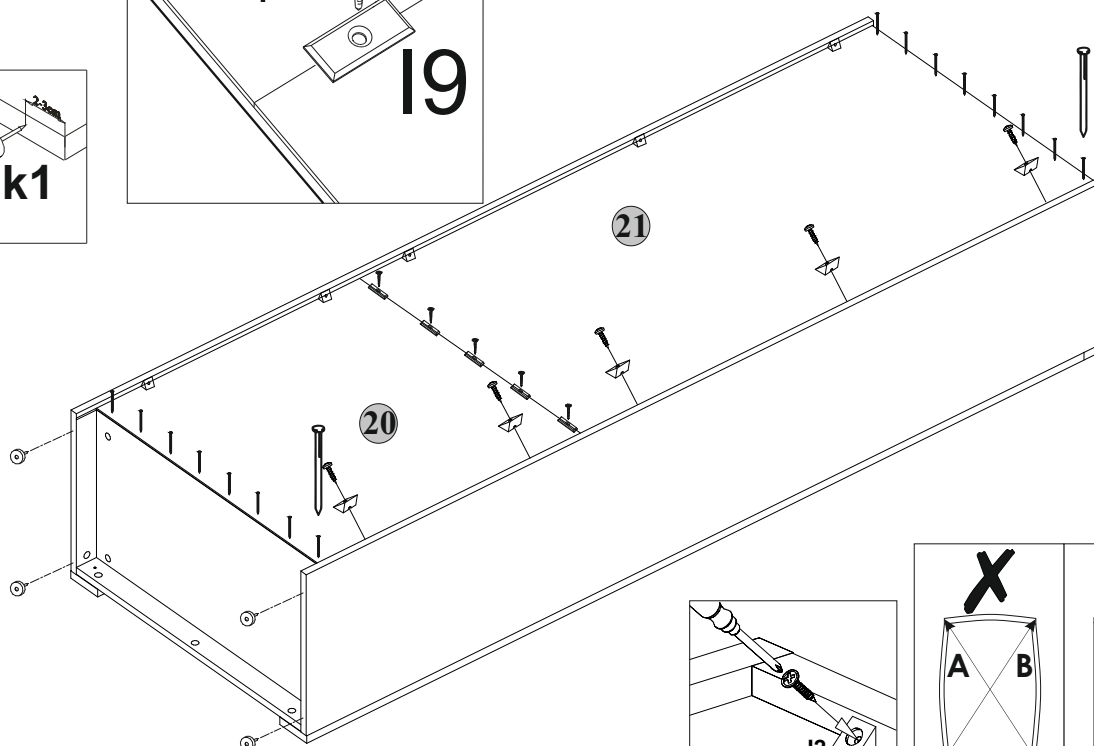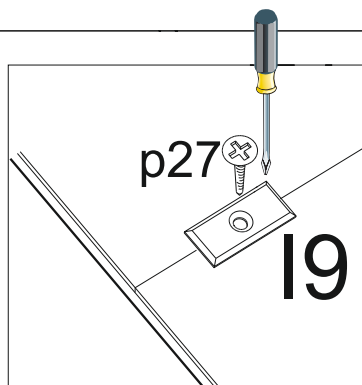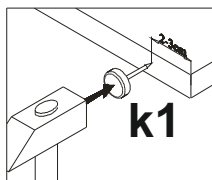

9







16

5x
b1

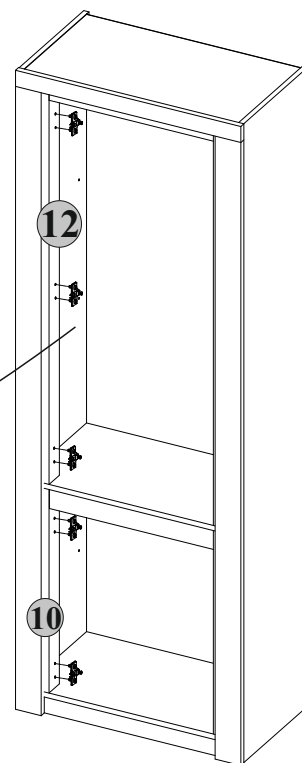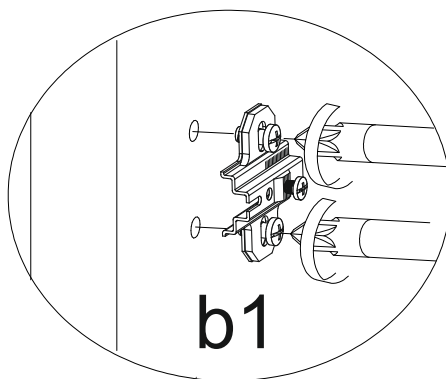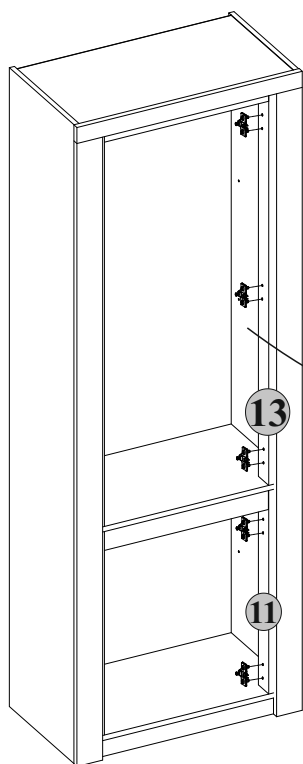








17 L

6x $\phi 3.5 \times 13$ mm p1
2x 350 mm c33





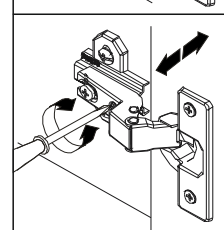
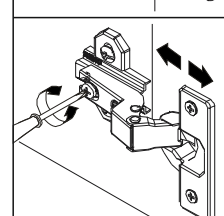
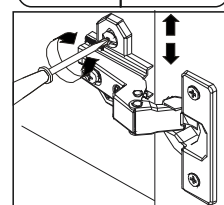
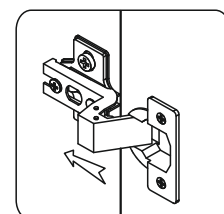
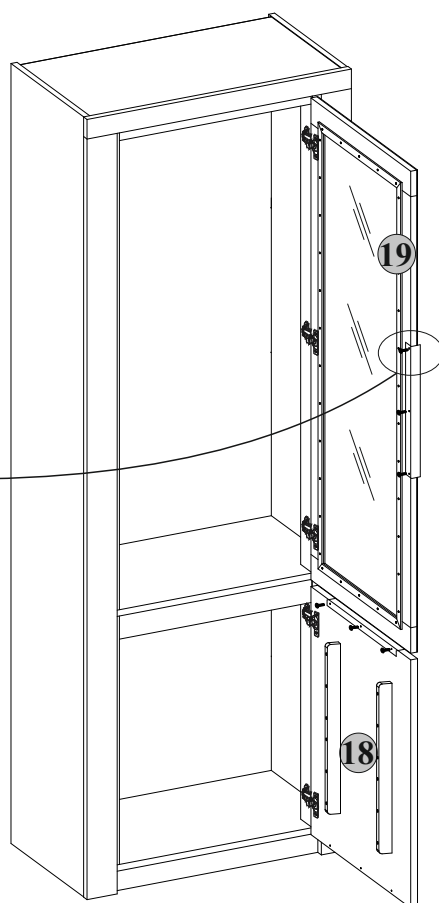
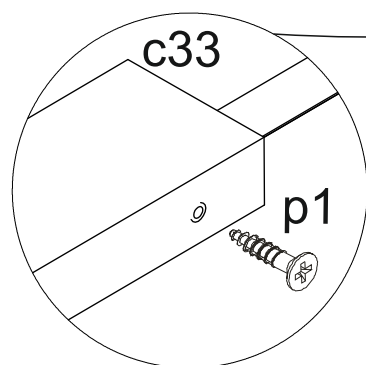


10


17 R

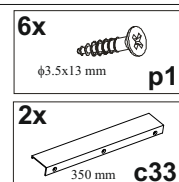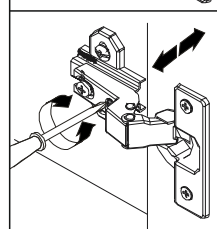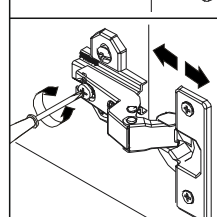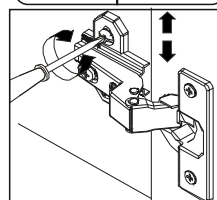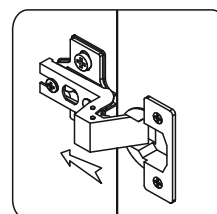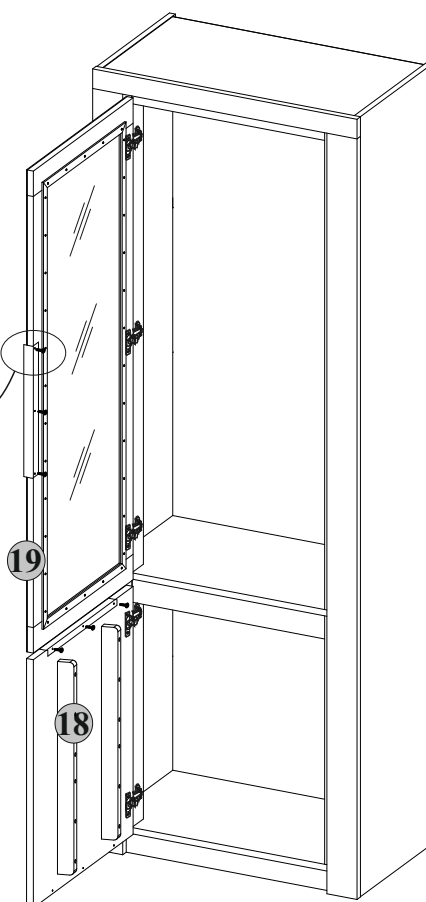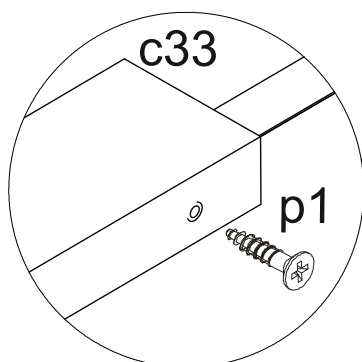




18

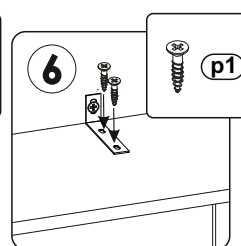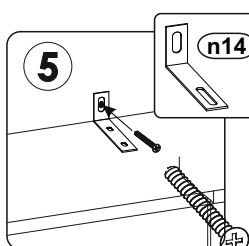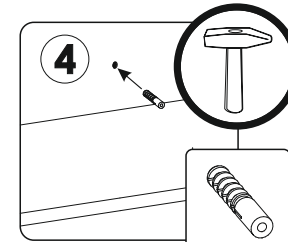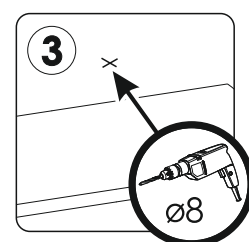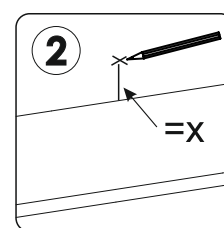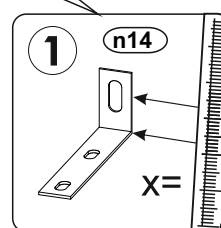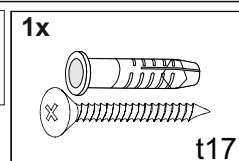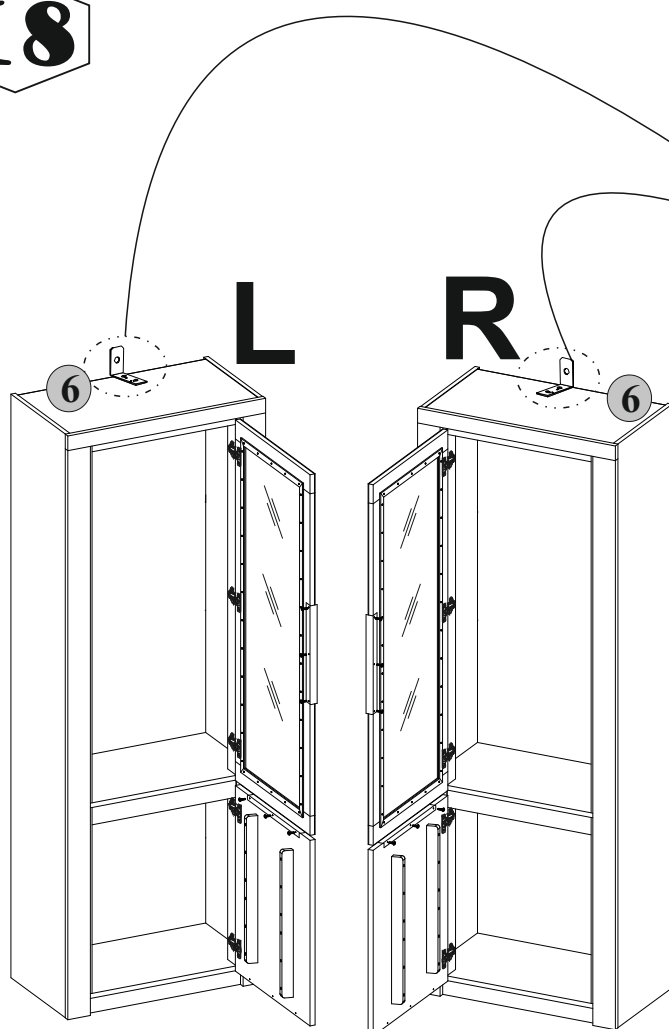

17

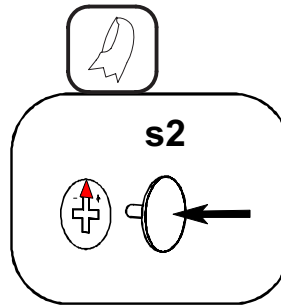

- 16x  d3
φ5x17 mm
- 8x  d1
φ5x17 mm
- 49x  s2

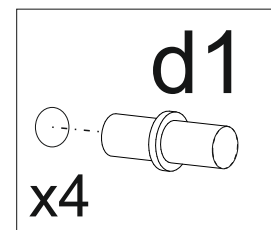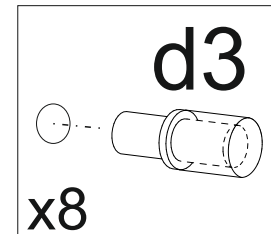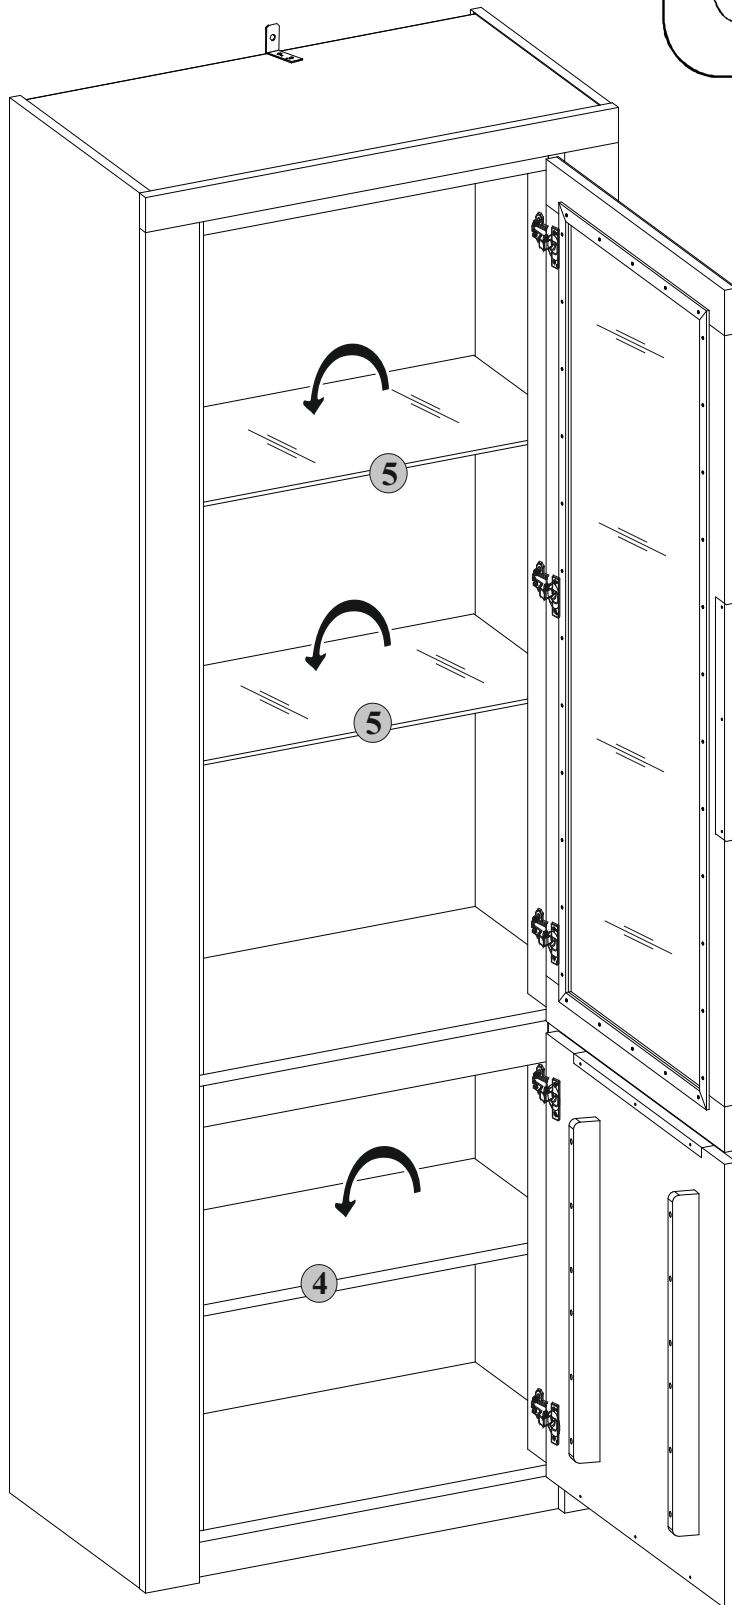

12