

20 MIN



2 X





(D) AUFBAUANLEITUNG
(NL) HANDLEIDING VOOR DE MONTAGE
(TR) MONTAJ TALIMATI
(RO) INSTRUCTIUNI DE ASAMBLARE
(F) INSTRUCTION D'ASSEMBLAGE
(CZ) POKYNY K MONTÁŽI
(BG) ИНСТРУКЦИИ ЗА МОНТАЖ
(HR) UPUTSTVA ZA MONTAŽU

(GB) ASSEMBLY INSTRUCTIONS
(PL) INSTRUKCJA MONTAŻU
(RU) Инструкция по монтажу
(I) PROCEDURA DI ASSEMBLAGGIO
(SK) POKYNY K MONTÁŽI
(HU) ÖSSZESZERELÉSI ÚTMUTATÓ
(SLO) NAVODILA ZA MONTAŽO
(S) MONTERINGSANVISNING
(LT) DIEGIMO INSTRUKCIJOS
(E) INSTRUCCIONES DE MONTAJE

MODEL

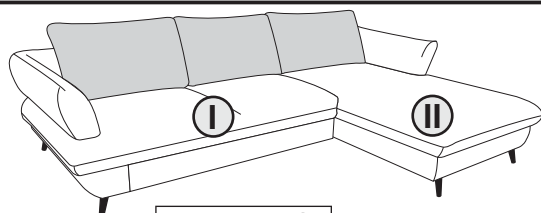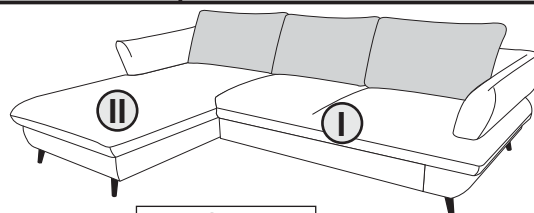"BALOU"**2.5-REC****REC-2.5**


1/2

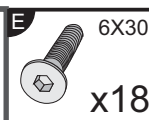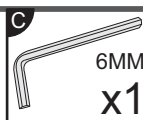



hardware bag/sachet matériel/zubehörbeutel/sachetti materiale/bolsa de materiales/worek materiałowy

pre-assembled/ pre assemble/ vormontiert/ premontato/ wstępnie/ zamontowane




1

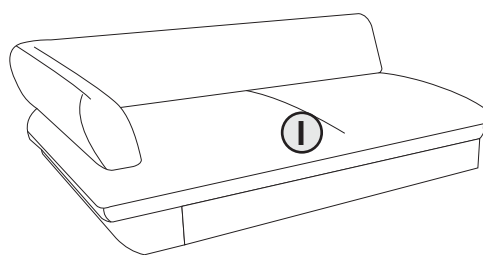


2

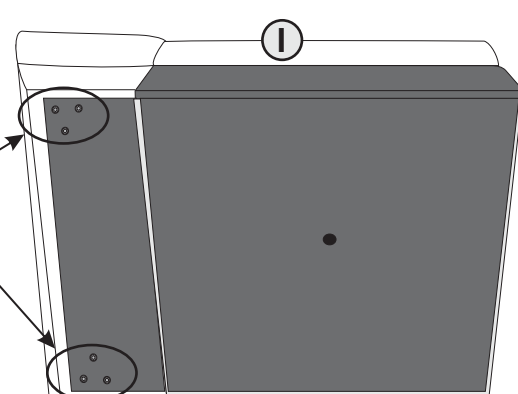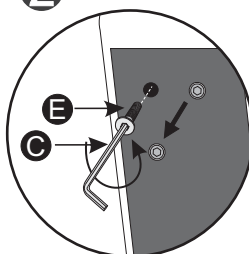



3

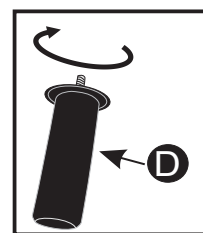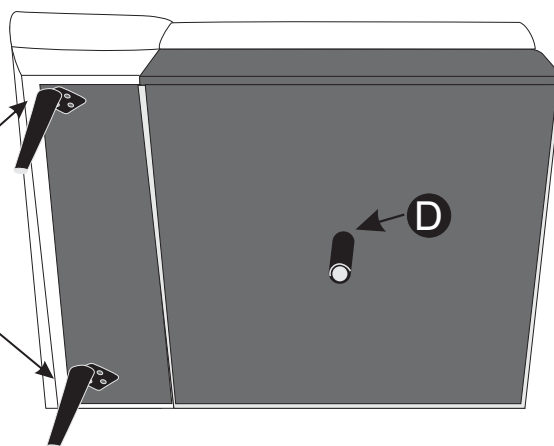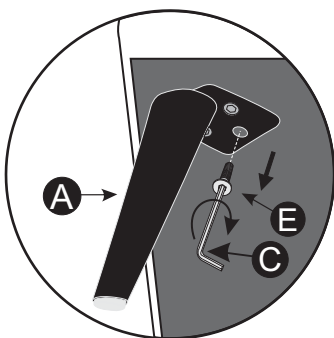

4

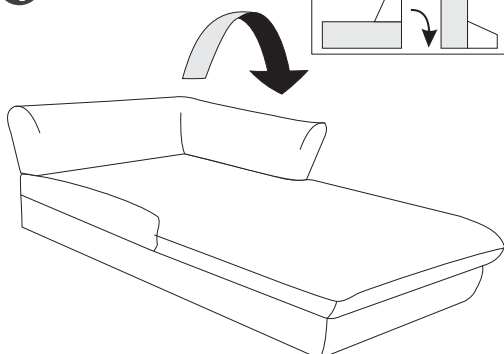

5

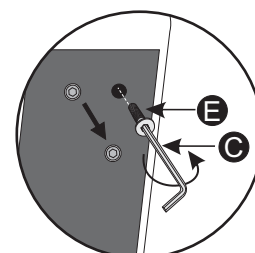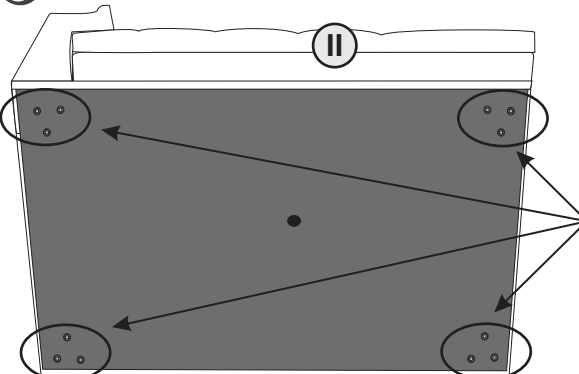

20 MIN

2 X

(D) AUFBAUANLEITUNG

(NL) HANDLEIDING VOOR DE MONTAGE

(TR) MONTAJ TALIMATI

(RO) INSTRUCTIUNI DE ASAMBLARE

(F) INSTRUCTION D'ASSEMBLAGE

(CZ) POKYNY K MONTÁŽI

(BG) ИНСТРУКЦИИ ЗА МОНТАЖ

(HR) UPUTSTVA ZA MONTAŽU

(GB) ASSEMBLY INSTRUCTIONS

(PL) INSTRUKCJA MONTAŻU

(RU) Инструкция по монтажу

(I) PROCEDURA DI ASSEMBLAGGIO

(SK) POKYNY K MONTÁŽI

(HU) ÖSSZESZERELÉSI ÚTMUTATÓ


(SLO) NAVODILA ZA MONTAŽO

(S) MONTERINGSANVISNING

(LT) DIEGIMO INSTRUKCIJOS

(E) INSTRUCCIONES DE MONTAJE

MODEL "BALOU"

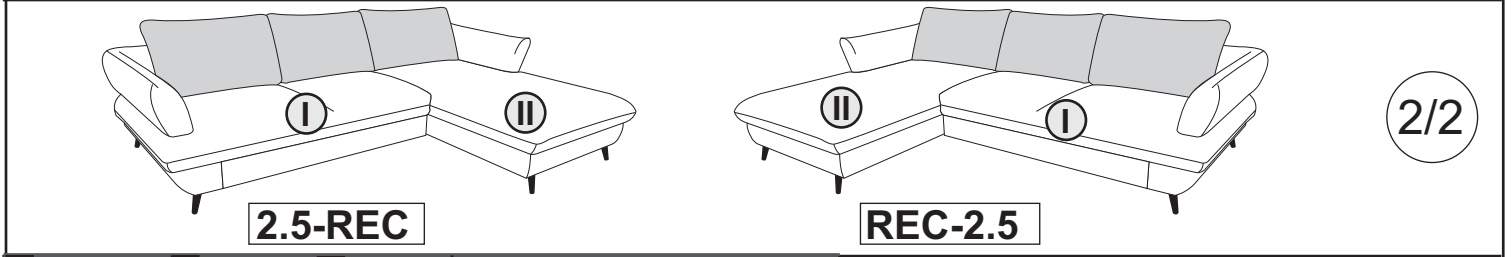

A

KA 0433
H123

x6

C

6MM

x1

D

CIL115
H115

x2

E

6X30

x18

hardware bag/sachet materiel/zubehörbeutel/sachetti materiale/bolsa de materiales/worek materiałowy

pre-assembled/ pre assemble/ vormontiert/ premontato/ wstępnie/ zamontowane

