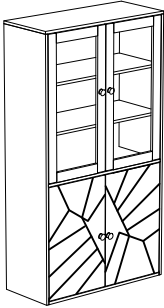



ASSEMBLY INSTRUCTION

68430 GLASS CABINET


Page
1 of 1

No	Name of Component	Q.ty
(A)		1
(B)		4
No	Name of Hardware	Q.ty
(1)	Bolt 	12
(2)	Washer 	12
(3)	Allenkey 	1


STEP 1

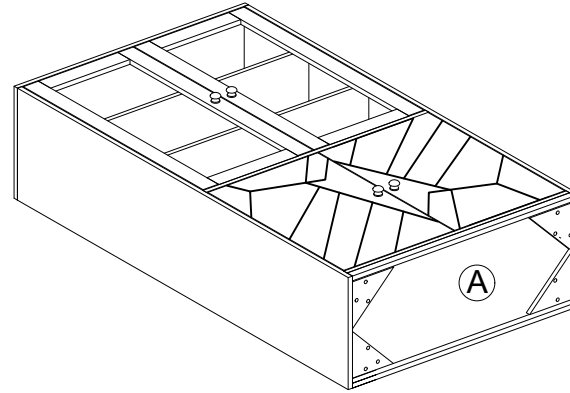

STEP 2

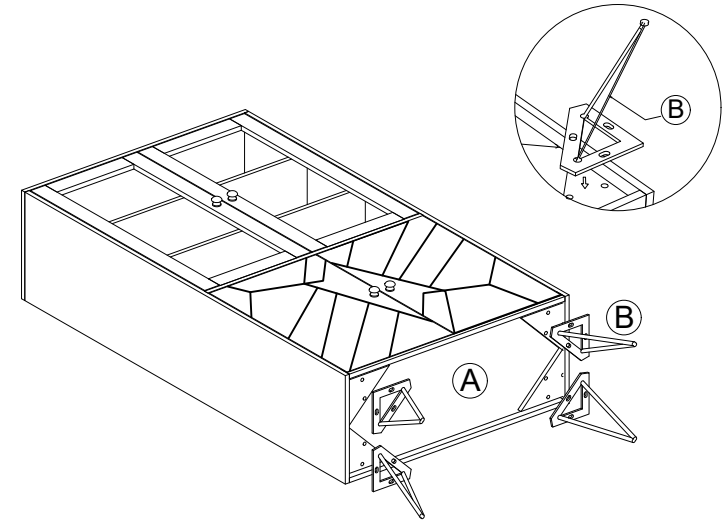

STEP 3

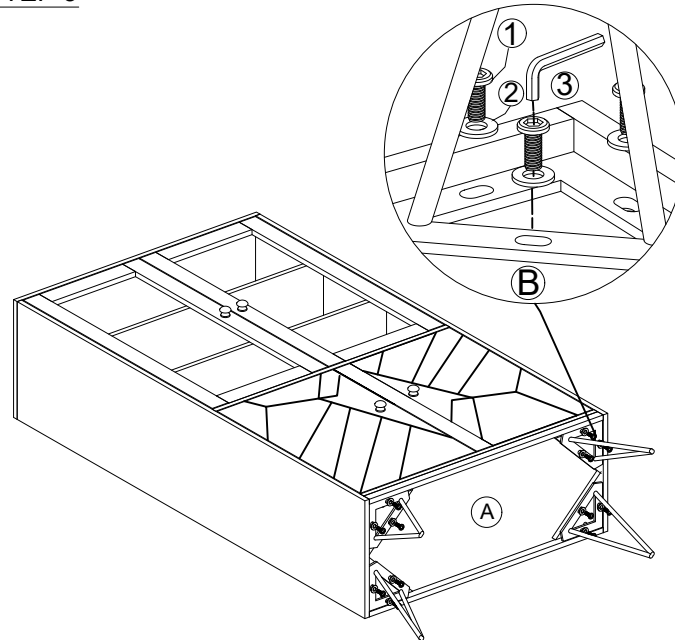

FINAL

