


REPC-Nr.:







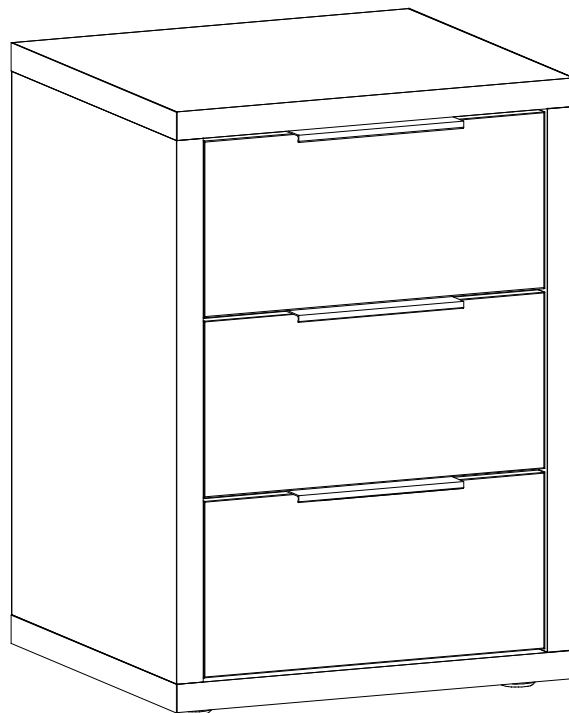


Artikel.-Nr.:

0801-KO_03

Montageanleitung.-Nr.:


MA1-00280

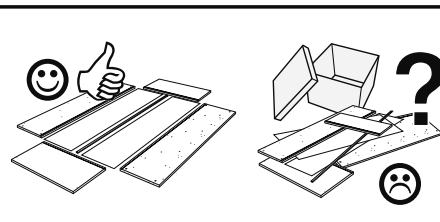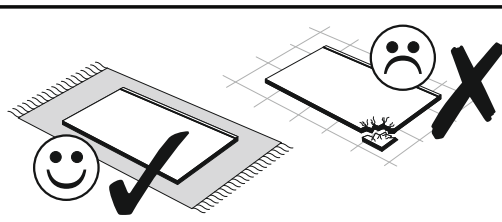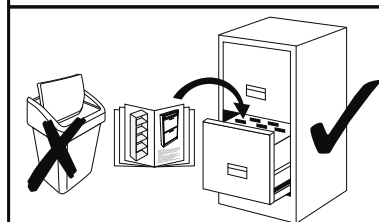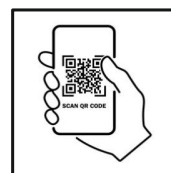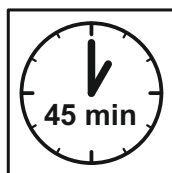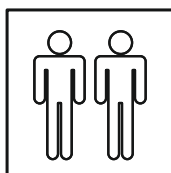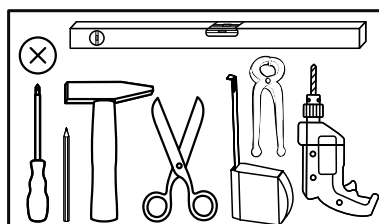


SCAN ME

Das Ersatzteil-Anforderungsformular finden Sie auf
The replacement parts requisition form you find on
<https://www.maeusbacher.de/ersatzteile/>

BT1-00005 Colli 1/2


B01-123		B02-173	
8x	4,0x15	4x	

BT1-00368 Colli 1/2


B01-20		B01-200		B01-30		B01-90	
4x	7,0x70	18x	6,3x13	12x	3x16	4x	3,5x20
B02-10		B02-20		B02-103		B05-20	
16x	ø15x12mm	16x		24x	8x30	12x	

BT1-00369 Colli 1/2


B05-185		B06-424	
4x		3x	200mm




Colli 1/2




414 x 199



405 x 124




335 x 124

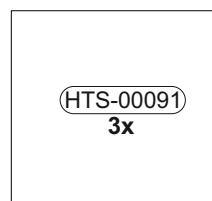


386 x 358




Colli 2/2

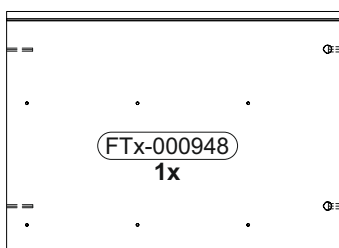


613 x 444

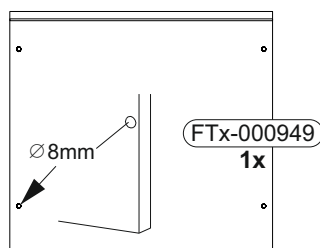


483 x 444

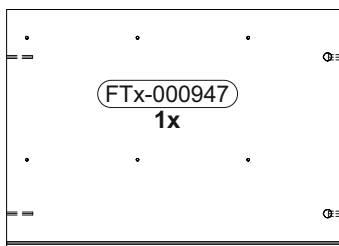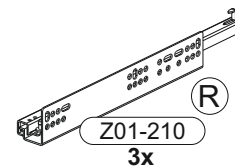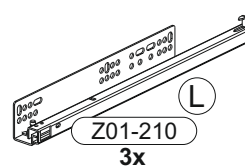









613 x 444











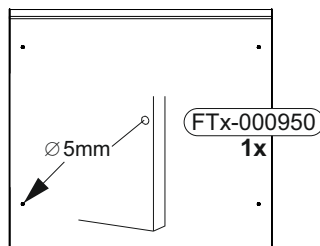


483 x 444

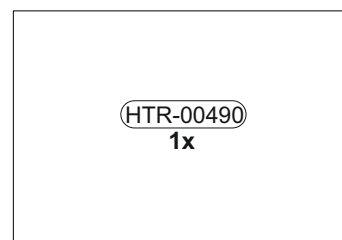


625 x 430

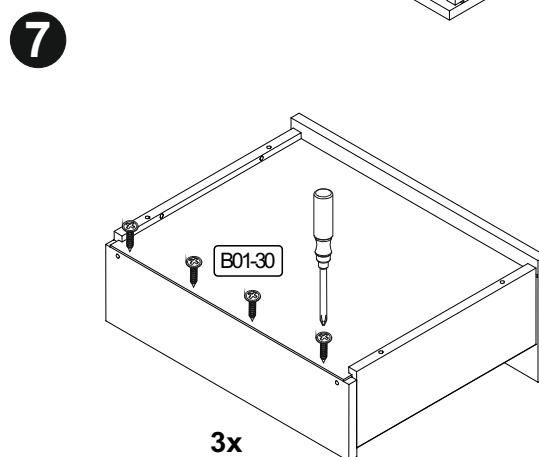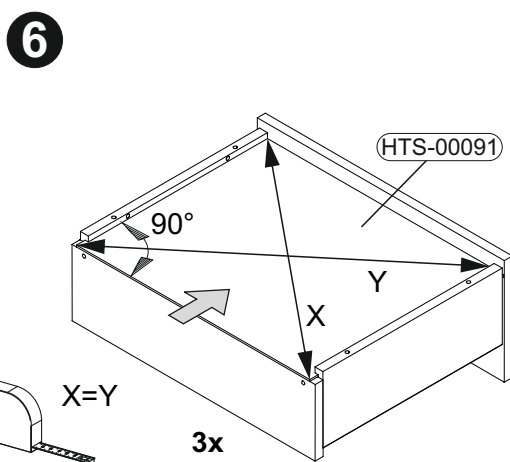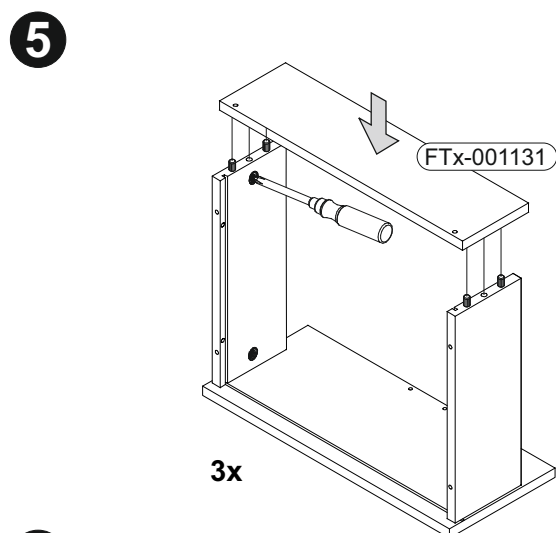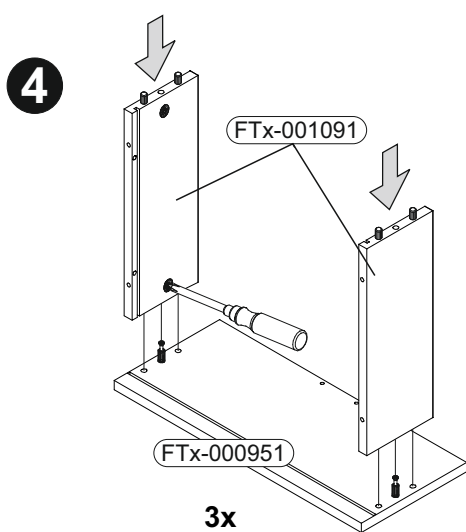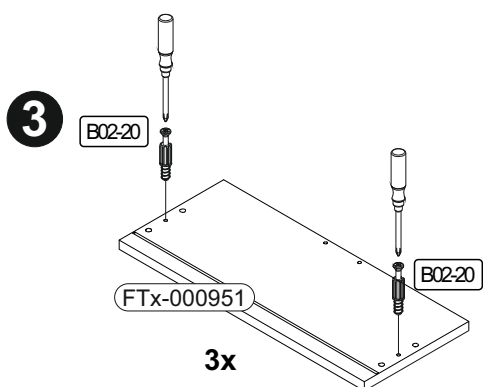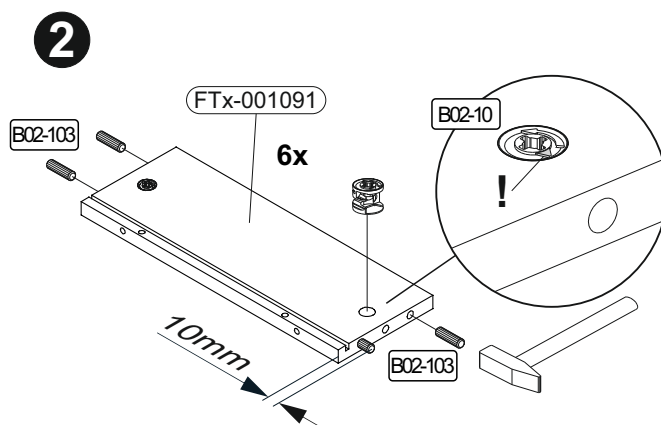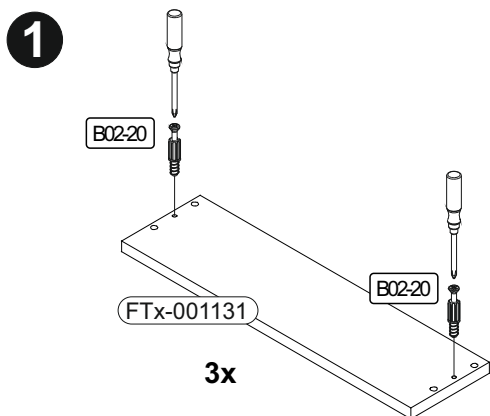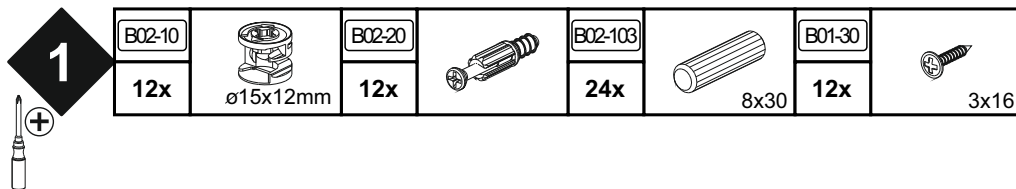


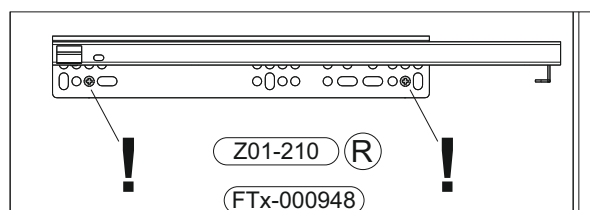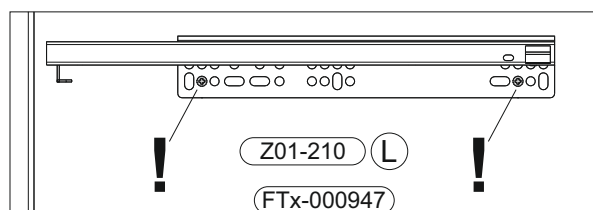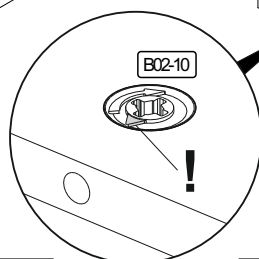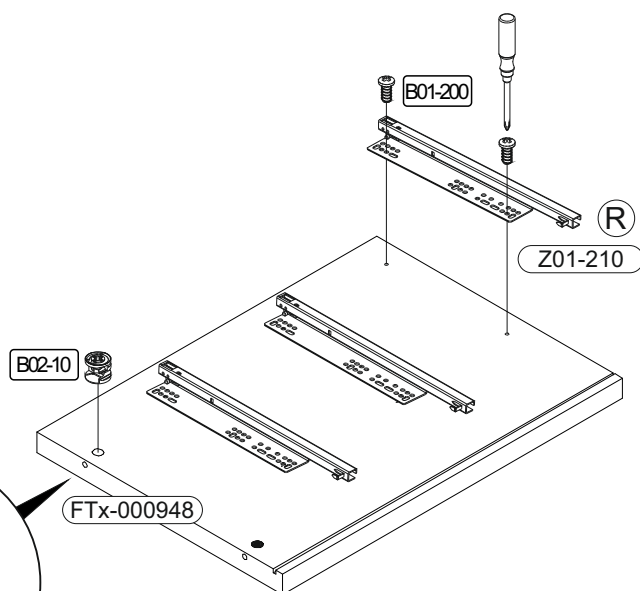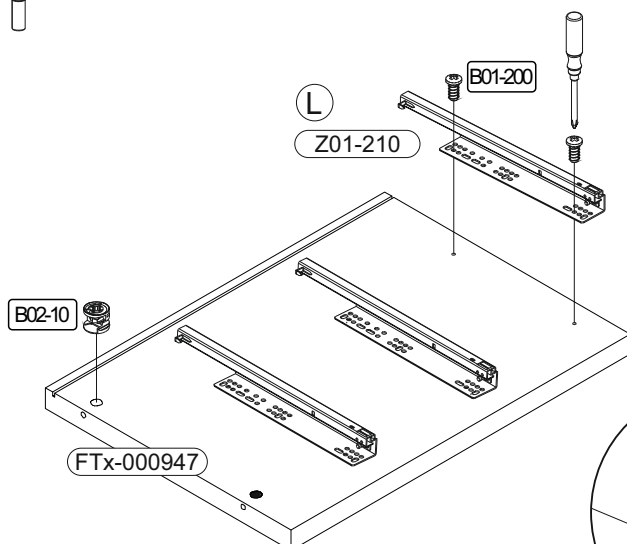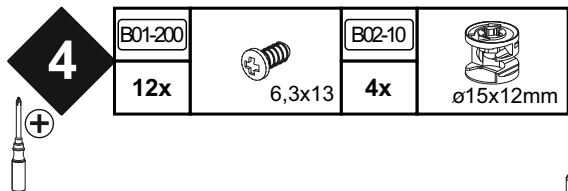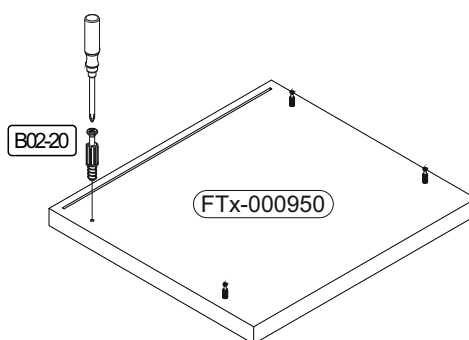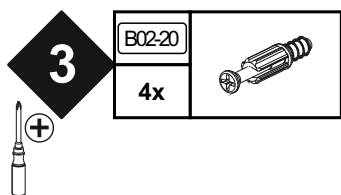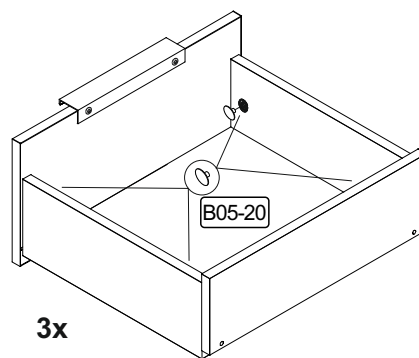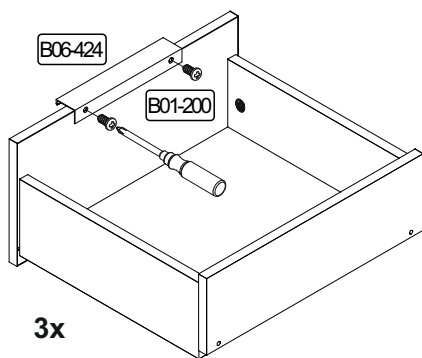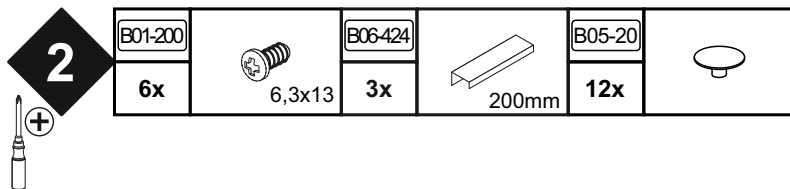


5

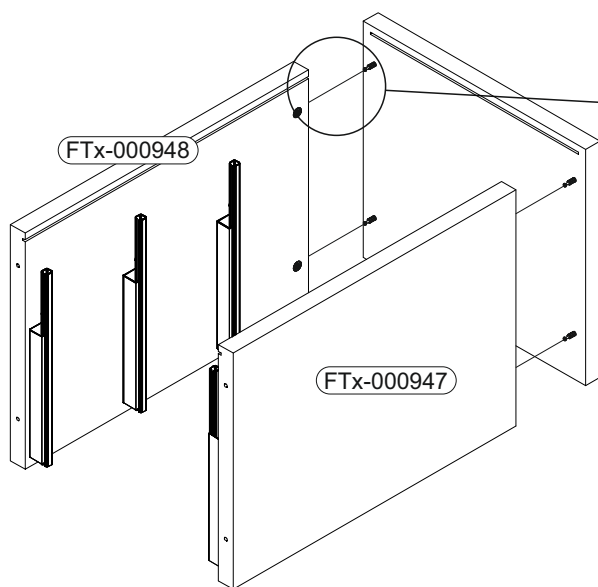

1

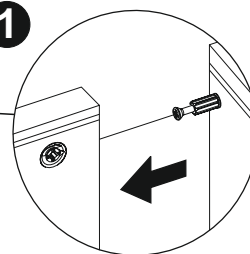

2

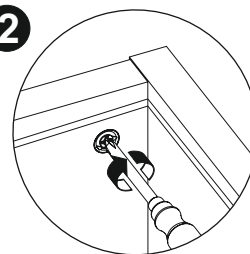


6




B01-20		B05-185		B01-90	
4x	7,0x70	4x		4x	3,5x20




1

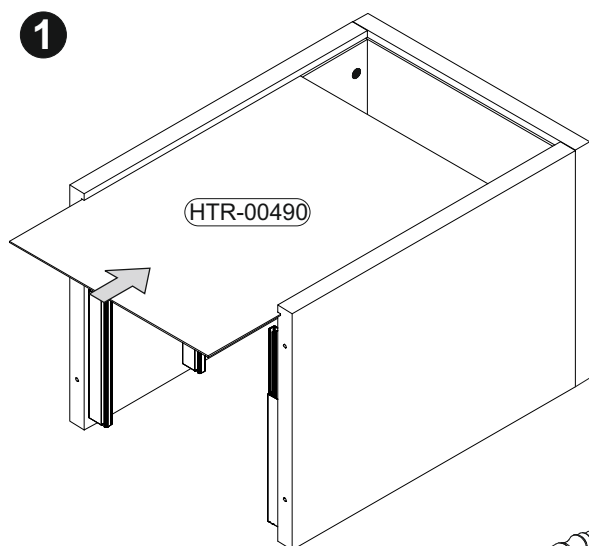

2


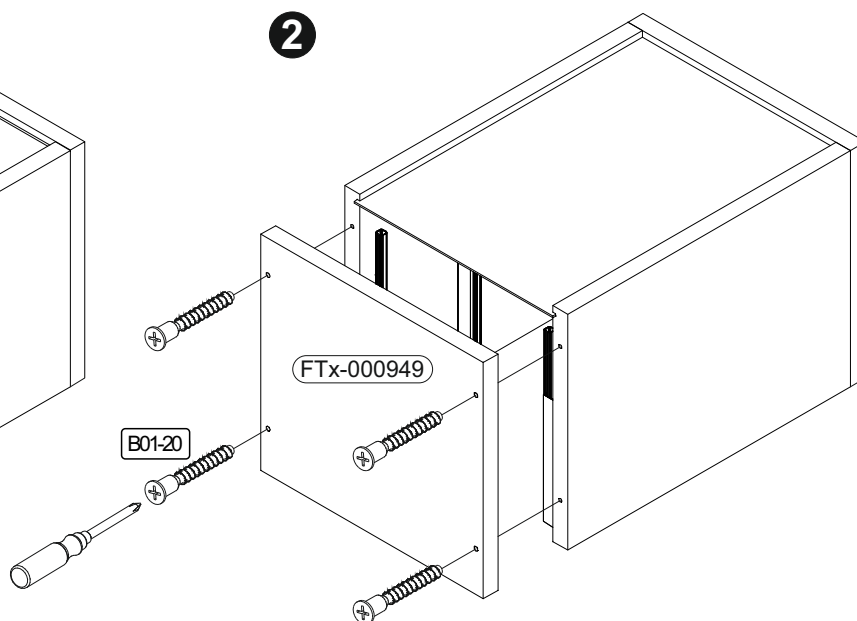



3

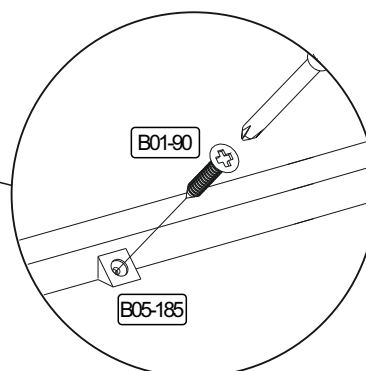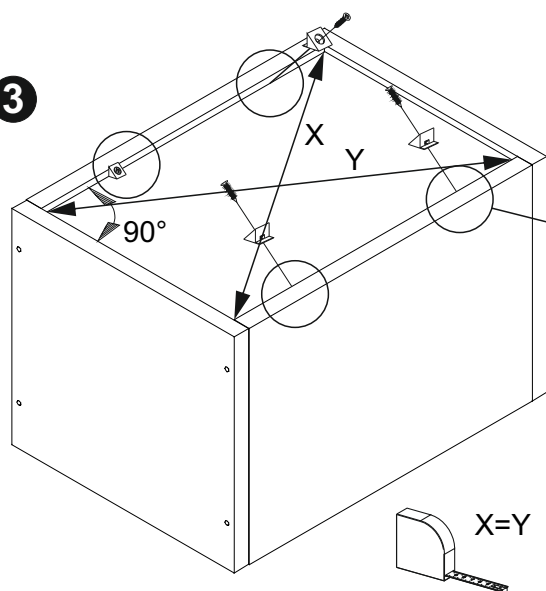





B01-123		B02-173	
8x	4,0x15	4x	


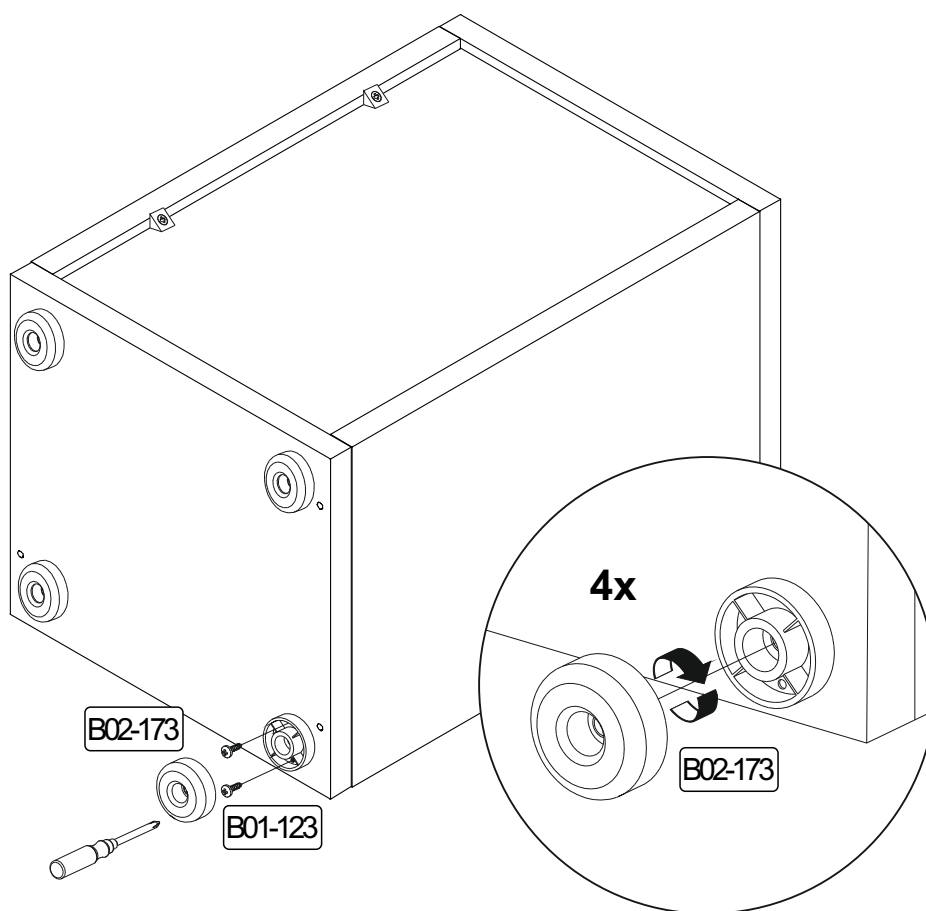
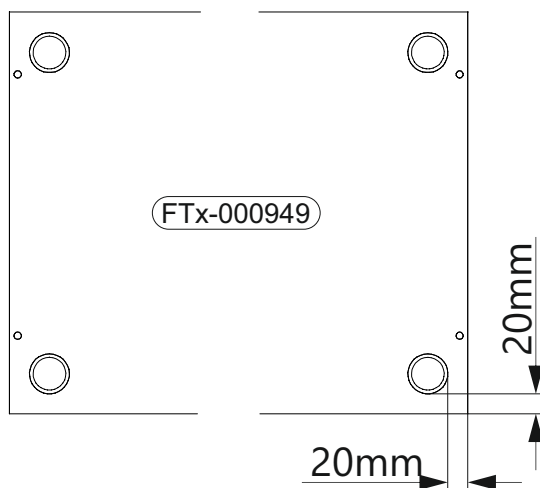


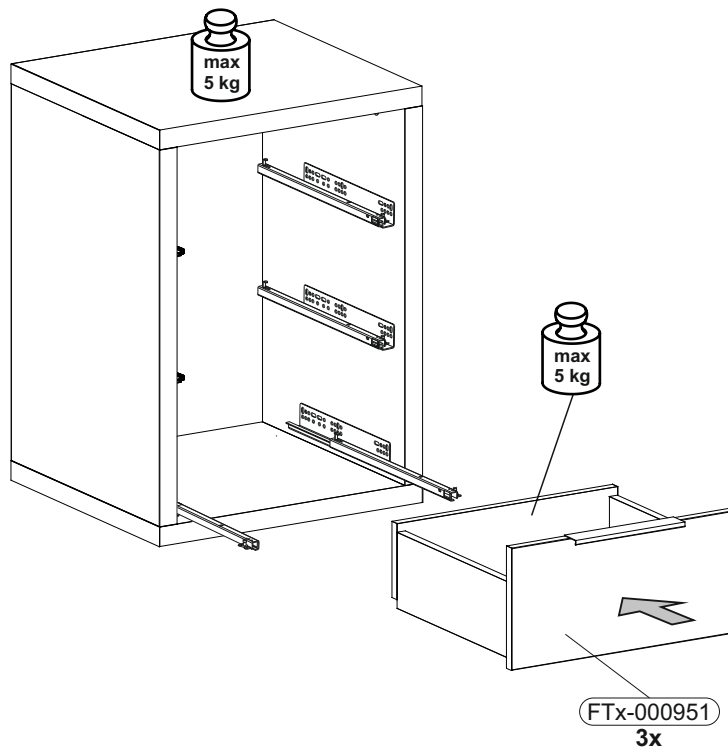

1

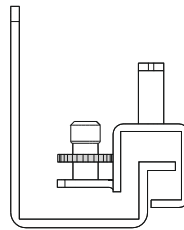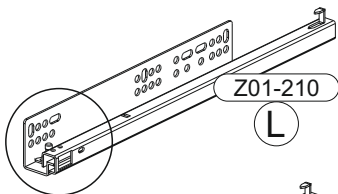


Die Stellräder, die der Höhenverstellung dienen nach ganz unten drehen

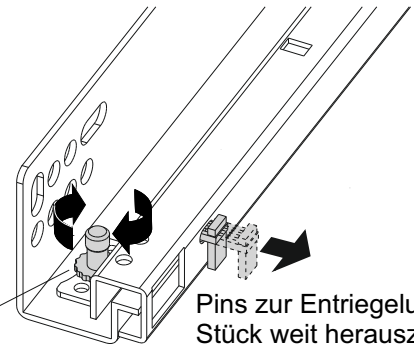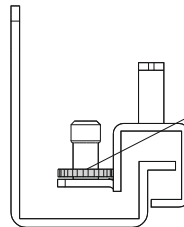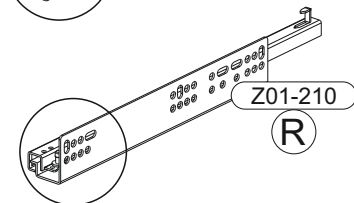


Pins zur Entriegelung ein Stück weit herausziehen

2

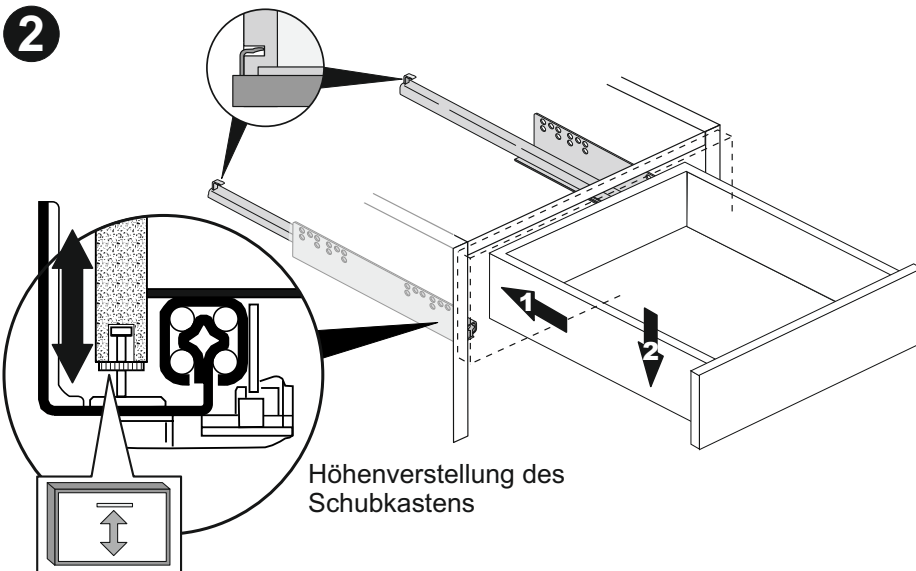

Höhenverstellung des Schubkastens

3

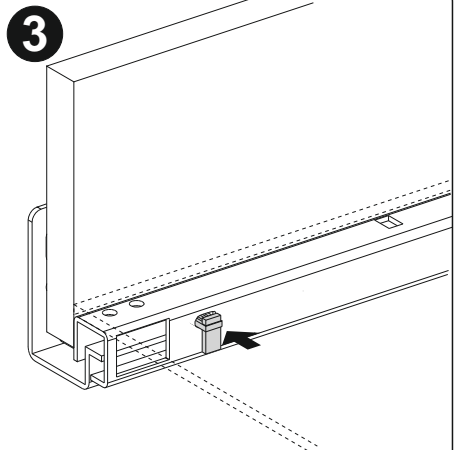

Nach dem Einsetzen und Einstellen der Schubkästen Pins zur Verriegelung eindrücken!