

Redford (2AL-RC)(RC-2AL) variabel







- (DE) Montageanleitung
(PL) Instrukcja montażu
(NL) Handleiding voor de montage
(GB) Assembly instructions
(TR) Montaj talimatı
(RU) Инструкция по монтажу
(IT) Istruzioni di montaggio

- (FR) Notice de montage
(RO) Instrucțiuni de asamblare
(SK) Montážny návod
(CZ) Montážní návod
(HU) Szerelési útmutató
(SLO) Navodila za montažo

Service - Servis - Dienstverlening - Servis - Serwis - Сервисная служба - Servizio - Service
Serviciu - Služby - Szolgáltatás - Storitev

Da es sich hier um ein variables Modell handelt, muss vor Montage entschieden werden, welches Element rechts oder links stehen soll. Entsprechend müssen dann die Arm- bzw. Rückenlehnen angebracht werden. Hierzu den Reißverschluss an der Unterseite öffnen und anhand der vorhandenen Bohrungen in den Seitenwänden die Löcher im Stoff freilegen (Schere, Cuttermesser o.ä.).

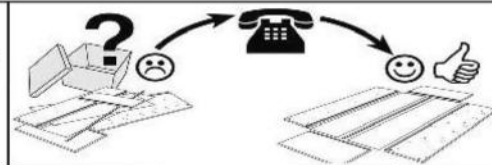


 2x 74x47	 1x 122x47	 2x 50x50	 S1x9 M8x80	 U1x9	 S2x8 M6x20
 B1x2	 B2x2	 2AL	 RC	 RC	 x1 13






2AL-RC
L=2-3





RC-2AL
R=4-5

30-06-2025

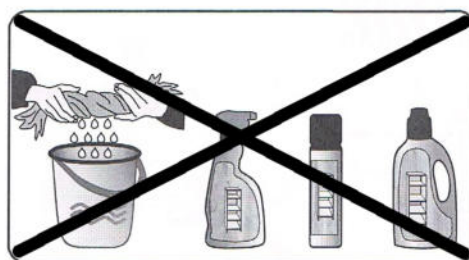

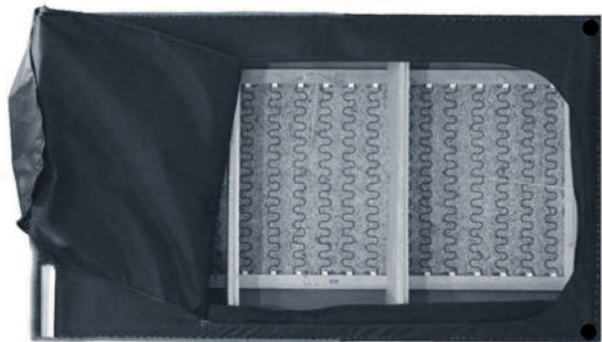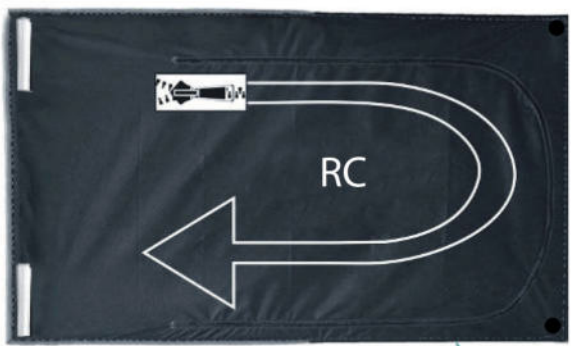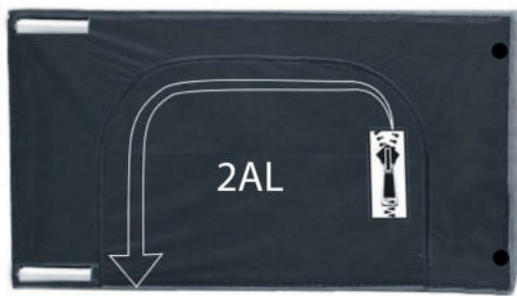


S1x3	U1x3	S2x4	B2x2	2AL	L	L 2AL-RC
-------------	-------------	-------------	-------------	------------	----------	-----------------

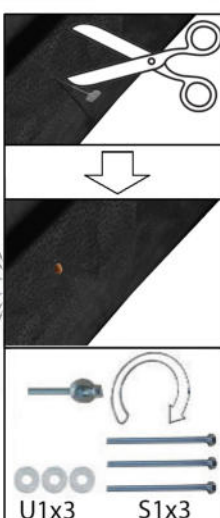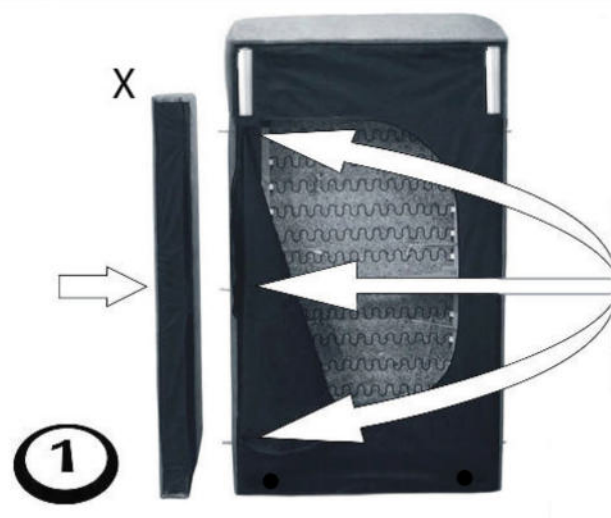

2AL

②

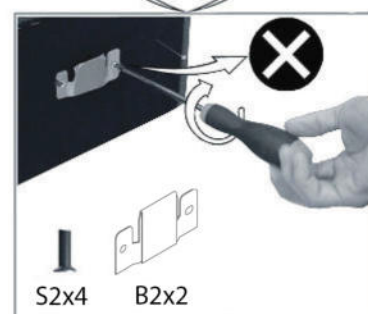

③



30-06-2025	
1h	

S1x6

U1x6

S2x4

B1x2

Y

RC

Z

RC

L 2AL-RC

4

7

8

30-06-2025

L 2AL-RC

3

S1x3

U1x3

S2x4

B2x2

X

2AL

R

RC-2AL

1

2

3

S1x6

U1x6

Y

Z

RC

RC

R

RC-2AL

4

5

30-06-2025

1h

4

