


MONTAGEANLEITUNG



LASSE 2F.REC/BK LASSE REC/BK.2F

11-12/2019


A

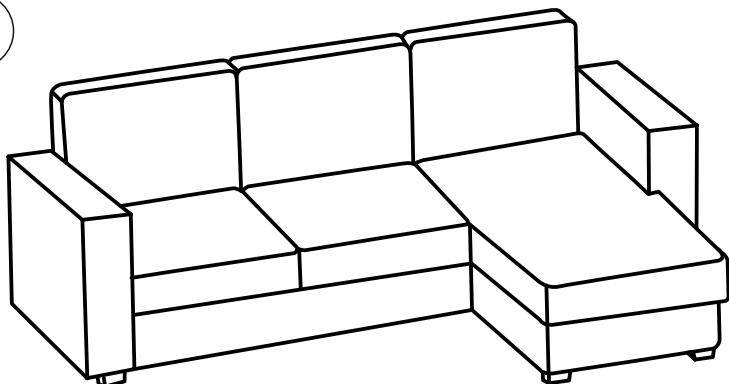

B

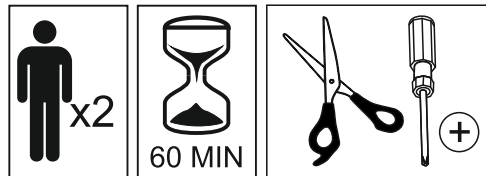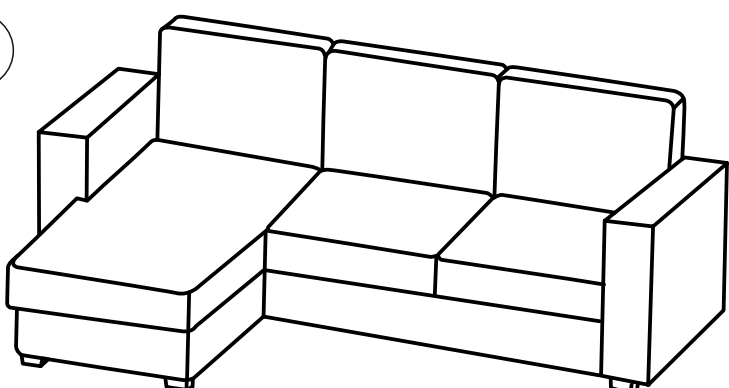


Vor der Montage bitte
beiliegende Informationen
beachten


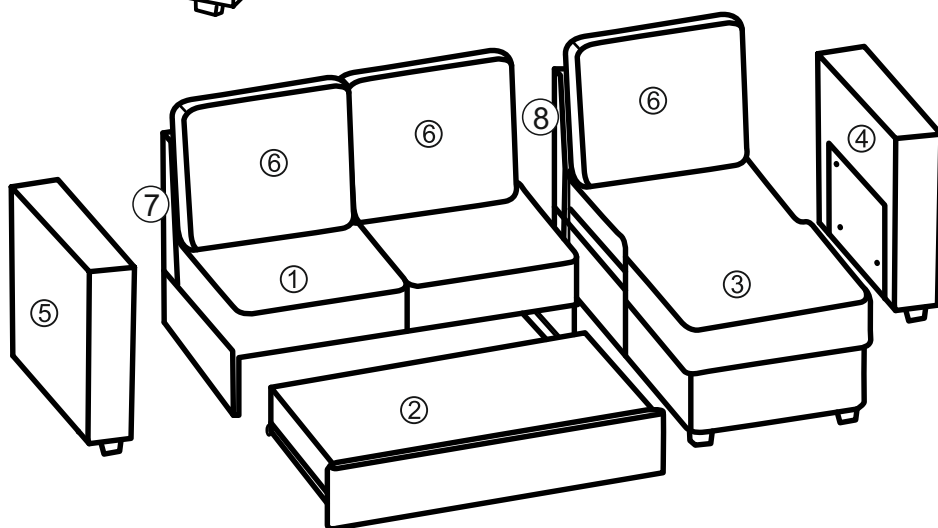


A		Ax10 M6x40	B		Bx10 M8	C		Cx4	D		Dx7 Felt
E		Ex7	F		Fx8 M6x20	G		Gx1 4mm	H		Hx3 5x40
I		Ix2	J		Jx16	K		Kx2	L		Lx4
M		Mx4 5x50									

1a,b




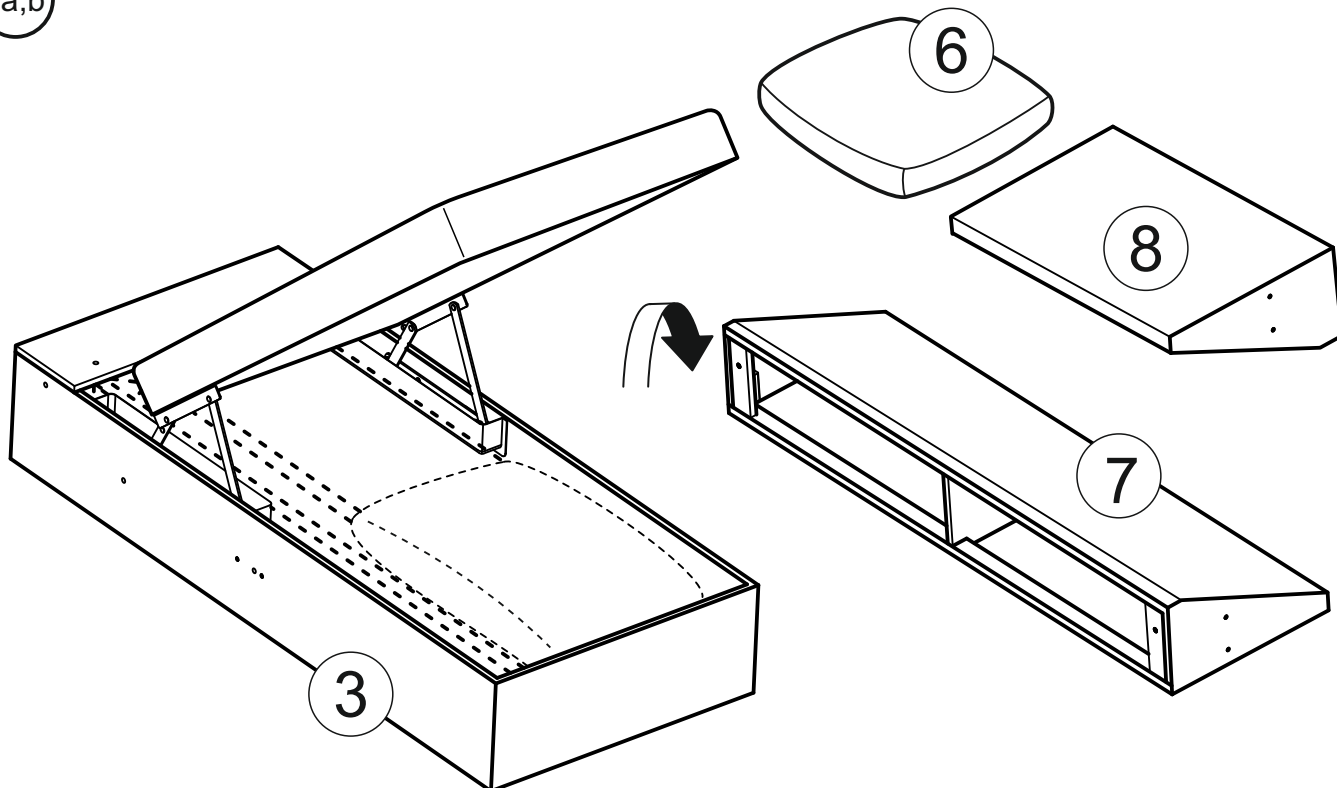


2a,b


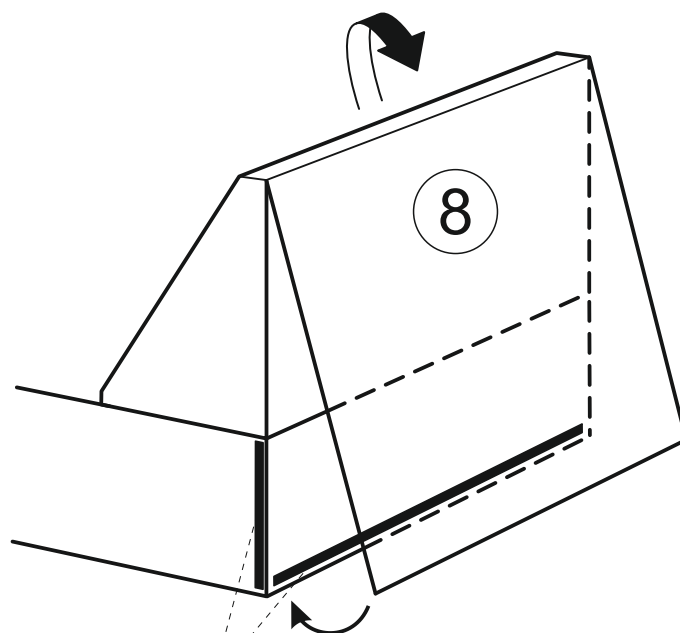
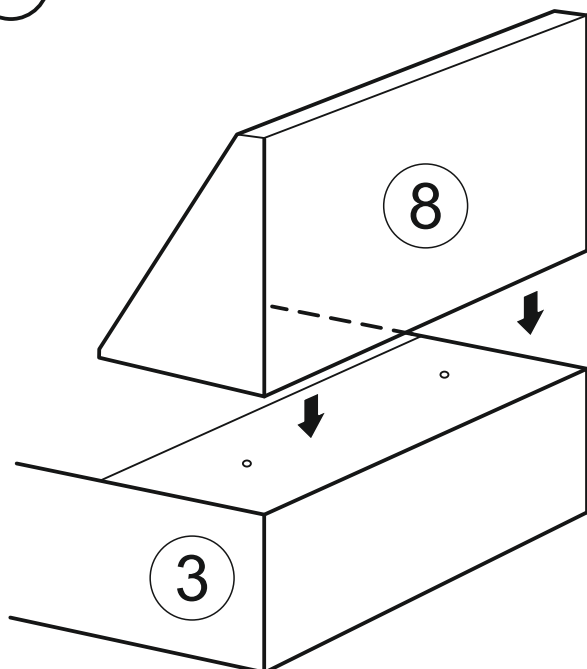


Velcro fastener
Klettband


3a,b

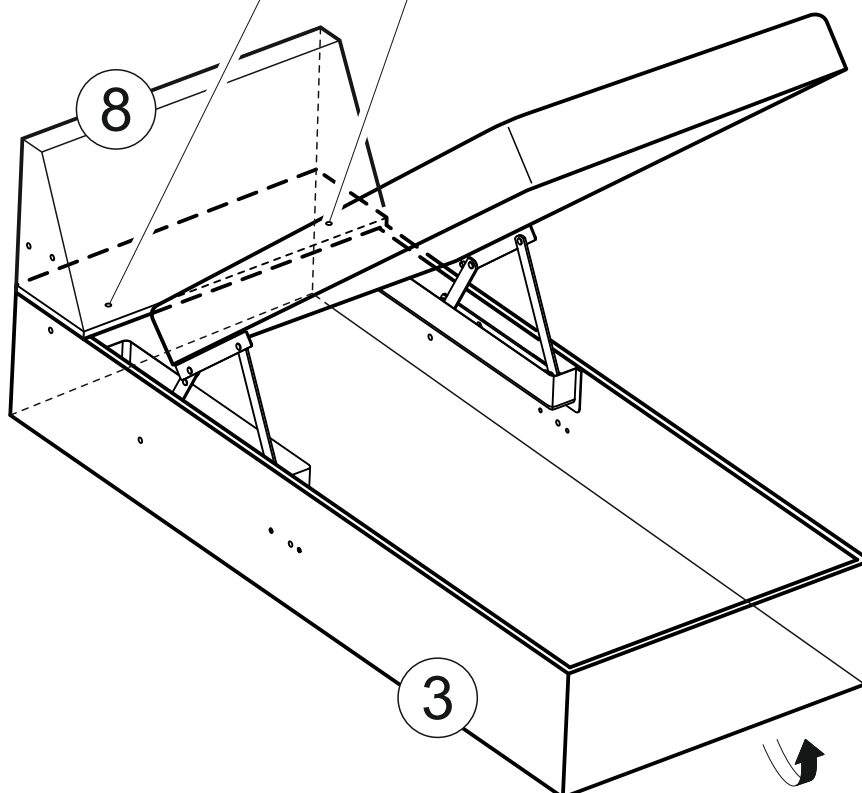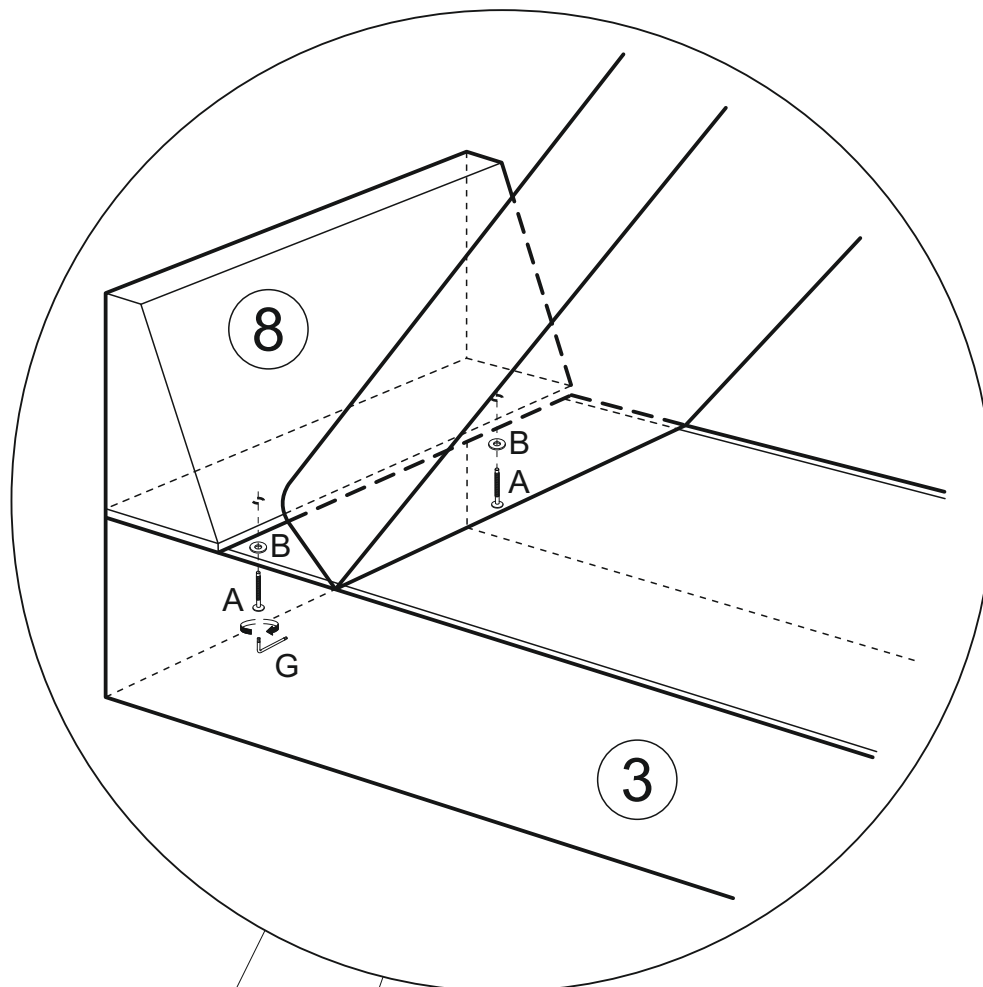




4a

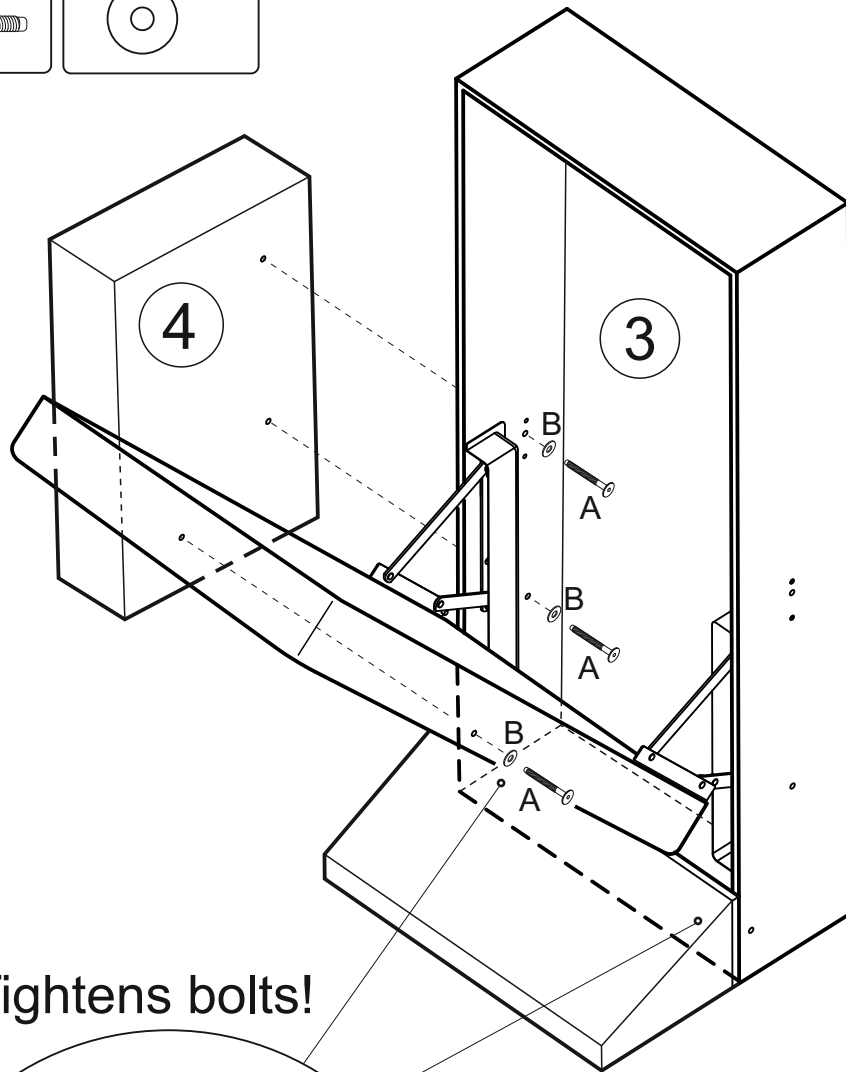


Tightens bolts!

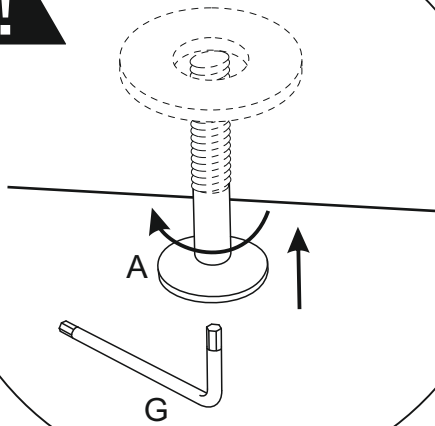





4b

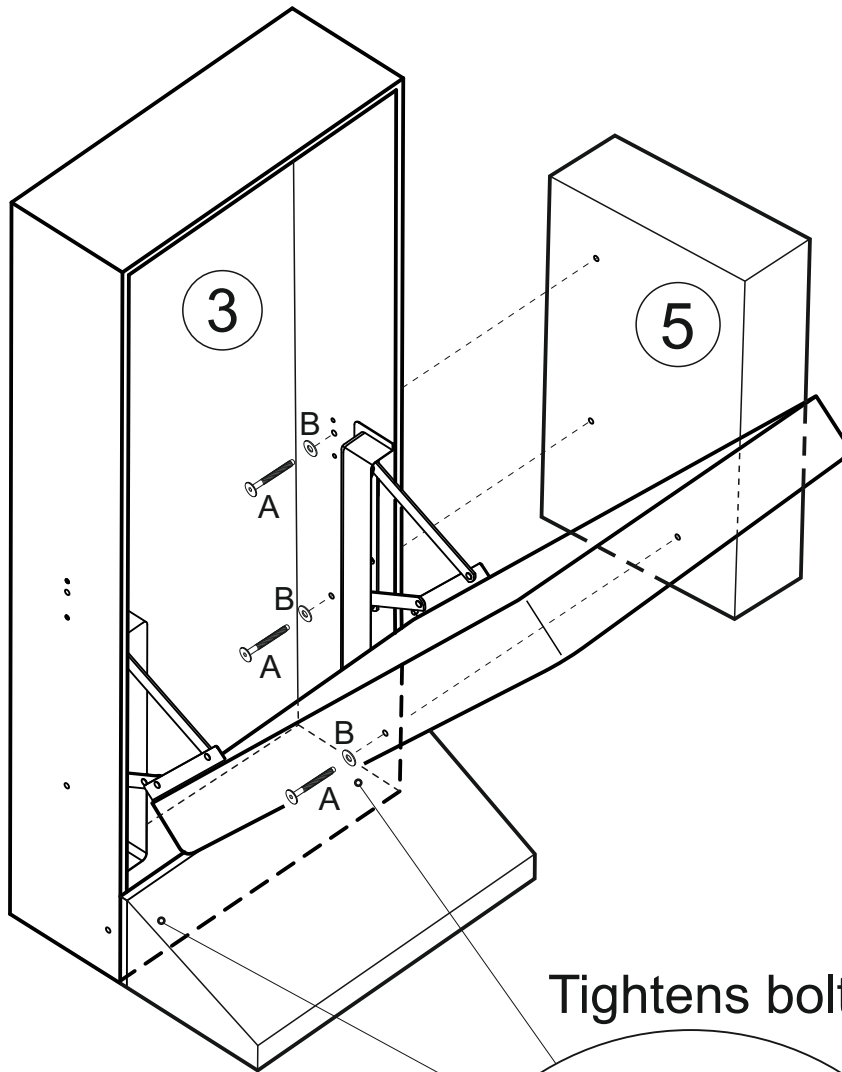





Tightens bolts!

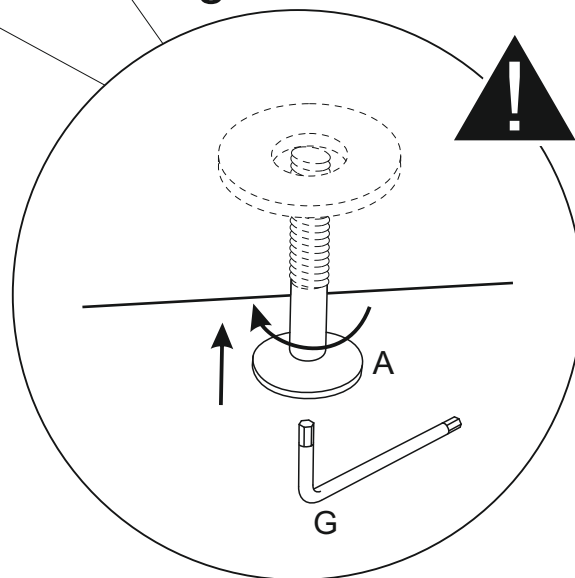






5a

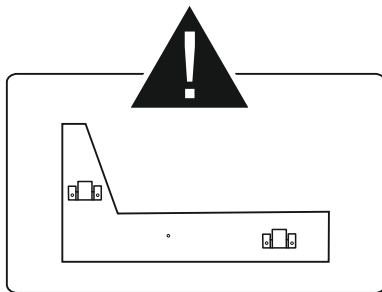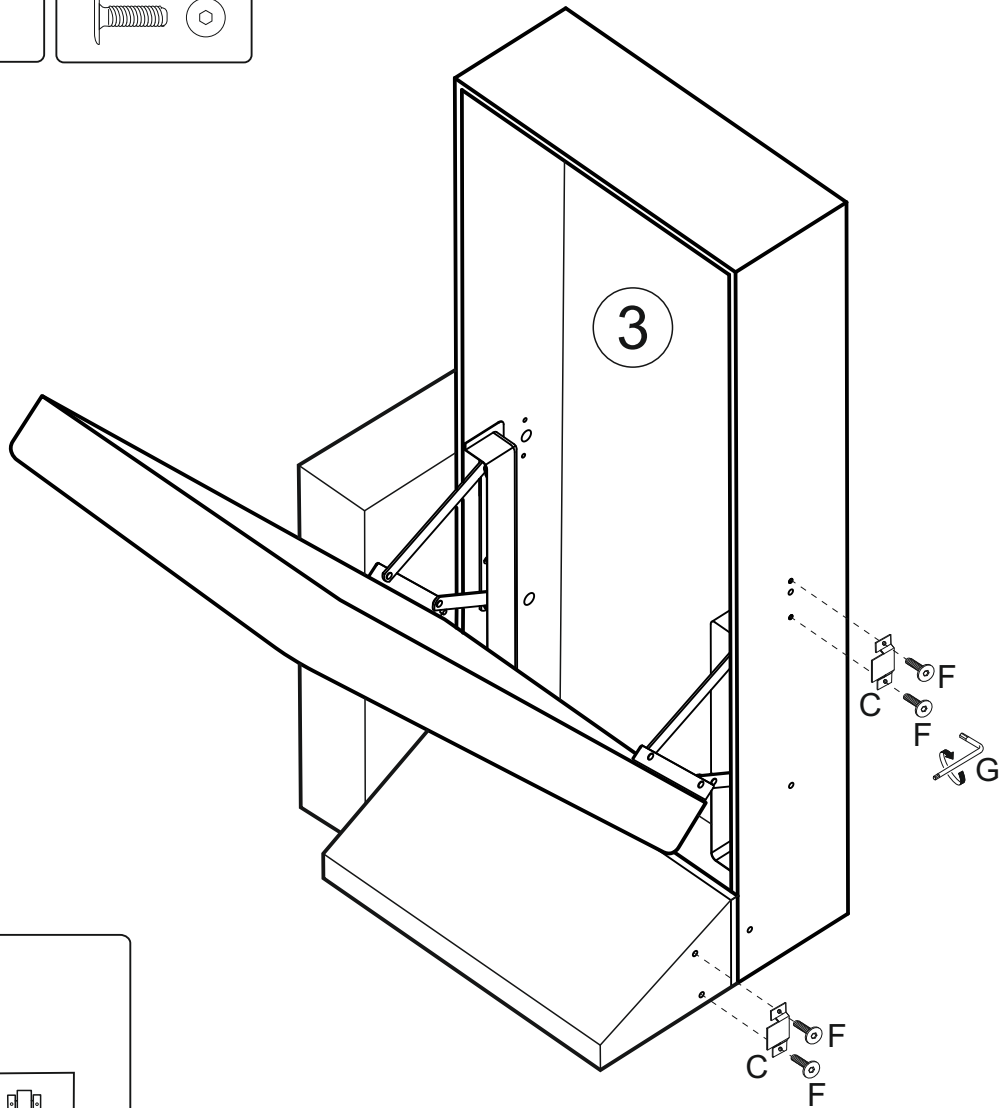






5b

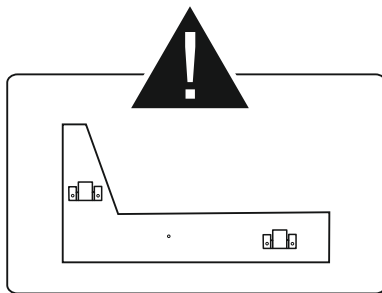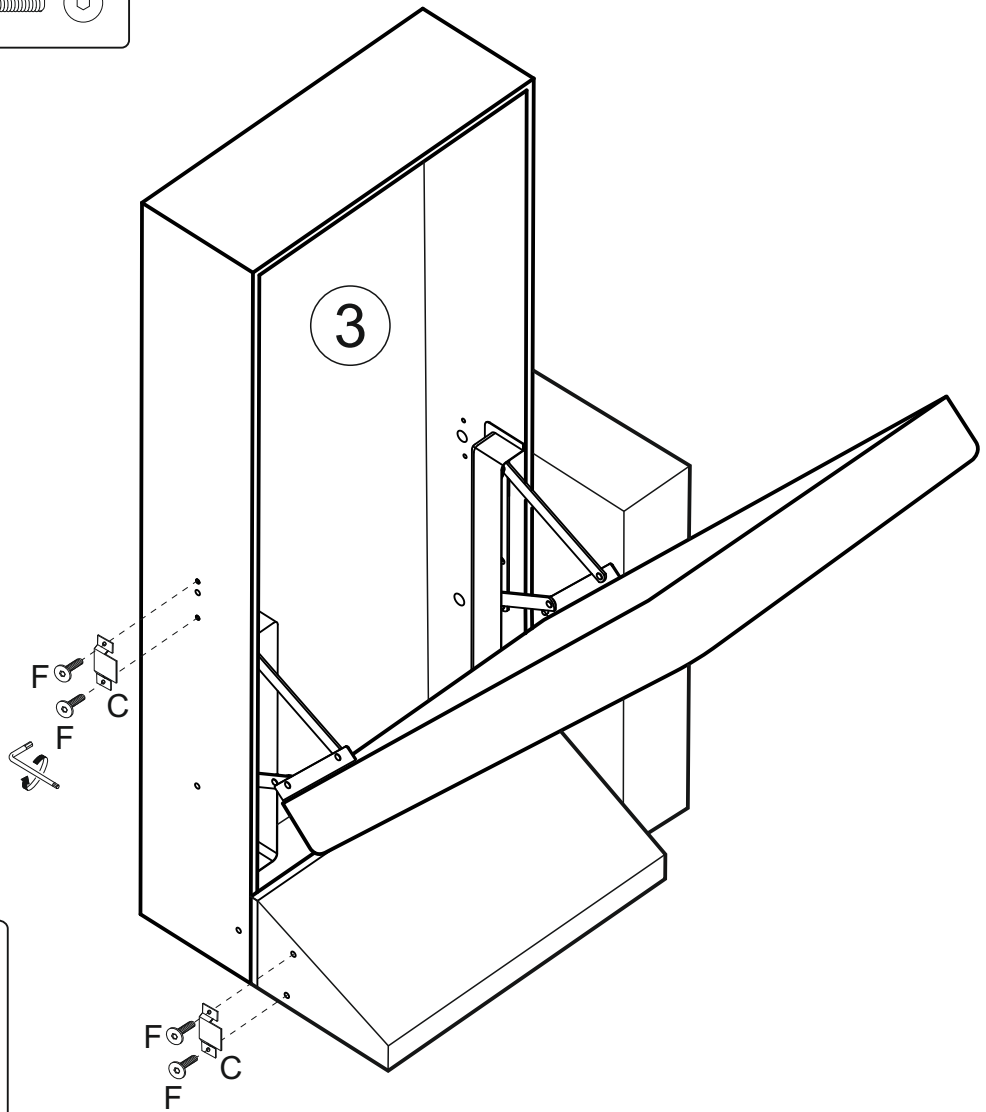



6a

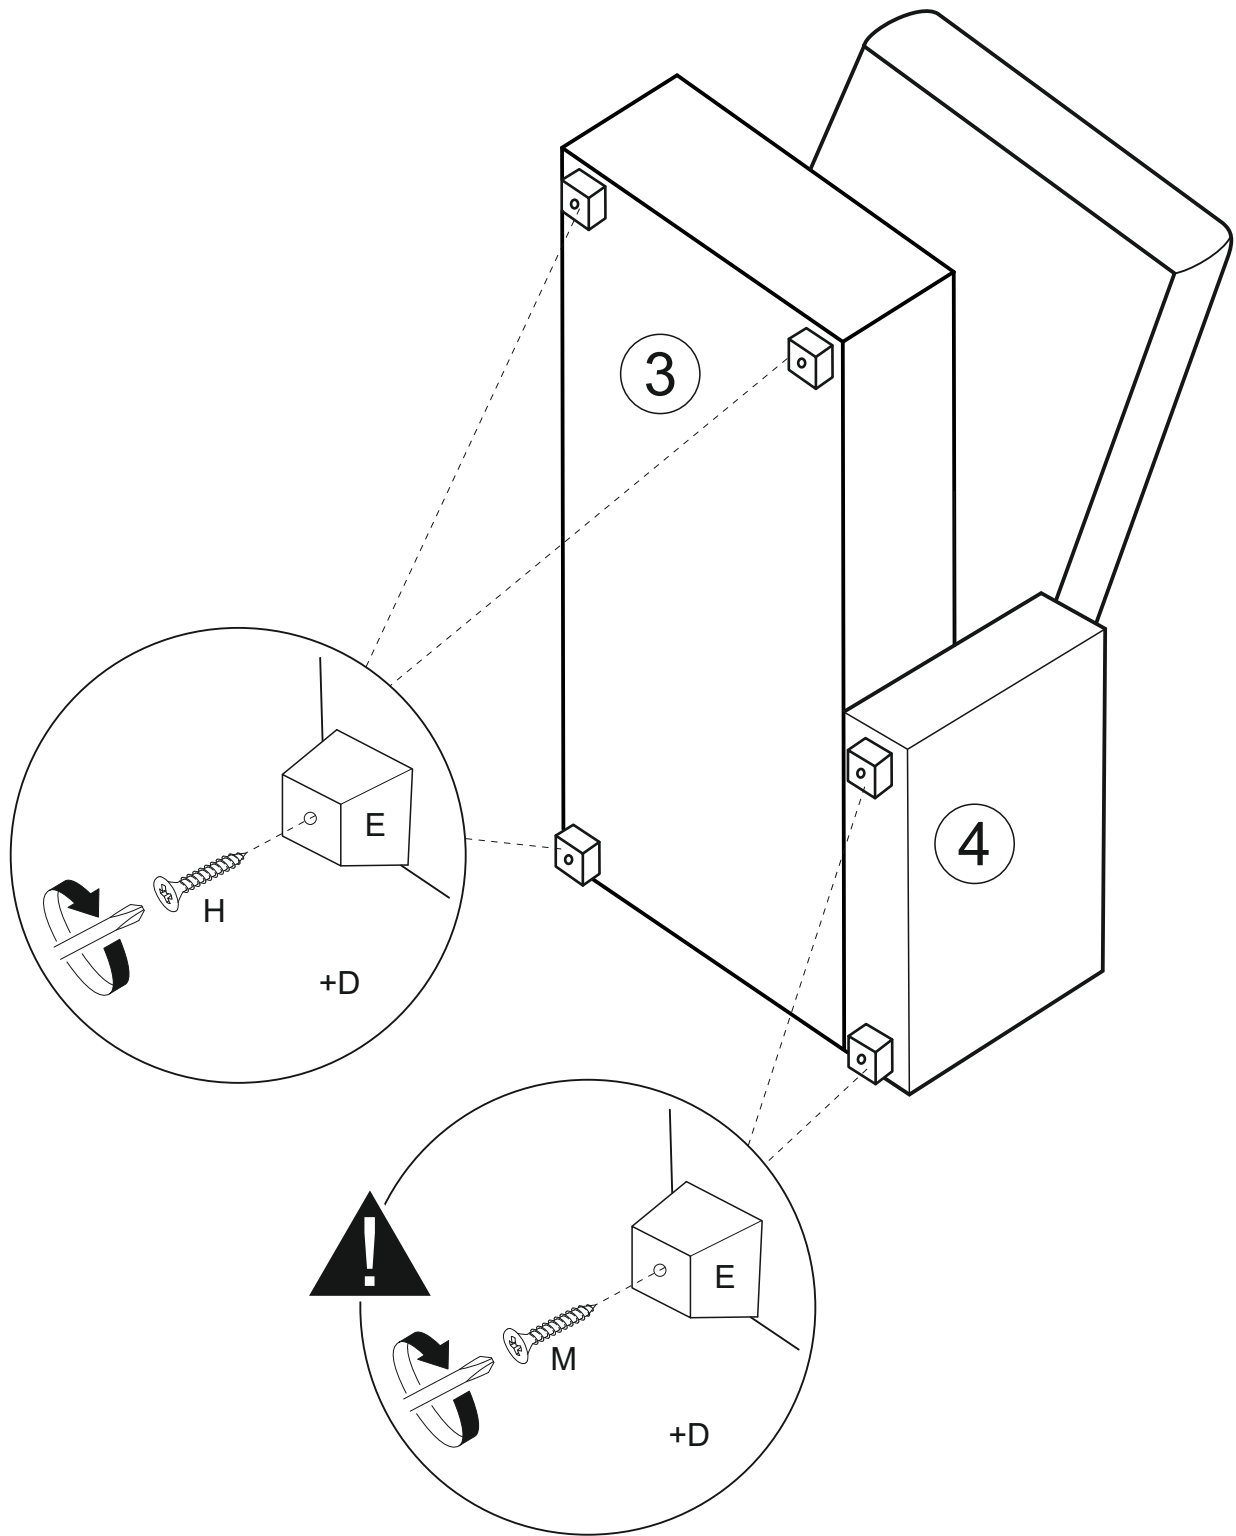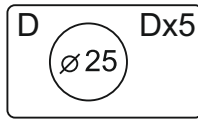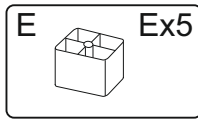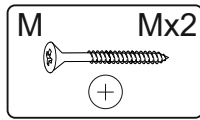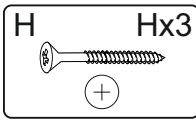





6b

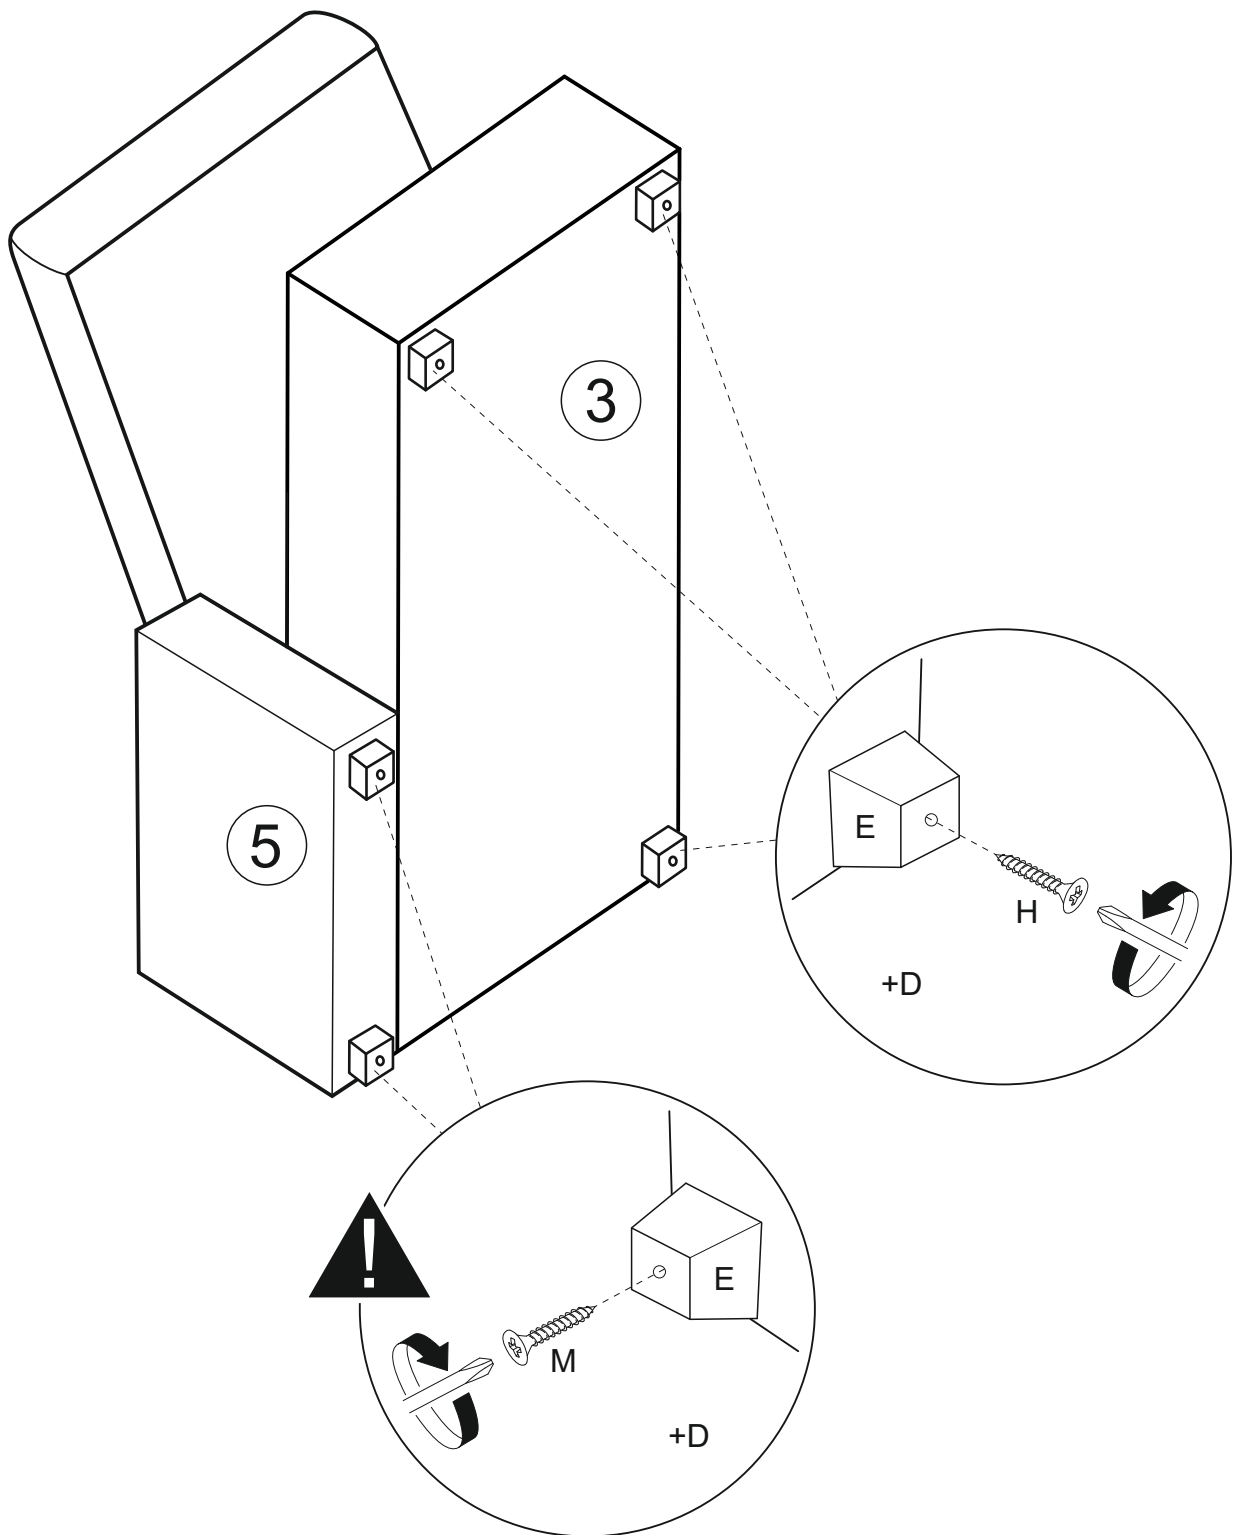



7a,b



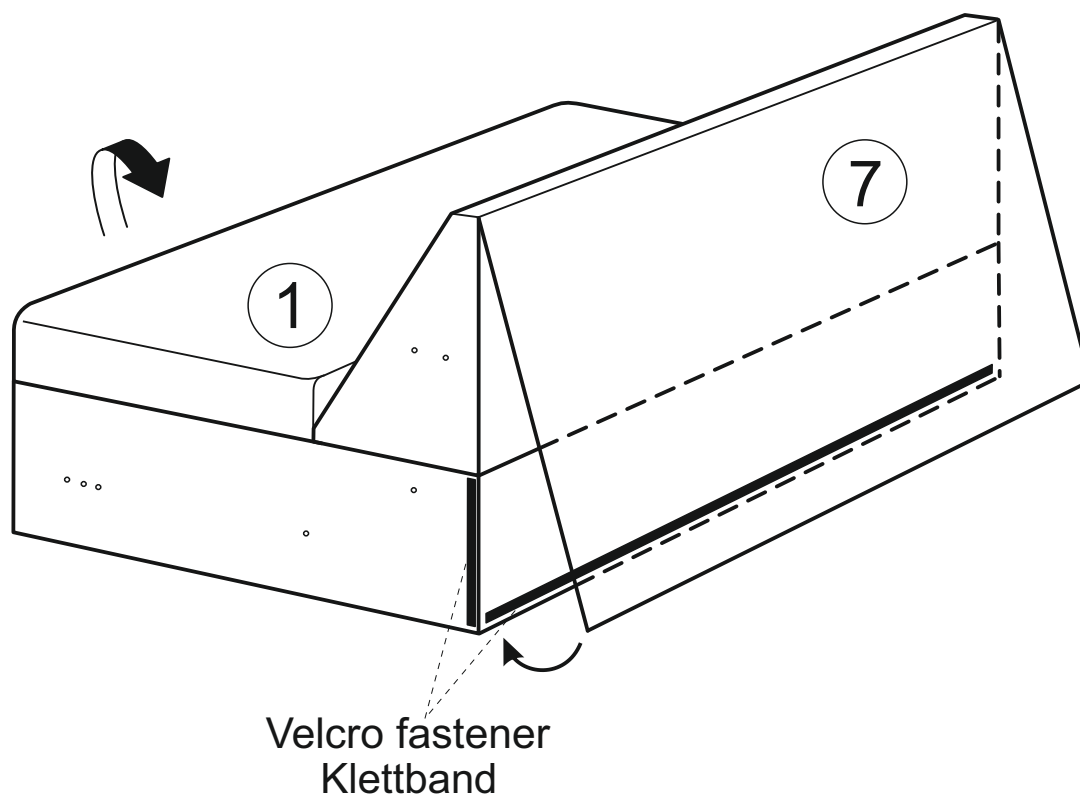
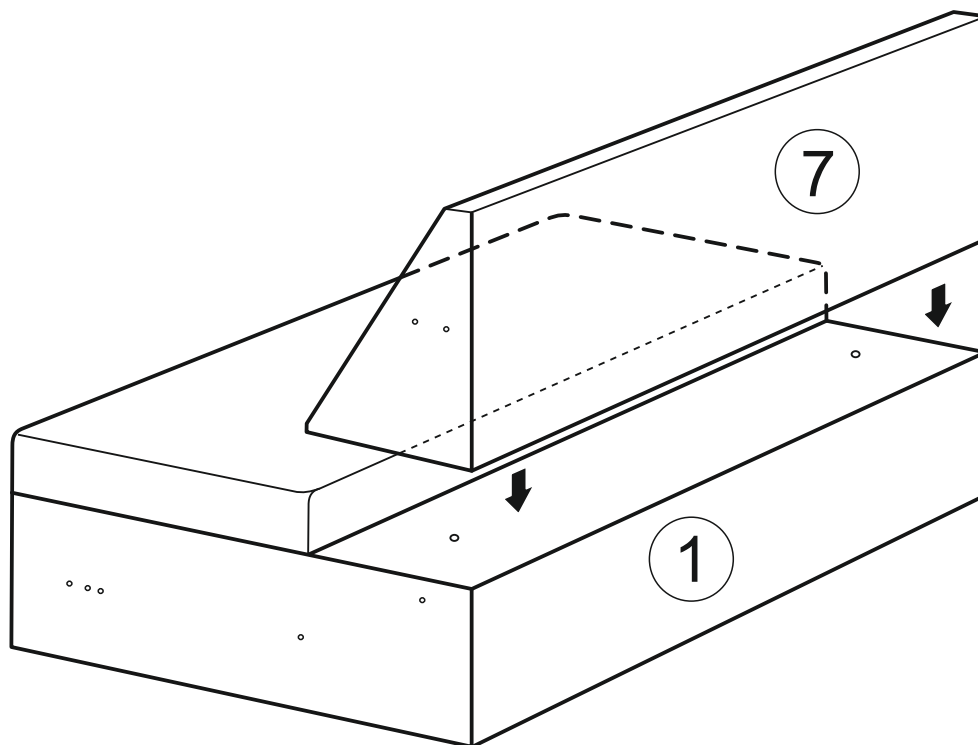


8a,b

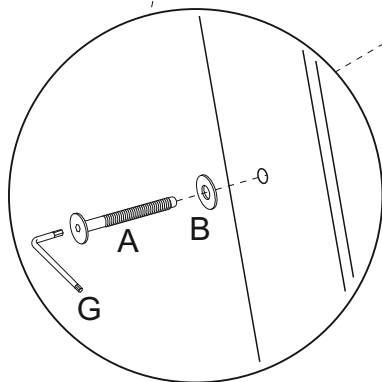
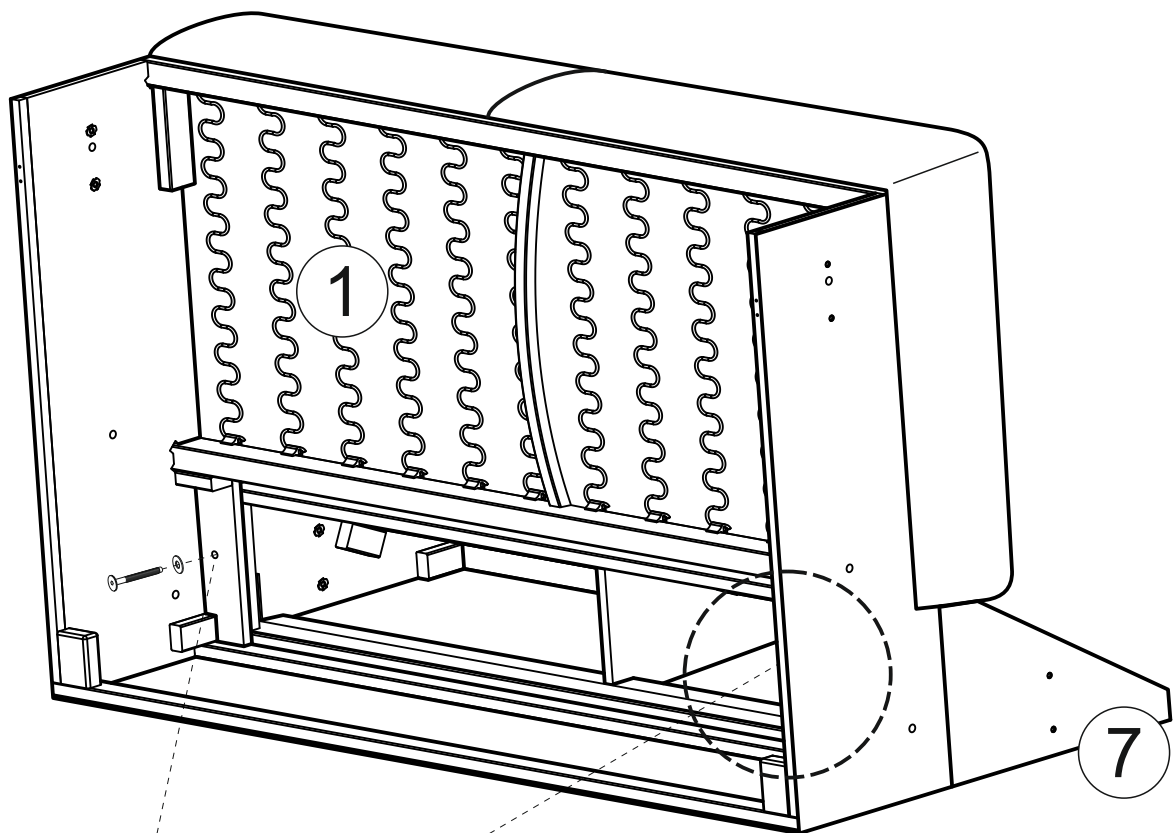




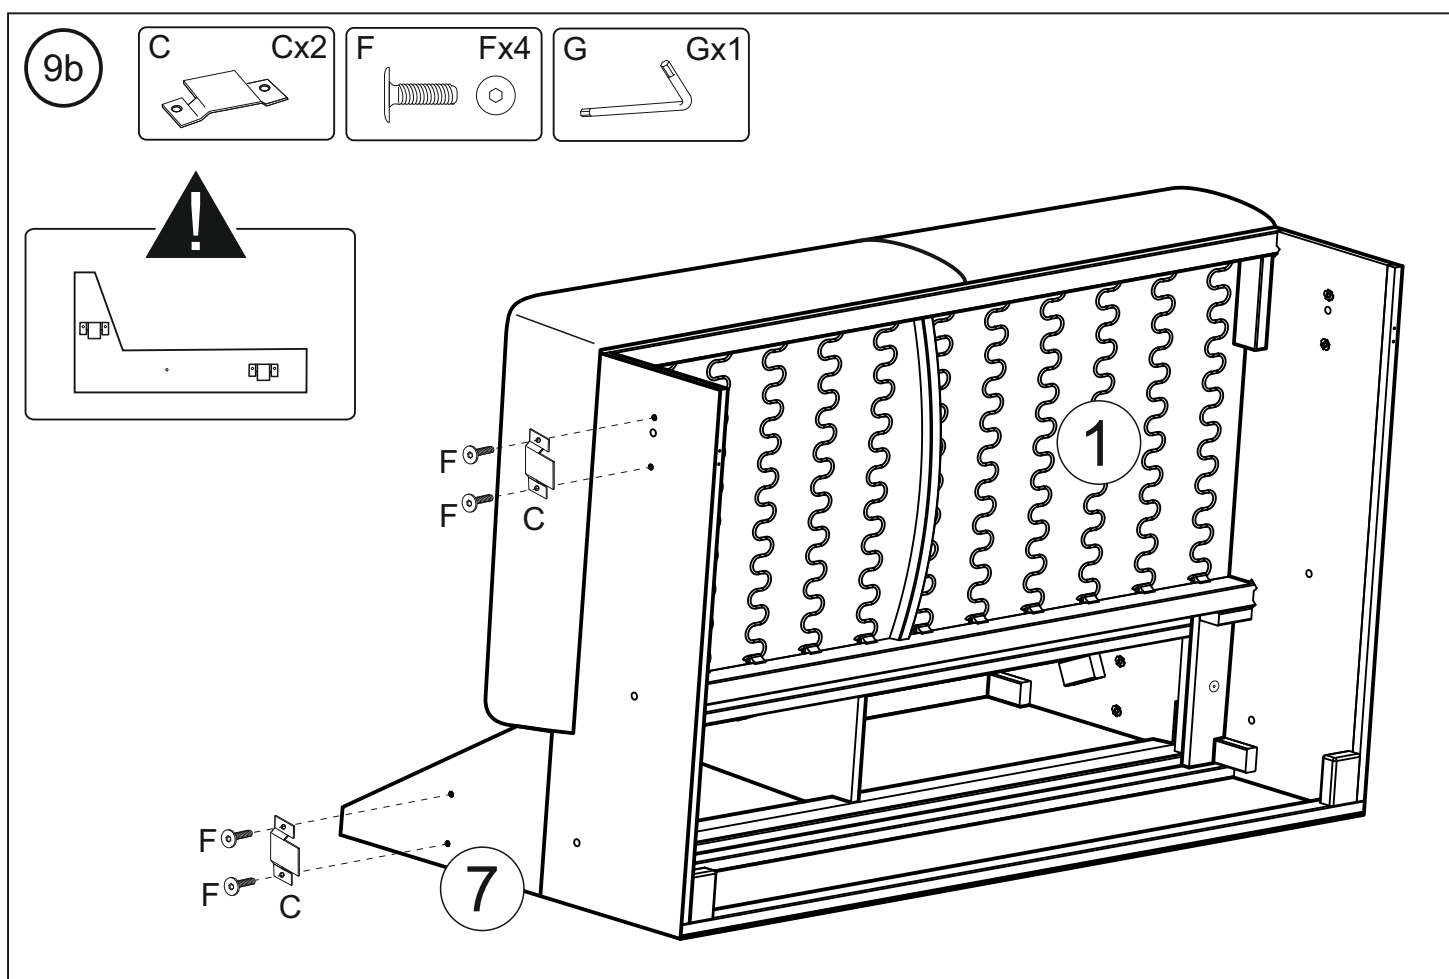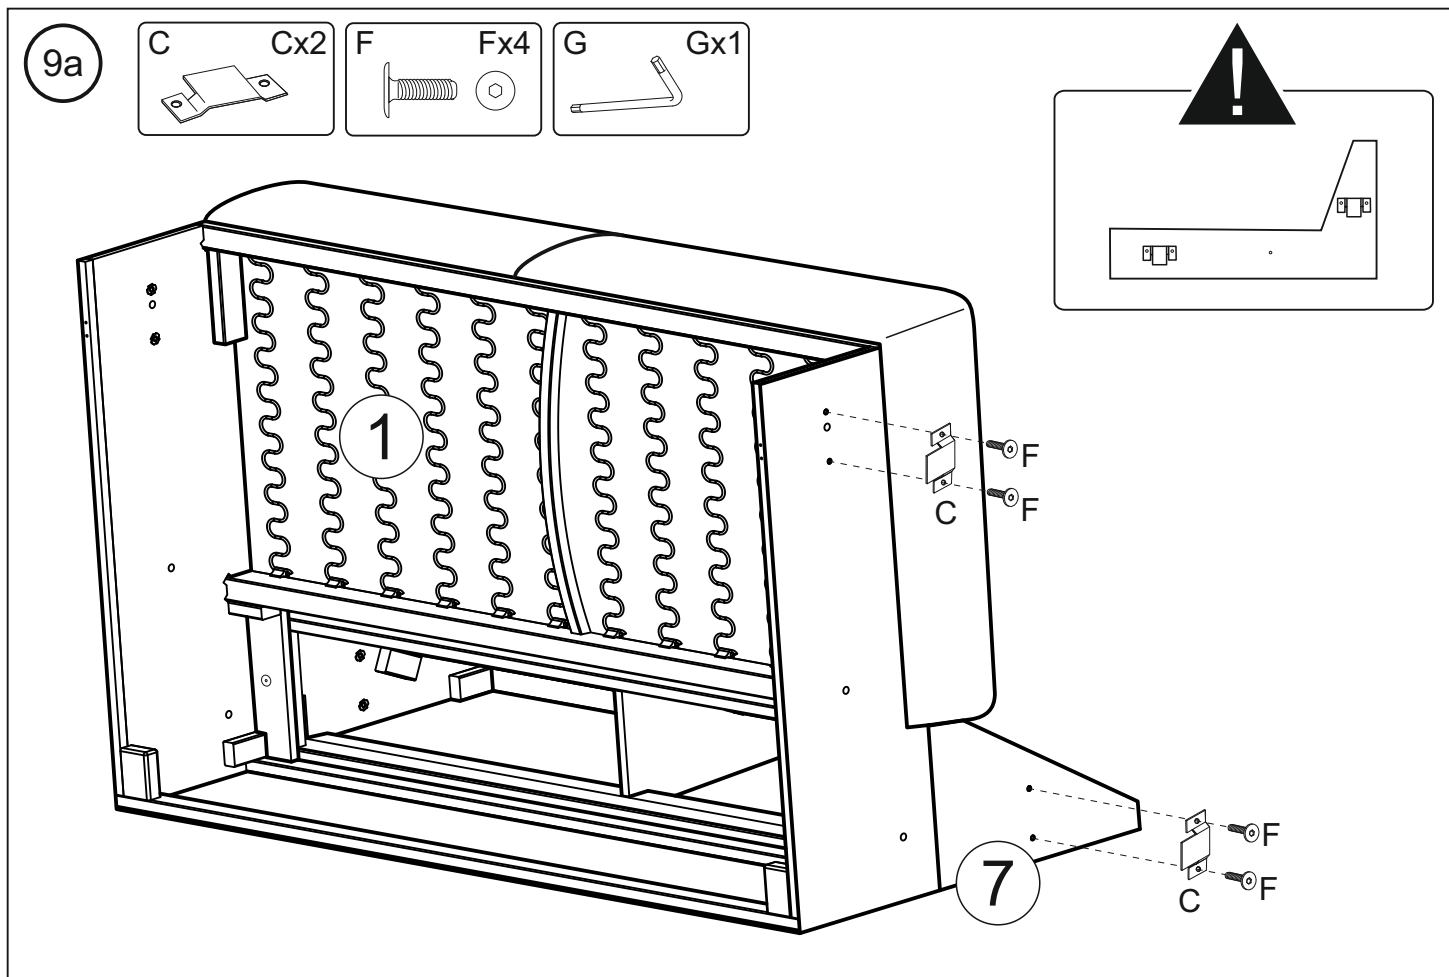



10a

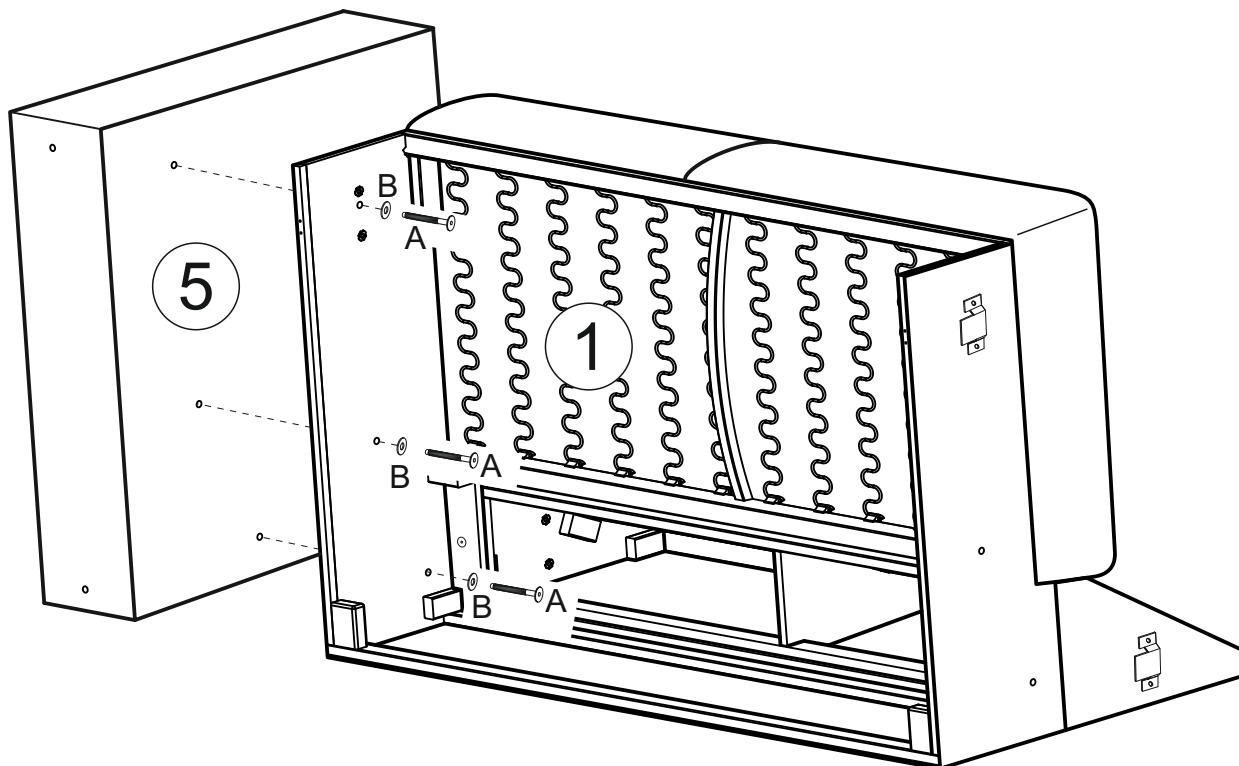



10b

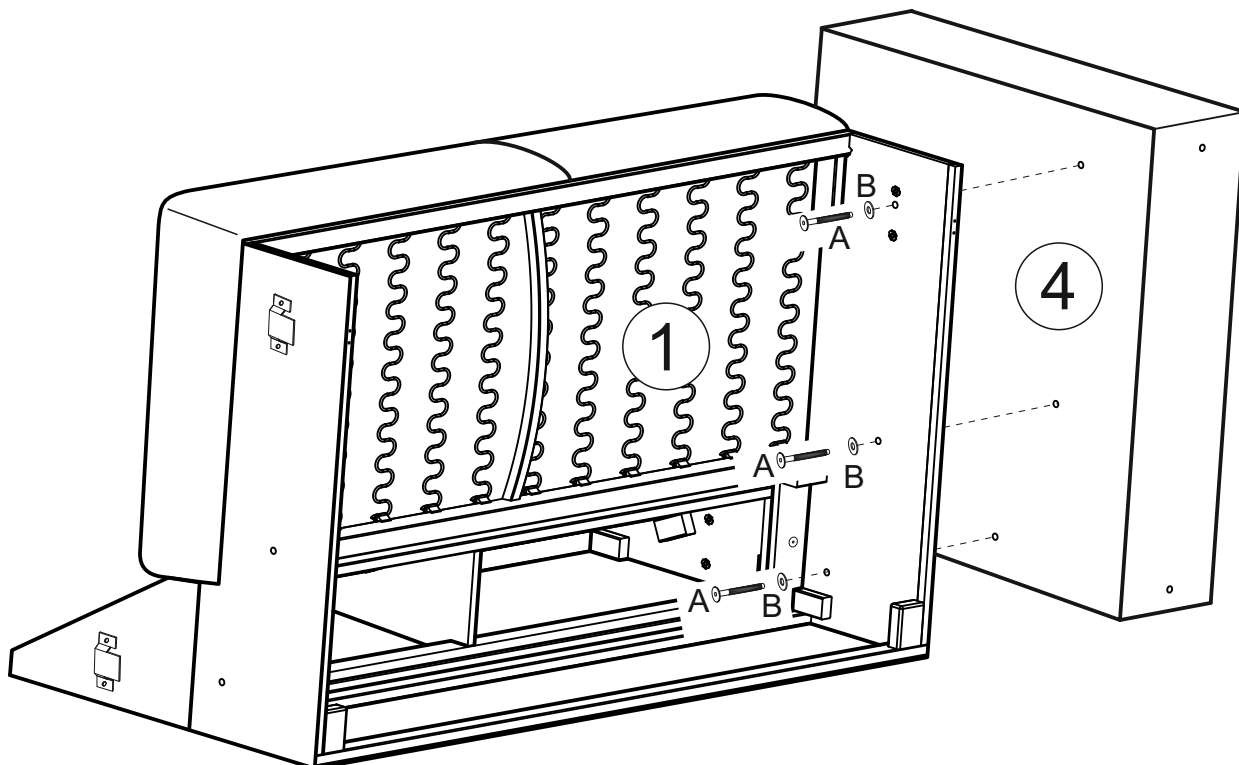






11a

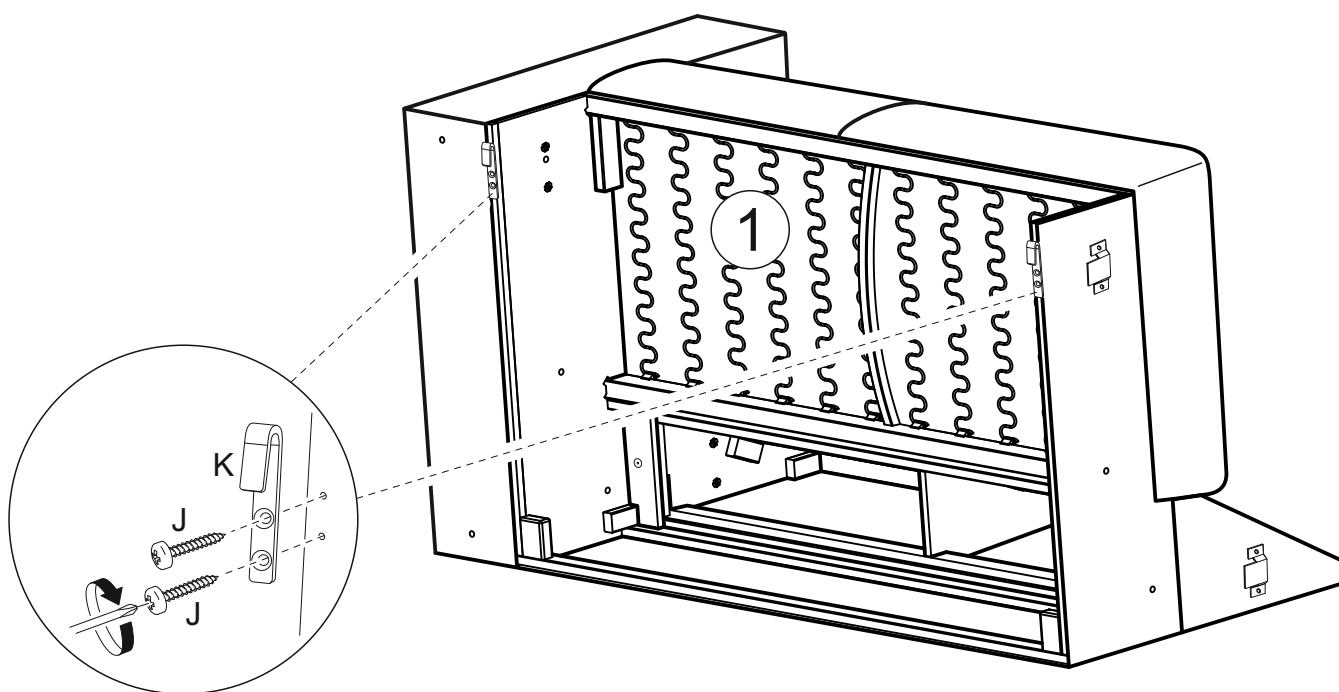






11b

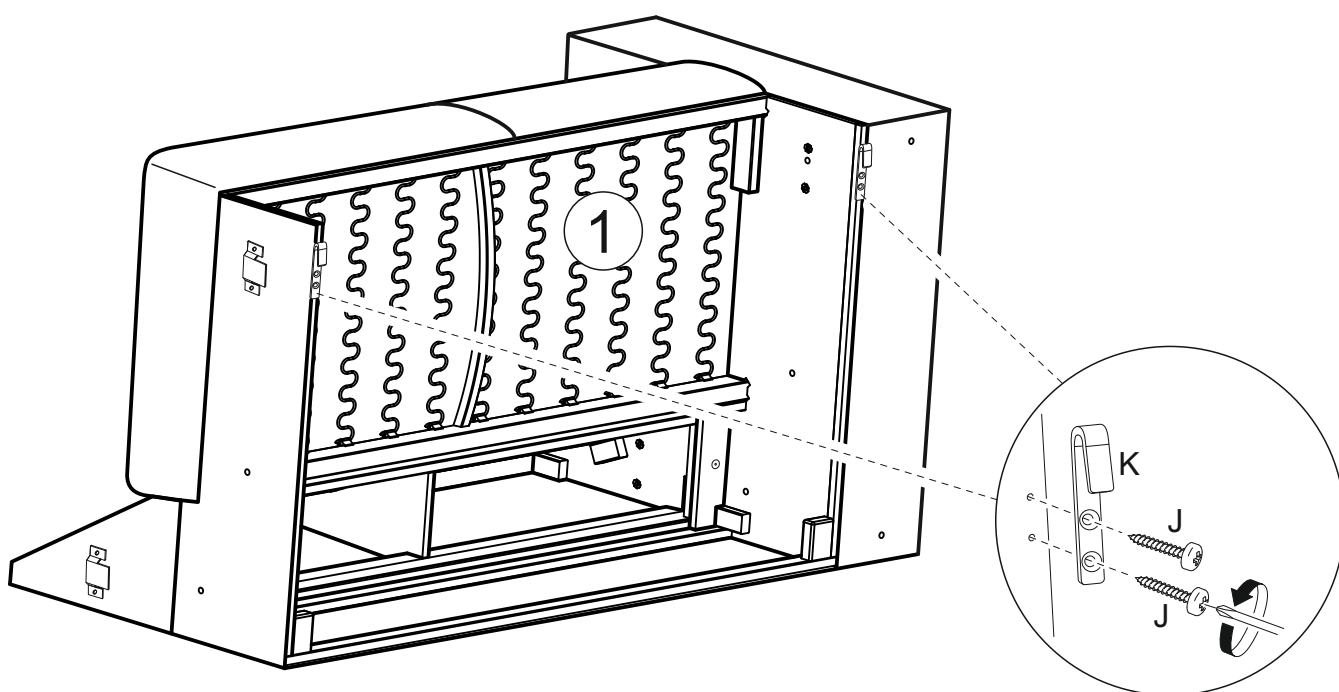



12a

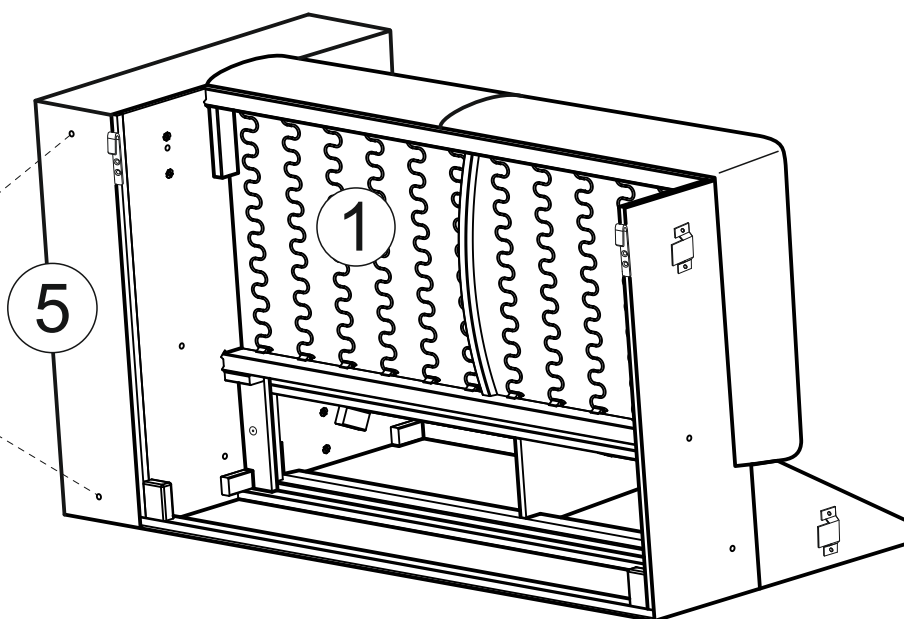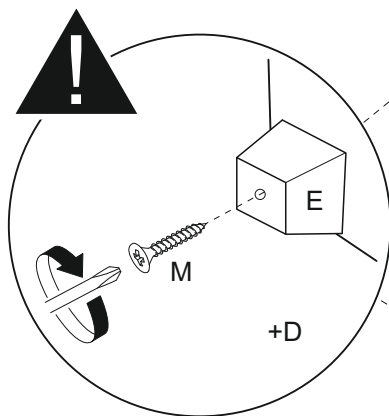



12b

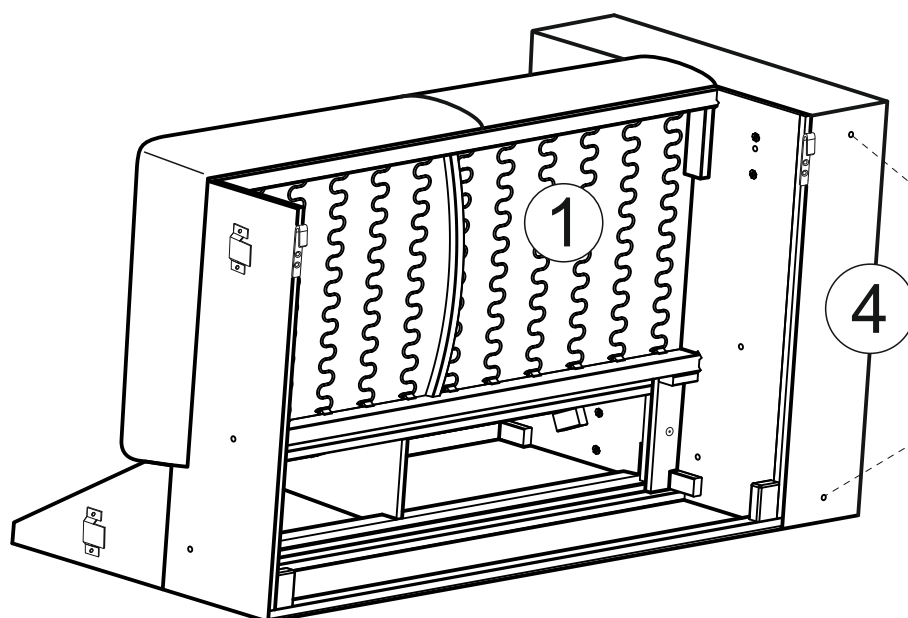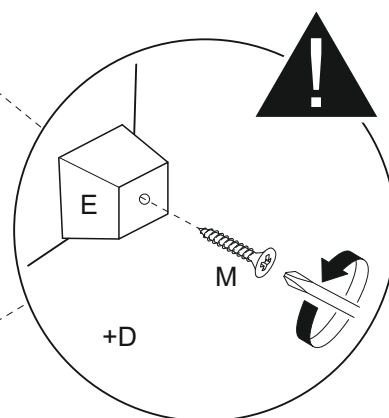


13a,b

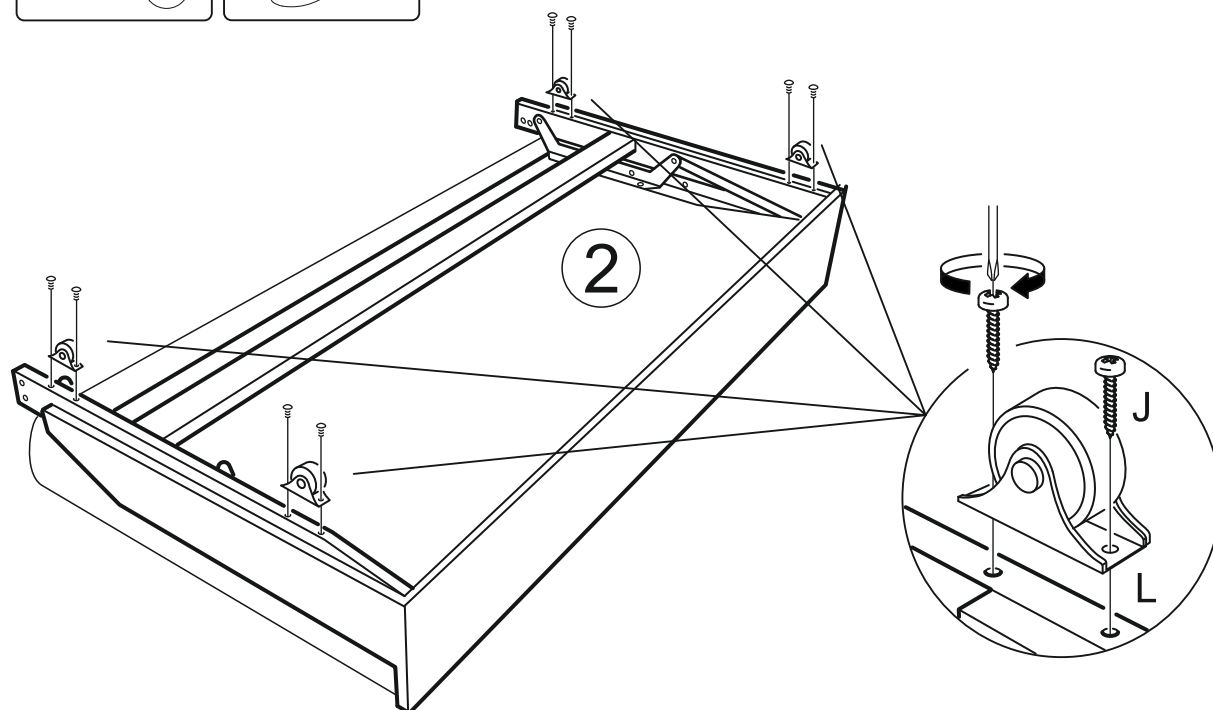


14a,b

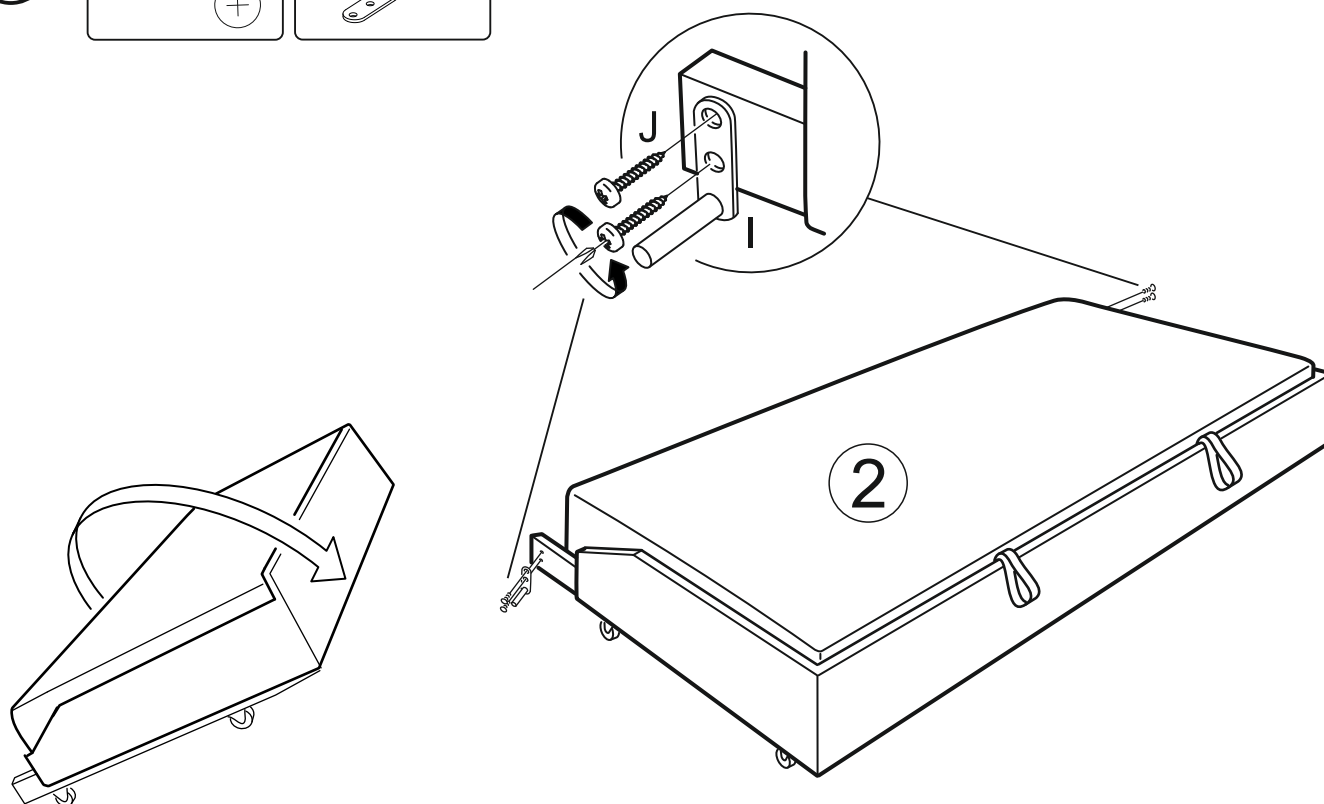






15a




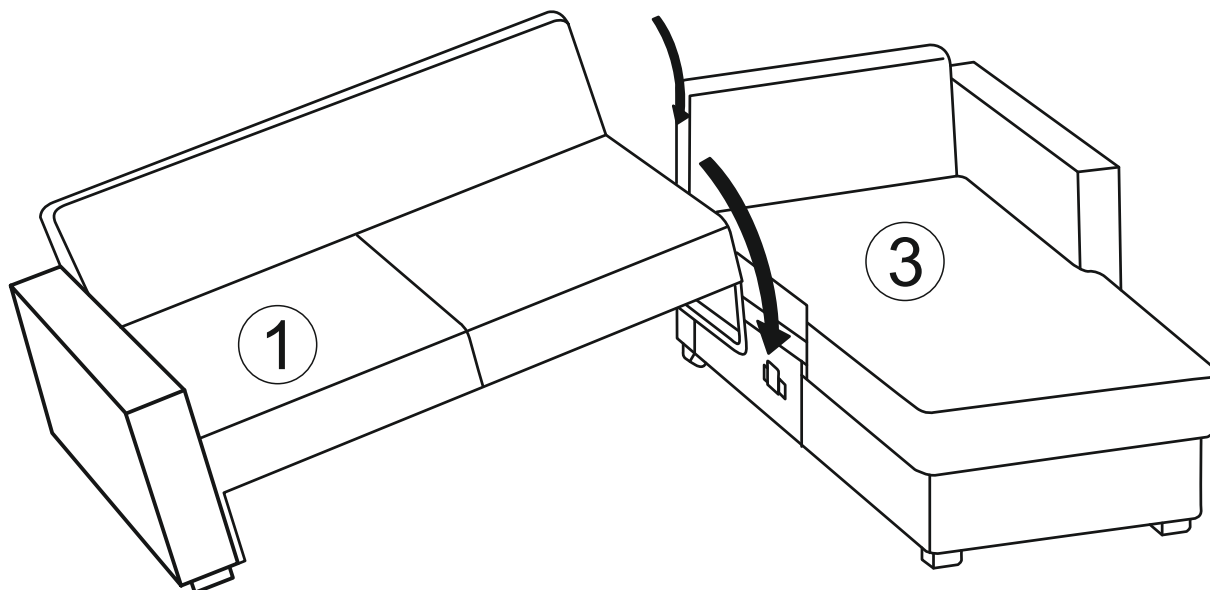


15b

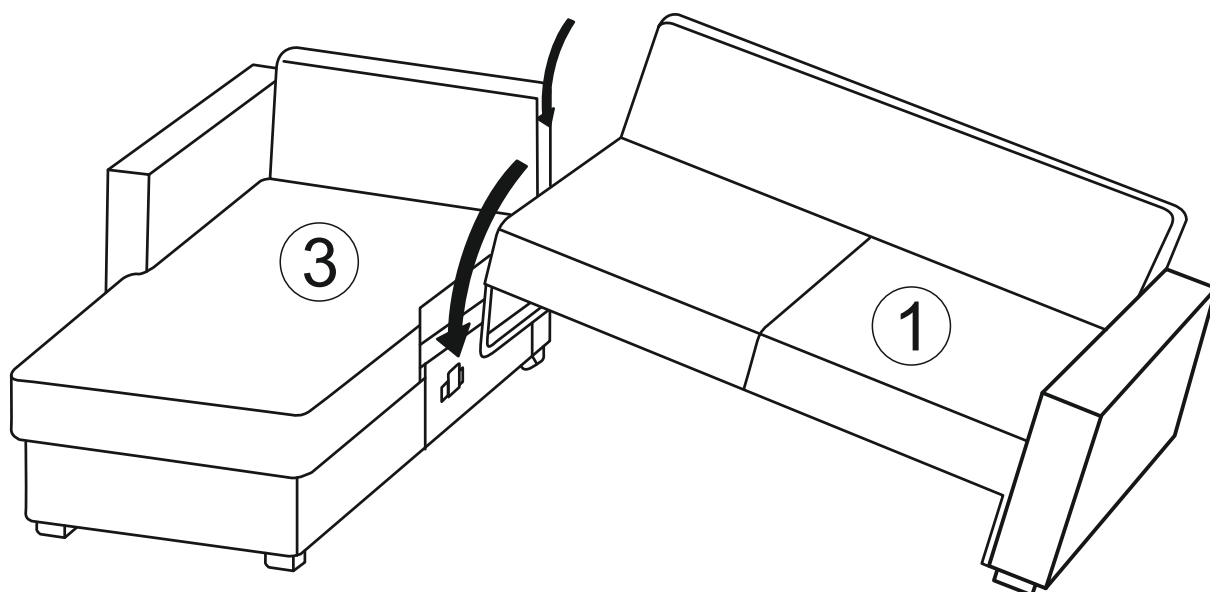

16a,b

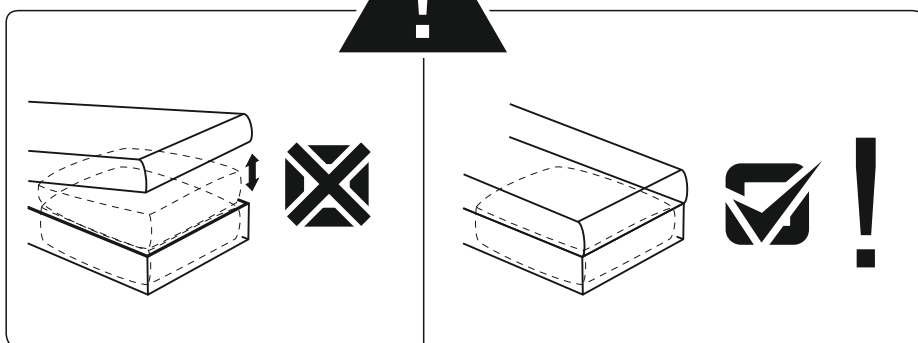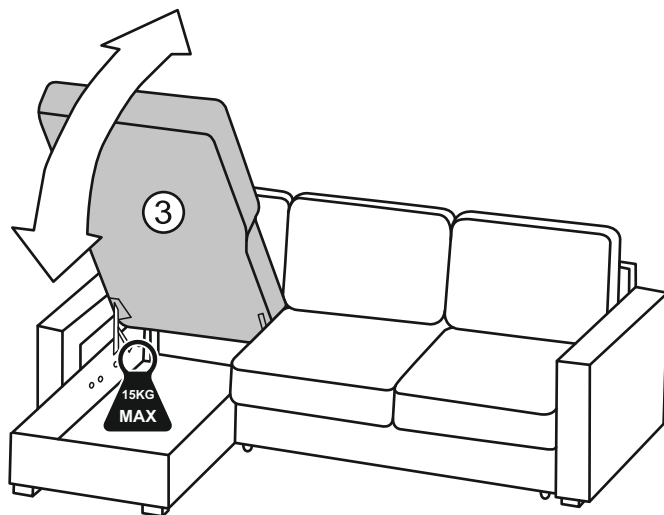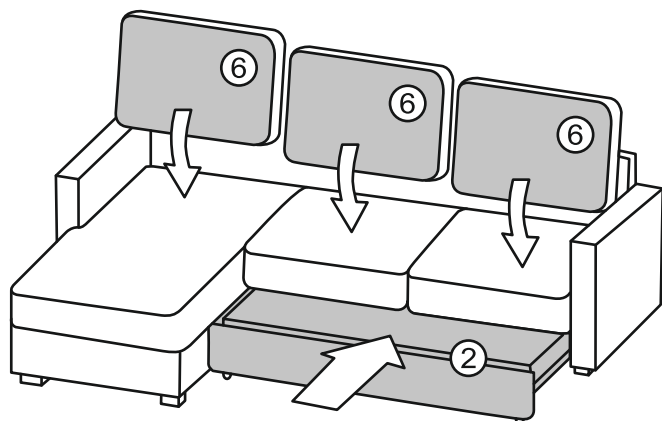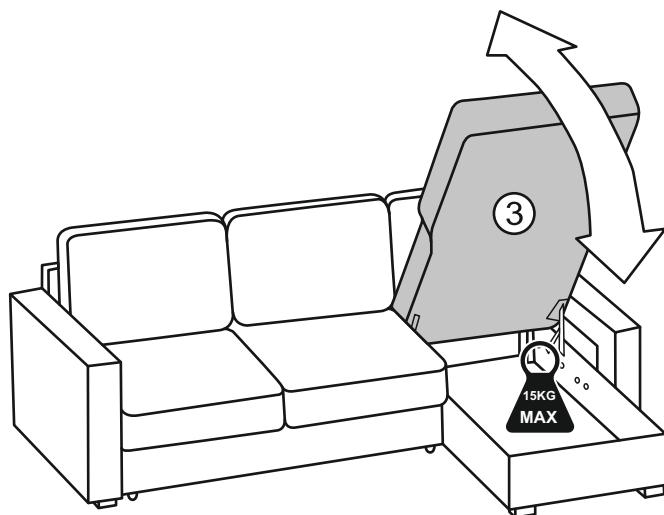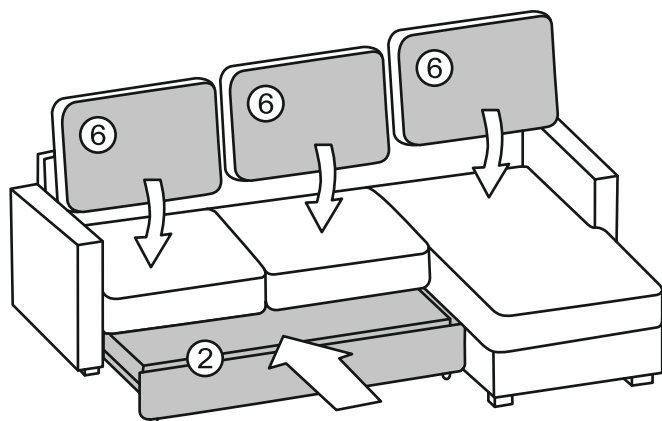

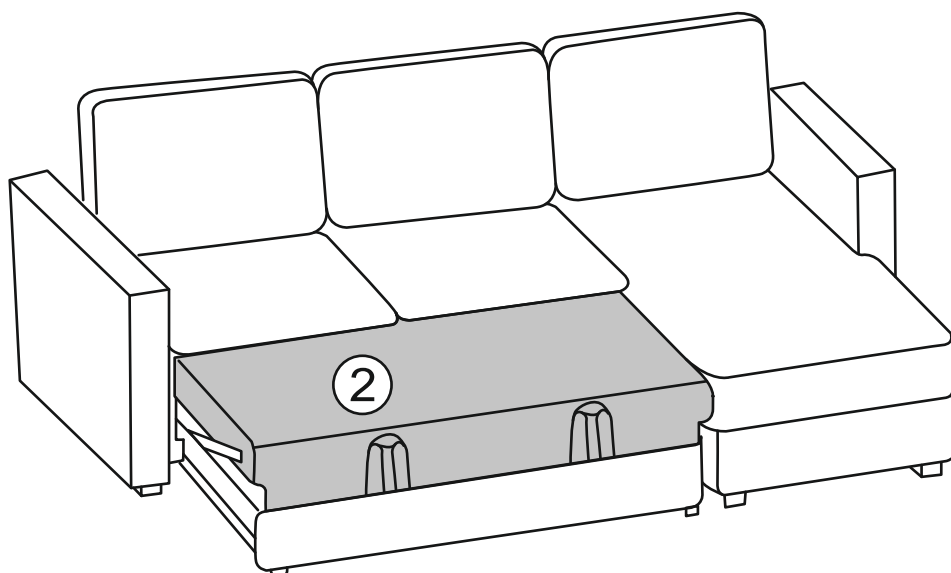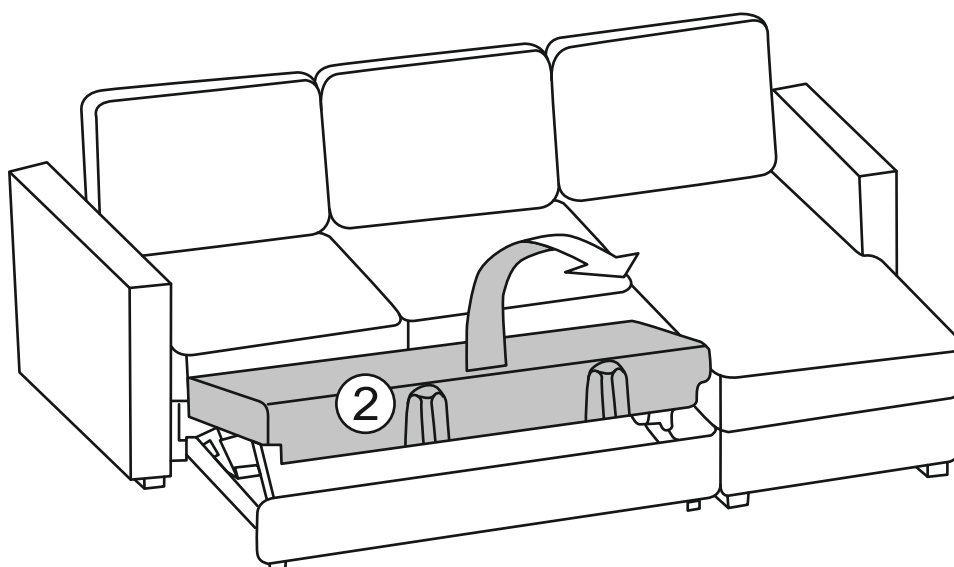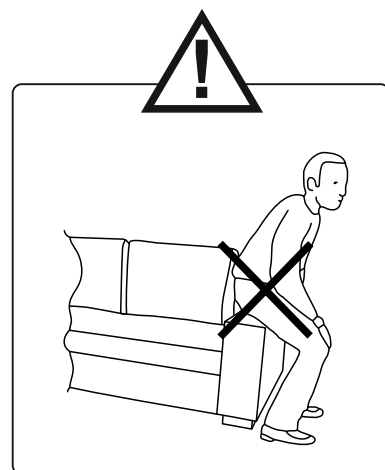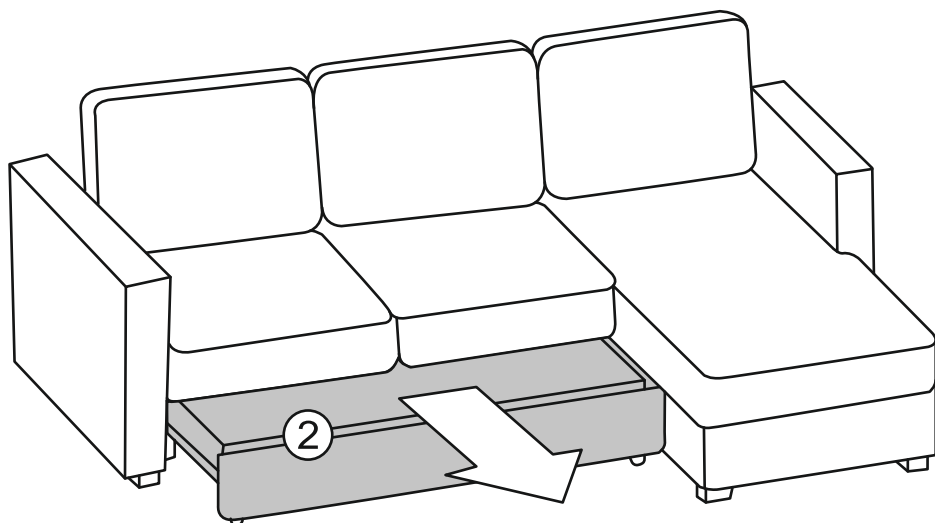

WARNING!

