
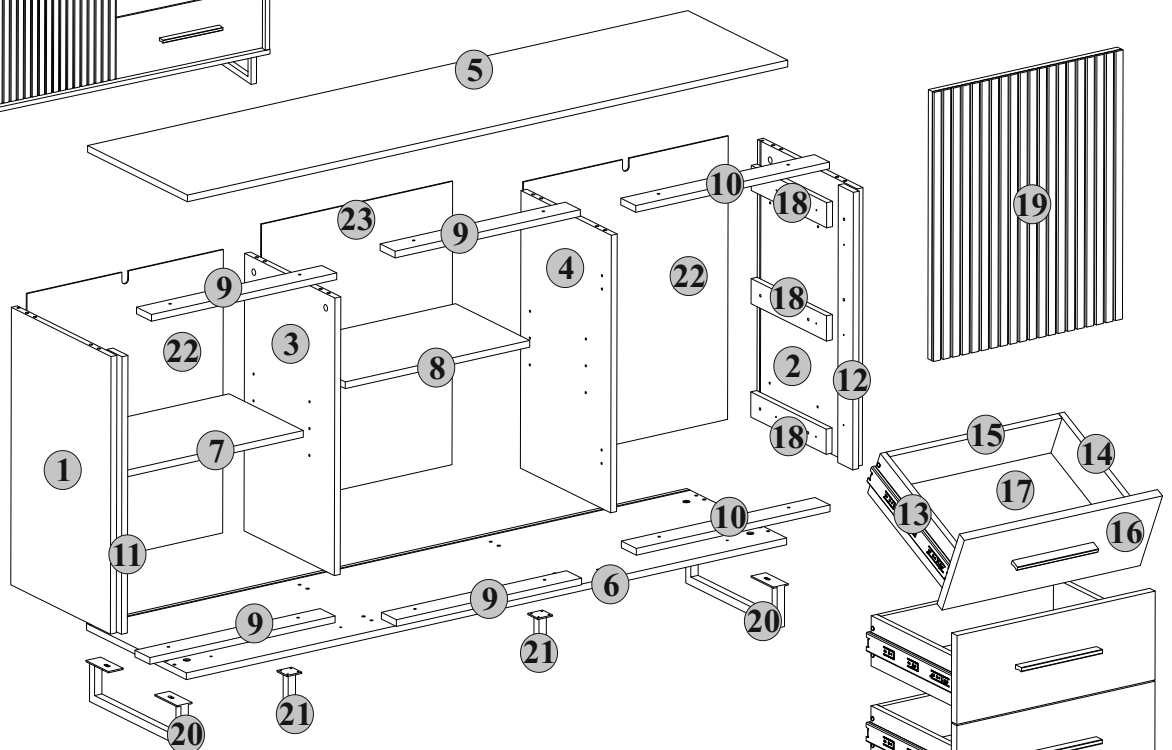
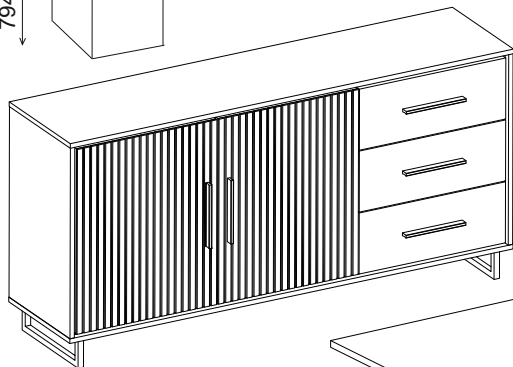





“3411”

versionsnummer: 02.08.2023


Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.

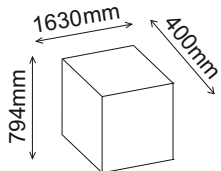


B5

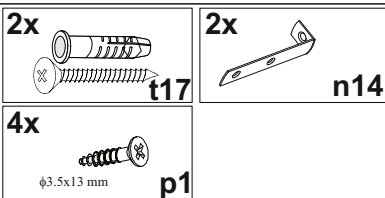


B1

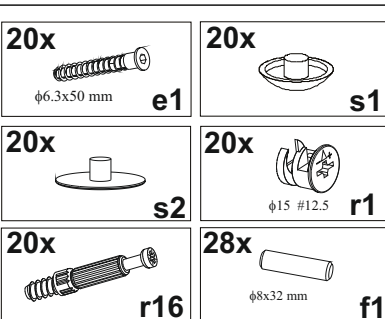


B2

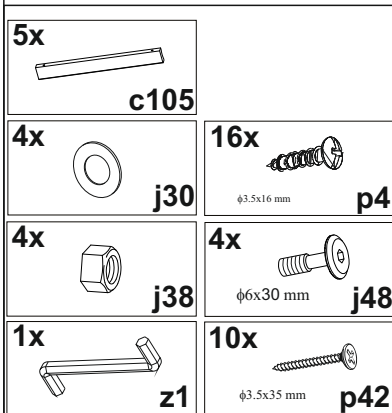














B3

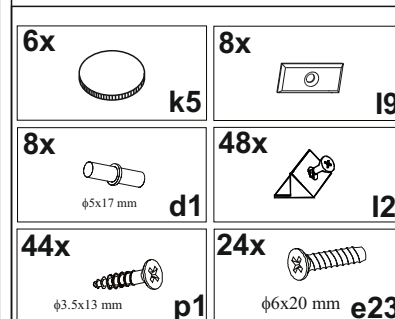

B4



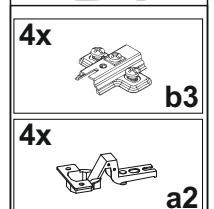


1

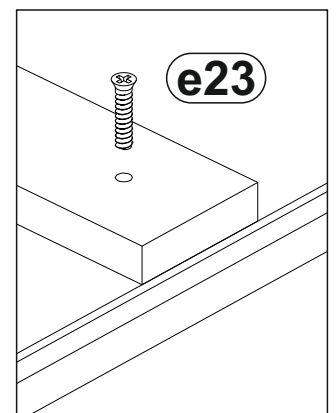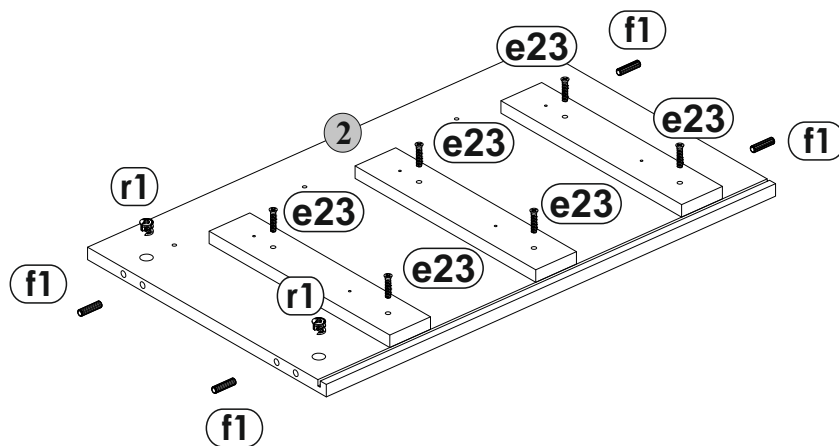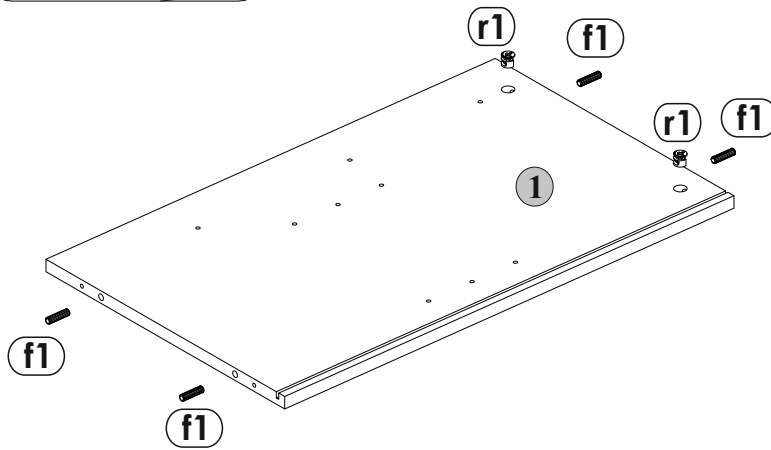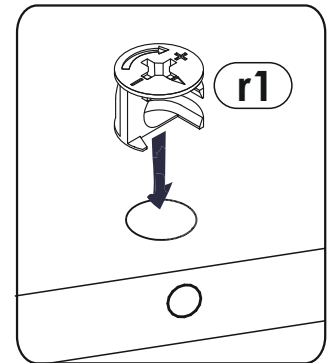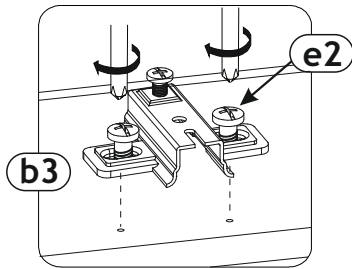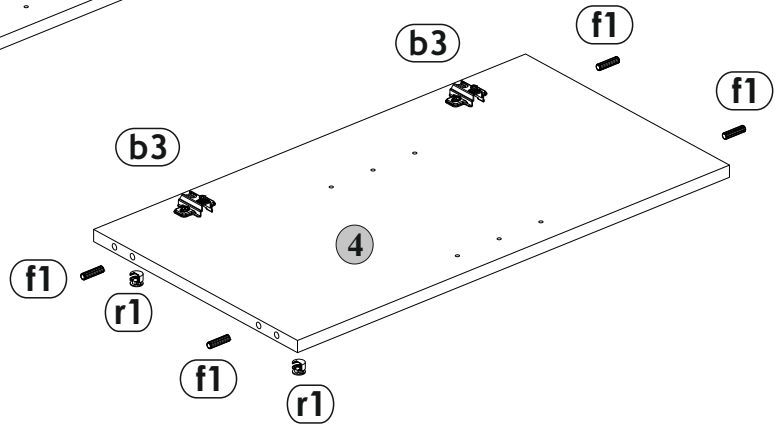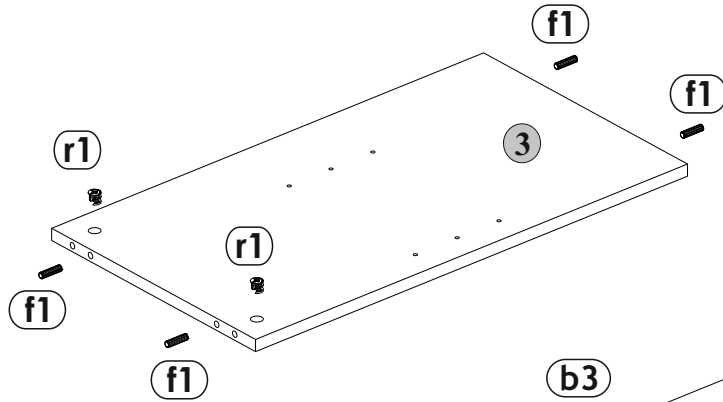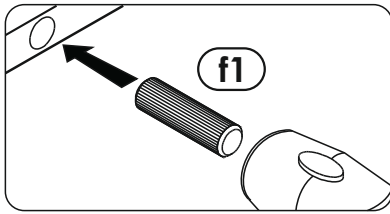


2


2

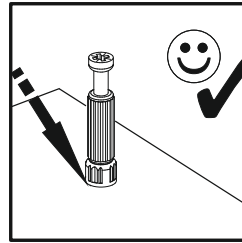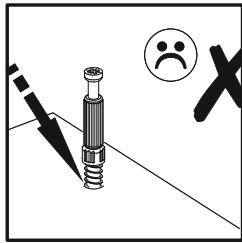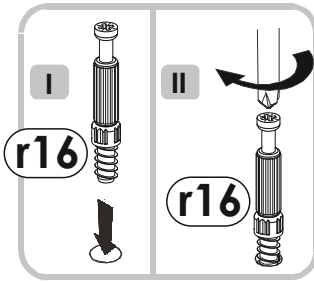

8x
r16

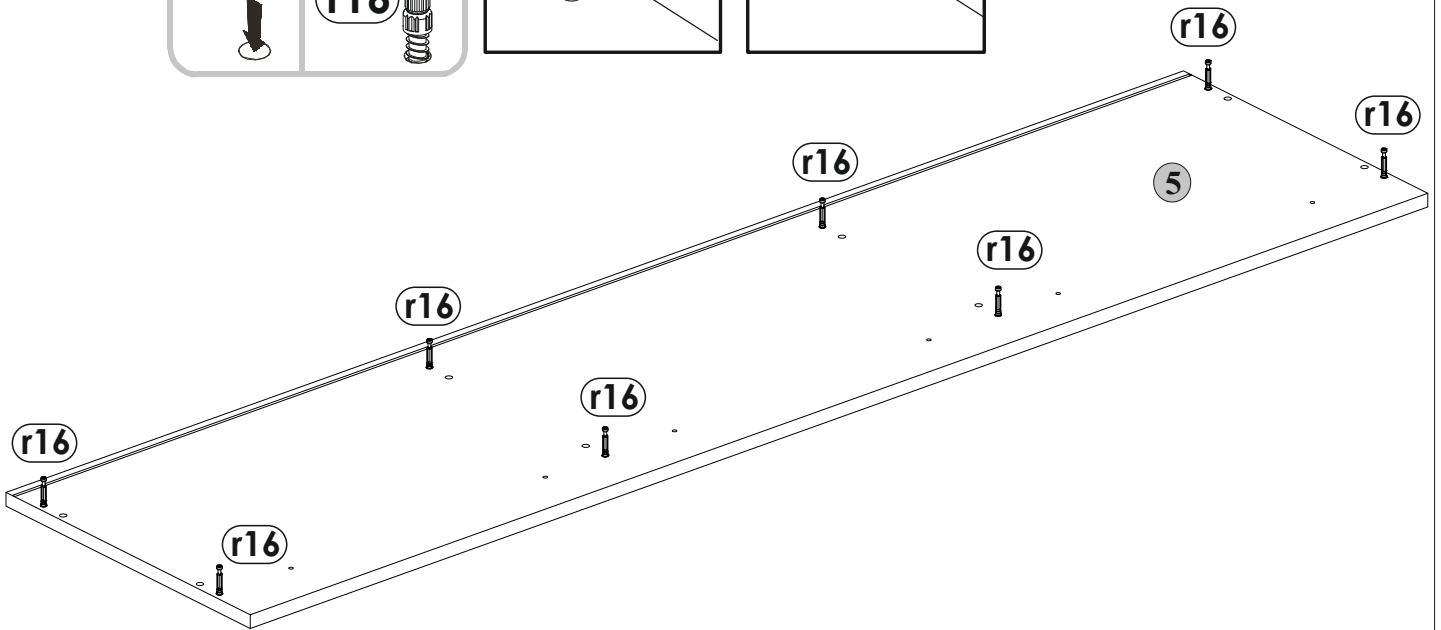


3

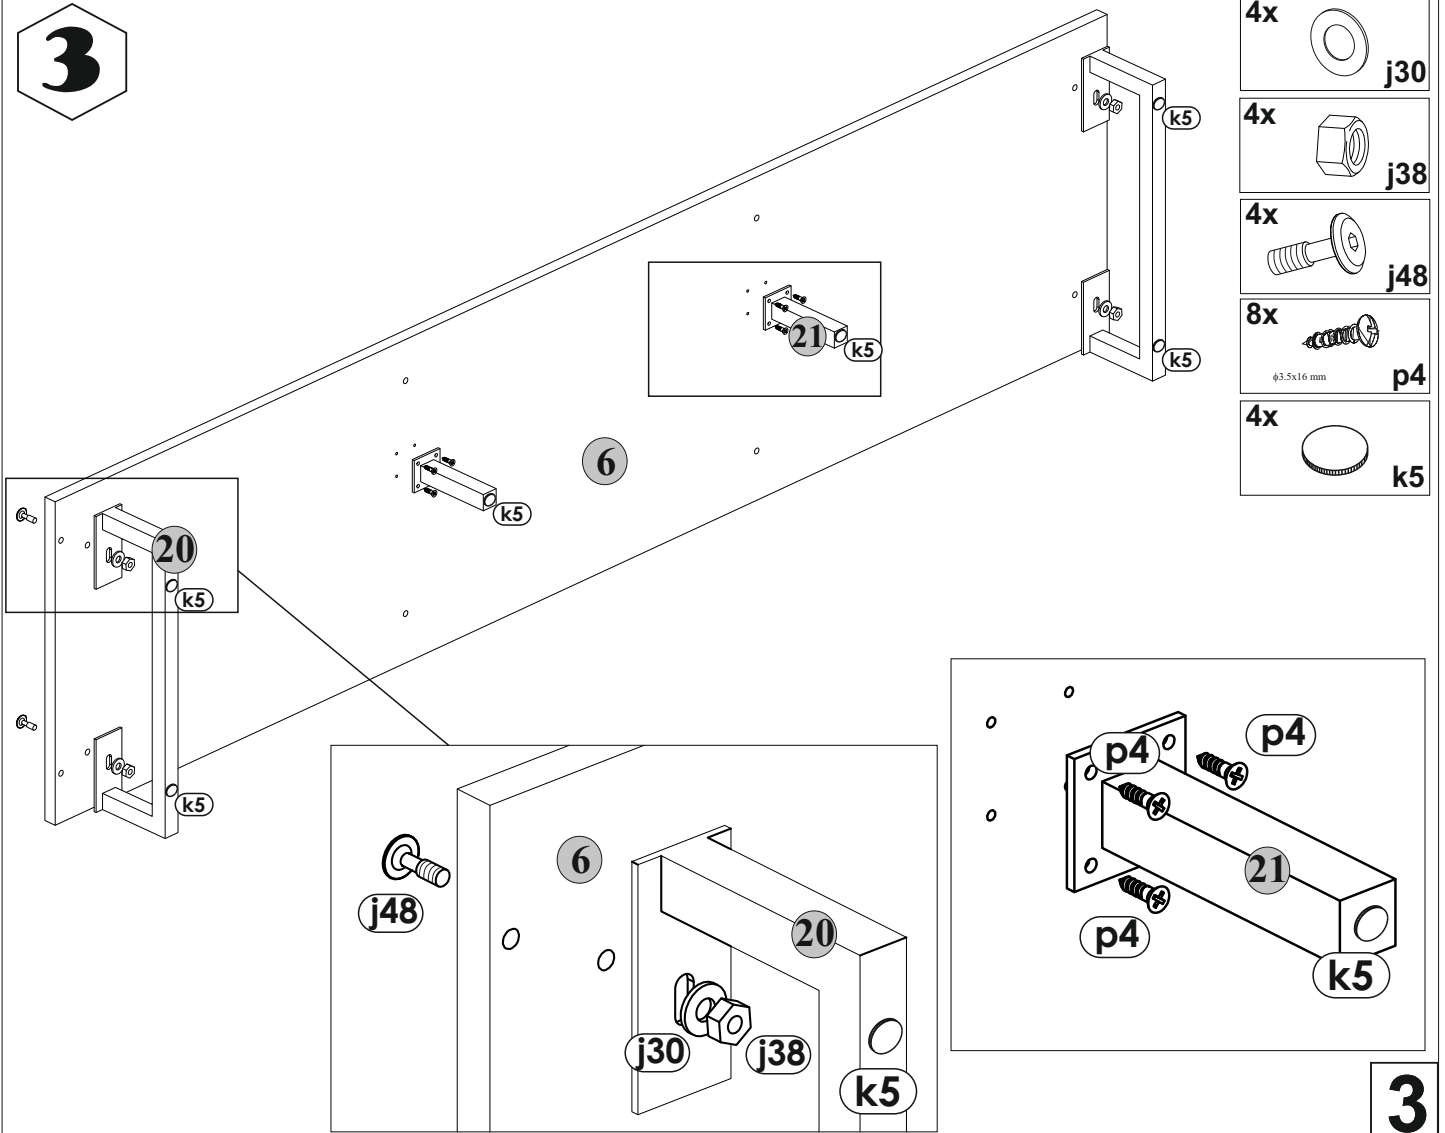

4

2x
b3



4x
e2
 $\phi 6.3 \times 13 \text{ mm}$

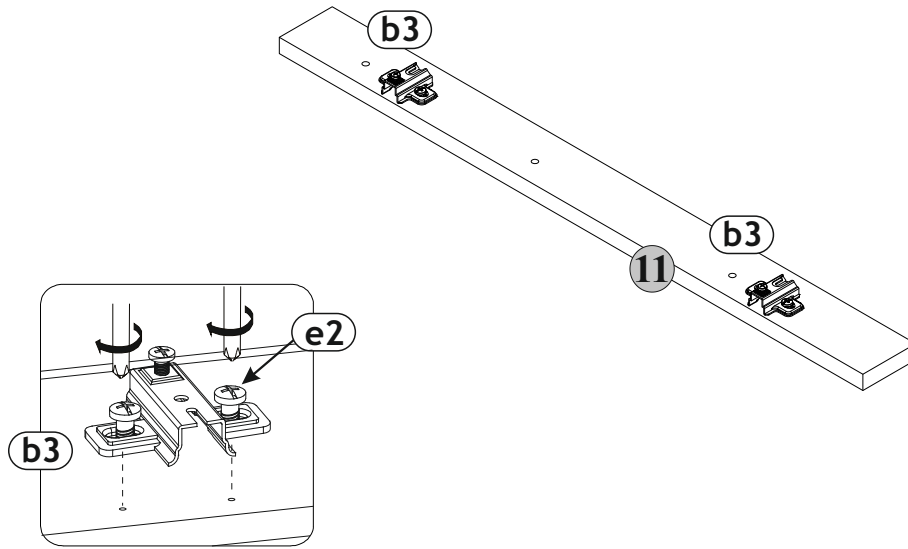


5

4x
a2

8x
p1
 $\phi 3.5 \times 16 \text{ mm}$

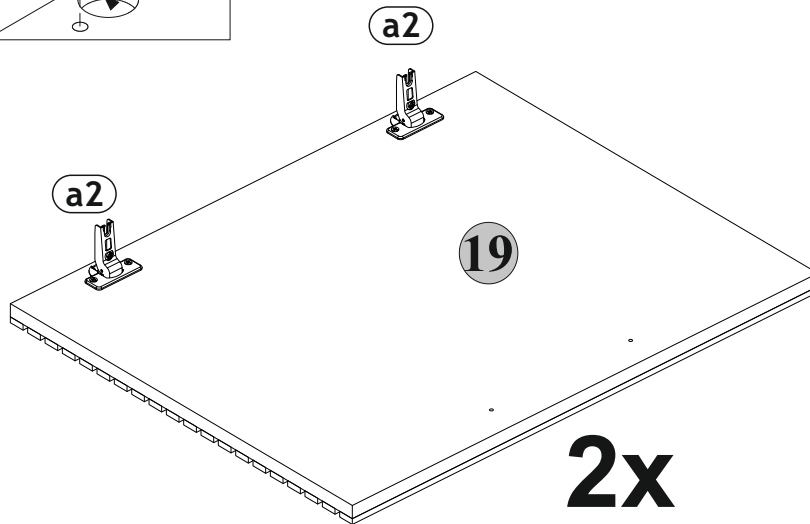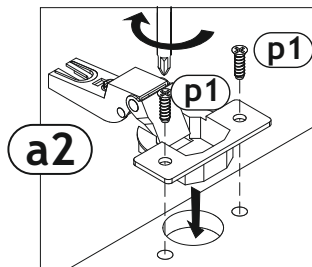

2x

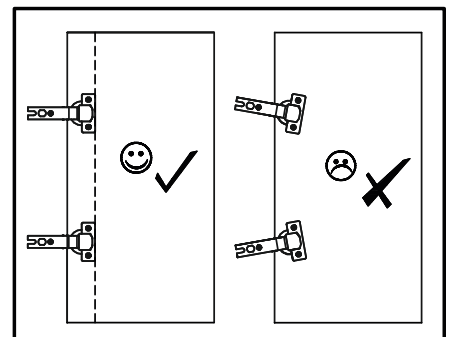

4



8x





e

8x  s1







1x  z1

5

8

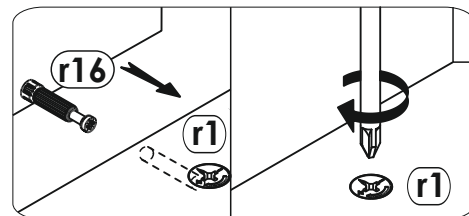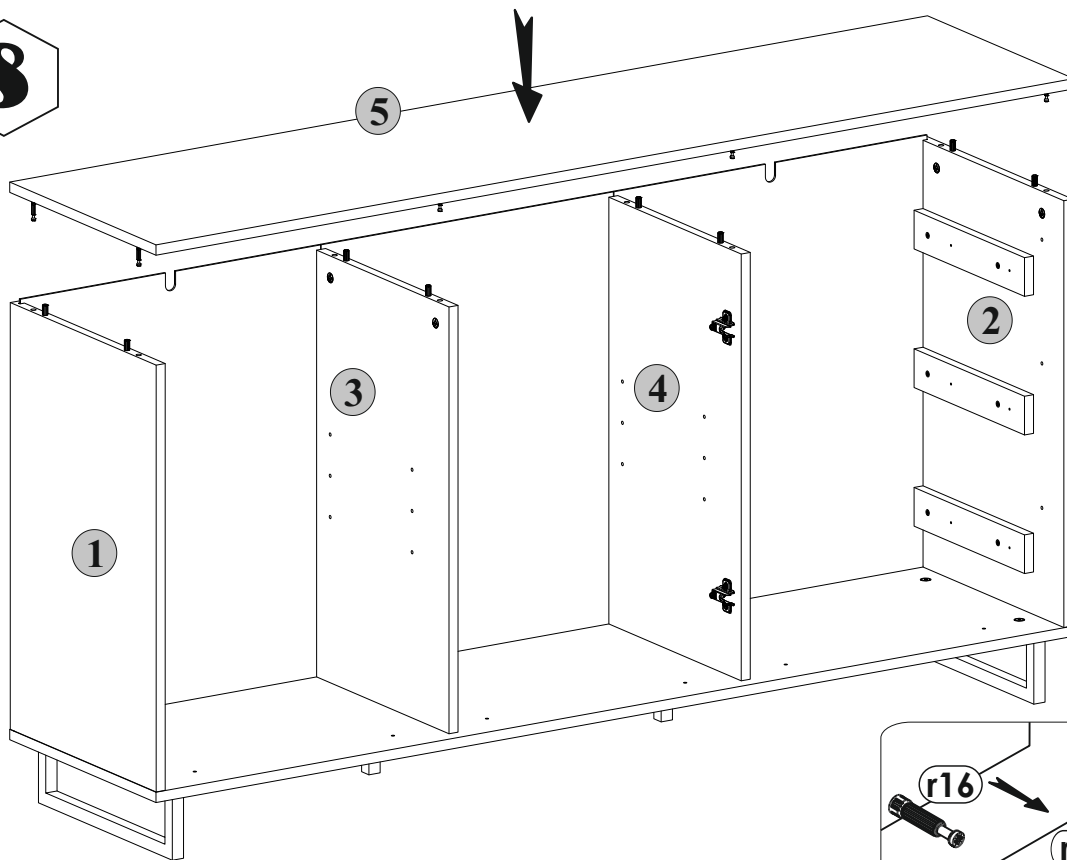



9

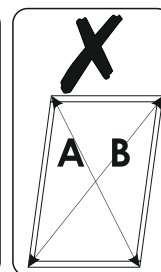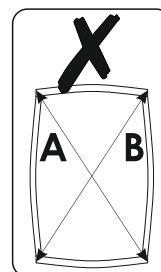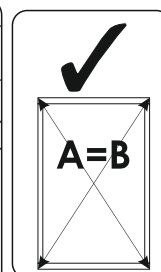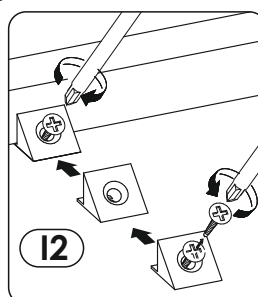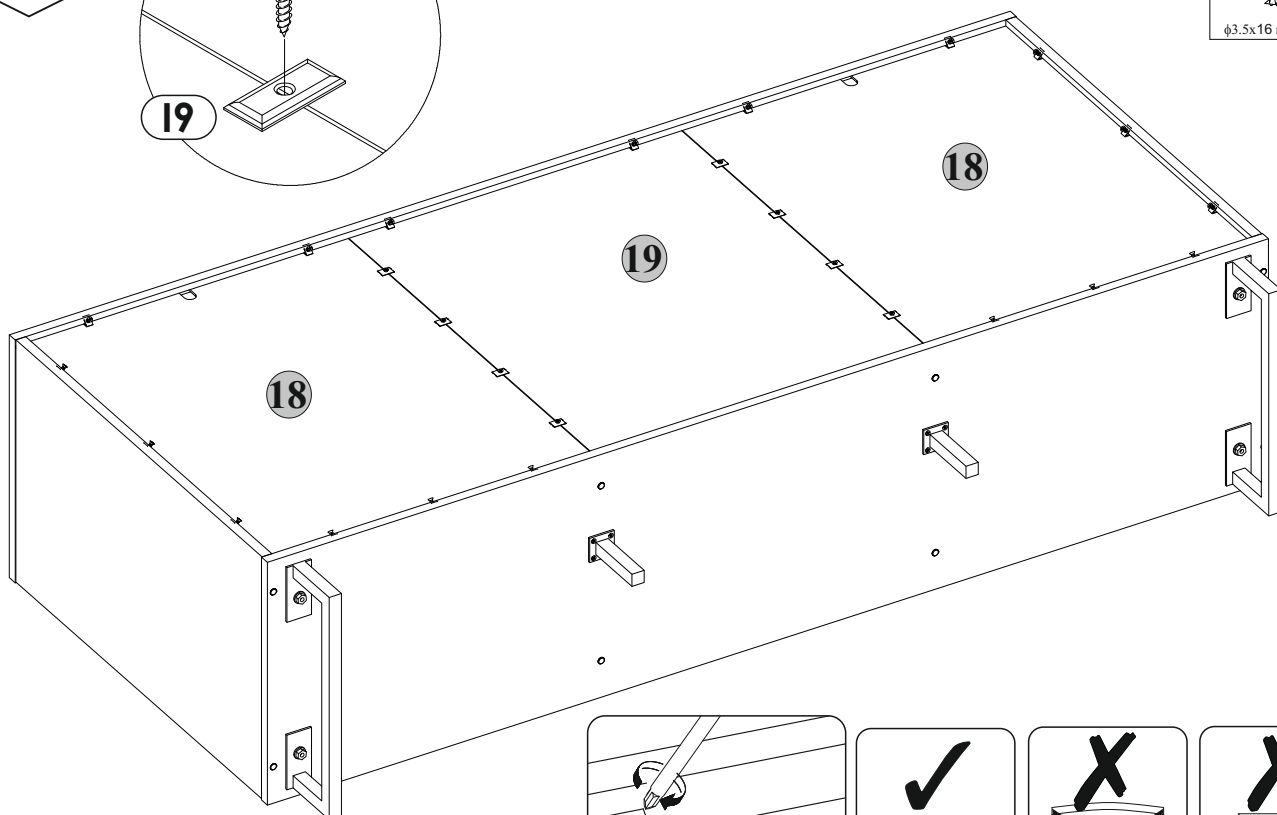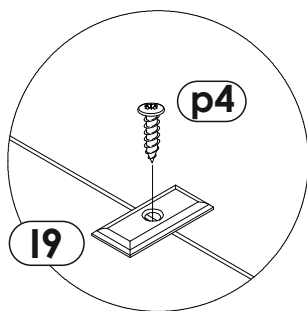

6



10

6x
e23
φ6x20 mm

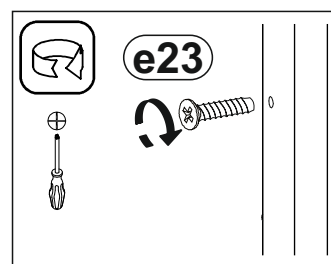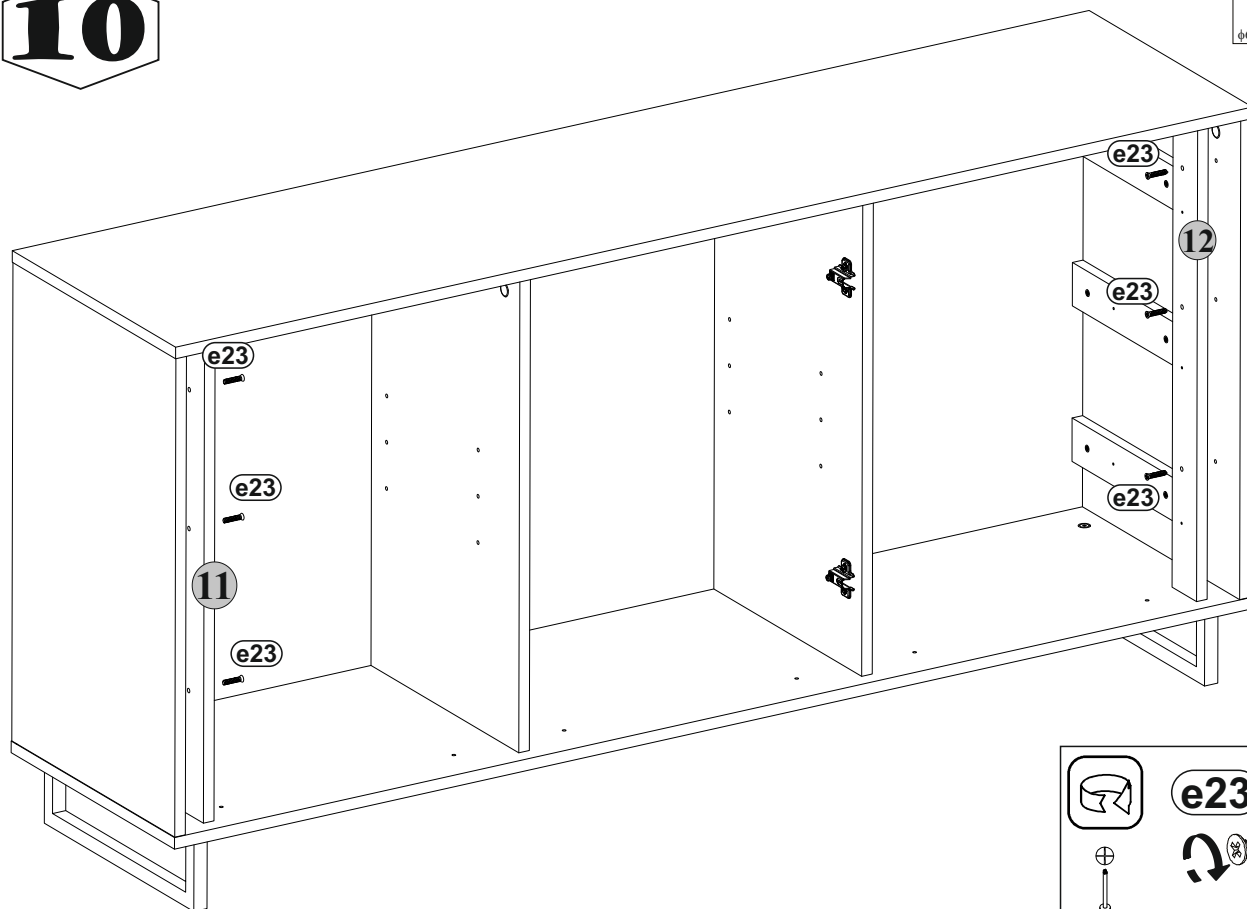


















11

12x
e23
φ6x20 mm

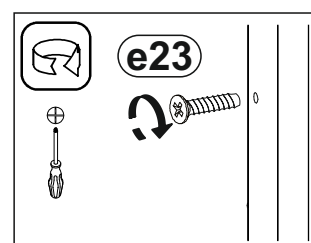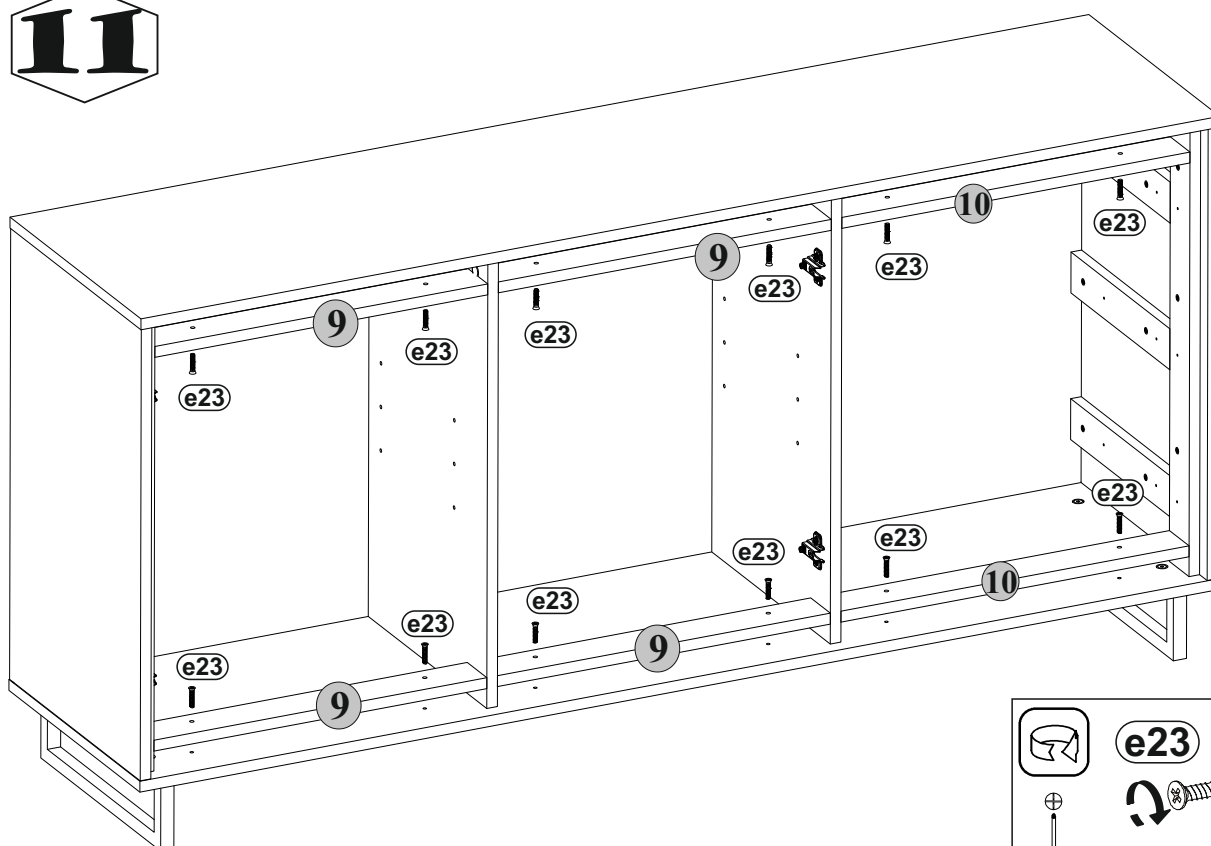


7

12

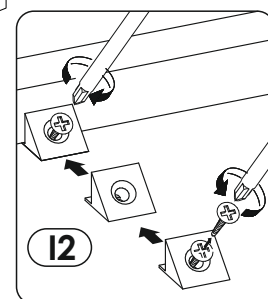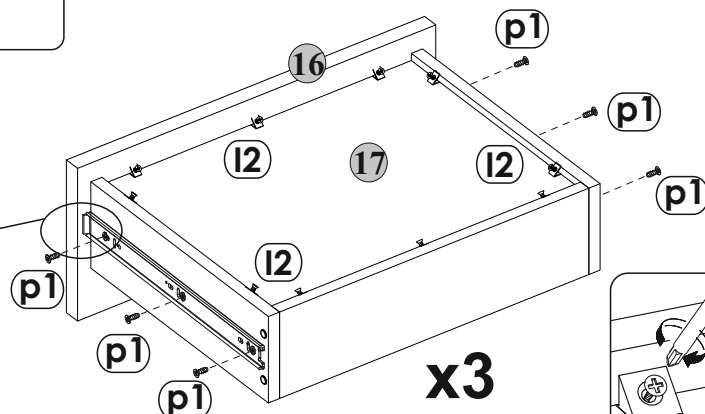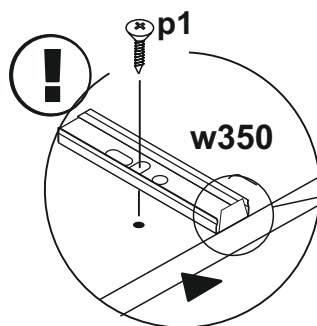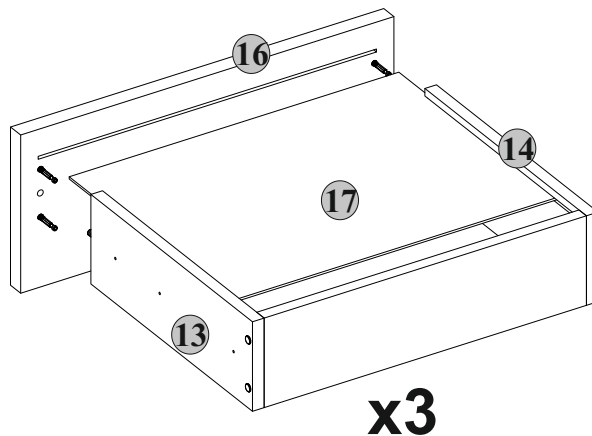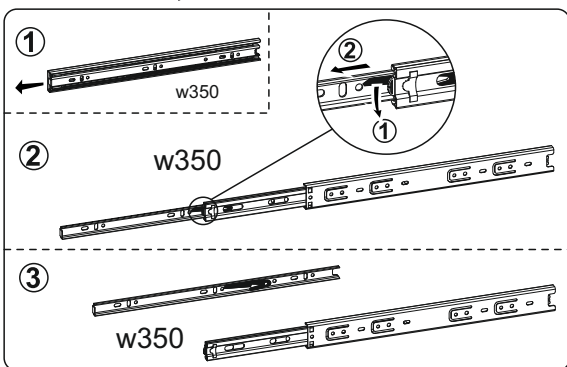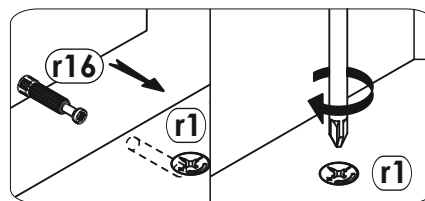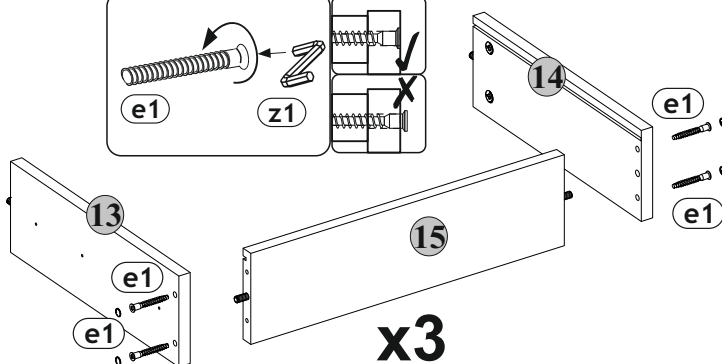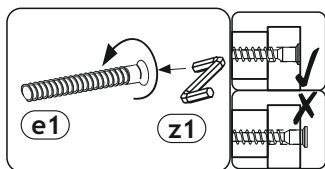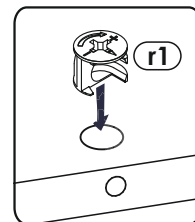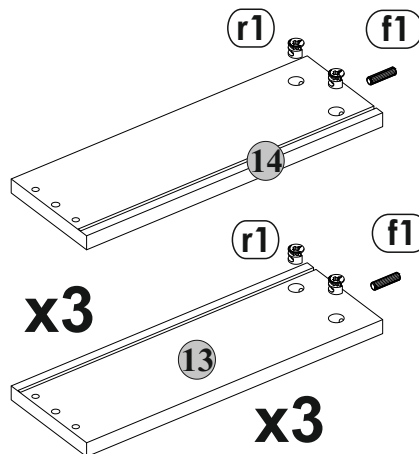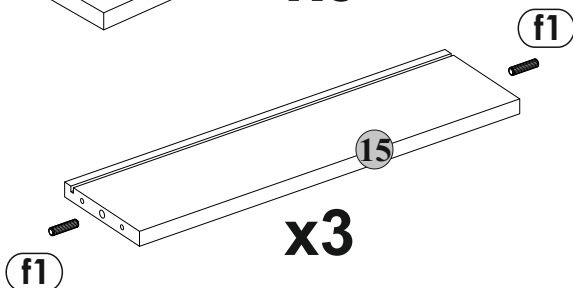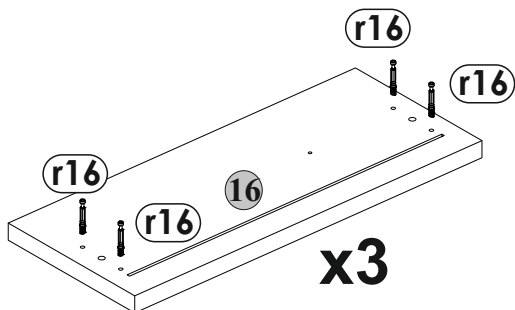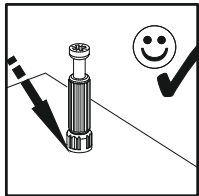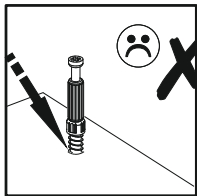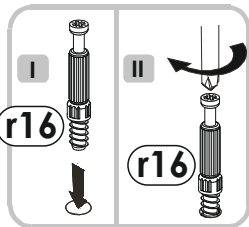

8

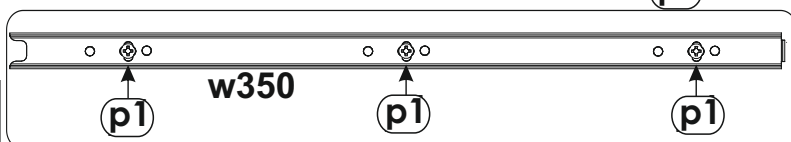

13










2x
t17

2x
n14

4x
φ3.5x16 mm
p1



3x
w350

18x
φ3.5x13 mm
p1

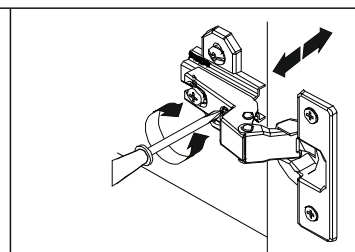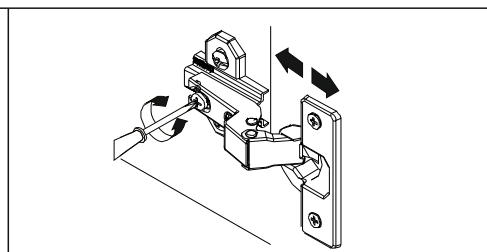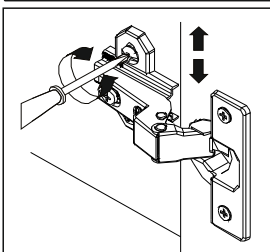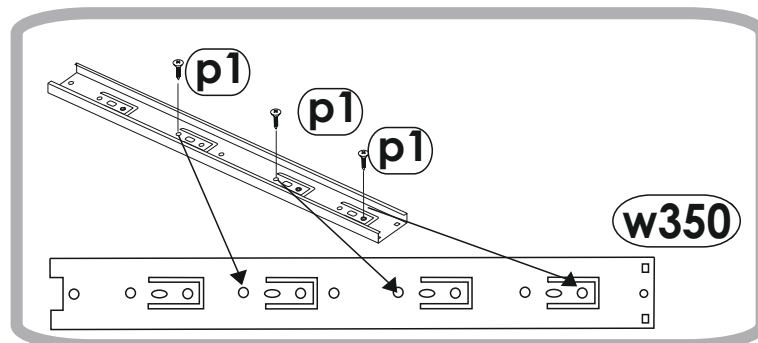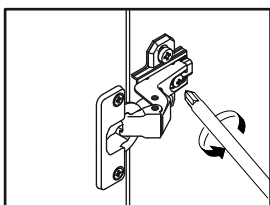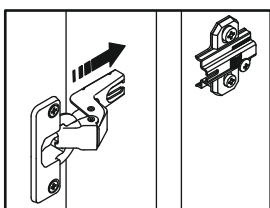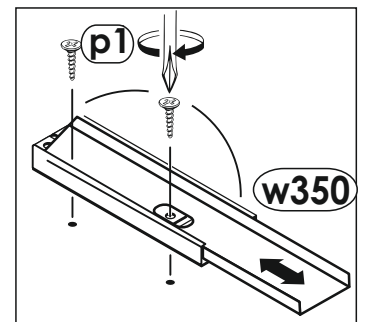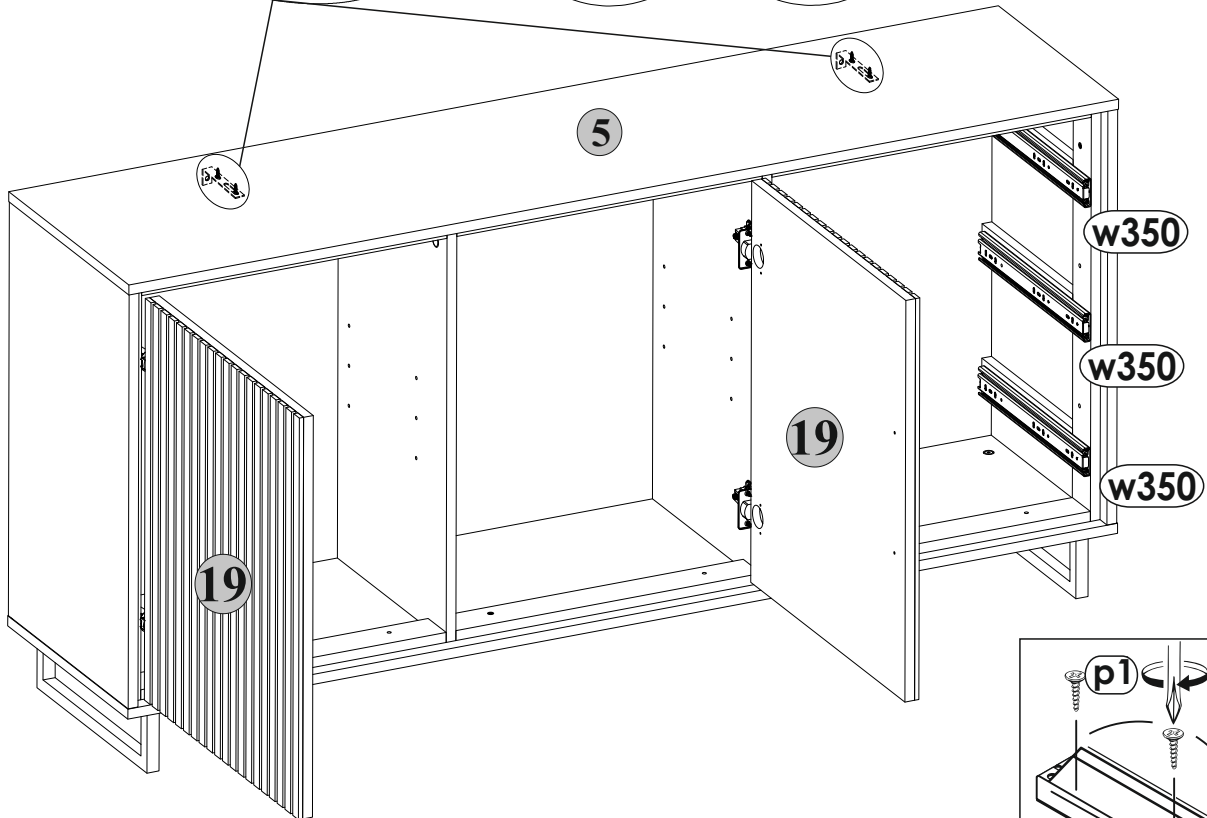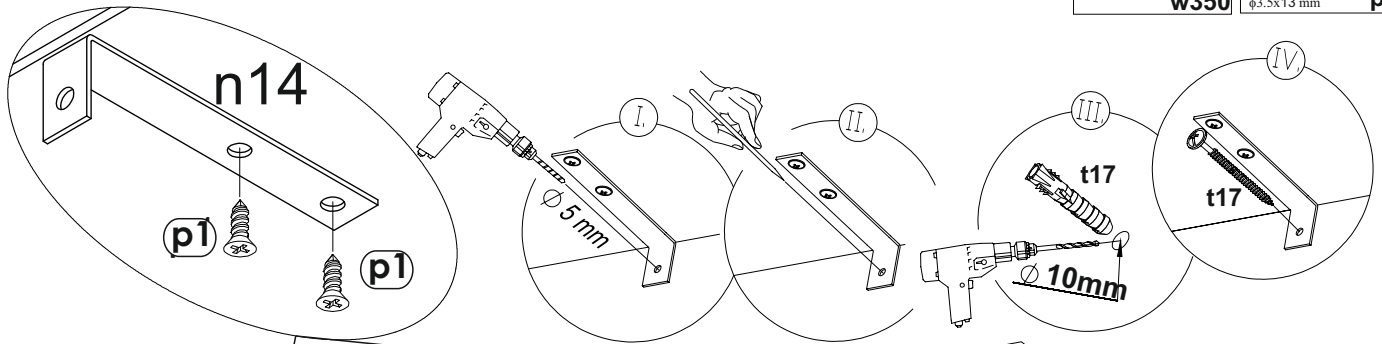

9

14




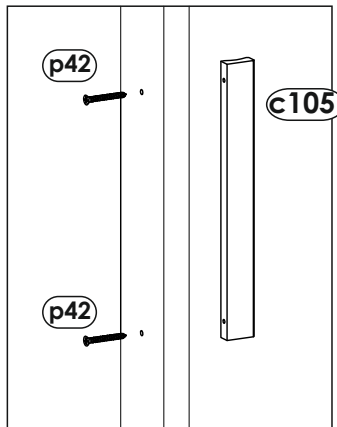
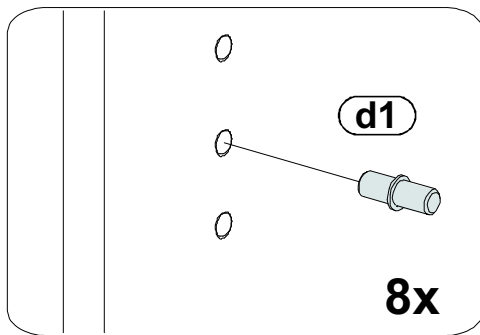


5x
c105

8x
d1
ø5x17 mm

10x
p42

20x
s2

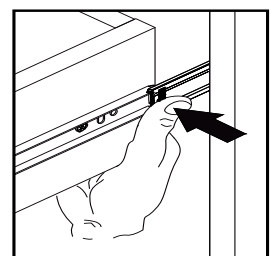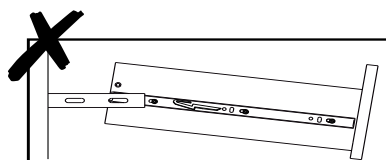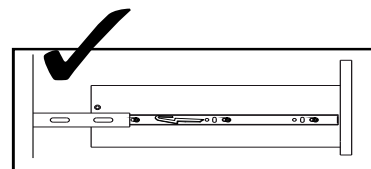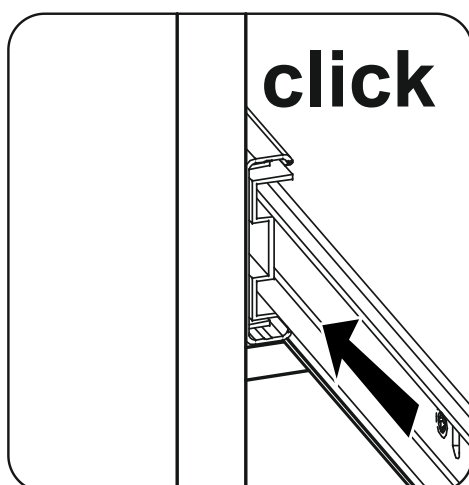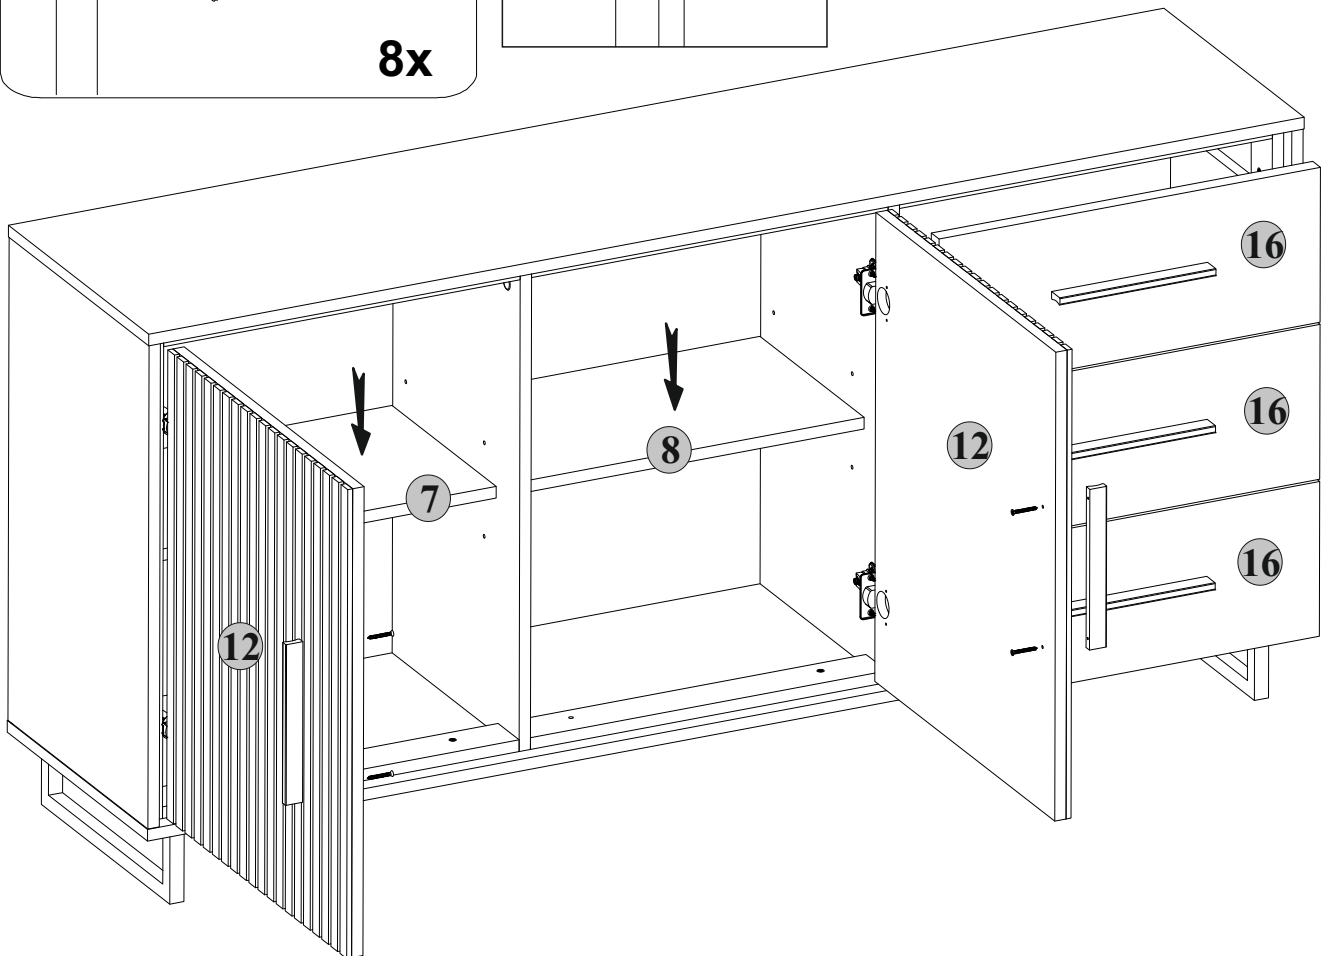

10