
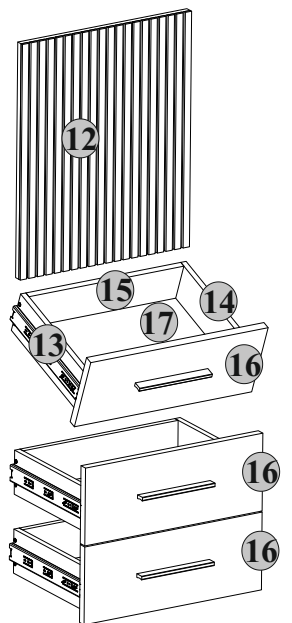
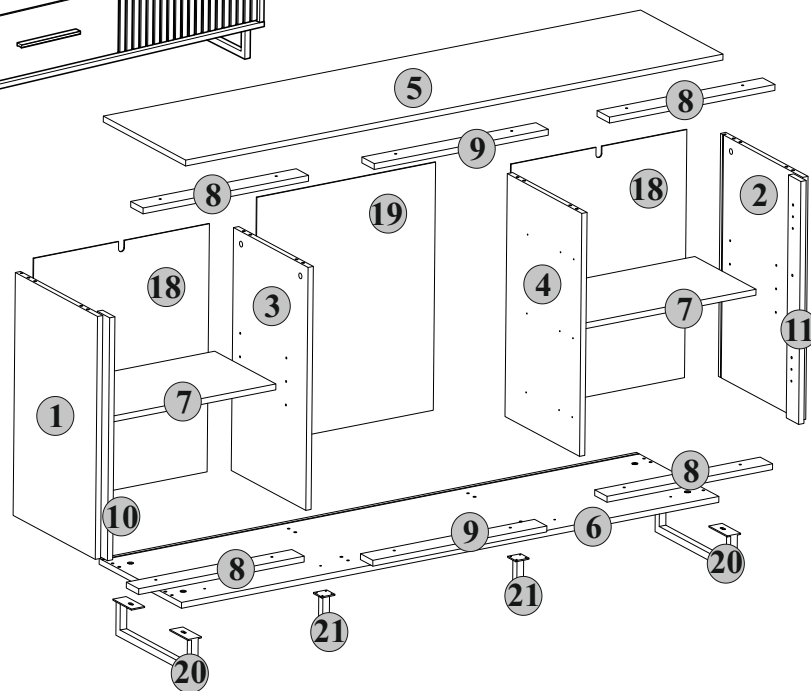
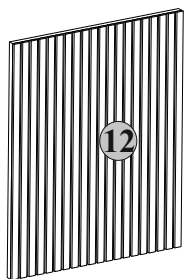
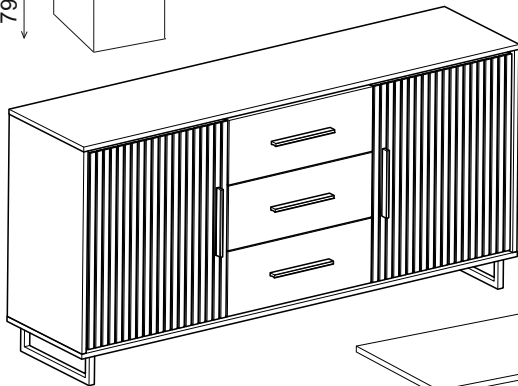





“3405”

versionsnummer: 02.08.2023


Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.

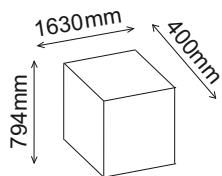


B5

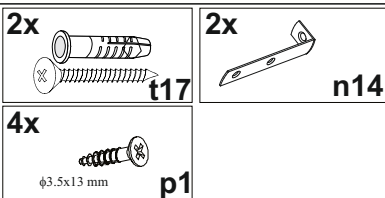


B1

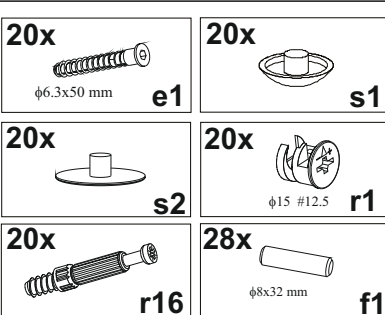



B2

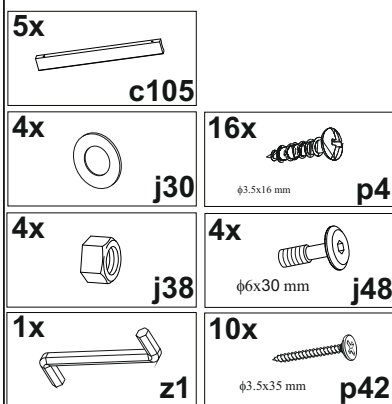


B3



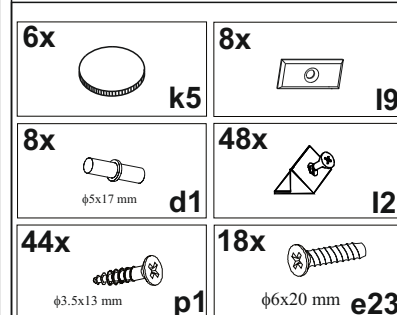


B4

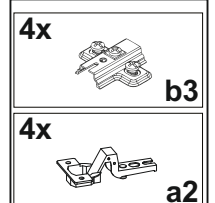


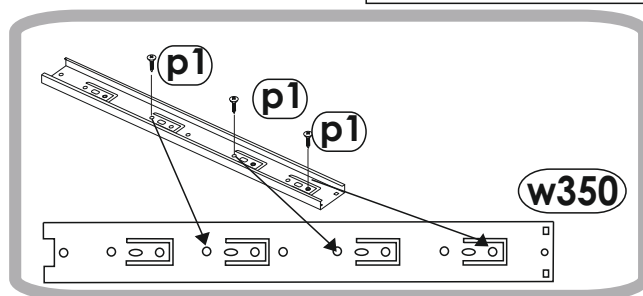


2

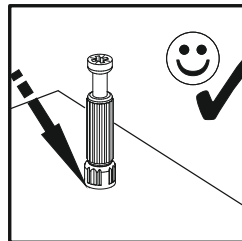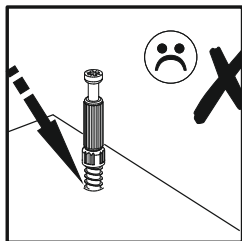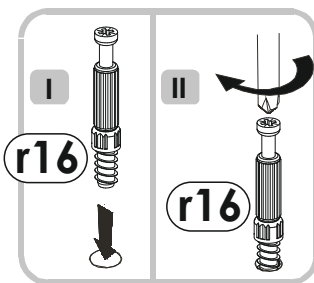

8x
r16

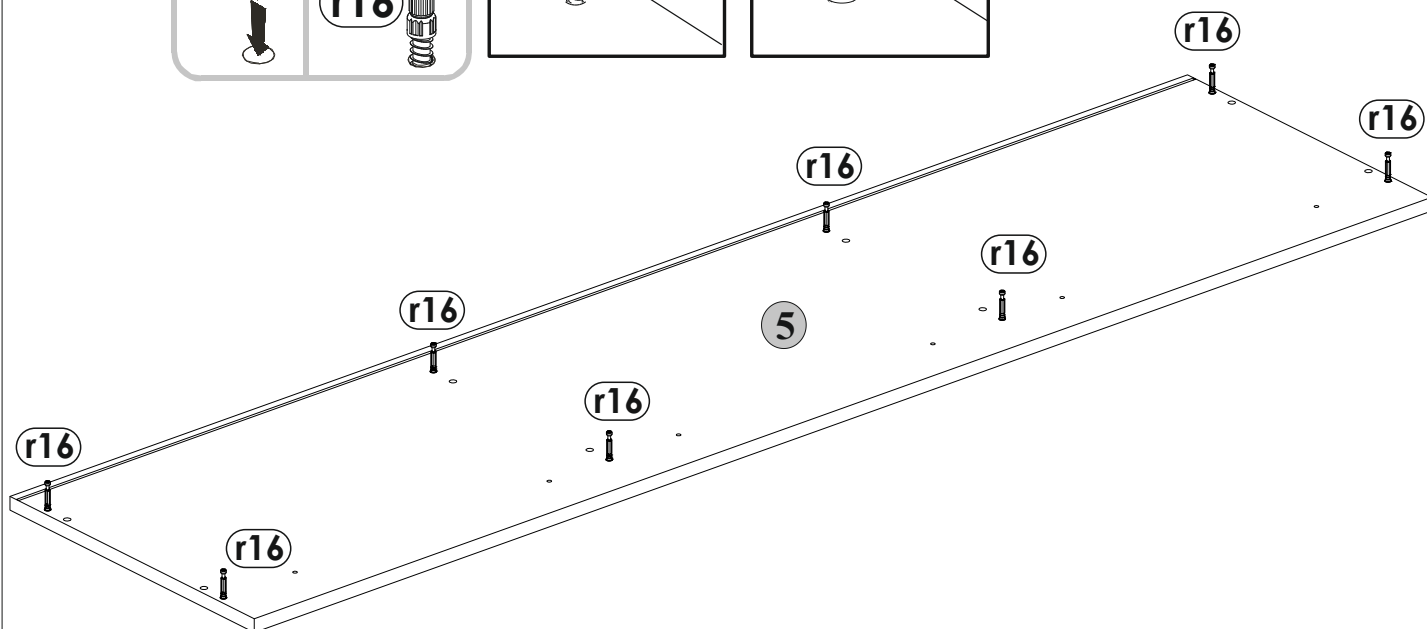


3

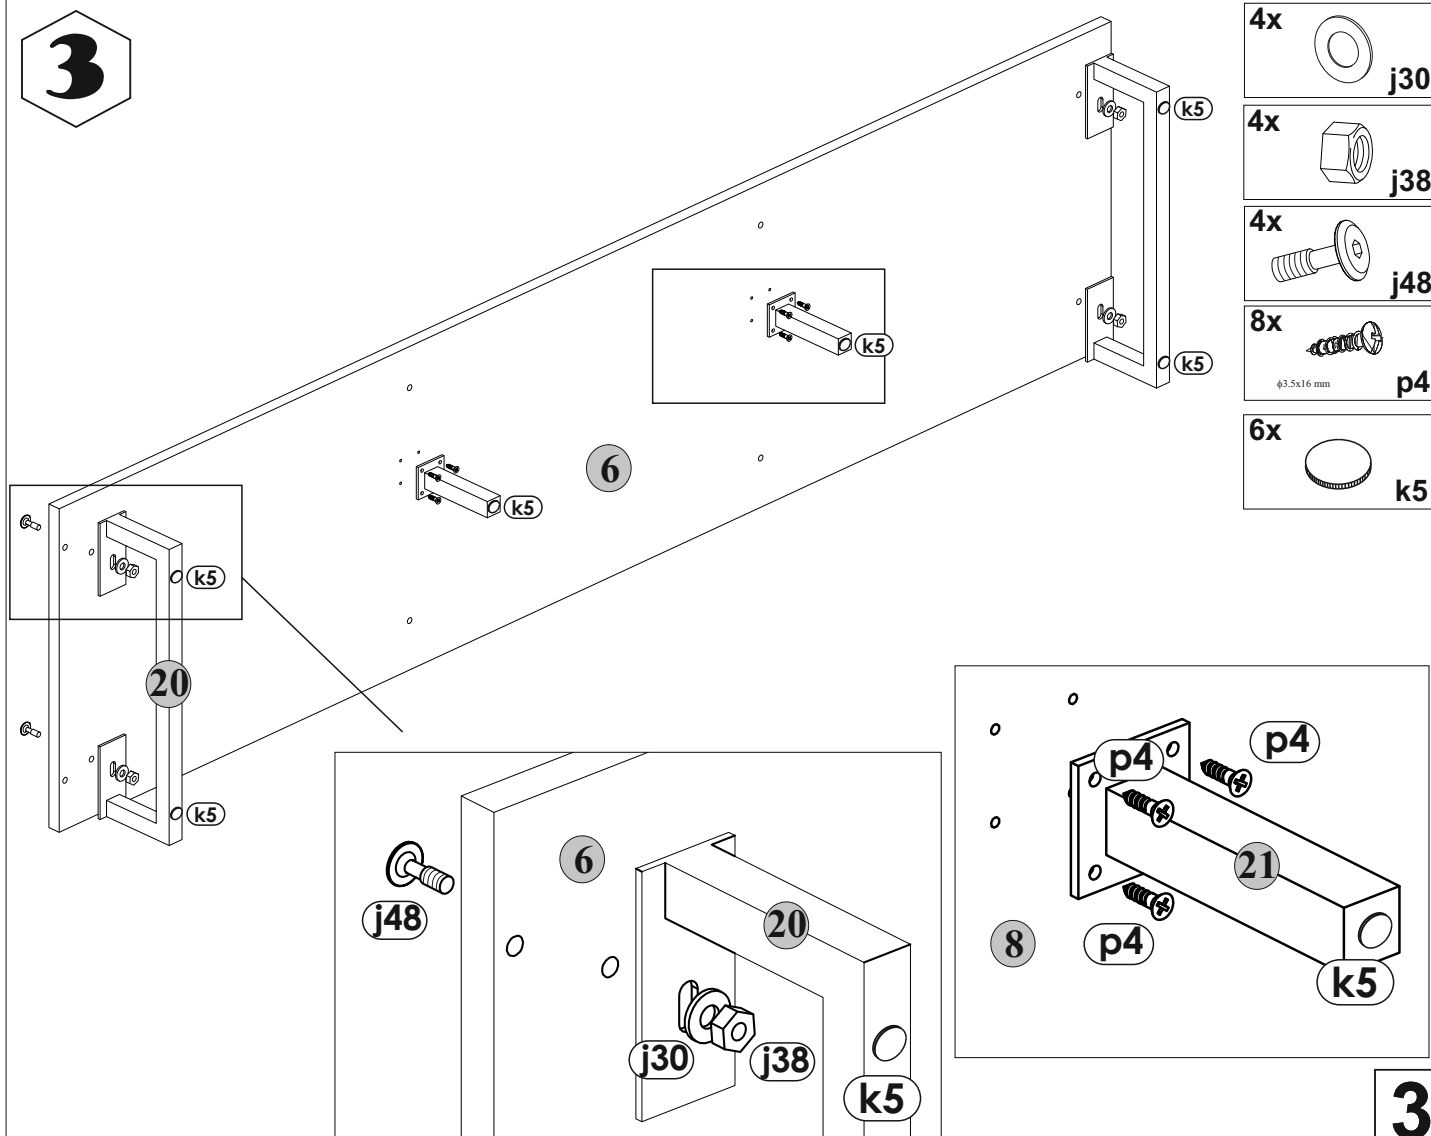




4

- 4x  **b3**
- 8x  **e2**
 $\phi 6.3 \times 13 \text{ mm}$

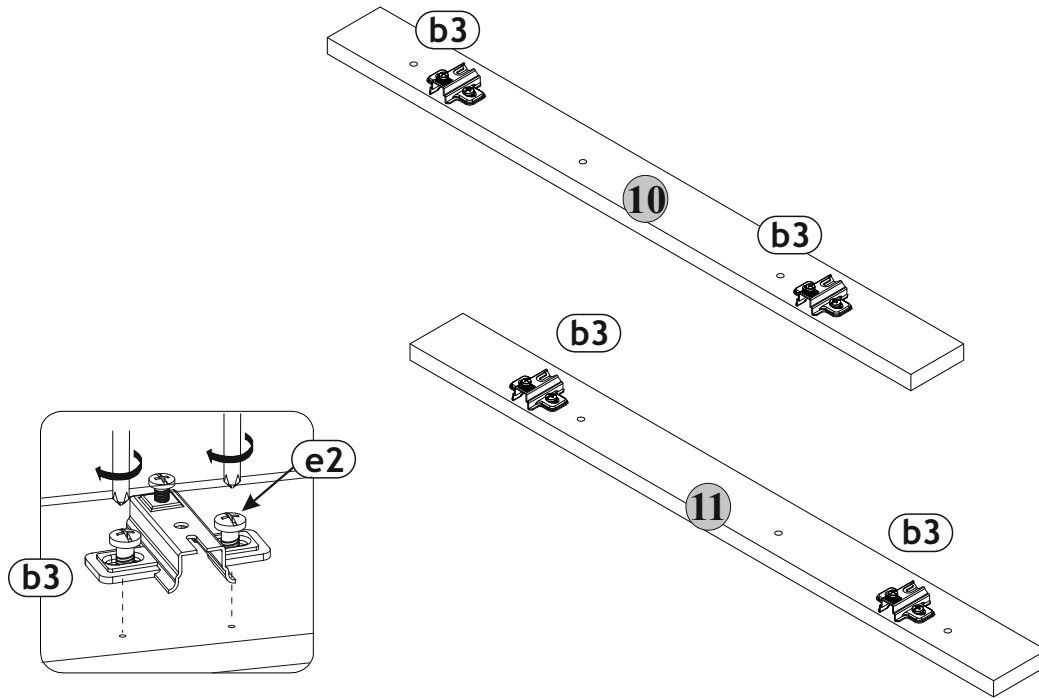


5

- 4x  **a2**
- 8x  **p1**
 $\phi 3.5 \times 16 \text{ mm}$

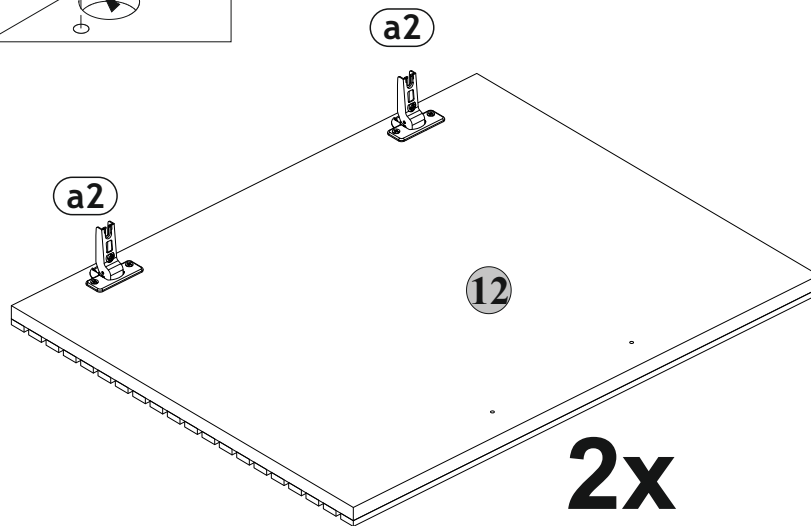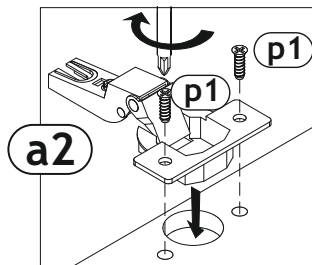


2x

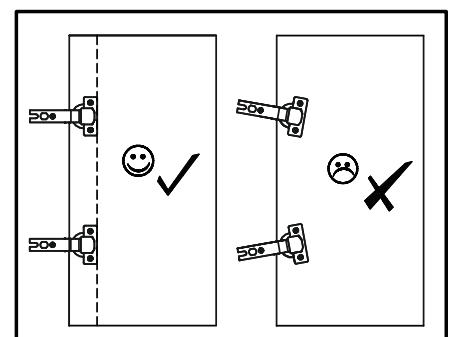


4

6


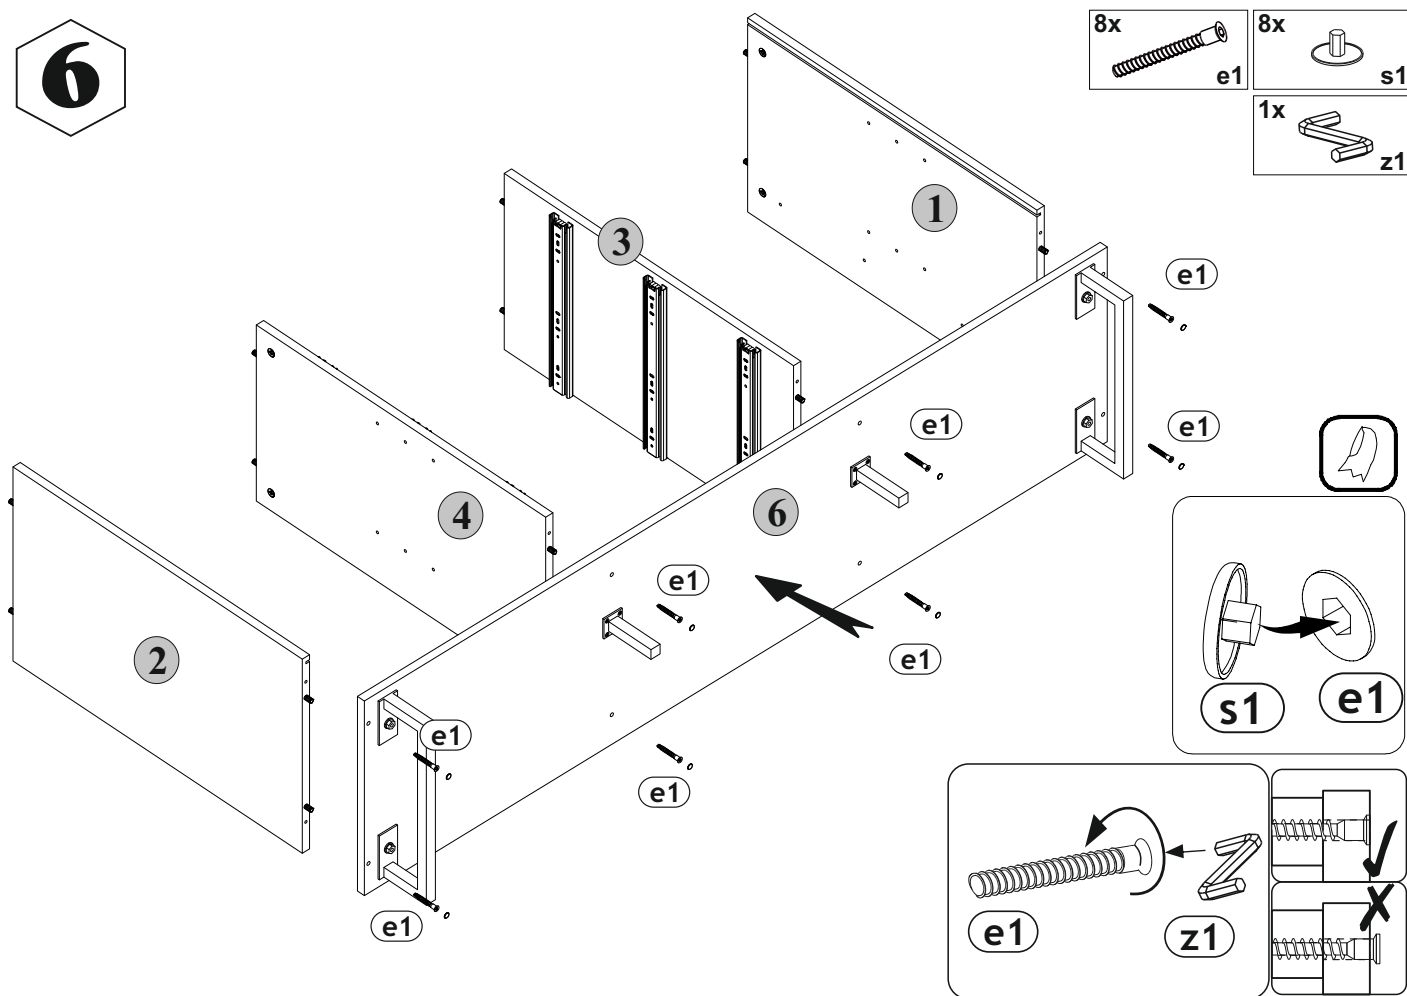


7


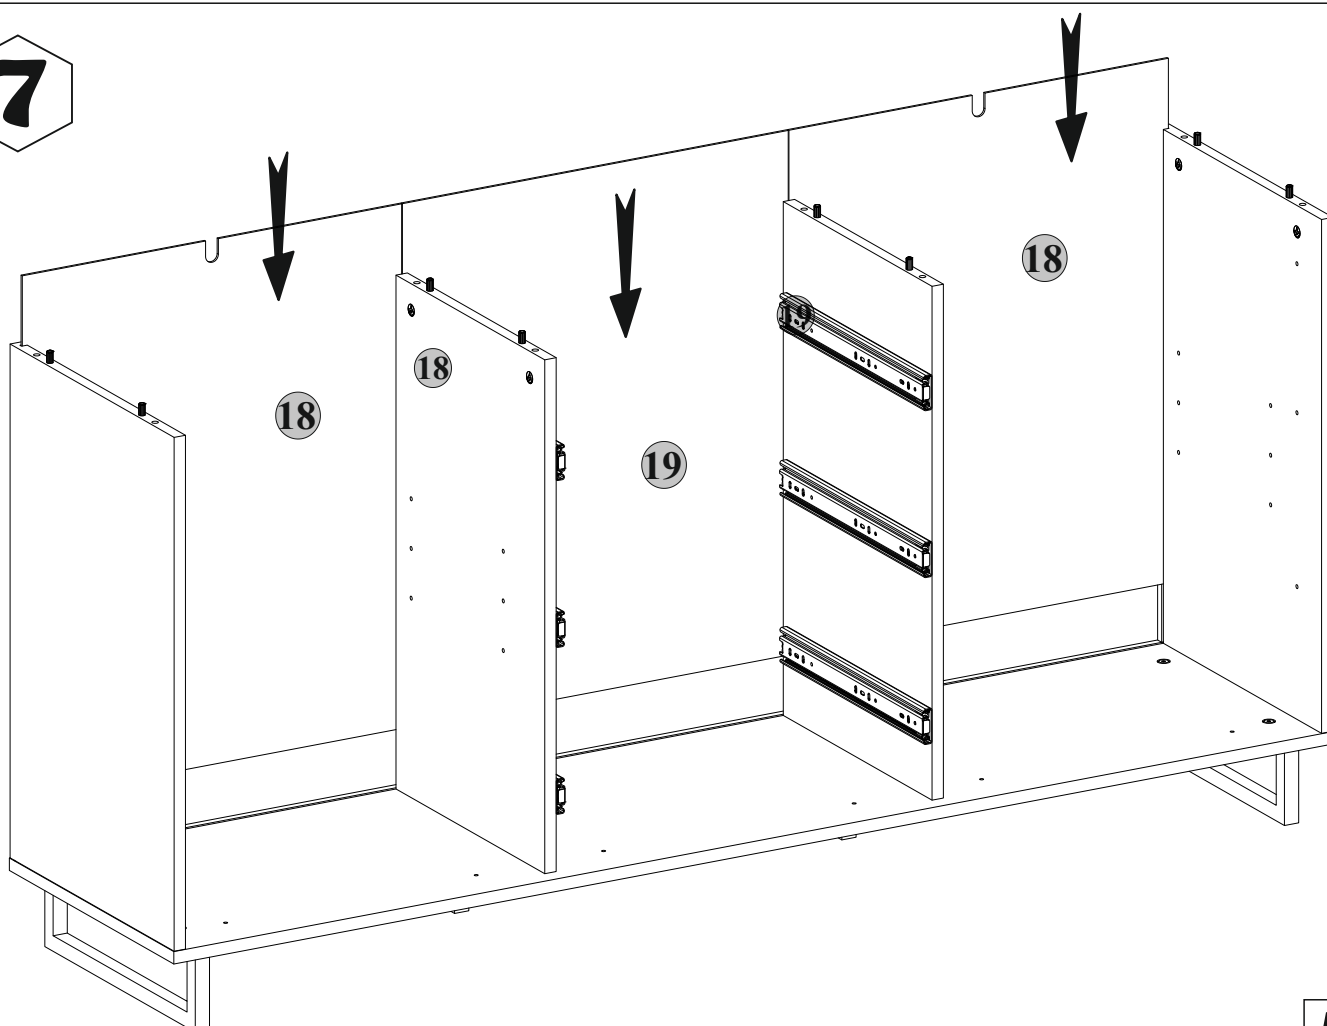


5



8

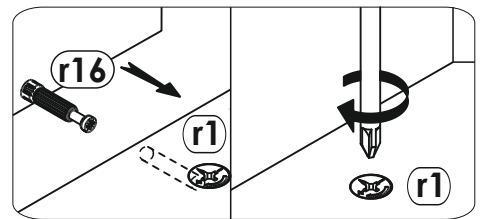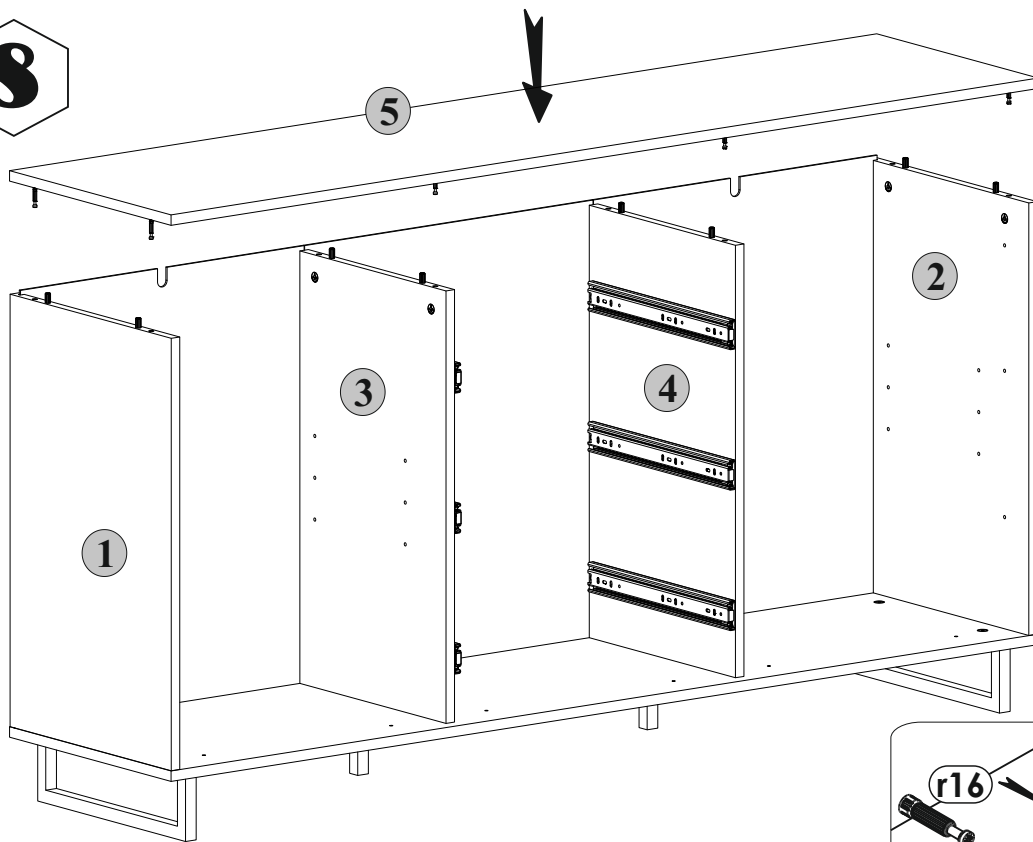

9

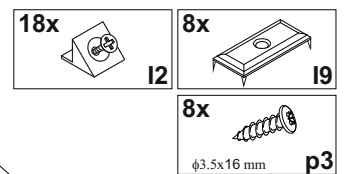
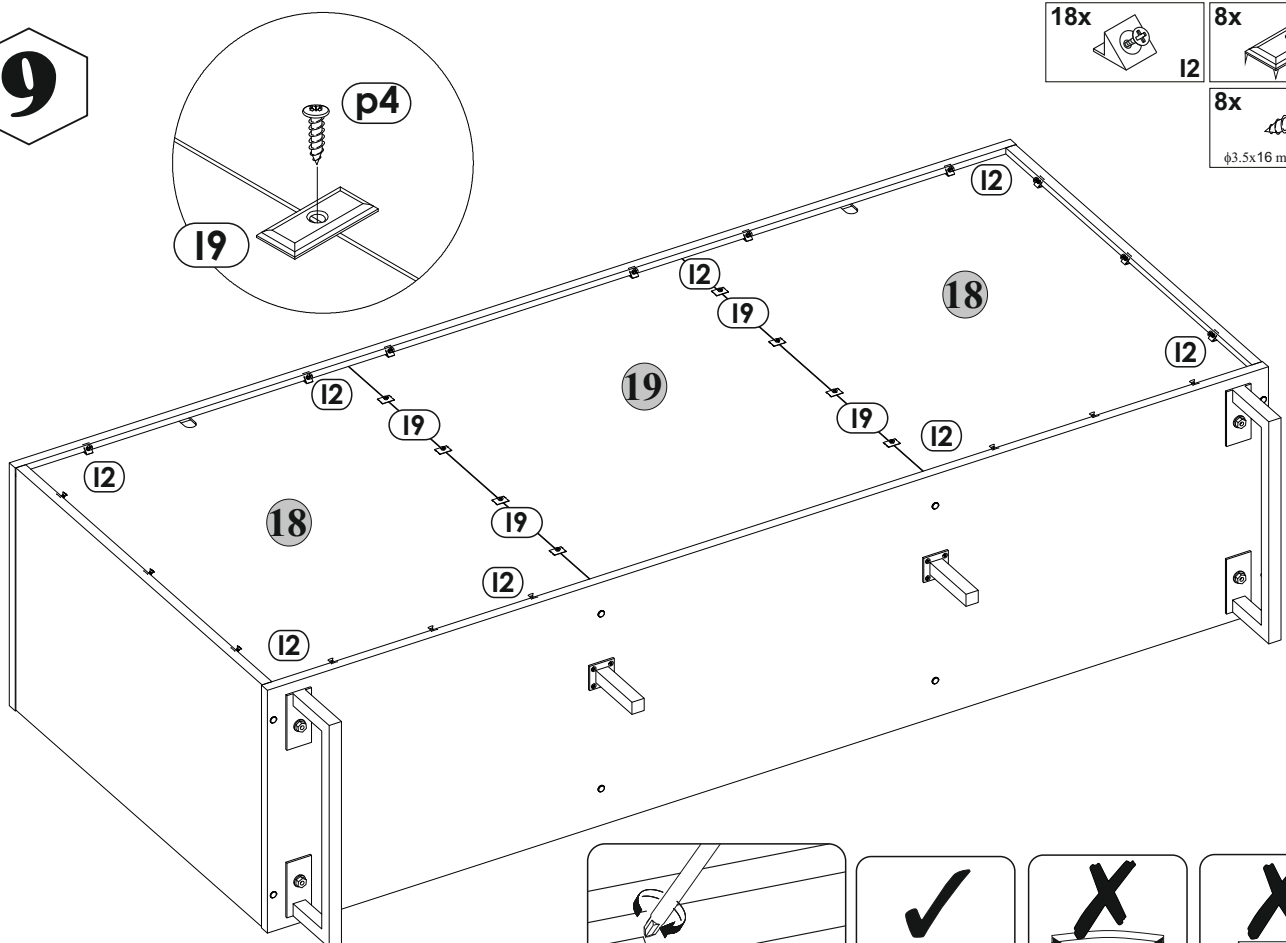


6

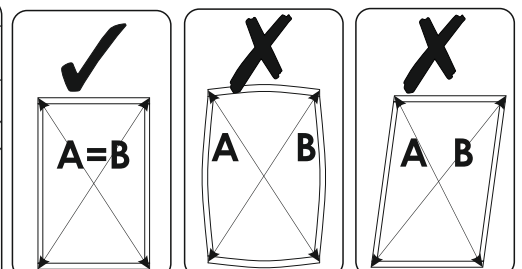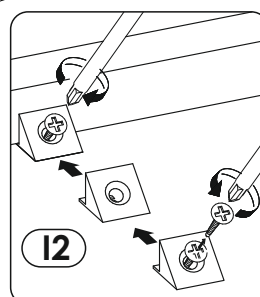



10

6x
φ6x20 mm
e23

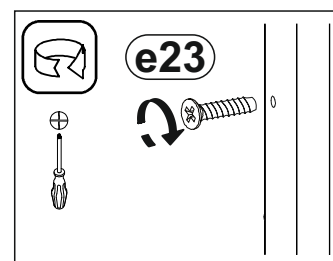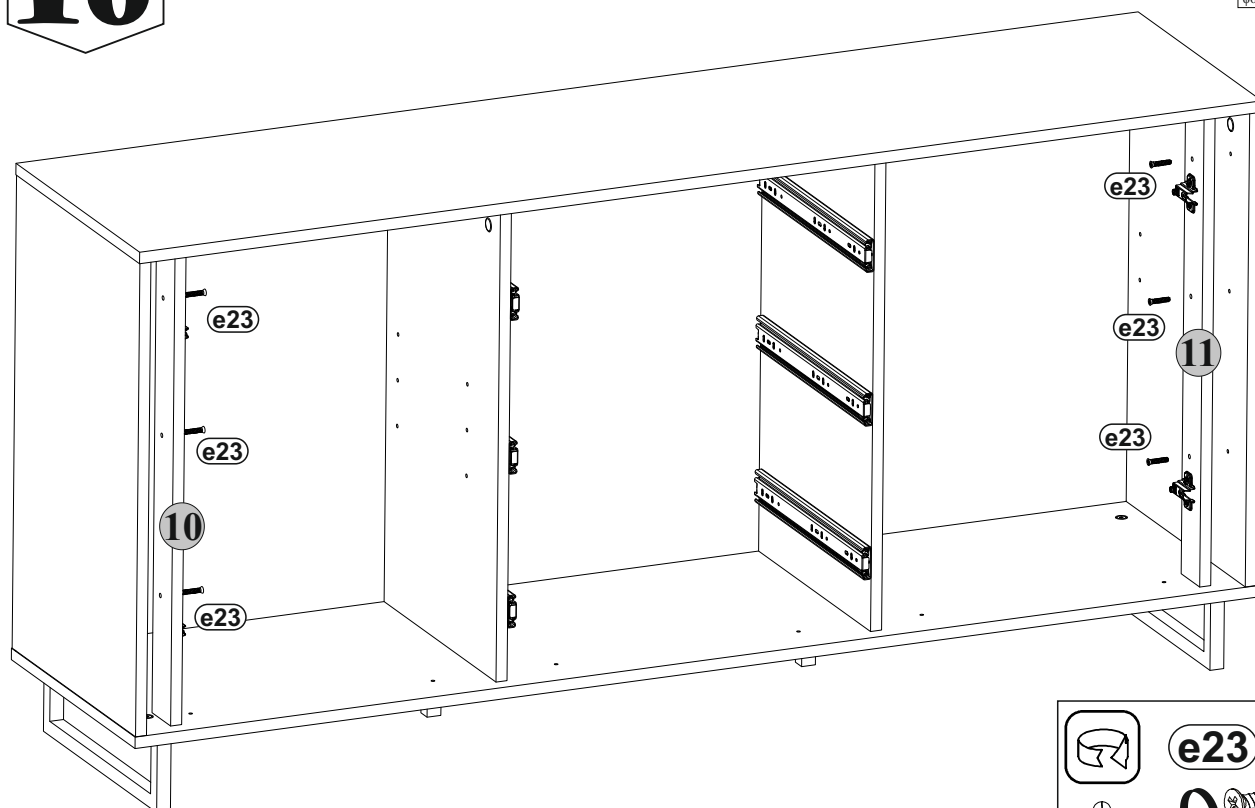




















11

12x
φ6x20 mm
e23

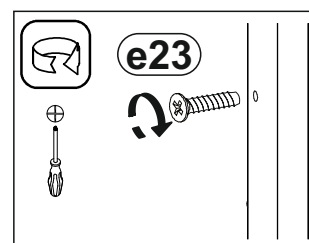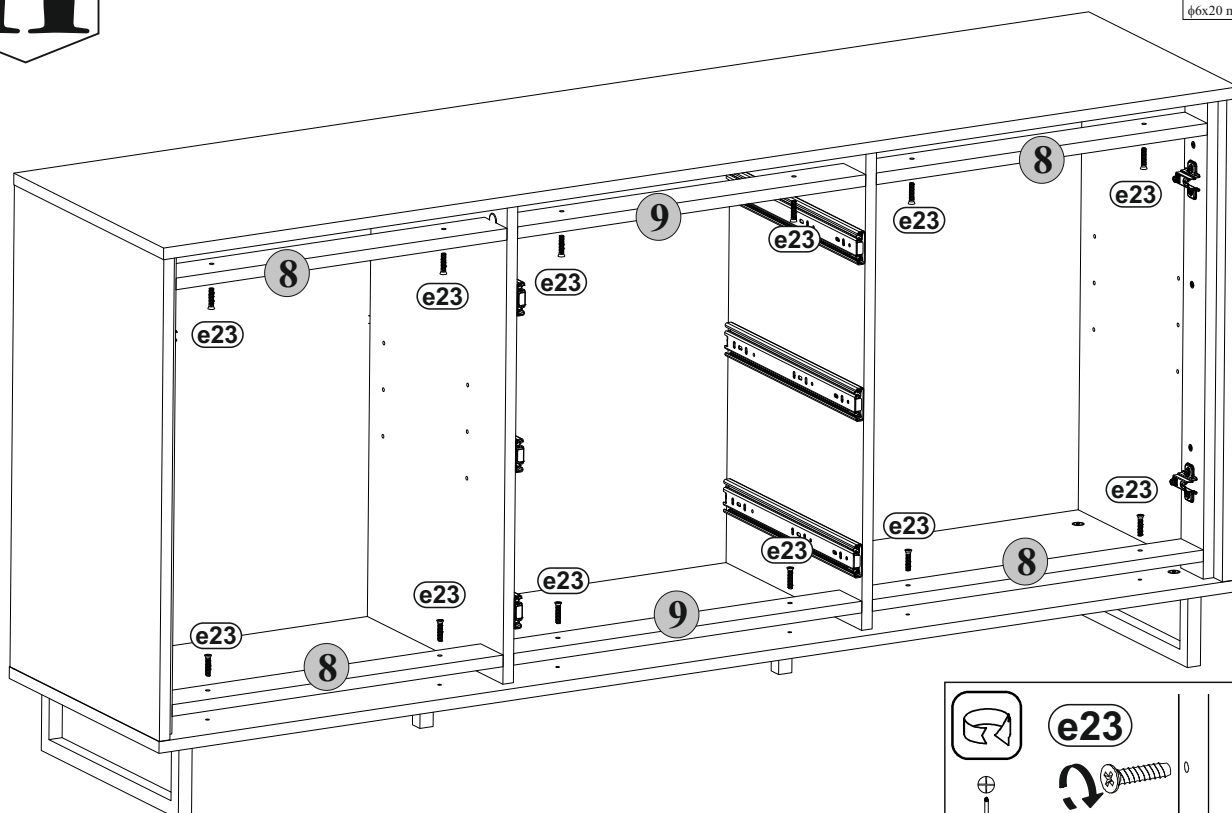


7

12

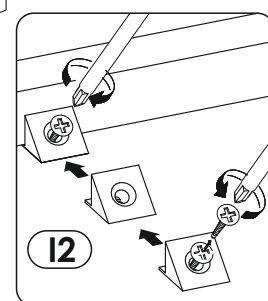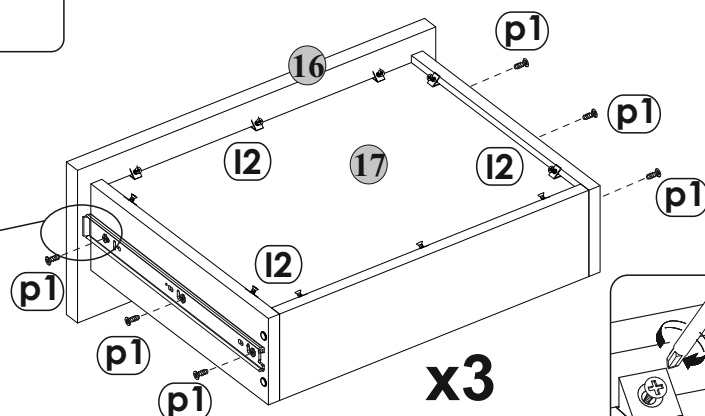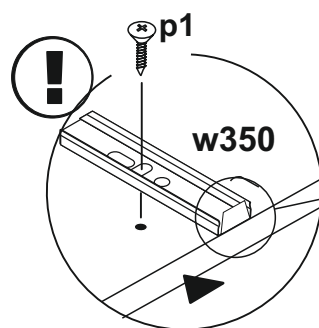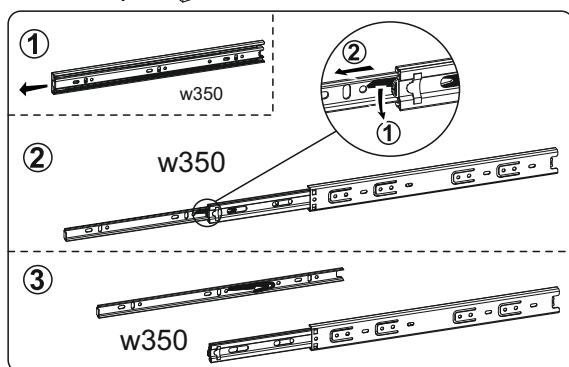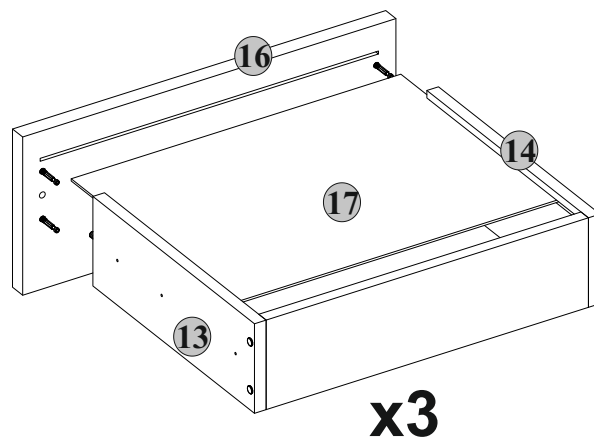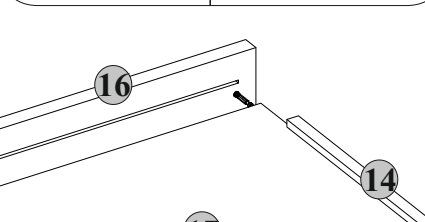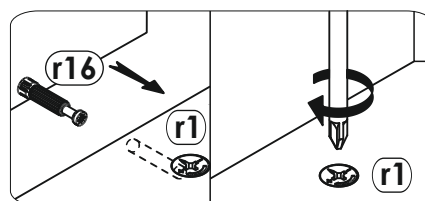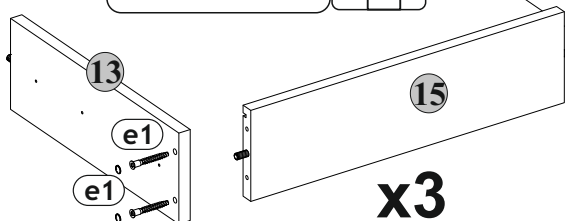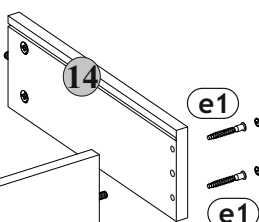
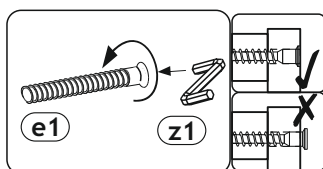
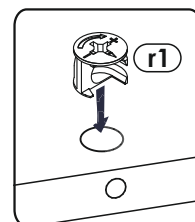
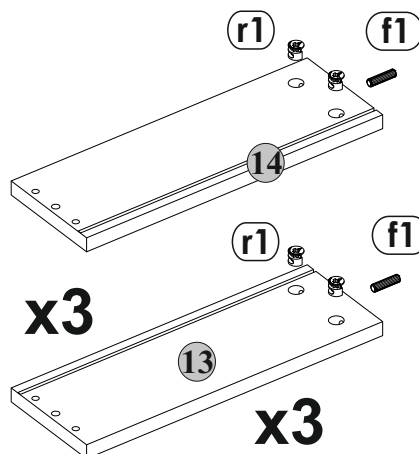
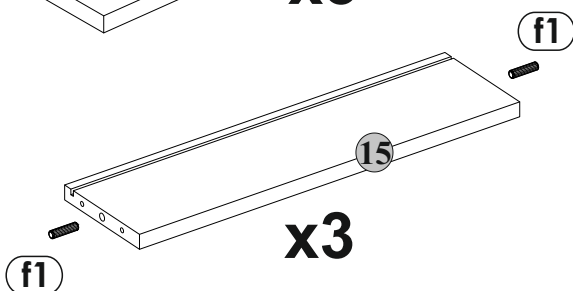
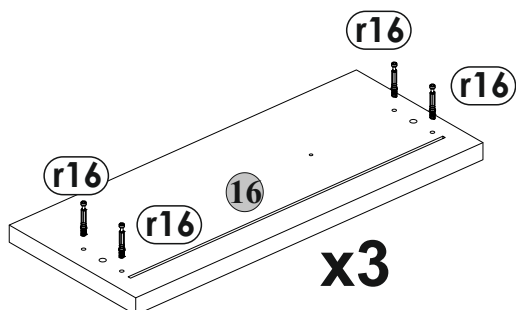


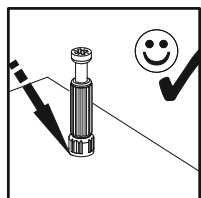
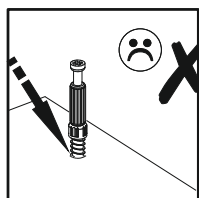
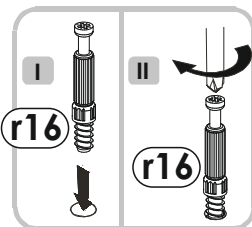


8

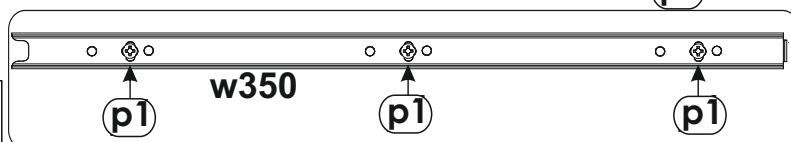

13

2x  t17	2x  n14	4x  p1 φ3.5x16 mm
10x  p42	5x  c105	

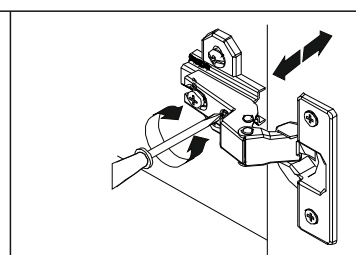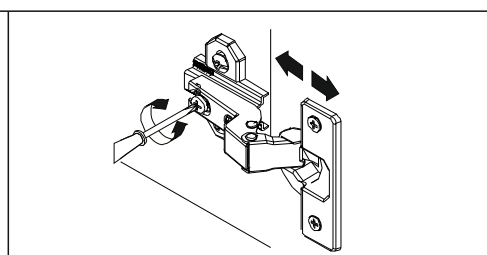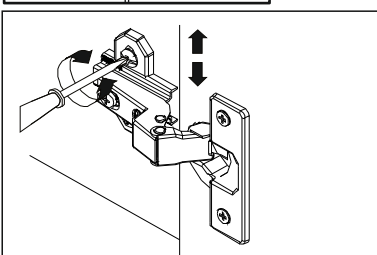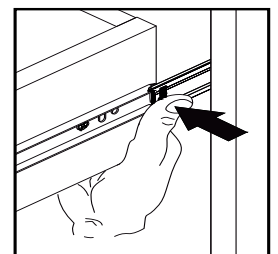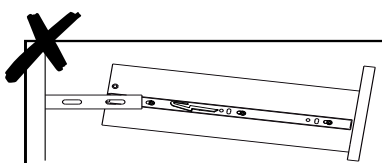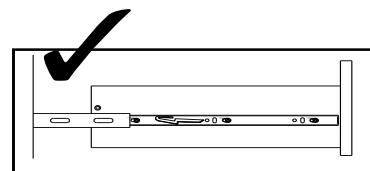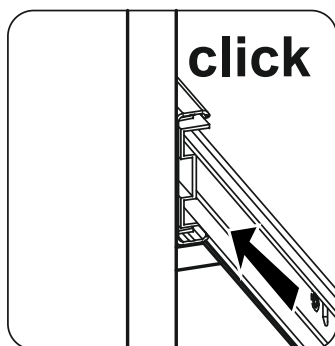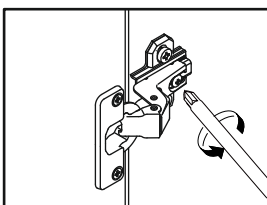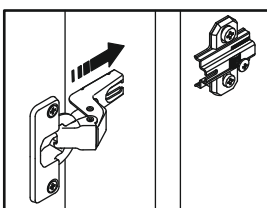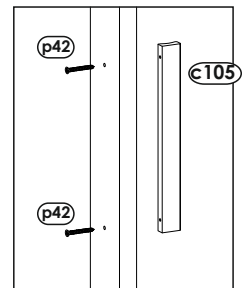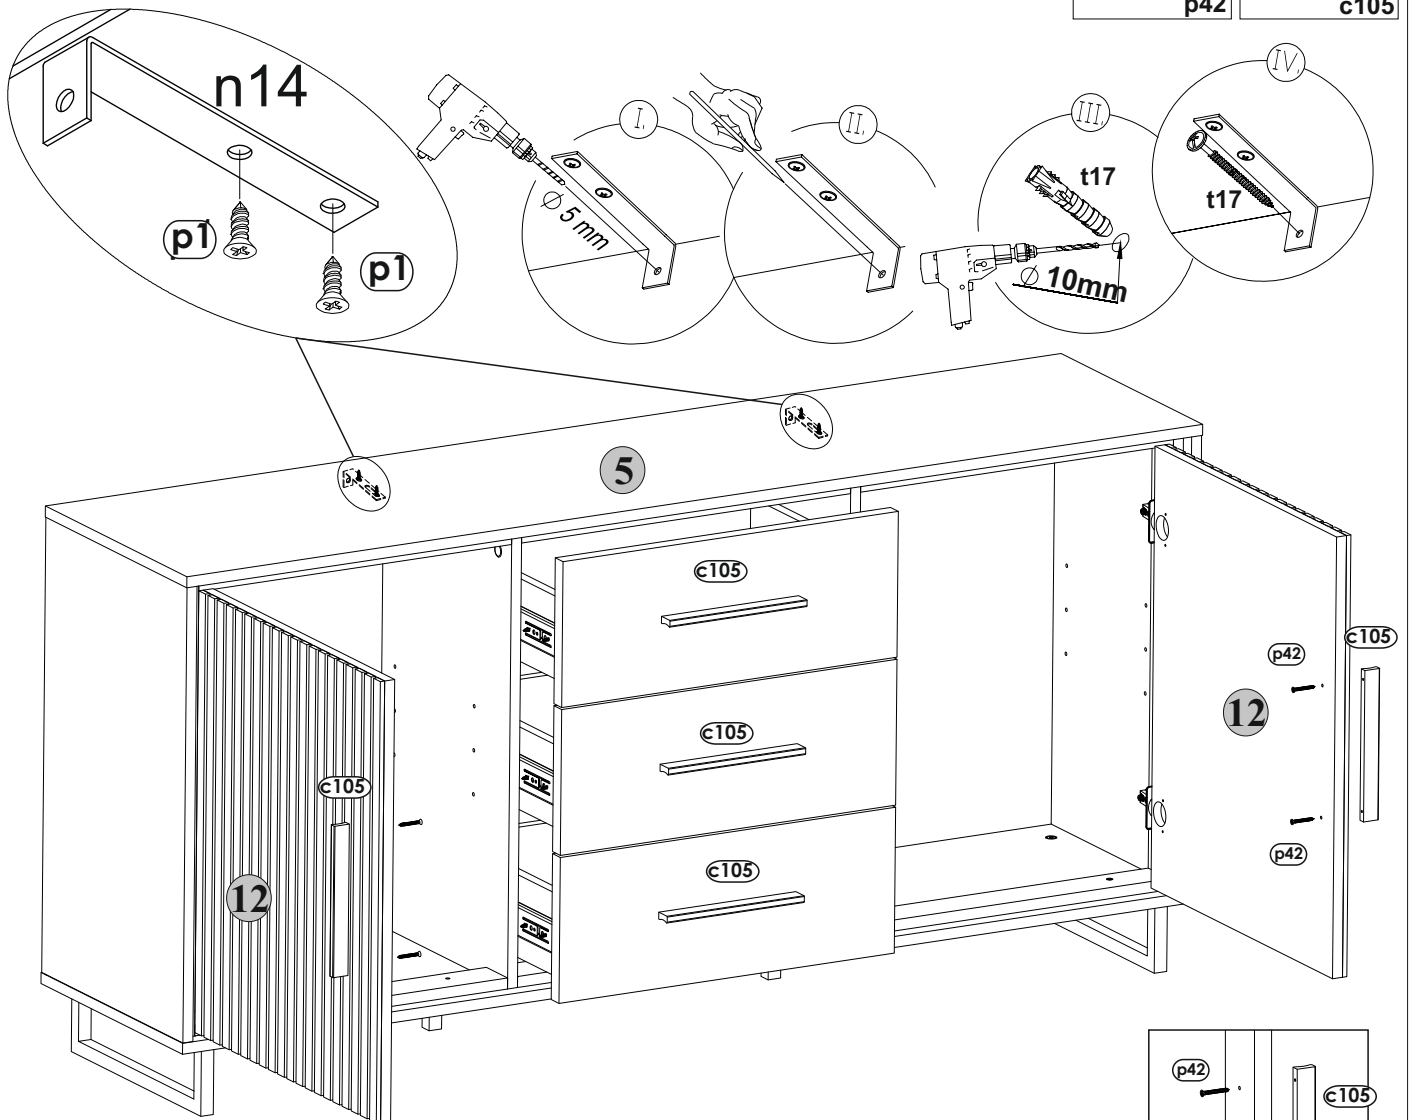

9

I4

8x

ø5x17 mm **d1**

20x

s2

