

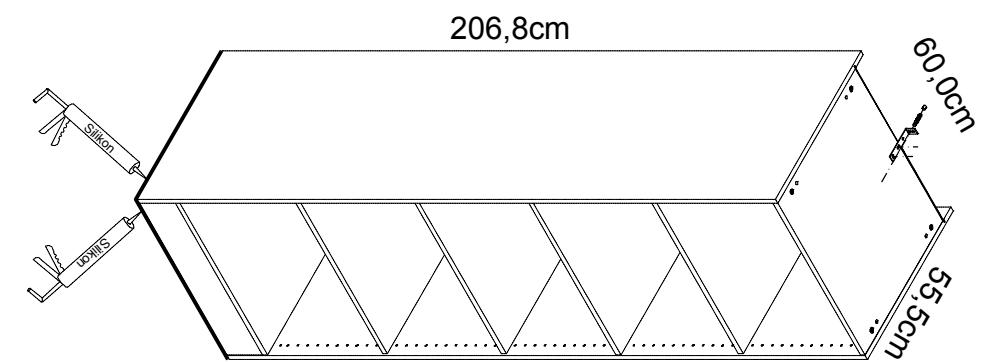
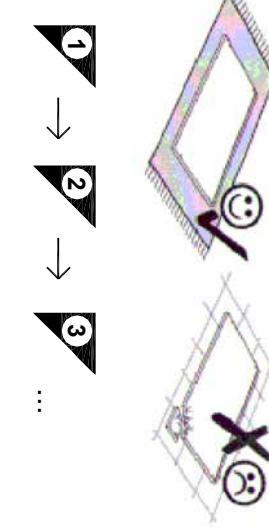


OPI
FIT[®]

JAKA-BKL GmbH
Jaka-Straße 3
D-32351 Stemwede-Wendeborn






HR606-7

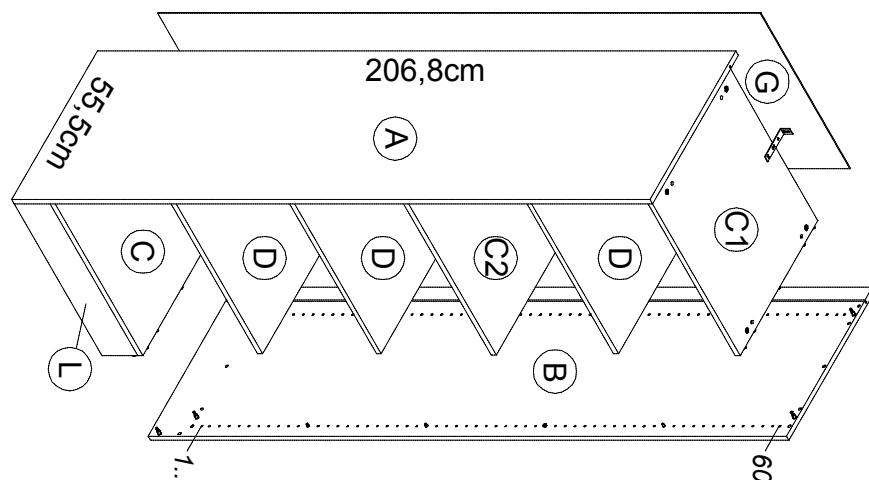

Montageanleitung



Service-Hotline
01805-678101
0,14€ pro Minute
++49 für Österreich
Auslandstarif pro Minute
service@jaka-bkl.de
voor Nederland en België
00800-40119350
benelux@jaka-bkl.de

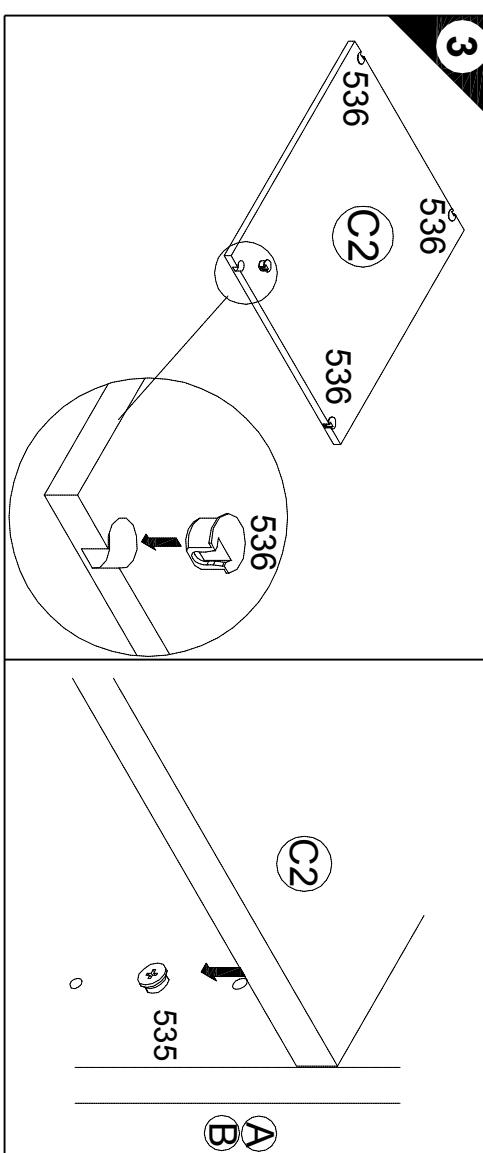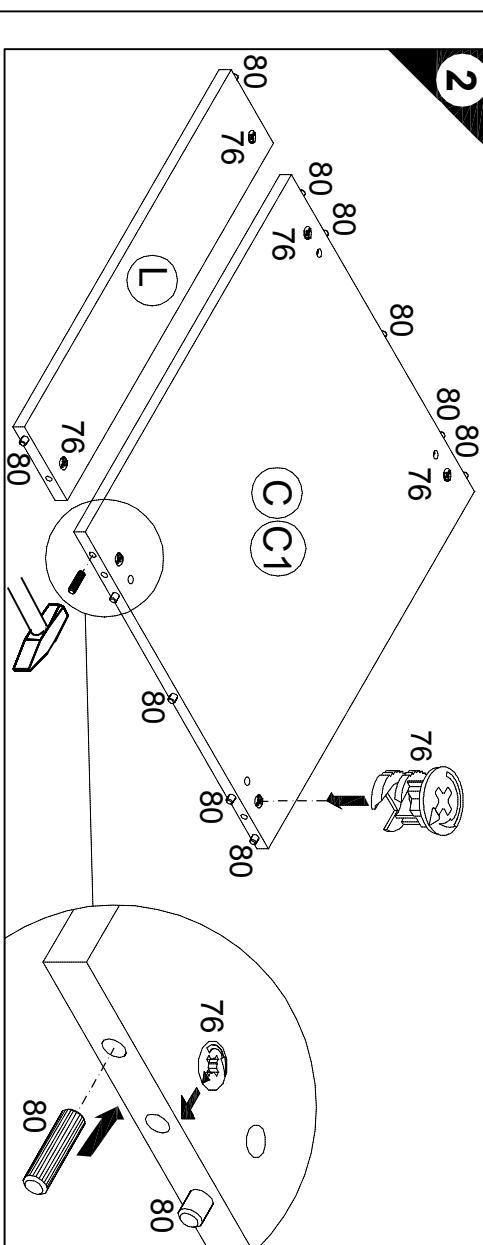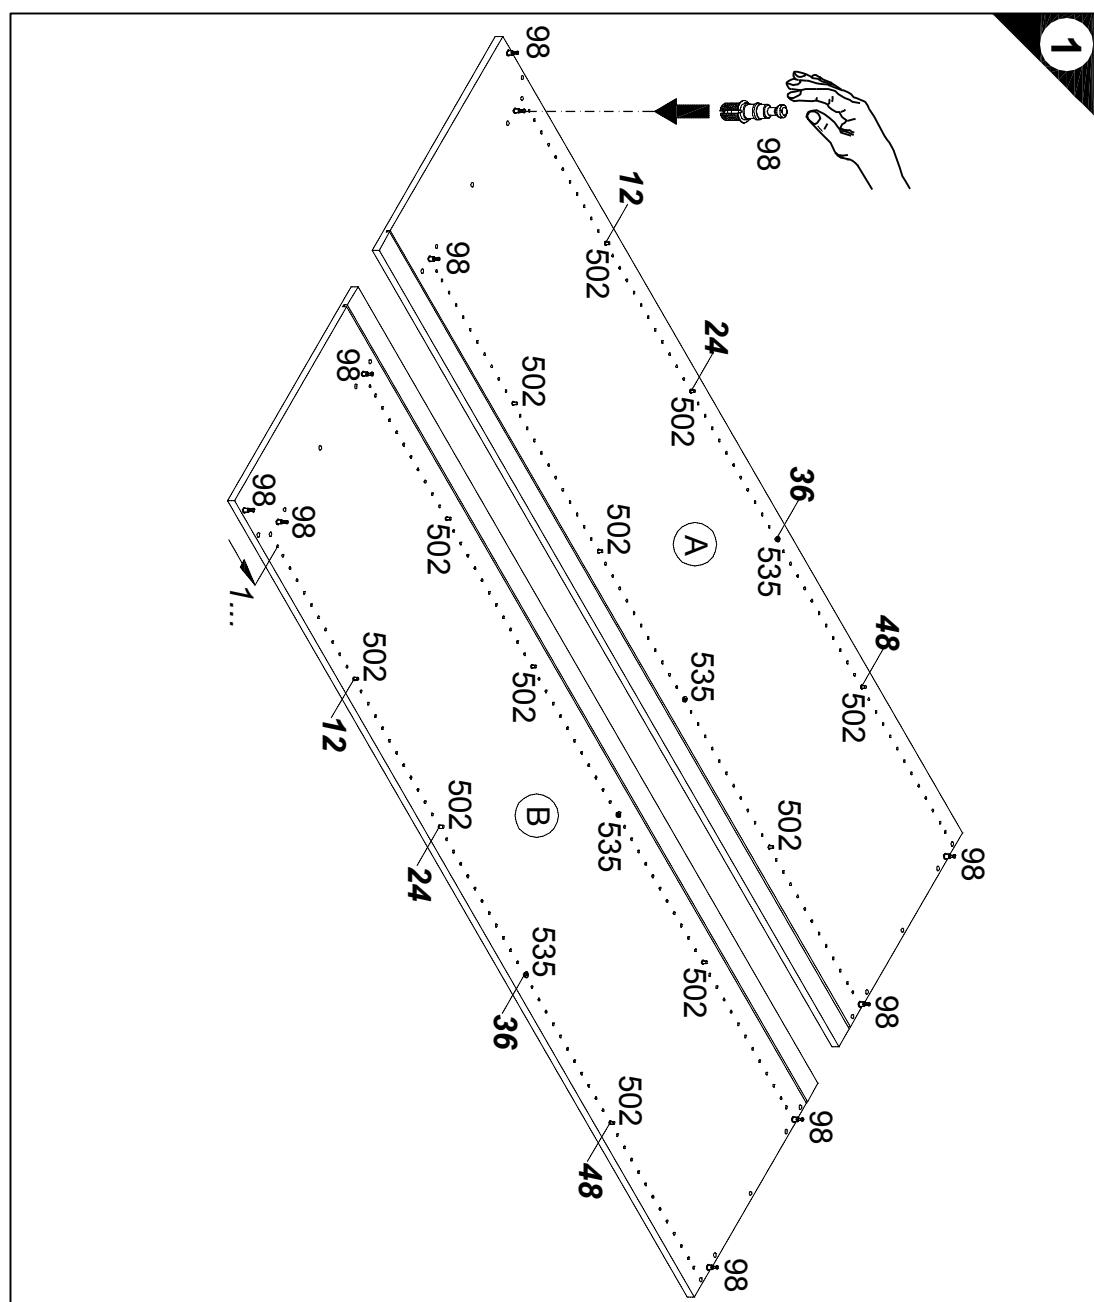

Ersatzteile/Spare parts/pièces de recharge/Reserveonderdelen/Piezas de recambio/Ricambi/Запасные части/Części zamienne/pótkatkářesek/Náhradní části/Nadomestni deli/varaosat/reservdelar/náhradné diely/Utilizají pieše de schimb/Yedek parçalar

60cm HR606-7 | (A) E961011 (B) E961012 (C) E954223 (C1) E954223 (C2) E950223 (D) E950303 (G) E970020 (L) E970973

1 → 2 → 3 ...

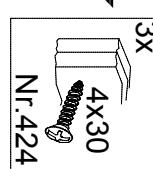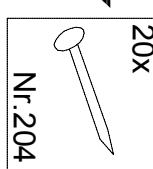

8

7

6




5

4



3

2

1

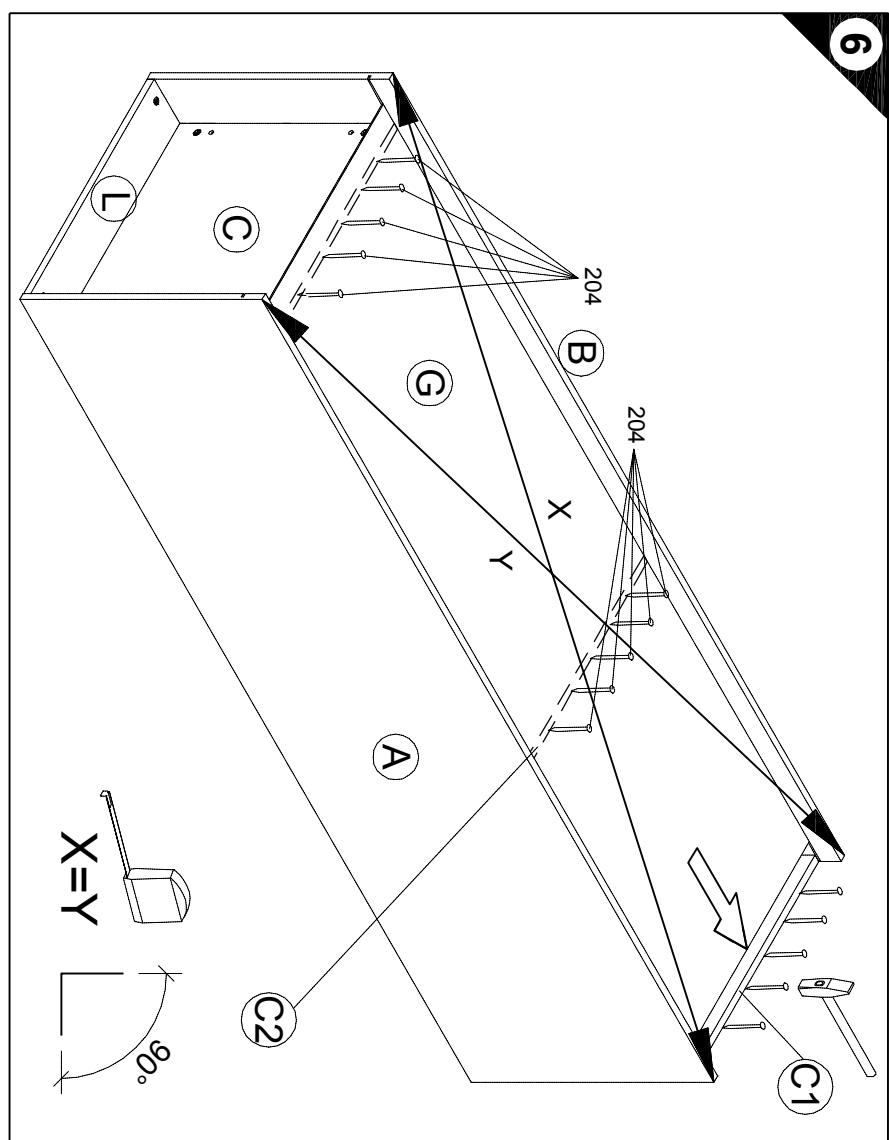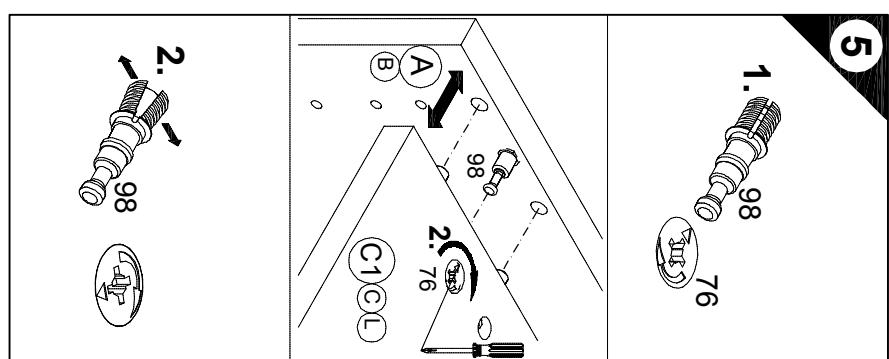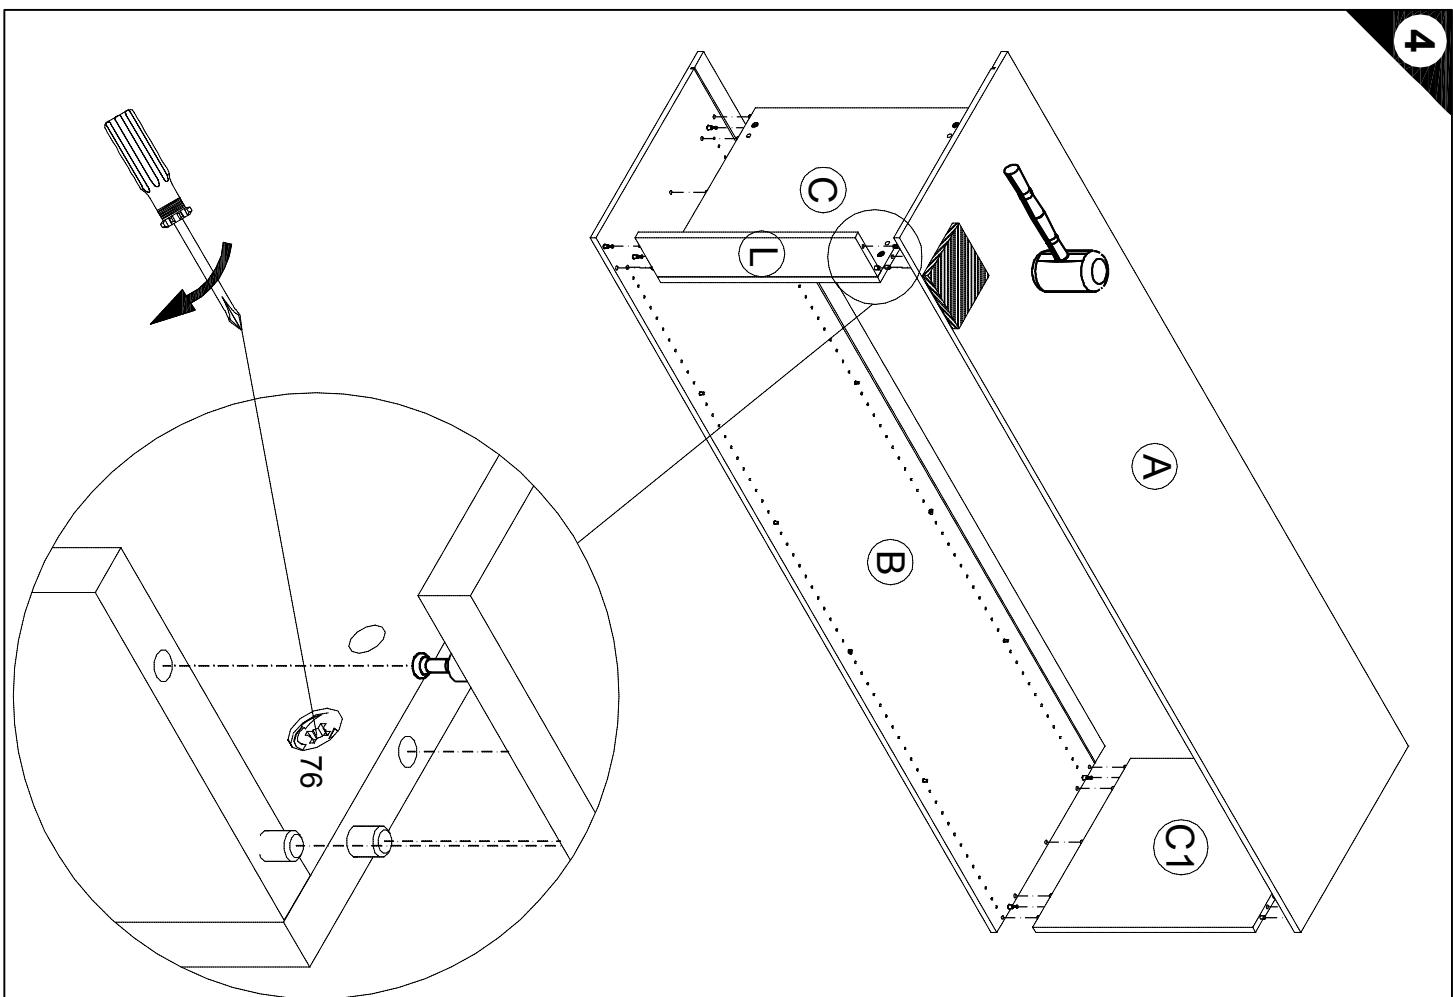

7

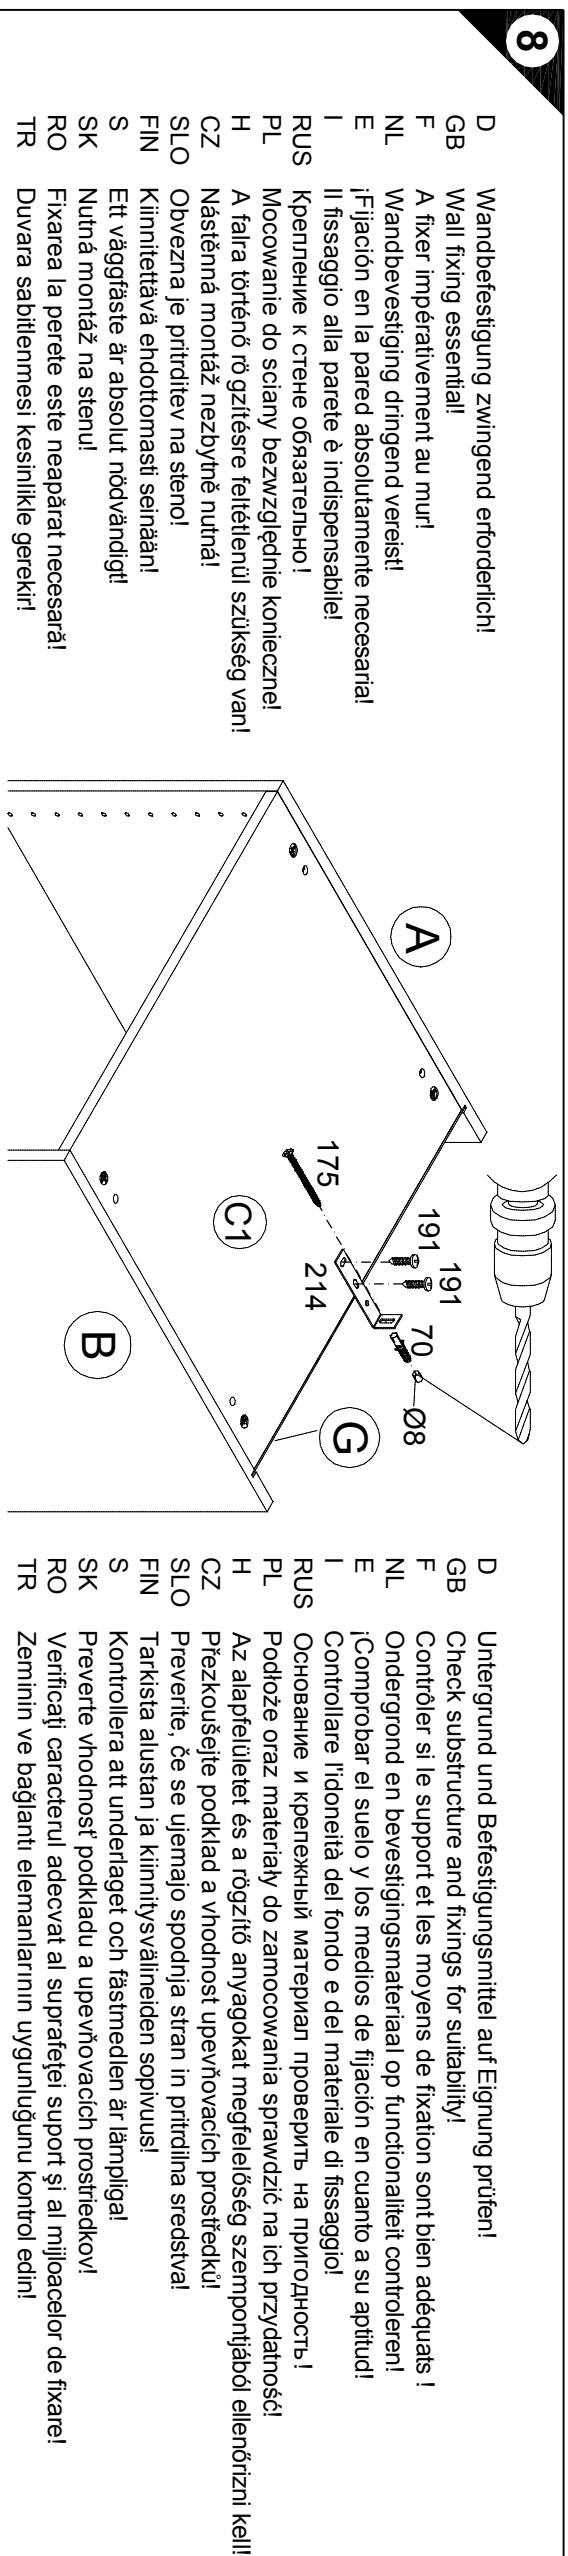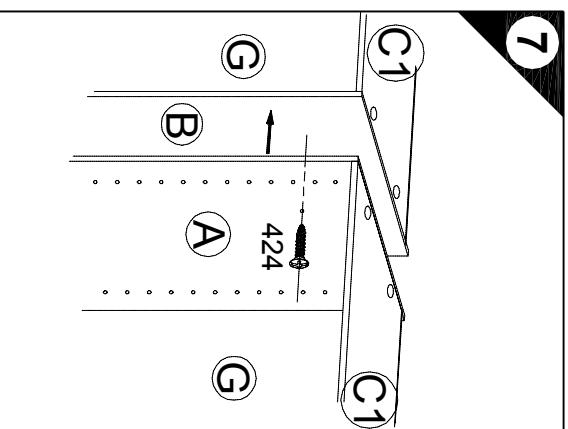

D Wandbefestigung zwingend erforderlich!
GB Wall fixing essential!
F A fixer impérativement au mur!
NL Wandbevestiging dringend vereist!
E ¡Fijación en la pared absolutamente necesaria!
I fissaggio alla parete è indispensabile!
RUS Крепление к стене обязательно!
PL Mocowanie do ściany bezwzględnie konieczne!
H A falra történő rögzítésre feltétlenül szükség van!
CZ Nášenná montáž nezbytně nutná!
SLO Obvezna je pridržitev na stenu!
FIN Kiinnitetävä ehdottomasti seinään!
S Ett väggfäste är absolut nödvändigt!
SK Nutna montáž na stenu!
RO Fixarea la perete este neapărat necesară!
TR Duvara sabitlenmesi kesinlikle gereklidir!