
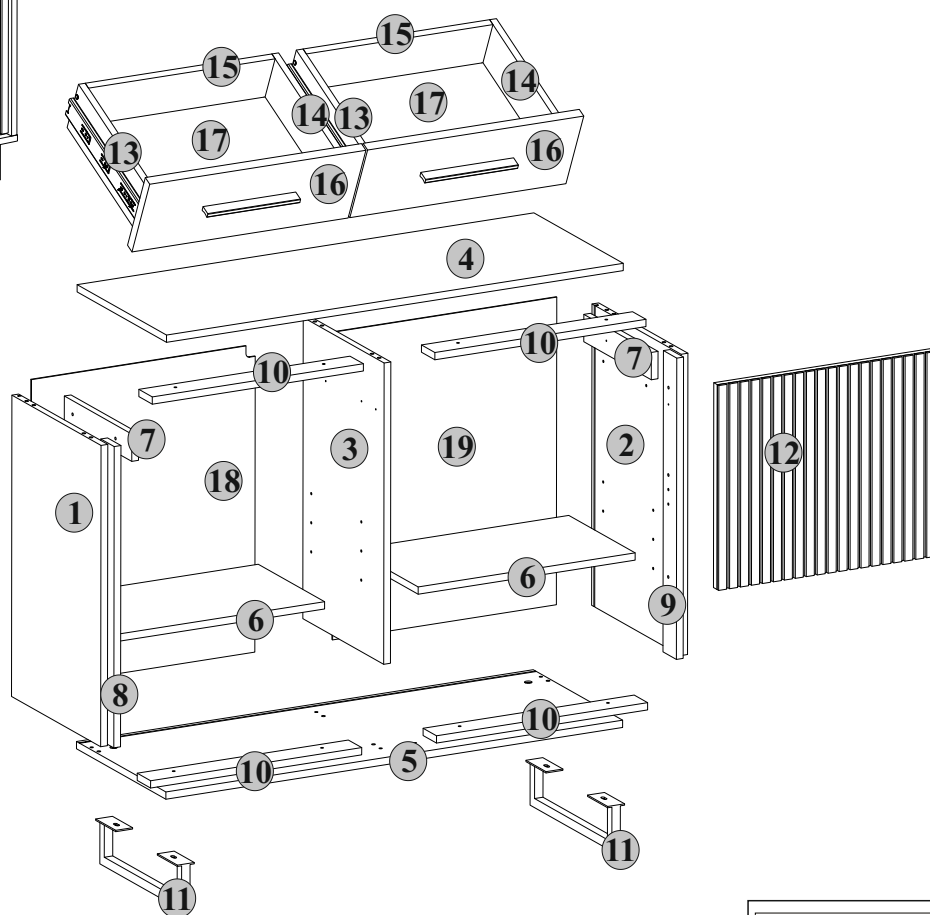
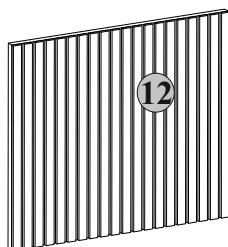
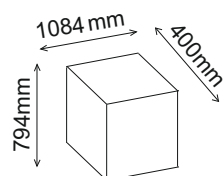
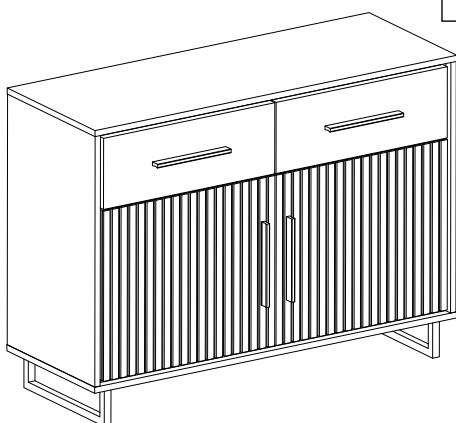



“3409”

versionsnummer: 02.08.2023


Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.




B5

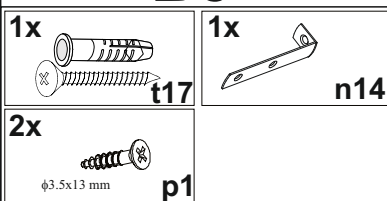


B1

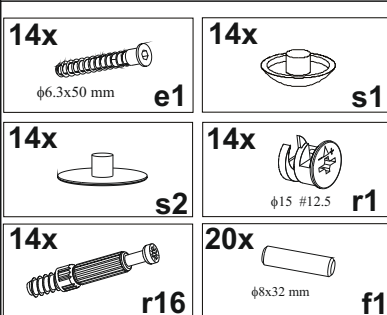


B2

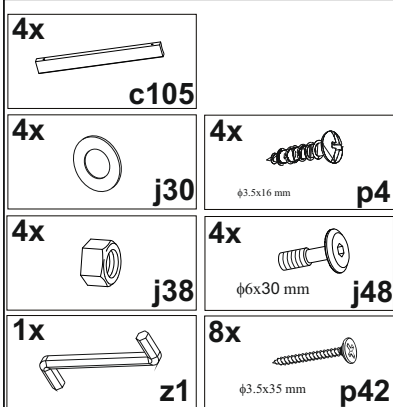


B3

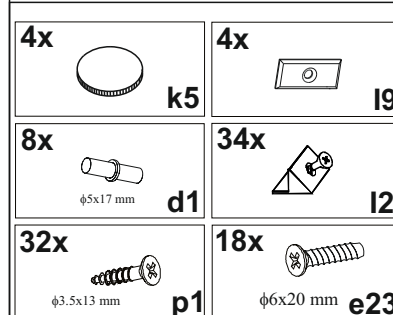

B4

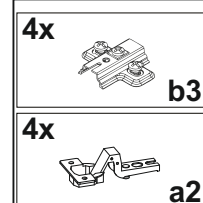

1

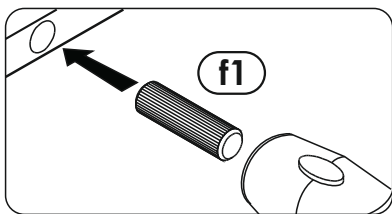





4x

 $\phi 6 \times 20$ mm **e23**

6x




 $\phi 15$ #12.5 **r1**

12x

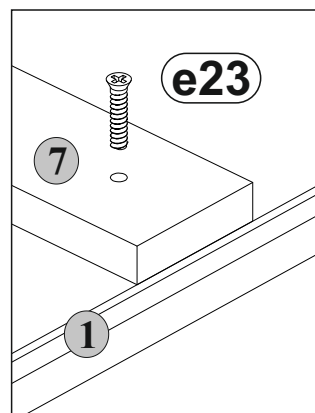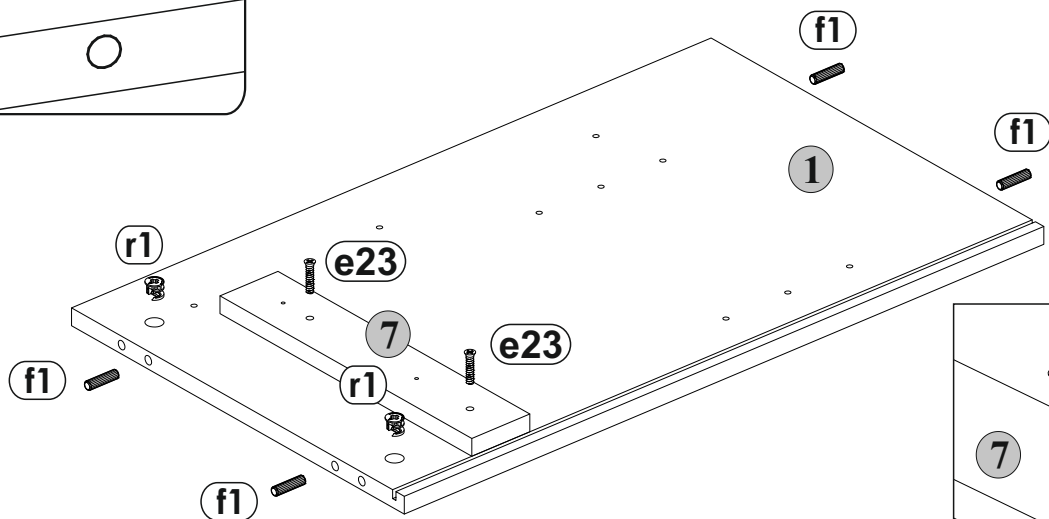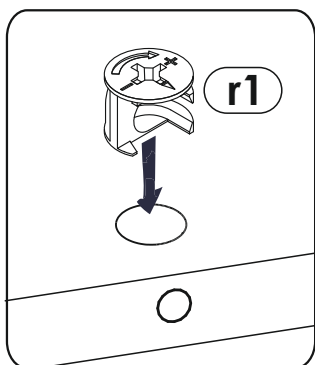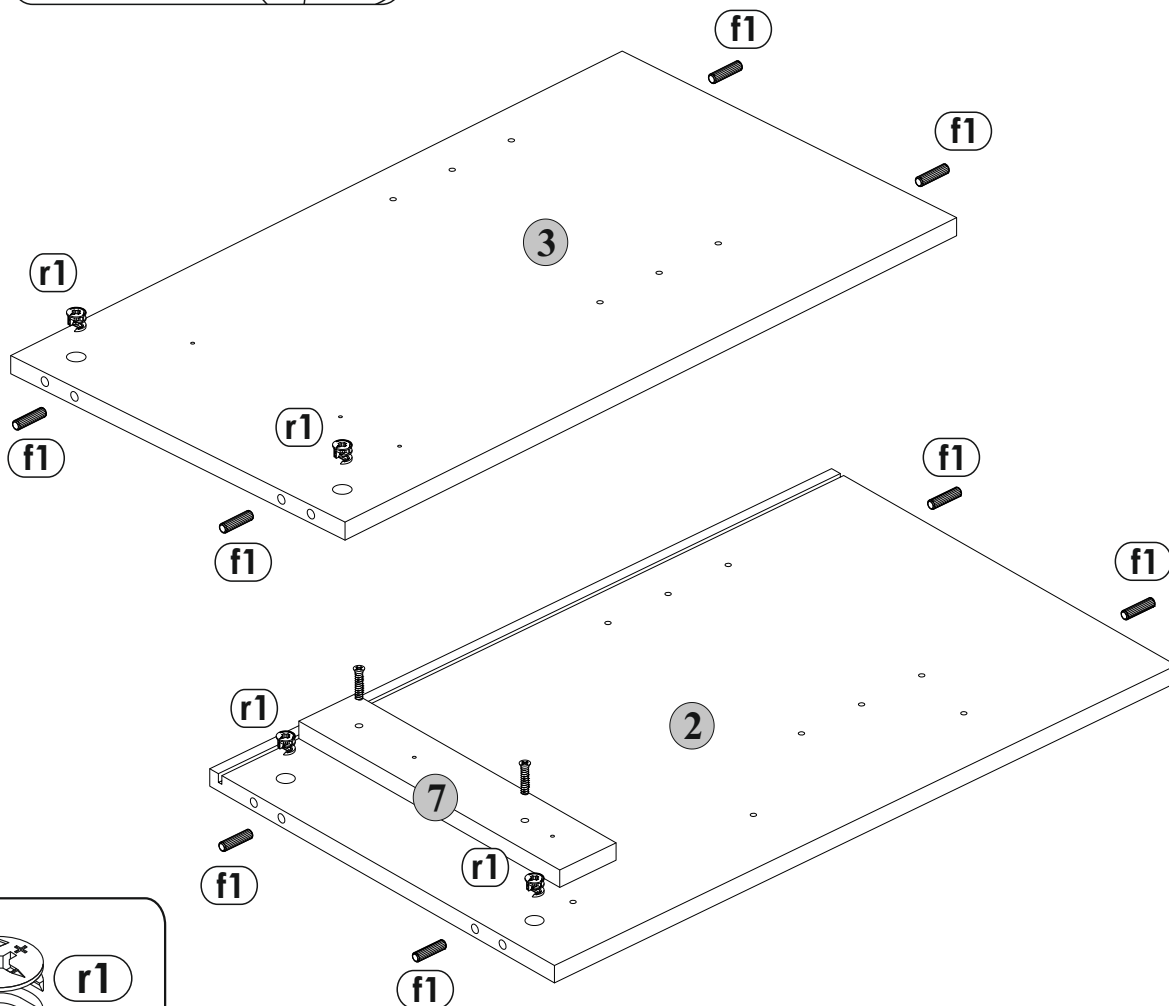



2

2

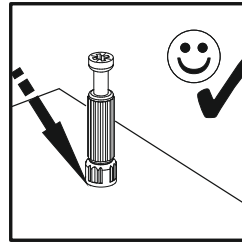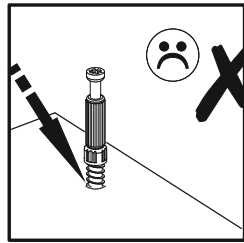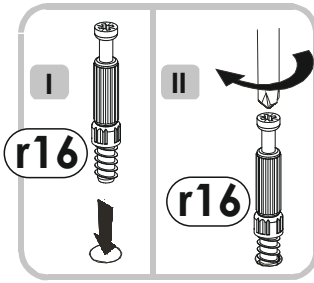

6x
r16

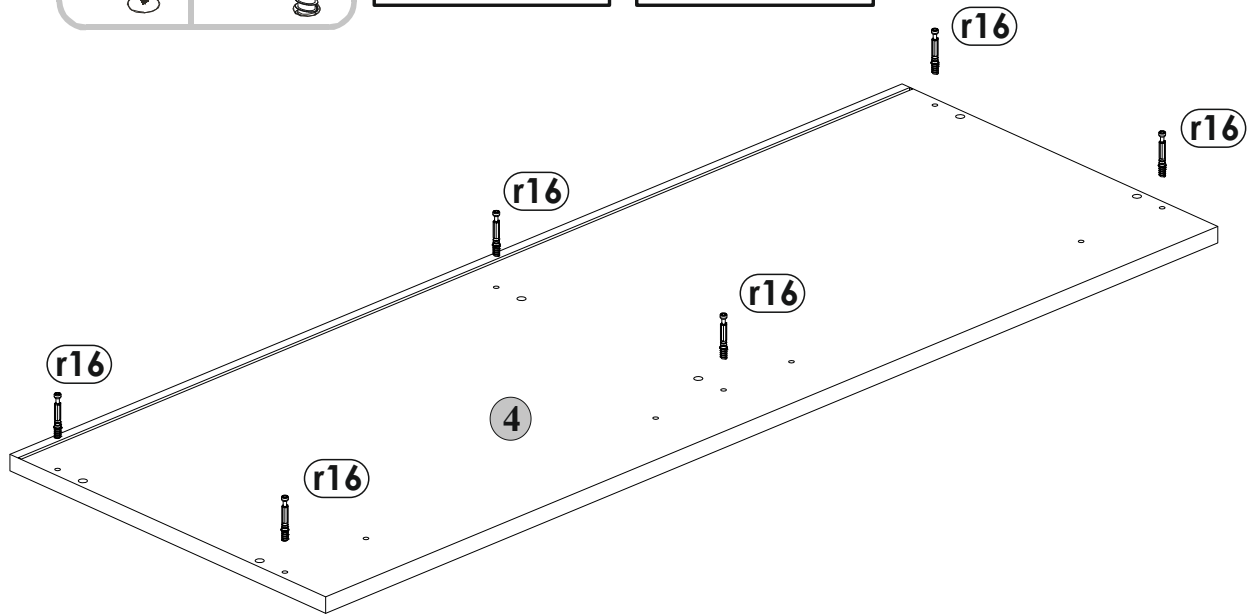


3

4x
j48

4x
j30



4x
j38

4x
k5


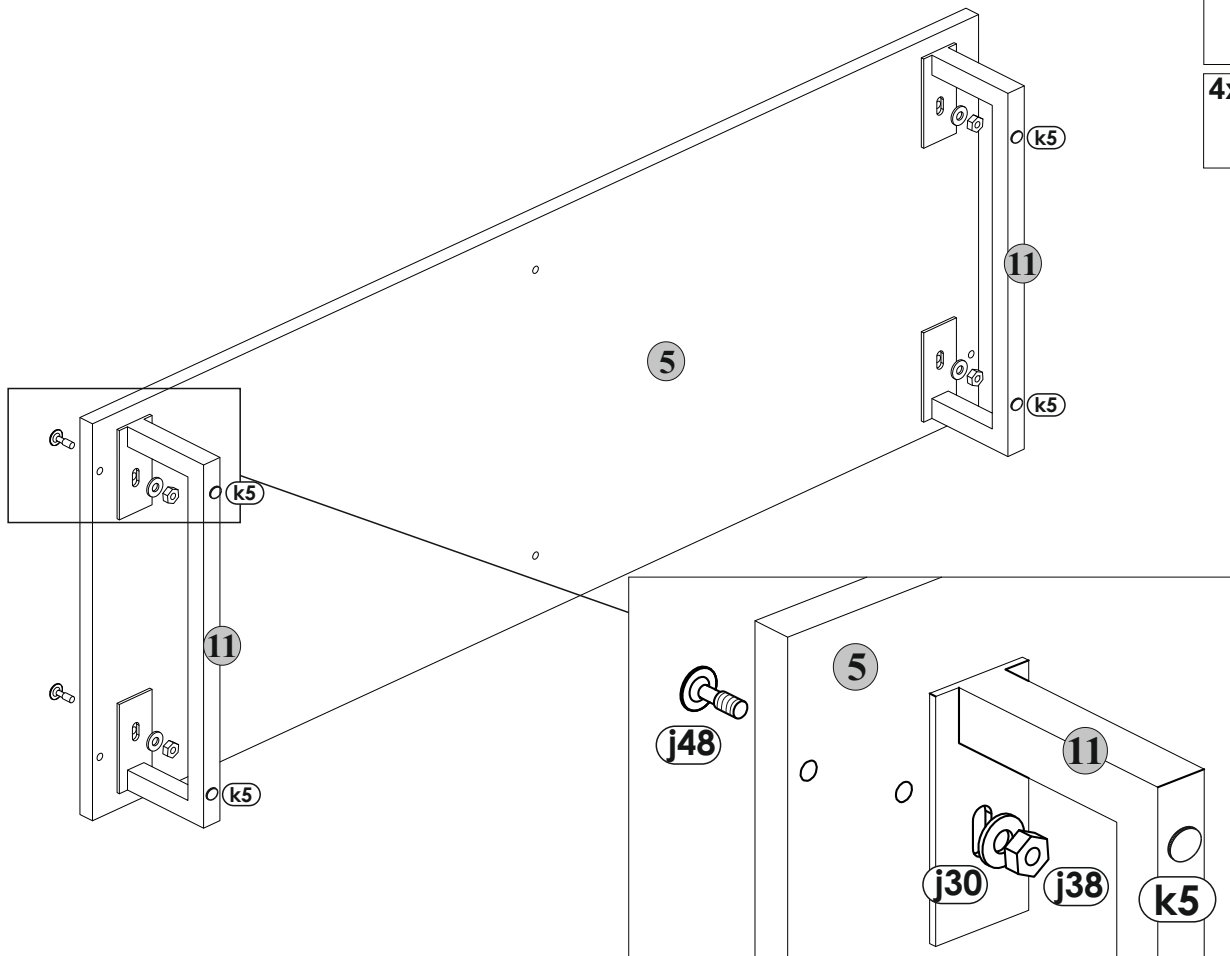


3


4

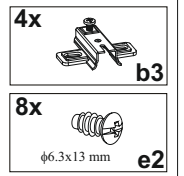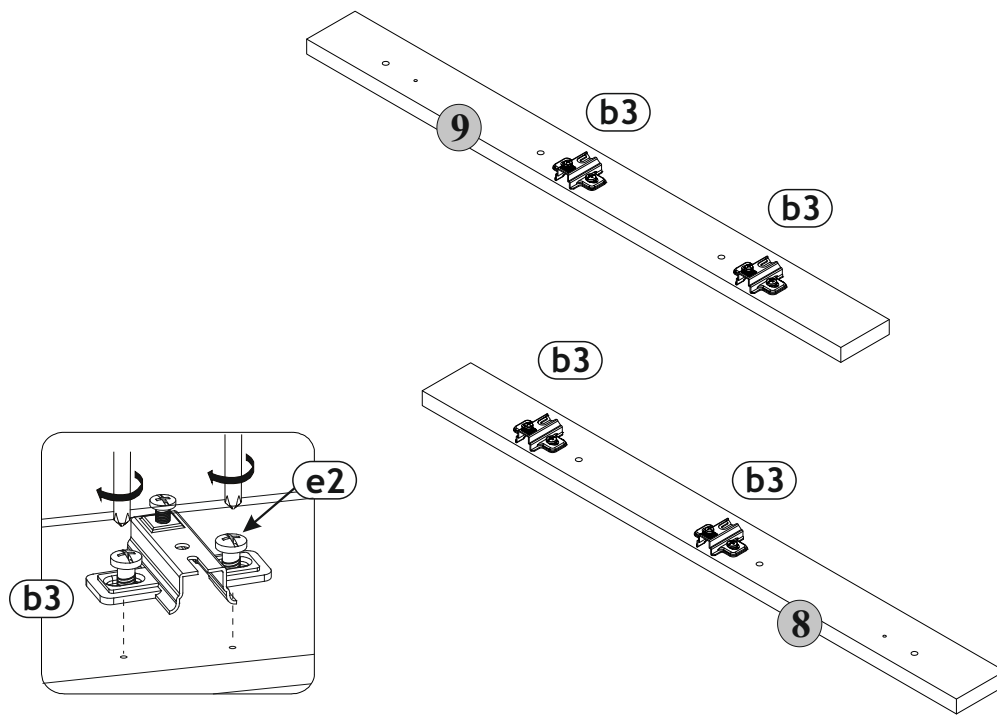

5

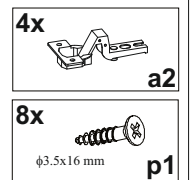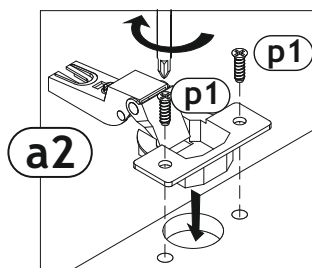

2x

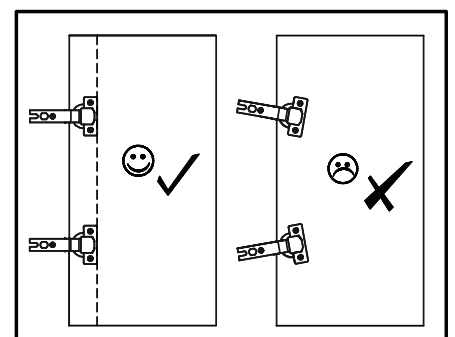




4

6


6x
e1

6x
s1

1x
z1

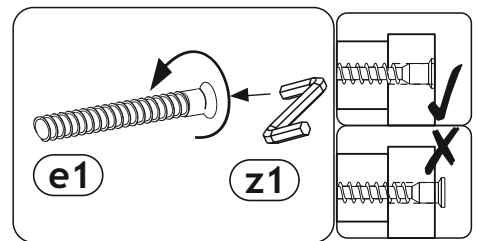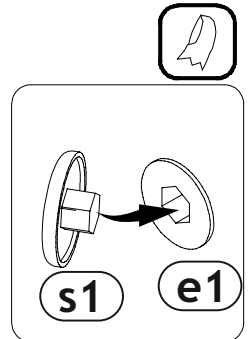
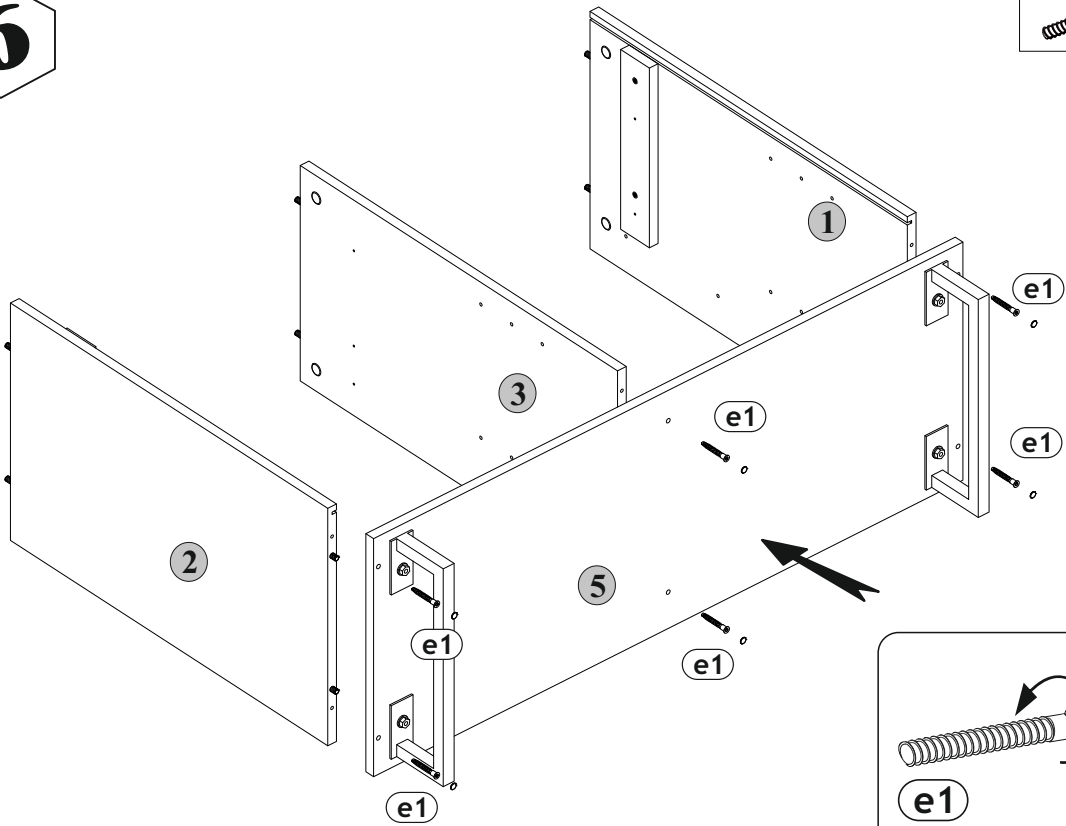


7




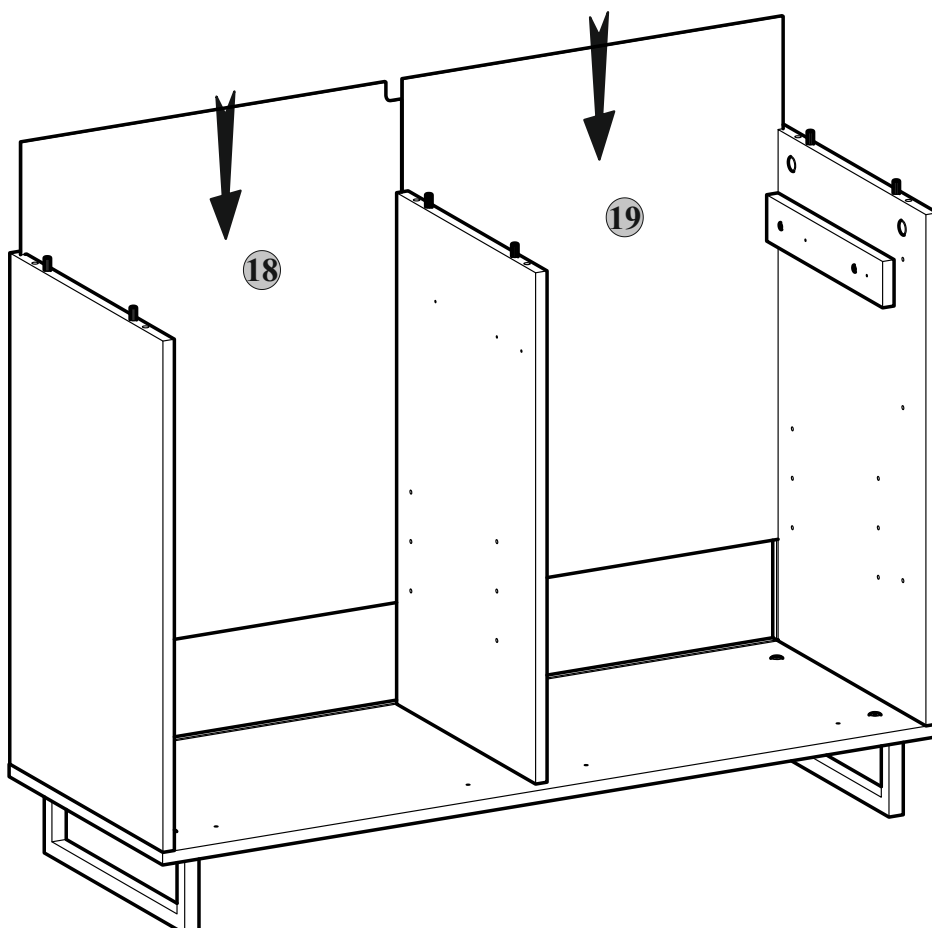


5


8

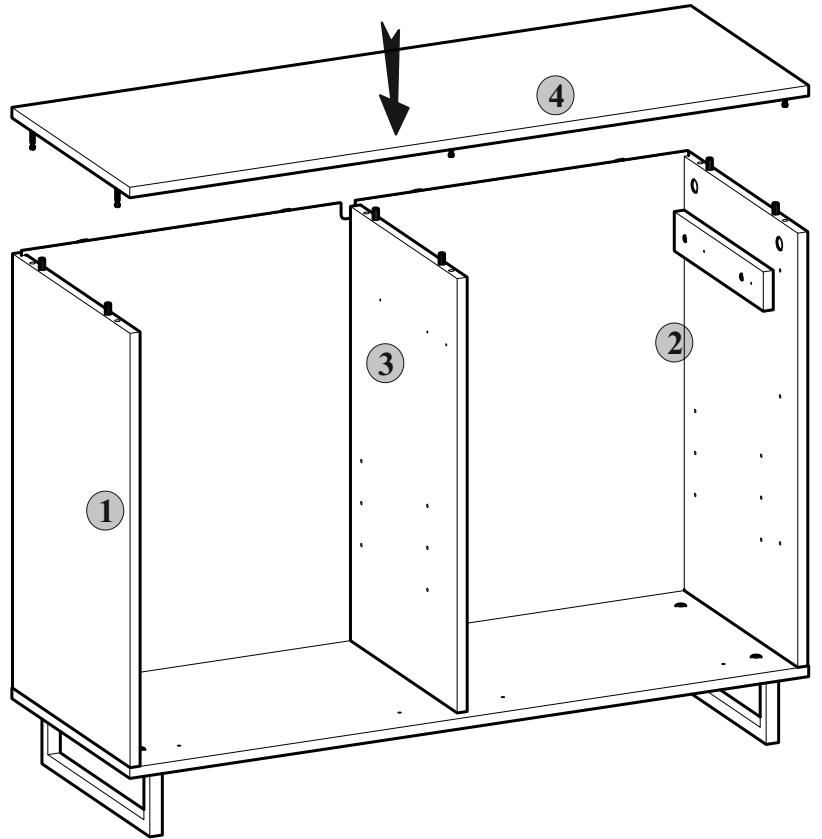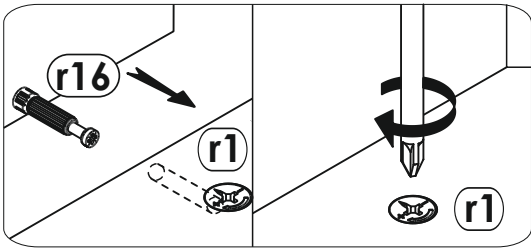

9

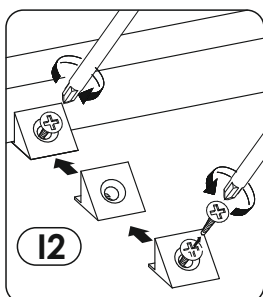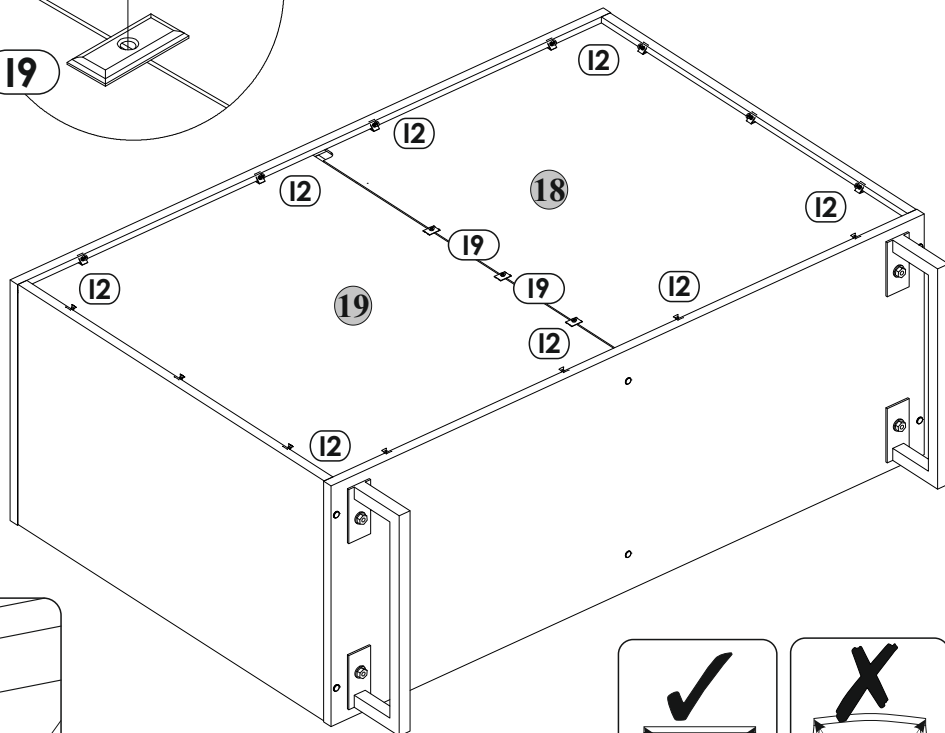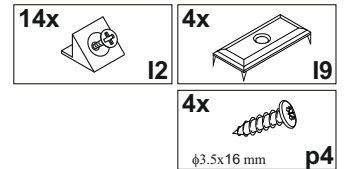
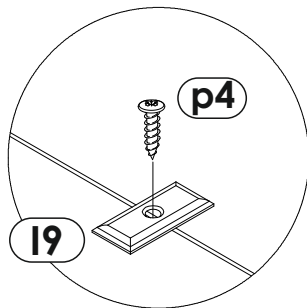


6

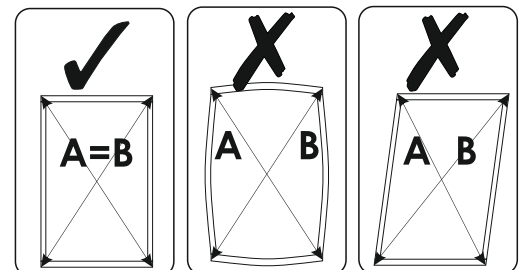



10

6x
φ6x20 mm
e23

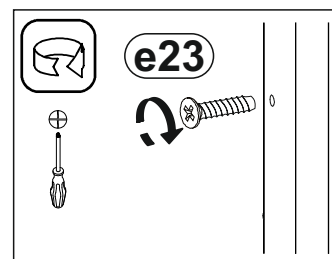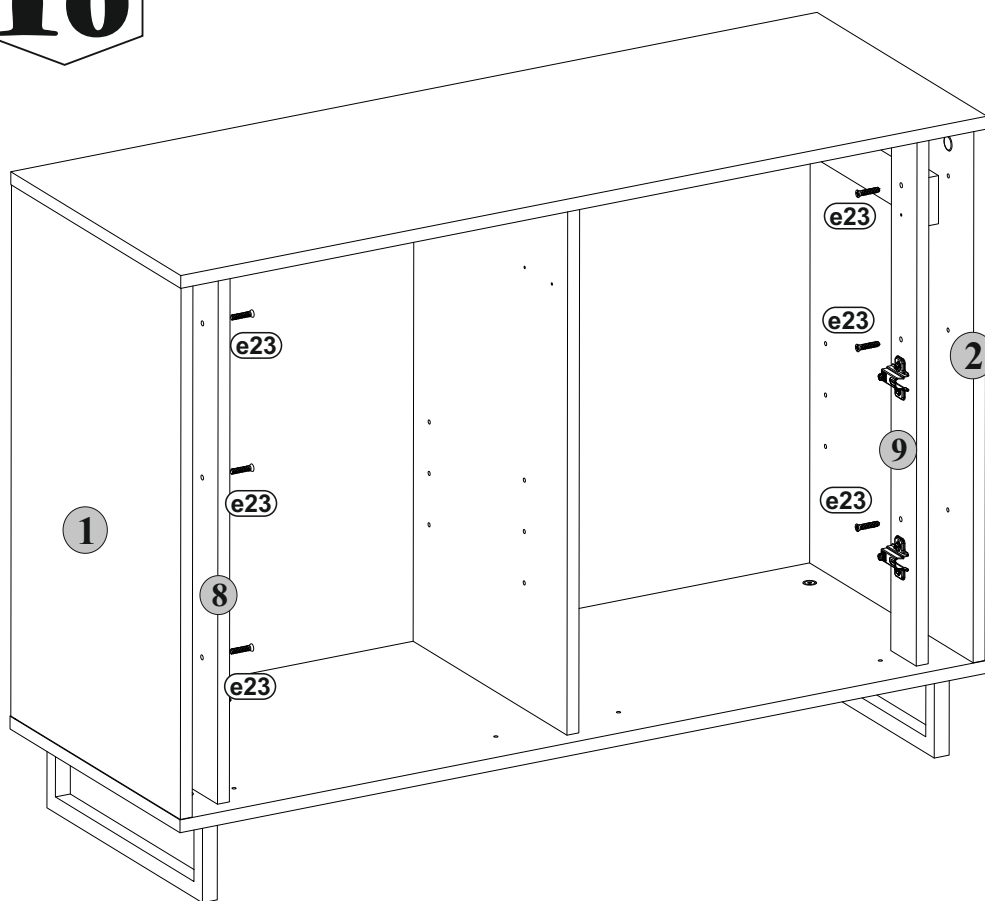





















11

8x
φ6x20 mm
e23

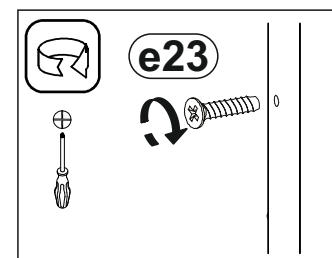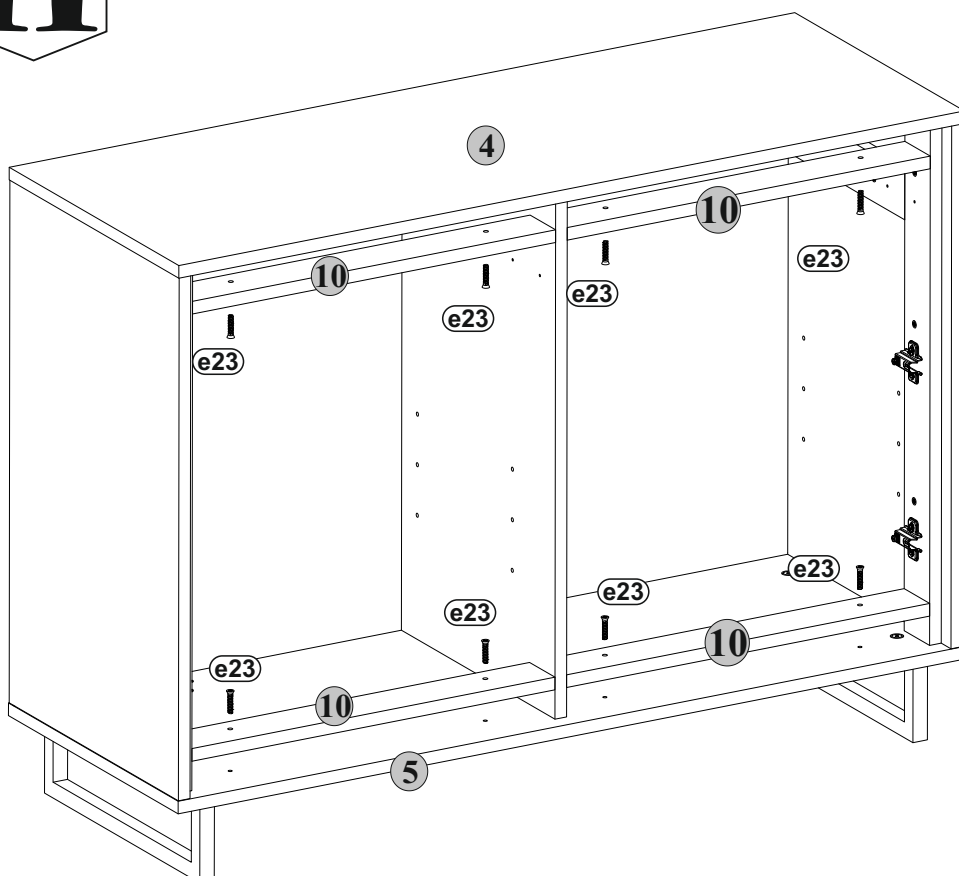


7

12

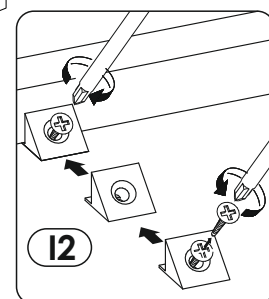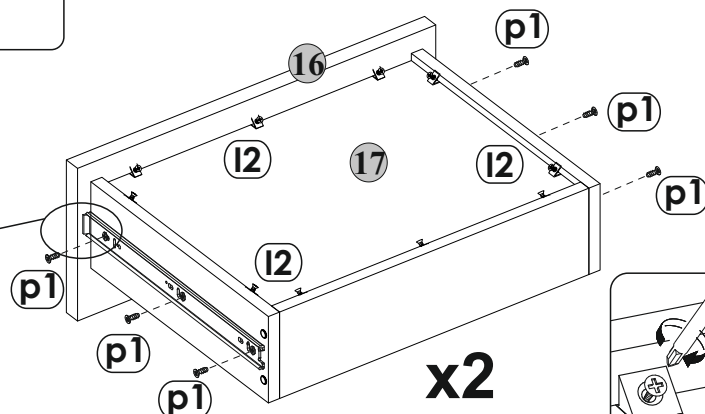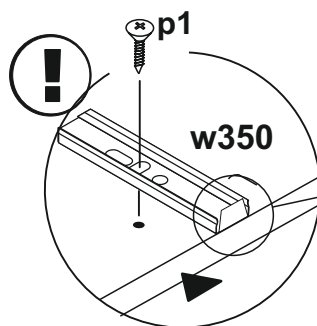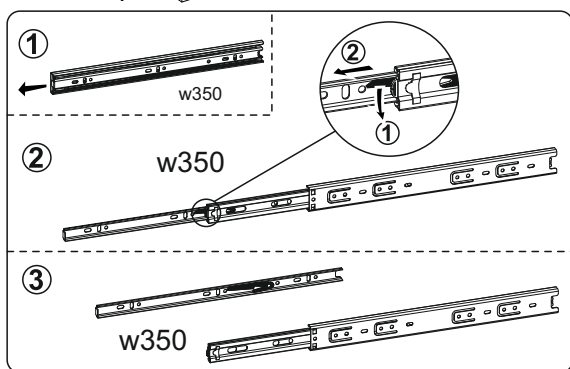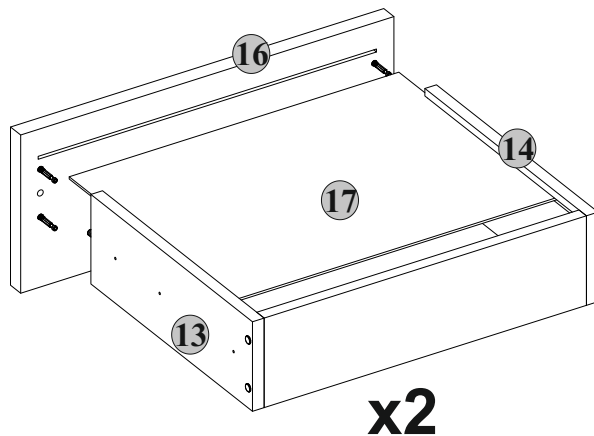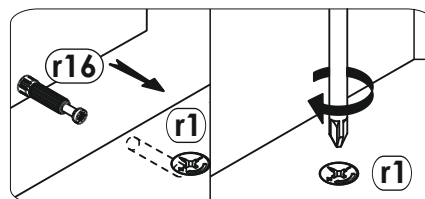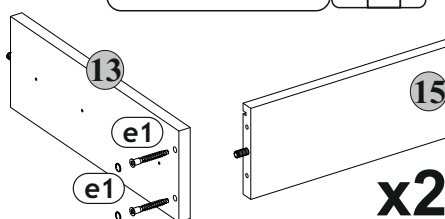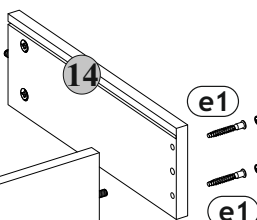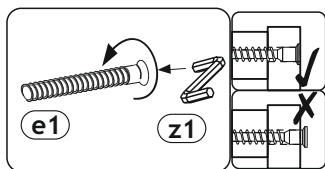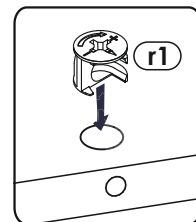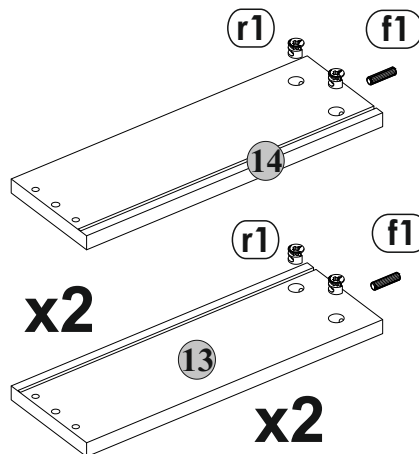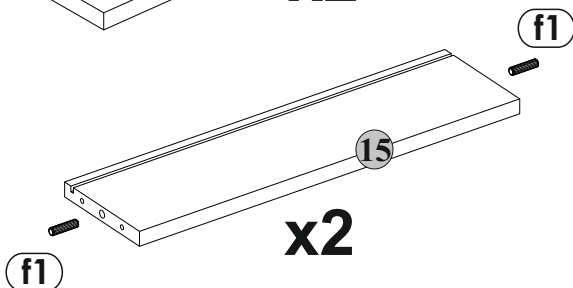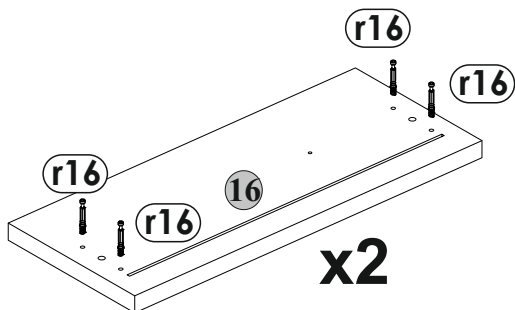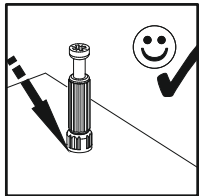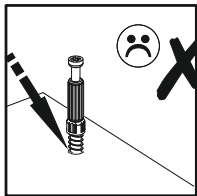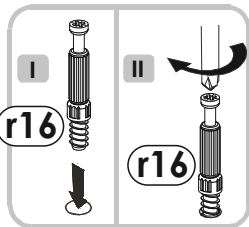

8

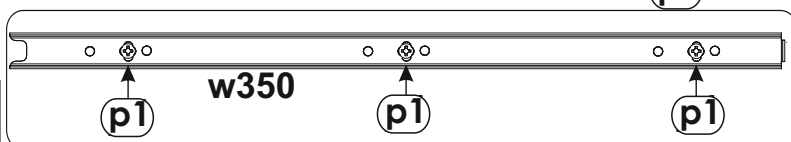

13





1x
t17

1x
n14

2x
φ3.5x16 mm
p1


2x
w350

12x
φ3.5x13 mm
p1

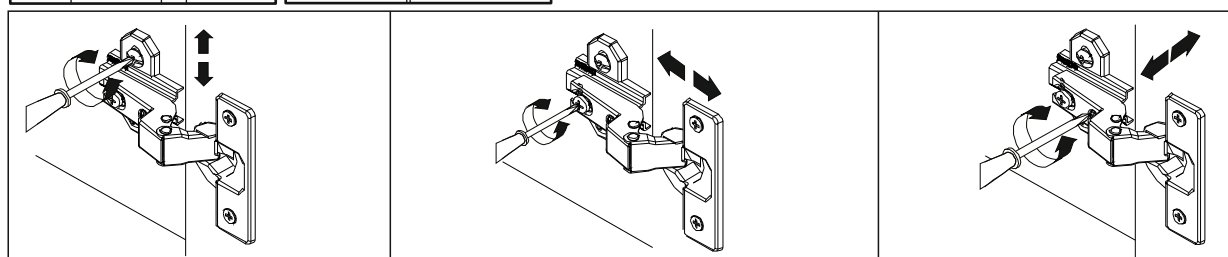
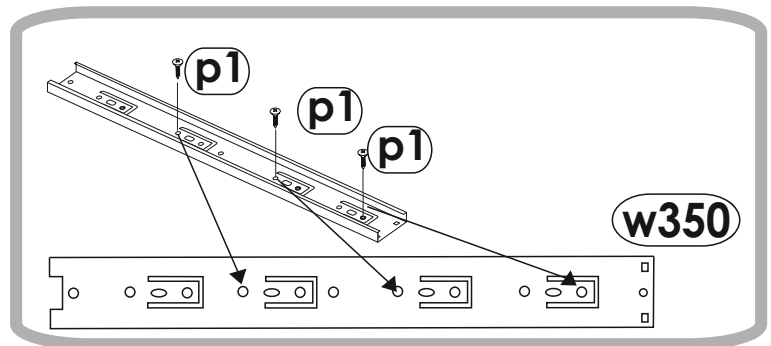
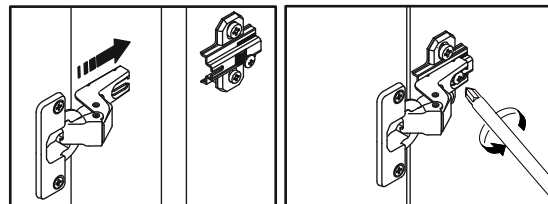
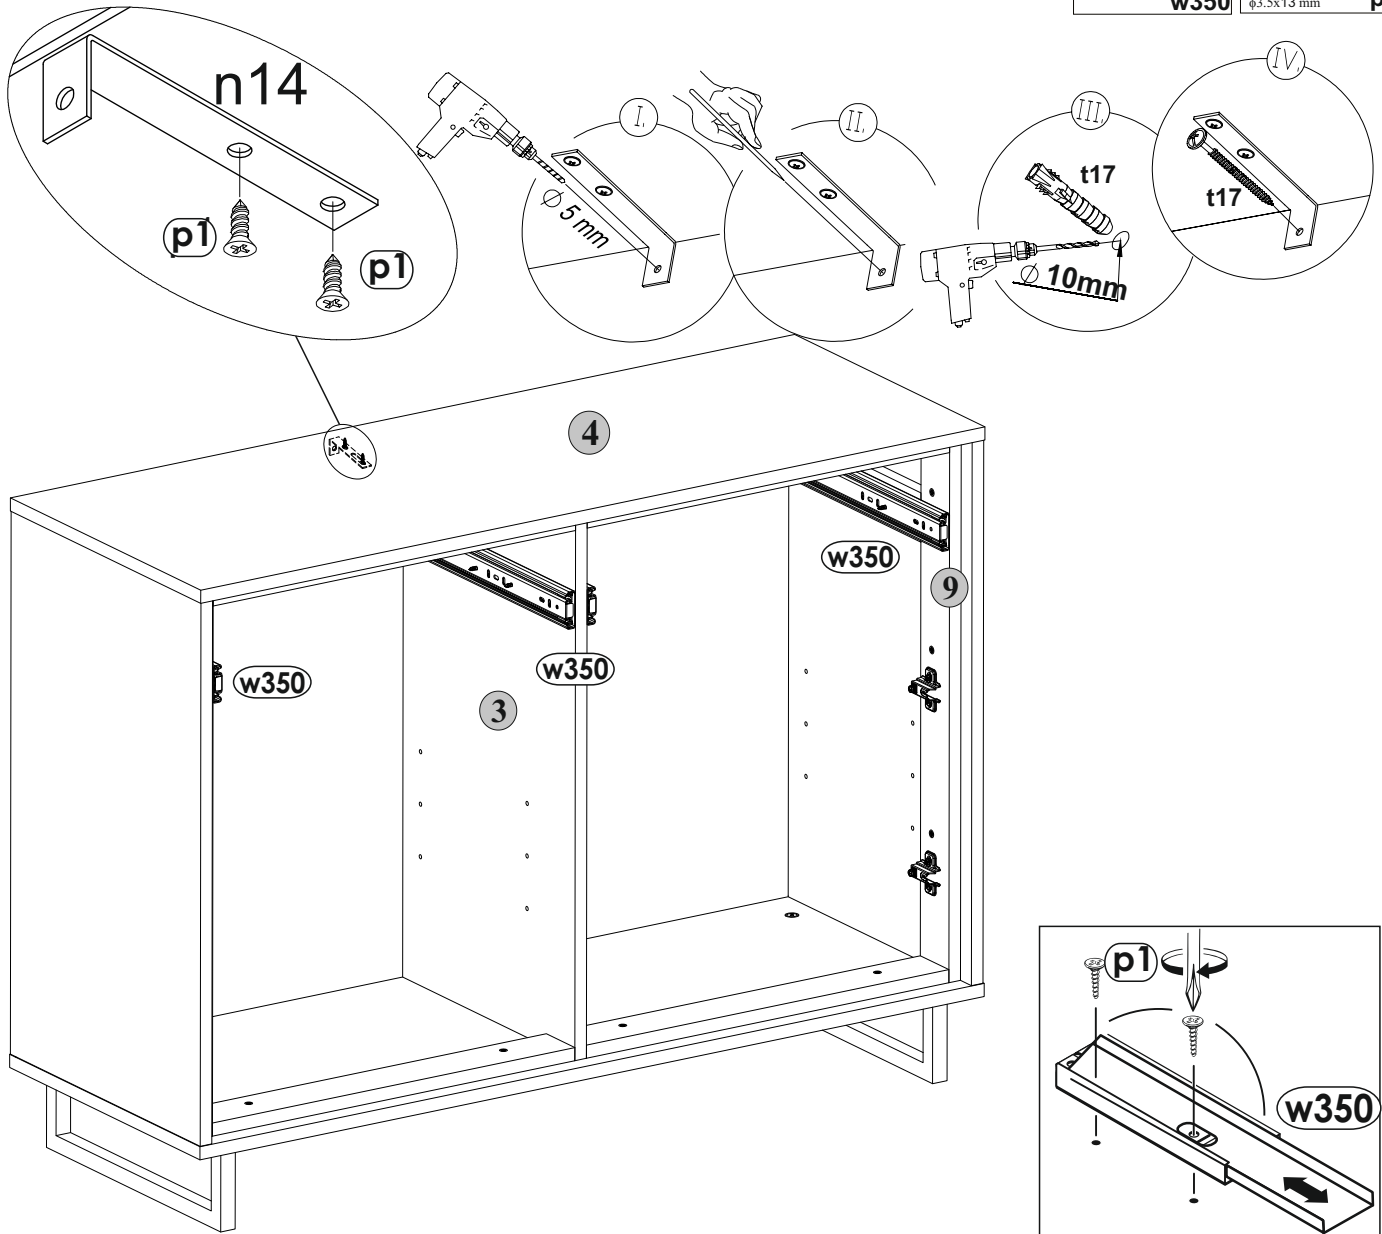


9

14

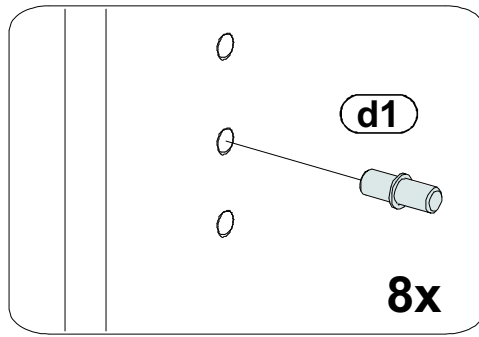

8x φ5x17 mm d1	14x s2
8x p42	4x c105

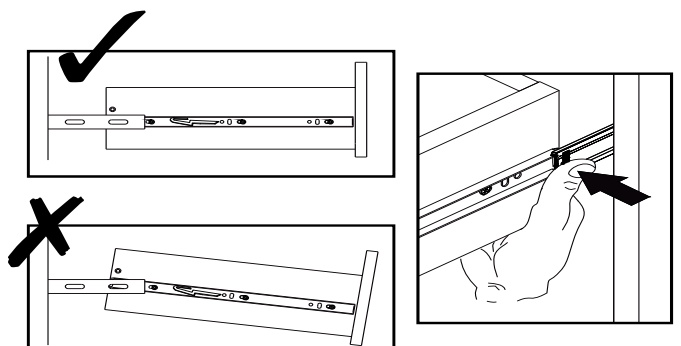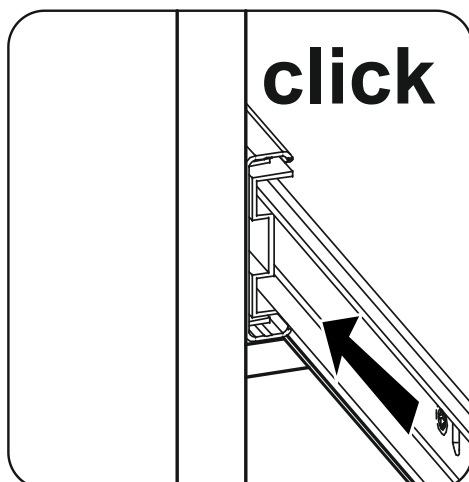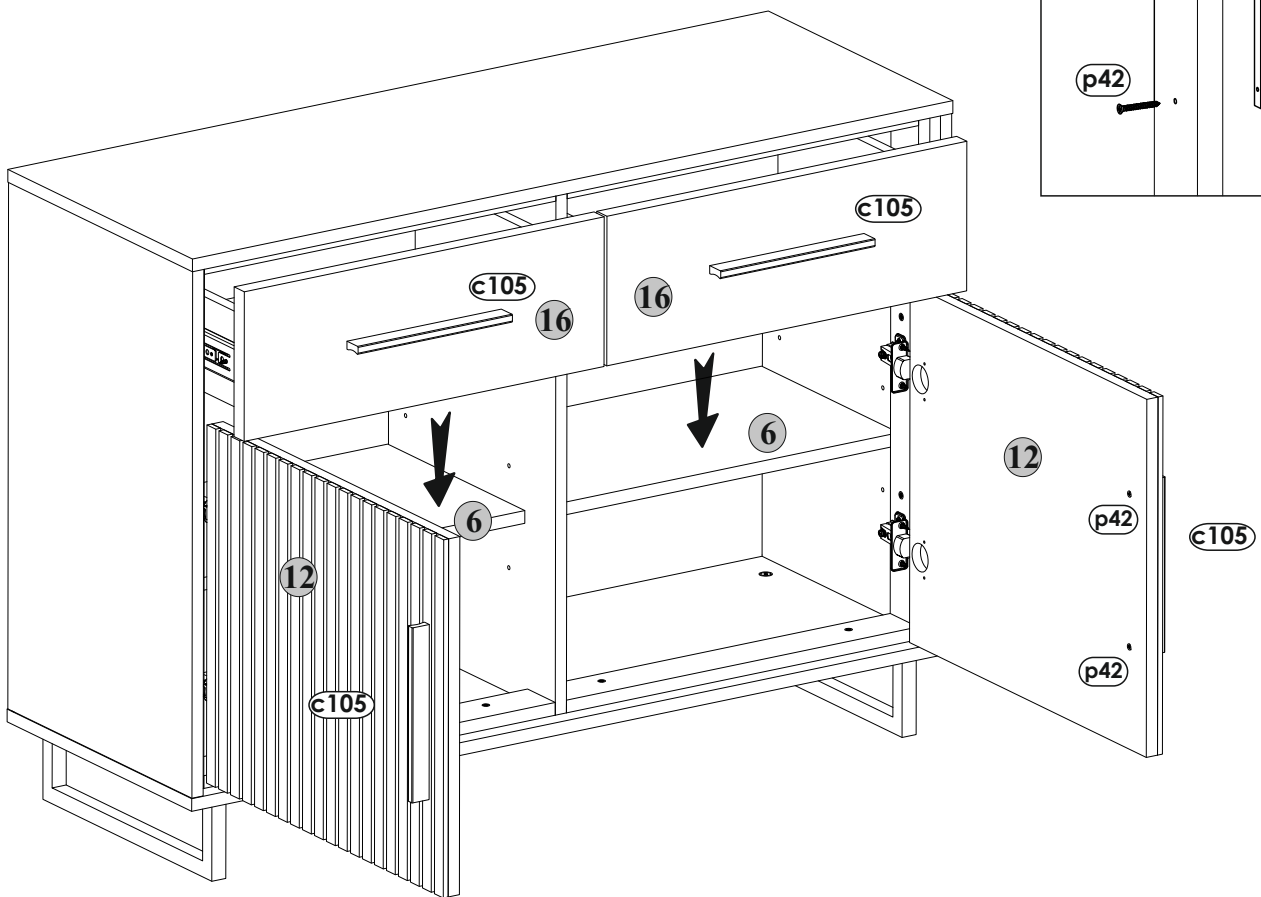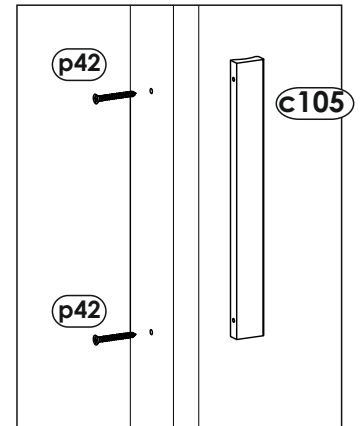

10