





VILLACH



40 min.



13mm




Colly 1/3: Ix1, IVx1

Colly 2/3: IIx1


Colly 3/3: IIIx2; Ax8 ; Zx1 Bx4

R

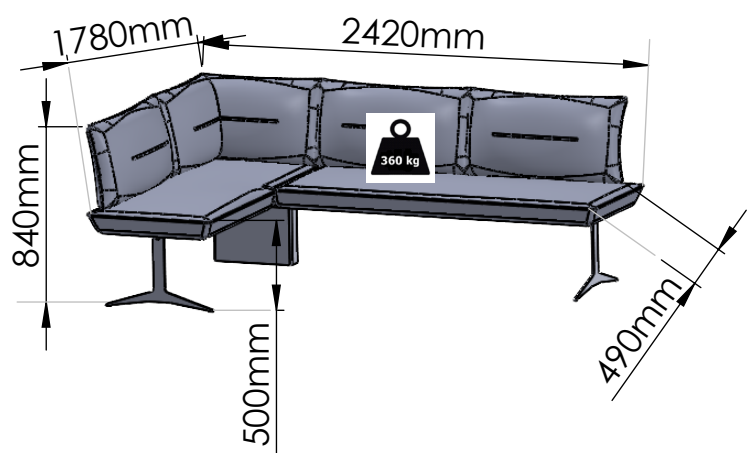


0 10 20 30 40 50 60 70 80 90 100 mm

L

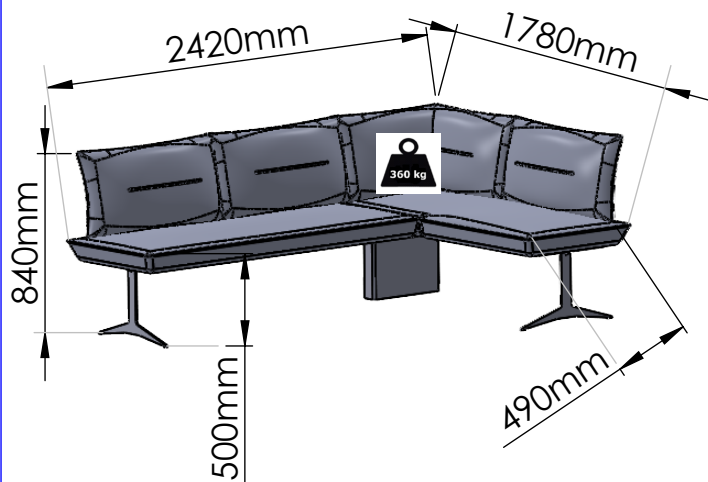



Dx4 M8	Ax8 M8x30	Bx4 M8
Ex5 160mm	Cx4 M8x50	Zx1 6mm

R

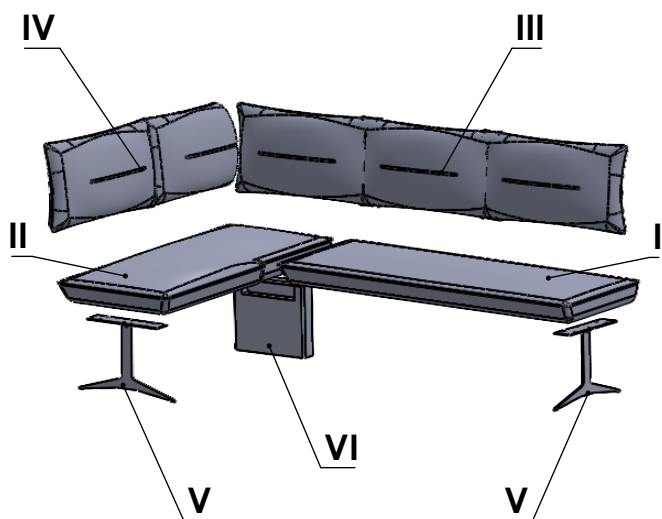


L

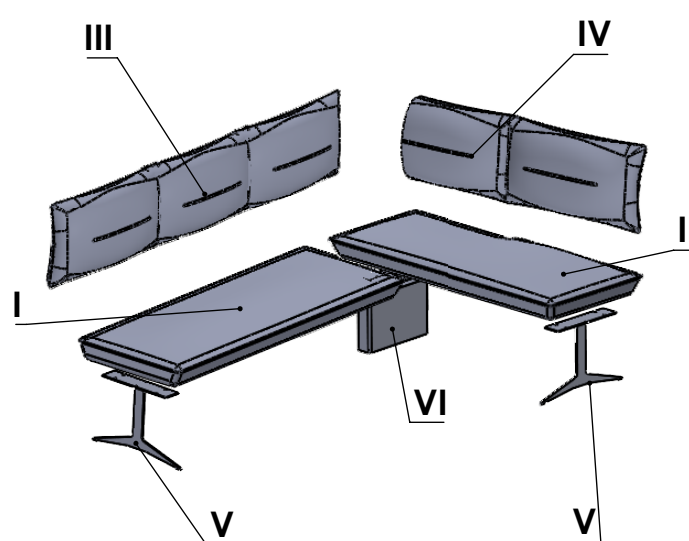



Ax4 M8x30	Cx4 M8x50	Zx1 6mm	Bx4 M8	
--------------	--------------	------------	-----------	--

R/L
1.

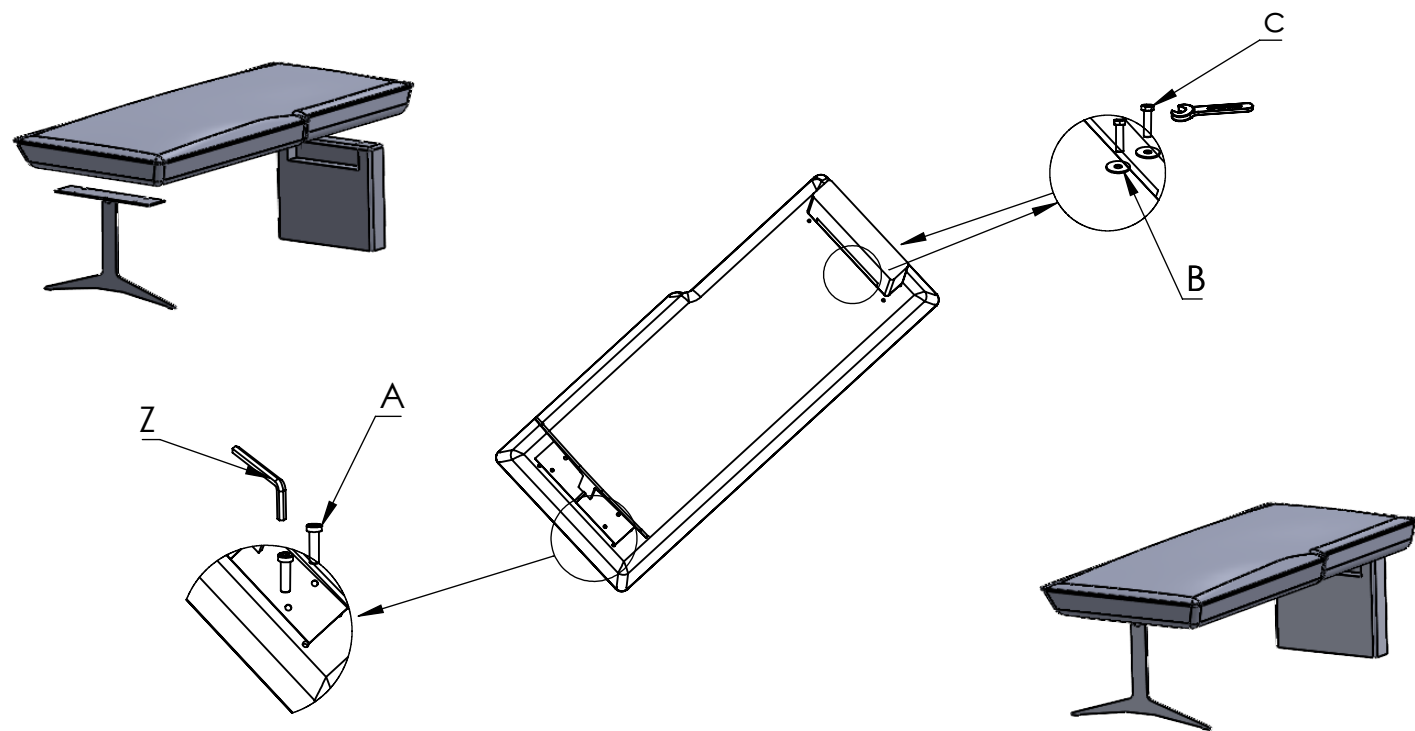


Ax4 M8x30	Zx1 6mm
--------------	------------

R/L
2.

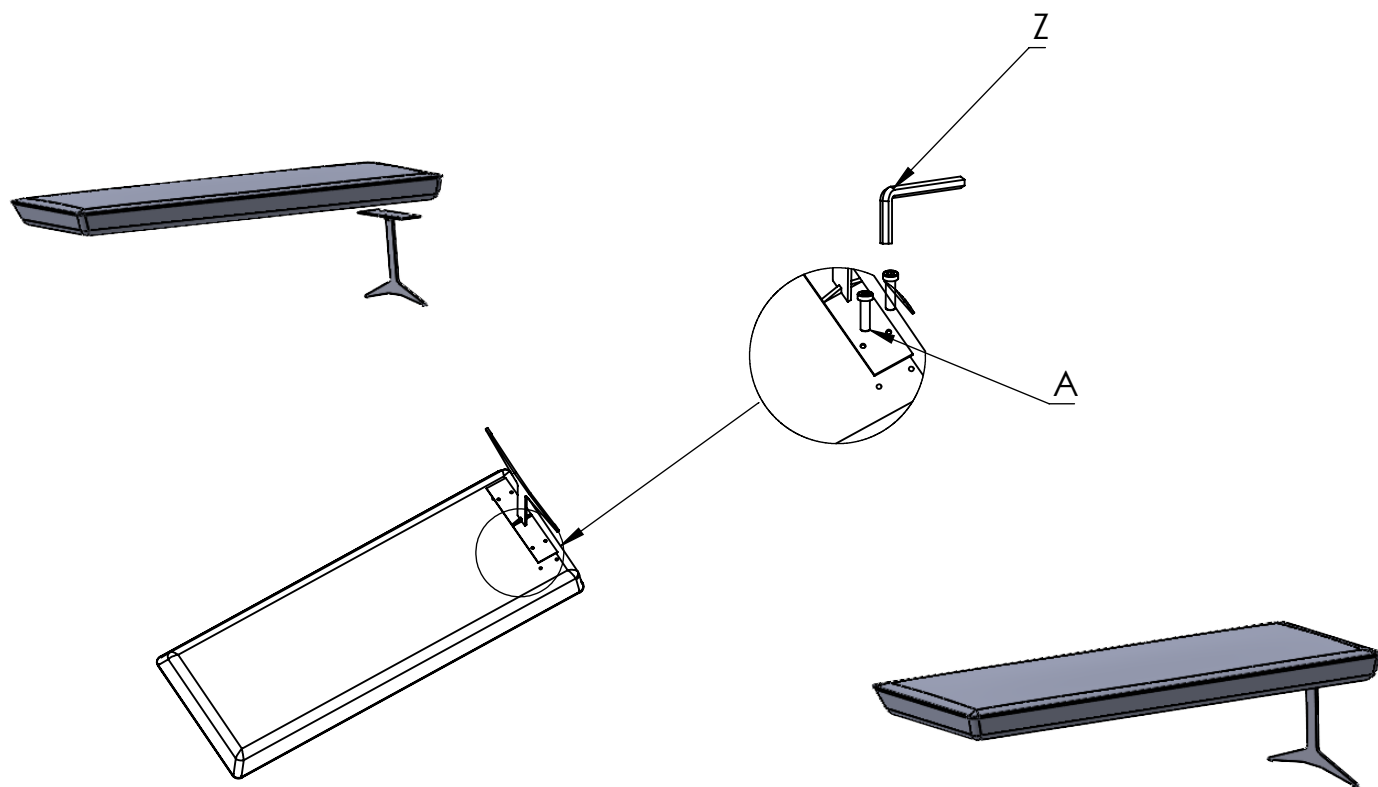


R/L
3.

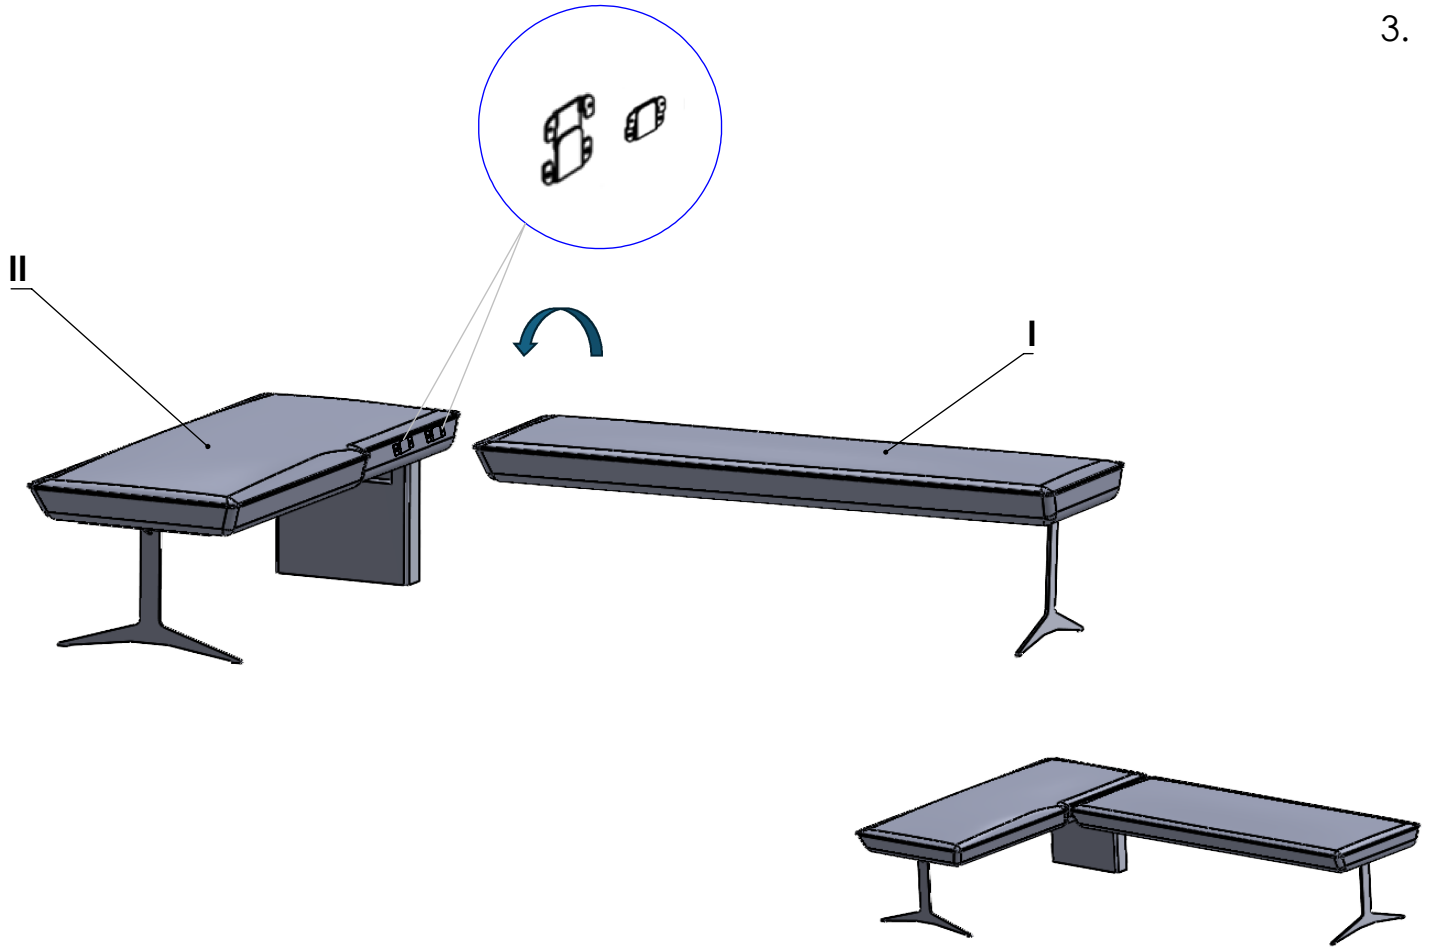

Ex5





R/L
4.

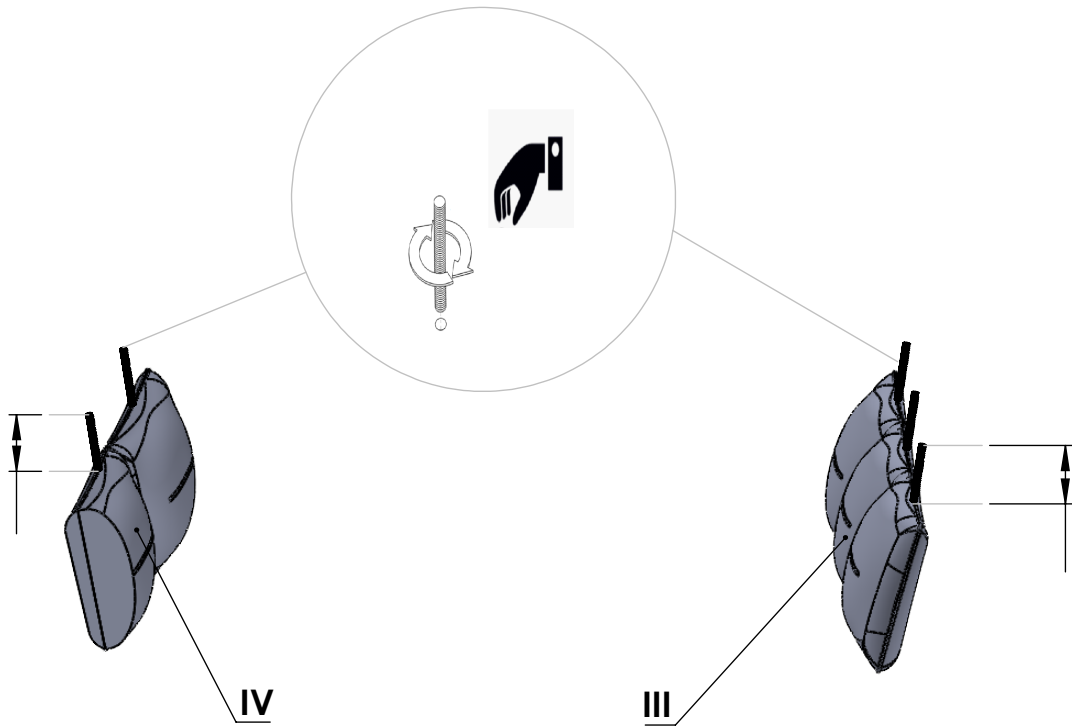

Ex2 	Dx2 M8 	Bx2 M8 	 13mm
---	---	---	--

R/L
5.

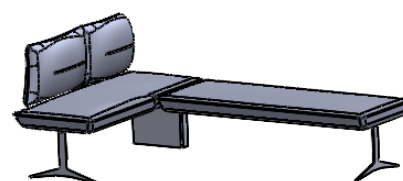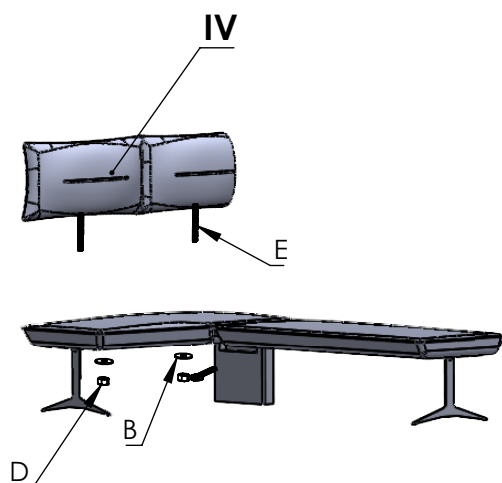

Ex3 	Dx3 M8 	Bx3 M8 	 13mm
--	--	--	---

R/L
6.

