
# AN4869B80305

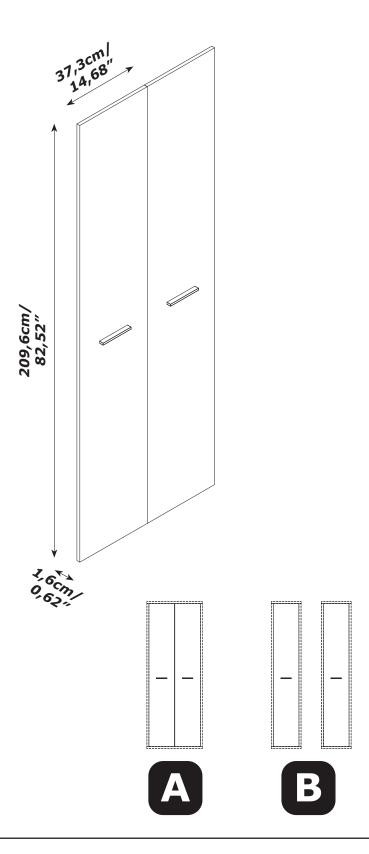






















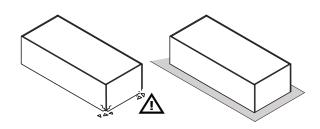


#### BU4891





### BU4892

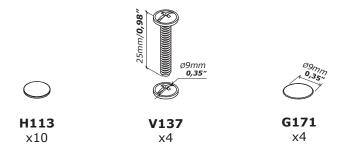


## BU3379 x2

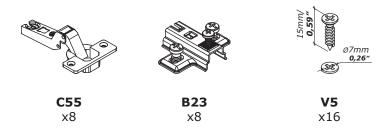


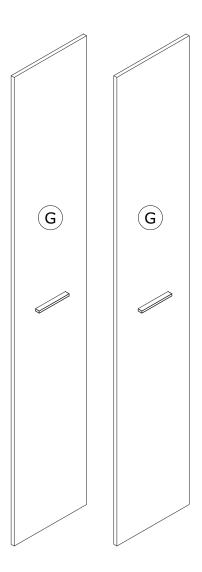








**AN3279**2096x373x16mm/
82,52"x14,68"x0,63"

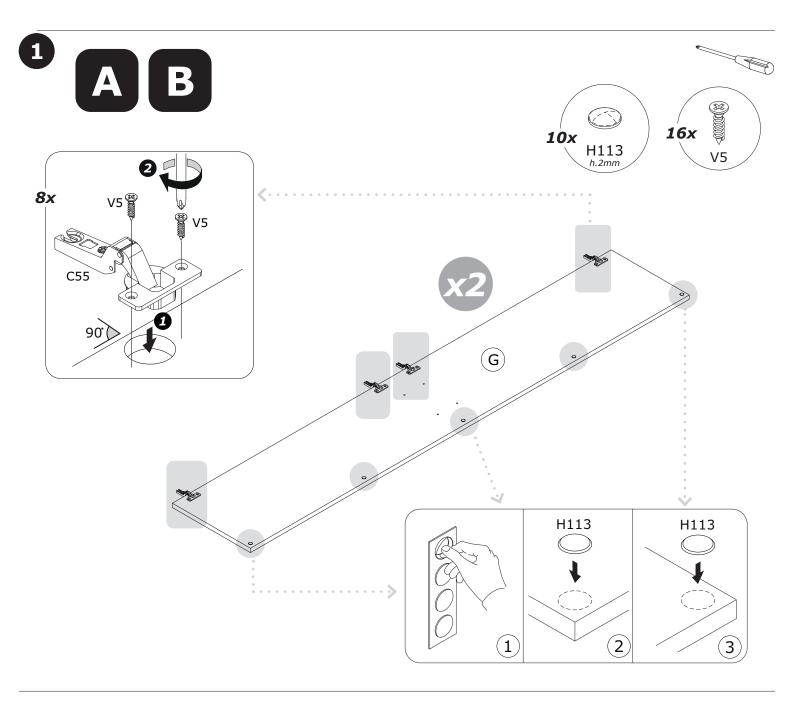


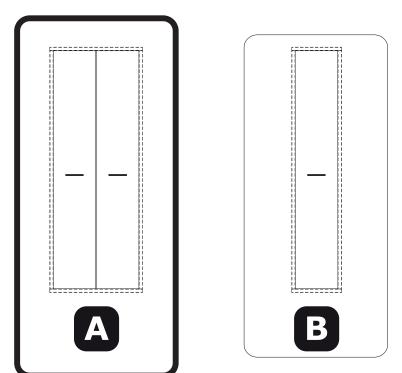




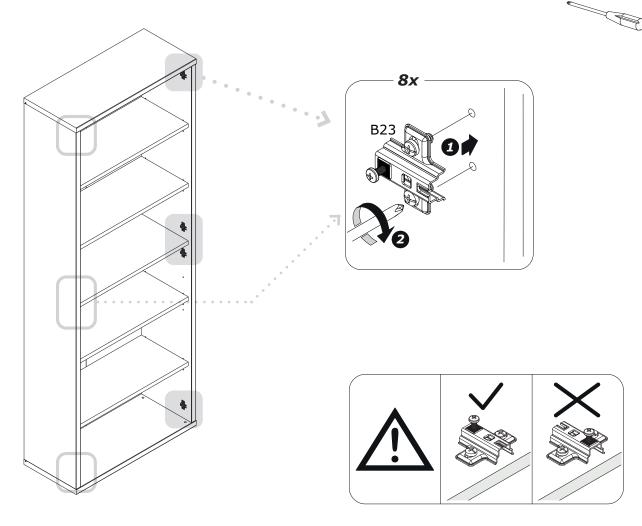


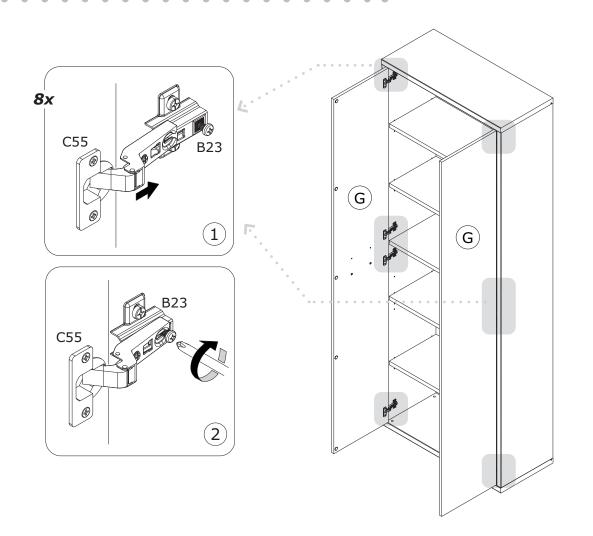


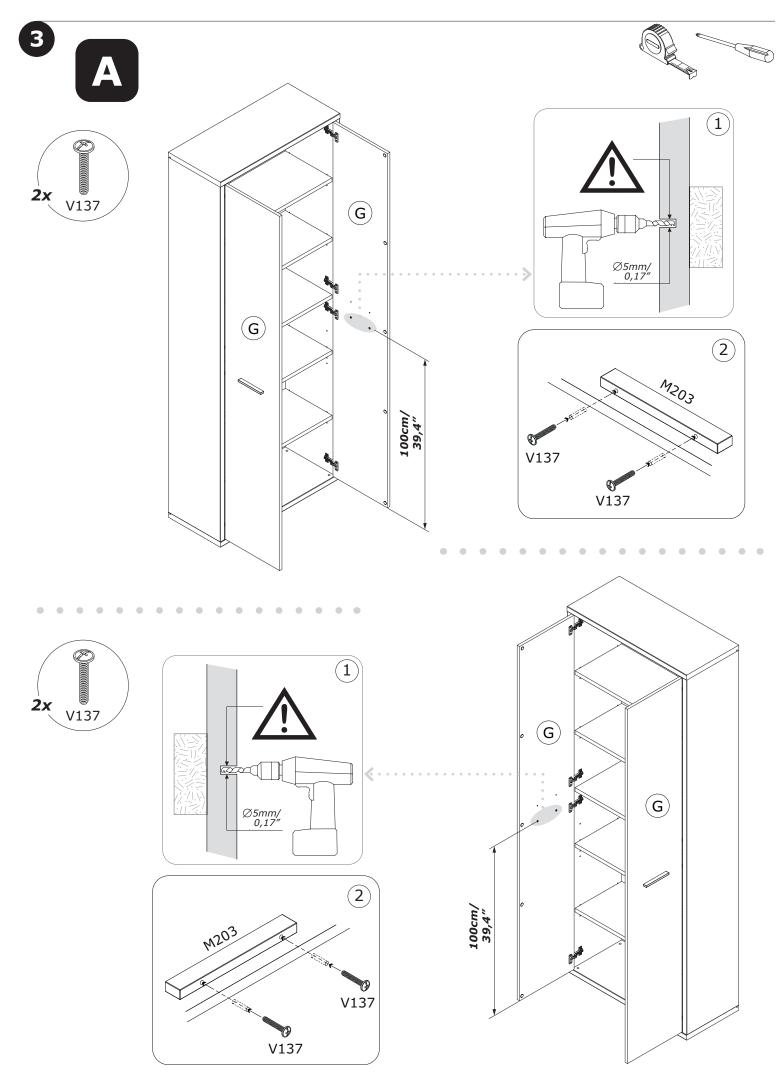




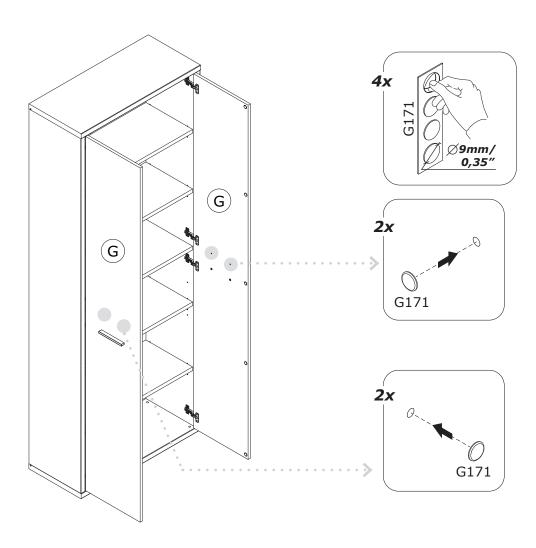


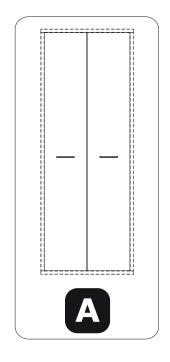

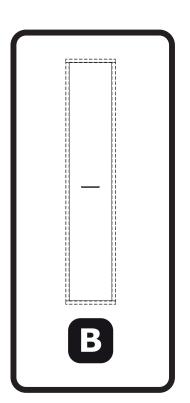



В

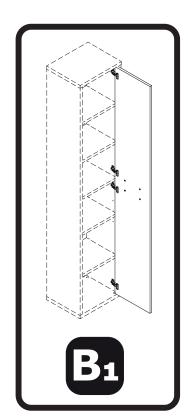





B<sub>1</sub>

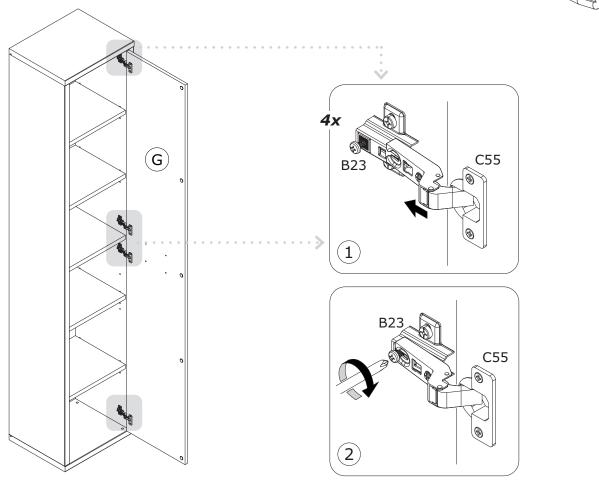


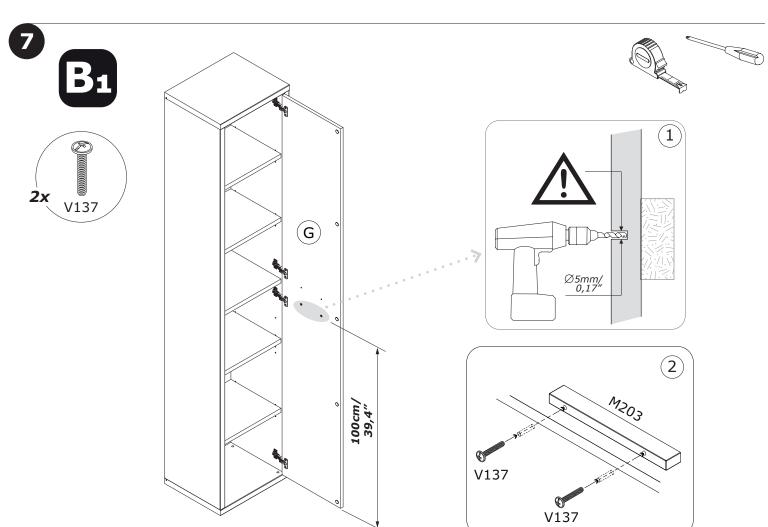


Bı

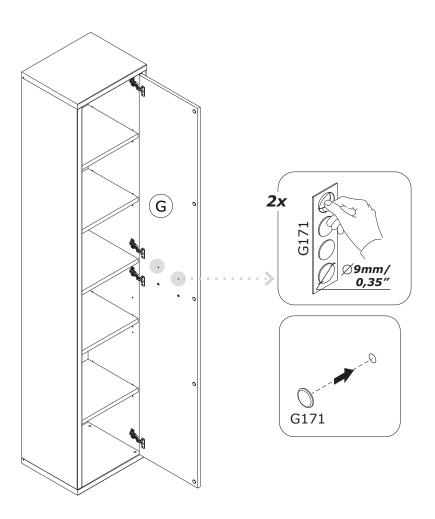


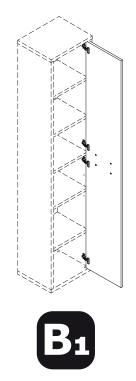

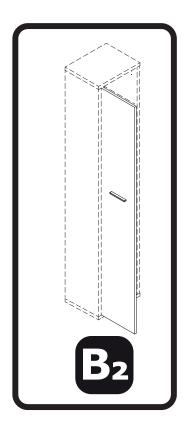





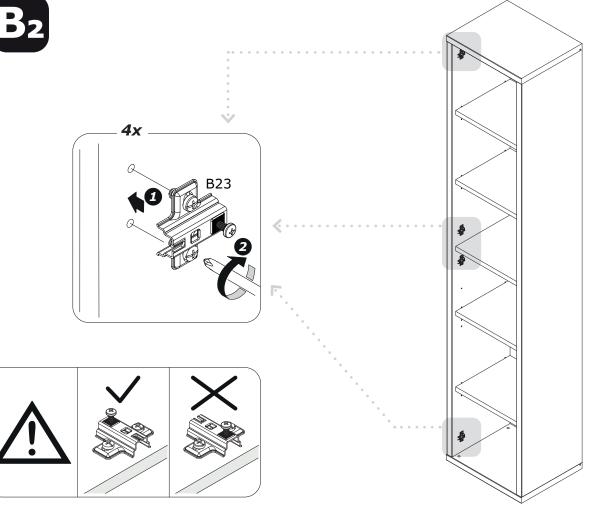


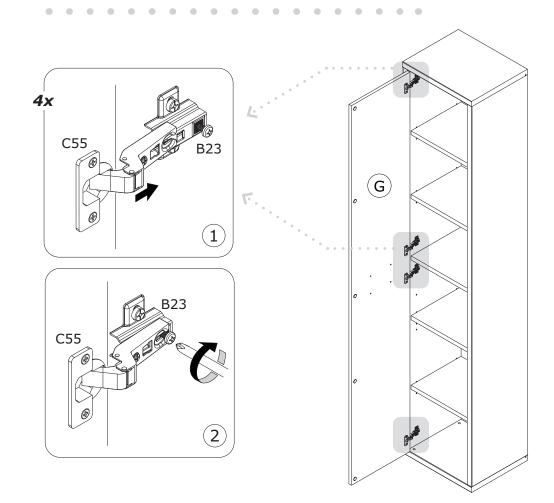




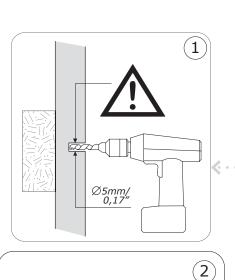

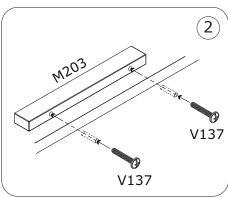


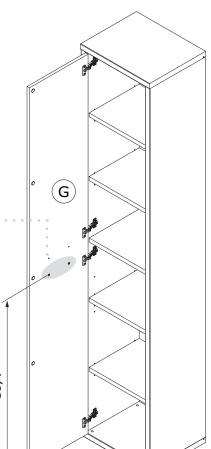

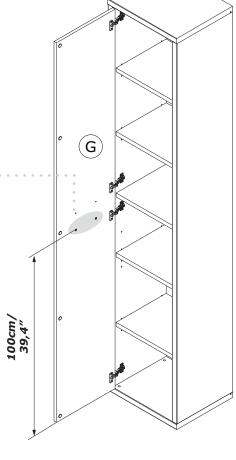




2x

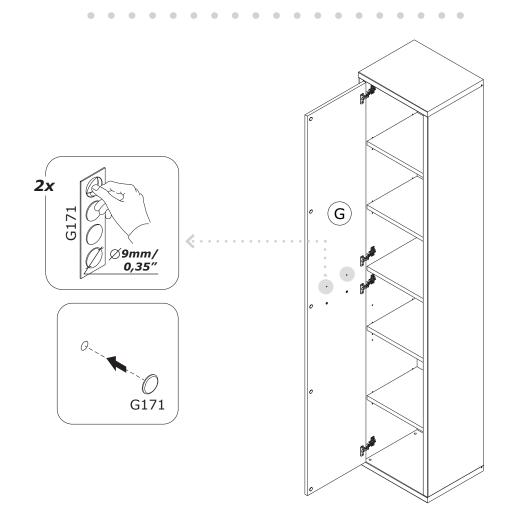


# AB

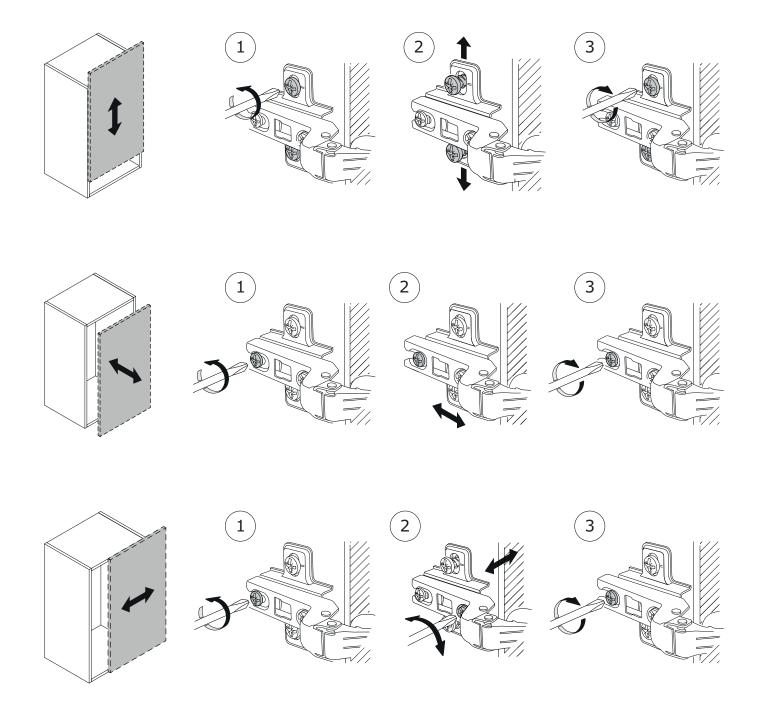

# LB4801B80309



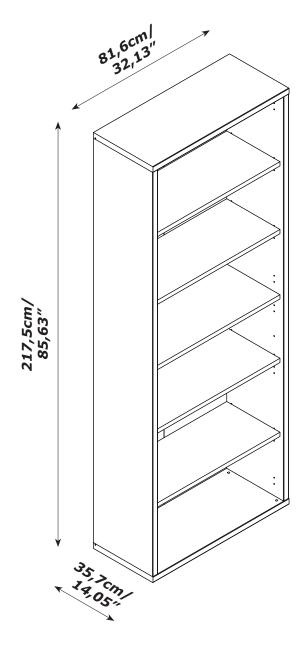


QF5809







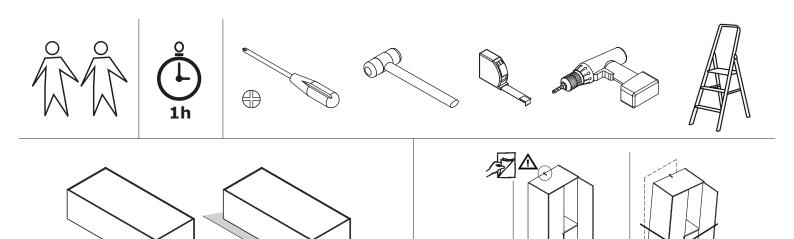

IT IS RECOMMENDED THAT THE ANTI-TIP KIT INCLUDED WITH THIS PRODUCT BE INSTALLED FOR ADDED SAFETY AND STABILITY.

IT IS ESSENTIAL TO USE WALL ANCHORS APPROPRIATE FOR YOUR WALL TYPE (I.E. PLASTER, DRY-WALL, CONCRETE, ETC.), ALONG WITH APPROPRIATE SCREWS, FOR PROPER MOUNTING.

THE SCREWS INCLUDED IN THIS ANTI-TIP KIT MAY NOT BE SUITED FOR ALL WALL TYPES. MOUNTING TO WOOD STUDS IS RECOMMENDED.


CONSULT A QUALIFIED PROFESSIONAL OR YOUR LOCAL HARDWARE STORE FOR APPROPRIATE MOUNTING HARDWARE SUITED FOR YOUR SPECIFIC WALL MEDIUM.




x2


x1

x1

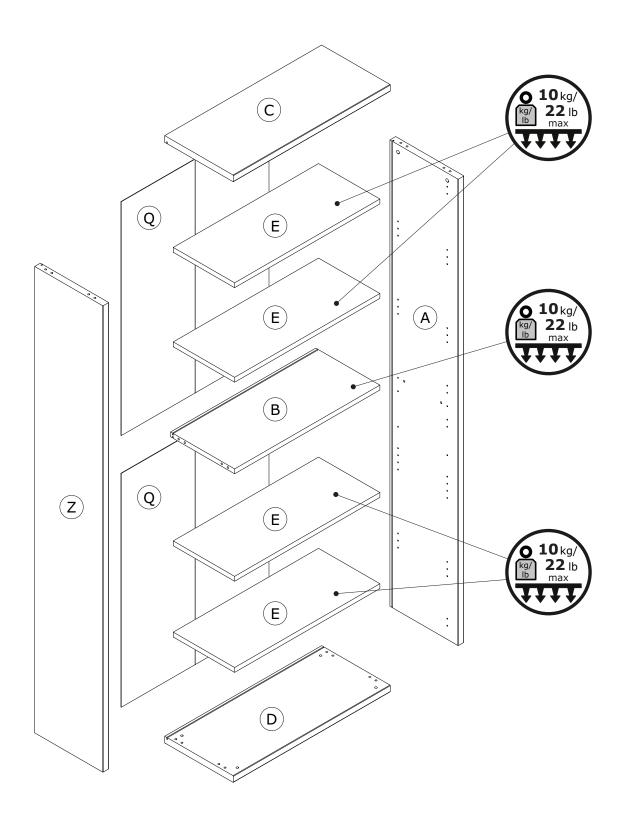




FI9312 2100x355x30mm/ 82,68"x13,98"x1,18"




FI9313 2100x355x30mm/ 82,68"x13,98"x1,18"

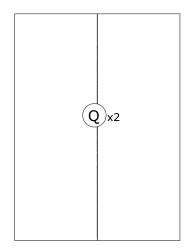

SH3790 1053x768x2mm/ 41,45"x30,23"x0,079"


BOX 1/2




**PI7561**755x319x22mm/ **29,72"x12,56"x0,87"** 




**PI7562** 755x319x22mm/ **29,72"x12,56"x0,87"** 




CA3905 816x357x30mm/ 32,13"x14,05"x1,18"



BA2398 816x357x30mm/ 32,13"x14,05"x1,18"




BOX 2/2

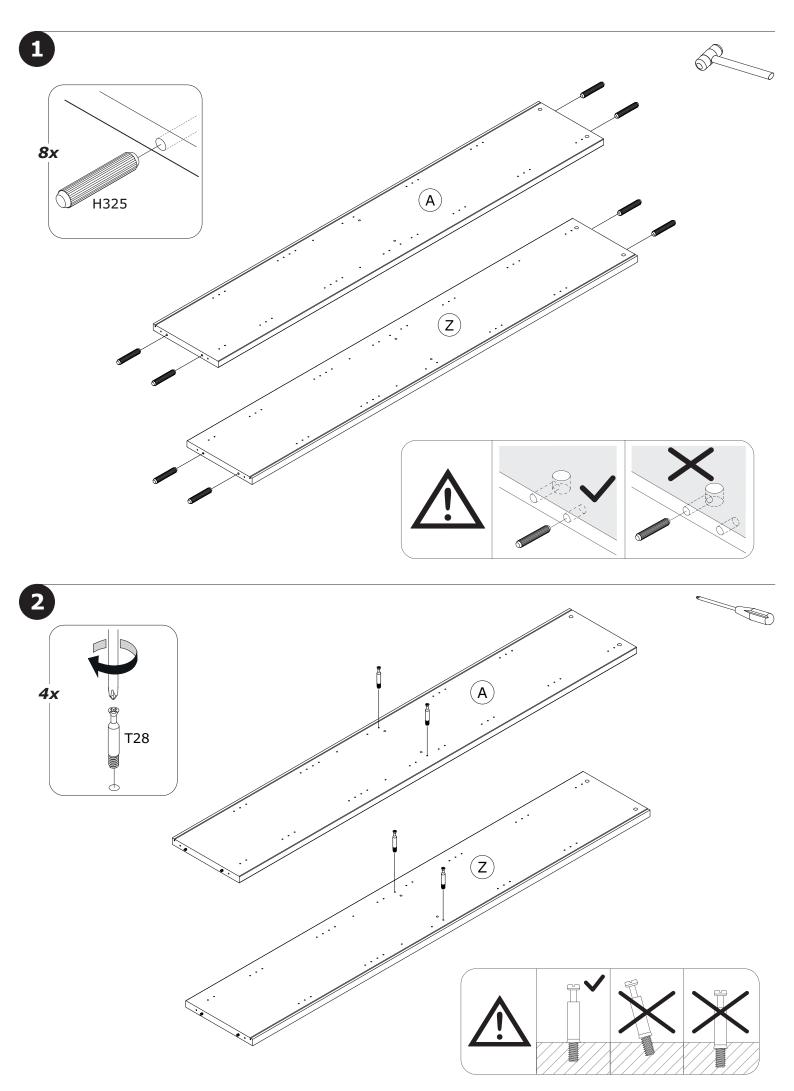









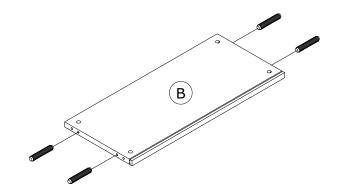







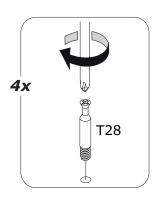


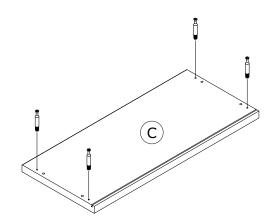





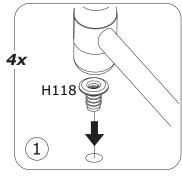


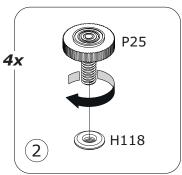


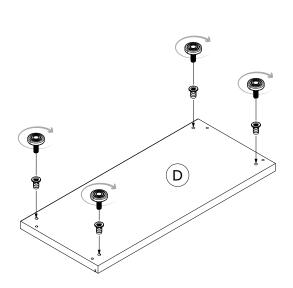

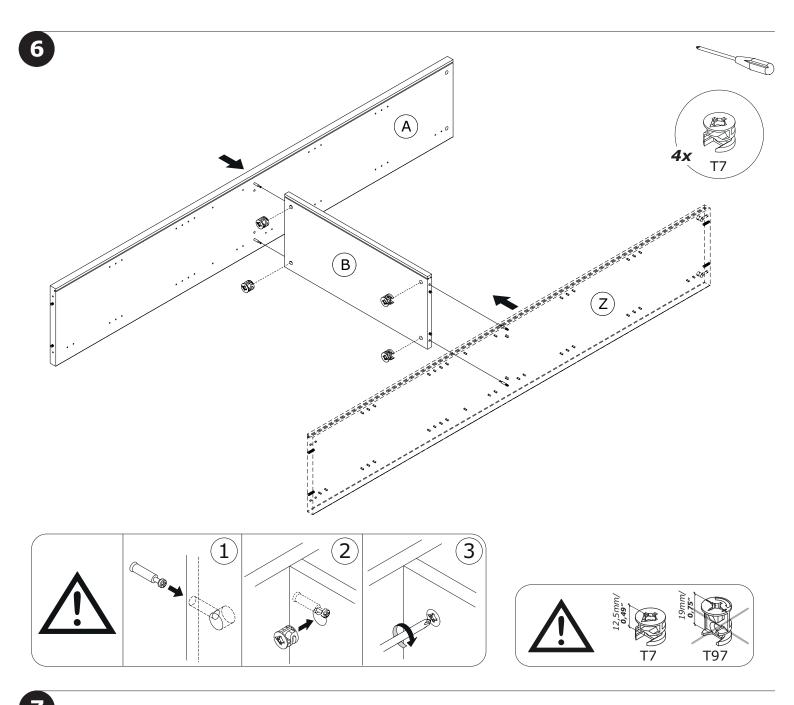


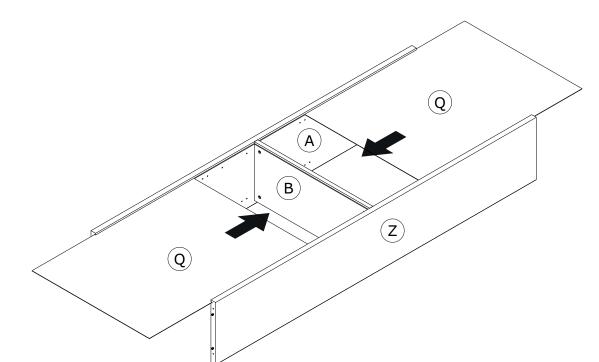

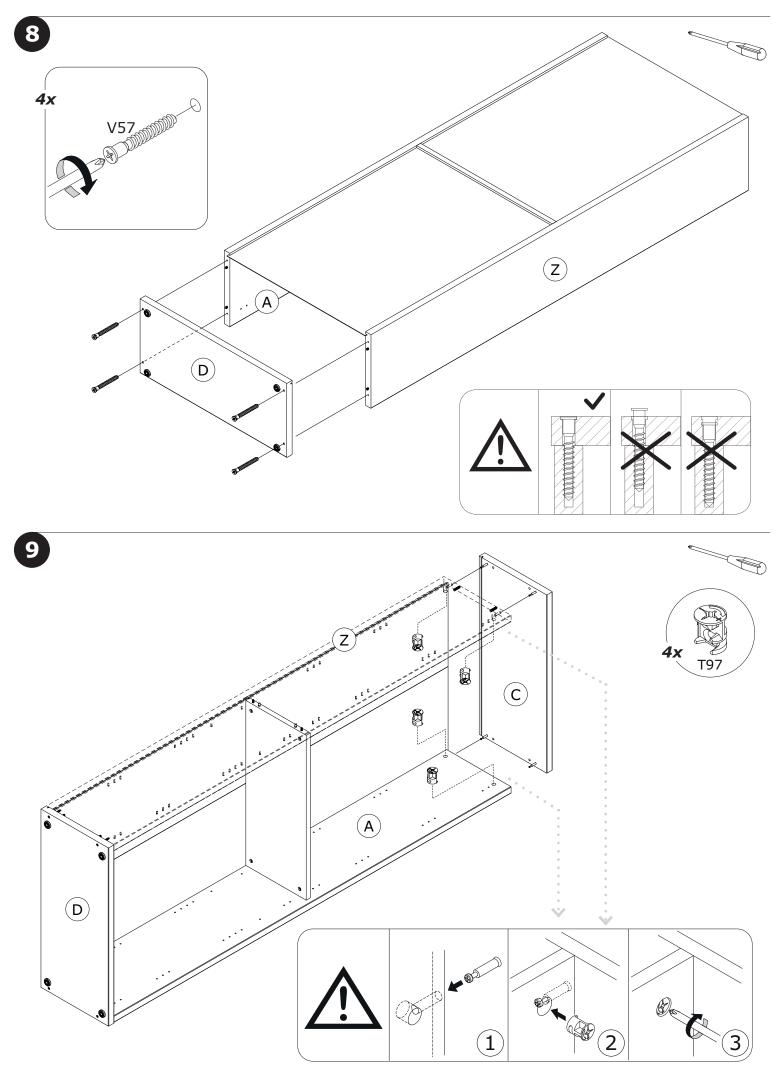

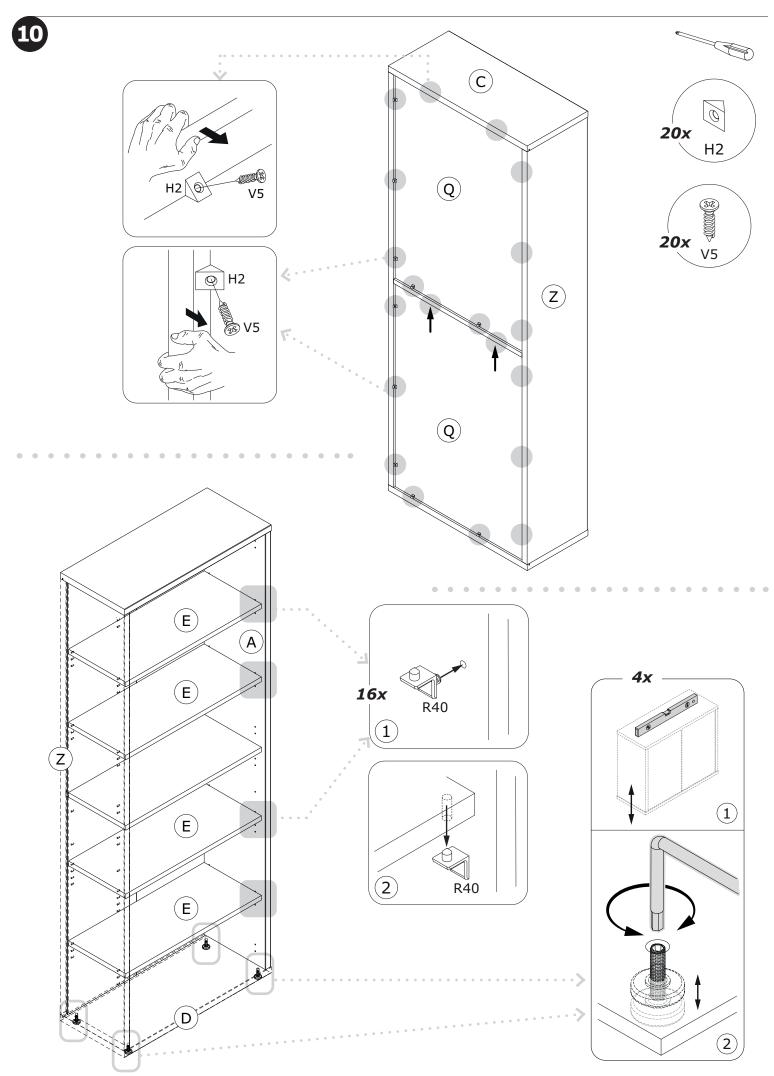





IT IS RECOMMENDED THAT THE ANTI-TIP KIT INCLUDED WITH THIS PRODUCT BE INSTALLED FOR ADDED SAFETY AND STABILITY.

IT IS ESSENTIAL TO USE WALL ANCHORS APPROPRIATE FOR YOUR WALL TYPE (I.E. PLASTER, DRYWALL, CONCRETE, ETC.), ALONG WITH APPROPRIATE SCREWS, FOR PROPER MOUNTING.

THE SCREWS INCLUDED IN THIS ANTI-TIP KIT MAY NOT BE SUITED FOR ALL WALL TYPES. MOUNTING TO WOOD STUDS IS RECOMMENDED.

CONSULT A QUALIFIED PROFESSIONAL OR YOUR LOCAL HARDWARE STORE FOR APPROPRIATE MOUNTING HARDWARE SUITED FOR YOUR SPECIFIC WALL MEDIUM.

