
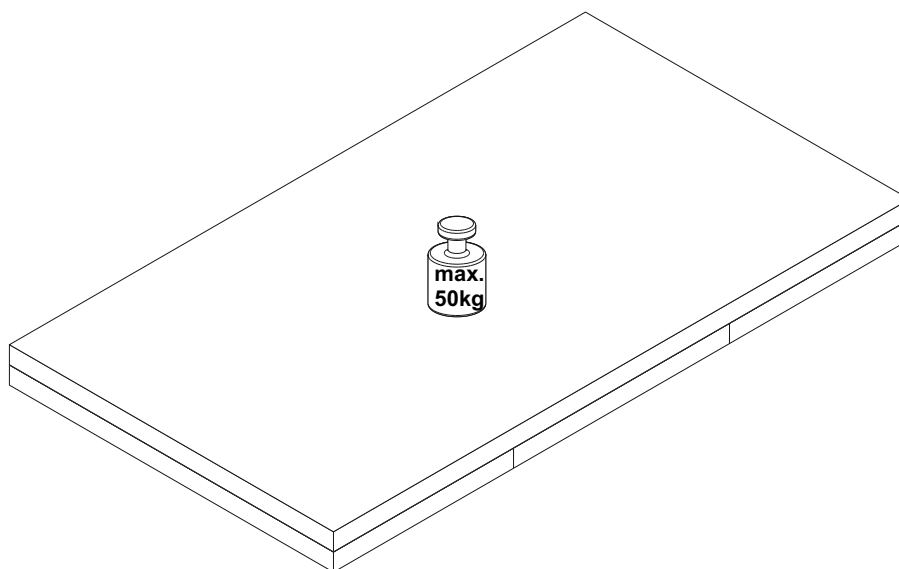


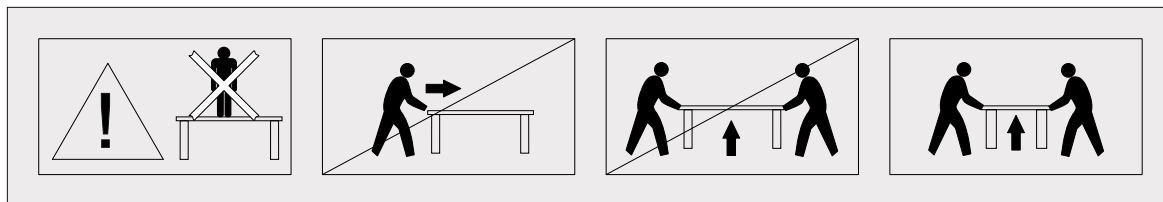

Artikel.-Nr.:


0780-TP_160-260

Artikel.-Nr.:

0780-TP_180-280

Montageanleitung.-Nr.:



MA1-00477

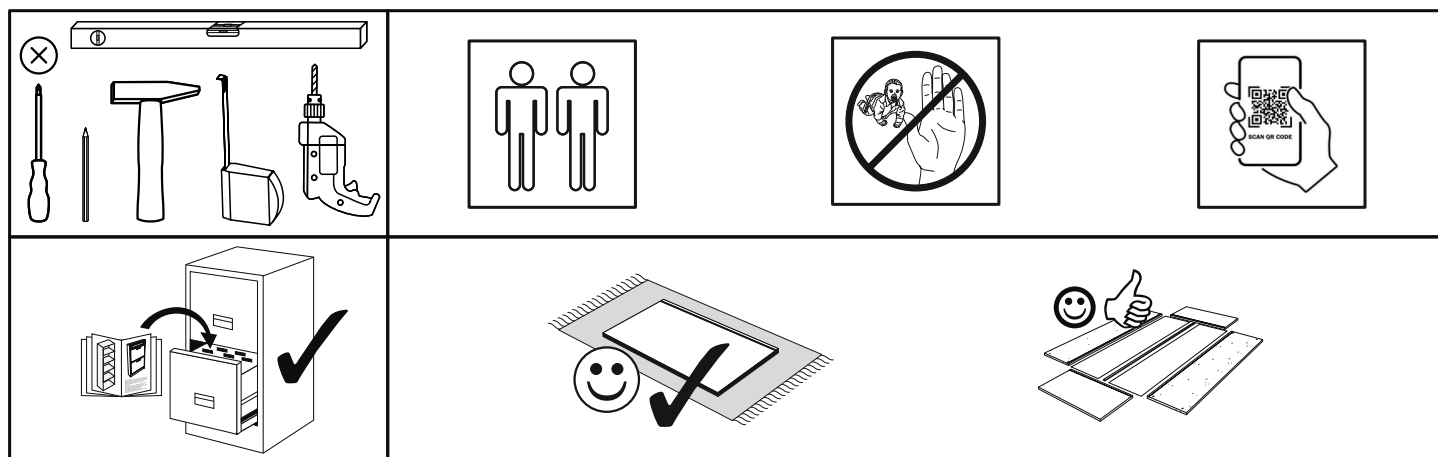

SCAN ME


Das Ersatzteil-Anforderungsformular finden Sie auf
The replacement parts requisition form you find on
<https://www.maeusbacher.de/ersatzteile/>


BT1-00243 Colli 2/3

B01-39-16		B01-120		B01-174		B01-315	
56x	5x16	10x	3,5x45	8x	4,5x50	8x	
B01-552		B05-190		B05-193			
4x		4x		6x			



BT1-00566 Colli 1/3

B01-155	
8x	4,0x70



Art.-Nr. :


0780-TP_160-260 P1




Art.-Nr. :

0780-TP_180-280 P1


Colli 1/3

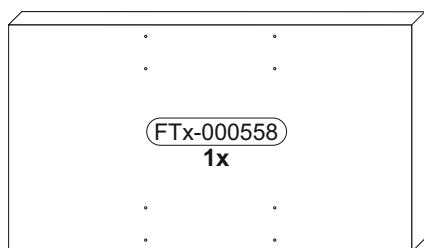


1600 x 900



598 x 302




1258 x 68




1258 x 394


Colli 1/3

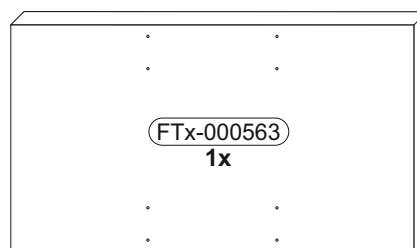


1800 x 900



798 x 302




1458 x 68




1458 x 394





Colli 2/3




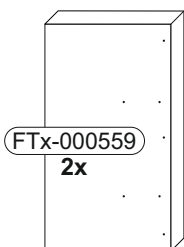




900 x 500

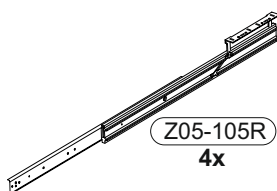



Z05-105R
4x

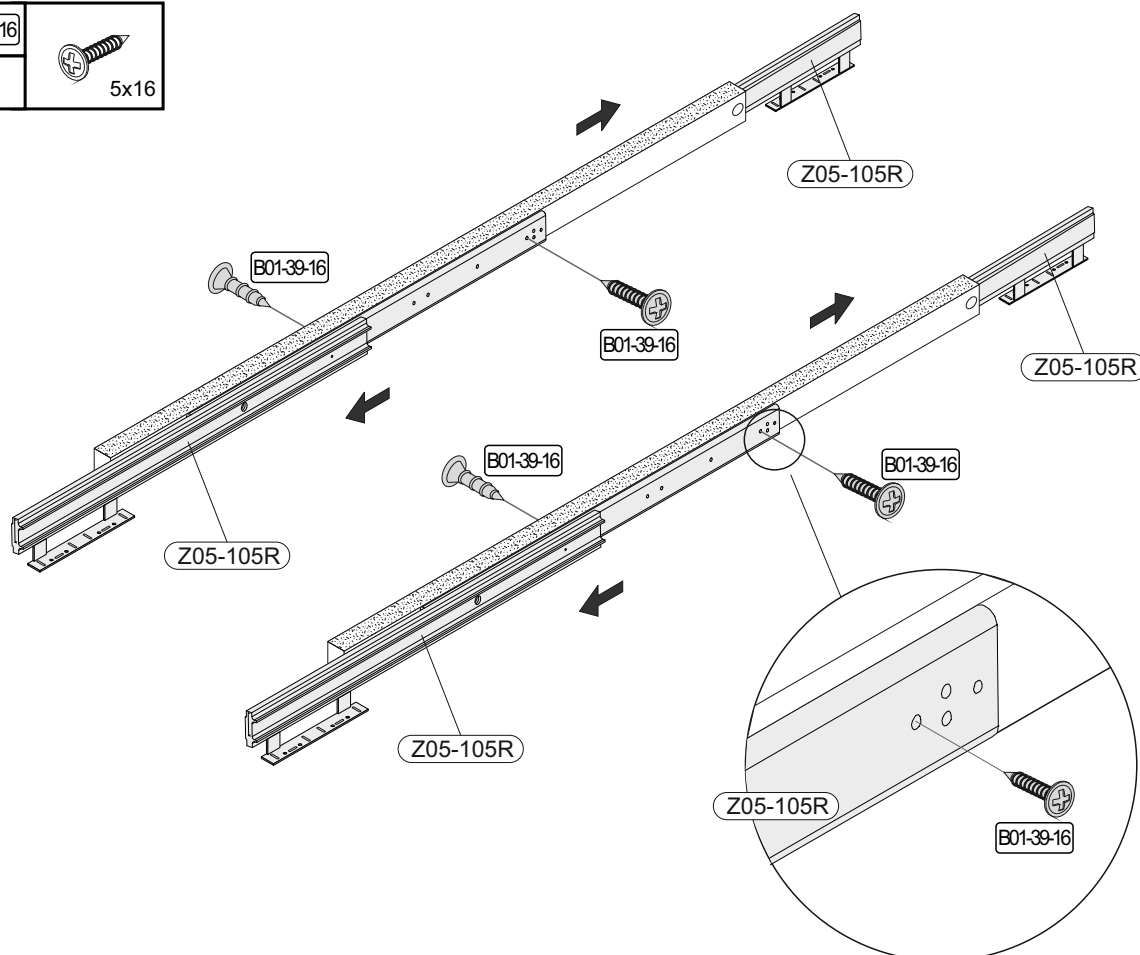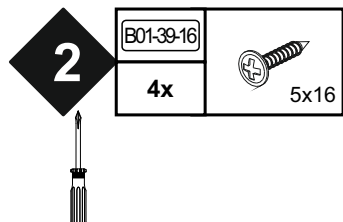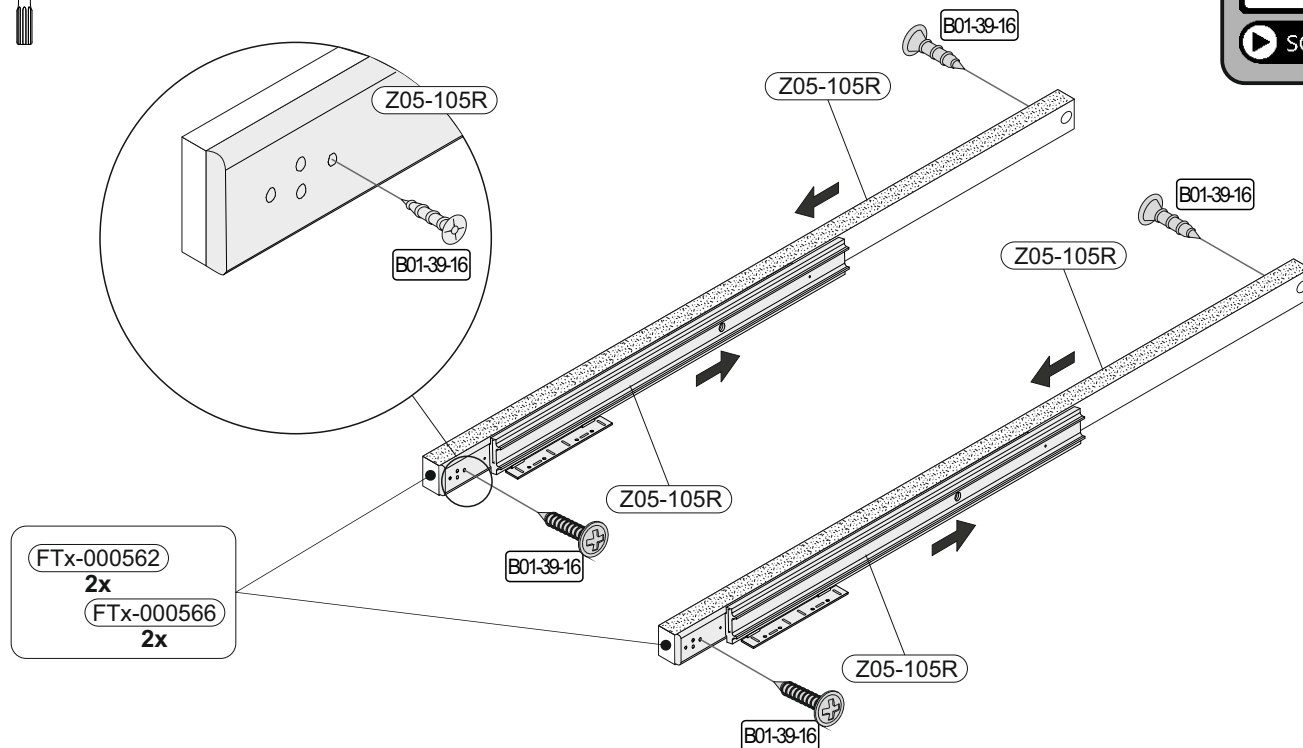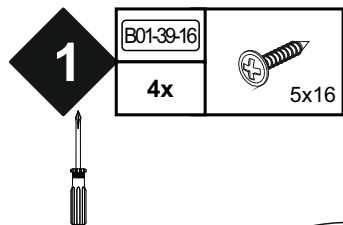

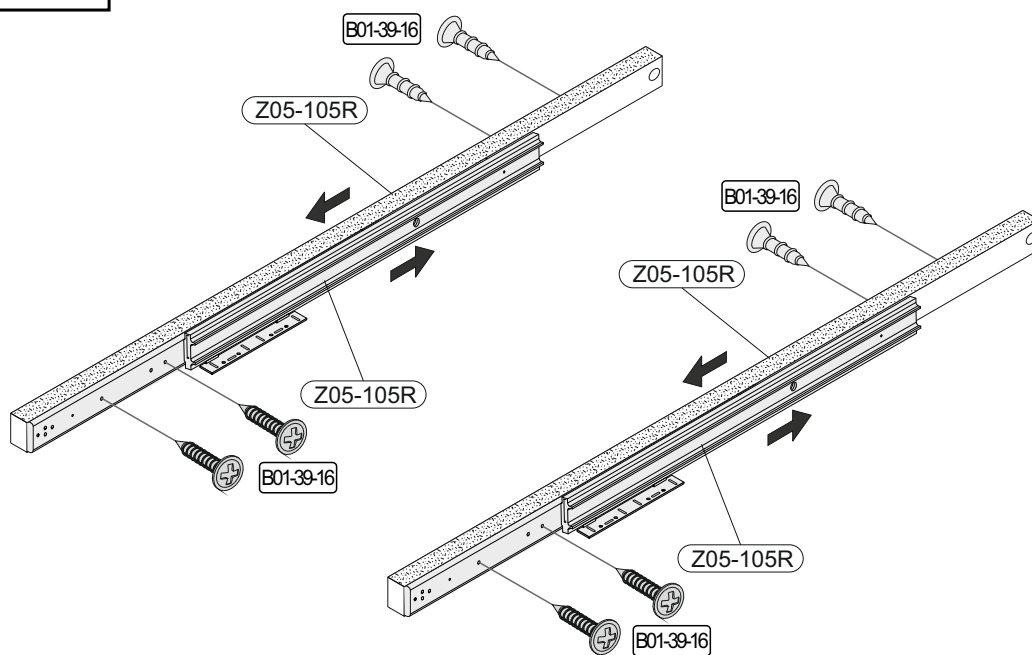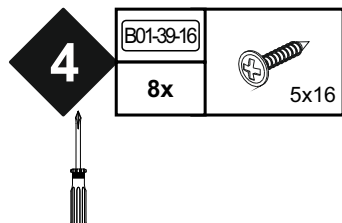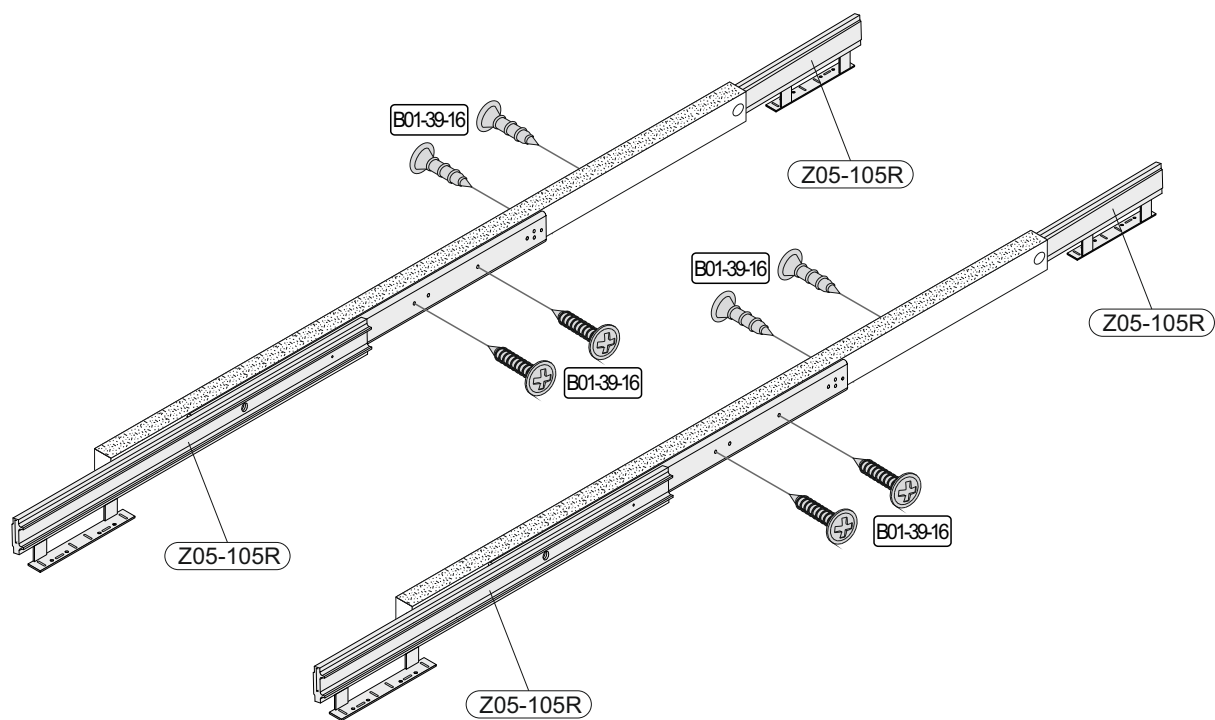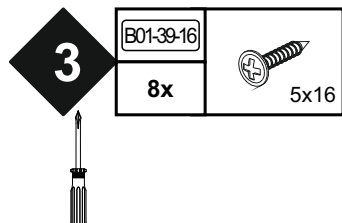


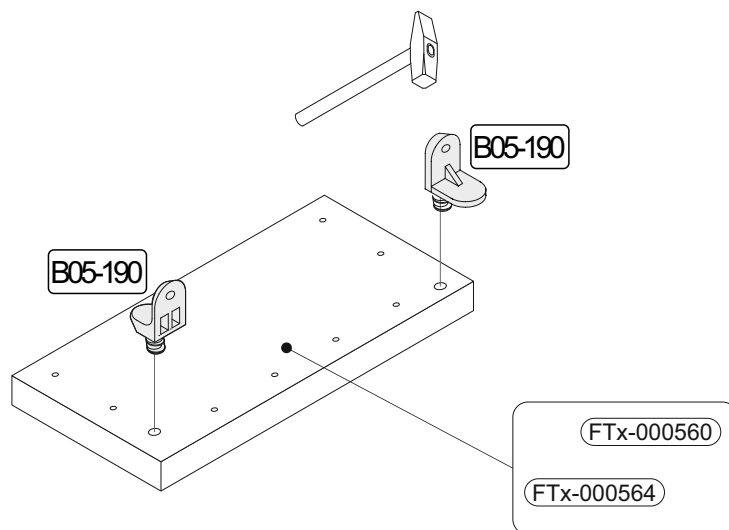
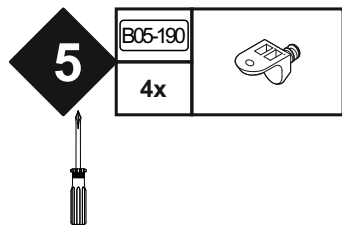


2x

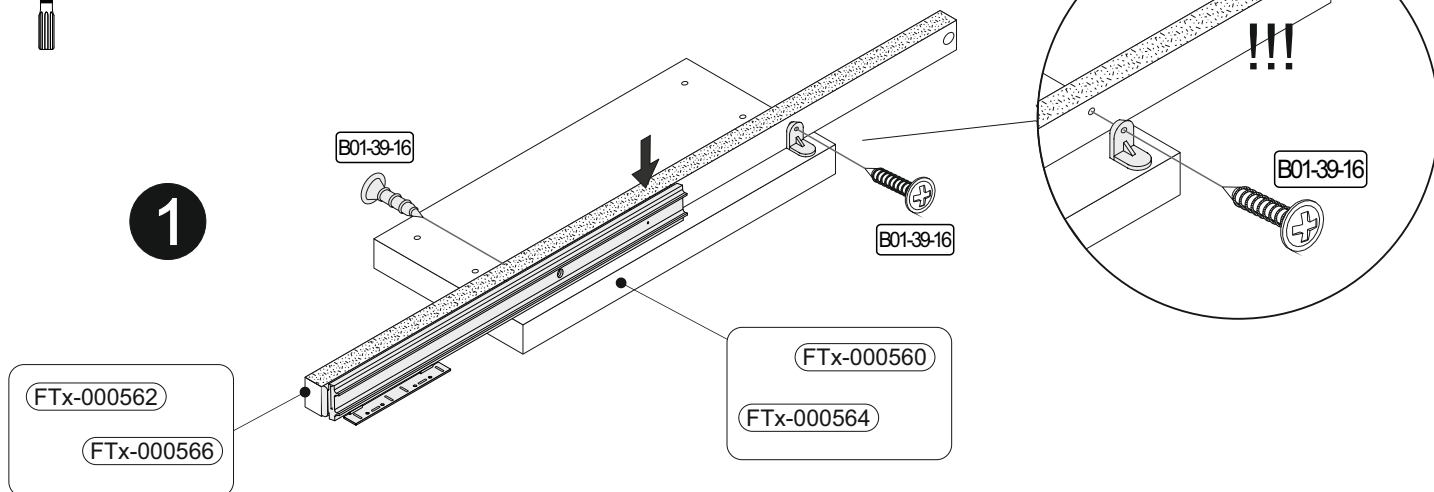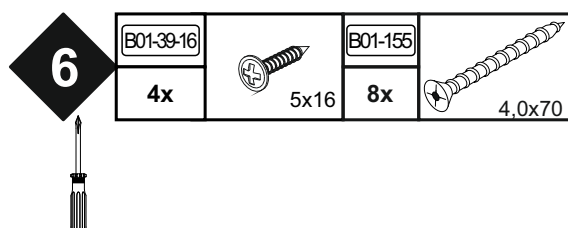



2x



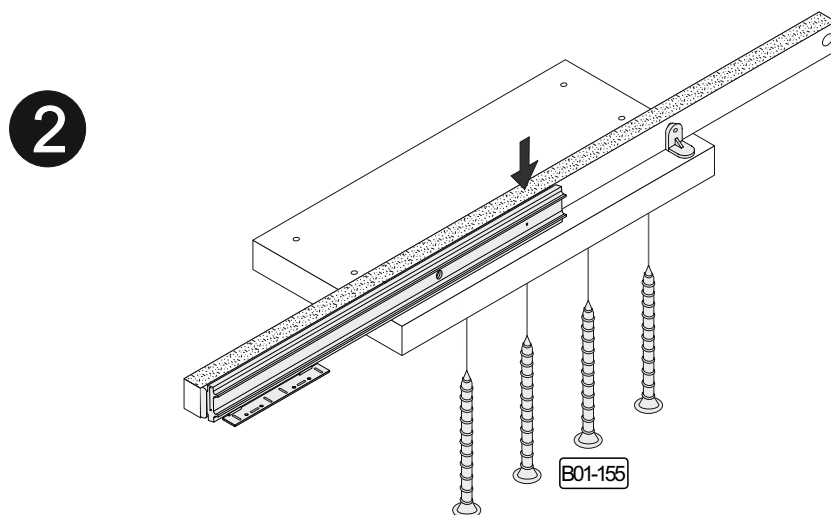


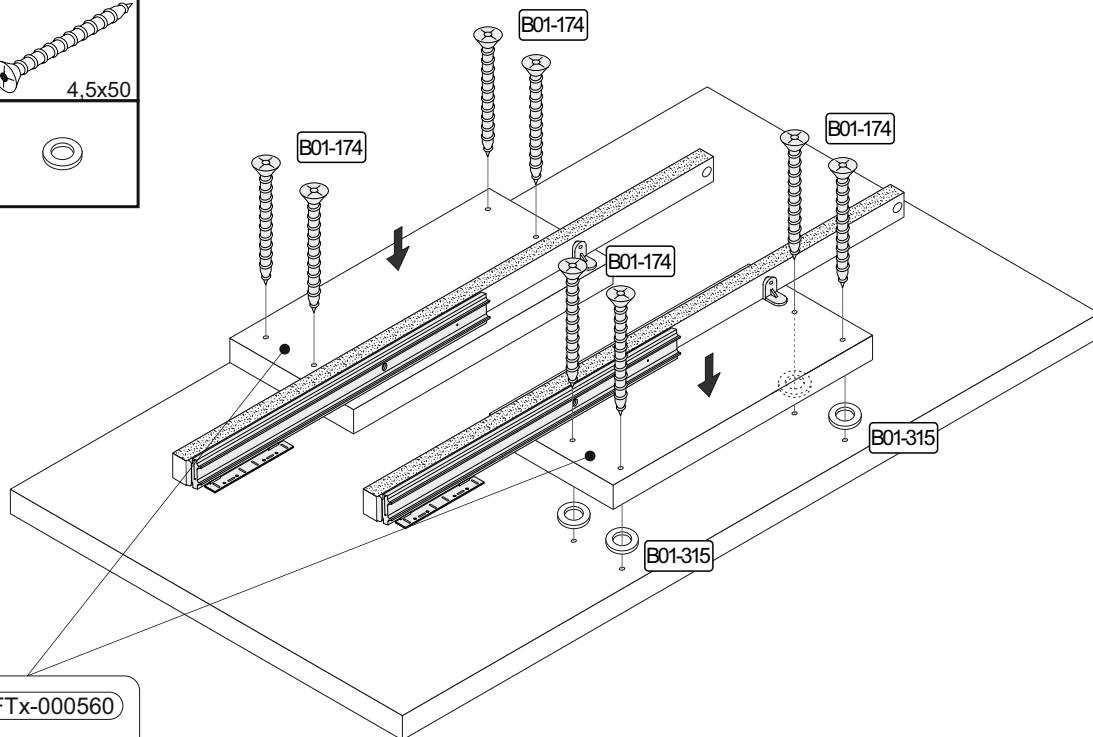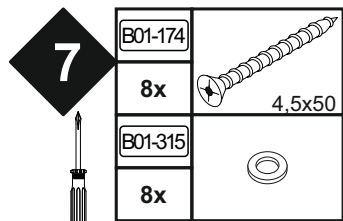

FTx-000560

FTx-000564

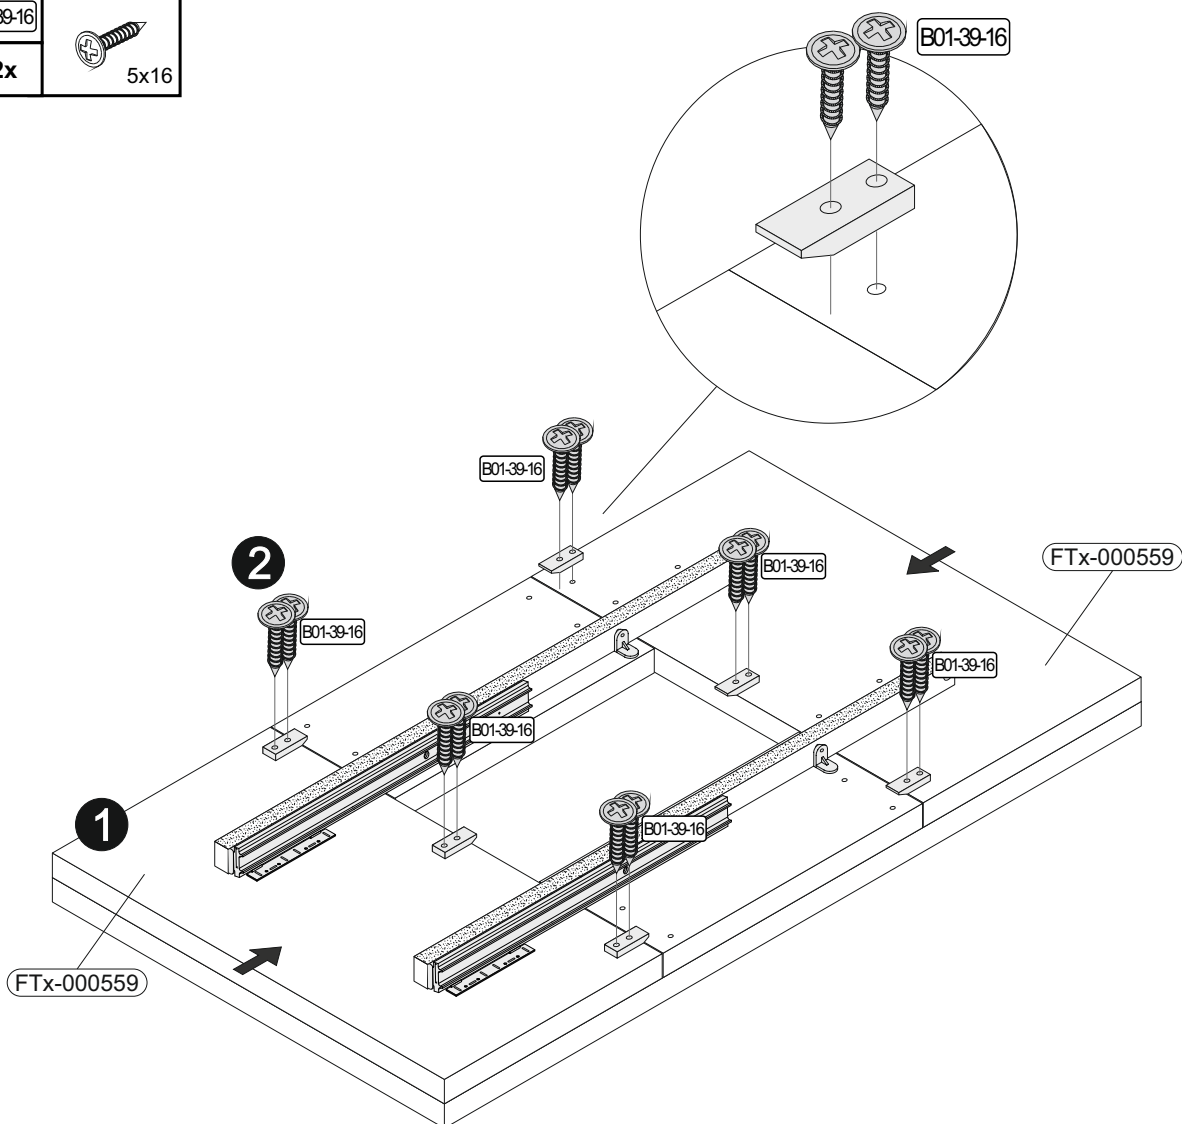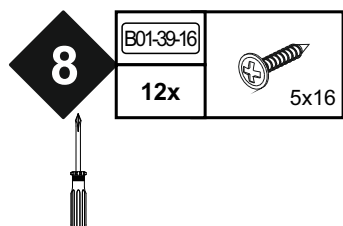

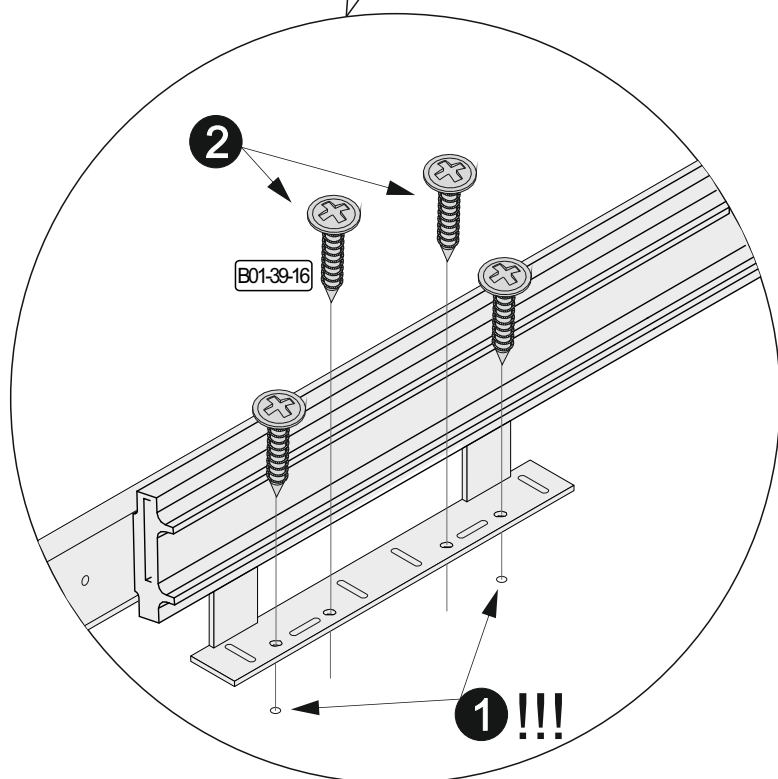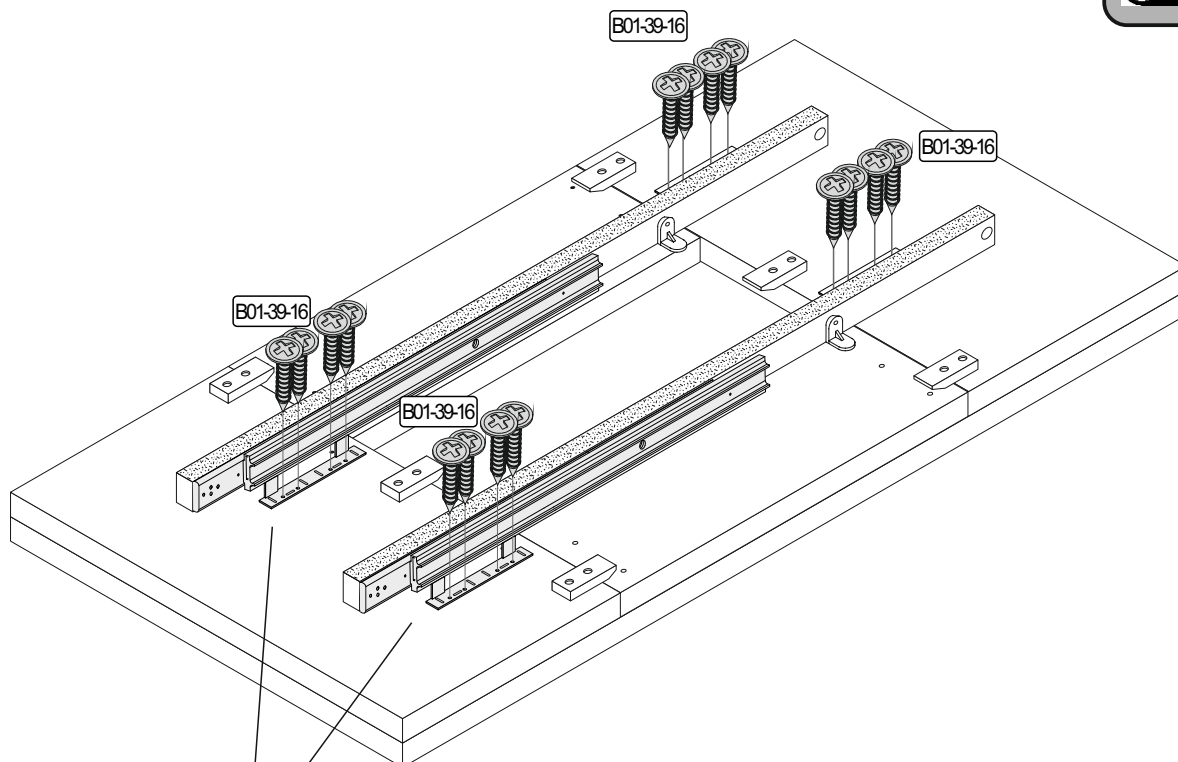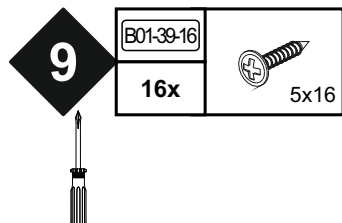


**Die Montage der Mittelplatte
wird bei der Montage des
Fußes dargestellt.**

FTx-000561
FTx-000565

REPC-Nr.:

Service • Assistenza • Dienstverlening • Serwis
Servis • Szerviz • Сервисная служба







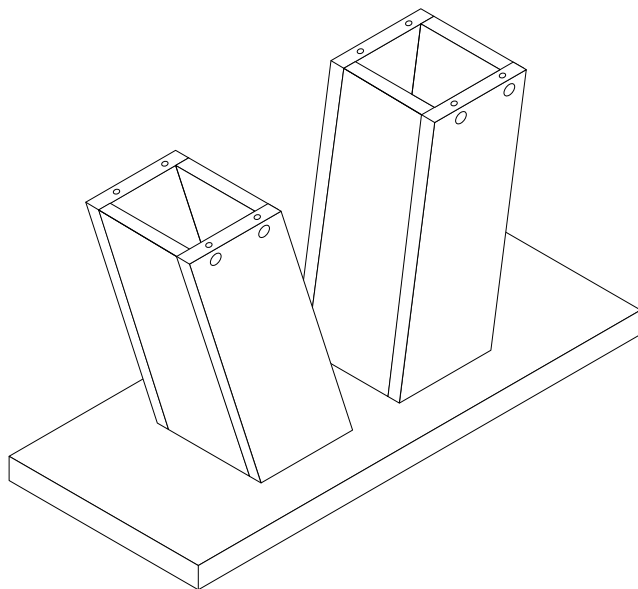


Artikel.-Nr.:

0780-UG_V P3

Montageanleitung.-Nr.:



MA1-00434

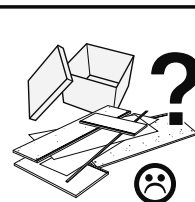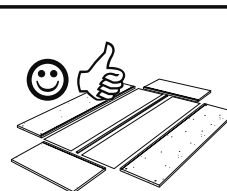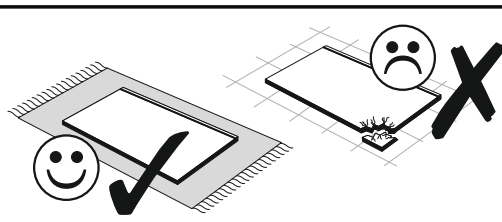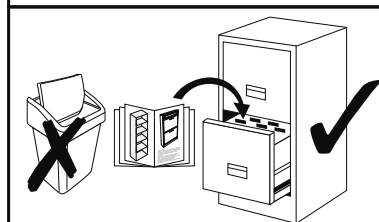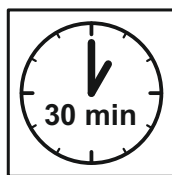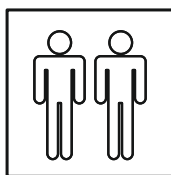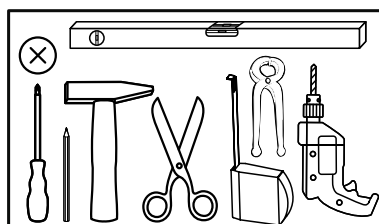

SCAN ME


Das Ersatzteil-Anforderungsformular finden Sie auf
The replacement parts requisition form you find on
<https://www.maeusbacher.de/ersatzteile/>

BT1-00520 Colli 3


B01-20	 7,0x70	B02-10	 ø15x12mm	B02-20	 24x	B02-183	 M6x20
8x		24x		24x		6x	
B01-360	 M6	B01-242	 SW 6	B05-20			
6x		1x		8x			







SCAN ME




Colli 3/3

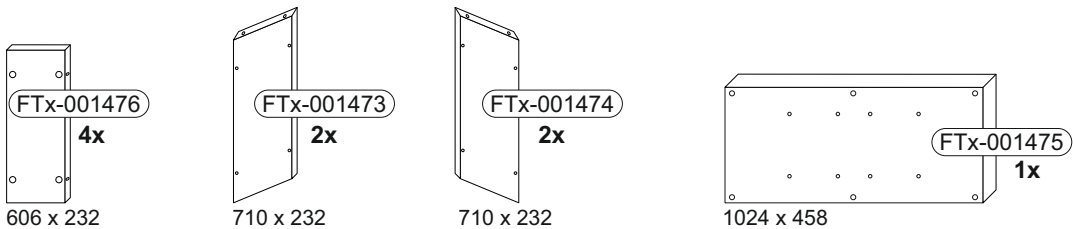


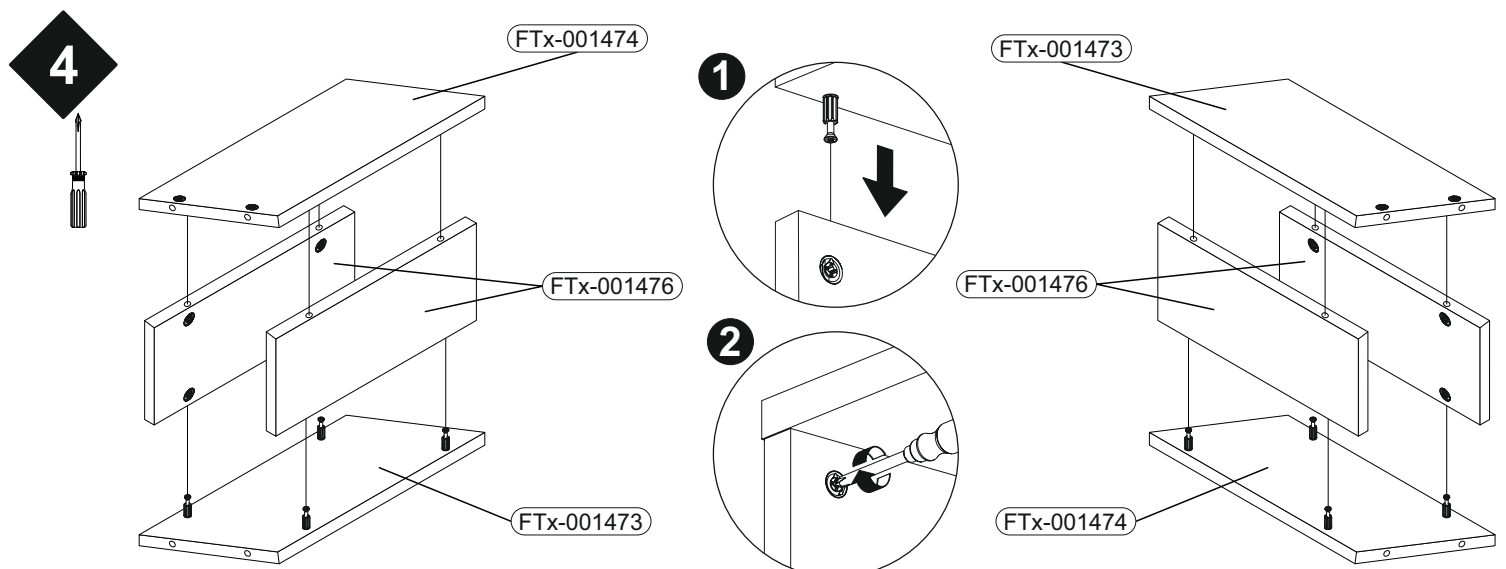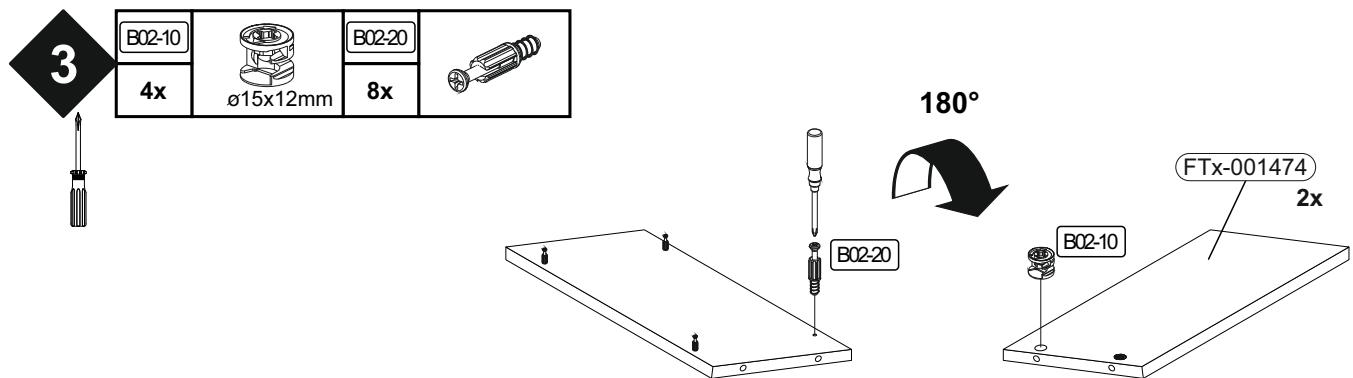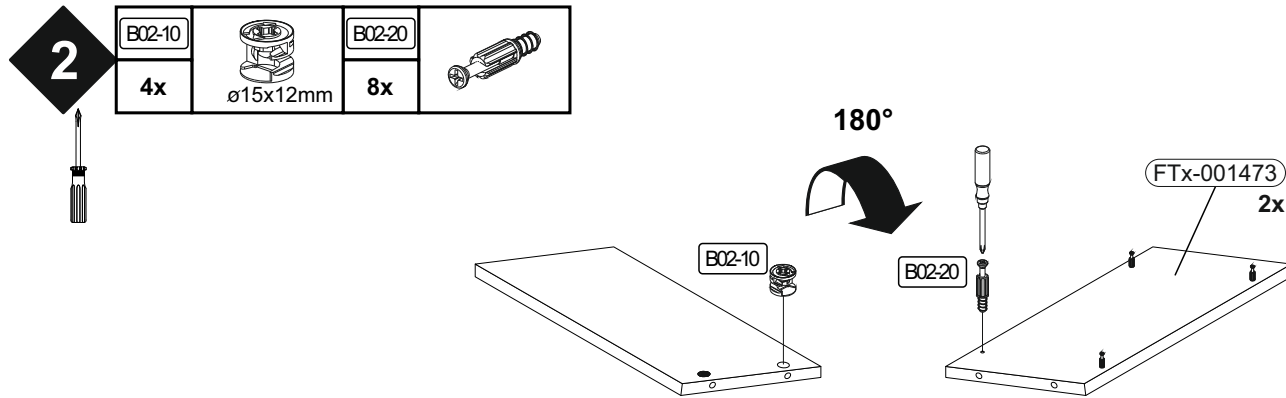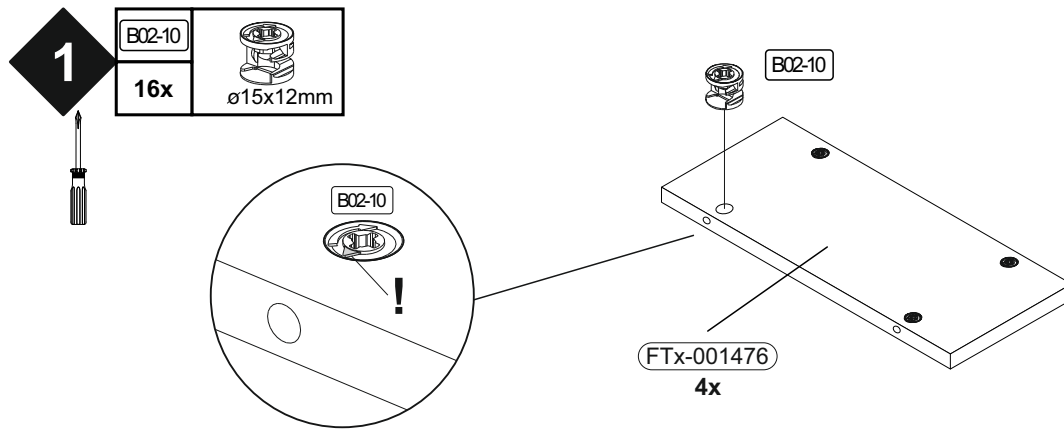

5




Die Schrauben B01-120 befinden sich im Colli 2/3.

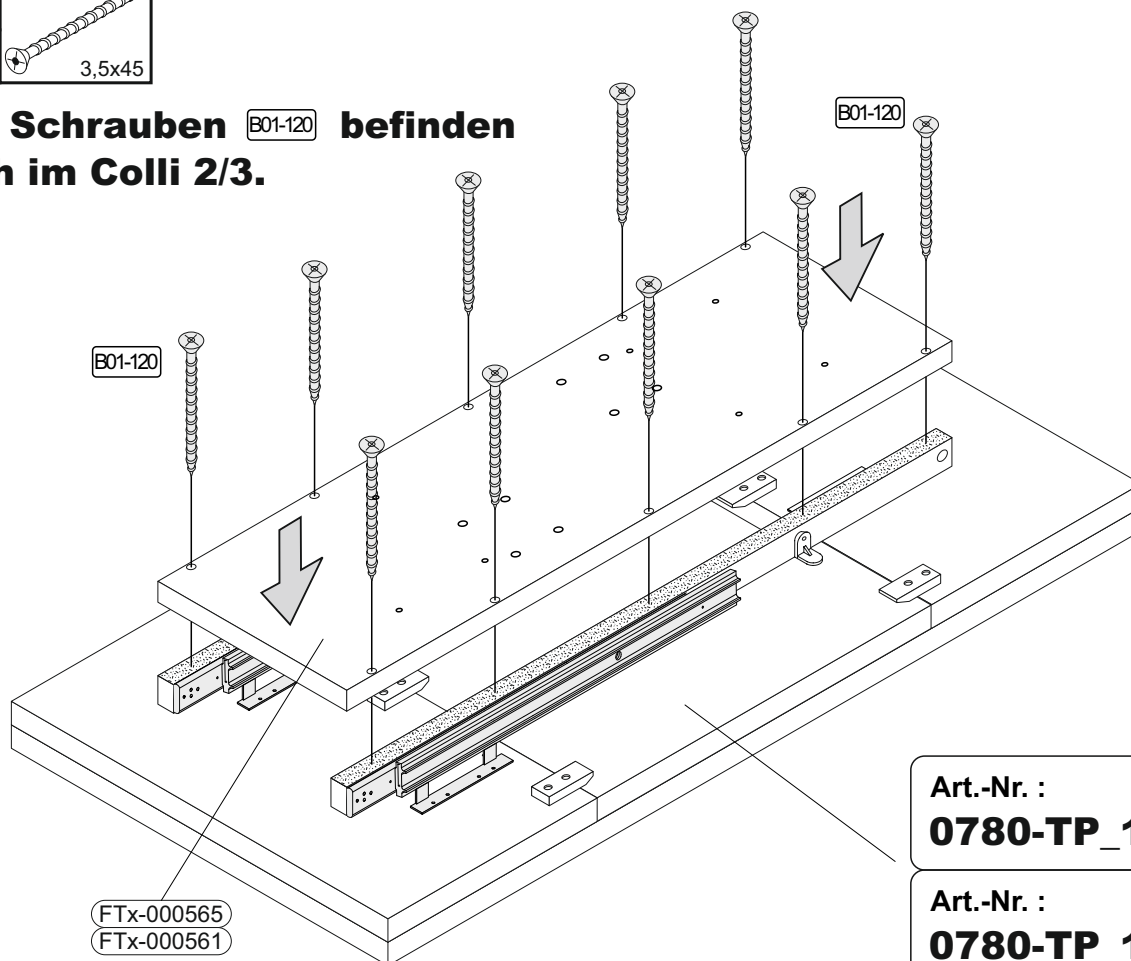


Art.-Nr. :
0780-TP_160-260

Art.-Nr. :
0780-TP_180-280









6





Die Schrauben B01-552 befinden sich im Colli 2/3.


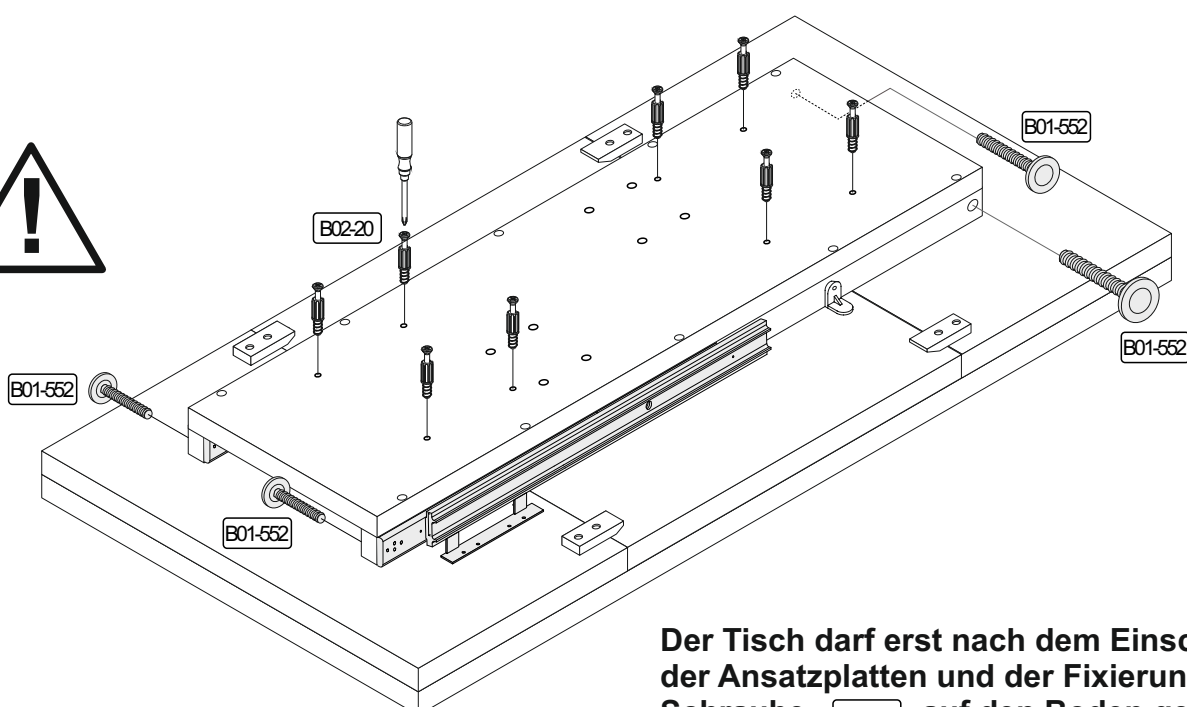


Der Tisch darf erst nach dem Einschieben der Ansatzplatten und der Fixierung mit der Schraube B01-552 auf den Boden gestellt werden!!!

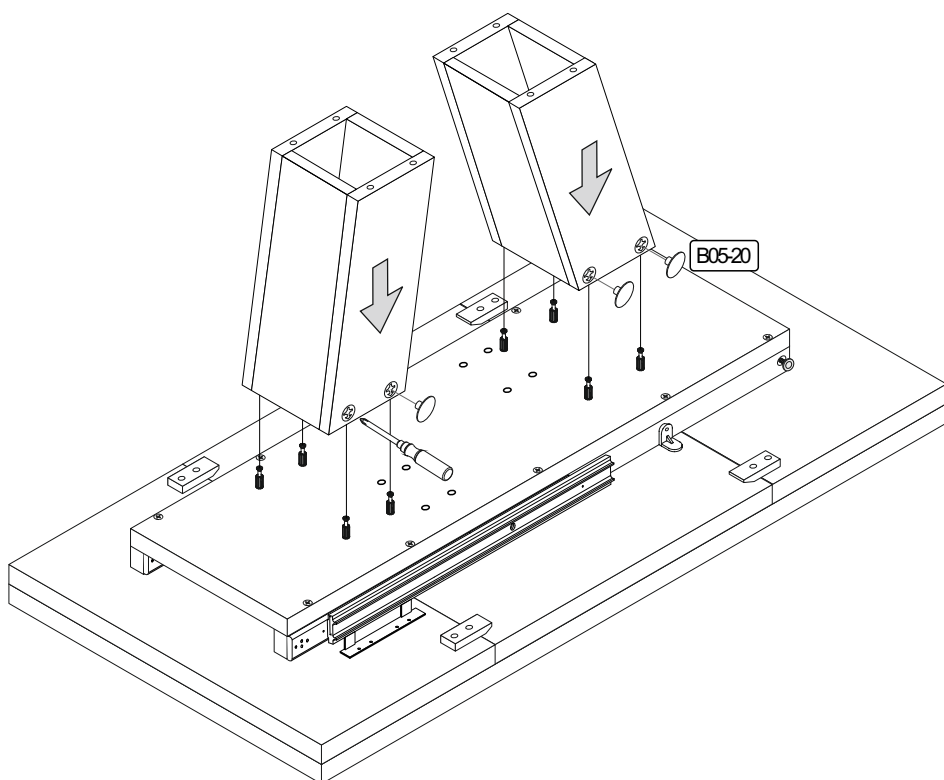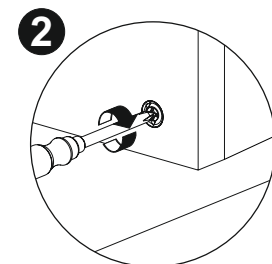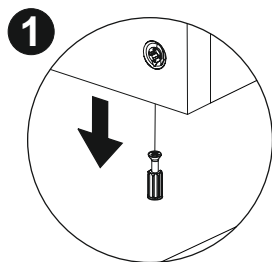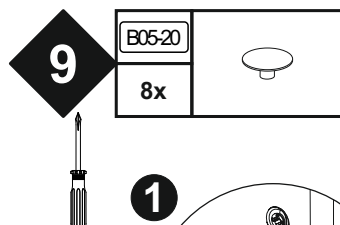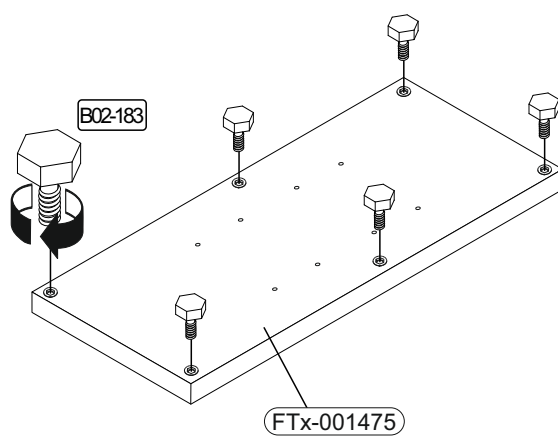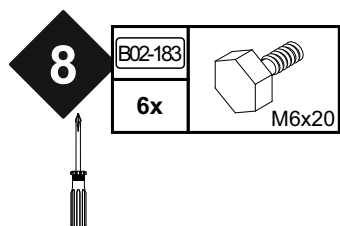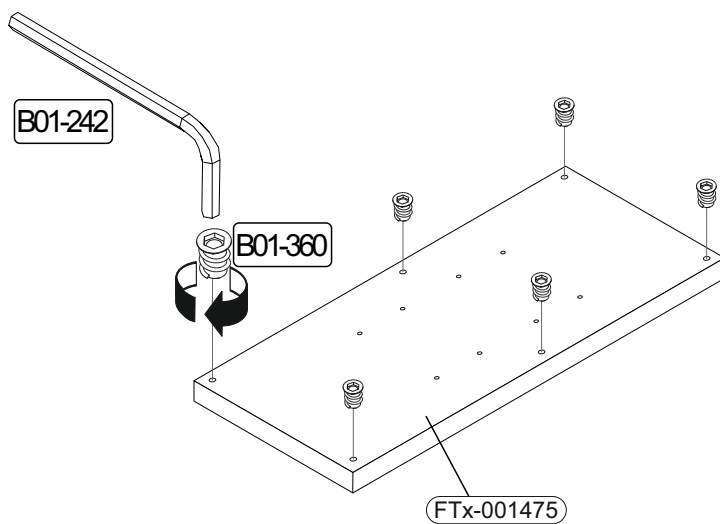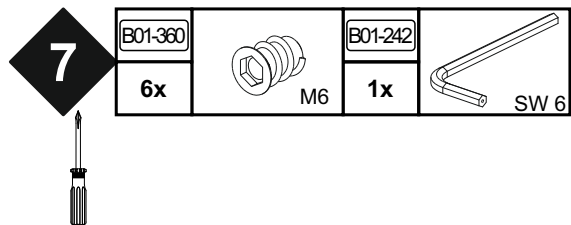

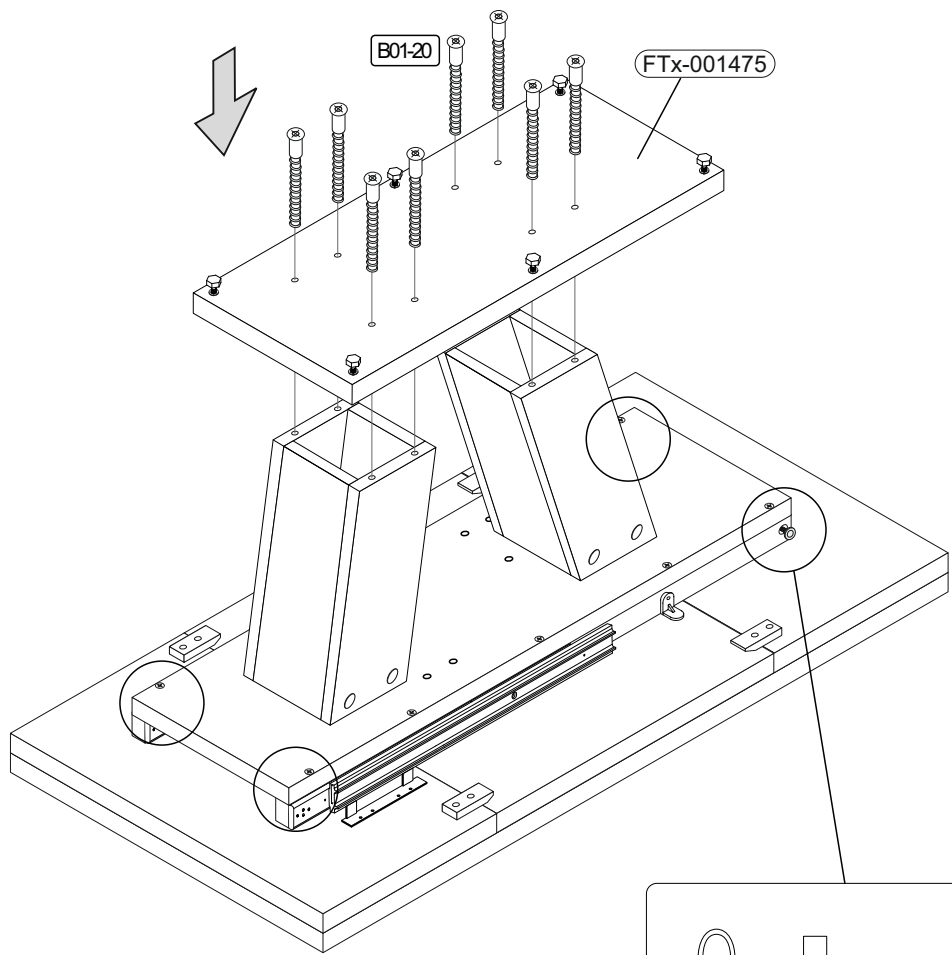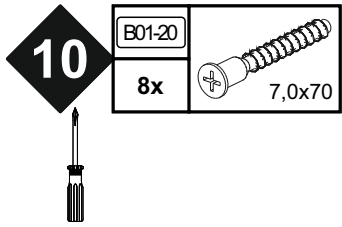

11

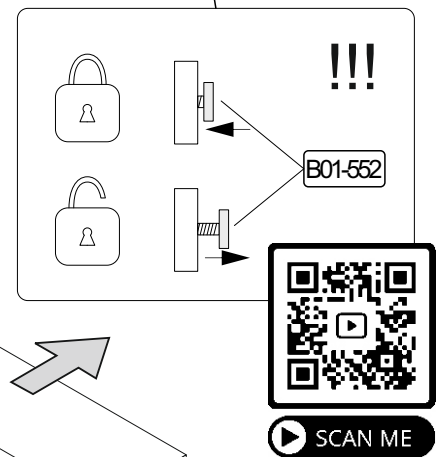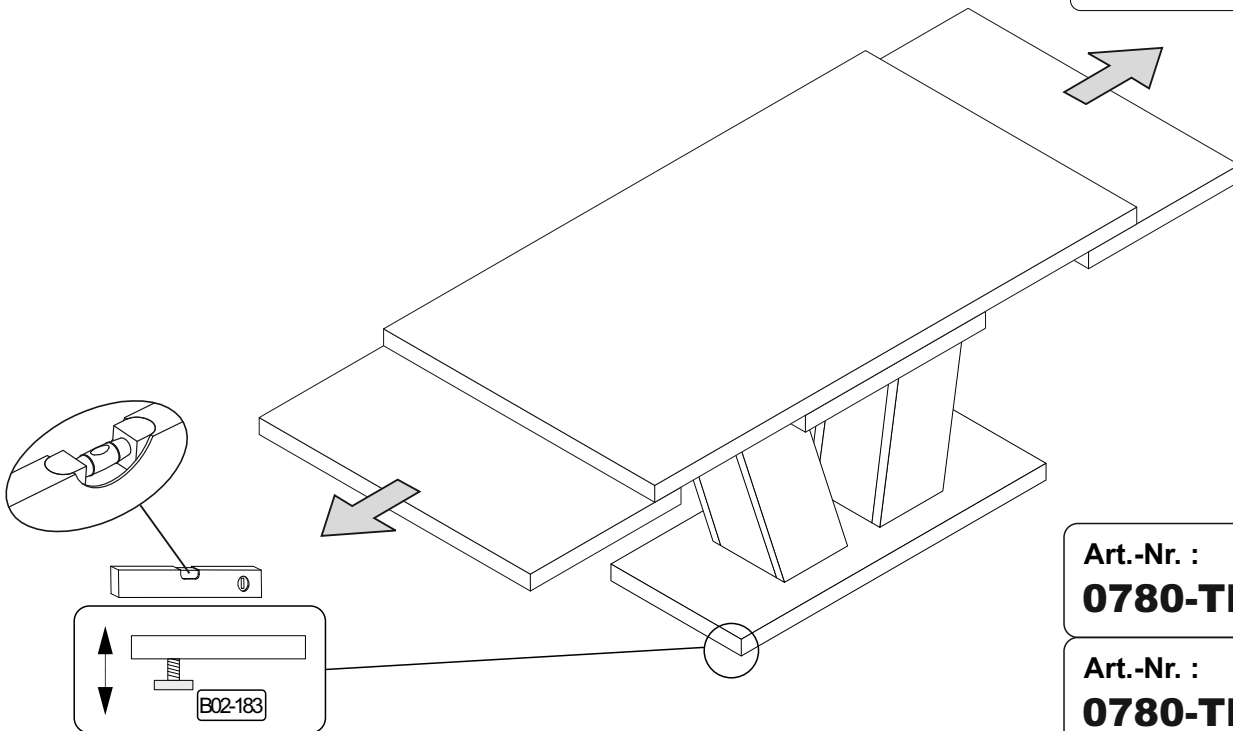

Art.-Nr. :
0780-TP_160-260

Art.-Nr. :
0780-TP_180-280

