



Natura 1660

899276


Kufen aus Holz

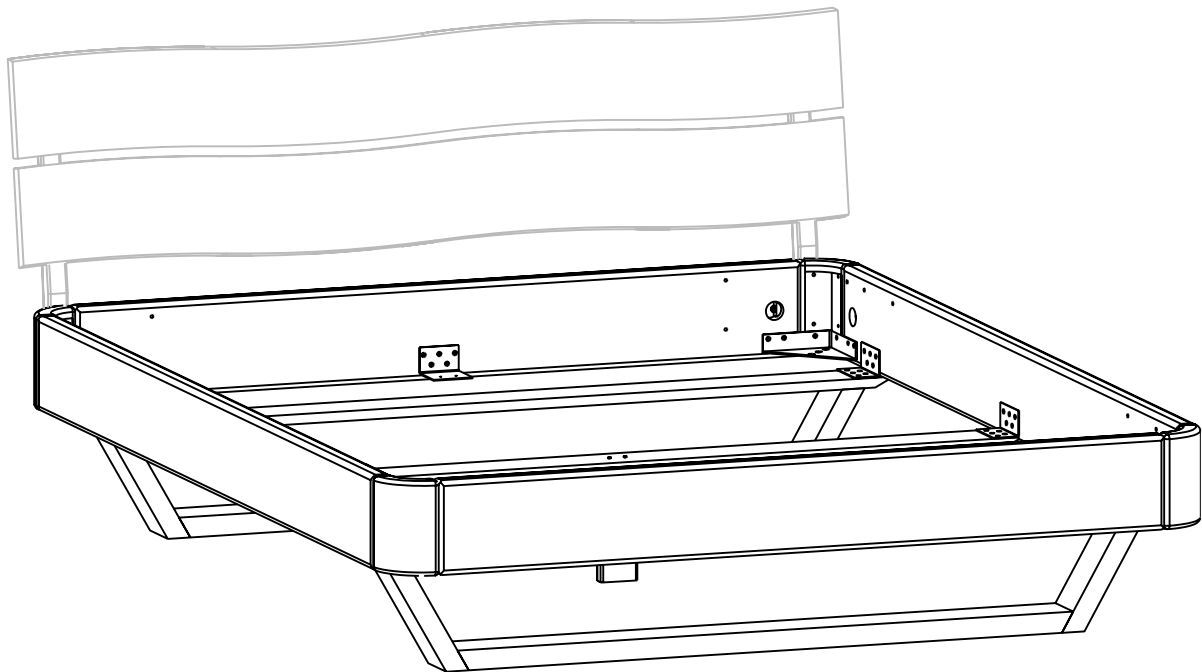


1

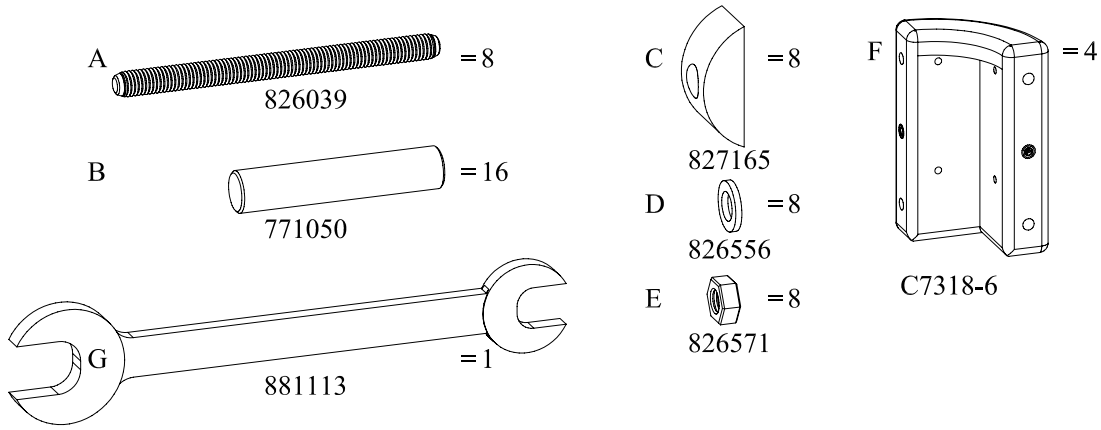


2

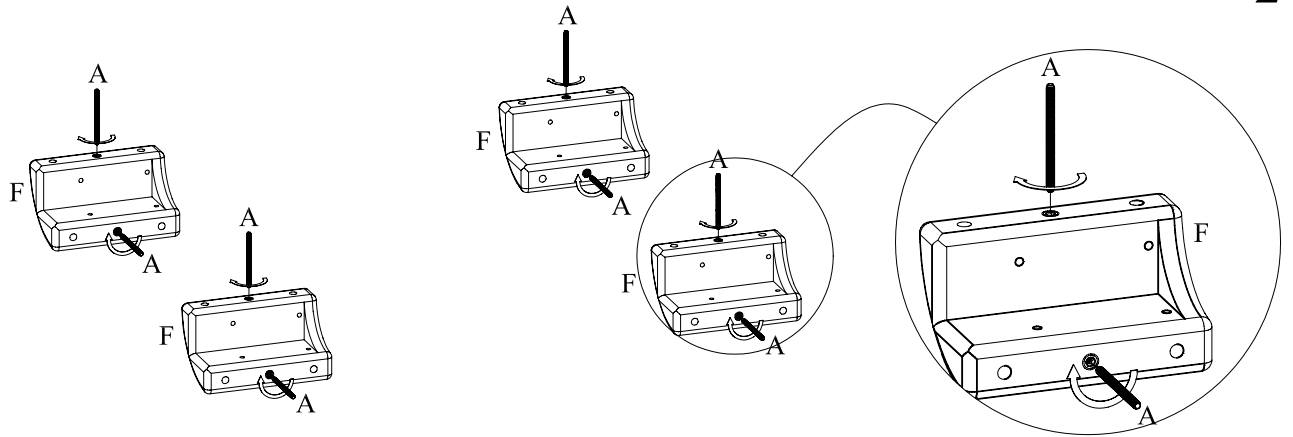




3



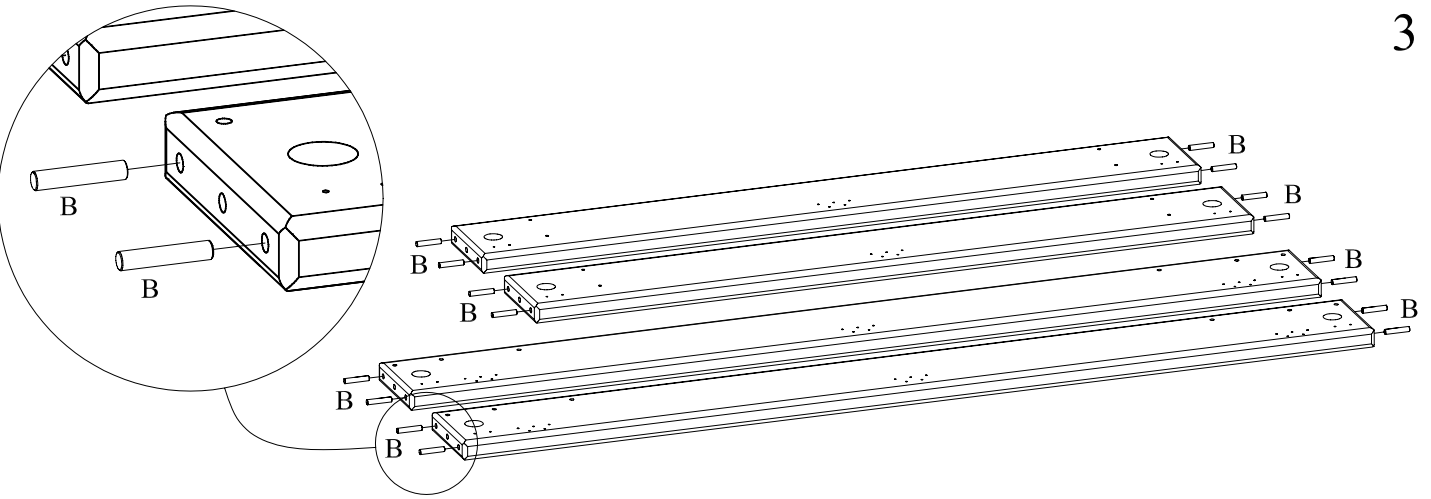


4

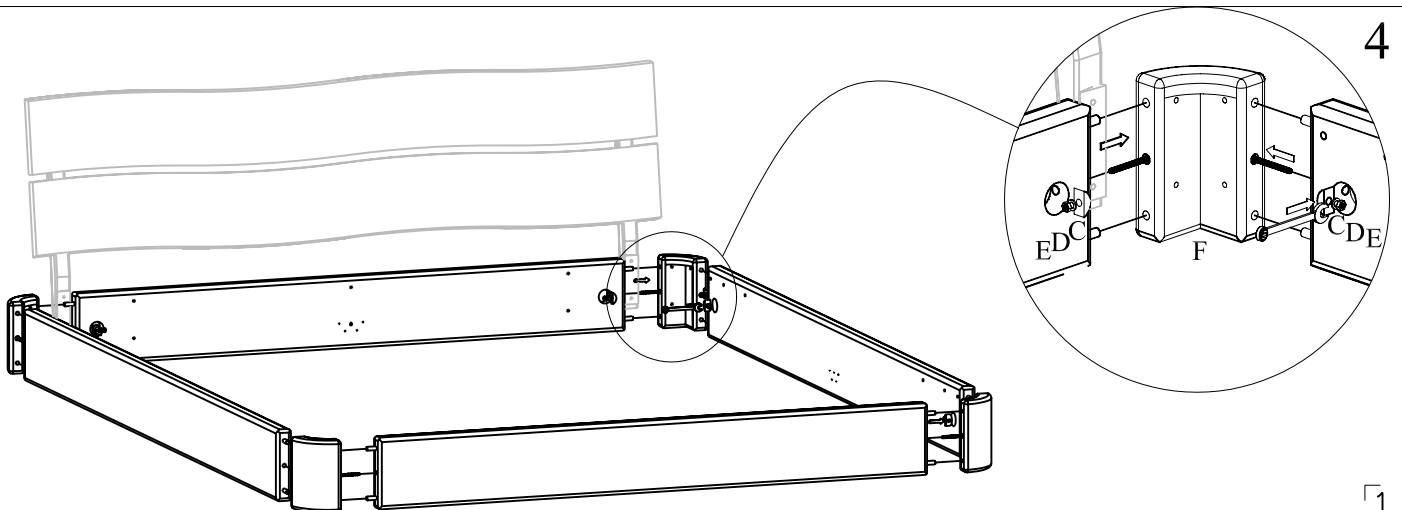

1

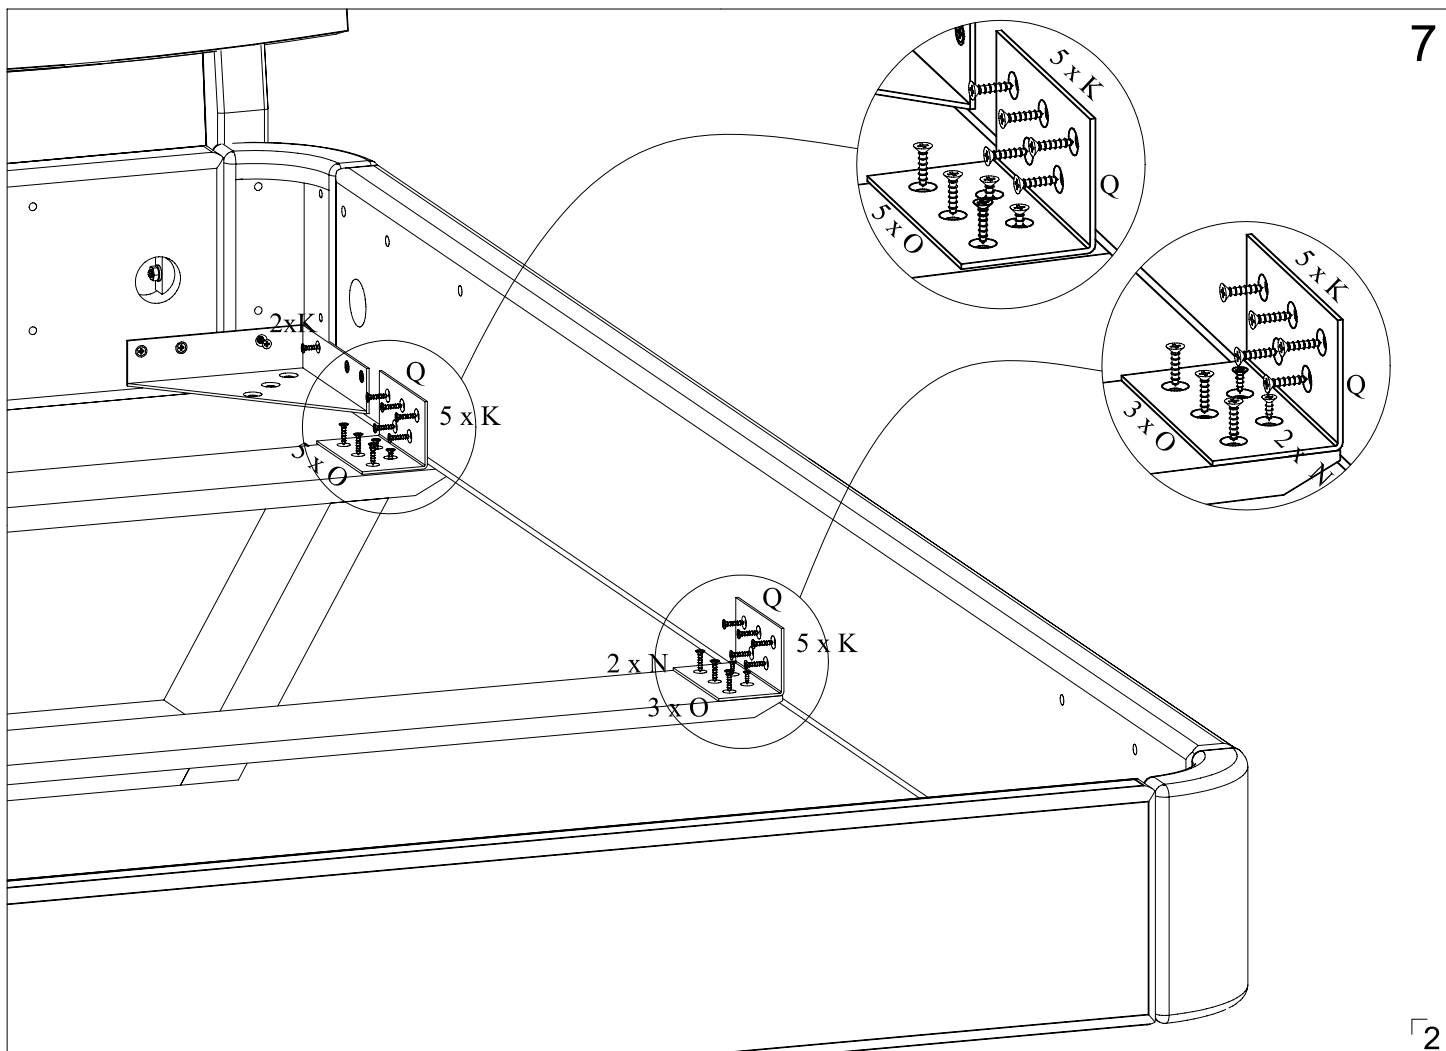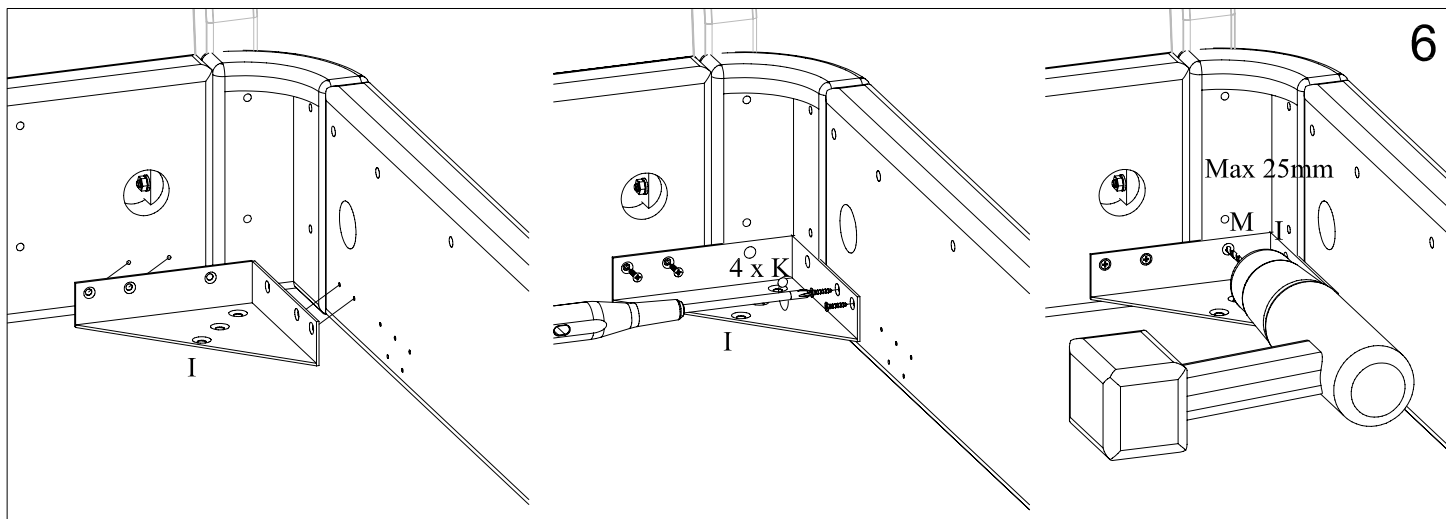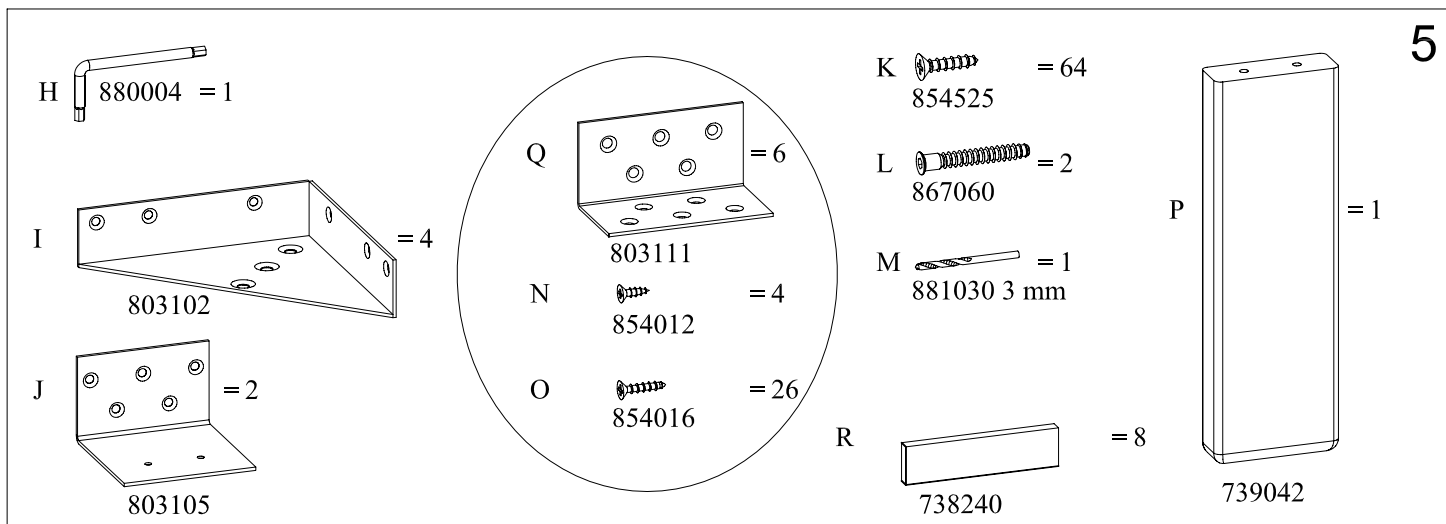

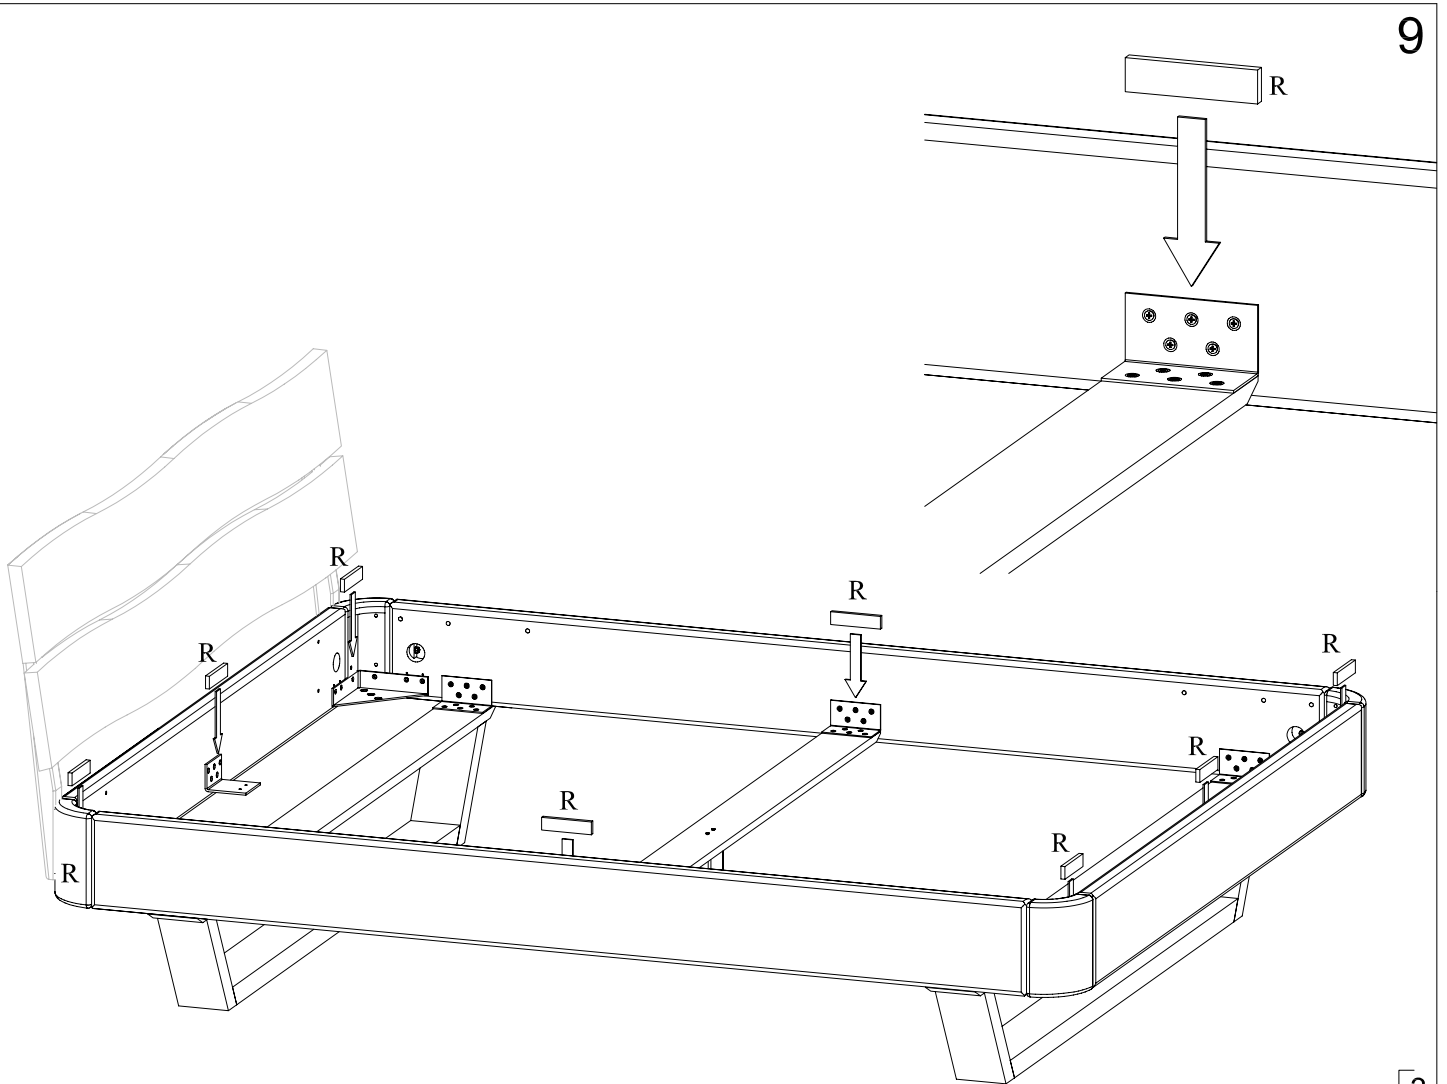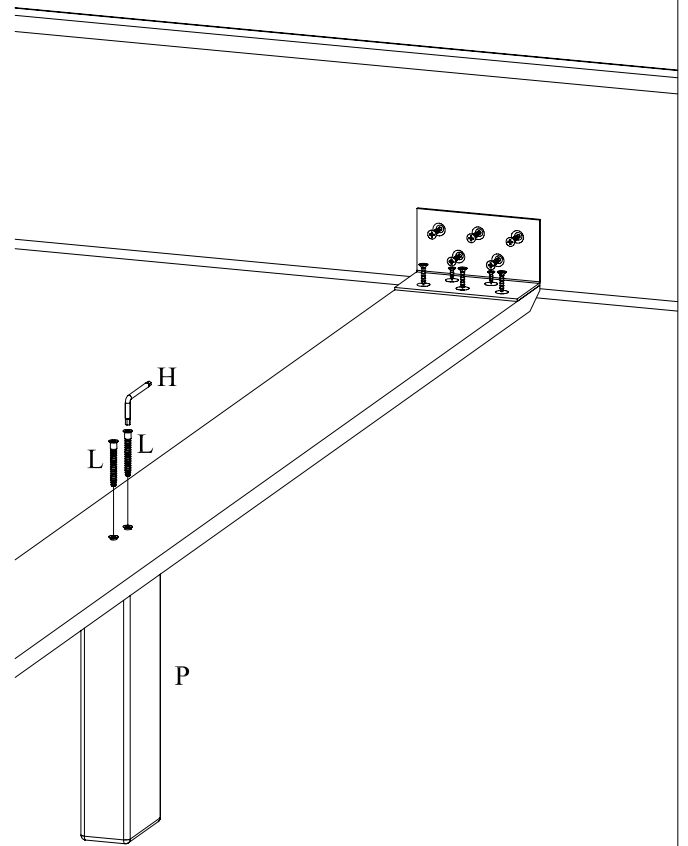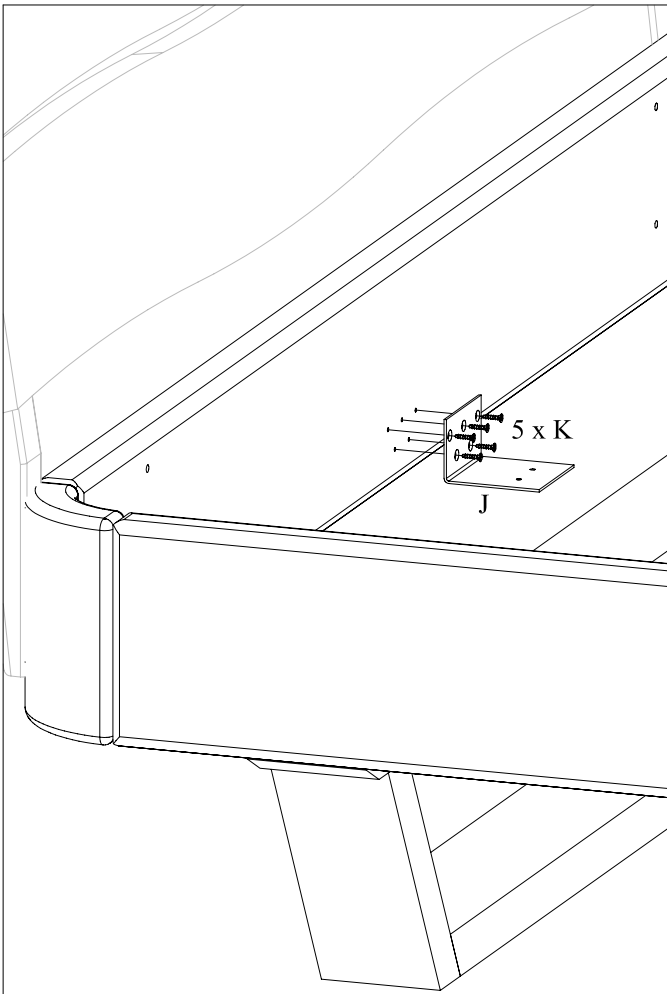





Easy Sleep

896180

KOPFTEIL




40 MM Bettrahmen

C9185xxxx

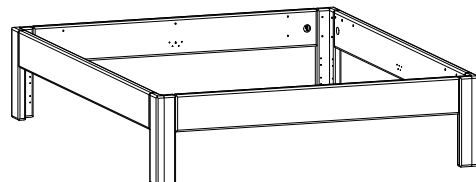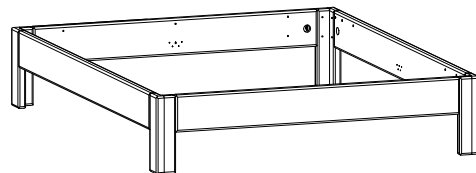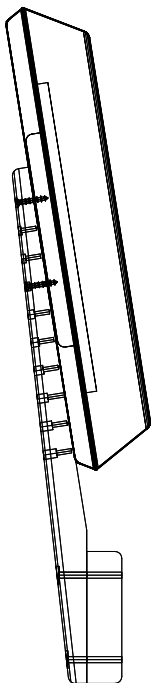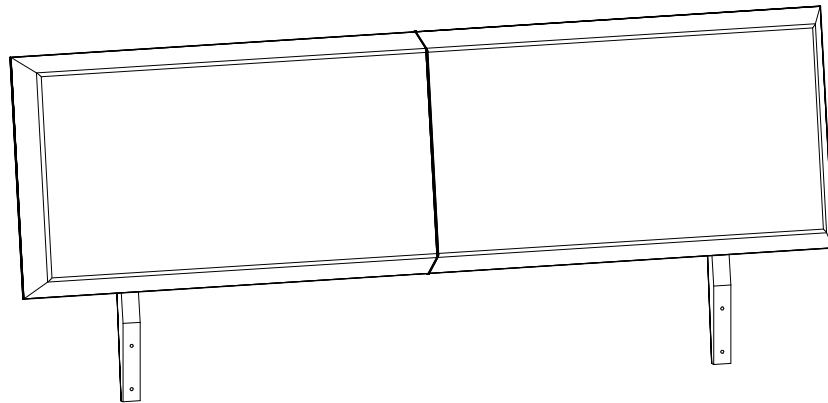


1


- A  881065 = 1
 B  826120 = 2
 C  826110 = 2
 D  826555 = 4
 E  826571 = 4
 F  853540 = 8




H 738117 = 2

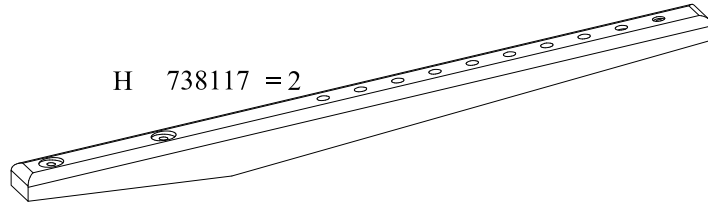




2

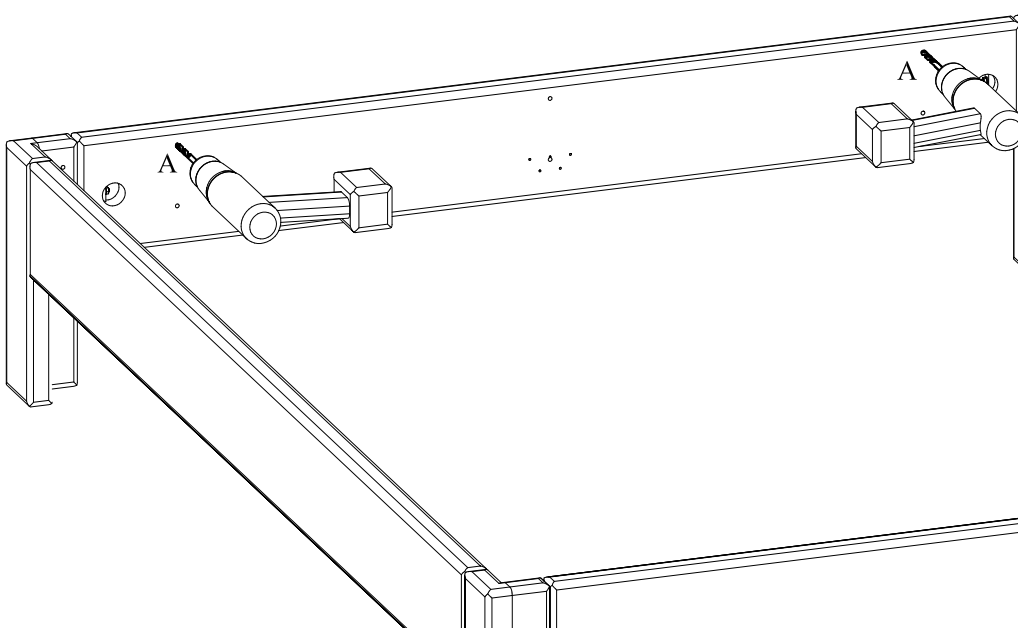

3

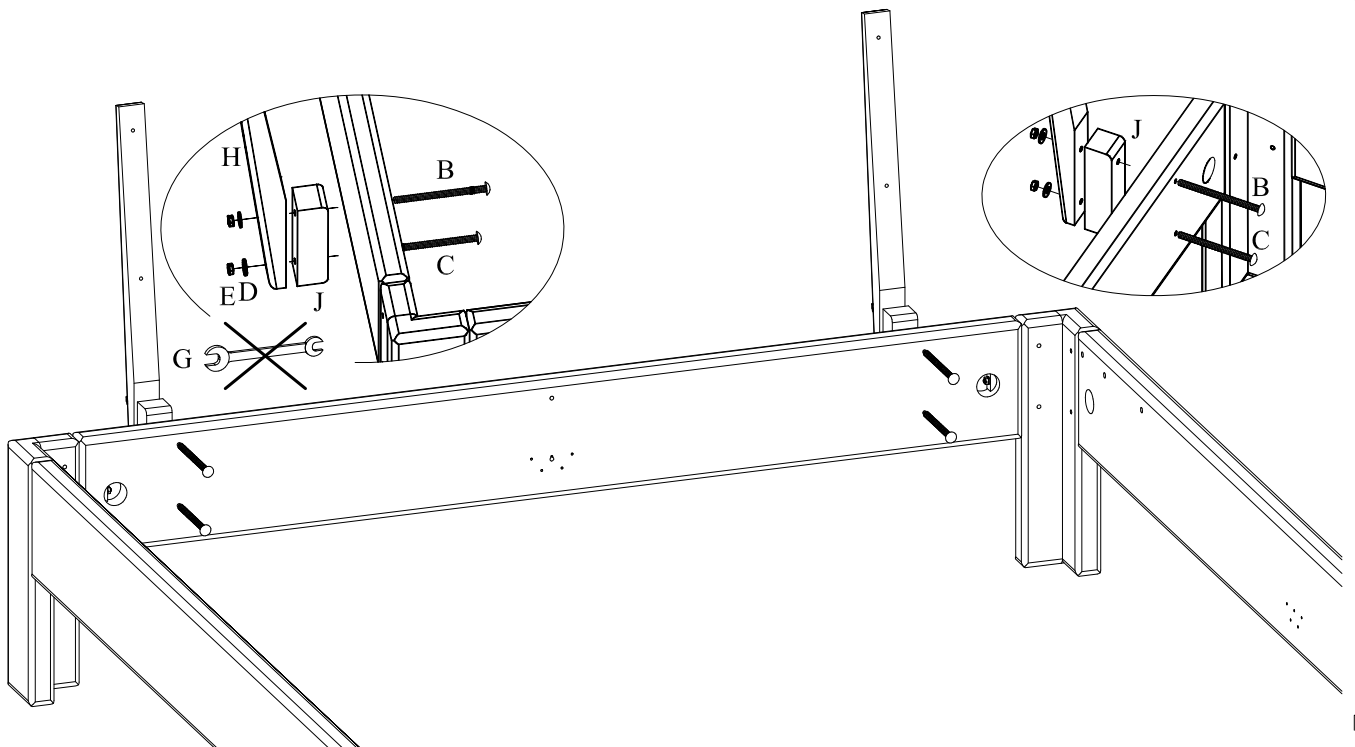

2

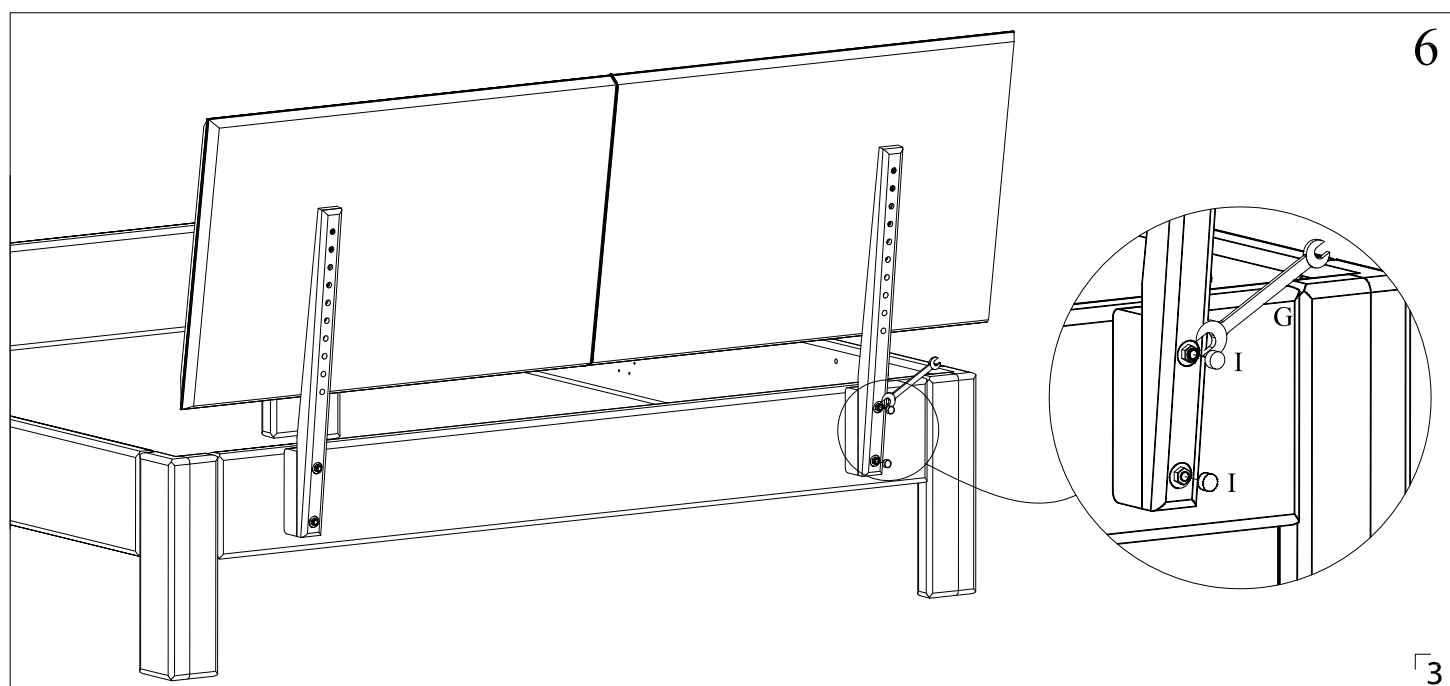
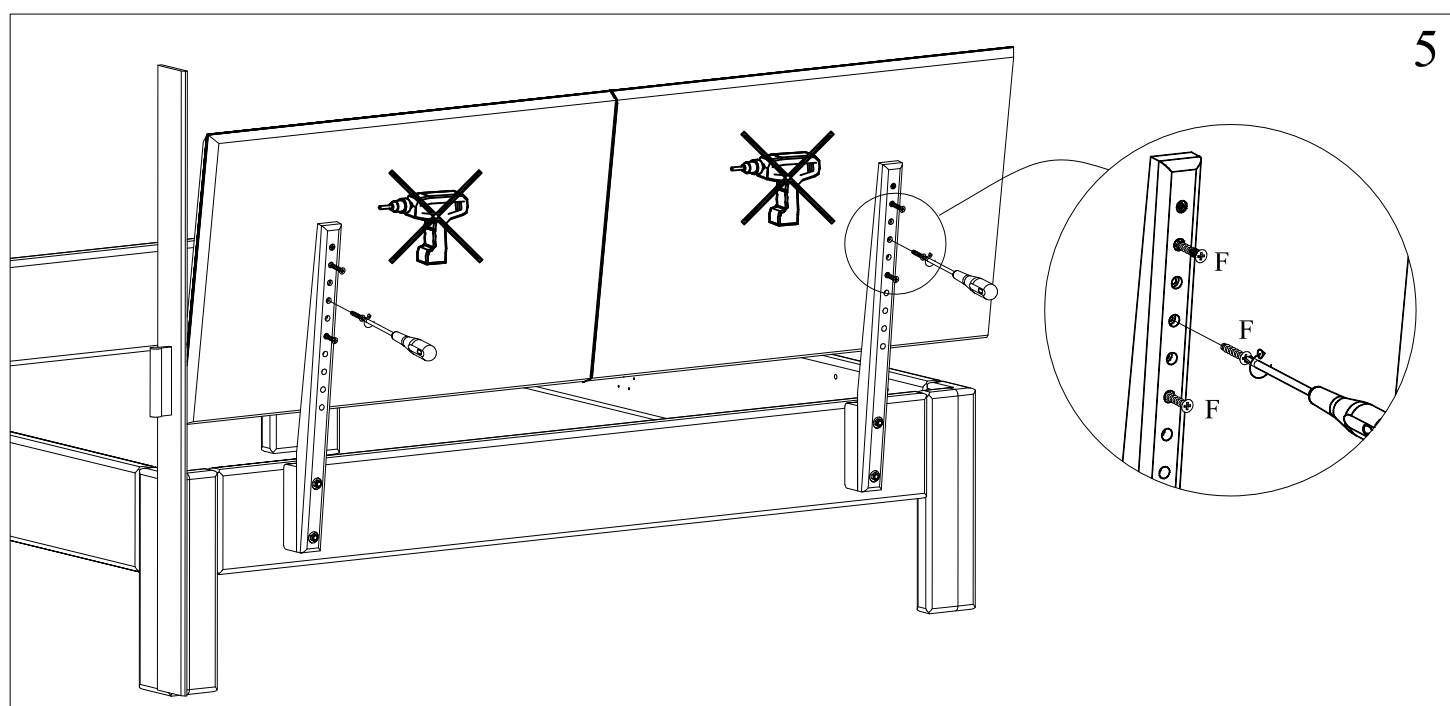
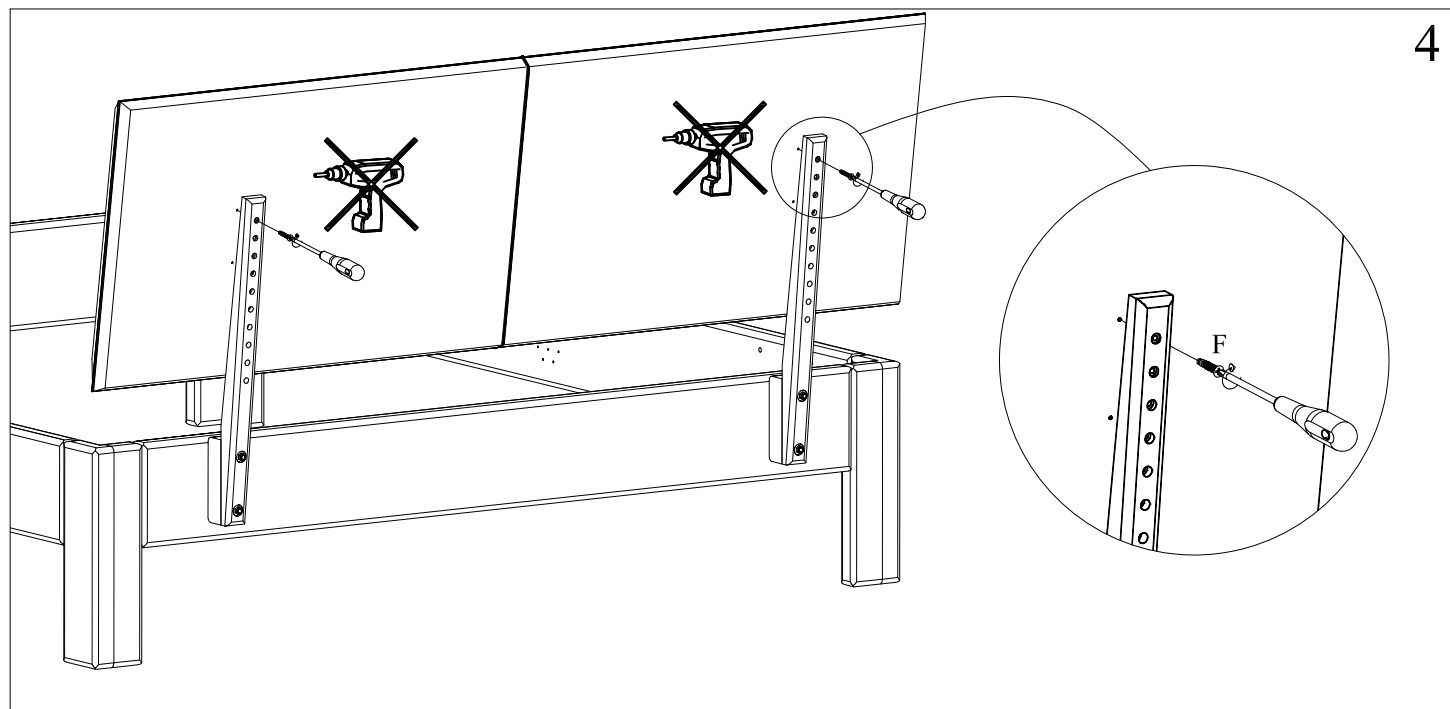


Modern Sleep

KOPFTEIL

26 MM Bettrahmen

C9185xxxx

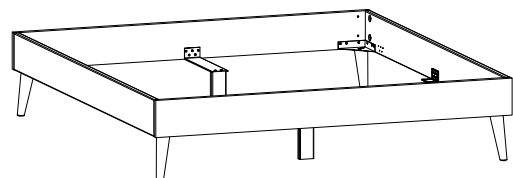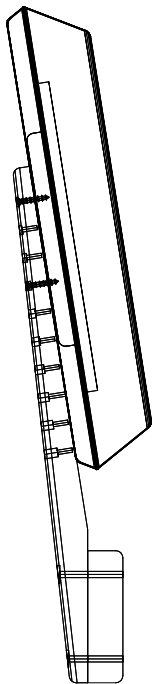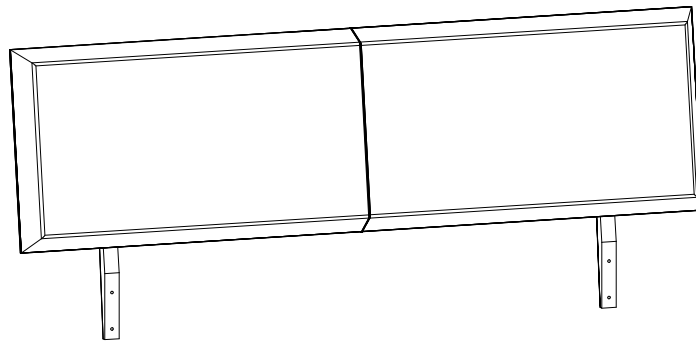

1

A 881065 = 1

B 826110 = 2

C 826100 = 2

D 826555 = 4

E 826571 = 4


F 853540 = 8

G 881113 = 1


I 826567 = 4

J 738044 = 2


H 738117 = 2

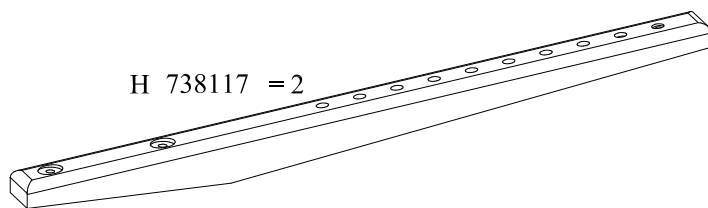

2

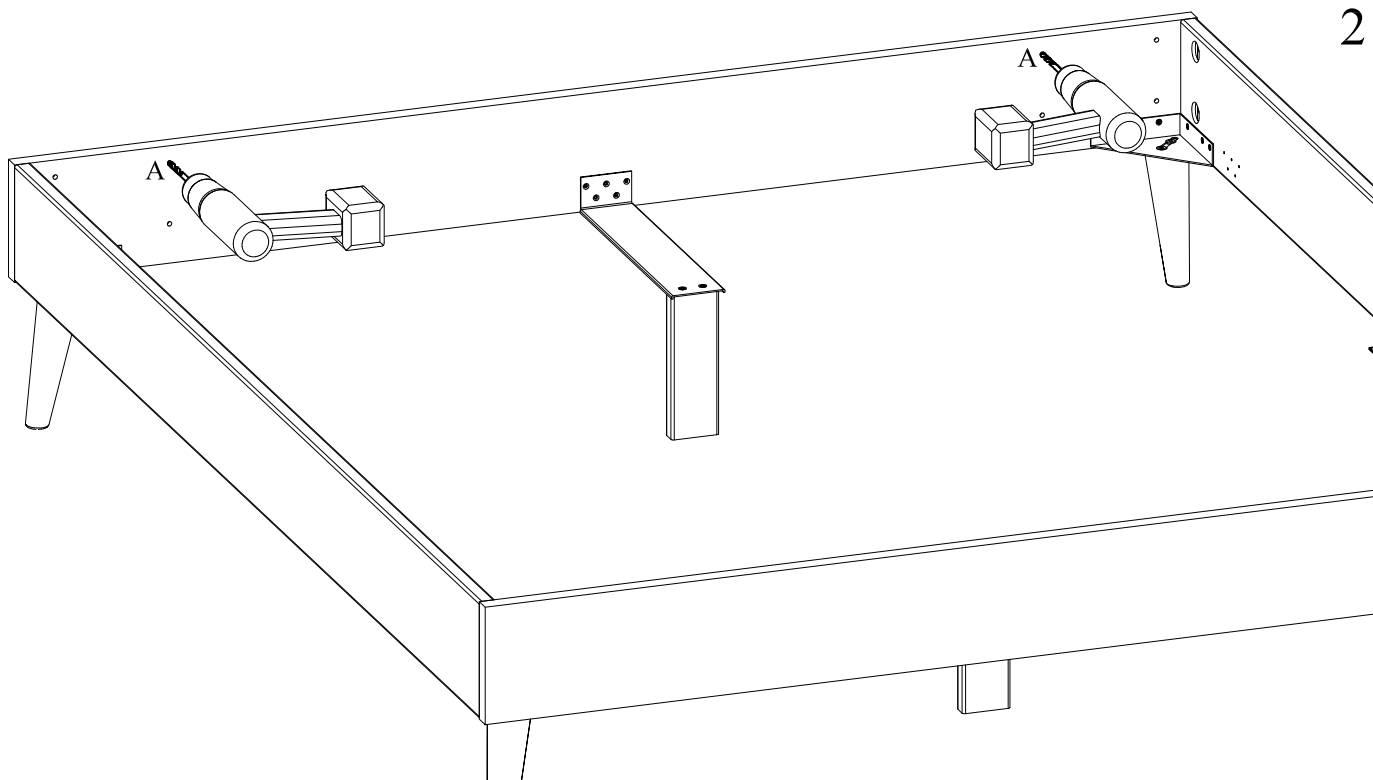

3

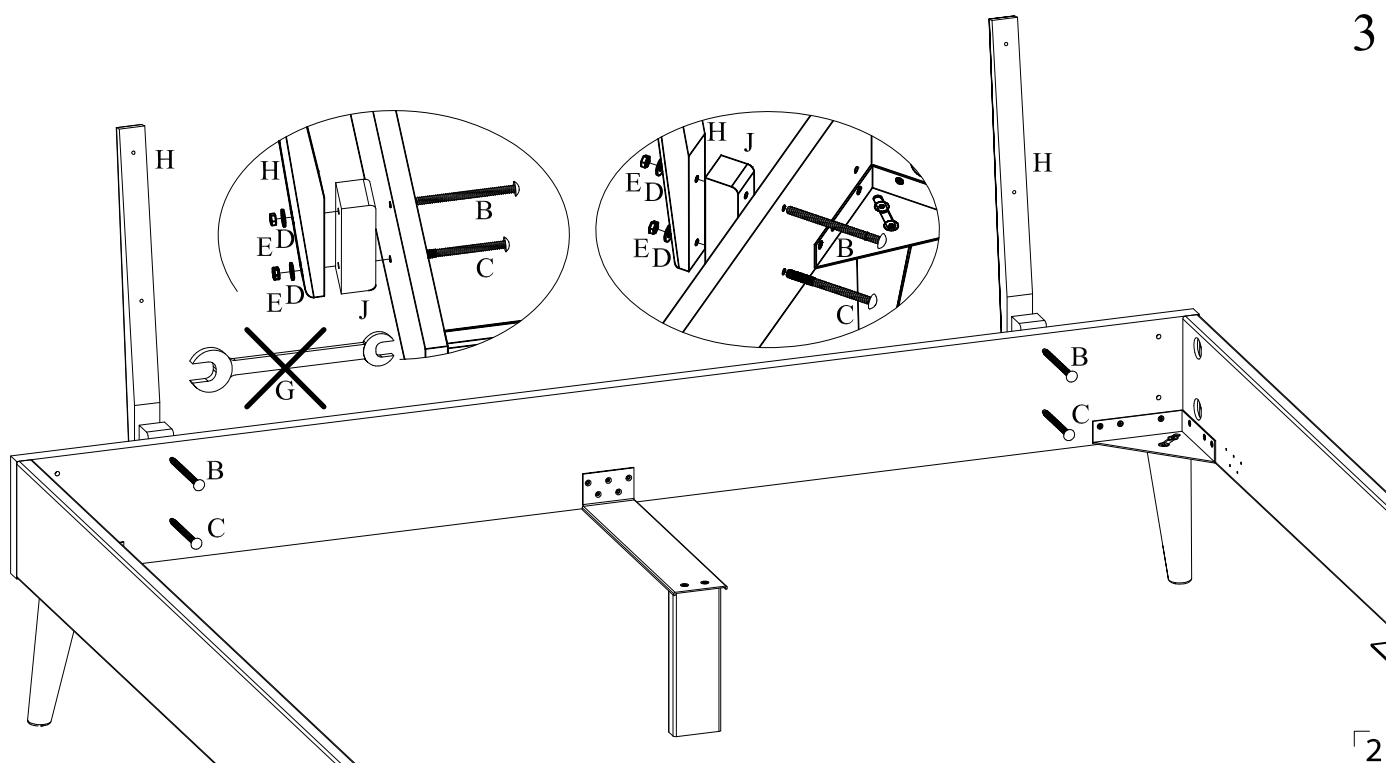

2

