


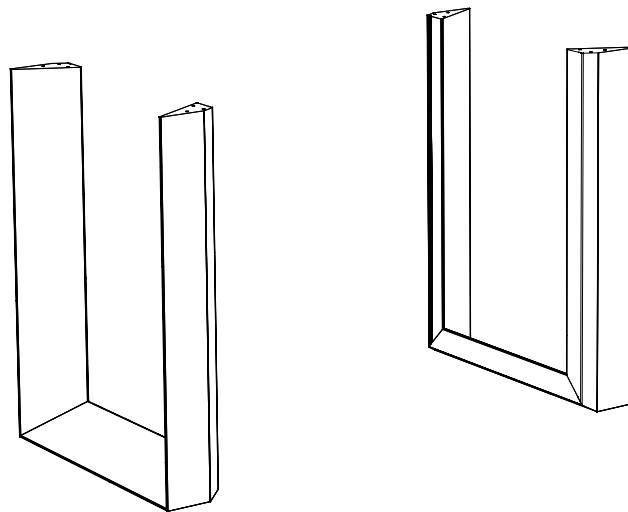


Artikel.-Nr.:





5015-U



Montageanleitung.-Nr.:

MA1-00597


REPC-Nr.:

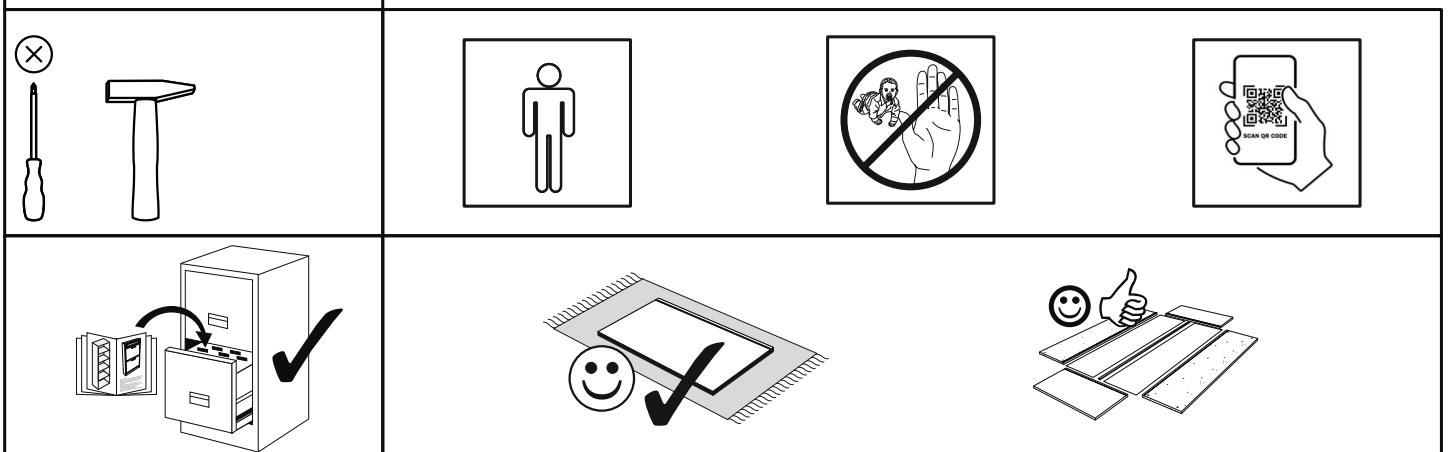


BT1-00684 Colli 1/1					
B01-241		B01-321		B01-362	
1x	SW 5	4x		4x	6x50
B02-104		B02-169		B05-130	
12x	8x40	8x	ø12mm	4x	
B01-183					
12x	6x60				

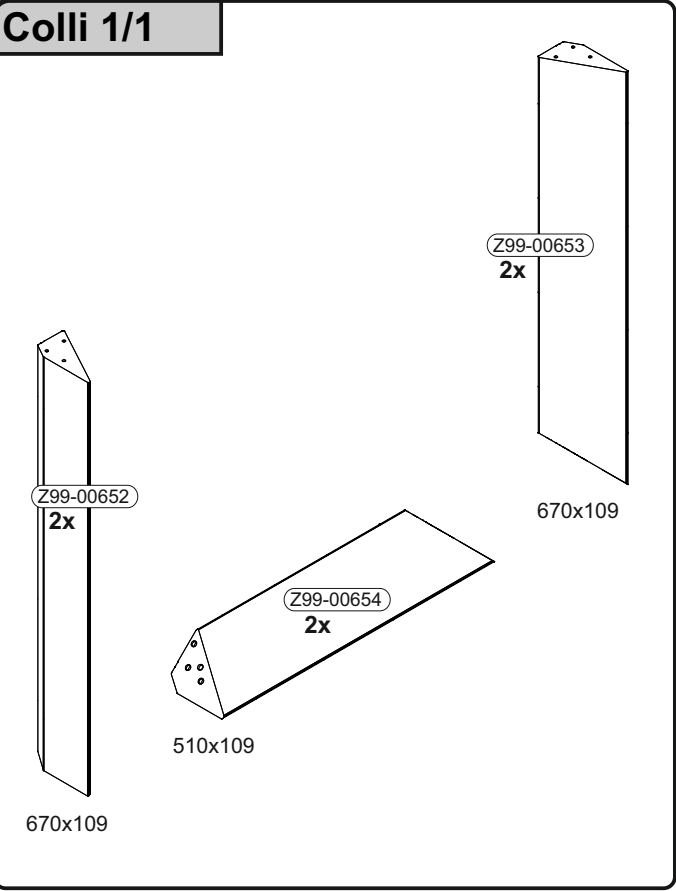


1

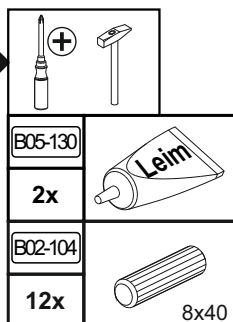



1
2x

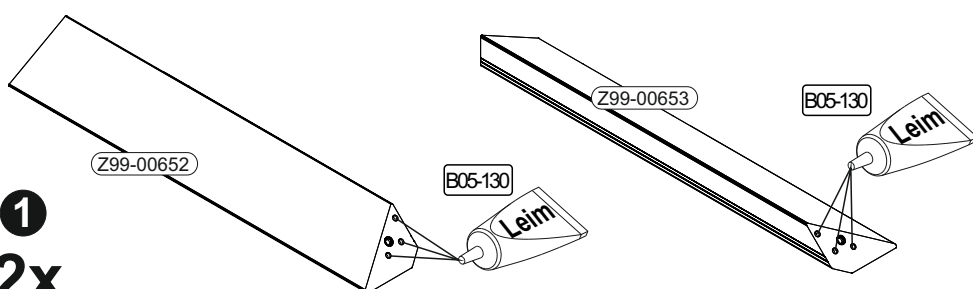

2
2x

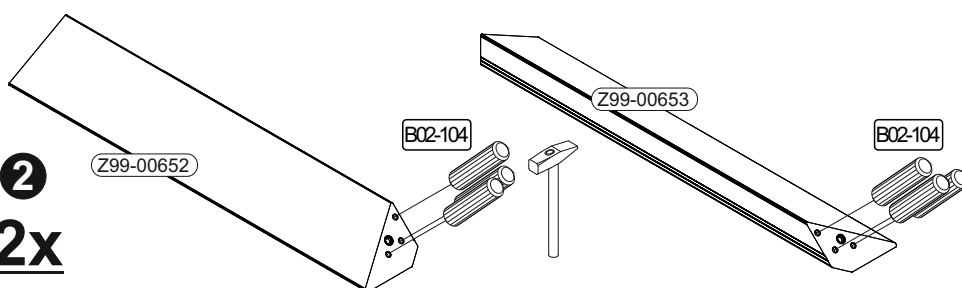

2

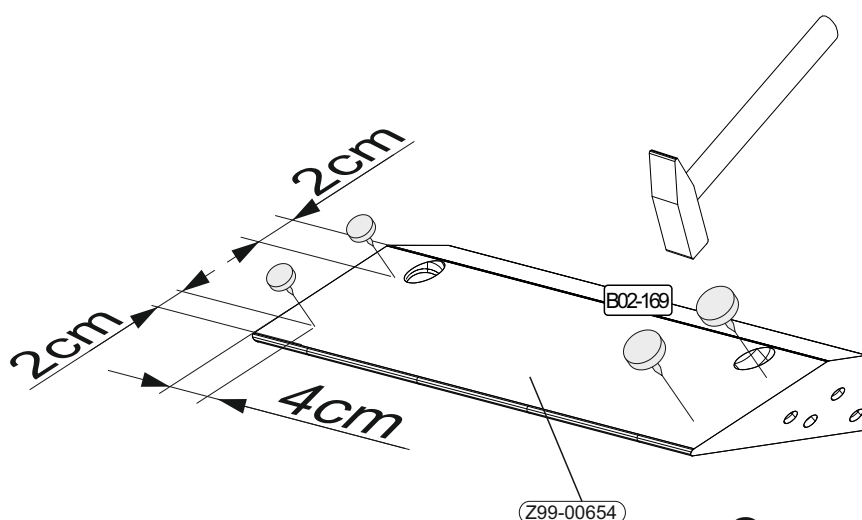

2x

3

B01-241

1x

SW 5

4x

4x

6x50

2x

Leim

1


2x

2

2x

3

2x

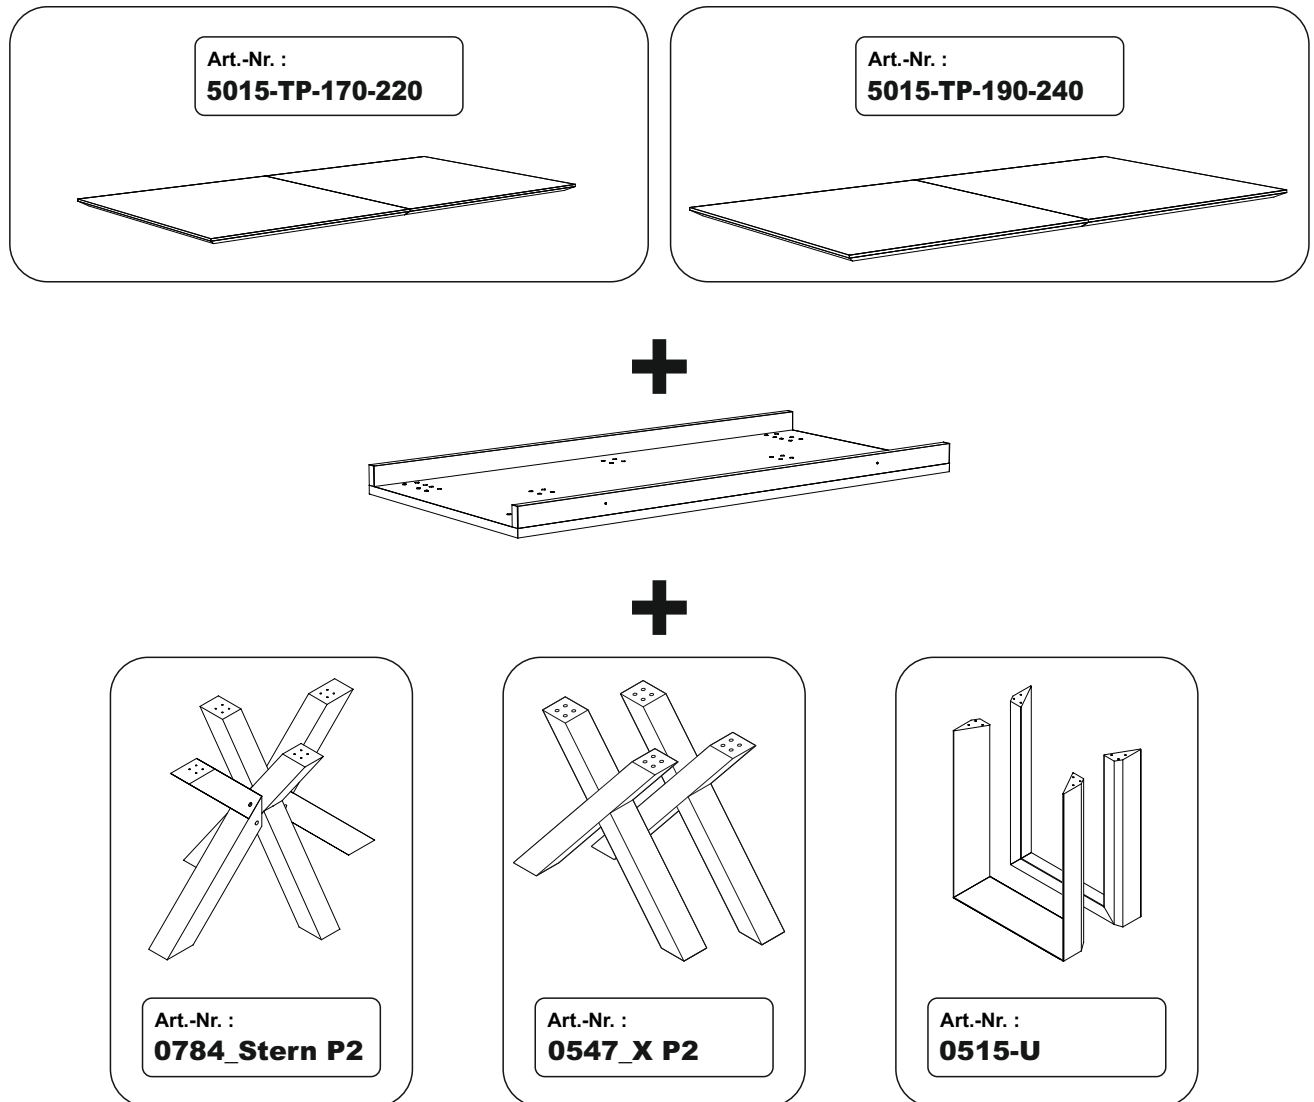


Artikel.-Nr.:



5015-VT

Montageanleitung.-Nr.:

MA1-00587

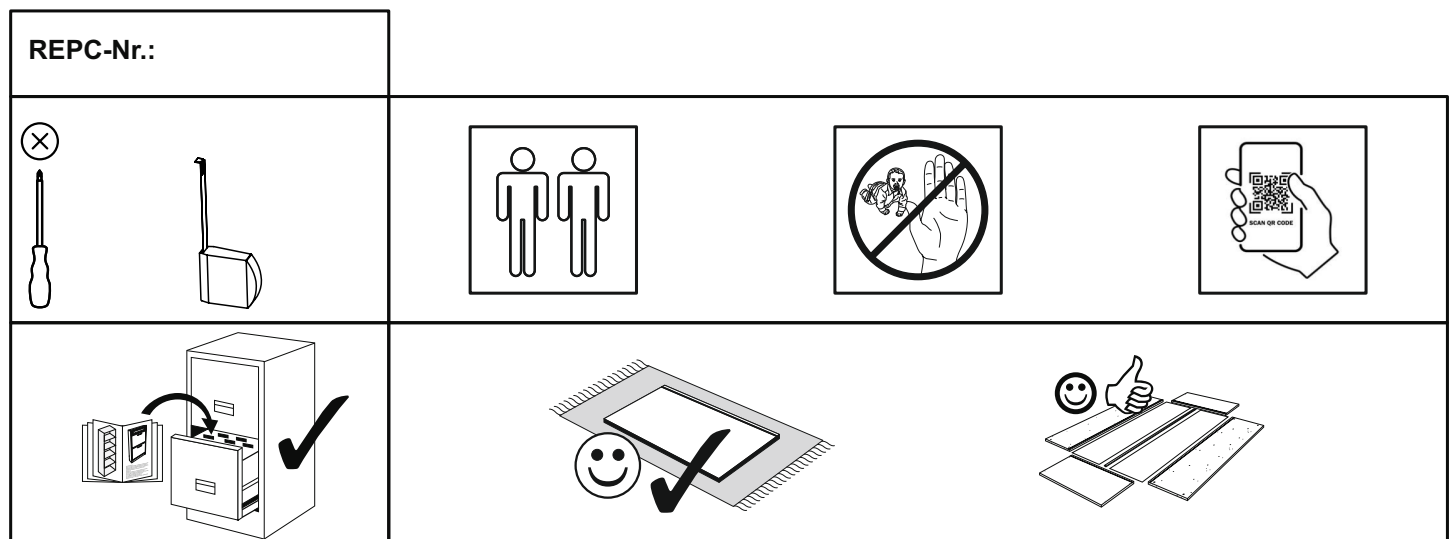


BT1-00687 Colli 1/1


B01-110		B01-120		B01-39-16		B01-90	
8x		10x		24x		2x	
B02-170		B02-174		B05-260			
2x		4x		1x			

BT1-00001 Colli 1/1


B05-265	
1x	





Colli 1/1

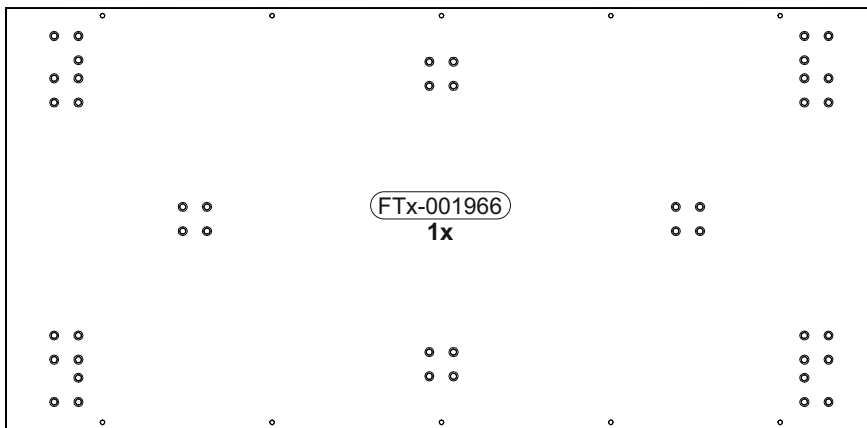


1152x558




1152x44

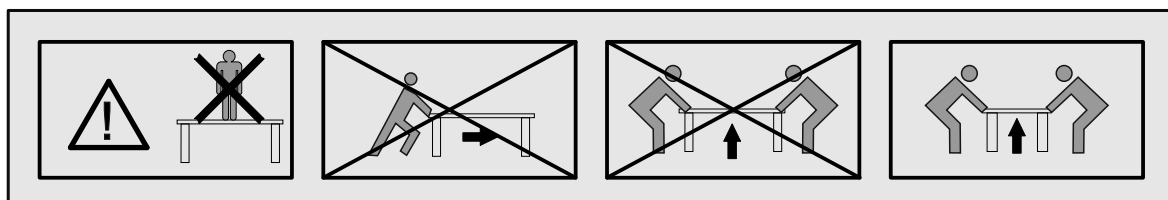
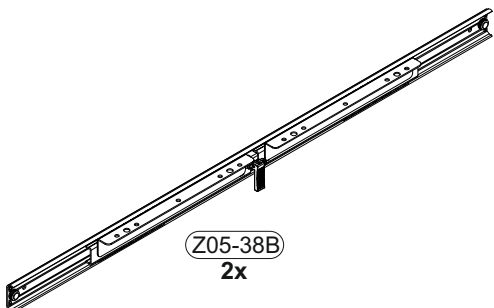


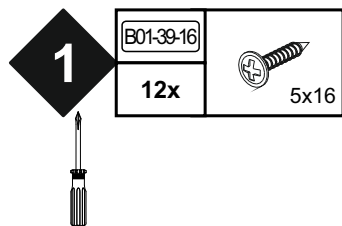

1


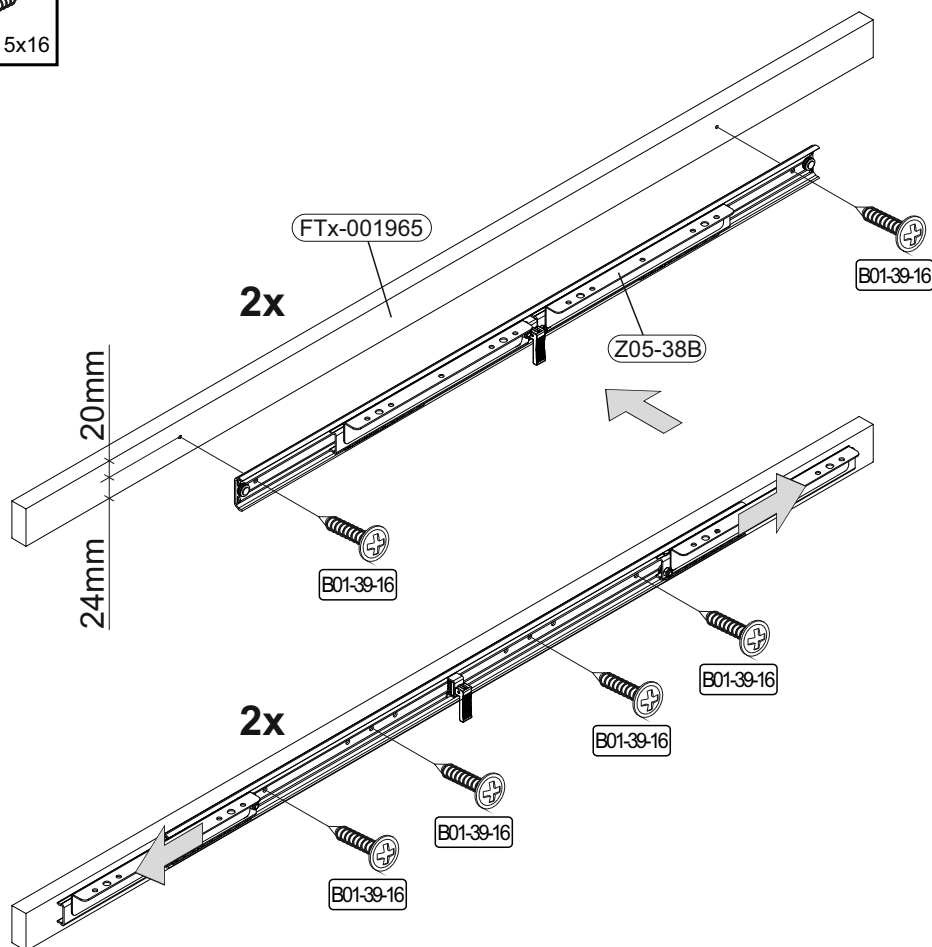



2

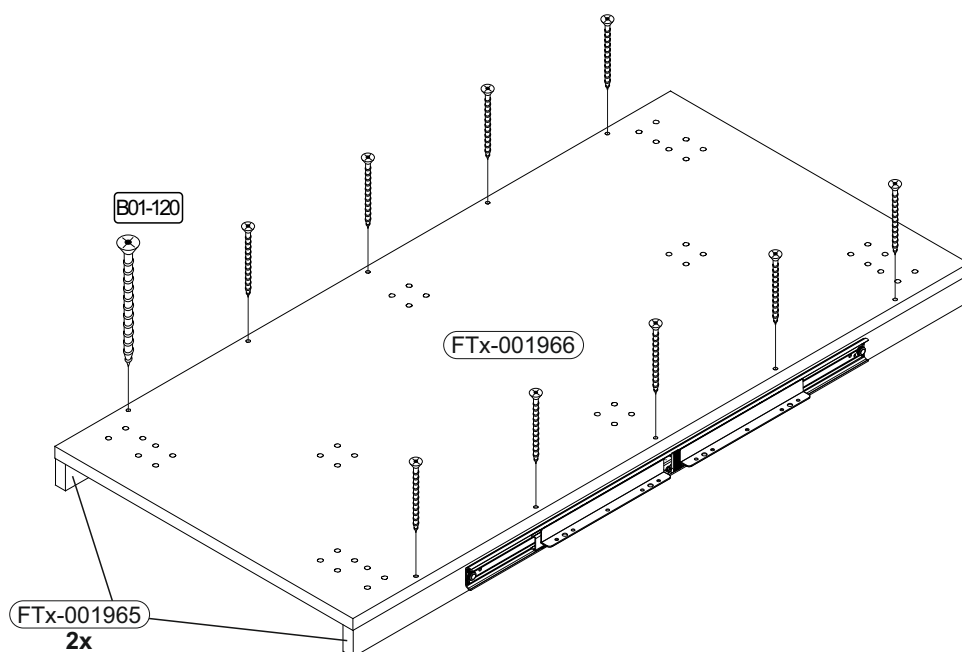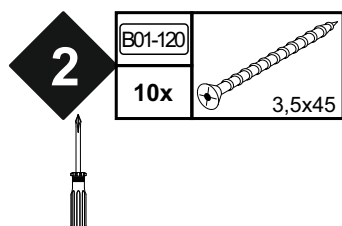

3





B01-110	
8x	3,5x35
B02-174	
4x	


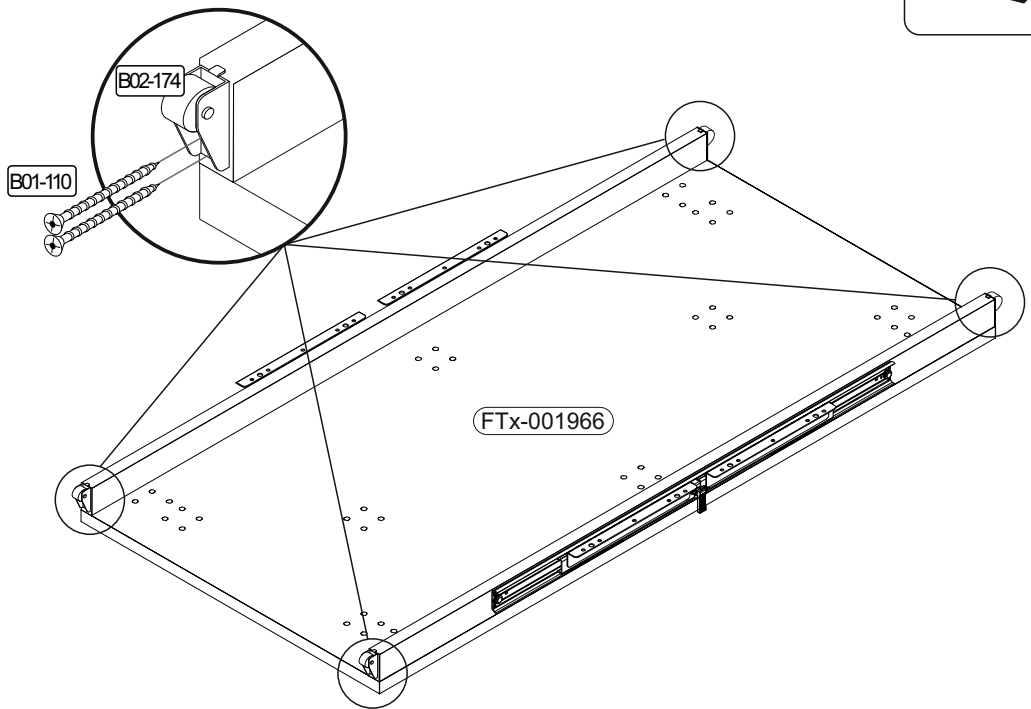


4






B01-90		B02-170	
2x	3,5x20	2x	


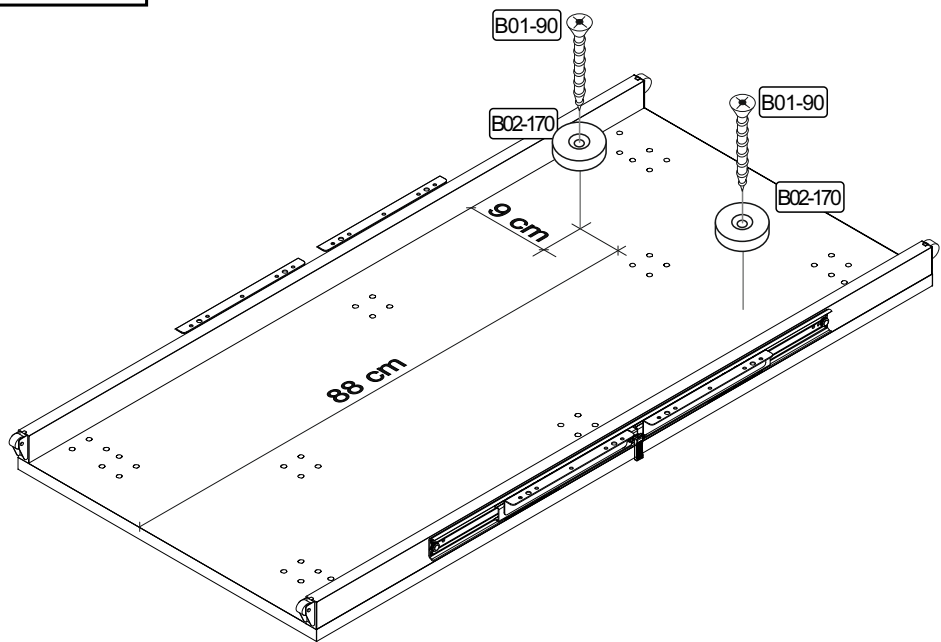


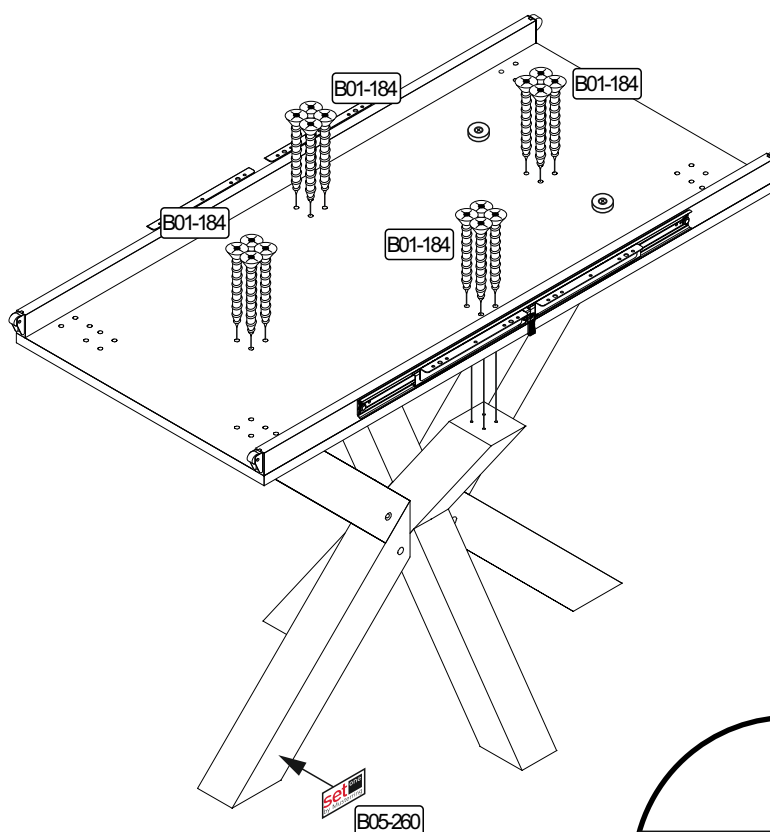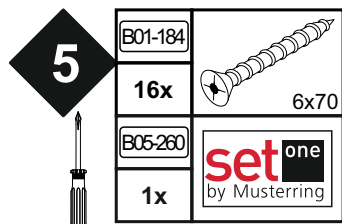


Art.-Nr. :
0784_Stern P2

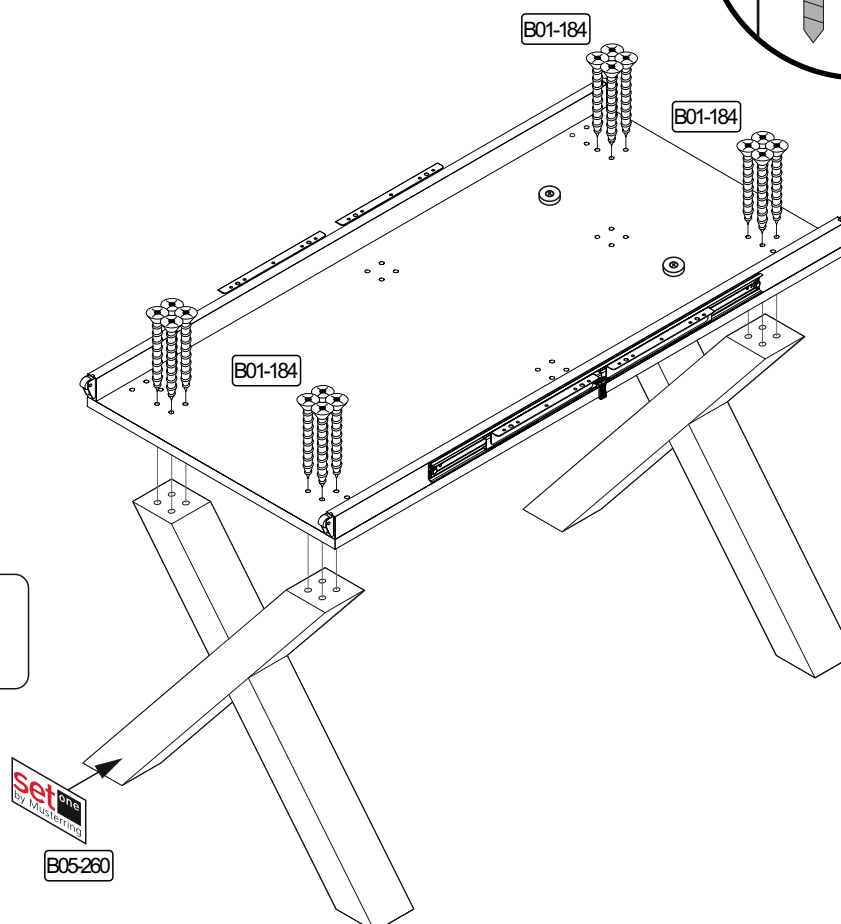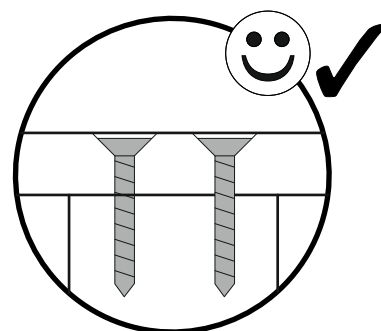

Art.-Nr. :
0547_X P2

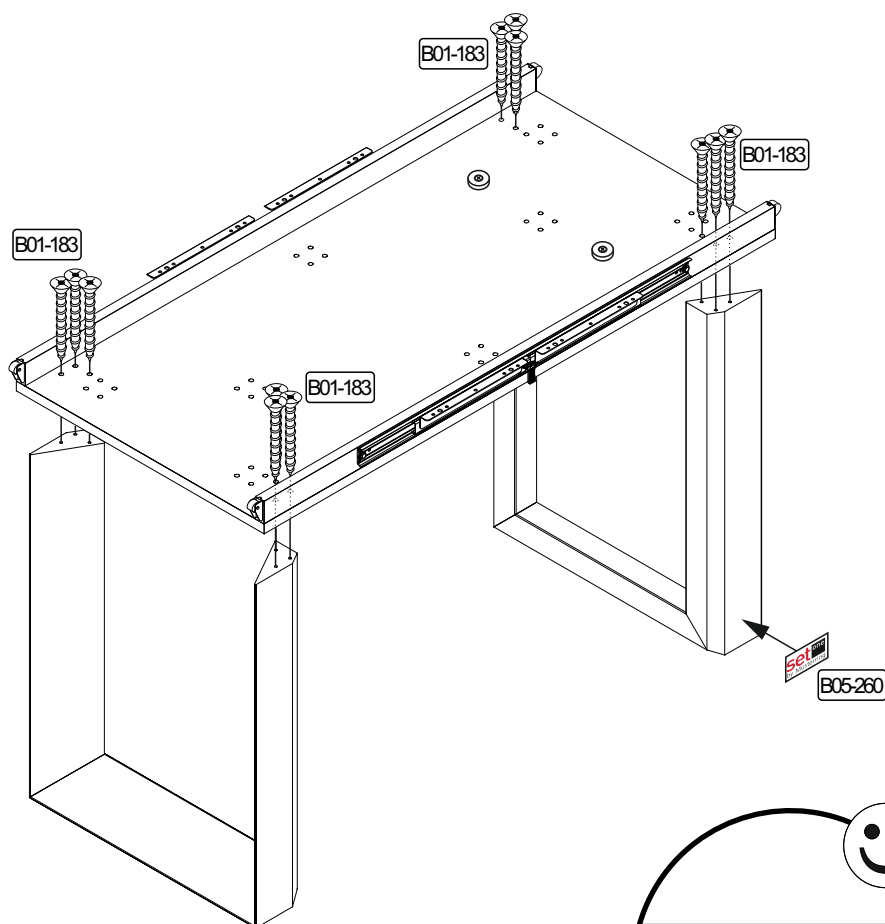


Art.-Nr. :
5015-U

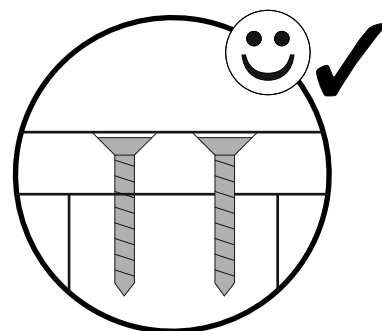


Art.-Nr. :


5015-TP-170-220

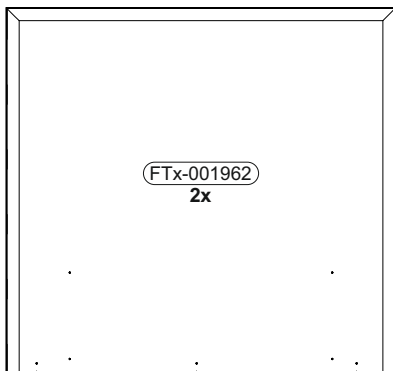

900x850

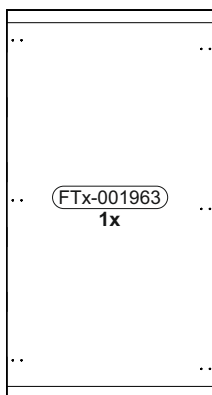


900x484

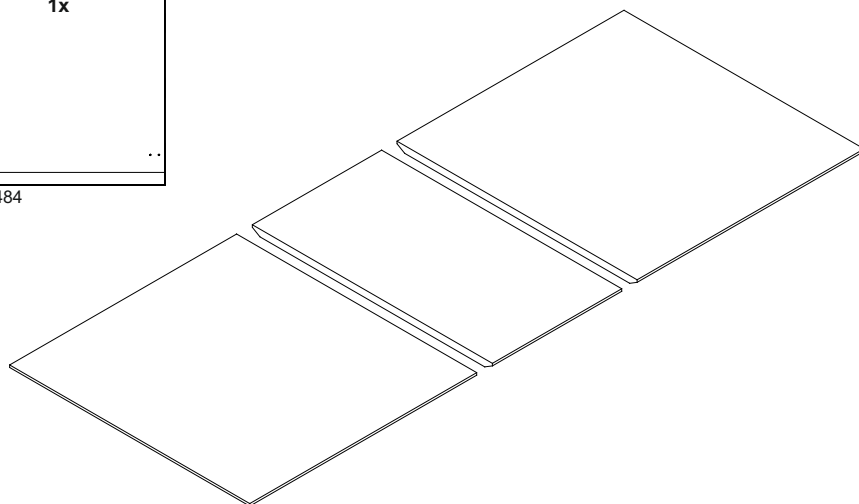


Art.-Nr. :


5015-TP-190-240


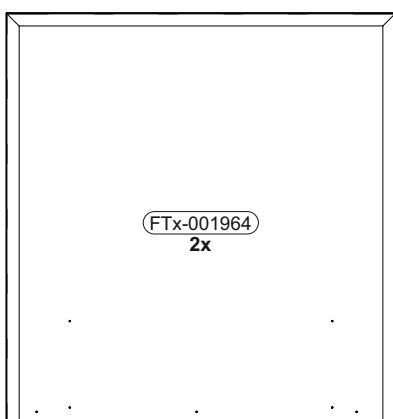




900x950

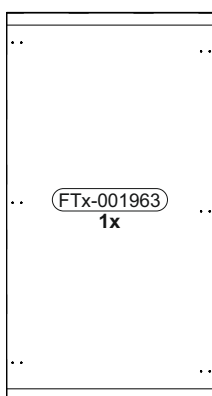

900x484

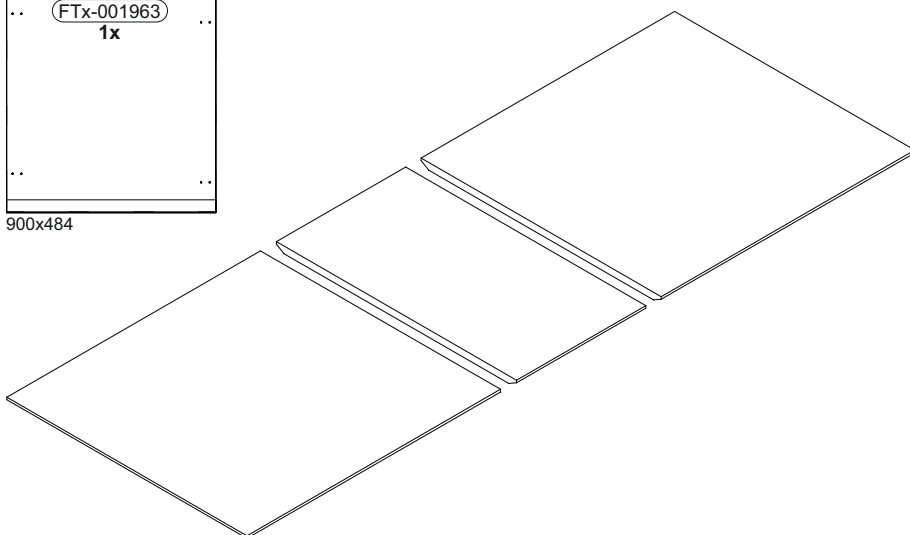

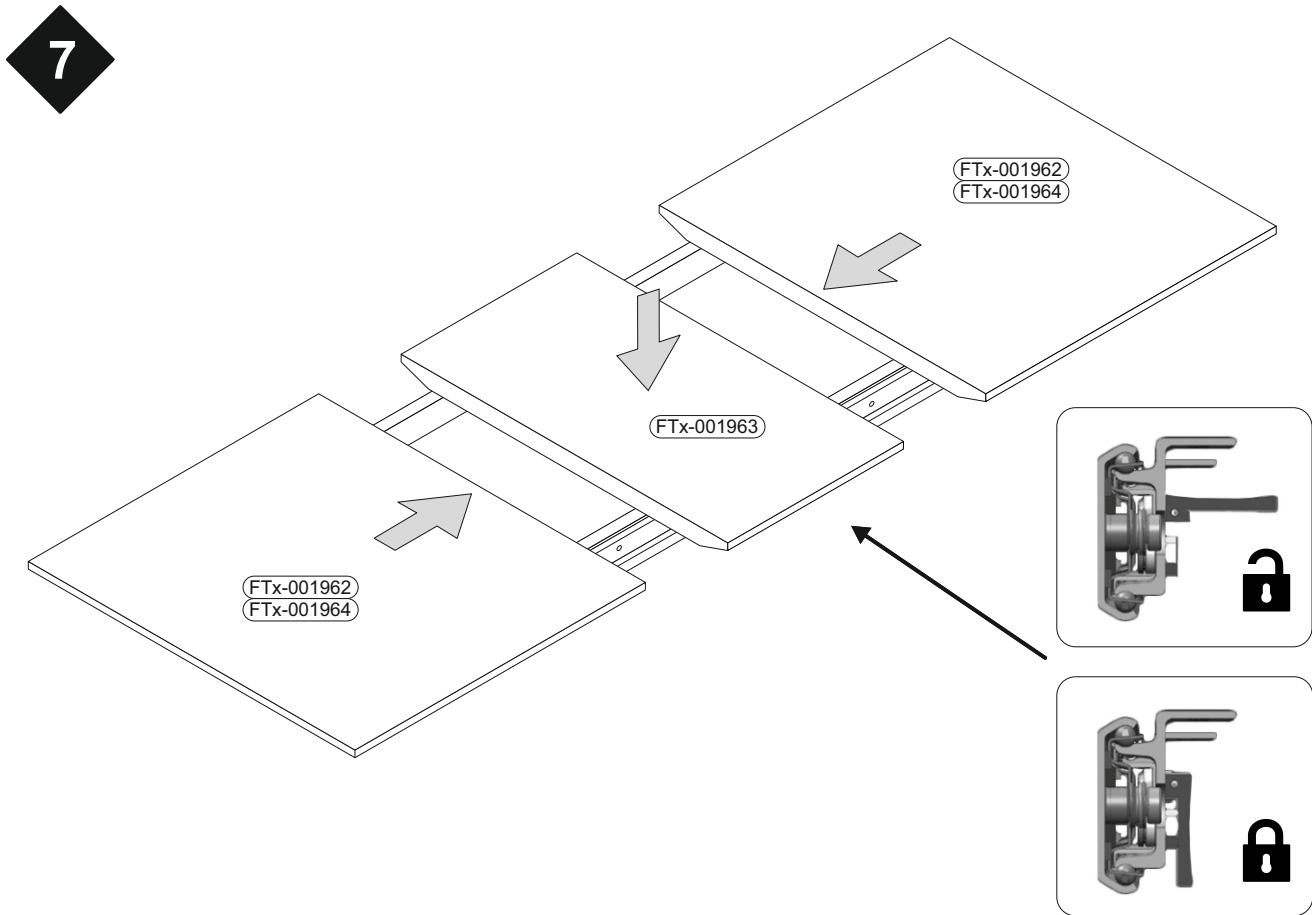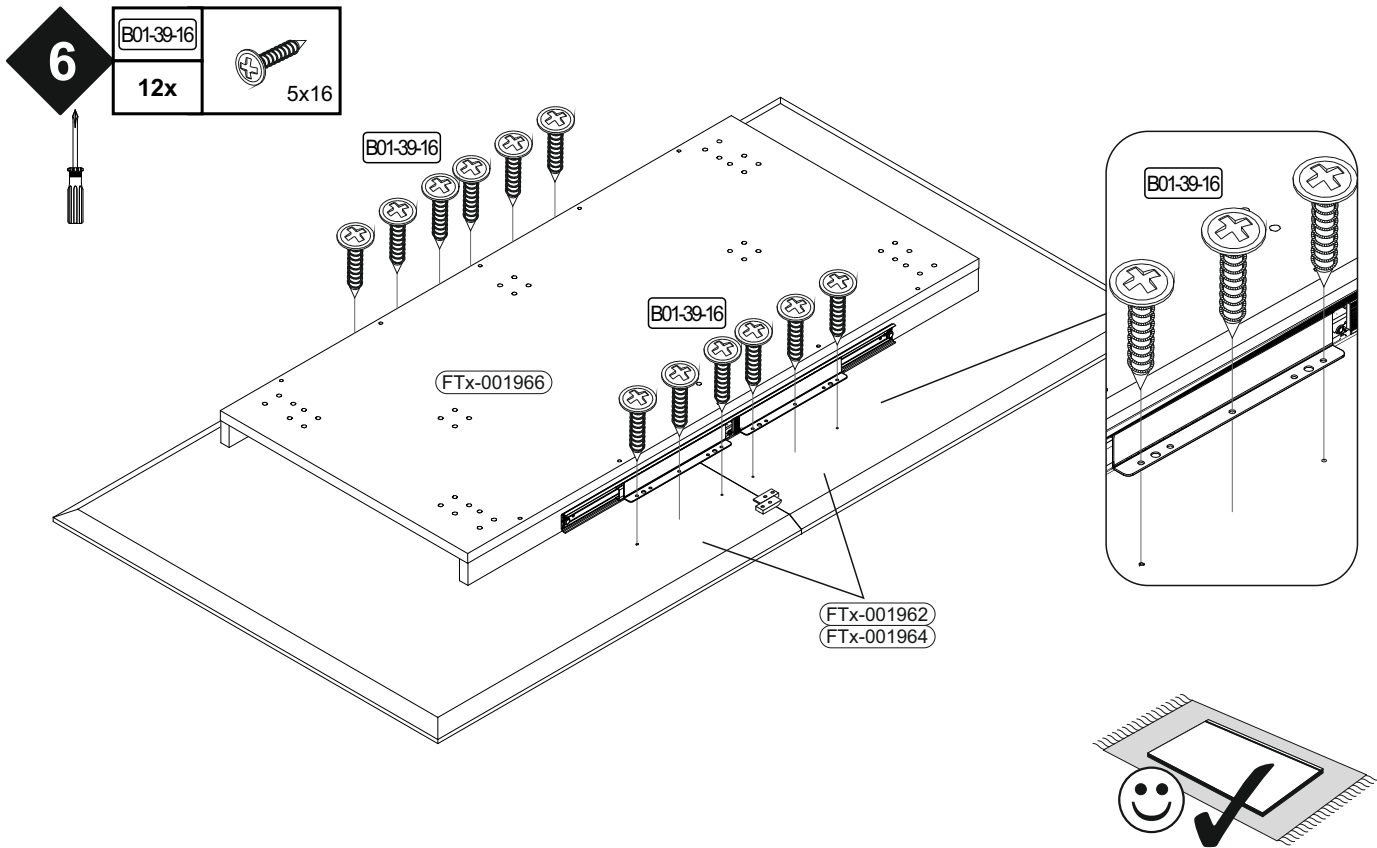

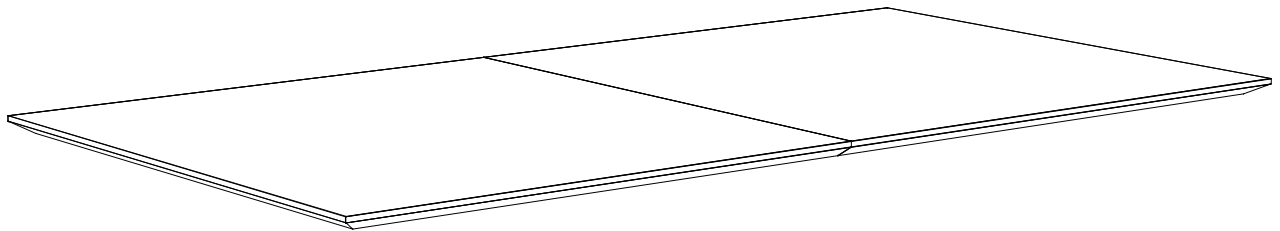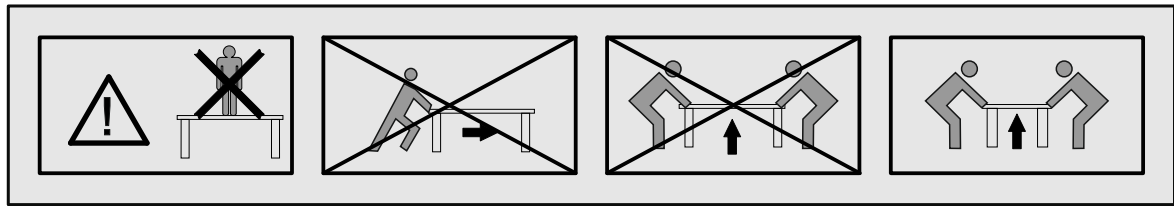


Artikel.-Nr.:


5015-TP-190-240

Montageanleitung.-Nr.:

MA1-00586


REPC-Nr.:

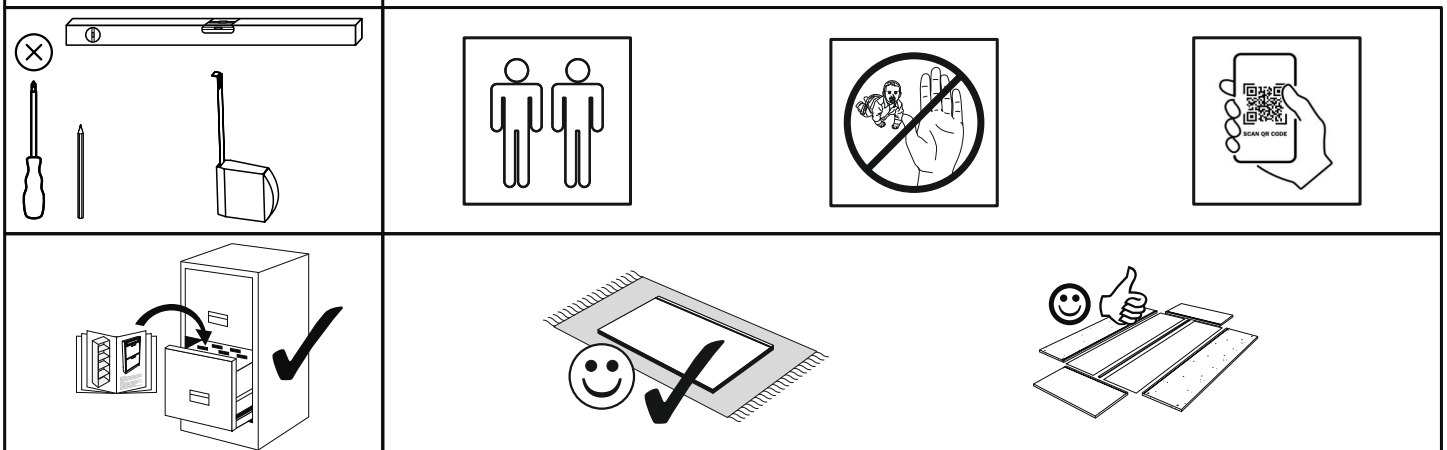


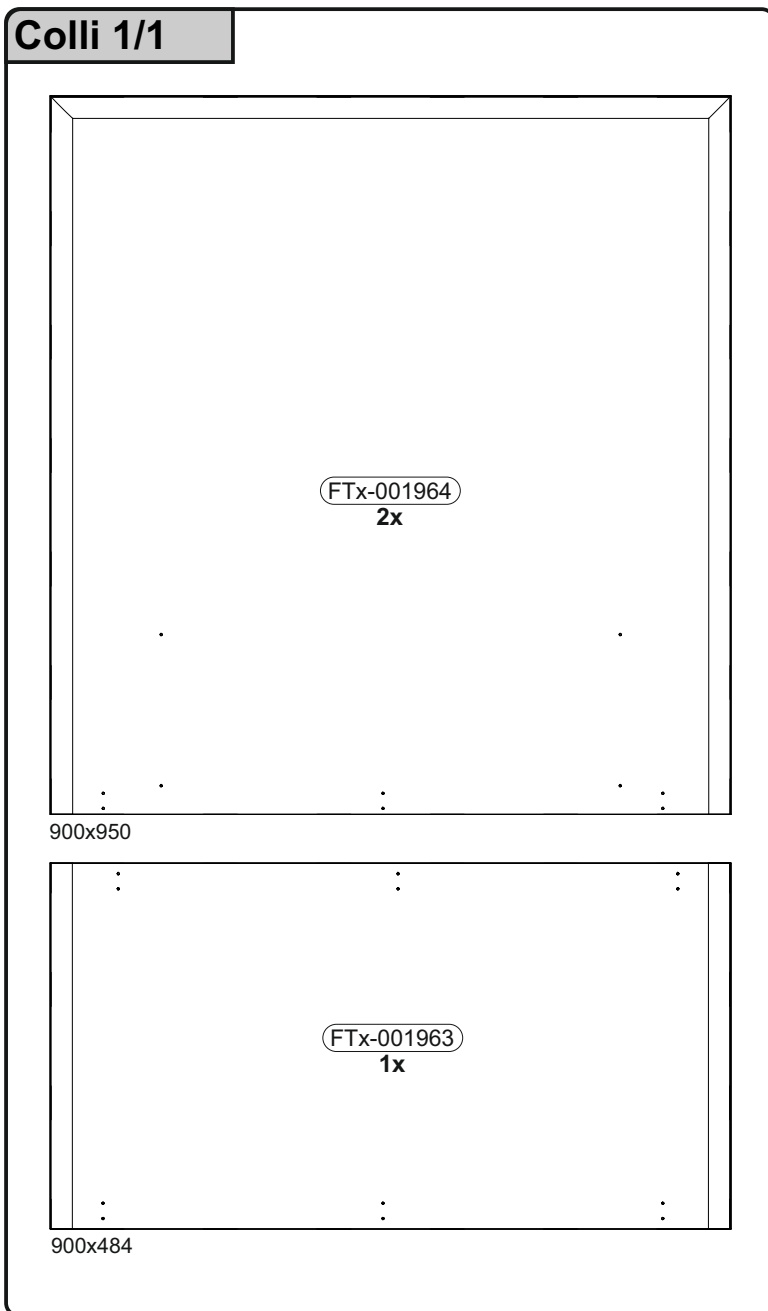

1





B05-193		B01-39-16	
6x		12x	5x16

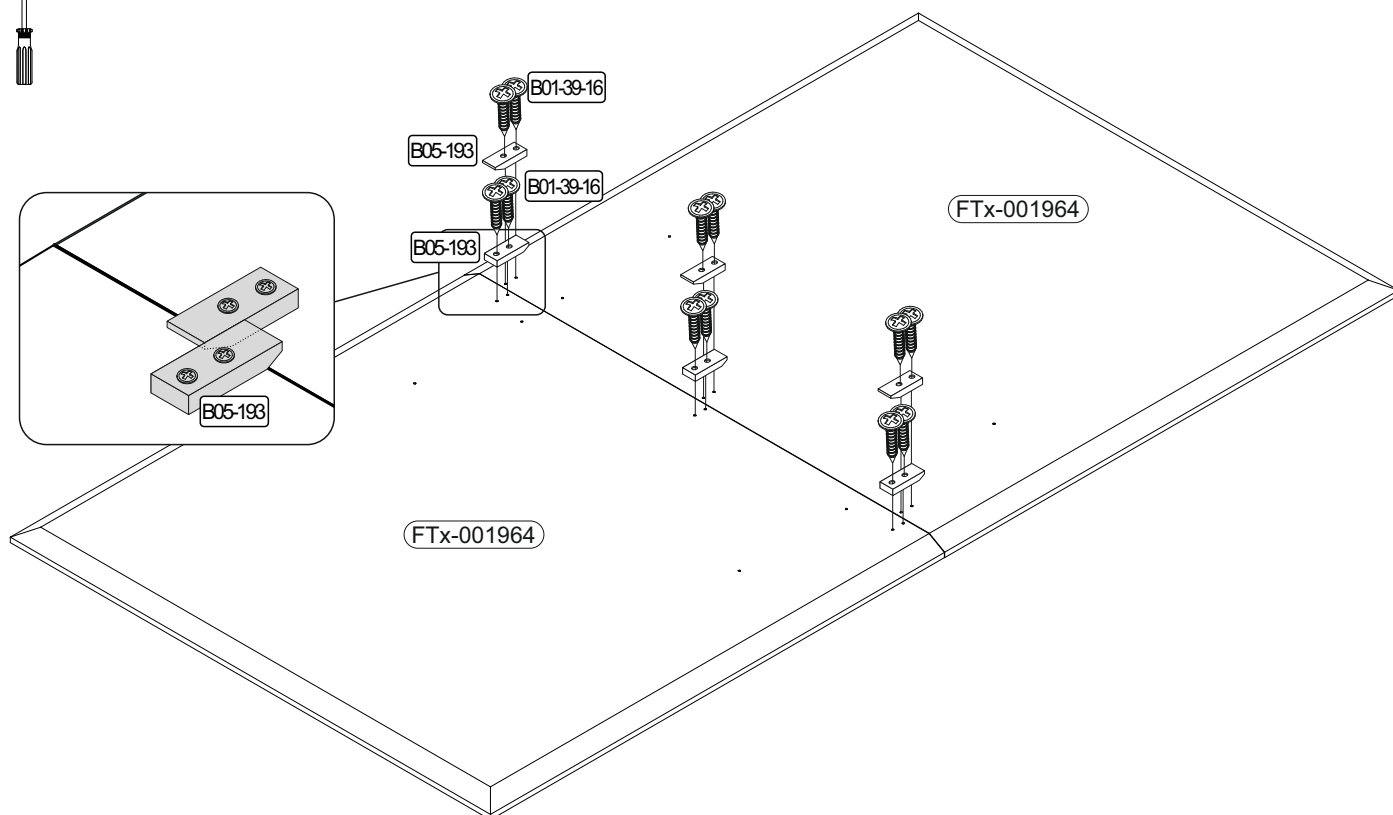


2



B05-193		B01-39-16	
6x		12x	5x16

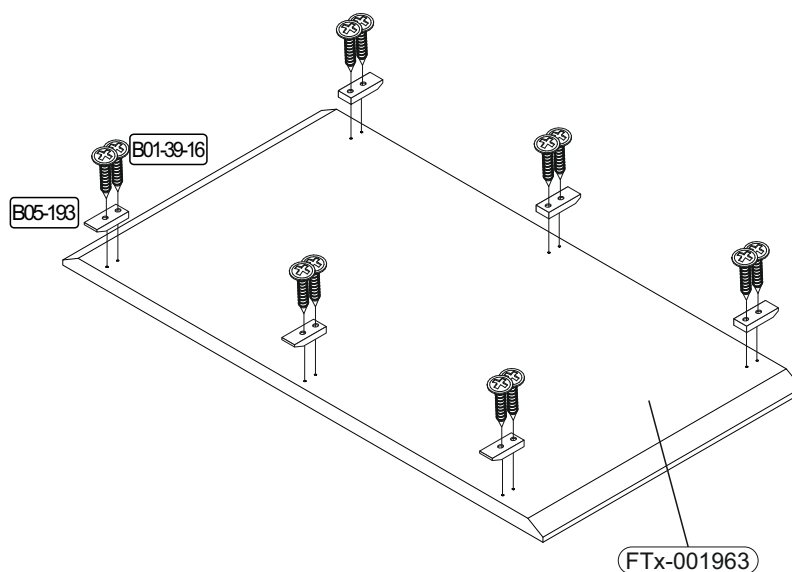

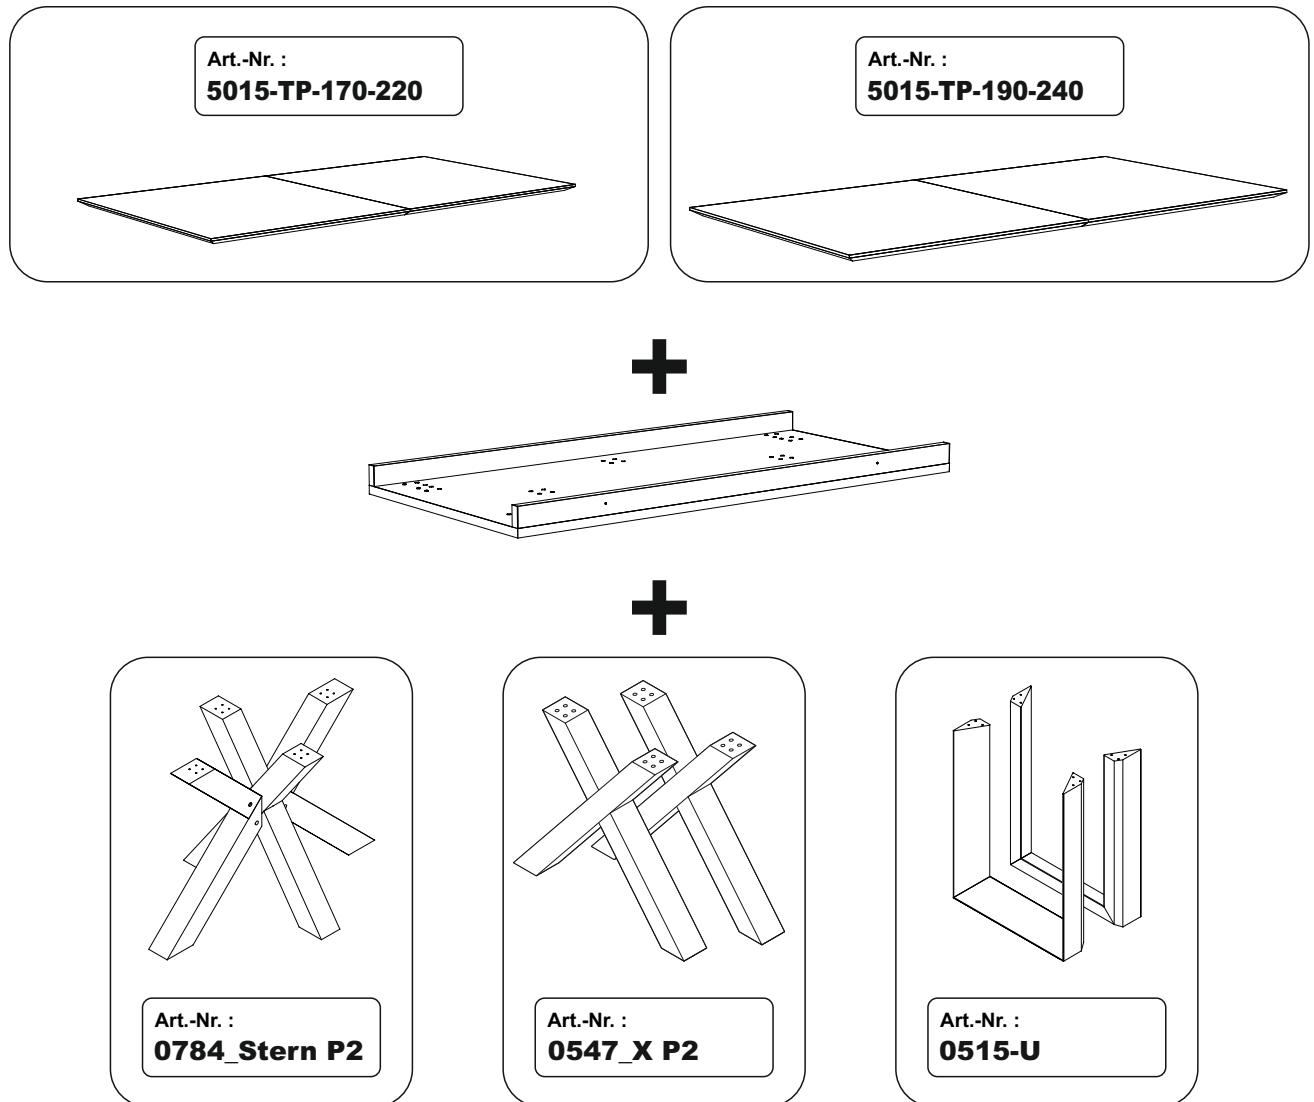


Artikel.-Nr.:




5015-VT

Montageanleitung.-Nr.:

MA1-00587

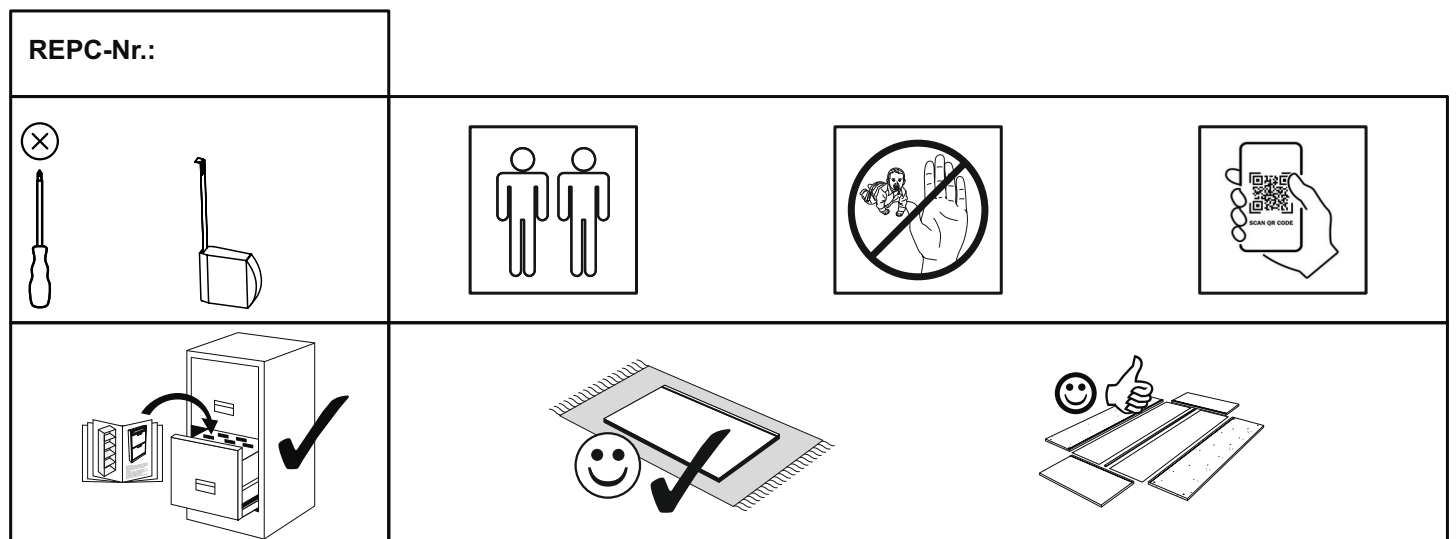


BT1-00687 Colli 1/1


B01-110		B01-120		B01-39-16		B01-90	
8x		10x		24x		2x	
B02-170		B02-174		B05-260			
2x		4x		1x			

BT1-00001 Colli 1/1


B05-265	
1x	





Colli 1/1

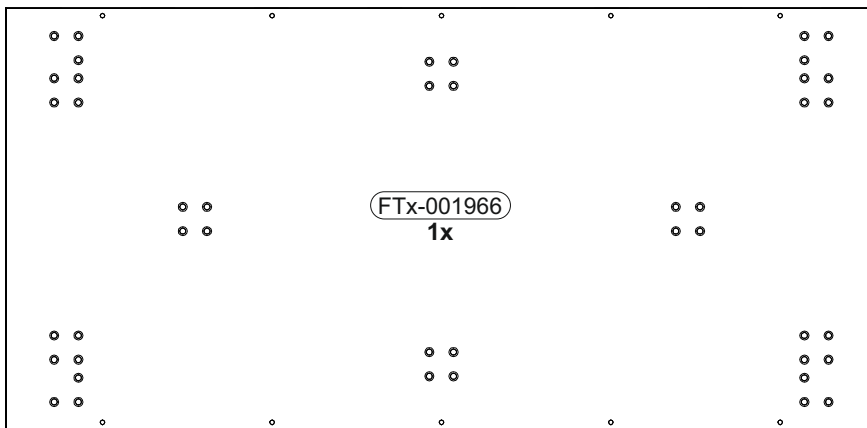


1152x558




1152x44

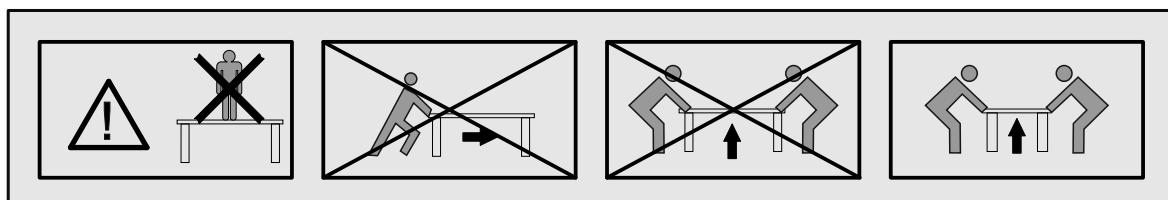
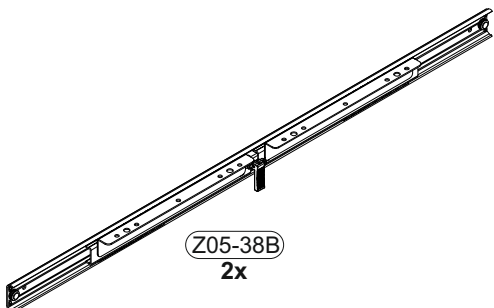





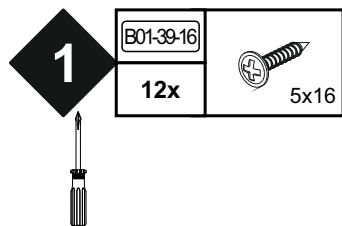




1

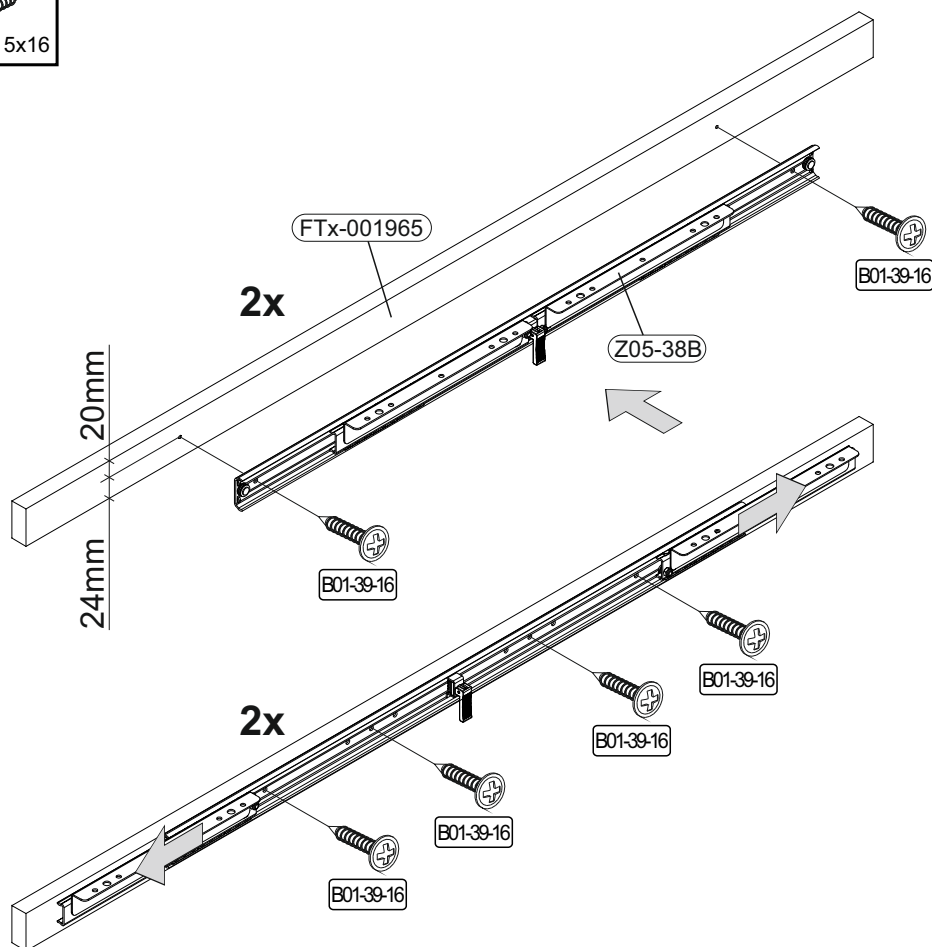




2

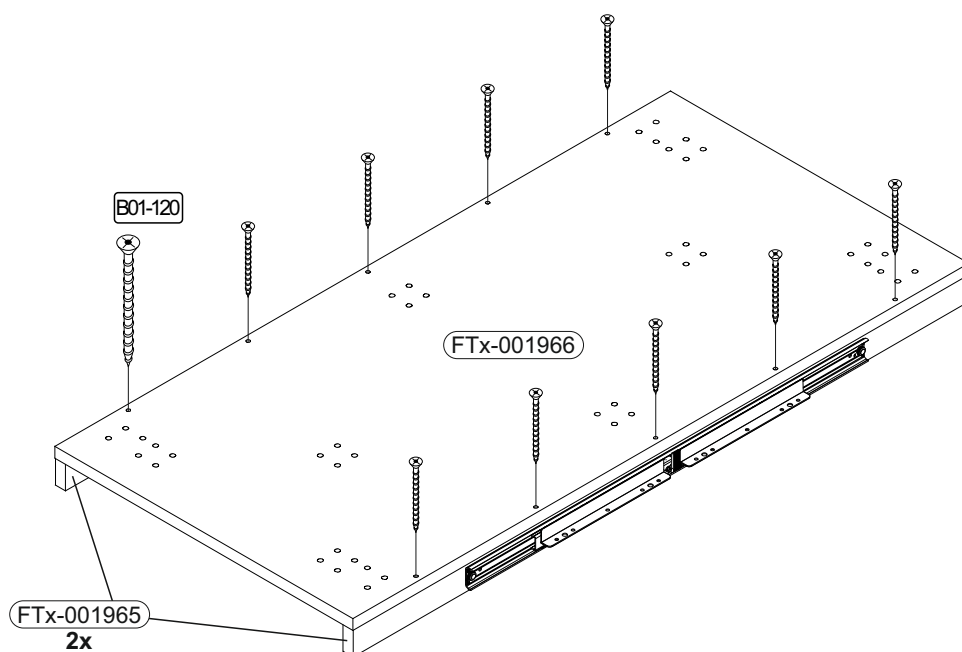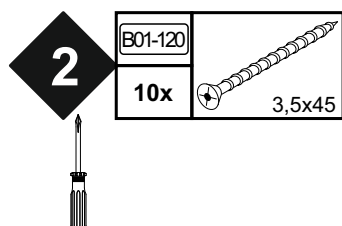

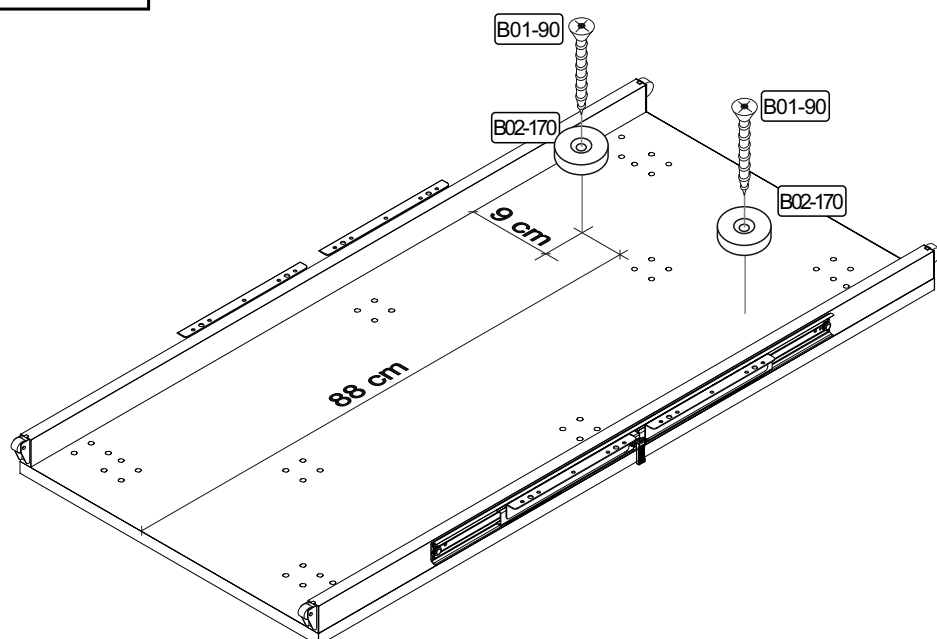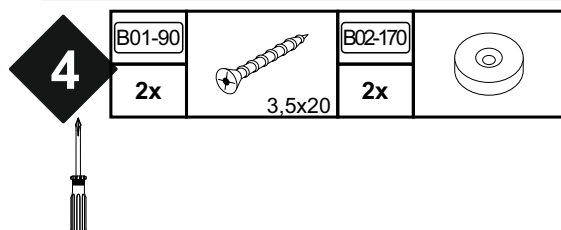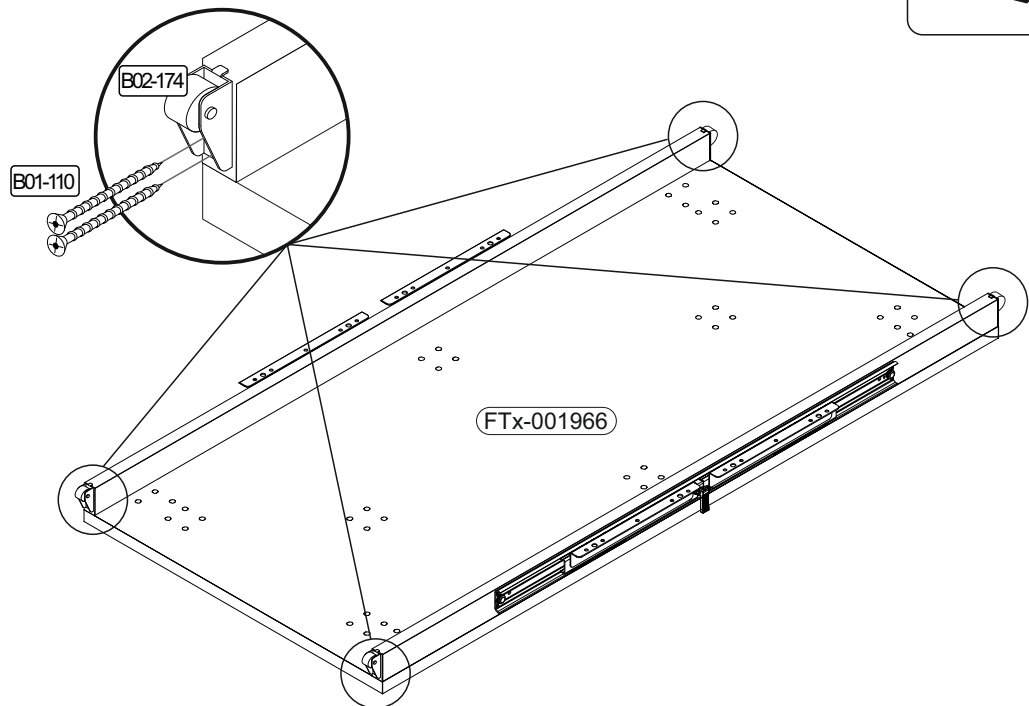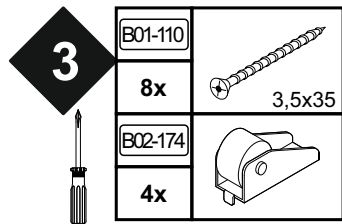

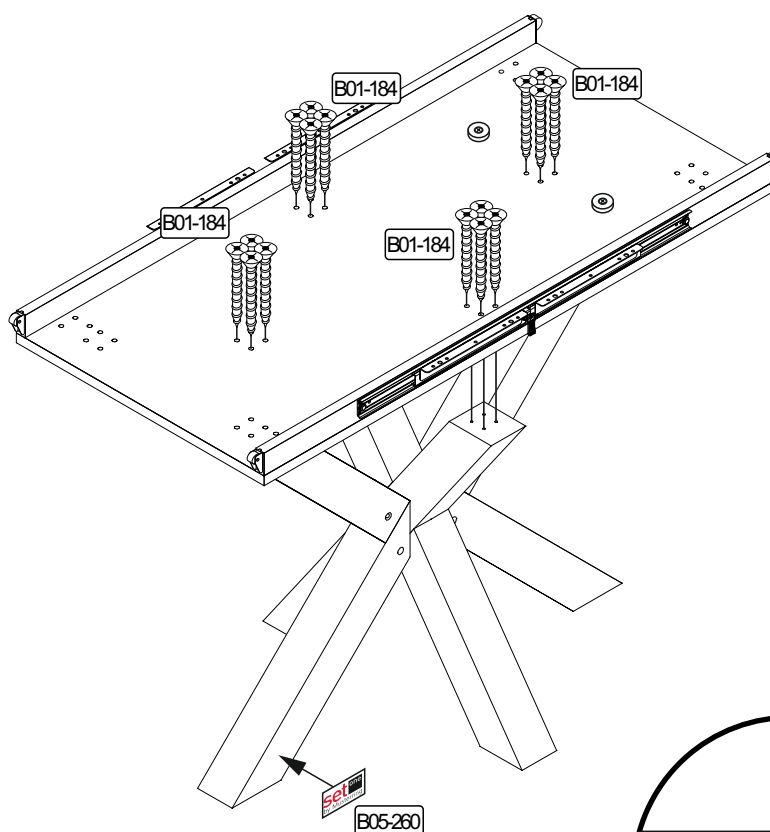
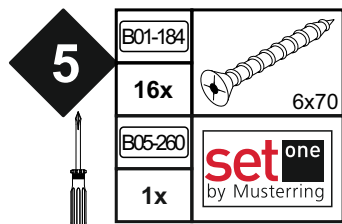


Art.-Nr. :
0784_Stern P2

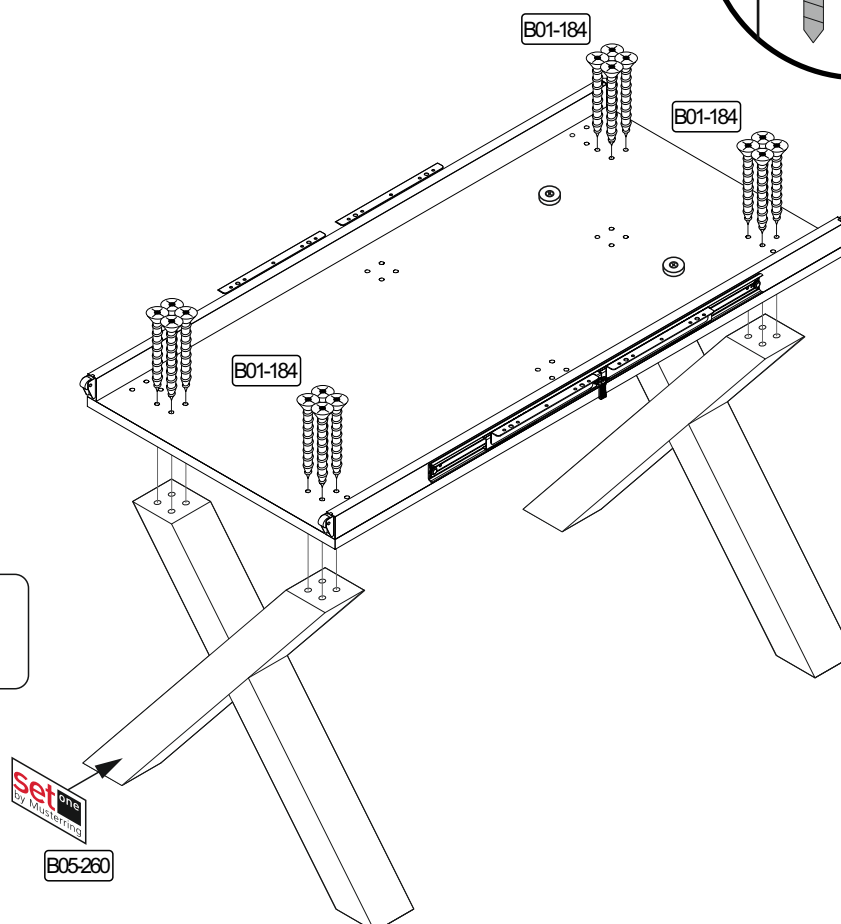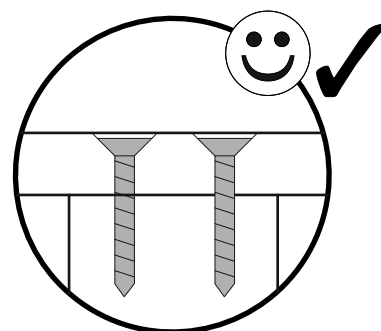

Art.-Nr. :
0547_X P2


NEW ATLANTA

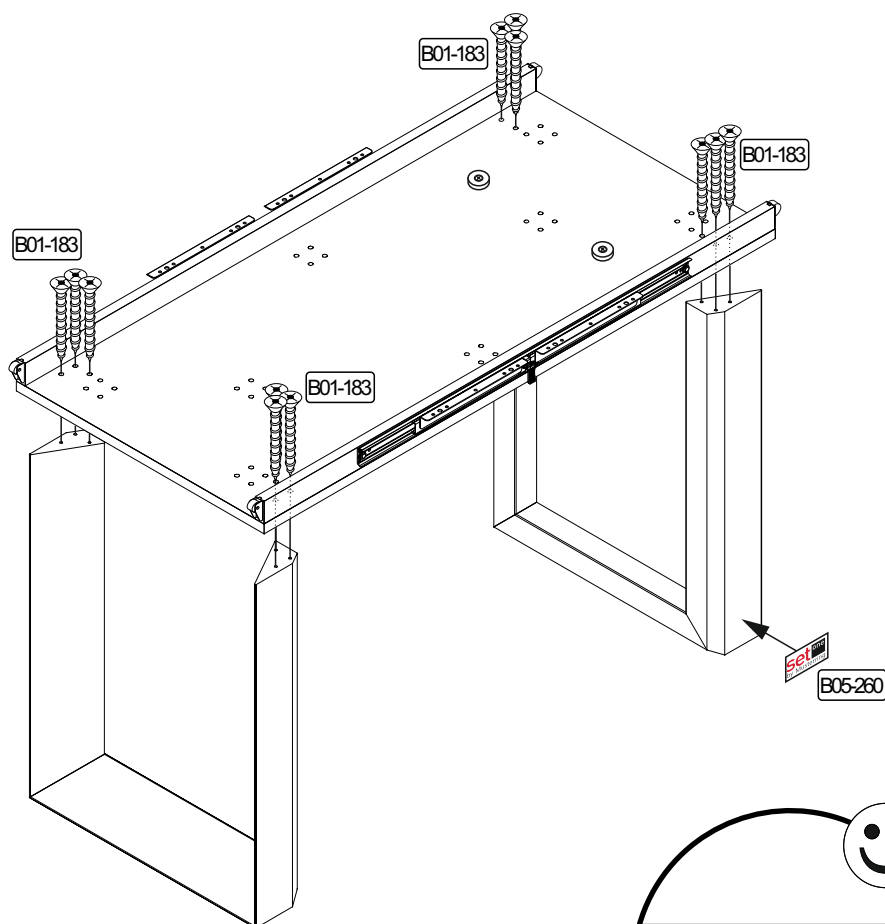


Art.-Nr. :
5015-U

Art.-Nr. :


5015-TP-170-220

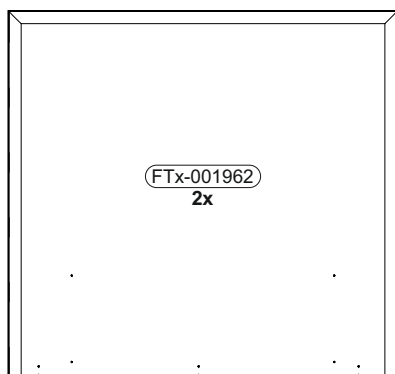

900x850

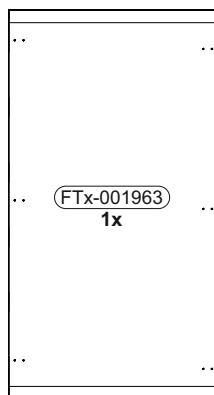


900x484

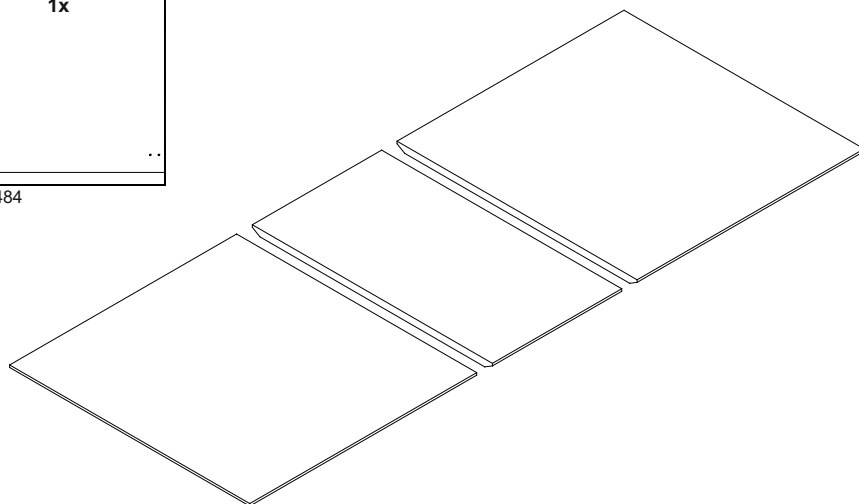


Art.-Nr. :

5015-TP-190-240

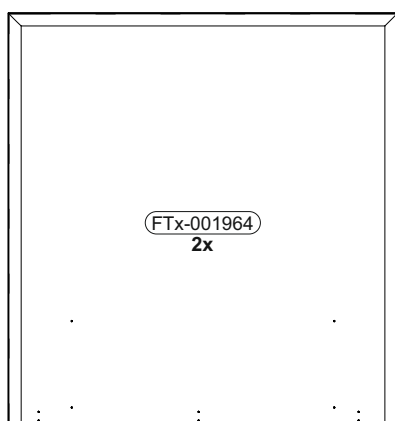

900x950

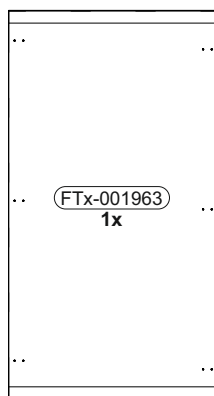

900x484

