
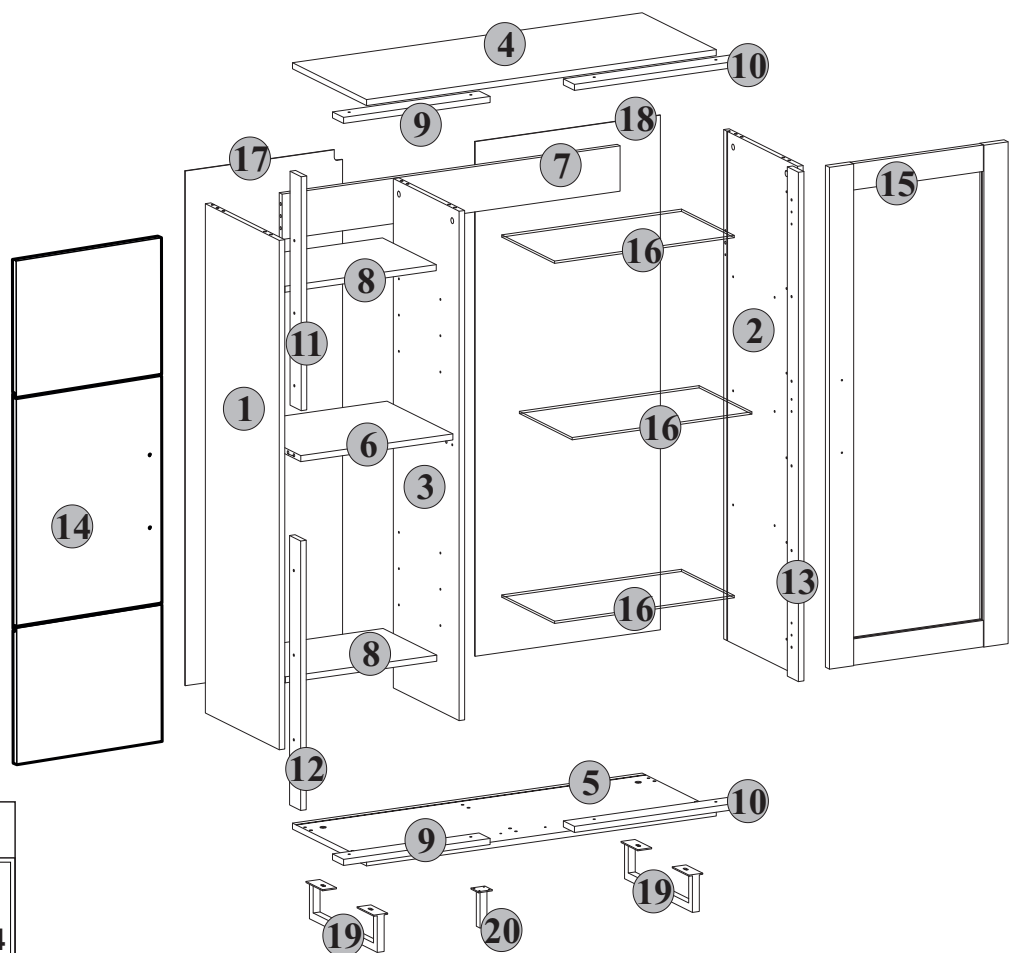
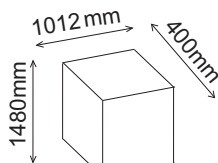





5803

versionsnummer: 18.05.2025


Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.

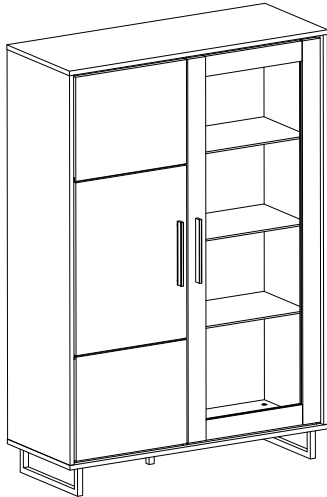


B5

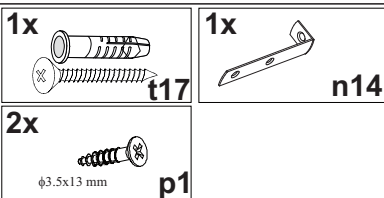


B1

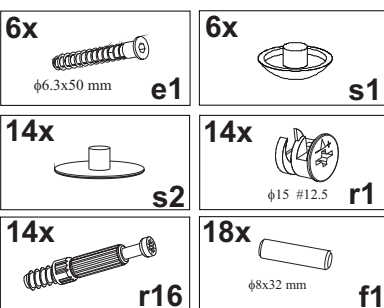


B2

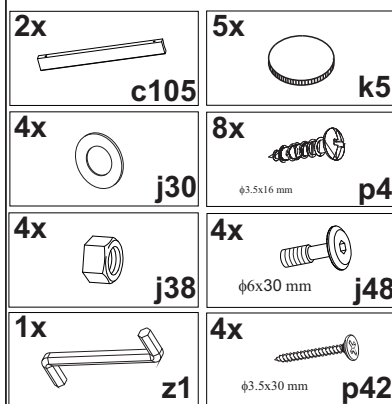










B3

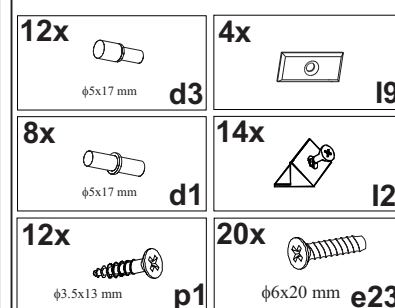









B4

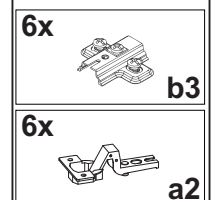

I

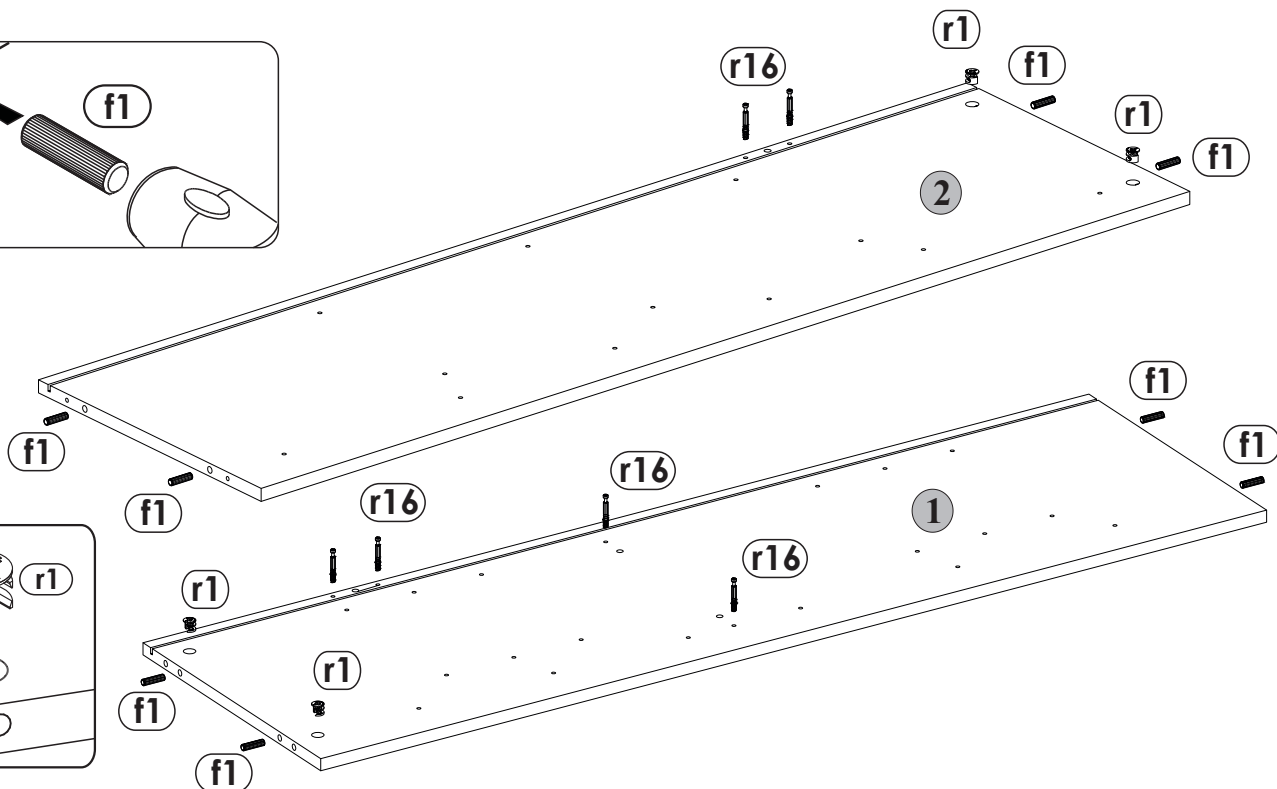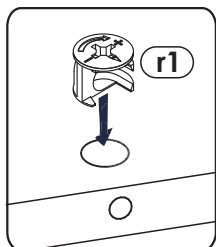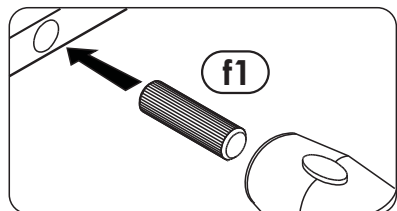

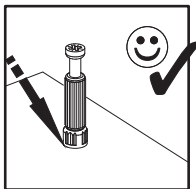
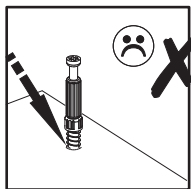
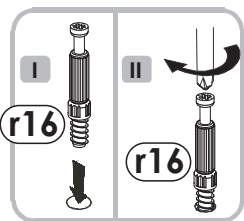


2

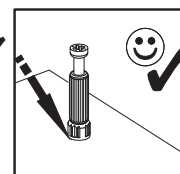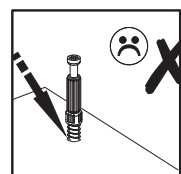
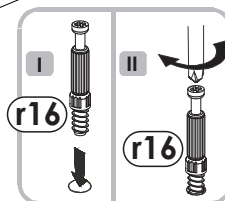
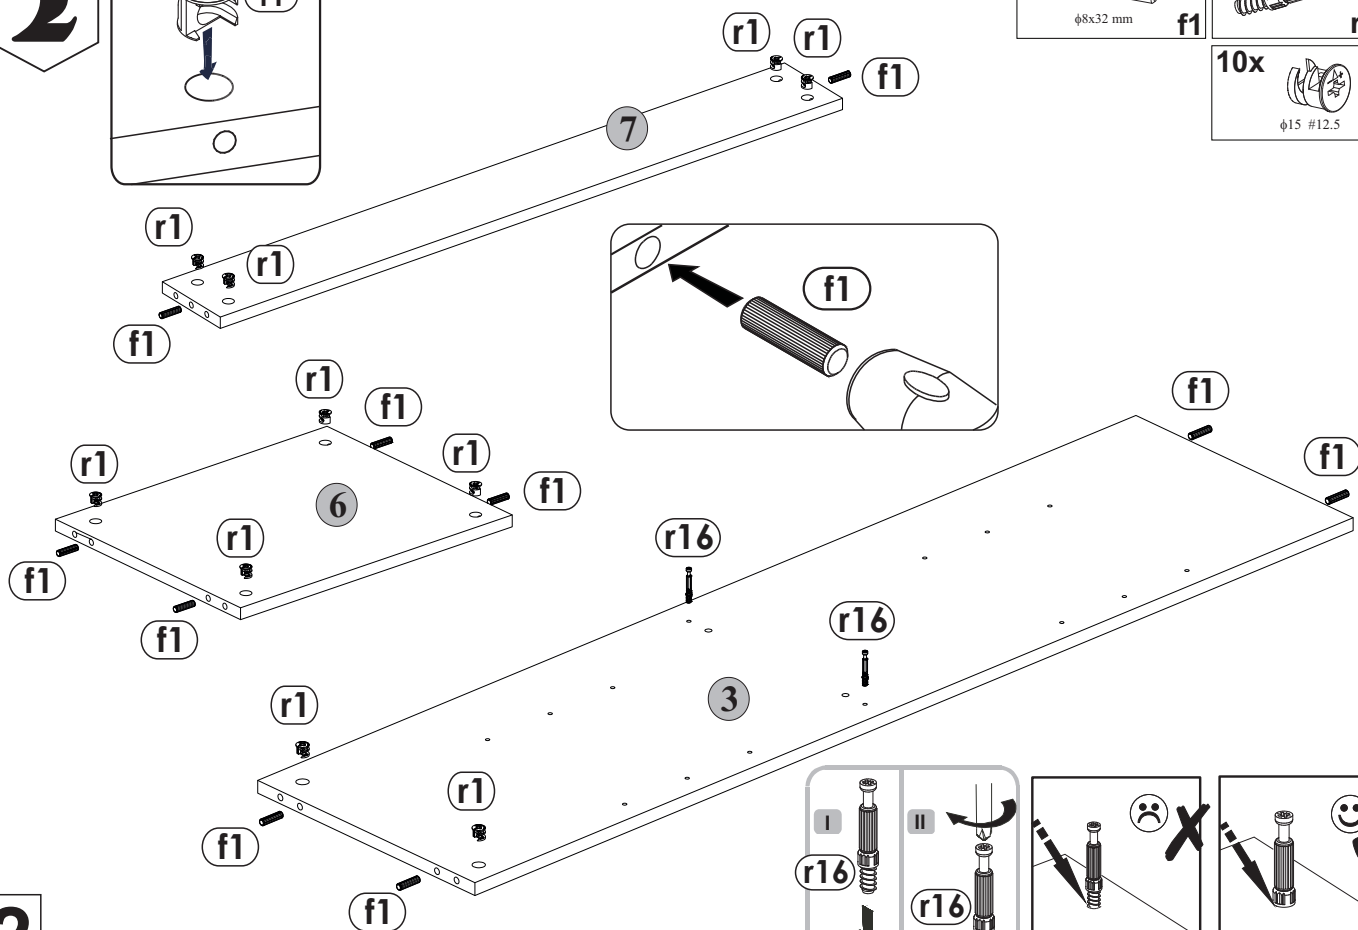
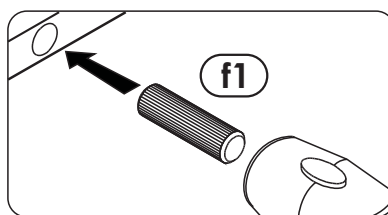


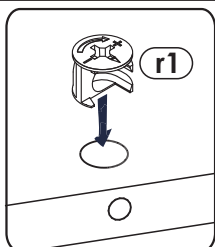


2

3

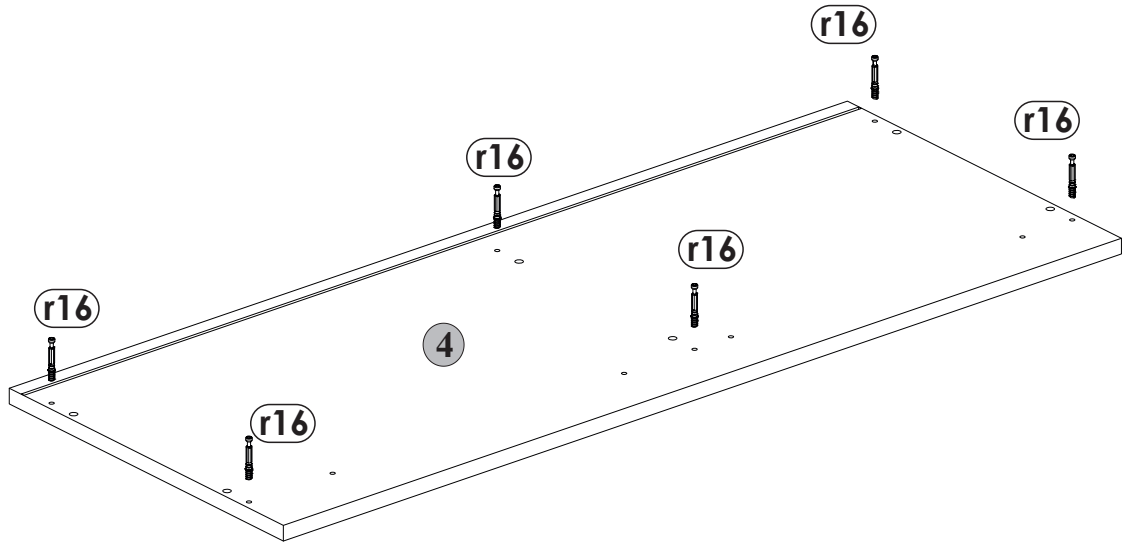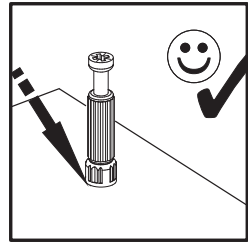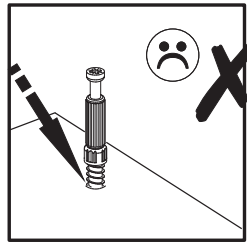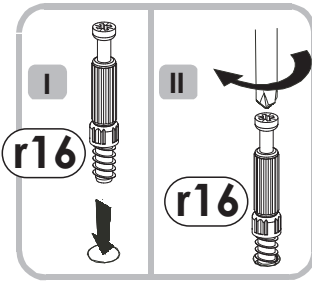


4

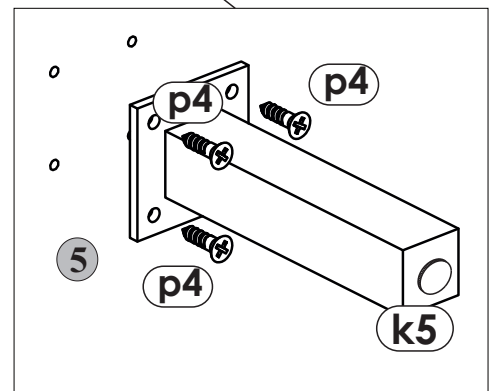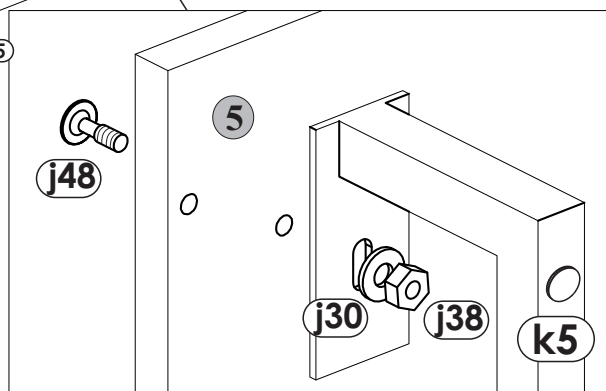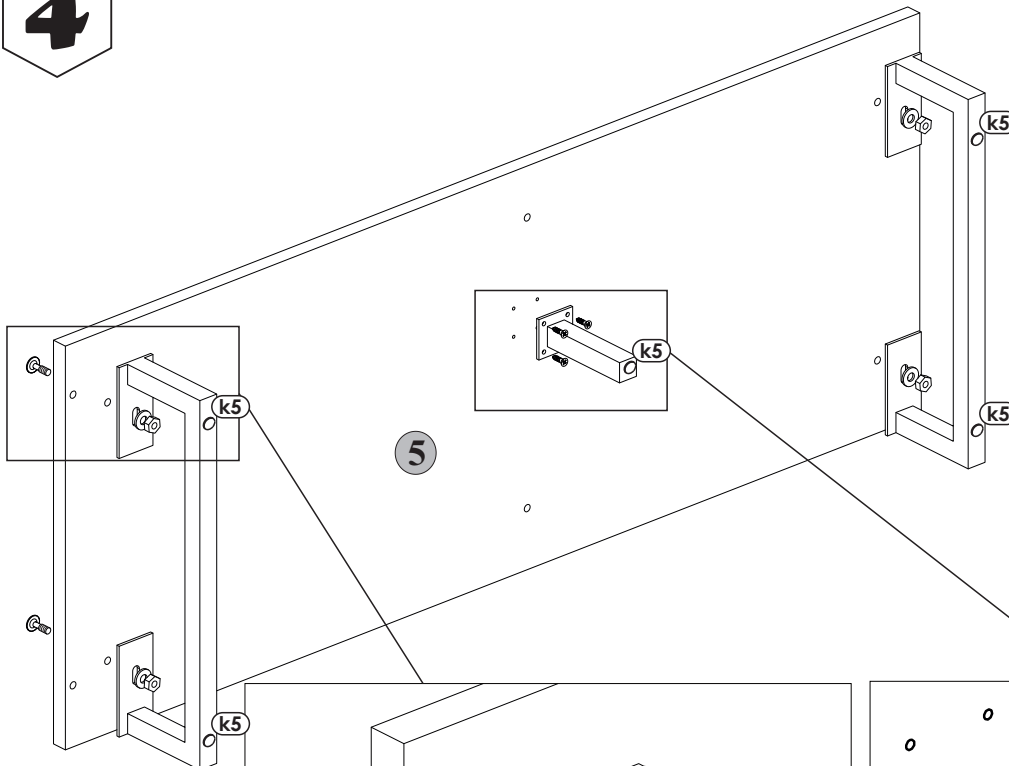



3

5


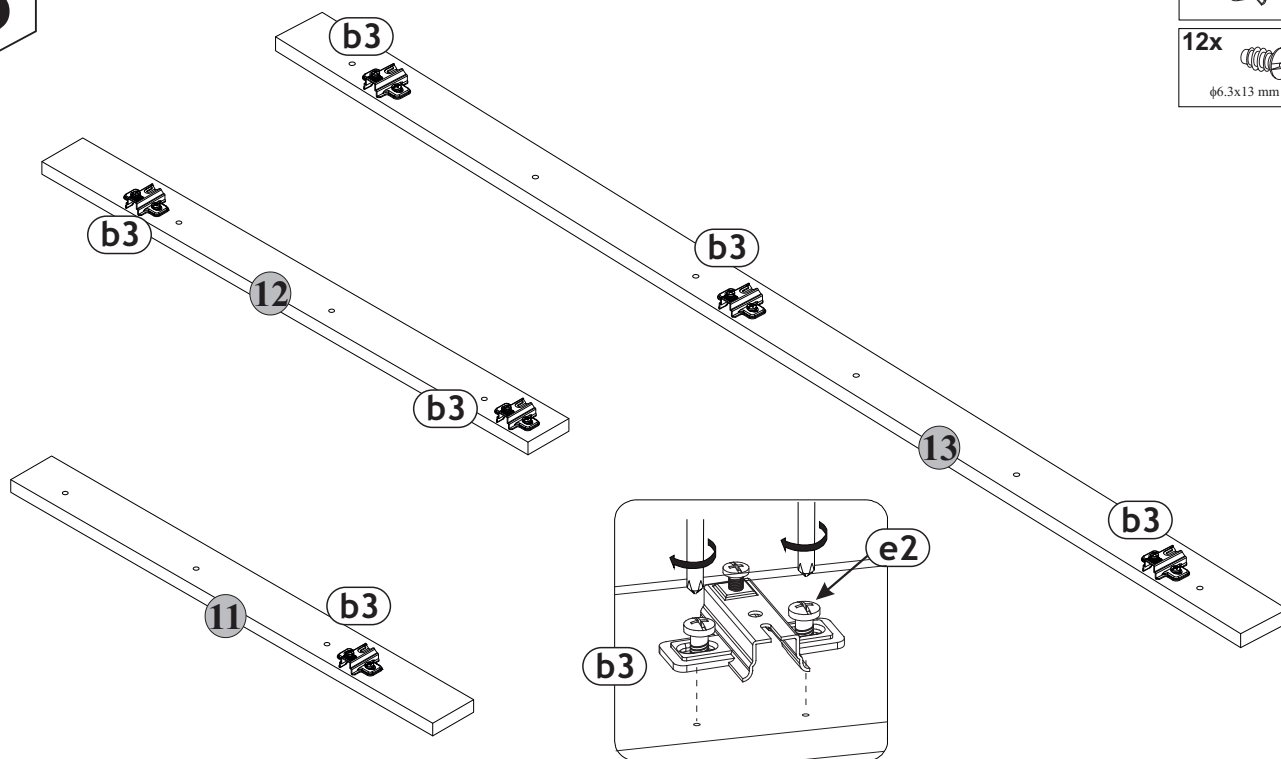


- 6x  b3
- 12x  e2
φ6.3x13 mm

6

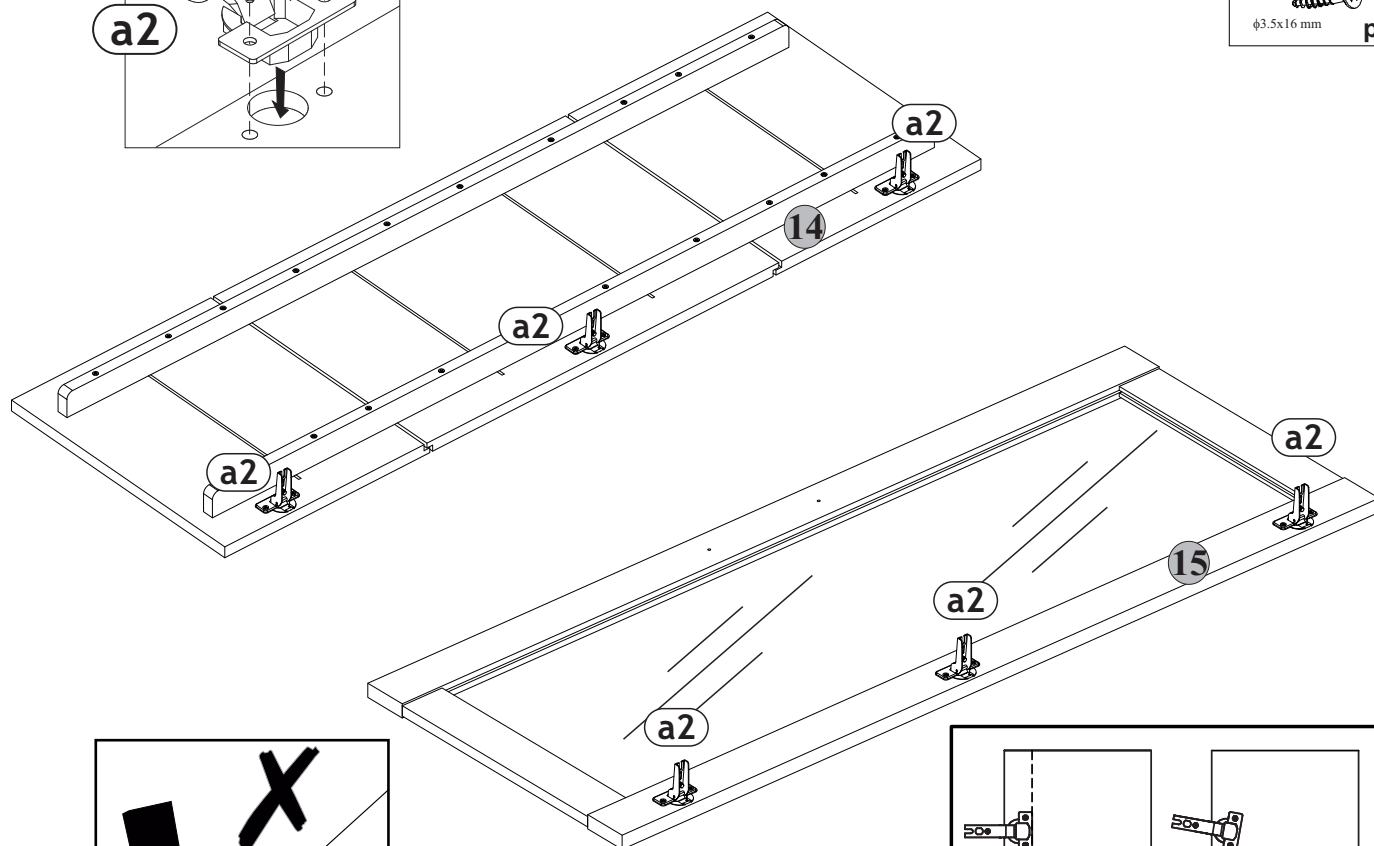
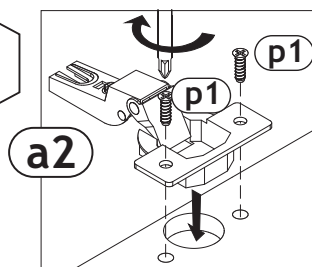


- 6x  a2
- 12x  p1
φ3.5x16 mm

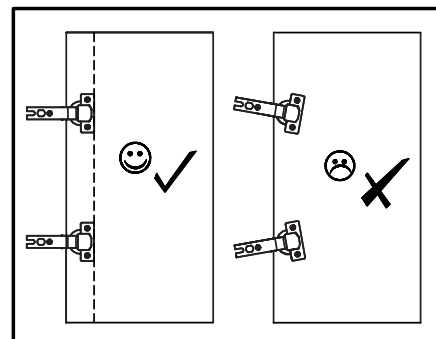
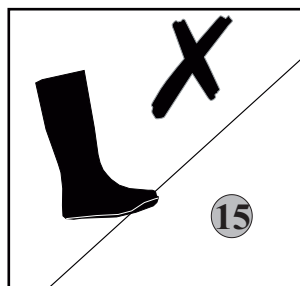


4

7

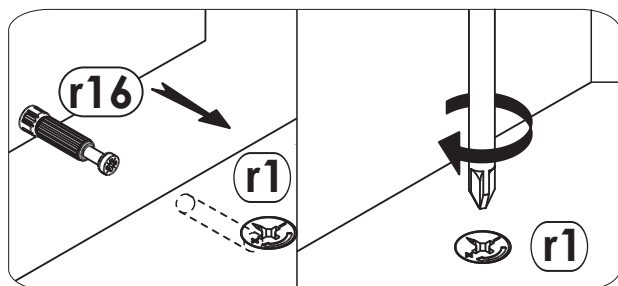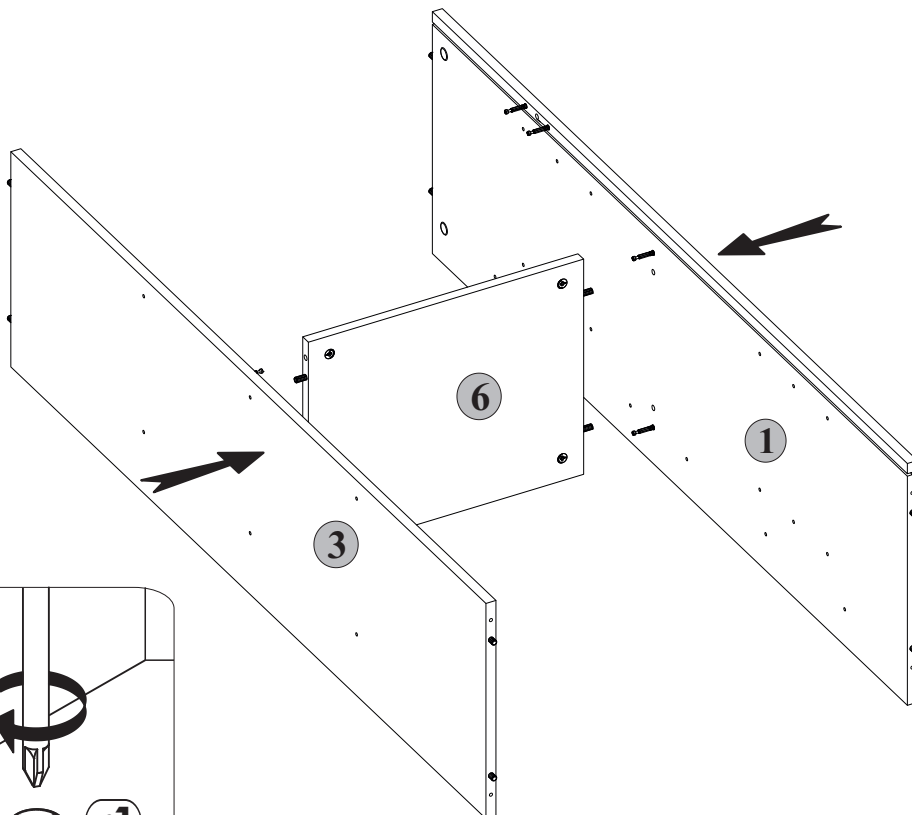


8

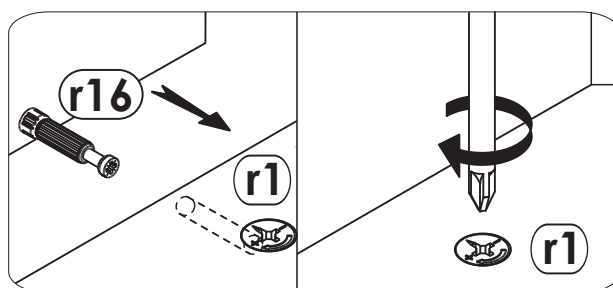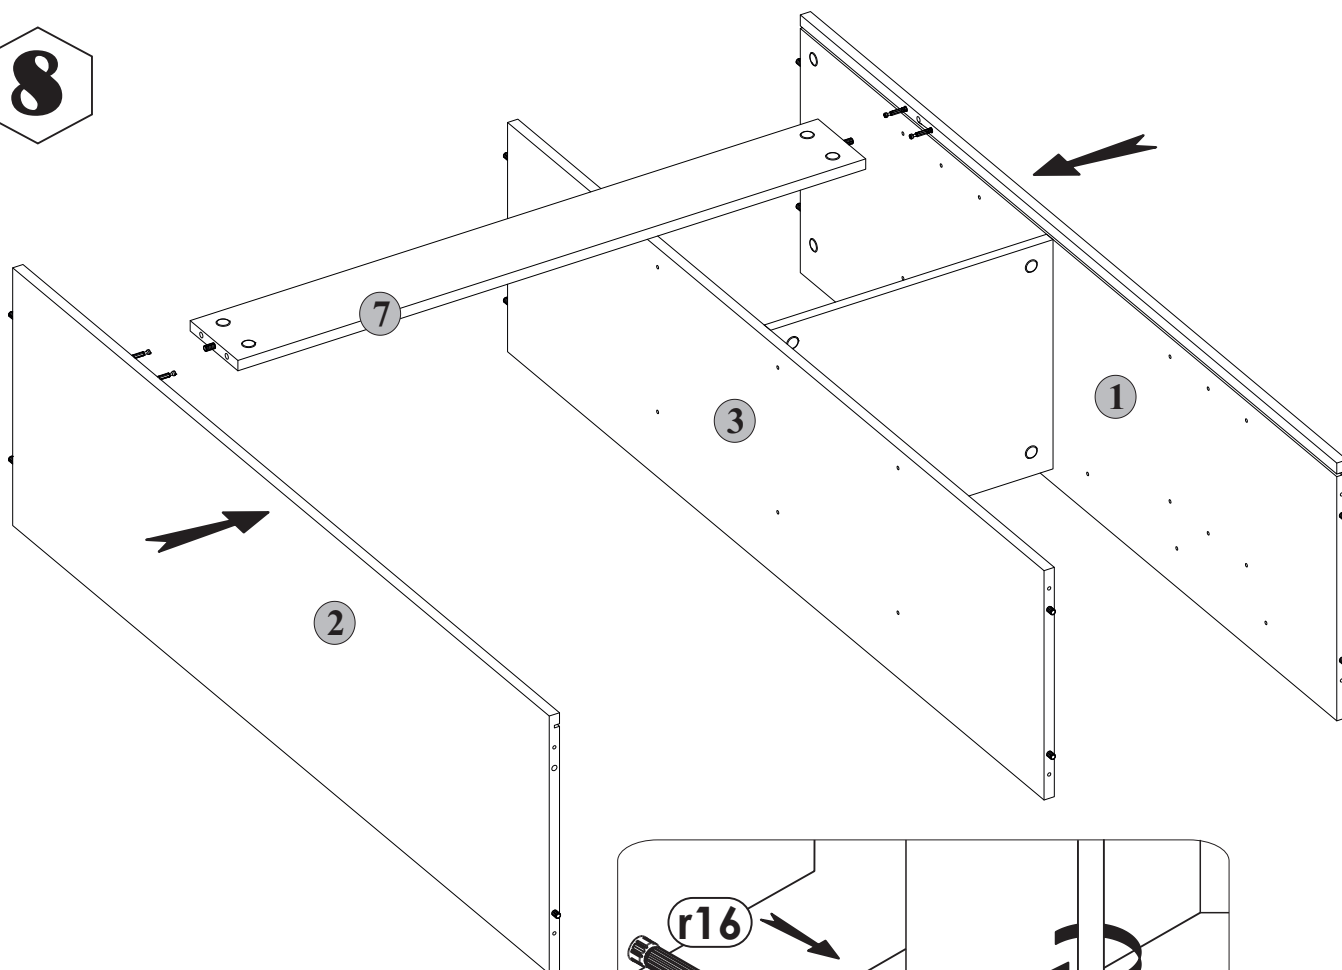


5

9

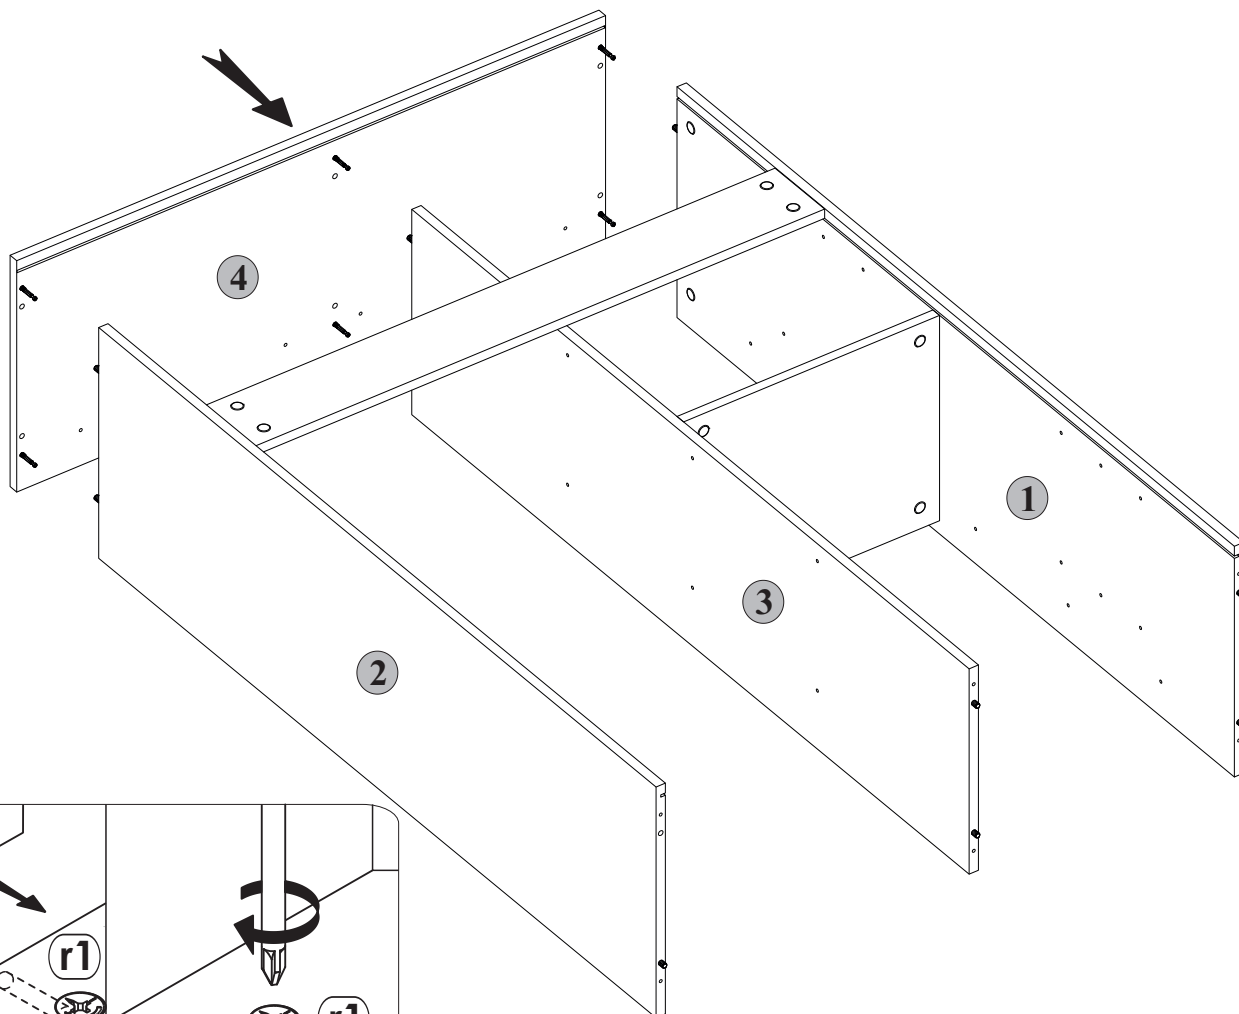

10

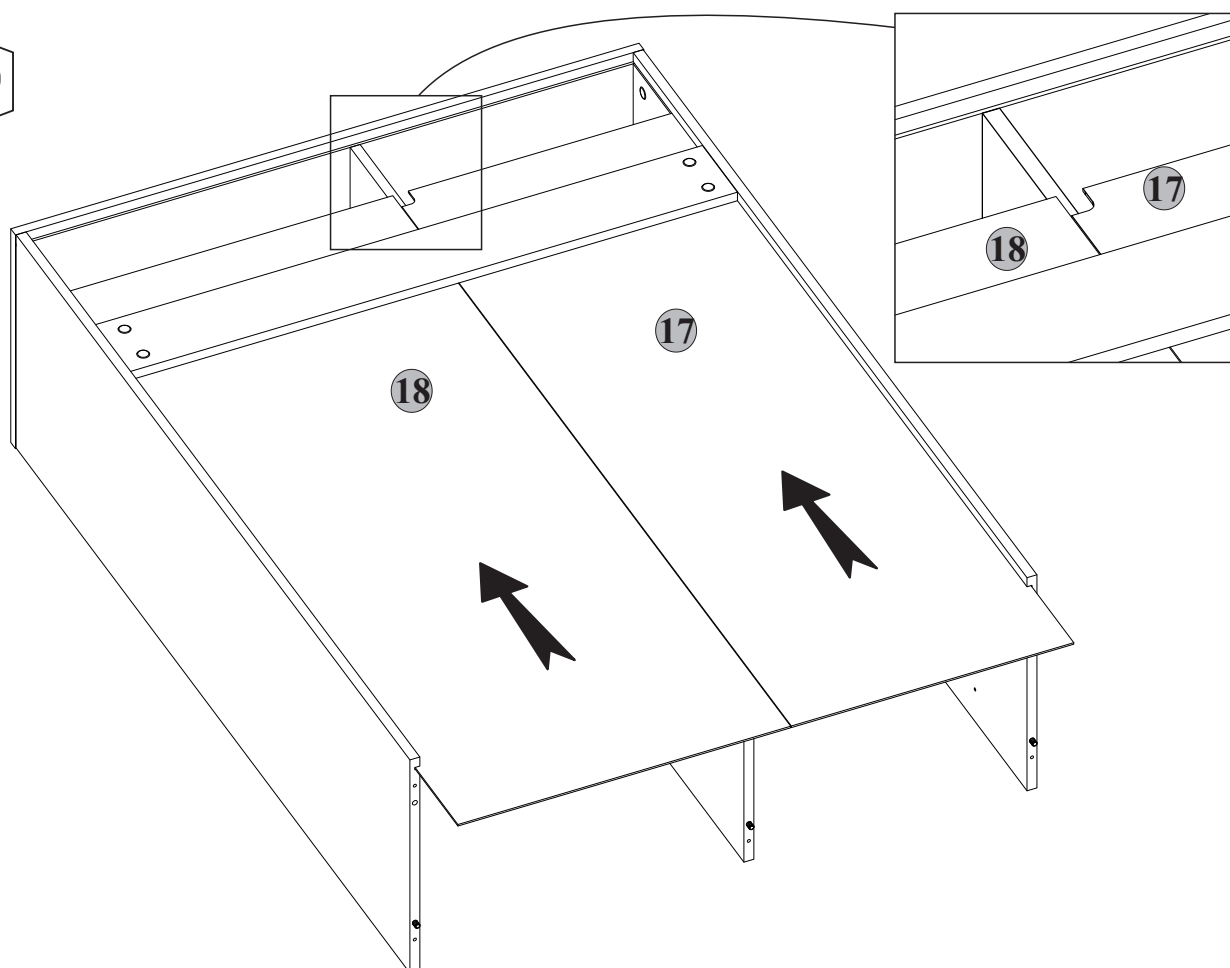




6

11

6x  e1


6x  s1

1x  z1


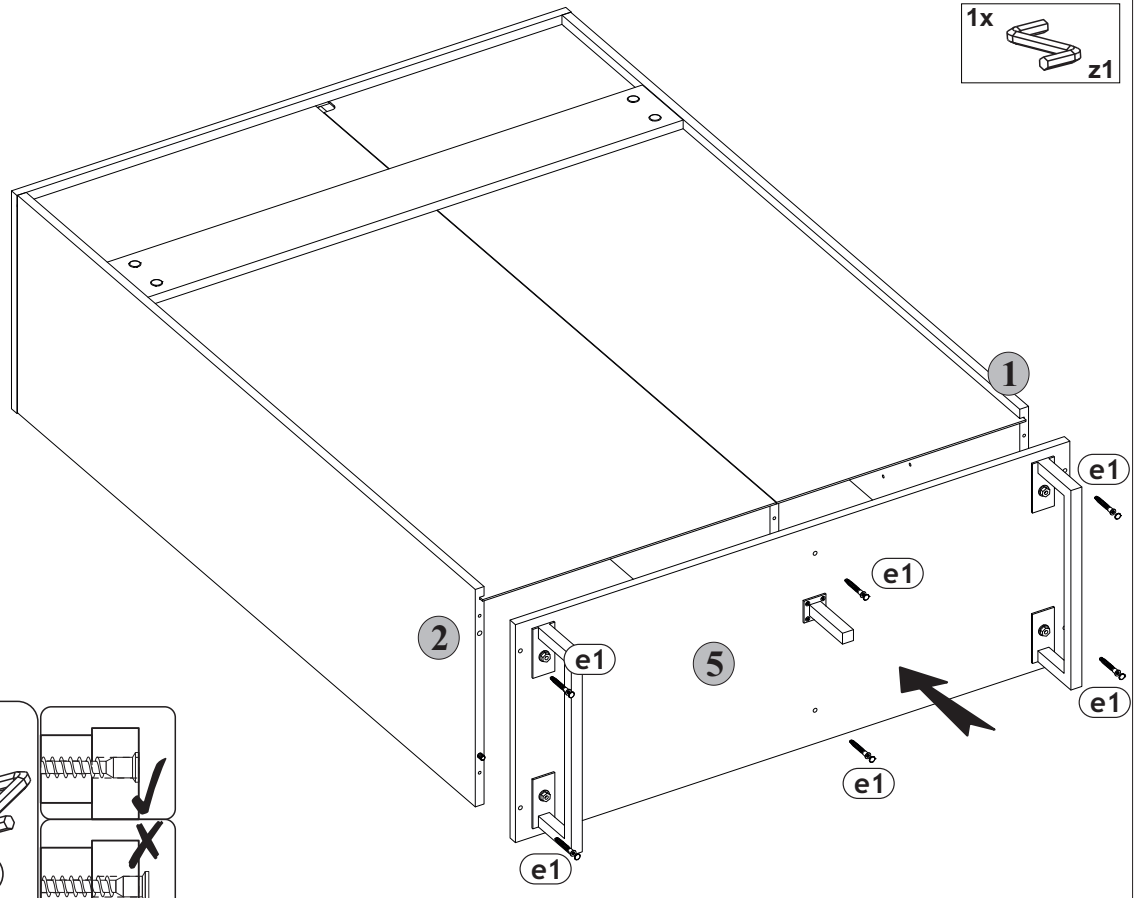
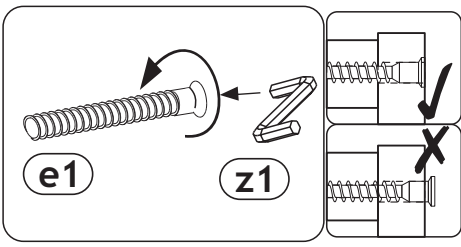
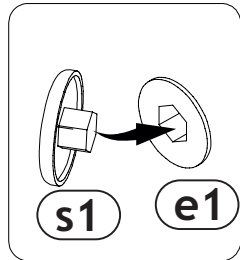


12

14x  l2

4x  i9




4x  p4
φ3.5x16 mm

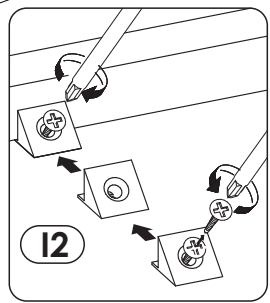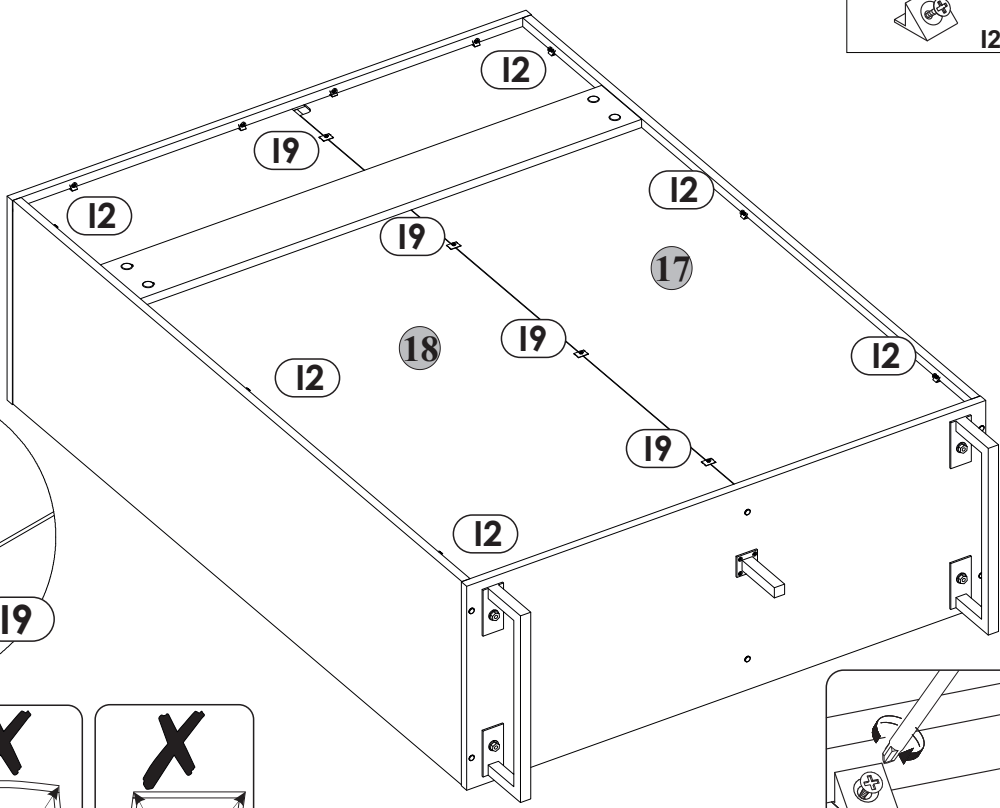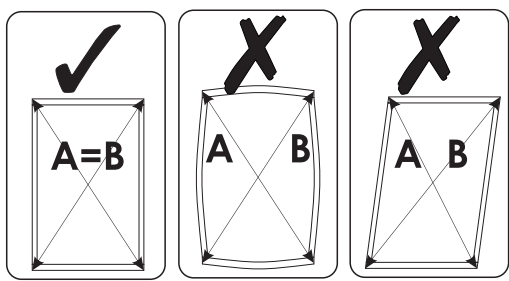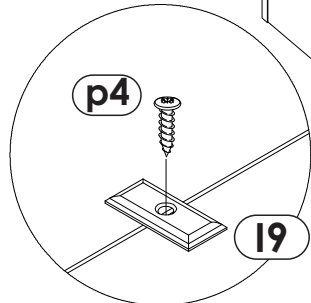

7

13

20x
e23
φ6x20 mm

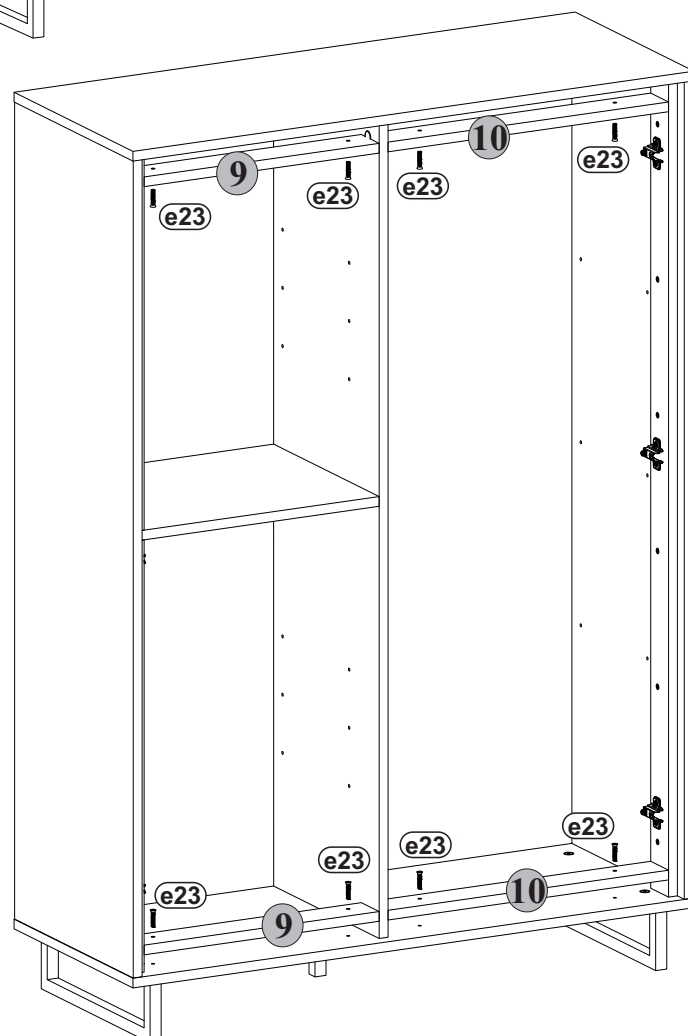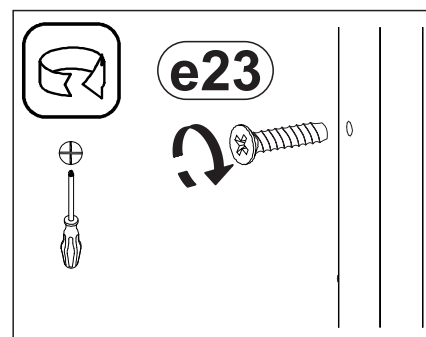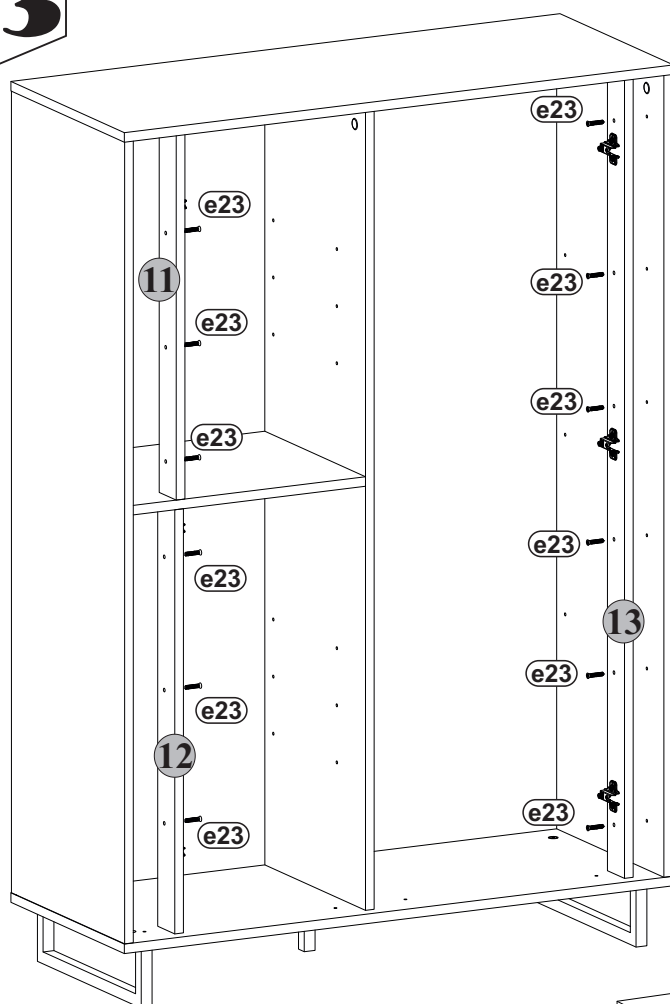

8

I4









4x
p42

2x
c105

1x
t17

1x
n14

2x
p1
φ3.5x16 mm

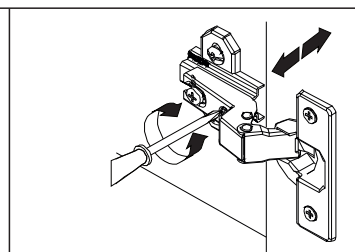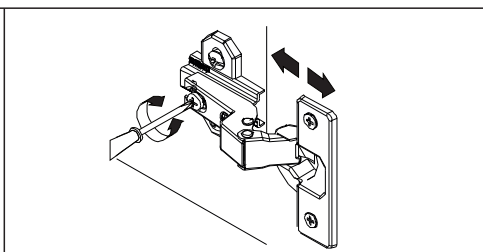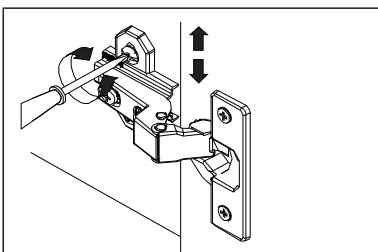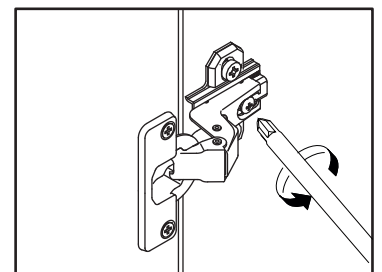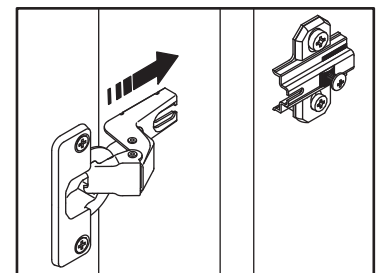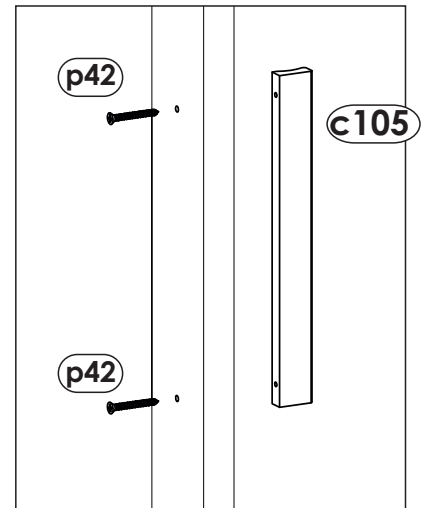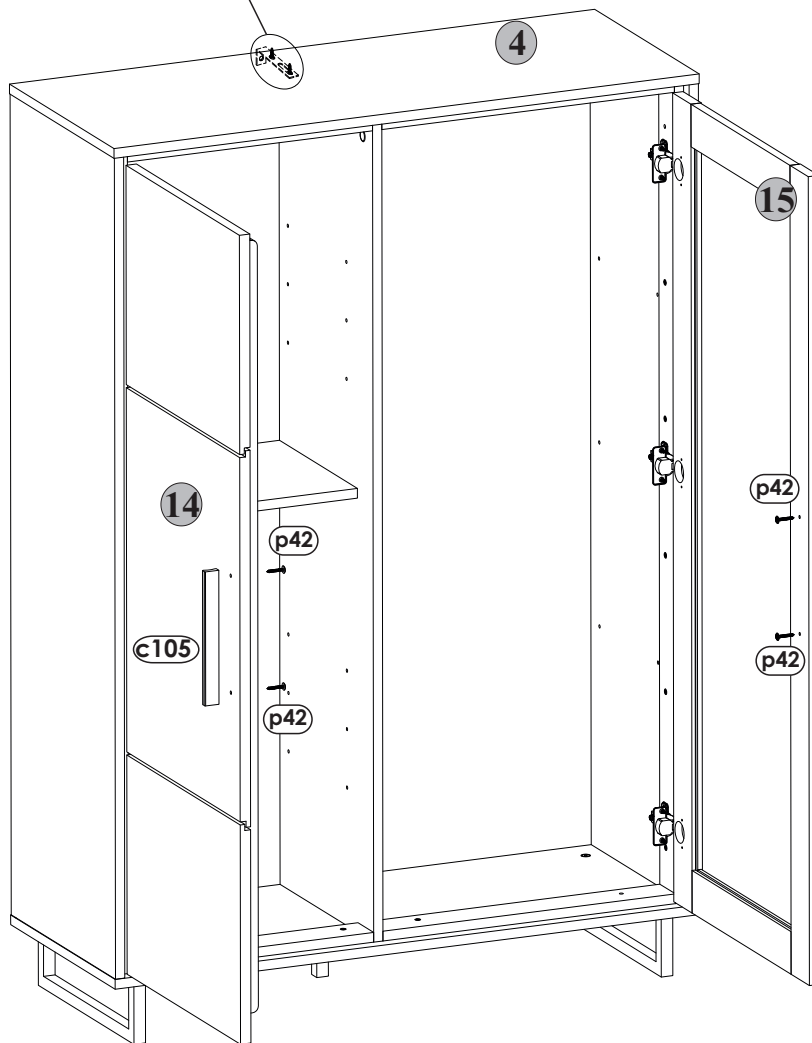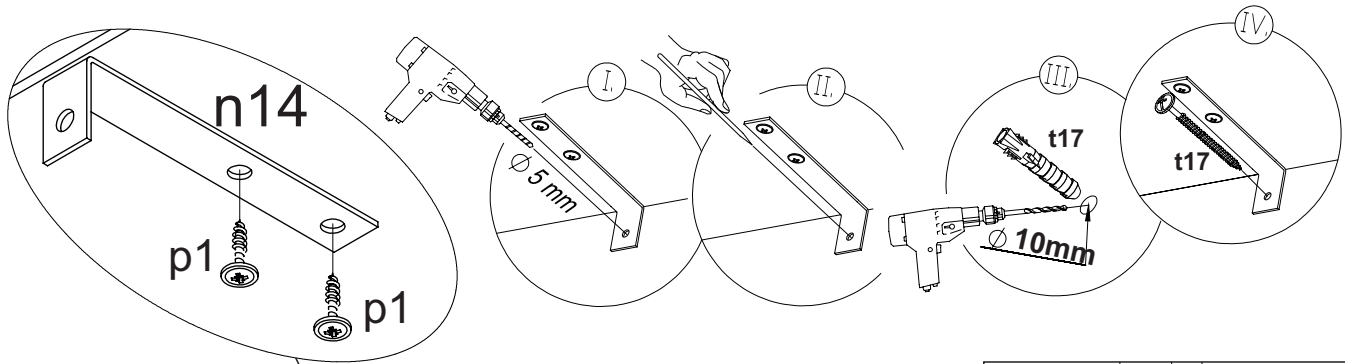




9

15

12x 
 $\phi 5 \times 17$ mm **d3**

8x 
 $\phi 5 \times 17$ mm **d1**

14x 
s2

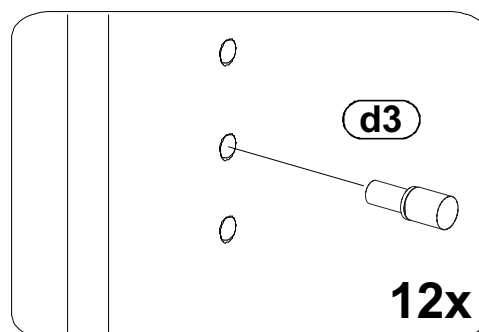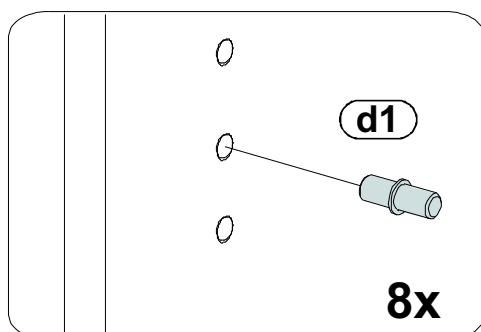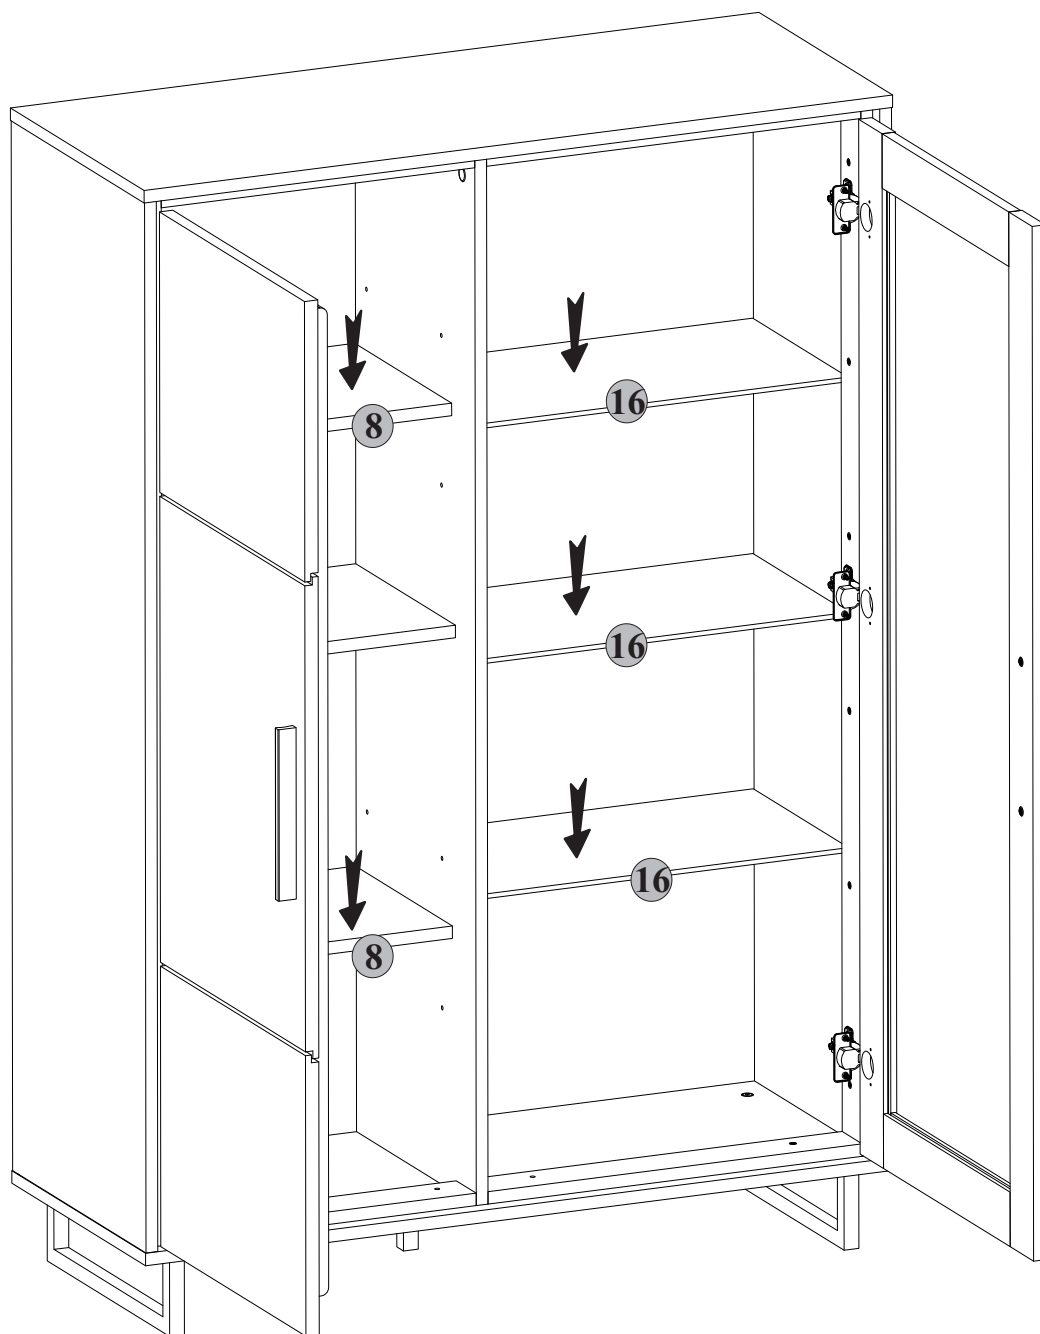

10