




Service

11.03.2024.

Name	ASSINI
Typ	T 05 - HIGHBOARD

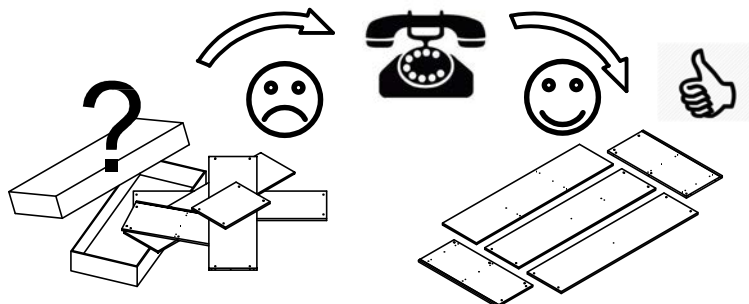

- ① 1582×372×19
- ② 1582×372×19
- ③ 284×290×18
- ④ 429×305×5
- ⑤ 771×300×120
- ⑥ 1178×369×19
- ⑦ 1178×369×19
- ⑧ 1166×328×19
- ⑨ 1166×328×19
- ⑩ 785×72×18
- ⑪ 784×290×18
- ⑫ 1182×303×3
- ⑬a 1182×450×3
- ⑭ 1182×803×3
- ⑮ 1172×296×20
- ⑯ 1172×446×20,5
- ⑰ 836×396×20
- ⑱ 836×396×20
- ⑲ 796×164×20
- ⑳ 60×60×15
- ㉑a 270×270×37

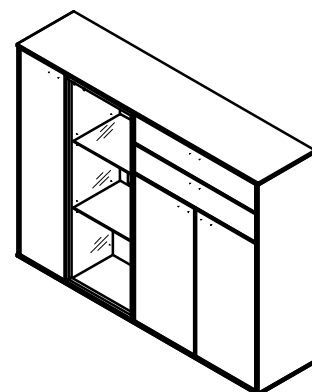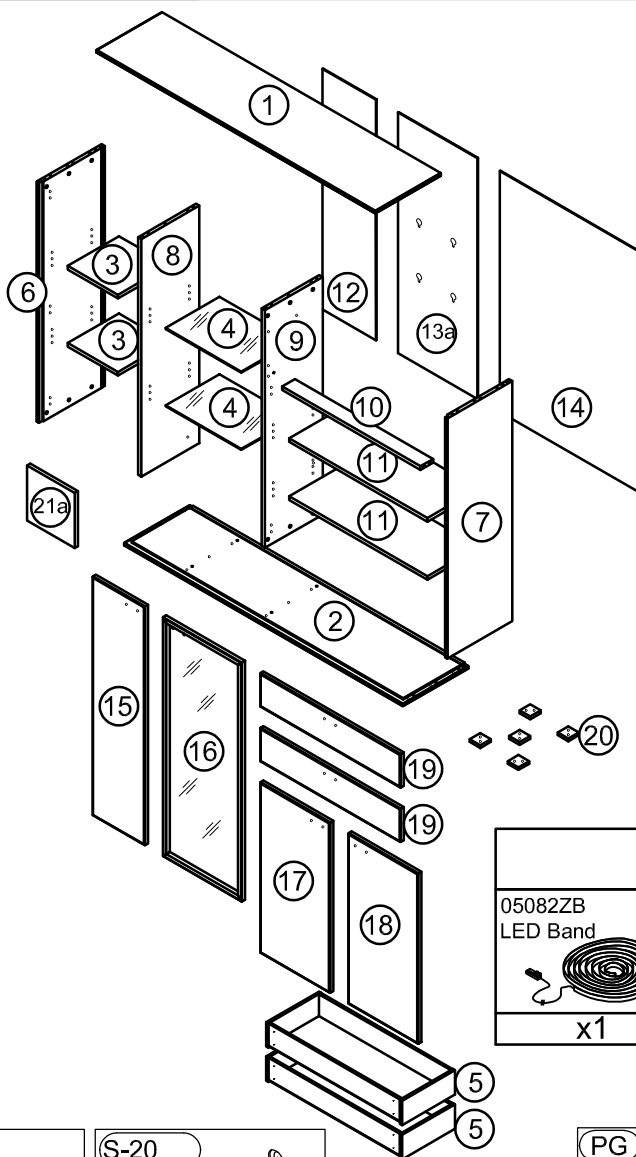


OPTION		
05082ZB LED Band	05021ZB_LED	005091ZB
x1	x1	x1

D1 Ø8x32 mm	X 	S-20 4x20 mm	PG 64 mm	PC Ø7/9x4mm
W3 	S1-20 3,0x20 mm	S2-30 4,0x30 mm	H2 9mm	H6 950.0T50.050
EX1 Ø15x12 mm	S1-16 3,5x16 mm	S2-35 4,0x35 mm	P1 0mm	C2
T1 	S-25 3,5x25 mm	ES 6,3x13 mm	P2 3mm	W1
R35-Häfele 350mm	S-16 4x16 mm	B 	GL 	ST
				M10 M4x10 mm
				M25 M4x25 mm
				M40 M4x40 mm
				A3 77x20x15 mm


Modellname: **ASSINI**

MONTAGEANLEITUNG TYPE T05 - HIGHBOARD





1/4




2 Person

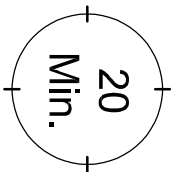


20
Min.

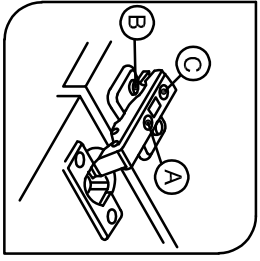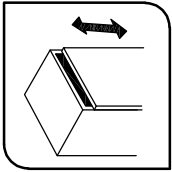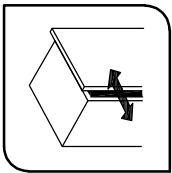


1.

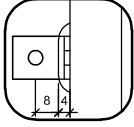


2.

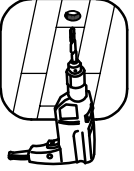


3.

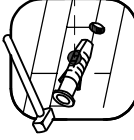


4.

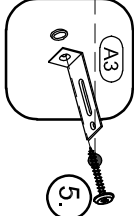


5.

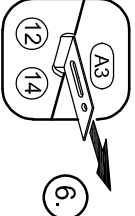

6.

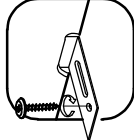

7.






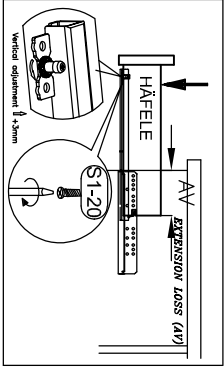


Schublade mit 3x20mm schrauben an die Unterführungsschne befestigt



Achtung:

(PC) Ø7/9x4mm X 2	(M10) M4x10 mm x 2	(M25) M4x25 mm x 6	(C2) x 18	(W3) x 8	(A3) 77x20x15 mm x 2	(S-16) 4x16 mm x 2
(PG) mat black 64 mm x 6	(M25) M4x25 mm x 6	(M40) M4x40 mm x 4	(ST) x 12	(W3) x 8	(A3) 77x20x15 mm x 2	(S-16) 4x16 mm x 2
(W1) x 16	(M40) M4x40 mm x 4	(ST) x 12	(A3) 77x20x15 mm x 2	(S-16) 4x16 mm x 2		

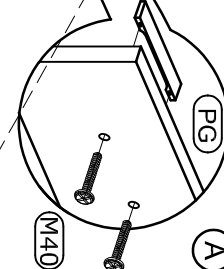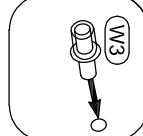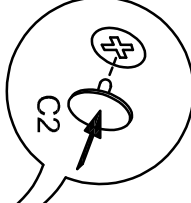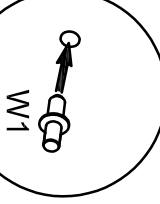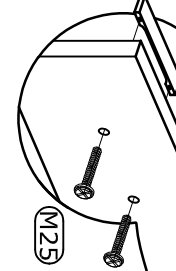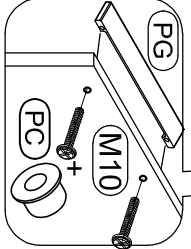


Modellname: **ASSINI**

MONTAGEANLEITUNG

TYPE T05 - HIGHBOARD




2/4

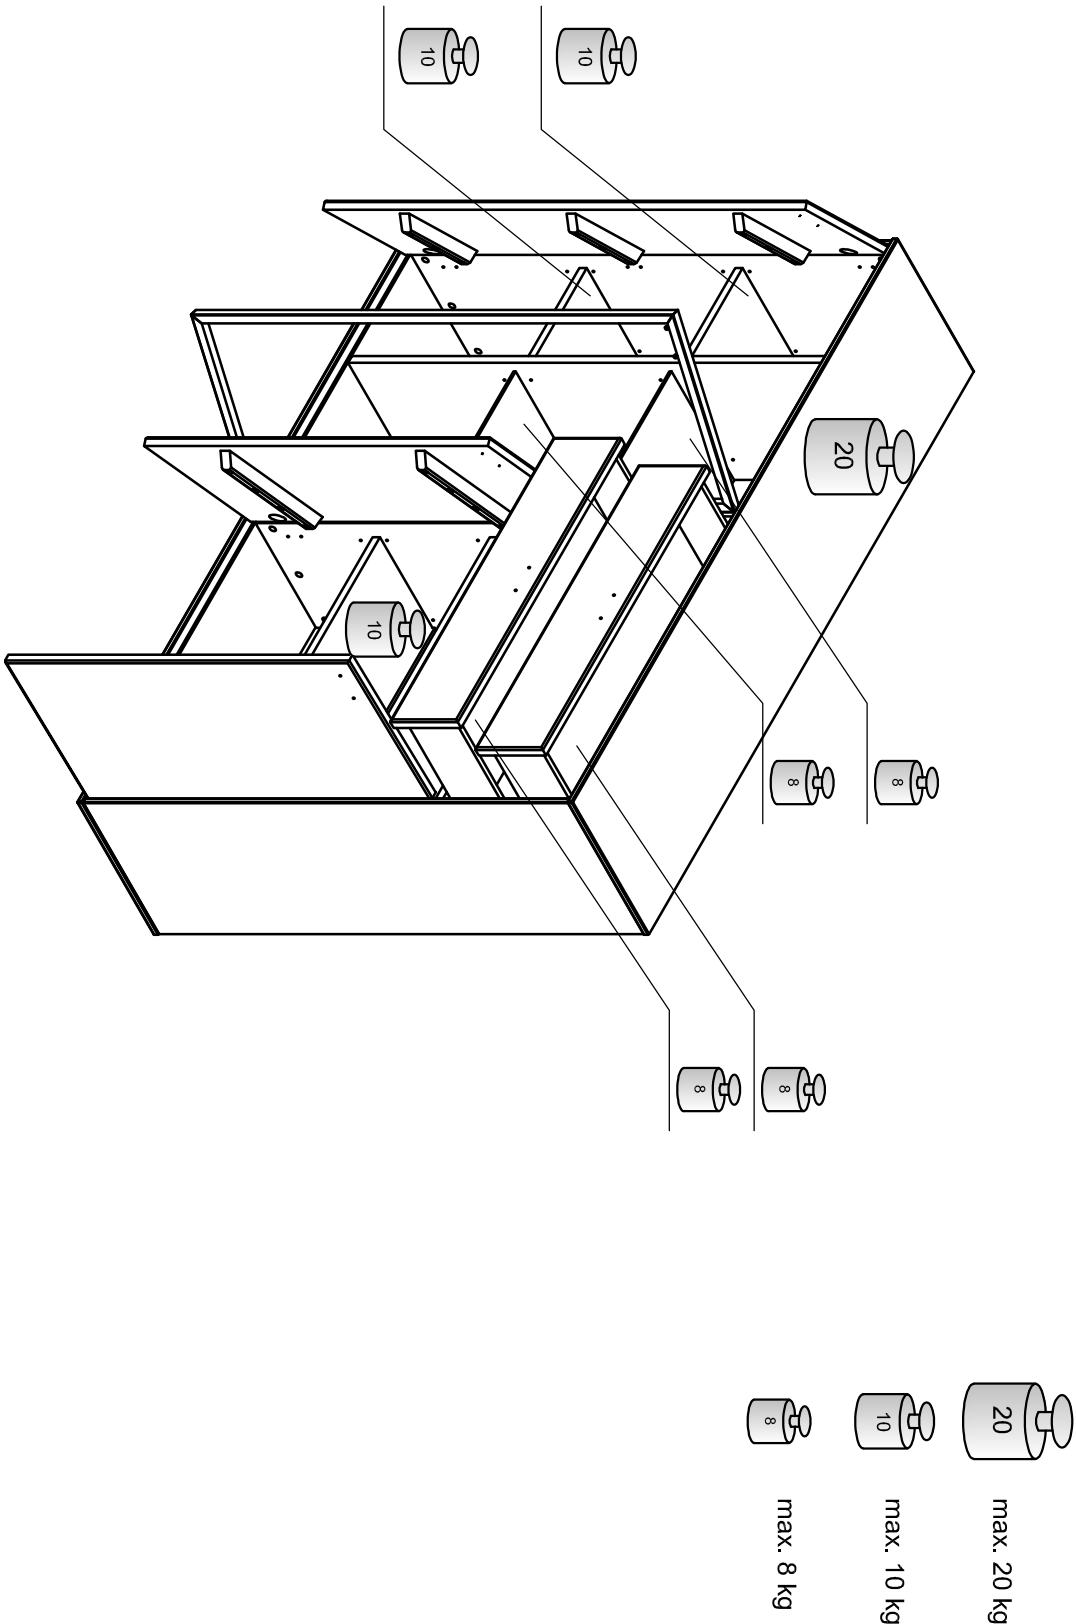

The assembly diagram illustrates the following steps:

- A**: Mounting the main housing onto the wall using four screws.
- B**: Inserting the LED band (05082ZB) into the designated slot on the front panel.
- C**: Securing the front panel cover with two screws.
- D**: Drilling pilot holes (Ø8) at approximately 3.5 cm intervals for mounting brackets.
- E**: Attaching the mounting brackets to the back of the unit.
- F**: Connecting the power cable to the internal wiring terminals.

Optional:

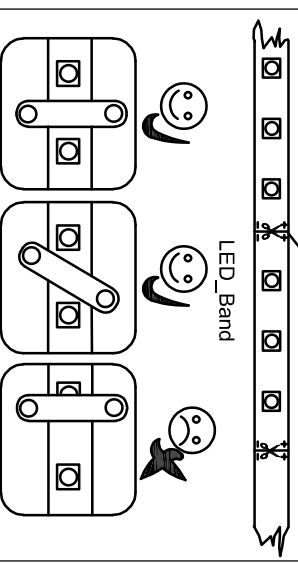
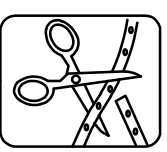
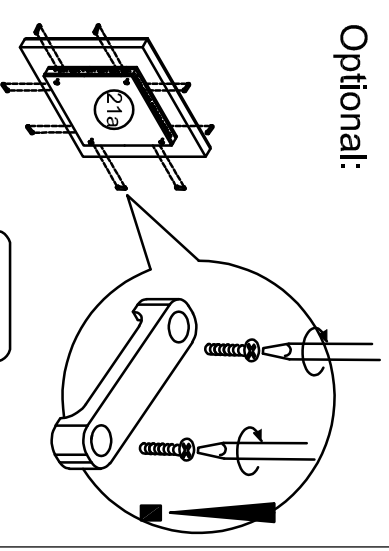


Modellname: **ASSINI**


MONTAGEANLEITUNG
TYPE T05 - HIGHBOARD

4/4


OPTION		
05082ZB LED Band x1	05021ZB_LED x1	005091ZB x1

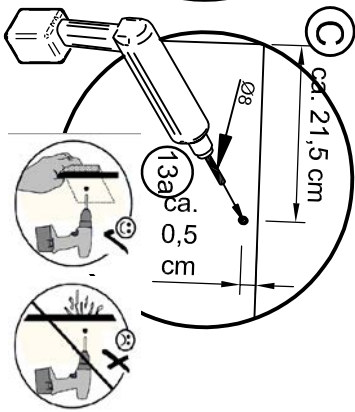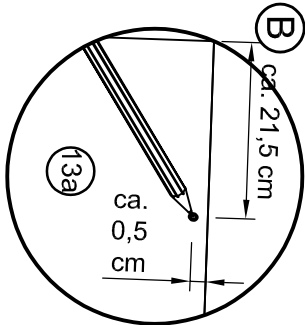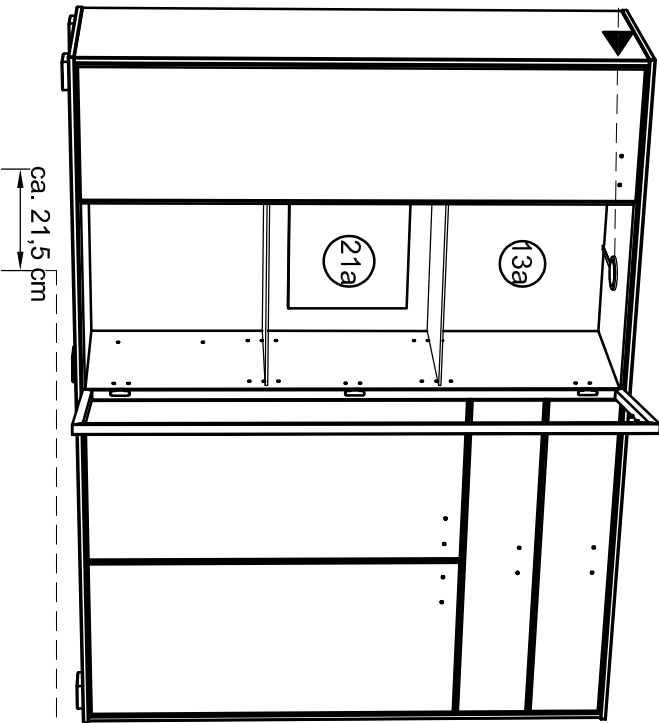

D

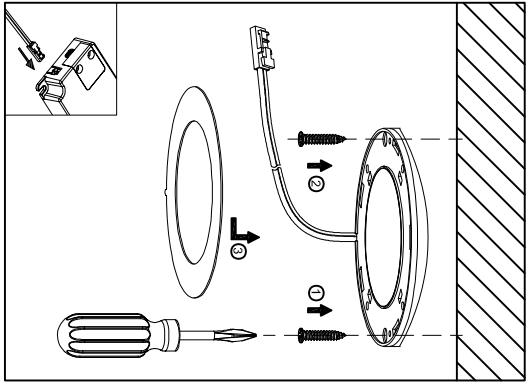

E

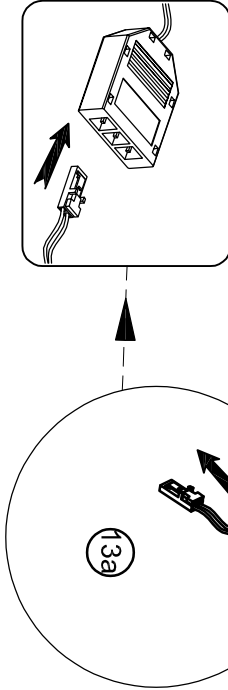

Montage- und Betriebsanleitung
für Leuchte "LED Spot Set"