



STEP - 4 DOOR KNOB FITTING INSTRUCTION

	
6X30 4 Pieces	#4 1 Piece

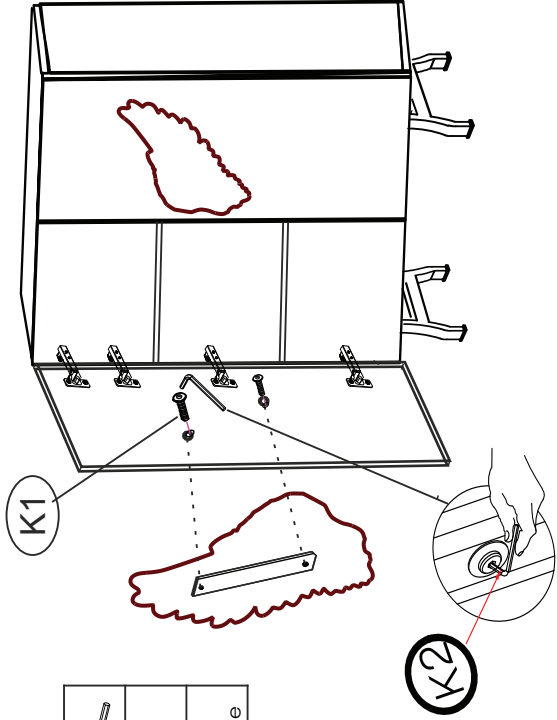

NOTE:- Each KNOB is numbered
Please match according to respective
markings

FINAL PRODUCT

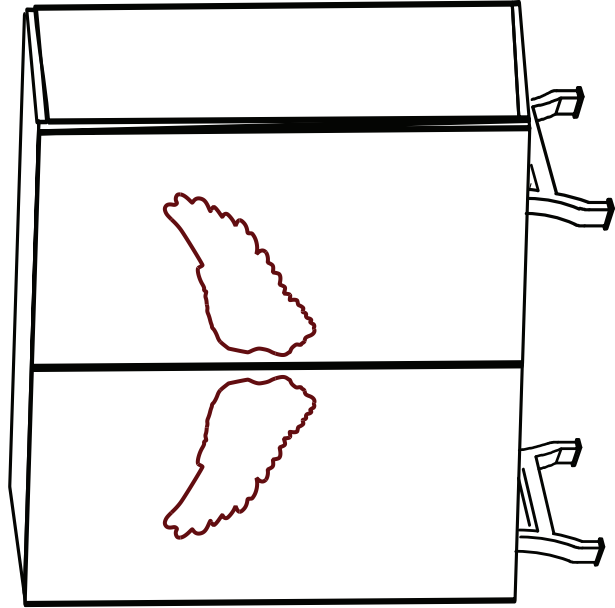


ASSEMBLY
INSTRUCTIONS


DESCRIPTION:- WINGS CABINET
ARTICLE NO.:- 66716

0.25 HOURS

APPROXIMATE ASSEMBLY TIME



2 PERSON ASSEMBLY


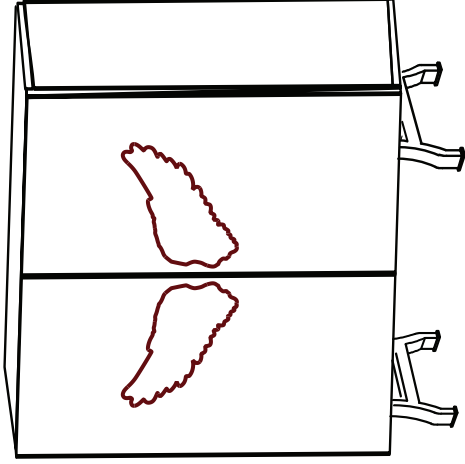


HARDWARE


			
8X20 6 Pieces	6X30 4 Pieces	8X30 6 Pieces	H2 6 Pieces

REQUIRED ASSEMBLY TOOLS

		
#4 1 Piece	#5 1 Piece	T 1 Piece

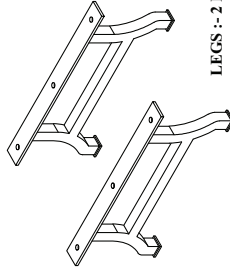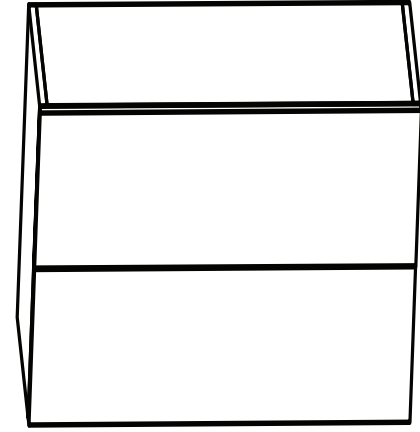

LEGS :- 2 PIECES

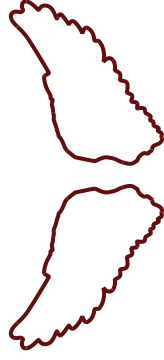


CARCASS :- 1 PIECES

DOOR KNOB :- 2 PIECES


PAGE 1/4

STEP - 1

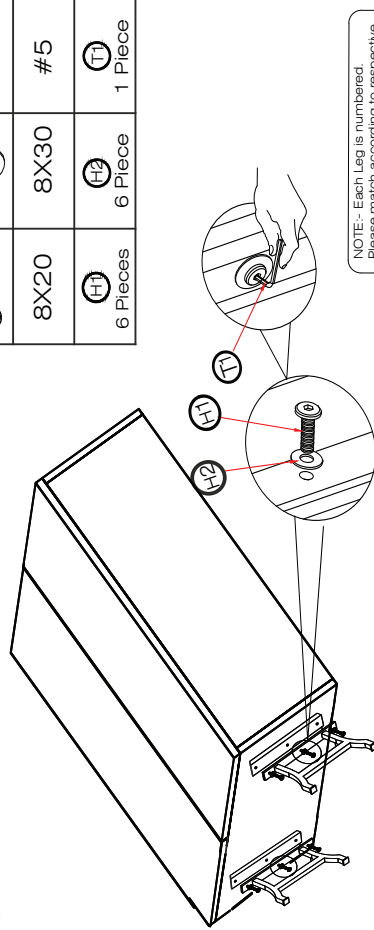


		
8X20	8X30	#5
6 Pieces	6 Piece	1 Piece


STEP - 2

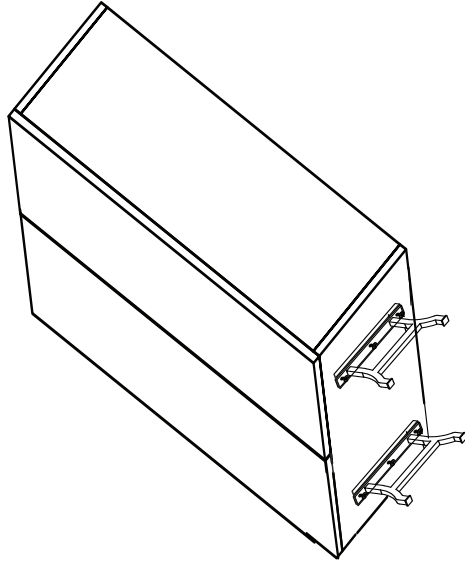

STEP - 3

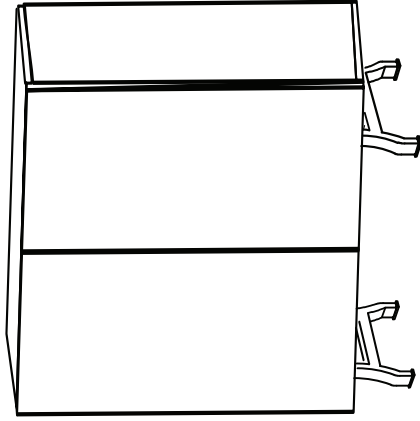

Care & Maintenance

-   Do not put hot items directly on furniture surface.
-   Do not clean furniture with harsh cleansers or polish.
-   Do not place furniture in direct sunlight.
-   Do not place furniture near heating or cooling vents.
-   Do not write on furniture without a padded barrier to protect the surface.
-   Do not place furniture outside. For indoor use only.
-   Dust and pick-up spills using a clean, non-colored, lint-free cloth.
-   Stains may be removed with mild soap solution and damp cloth.

! Achtung Sicherheitshinweis / Attention Safety Note !

Anleitung für Kippsicherung


1. Mit den kurzen Schrauben eine Halterung je rechts und links z.B. auf der obersten Platte (Abb. 1) des Möbelstücks, bzw. immer an der Rückwand (siehe Abb. 2) anbringen.
2. Das Möbelstück so ausrichten, dass die Position der Wandhalterungen bestimmt und markiert werden kann. Das Möbelstück für die Montage zur Seite schieben.
3. Das Möbelstück wie gewünscht ausrichten und die Halterungen vorsichtig fest ziehen. Bei Trockenmauern bitte Dübel verwenden.

Anti tip kit instructions

1. Using short screws, attach one of the brackets on each end of the furniture's back, on the top surface for example, or inside (see second picture / Abb.2)
2. Move furniture into its final position to measure and mark locations of the bracket. Move the furniture out of the way for assembly.
3. Move the furniture into final position and tighten screws carefully. Please use dowels for dry walls.



2
Halterungen
/Brackets

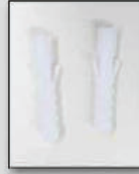

2
Dübel
/Dry wall anchors



2
lange Schrauben
/long screws



2
kurze Schrauben
/small screws



Abb. 1



Abb. 2